How to flash firmware into PCB


Program the PCB before installing it in the watch enclosure.


What you need

- VitalWave PCB and battery
- SEGGER J-Link programmer and compatible 6-pin SWD cable/adapter
- Computer with the SEGGER J-Link Software and Documentation Pack installed
- Combined firmware file: vitalwave_v0.hex

How to flash firmware into PCB

1. With the PCB unpowered, connect the J-Link to the PCB's SWD interface as shown

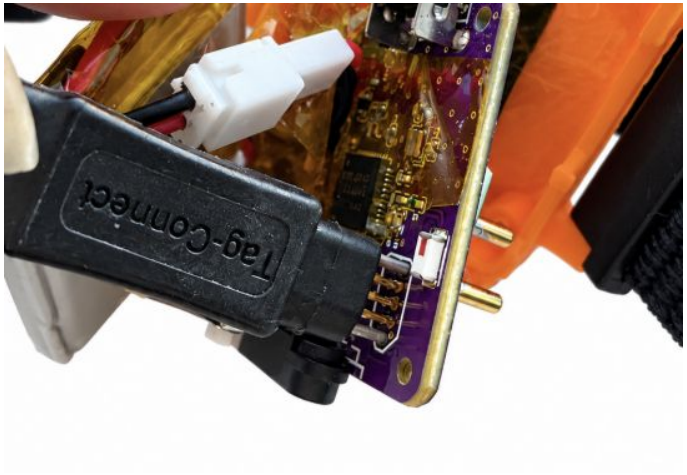

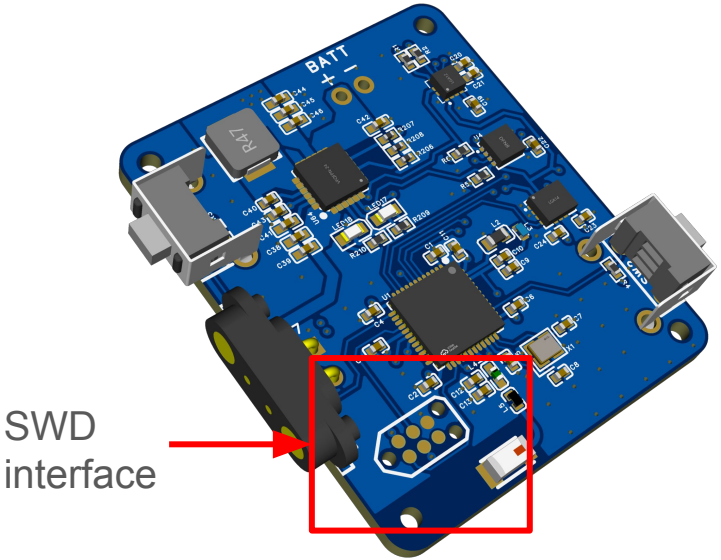

Steps

2. Connect the battery power to the PCB, keeping the charging cable disconnected
3. Connect the J-link to your computer and open J-Link Commander
4. Select NRF52840_XXAA, interface SWD, and speed 100 kHz.
5. Load vitalwave_v0.hex, reset the board, and start the firmware.
6. Confirm that **VitalWave-v0** appears when scanning for Bluetooth devices.