

# **SOLIDWORKS API (VB6 COM) — Reference (8/102): BodyFolder-BreakLine**


SOLIDWORKS API Documentation (converted from CHM)

# BodyFolder (Type)

SOLIDWORKS Type Library

## BodyFolder Object

### Object Model

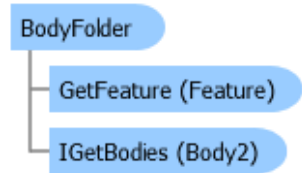

SOLIDWORKS Type Library

## BodyFolder Object Members

### Public Methods

|                                                                                     |                                         |
|-------------------------------------------------------------------------------------|-----------------------------------------|
|    | <a href="#">GetAutomaticCutList</a>     |
|    | <a href="#">GetAutomaticUpdate</a>      |
|    | <a href="#">GetBodies</a>               |
|    | <a href="#">GetBodyCount</a>            |
|    | <a href="#">GetCutListSortOptions</a>   |
|    | <a href="#">GetCutListType</a>          |
|    | <a href="#">GetFeature</a>              |
|  | <a href="#">GetTopLevelFeatureCount</a> |
|  | <a href="#">GetTopLevelFeatures</a>     |
|  | <a href="#">IGetBodies</a>              |
|  | <a href="#">SetAutomaticCutList</a>     |
|  | <a href="#">SetAutomaticUpdate</a>      |
|  | <a href="#">SortCutList</a>             |
|  | <a href="#">UpdateCutList</a>           |

### Public Properties

|                                                                                     |                      |
|-------------------------------------------------------------------------------------|----------------------|
|  | <a href="#">Type</a> |
|-------------------------------------------------------------------------------------|----------------------|

SOLIDWORKS Type Library

## GetAutomaticCutList Method (BodyFolder)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAutomaticCutList() As Boolean
```

SOLIDWORKS Type Library

## GetAutomaticUpdate Method (BodyFolder)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAutomaticUpdate() As Boolean
```

SOLIDWORKS Type Library

## GetBodies Method (BodyFolder)



Visual Basic for Applications (VBA)

```
Public Function GetBodies() As Variant
```

SOLIDWORKS Type Library

**GetBodyCount Method (BodyFolder)**



Visual Basic for Applications (VBA)

```
Public Function GetBodyCount() As Long
```

SOLIDWORKS Type Library

**GetCutListSortOptions Method (BodyFolder)**



Visual Basic for Applications (VBA)

```
Public Function GetCutListSortOptions() As Object
```

SOLIDWORKS Type Library

**GetCutListType Method (BodyFolder)**



Visual Basic for Applications (VBA)

```
Public Function GetCutListType() As Long
```

SOLIDWORKS Type Library

**GetFeature Method (BodyFolder)**



Visual Basic for Applications (VBA)

```
Public Function GetFeature() As Feature
```

SOLIDWORKS Type Library

**GetTopLevelFeatureCount Method (BodyFolder)**



Visual Basic for Applications (VBA)

```
Public Function GetTopLevelFeatureCount() As Long
```

SOLIDWORKS Type Library

**GetTopLevelFeatures Method (BodyFolder)**



Visual Basic for Applications (VBA)

```
Public Function GetTopLevelFeatures() As Variant
```

SOLIDWORKS Type Library

**IGetBodies Method (BodyFolder)**



Visual Basic for Applications (VBA)

```
Public Function IGetBodies( _  
    ByVal Count As Long _  
    ) As Body2
```

SOLIDWORKS Type Library

## SetAutomaticCutList Method (BodyFolder)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetAutomaticCutList( _  
    ByVal CutList As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

## SetAutomaticUpdate Method (BodyFolder)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetAutomaticUpdate( _  
    ByVal Update As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

## SortCutList Method (BodyFolder)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function SortCutList( _  
    ByVal CutListSortOptions As Object, _  
    ByVal IgnoreInvalidFacesOrFeatures As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

## Type Property (BodyFolder)

### Syntax

Visual Basic for Applications (VBA)

```
Public Property Type As Long
```

SOLIDWORKS Type Library

## UpdateCutList Method (BodyFolder)

### Syntax

Visual Basic for Applications (VBA)


```
Public Function UpdateCutList() As Boolean
```

# BomFeature (Type)

SOLIDWORKS Type Library

BomFeature Object

## Object Model

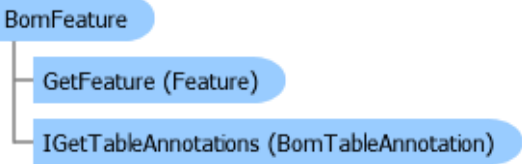

SOLIDWORKS Type Library


BomFeature Object Members

## Public Methods

|  |                                         |
|--|-----------------------------------------|
|  | <a href="#">FollowAssemblyOrder</a>     |
|  | <a href="#">GetConfigurationCount</a>   |
|  | <a href="#">GetConfigurations</a>       |
|  | <a href="#">GetFeature</a>              |
|  | <a href="#">GetLinkToDisplayState</a>   |
|  | <a href="#">GetReferencedModelName</a>  |
|  | <a href="#">GetTableAnnotationCount</a> |
|  | <a href="#">GetTableAnnotations</a>     |
|  | <a href="#">IGetConfigurations</a>      |
|  | <a href="#">IGetTableAnnotations</a>    |
|  | <a href="#">ISetConfigurations</a>      |
|  | <a href="#">SetConfigurations</a>       |
|  | <a href="#">SetLinkToDisplayState</a>   |

## Public Properties

|  |                                            |
|--|--------------------------------------------|
|  | <a href="#">Configuration</a>              |
|  | <a href="#">DetailedCutList</a>            |
|  | <a href="#">DisplayAsOneItem</a>           |
|  | <a href="#">DissolvePartLevelRows</a>      |
|  | <a href="#">FollowAssemblyOrder2</a>       |
|  | <a href="#">KeepCurrentItemNumbers</a>     |
|  | <a href="#">KeepMissingItems</a>           |
|  | <a href="#">KeepReplacedCompOption</a>     |
|  | <a href="#">Name</a>                       |
|  | <a href="#">NumberingTypeOnIndentedBOM</a> |
|  | <a href="#">PartConfigurationGrouping</a>  |
|  | <a href="#">RoutingComponentGrouping</a>   |
|  | <a href="#">SequenceStartNumber</a>        |
|  | <a href="#">StrikeoutMissingItems</a>      |
|  | <a href="#">TableType</a>                  |



SOLIDWORKS Type Library

### Configuration Property (BomFeature)



Visual Basic for Applications (VBA)

Public Property Configuration As String

SOLIDWORKS Type Library

### DetailedCutList Property (BomFeature)



Visual Basic for Applications (VBA)

Public Property DetailedCutList As Boolean

SOLIDWORKS Type Library

### DisplayAsOneItem Property (BomFeature)



Visual Basic for Applications (VBA)

Public Property DisplayAsOneItem As Boolean

SOLIDWORKS Type Library

### DissolvePartLevelRows Property (BomFeature)



Visual Basic for Applications (VBA)

Public Property DissolvePartLevelRows As Boolean

SOLIDWORKS Type Library

### FollowAssemblyOrder Method (BomFeature)



Visual Basic for Applications (VBA)

Public Function FollowAssemblyOrder() As Boolean

SOLIDWORKS Type Library

### FollowAssemblyOrder2 Property (BomFeature)



Visual Basic for Applications (VBA)

Public Property FollowAssemblyOrder2 As Boolean

SOLIDWORKS Type Library

### GetConfigurationCount Method (BomFeature)



Visual Basic for Applications (VBA)

```
Public Function GetConfigurationCount( _  
    ByVal OnlyVisible As Boolean _  
    ) As Long
```

SOLIDWORKS Type Library

### GetConfigurations Method (BomFeature)



Visual Basic for Applications (VBA)

```
Public Function GetConfigurations( _  
    ByVal OnlyVisible As Boolean, _  
    ByRef Visible As Variant _  
) As Variant
```

SOLIDWORKS Type Library

**GetFeature Method (BomFeature)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFeature() As Feature
```

SOLIDWORKS Type Library

**GetLinkToDisplayState Method (BomFeature)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLinkToDisplayState() As String
```

SOLIDWORKS Type Library

**GetReferencedModelName Method (BomFeature)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetReferencedModelName() As String
```

SOLIDWORKS Type Library

**GetTableAnnotationCount Method (BomFeature)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTableAnnotationCount() As Long
```

SOLIDWORKS Type Library

**GetTableAnnotations Method (BomFeature)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTableAnnotations() As Variant
```

SOLIDWORKS Type Library

**IGetConfigurations Method (BomFeature)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetConfigurations( _  
    ByVal OnlyVisible As Boolean, _  
    ByVal Count As Long, _  
    ByRef Visible As Boolean _  
) As String
```

SOLIDWORKS Type Library

**IGetTableAnnotations Method (BomFeature)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTableAnnotations( _  
    ByVal Count As Long _  
    ) As BomTableAnnotation
```

SOLIDWORKS Type Library

#### ISetConfigurations Method (BomFeature)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function ISetConfigurations( _  
    ByVal OnlyVisible As Boolean, _  
    ByVal Count As Long, _  
    ByRef Visible As Boolean, _  
    ByRef Names As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

#### KeepCurrentItemNumbers Property (BomFeature)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property KeepCurrentItemNumbers As Boolean
```

SOLIDWORKS Type Library

#### KeepMissingItems Property (BomFeature)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property KeepMissingItems As Boolean
```

SOLIDWORKS Type Library

#### KeepReplacedCompOption Property (BomFeature)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property KeepReplacedCompOption As Long
```

SOLIDWORKS Type Library

#### Name Property (BomFeature)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property Name As String
```

SOLIDWORKS Type Library

#### NumberingTypeOnIndentedBOM Property (BomFeature)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property NumberingTypeOnIndentedBOM As Long
```

SOLIDWORKS Type Library

#### PartConfigurationGrouping Property (BomFeature)

##### Syntax

Visual Basic for Applications (VBA)

Public Property PartConfigurationGrouping As Long

SOLIDWORKS Type Library

**RoutingComponentGrouping Property (BomFeature)**



Visual Basic for Applications (VBA)

Public Property RoutingComponentGrouping As Long

SOLIDWORKS Type Library

**SequenceStartNumber Property (BomFeature)**



Visual Basic for Applications (VBA)

Public Property SequenceStartNumber As Long

SOLIDWORKS Type Library

**SetConfigurations Method (BomFeature)**



Visual Basic for Applications (VBA)

```
Public Function SetConfigurations( _  
    ByVal OnlyVisible As Boolean, _  
    ByVal Visible As Variant, _  
    ByVal Names As Variant _  
) As Boolean
```

SOLIDWORKS Type Library

**SetLinkToDisplayState Method (BomFeature)**



Visual Basic for Applications (VBA)

```
Public Function SetLinkToDisplayState( _  
    ByVal DisplayStateName As String _  
) As Long
```

SOLIDWORKS Type Library

**StrikeoutMissingItems Property (BomFeature)**



Visual Basic for Applications (VBA)

Public Property StrikeoutMissingItems As Boolean

SOLIDWORKS Type Library

**TableType Property (BomFeature)**



Visual Basic for Applications (VBA)

Public Property TableType As Long

SOLIDWORKS Type Library

**ZeroQuantityDisplay Property (BomFeature)**



Visual Basic for Applications (VBA)

Public Property ZeroQuantityDisplay As Long

# BomTable (Type)

SOLIDWORKS Type Library

## BomTable Object

### Object Model

BomTable

IGetDisplayData (DisplayData)

SOLIDWORKS Type Library

## BomTable Object Members

### Public Methods

|                                                                                     |                                     |
|-------------------------------------------------------------------------------------|-------------------------------------|
|    | <a href="#">Attach</a>              |
|    | <a href="#">Attach2</a>             |
|    | <a href="#">Attach3</a>             |
|    | <a href="#">DeSelect</a>            |
|    | <a href="#">Detach</a>              |
|    | <a href="#">GetColumnCount</a>      |
|    | <a href="#">GetColumnWidth</a>      |
|    | <a href="#">GetDisplayData</a>      |
|  | <a href="#">GetEntryText</a>        |
|  | <a href="#">GetEntryValue</a>       |
|  | <a href="#">GetExtent</a>           |
|  | <a href="#">GetHeaderText</a>       |
|  | <a href="#">GetRowCount</a>         |
|  | <a href="#">GetRowHeight</a>        |
|  | <a href="#">GetTotalColumnCount</a> |
|  | <a href="#">GetTotalRowCount</a>    |
|  | <a href="#">IGetDisplayData</a>     |
|  | <a href="#">IGetExtent</a>          |
|  | <a href="#">IsVisible</a>           |
|  | <a href="#">Select</a>              |

SOLIDWORKS Type Library

## Attach Method (BomTable)

### Syntax

Visual Basic for Applications (VBA)

```
Public Sub Attach()
```

SOLIDWORKS Type Library

## Attach2 Method (BomTable)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function Attach2() As Boolean
```

SOLIDWORKS Type Library

### Attach3 Method (BomTable)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function Attach3() As Boolean
```

SOLIDWORKS Type Library

### DeSelect Method (BomTable)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function DeSelect() As Boolean
```

SOLIDWORKS Type Library

### Detach Method (BomTable)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Sub Detach()
```

SOLIDWORKS Type Library

### GetColumnCount Method (BomTable)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetColumnCount() As Long
```

SOLIDWORKS Type Library

### GetColumnWidth Method (BomTable)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetColumnWidth( _  
    ByVal Col As Long _  
) As Double
```

SOLIDWORKS Type Library

### GetDisplayData Method (BomTable)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayData() As Object
```

SOLIDWORKS Type Library

### GetEntryText Method (BomTable)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEntryText( _  
    ByVal Row As Long, _  
    ByVal Col As Long _  
) As String
```

SOLIDWORKS Type Library

### GetEntryValue Method (BomTable)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEntryValue( _  
    ByVal Row As Long, _  
    ByVal Col As Long _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetExtent Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function GetExtent() As Variant
```

SOLIDWORKS Type Library

**GetHeaderText Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function GetHeaderText( _  
    ByVal Col As Long _  
    ) As String
```

SOLIDWORKS Type Library

**GetRowCount Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function GetRowCount() As Long
```

SOLIDWORKS Type Library

**GetRowHeight Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function GetRowHeight( _  
    ByVal Row As Long _  
    ) As Double
```

SOLIDWORKS Type Library

**GetTotalColumnCount Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function GetTotalColumnCount() As Long
```

SOLIDWORKS Type Library

**GetTotalRowCount Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function GetTotalRowCount() As Long
```

SOLIDWORKS Type Library

**IGetDisplayData Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function IGetDisplayData() As DisplayData
```

SOLIDWORKS Type Library

**IGetExtent Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function IGetExtent() As Double
```

SOLIDWORKS Type Library

**IsVisible Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function IsVisible() As Boolean
```

SOLIDWORKS Type Library

**Select Method (BomTable)**



Visual Basic for Applications (VBA)

```
Public Function Select( _  
    ByVal Append As Boolean, _  
    ByVal Mark As Long _  
) As Boolean
```

# BomTableAnnotation (Type)

SOLIDWORKS Type Library

BomTableAnnotation Object

## Object Model

BomTableAnnotation

BomFeature

GetBomTableSortData (BomTableSortData)

IGetComponents (Component2)

IGetComponents2 (Component2)

SOLIDWORKS Type Library

BomTableAnnotation Object Members

## Public Methods

|                                                                                     |                                               |
|-------------------------------------------------------------------------------------|-----------------------------------------------|
|    | <a href="#">ApplySavedSortScheme</a>          |
|    | <a href="#">Collapse</a>                      |
|    | <a href="#">Dissolve</a>                      |
|    | <a href="#">Expand</a>                        |
|   | <a href="#">GetAllCustomProperties</a>        |
|  | <a href="#">GetAllCustomPropertiesCount</a>   |
|  | <a href="#">GetBomTableSortData</a>           |
|  | <a href="#">GetColumnCustomProperty</a>       |
|  | <a href="#">GetColumnUseTitleAsPartNumber</a> |
|  | <a href="#">GetComponents</a>                 |
|  | <a href="#">GetComponents2</a>                |
|  | <a href="#">GetComponentsCount</a>            |
|  | <a href="#">GetComponentsCount2</a>           |
|  | <a href="#">GetModelPathNames</a>             |
|  | <a href="#">GetModelPathNamesCount</a>        |
|  | <a href="#">IGetAllCustomProperties</a>       |
|  | <a href="#">IGetComponents</a>                |
|  | <a href="#">IGetComponents2</a>               |
|  | <a href="#">IGetModelPathNames</a>            |
|  | <a href="#">RestoreRestructuredComponents</a> |
|  | <a href="#">SaveAsExcel</a>                   |
|  | <a href="#">SetColumnCustomProperty</a>       |
|  | <a href="#">SetColumnUseTitleAsPartNumber</a> |
|  | <a href="#">Sort</a>                          |

## Public Properties

|                                                                                     |                            |
|-------------------------------------------------------------------------------------|----------------------------|
|  | <a href="#">BomFeature</a> |
|-------------------------------------------------------------------------------------|----------------------------|

**ApplySavedSortScheme Method (BomTableAnnotation)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function ApplySavedSortScheme( _  
    ByVal SortData As BomTableSortData _  
) As Boolean
```

**BomFeature Property (BomTableAnnotation)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Property BomFeature As BomFeature
```

**Collapse Method (BomTableAnnotation)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub Collapse( _  
    ByVal CollapseType As Long, _  
    ByVal Index As Long _  
)
```

**Dissolve Method (BomTableAnnotation)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function Dissolve( _  
    ByVal RowIndex As Long _  
) As Boolean
```

**Expand Method (BomTableAnnotation)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub Expand( _  
    ByVal ExpandType As Long, _  
    ByVal Index As Long _  
)
```

**GetAllCustomProperties Method (BomTableAnnotation)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetAllCustomProperties() As Variant
```

**GetAllCustomPropertiesCount Method (BomTableAnnotation)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetAllCustomPropertiesCount() As Long
```

**GetBomTableSortData Method (BomTableAnnotation)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetBomTableSortData() As BomTableSortData
```

**GetColumnCustomProperty Method (BomTableAnnotation)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetColumnCustomProperty( _  
    ByVal Index As Long _  
) As String
```

**GetColumnUseTitleAsPartNumber Method (BomTableAnnotation)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetColumnUseTitleAsPartNumber( _  
    ByVal Index As Long _  
) As Boolean
```

**GetComponents Method (BomTableAnnotation)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetComponents( _  
    ByVal RowIndex As Long _  
) As Variant
```

**GetComponents2 Method (BomTableAnnotation)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetComponents2( _  
    ByVal RowIndex As Long, _  
    ByVal Configuration As String _  
) As Variant
```

**GetComponentsCount Method (BomTableAnnotation)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetComponentsCount( _  
    ByVal RowIndex As Long _  
) As Long
```

**GetComponentsCount2 Method (BomTableAnnotation)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetComponentCount2( _  
    ByVal RowIndex As Long, _  
    ByVal Configuration As String, _  
    ByRef ItemNumber As String, _  
    ByRef PartNumber As String _  
    ) As Long
```

SOLIDWORKS Type Library

**GetModelPathNames Method (BomTableAnnotation)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetModelPathNames( _  
    ByVal RowIndex As Long, _  
    ByRef ItemNumber As String, _  
    ByRef PartNumber As String _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetModelPathNamesCount Method (BomTableAnnotation)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetModelPathNamesCount( _  
    ByVal RowIndex As Long _  
    ) As Long
```

SOLIDWORKS Type Library

**IGetAllCustomProperties Method (BomTableAnnotation)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetAllCustomProperties( _  
    ByVal Count As Long _  
    ) As String
```

SOLIDWORKS Type Library

**IGetComponents Method (BomTableAnnotation)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetComponents( _  
    ByVal RowIndex As Long, _  
    ByVal Count As Long _  
    ) As Component2
```

SOLIDWORKS Type Library

**IGetComponents2 Method (BomTableAnnotation)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetComponents2( _  
    ByVal RowIndex As Long, _  
    ByVal Configuration As String, _  
    ByVal Count As Long _  
    ) As Component2
```

SOLIDWORKS Type Library

**IGetModelPathNames Method (BomTableAnnotation)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetModelPathNames( _  
    ByVal RowIndex As Long, _  
    ByVal Count As Long, _  
    ByRef ItemNumber As String, _  
    ByRef PartNumber As String _  
    ) As String
```

SOLIDWORKS Type Library

**RestoreRestructuredComponents Method (BomTableAnnotation)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function RestoreRestructuredComponents( _  
    ByVal RowIndex As Long _  
    ) As Boolean
```

SOLIDWORKS Type Library

**SaveAsExcel Method (BomTableAnnotation)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function SaveAsExcel( _  
    ByVal FileName As String, _  
    ByVal IncludeHidden As Boolean, _  
    ByVal IncludeFileImages As Boolean _  
    ) As Boolean
```

SOLIDWORKS Type Library

**SetColumnCustomProperty Method (BomTableAnnotation)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetColumnCustomProperty( _  
    ByVal Index As Long, _  
    ByVal CustomProp As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

**SetColumnUseTitleAsPartNumber Method (BomTableAnnotation)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetColumnUseTitleAsPartNumber( _  
    ByVal Index As Long, _  
    ByVal UseTitle As Boolean _  
    ) As Boolean
```

SOLIDWORKS Type Library

**Sort Method (BomTableAnnotation)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function Sort( _  
    ByVal SortData As BomTableSortData _  
    ) As Boolean
```

# BomTableSortData (Type)

SOLIDWORKS Type Library  
BomTableSortData Object

Object Model

BomTableSortData

SOLIDWORKS Type Library  
BomTableSortData Object Members

Public Properties

- Ascending
- ColumnIndex
- DoNotChangeItemNumber
- ItemGroups
- SaveCurrentSortParameters
- SortMethod

SOLIDWORKS Type Library  
Ascending Property (BomTableSortData)

Syntax

```
Visual Basic for Applications (VBA)  
  
Public Property Ascending(  
    ByVal SortOrderIndex As Long _  
) As Boolean
```

SOLIDWORKS Type Library  
ColumnIndex Property (BomTableSortData)

Syntax

```
Visual Basic for Applications (VBA)  
  
Public Property ColumnIndex(  
    ByVal SortOrderIndex As Long _  
) As Long
```

SOLIDWORKS Type Library  
DoNotChangeItemNumber Property (BomTableSortData)

Syntax

```
Visual Basic for Applications (VBA)  
  
Public Property DoNotChangeItemNumber As Boolean
```

SOLIDWORKS Type Library  
ItemGroups Property (BomTableSortData)

Syntax

```
Visual Basic for Applications (VBA)  
  
Public Property ItemGroups As Variant
```

SOLIDWORKS Type Library  
SaveCurrentSortParameters Property (BomTableSortData)



Syntax

Visual Basic for Applications (VBA)

Public Property SaveCurrentSortParameters As Boolean

SOLIDWORKS Type Library

SortMethod Property (BomTableSortData)



Syntax

Visual Basic for Applications (VBA)

Public Property SortMethod As Long

# BoundaryBossFeatureData (Type)

SOLIDWORKS Type Library  
BoundaryBossFeatureData Object

Object Model

BoundaryBossFeatureData

SOLIDWORKS Type Library  
BoundaryBossFeatureData Object Members

Public Methods

|                                                                                     |                                               |
|-------------------------------------------------------------------------------------|-----------------------------------------------|
|    | <a href="#">AccessSelections</a>              |
|    | <a href="#">GetAlignmentType</a>              |
|    | <a href="#">GetCurvesCount</a>                |
|    | <a href="#">GetDirectionVector</a>            |
|    | <a href="#">GetDraftAngle</a>                 |
|    | <a href="#">GetDraftAngleReverseDirection</a> |
|    | <a href="#">GetGuideTangencyType</a>          |
|    | <a href="#">GetTangentApplyToAll</a>          |
|    | <a href="#">GetTangentDirectionReversed</a>   |
|    | <a href="#">GetTangentInfluence</a>           |
|   | <a href="#">GetTangentLength</a>              |
|  | <a href="#">IsThinFeature</a>                 |
|  | <a href="#">ReleaseSelectionAccess</a>        |
|  | <a href="#">SetAlignmentType</a>              |
|  | <a href="#">SetDirectionVector</a>            |
|  | <a href="#">SetDraftAngle</a>                 |
|  | <a href="#">SetDraftAngleReverseDirection</a> |
|  | <a href="#">SetGuideTangencyType</a>          |
|  | <a href="#">SetTangentApplyToAll</a>          |
|  | <a href="#">SetTangentDirectionReversed</a>   |
|  | <a href="#">SetTangentInfluence</a>           |
|  | <a href="#">SetTangentLength</a>              |

Public Properties

|                                                                                     |                                         |
|-------------------------------------------------------------------------------------|-----------------------------------------|
|  | <a href="#">AutoSelect</a>              |
|  | <a href="#">D1CurveInfluence</a>        |
|  | <a href="#">D1Curves</a>                |
|  | <a href="#">D2CurveInfluence</a>        |
|  | <a href="#">D2Curves</a>                |
|  | <a href="#">FeatureScope</a>            |
|  | <a href="#">FeatureScopeBodies</a>      |
|  | <a href="#">FeatureScopeBodiesCount</a> |

|                                                                                                                        |
|------------------------------------------------------------------------------------------------------------------------|
|  <a href="#">MergeResult</a>          |
|  <a href="#">MergeTangentFaces</a>    |
|  <a href="#">ThinFeatureReversed</a>  |
|  <a href="#">ThinFeatureThickness</a> |
|  <a href="#">ThinFeatureType</a>      |
|  <a href="#">TrimByD1</a>             |

SOLIDWORKS Type Library

#### AccessSelections Method (BoundaryBossFeatureData)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As Object, _  
    ByVal Component As Object _  
    ) As Boolean
```

SOLIDWORKS Type Library

#### AutoSelect Property (BoundaryBossFeatureData)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property AutoSelect As Boolean
```

SOLIDWORKS Type Library

#### D1CurveInfluence Property (BoundaryBossFeatureData)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property D1CurveInfluence As Long
```

SOLIDWORKS Type Library

#### D1Curves Property (BoundaryBossFeatureData)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property D1Curves As Variant
```

SOLIDWORKS Type Library

#### D2CurveInfluence Property (BoundaryBossFeatureData)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property D2CurveInfluence As Long
```

SOLIDWORKS Type Library

#### D2Curves Property (BoundaryBossFeatureData)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property D2Curves As Variant
```

SOLIDWORKS Type Library

#### FeatureScope Property (BoundaryBossFeatureData)

##### Syntax

Public Property FeatureScope As Boolean

SOLIDWORKS Type Library

**FeatureScopeBodies Property (BoundaryBossFeatureData)**

Syntax

Visual Basic for Applications (VBA)

Public Property FeatureScopeBodies As Variant

SOLIDWORKS Type Library

**FeatureScopeBodiesCount Property (BoundaryBossFeatureData)**

Syntax

Visual Basic for Applications (VBA)

Public Property FeatureScopeBodiesCount As Long

SOLIDWORKS Type Library

**GetAlignmentType Method (BoundaryBossFeatureData)**

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAlignmentType( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long _  
) As Long
```

SOLIDWORKS Type Library

**GetCurvesCount Method (BoundaryBossFeatureData)**

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCurvesCount( _  
    ByVal Direction As Long _  
) As Long
```

SOLIDWORKS Type Library

**GetDirectionVector Method (BoundaryBossFeatureData)**

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDirectionVector( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long _  
) As Object
```

SOLIDWORKS Type Library

**GetDraftAngle Method (BoundaryBossFeatureData)**

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDraftAngle( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long _  
) As Double
```

SOLIDWORKS Type Library

**GetDraftAngleReverseDirection Method (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDraftAngleReverseDirection( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long _  
) As Boolean
```

SOLIDWORKS Type Library

**GetGuideTangencyType Method (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetGuideTangencyType( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long _  
) As Long
```

SOLIDWORKS Type Library

**GetTangentApplyToAll Method (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTangentApplyToAll( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long _  
) As Boolean
```

SOLIDWORKS Type Library

**GetTangentDirectionReversed Method (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTangentDirectionReversed( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long _  
) As Boolean
```

SOLIDWORKS Type Library

**GetTangentInfluence Method (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTangentInfluence( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long _  
) As Double
```

SOLIDWORKS Type Library

**GetTangentLength Method (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTangentLength( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long _  
) As Double
```

SOLIDWORKS Type Library

**IsThinFeature Method (BoundaryBossFeatureData)**



Visual Basic for Applications (VBA)

```
Public Function IsThinFeature() As Boolean
```

SOLIDWORKS Type Library

**MergeResult Property (BoundaryBossFeatureData)**



Visual Basic for Applications (VBA)

```
Public Property MergeResult As Boolean
```

SOLIDWORKS Type Library

**MergeTangentFaces Property (BoundaryBossFeatureData)**



Visual Basic for Applications (VBA)

```
Public Property MergeTangentFaces As Boolean
```

SOLIDWORKS Type Library

**ReleaseSelectionAccess Method (BoundaryBossFeatureData)**



Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

**SetAlignmentType Method (BoundaryBossFeatureData)**



Visual Basic for Applications (VBA)

```
Public Sub SetAlignmentType( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long, _  
    ByVal AlignmentType As Long _  
)
```

SOLIDWORKS Type Library

**SetDirectionVector Method (BoundaryBossFeatureData)**



Visual Basic for Applications (VBA)

```
Public Sub SetDirectionVector( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long, _  
    ByVal DirectionVector As Object _  
)
```

SOLIDWORKS Type Library

**SetDraftAngle Method (BoundaryBossFeatureData)**



Visual Basic for Applications (VBA)

```
Public Sub SetDraftAngle( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long, _  
    ByVal DraftAngle As Double _  
)
```

**SetDraftAngleReverseDirection Method (BoundaryBossFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetDraftAngleReverseDirection( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long, _  
    ByVal IsFlipped As Boolean _  
)
```

**SetGuideTangencyType Method (BoundaryBossFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetGuideTangencyType( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long, _  
    ByVal TangType As Long _  
)
```

**SetTangentApplyToAll Method (BoundaryBossFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetTangentApplyToAll( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long, _  
    ByVal Apply As Boolean _  
)
```

**SetTangentDirectionReversed Method (BoundaryBossFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetTangentDirectionReversed( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long, _  
    ByVal Flip As Boolean _  
)
```

**SetTangentInfluence Method (BoundaryBossFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetTangentInfluence( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long, _  
    ByVal Influence As Double _  
)
```

**SetTangentLength Method (BoundaryBossFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetTangentLength( _  
    ByVal Direction As Long, _  
    ByVal GuideIndex As Long, _  
    ByVal Length As Double _  
)
```

SOLIDWORKS Type Library

**ThinFeatureReversed Property (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property ThinFeatureReversed As Boolean
```

SOLIDWORKS Type Library

**ThinFeatureThickness Property (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property ThinFeatureThickness( _  
    ByVal ThicknessDirection As Boolean _  
) As Double
```

SOLIDWORKS Type Library

**ThinFeatureType Property (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property ThinFeatureType As Long
```

SOLIDWORKS Type Library

**TrimByD1 Property (BoundaryBossFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property TrimByD1 As Boolean
```

# BoundingBoxFeatureData (Type)

SOLIDWORKS Type Library  
BoundingBoxFeatureData Object

## Object Model

### BoundingBoxFeatureData

SOLIDWORKS Type Library  
BoundingBoxFeatureData Object Members

## Public Methods

-  [AccessSelections](#)
-  [ReleaseSelectionAccess](#)

## Public Properties

-  [CoordinateSystem](#)
-  [IncludeEnvelopeComponents](#)
-  [IncludeHiddenBodies](#)
-  [IncludeHiddenComponents](#)
-  [IncludeSurfaces](#)
-  [IwtadirectionType](#)
-  [PlanarEntity](#)
-  [ReferenceFaceOrPlane](#)

SOLIDWORKS Type Library  
AccessSelections Method (BoundingBoxFeatureData)

## Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As Object, _  
    ByVal Component As Object _  
    ) As Boolean
```

SOLIDWORKS Type Library  
CoordinateSystem Property (BoundingBoxFeatureData)

## Syntax

Visual Basic for Applications (VBA)

```
Public Property CoordinateSystem As Object
```

SOLIDWORKS Type Library  
IncludeEnvelopeComponents Property (BoundingBoxFeatureData)

## Syntax

Visual Basic for Applications (VBA)

```
Public Property IncludeEnvelopeComponents As Boolean
```

SOLIDWORKS Type Library  
IncludeHiddenBodies Property (BoundingBoxFeatureData)

## Syntax

Visual Basic for Applications (VBA)

Public Property IncludeHiddenBodies As Boolean

SOLIDWORKS Type Library

**IncludeHiddenComponents Property (BoundingBoxFeatureData)**



Visual Basic for Applications (VBA)

Public Property IncludeHiddenComponents As Boolean

SOLIDWORKS Type Library

**IncludeSurfaces Property (BoundingBoxFeatureData)**



Visual Basic for Applications (VBA)

Public Property IncludeSurfaces As Boolean

SOLIDWORKS Type Library

**lwtaDirectionType Property (BoundingBoxFeatureData)**



Visual Basic for Applications (VBA)

Public Property lwtaDirectionType As Long

SOLIDWORKS Type Library

**PlanarEntity Property (BoundingBoxFeatureData)**



Visual Basic for Applications (VBA)

Public Property PlanarEntity As Object

SOLIDWORKS Type Library

**ReferenceFaceOrPlane Property (BoundingBoxFeatureData)**



Visual Basic for Applications (VBA)

Public Property ReferenceFaceOrPlane As Long

SOLIDWORKS Type Library

**ReleaseSelectionAccess Method (BoundingBoxFeatureData)**



Visual Basic for Applications (VBA)

Public Sub ReleaseSelectionAccess()

# BreakCornerFeatureData (Type)

SOLIDWORKS Type Library  
BreakCornerFeatureData Object

Object Model

BreakCornerFeatureData

SOLIDWORKS Type Library  
BreakCornerFeatureData Object Members

Public Methods

|                                                                                                                          |
|--------------------------------------------------------------------------------------------------------------------------|
|  <a href="#">AccessSelections</a>       |
|  <a href="#">GetEntitiesCount</a>       |
|  <a href="#">IAccessSelections</a>      |
|  <a href="#">IGetEntities</a>           |
|  <a href="#">ISetEntities</a>           |
|  <a href="#">ReleaseSelectionAccess</a> |

Public Properties

|                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------|
|  <a href="#">BreakType</a>             |
|  <a href="#">CenteredOnBendLines</a>   |
|  <a href="#">Distance</a>             |
|  <a href="#">Entities</a>            |
|  <a href="#">InternalCornersOnly</a> |

SOLIDWORKS Type Library  
AccessSelections Method (BreakCornerFeatureData)

Syntax

```
Visual Basic for Applications (VBA)

Public Function AccessSelections( _
    ByVal TopDoc As Object, _
    ByVal Component As Object _
) As Boolean
```

SOLIDWORKS Type Library  
BreakType Property (BreakCornerFeatureData)

Syntax

```
Visual Basic for Applications (VBA)

Public Property BreakType As Long
```

SOLIDWORKS Type Library  
CenteredOnBendLines Property (BreakCornerFeatureData)

Syntax

```
Visual Basic for Applications (VBA)

Public Property CenteredOnBendLines As Boolean
```

SOLIDWORKS Type Library  
Distance Property (BreakCornerFeatureData)



Visual Basic for Applications (VBA)

Public Property Distance As Double

SOLIDWORKS Type Library

Entities Property (BreakCornerFeatureData)



Visual Basic for Applications (VBA)

Public Property Entities As Variant

SOLIDWORKS Type Library

GetEntitiesCount Method (BreakCornerFeatureData)



Visual Basic for Applications (VBA)

Public Function GetEntitiesCount() As Long

SOLIDWORKS Type Library

IAccessSelections Method (BreakCornerFeatureData)



Visual Basic for Applications (VBA)

```
Public Function IAccessSelections( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
) As Boolean
```

SOLIDWORKS Type Library

IGetEntities Method (BreakCornerFeatureData)



Visual Basic for Applications (VBA)

```
Public Function IGetEntities( _  
    ByVal Count As Long _  
) As Object
```

SOLIDWORKS Type Library

InternalCornersOnly Property (BreakCornerFeatureData)



Visual Basic for Applications (VBA)

Public Property InternalCornersOnly As Boolean

SOLIDWORKS Type Library

ISetEntities Method (BreakCornerFeatureData)



Visual Basic for Applications (VBA)

```
Public Sub ISetEntities( _  
    ByVal EntCount As Long, _  
    ByRef EntArray As Object _  
)
```

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (BreakCornerFeatureData)



```
Public Sub ReleaseSelectionAccess()
```

# BreakLine (Type)

SOLIDWORKS Type Library

## BreakLine Object

### Object Model

BreakLine

GetView (View)

SOLIDWORKS Type Library

## BreakLine Object Members

### Public Methods

GetPosition

GetView

Select

SetPosition

### Public Properties

BreakSketchBlocks

Layer

Orientation

ShapeIntensity

Style

SOLIDWORKS Type Library

## BreakSketchBlocks Property (BreakLine)

### Syntax

Visual Basic for Applications (VBA)

Public Property BreakSketchBlocks As Boolean

SOLIDWORKS Type Library

## GetPosition Method (BreakLine)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPosition( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

## GetView Method (BreakLine)

### Syntax

Visual Basic for Applications (VBA)

Public Function GetView() As [View](#)

SOLIDWORKS Type Library

## Layer Property (BreakLine)

### Syntax

Public Property Layer As String

SOLIDWORKS Type Library

Orientation Property (BreakLine)



Public Property Orientation As Long

SOLIDWORKS Type Library

Select Method (BreakLine)



```
Public Function Select( _  
    ByVal Append As Boolean, _  
    ByVal Data As SelectData _  
    ) As Boolean
```

SOLIDWORKS Type Library

SetPosition Method (BreakLine)



```
Public Function SetPosition( _  
    ByVal Position1 As Double, _  
    ByVal Position2 As Double _  
    ) As Boolean
```

SOLIDWORKS Type Library

ShapeIntensity Property (BreakLine)



Public Property ShapeIntensity As Long

SOLIDWORKS Type Library

Style Property (BreakLine)



Public Property Style As Long