

SOLIDWORKS API (VB6 COM) — Reference (13/102): Configuration- CoordinateSystemFeatureData

SOLIDWORKS API Documentation (converted from CHM)

Configuration (Type)

SOLIDWORKS Type Library
Configuration Object

Object Model



SOLIDWORKS Type Library
Configuration Object Members

Public Methods

	AddExplodeStep
	AddExplodeStep2
	AddPartExplodeStep
	AddRadialExplodeStep
	ApplyDisplayState
	CopyDisplayStateFromConfiguration
	CreateDisplayState
	DeleteDisplayState
	DeleteExplodeStep
	Get3DExperienceType
	GetChildren
	GetChildrenCount
	GetComponentConfigName
	GetComponentSuppressionState
	GetCurrentPartExplodeViewName
	GetCustomProperties
	GetCustomPropertiesCount
	GetCutListItems

	GetDisplayStateBodyProperties
	GetDisplayStateComponentProperties
	GetDisplayStateComponentVisibility
	GetDisplayStateFaceProperties
	GetDisplayStateFeatureProperties
	GetDisplayStateProperties
	GetDisplayStates
	GetDisplayStatesCount
	GetExpanded
	GetExplodeStep
	GetID
	GetNumberOfExplodeSteps
	GetNumberOfPartExplodeSteps
	GetParameterCount
	GetParameters
	GetParent
	GetPartExplodeStep
	GetRepresentationParent
	GetRootComponent
	GetRootComponent3
	GetScene
	GetStreamName
	IAddExplodeStep
	IGetChildren
	IGetCustomProperties
	IGetDisplayStates
	IGetExplodeStep
	IGetParameters
	IGetRootComponent
	IGetRootComponent2
	IsDefeature
	IsDerived
	IsDirty
	ISetParameters
	IsLoaded
	IsSpeedPak
	RenameDisplayState
	Select
	Select2
	Set3DEXperienceType
	SetColor
	SetExpanded
	SetParameters

Public Properties

 [AddRebuildSaveMark](#)
 [AlternateName](#)
 [BOMPartNoSource](#)
 [ChildComponentDisplayInBOM](#)
 [Comment](#)
 [CustomPropertyManager](#)
 [Description](#)
 [DimXpertManager](#)
 [HideNewComponentModels](#)
 [LargeDesignReviewMark](#)
 [Lock](#)
 [Name](#)
 [NeedsRebuild](#)
 [RepresentationShared](#)
 [ShowChildComponentsInBOM](#)
 [SuppressNewComponentModels](#)
 [SuppressNewFeatures](#)
 [Type](#)
 [UseAlternateNameInBOM](#)
 [UseDescriptionInBOM](#)

SOLIDWORKS Type Library

AddExplodeStep Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddExplodeStep( _
    ByVal ExplDist As Double, _
    ByVal ReverseDir As Boolean, _
    ByVal RigidSubassembly As Boolean, _
    ByVal ExplodeRelated As Boolean _
) As Object
```

SOLIDWORKS Type Library

AddExplodeStep2 Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddExplodeStep2( _
    ByVal ExplDist As Double, _
    ByVal ExplDirIndex As Long, _
    ByVal ReverseDir As Boolean, _
    ByVal ExplAng As Double, _
    ByVal RotAxisIndex As Long, _
    ByVal ReverseAng As Boolean, _
    ByVal RotateAboutOrigin As Boolean, _
    ByVal AutoSpaceComponentsOnDrag As Boolean, _
    ByRef Error As Long _
) As Object
```

SOLIDWORKS Type Library

AddPartExplodeStep Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddPartExplodeStep( _  
    ByVal ExplodeView As String, _  
    ByVal ExplDist As Double, _  
    ByVal ExplDirIndex As Long, _  
    ByVal ReverseDir As Boolean, _  
    ByVal AutoSpaceBodiesOnDrag As Boolean, _  
    ByRef Error As Long _  
) As Object
```

SOLIDWORKS Type Library

AddRadialExplodeStep Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddRadialExplodeStep( _  
    ByVal ExplDist As Double, _  
    ByVal ExplAng As Double, _  
    ByVal DivergeFromAxis As Boolean, _  
    ByRef Error As Long _  
) As Object
```

SOLIDWORKS Type Library

AddRebuildSaveMark Property (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Property AddRebuildSaveMark As Boolean
```

SOLIDWORKS Type Library

AlternateName Property (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Property AlternateName As String
```

SOLIDWORKS Type Library

ApplyDisplayState Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ApplyDisplayState( _  
    ByVal DisplayStateName As String _  
) As Boolean
```

SOLIDWORKS Type Library

BOMPartNoSource Property (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Property BOMPartNoSource As Long
```

SOLIDWORKS Type Library

ChildComponentDisplayInBOM Property (Configuration)

Syntax

Visual Basic for Applications (VBA)

Public Property ChildComponentDisplayInBOM As Long

SOLIDWORKS Type Library

Comment Property (Configuration)

 Syntax

Visual Basic for Applications (VBA)

Public Property Comment As String

SOLIDWORKS Type Library

CopyDisplayStateFromConfiguration Method (Configuration)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function CopyDisplayStateFromConfiguration( _  
    ByVal CopyFromConfig As Configuration, _  
    ByVal DisplayStateNameToCopy As String _  
) As Boolean
```

SOLIDWORKS Type Library

CreateDisplayState Method (Configuration)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateDisplayState( _  
    ByVal DisplayStateName As String _  
) As Boolean
```

SOLIDWORKS Type Library

CustomPropertyManager Property (Configuration)

 Syntax

Visual Basic for Applications (VBA)

Public Property CustomPropertyManager As [CustomPropertyManager](#)

SOLIDWORKS Type Library

DeleteDisplayState Method (Configuration)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function DeleteDisplayState( _  
    ByVal DisplayStateName As String _  
) As Boolean
```

SOLIDWORKS Type Library

DeleteExplodeStep Method (Configuration)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function DeleteExplodeStep( _  
    ByVal ExplodeStepName As String _  
) As Boolean
```

SOLIDWORKS Type Library

Description Property (Configuration)

 Syntax

Visual Basic for Applications (VBA)

Public Property Description As String

SOLIDWORKS Type Library

DimXpertManager Property (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Property DimXpertManager( _  
    ByVal CreateSchema As Boolean _  
) As DimXpertManager
```

SOLIDWORKS Type Library

Get3DExperienceType Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Get3DExperienceType() As Long
```

SOLIDWORKS Type Library

GetChildren Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetChildren() As Variant
```

SOLIDWORKS Type Library

GetChildrenCount Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetChildrenCount() As Long
```

SOLIDWORKS Type Library

GetComponentConfigName Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetComponentConfigName( _  
    ByVal CompName As String _  
) As String
```

SOLIDWORKS Type Library

GetComponentSuppressionState Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetComponentSuppressionState( _  
    ByVal CompName As String _  
) As Boolean
```

SOLIDWORKS Type Library

GetCurrentPartExplodeViewName Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCurrentPartExplodeViewName() As String
```

GetCustomProperties Method (Configuration) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetCustomProperties( _  
    ByRef PropNames As Variant, _  
    ByRef PropValues As Variant, _  
    ByRef PropTypes As Variant _  
) As Long
```

GetCustomPropertiesCount Method (Configuration) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetCustomPropertiesCount() As Long
```

GetCutListItems Method (Configuration) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetCutListItems() As Variant
```

GetDisplayStateBodyProperties Method (Configuration) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetDisplayStateBodyProperties( _  
    ByVal DisplayStateName As String, _  
    ByRef Bodies As Variant _  
) As Variant
```

GetDisplayStateComponentProperties Method (Configuration) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetDisplayStateComponentProperties( _  
    ByVal DisplayStateName As String, _  
    ByRef Components As Variant _  
) As Variant
```

GetDisplayStateComponentVisibility Method (Configuration) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetDisplayStateComponentVisibility( _  
    ByVal DisplayStateName As String, _  
    ByVal Onlyhidden As Boolean, _  
    ByVal ToplevelOnly As Boolean, _  
    ByRef Components As Variant _  
) As Variant
```

GetDisplayStateFaceProperties Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayStateFaceProperties( _  
    ByVal DisplayStateName As String, _  
    ByRef Faces As Variant _  
    ) As Variant
```

SOLIDWORKS Type Library

GetDisplayStateFeatureProperties Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayStateFeatureProperties( _  
    ByVal DisplayStateName As String, _  
    ByRef Features As Variant _  
    ) As Variant
```

SOLIDWORKS Type Library

GetDisplayStateProperties Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayStateProperties( _  
    ByVal DisplayStateName As String _  
    ) As Variant
```

SOLIDWORKS Type Library

GetDisplayStates Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayStates() As Variant
```

SOLIDWORKS Type Library

GetDisplayStatesCount Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayStatesCount() As Long
```

SOLIDWORKS Type Library

GetExpanded Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetExpanded( _  
    ByVal WhichPane As Long _  
    ) As Boolean
```

SOLIDWORKS Type Library

GetExplodeStep Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetExplodeStep( _  
    ByVal ExplodeStepIndex As Long _  
    ) As Object
```

SOLIDWORKS Type Library

GetID Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetID() As Long
```

SOLIDWORKS Type Library

GetNumberOfExplodeSteps Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNumberOfExplodeSteps() As Integer
```

SOLIDWORKS Type Library

GetNumberOfPartExplodeSteps Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNumberOfPartExplodeSteps() As Long
```

SOLIDWORKS Type Library

GetParameterCount Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetParameterCount() As Long
```

SOLIDWORKS Type Library

GetParameters Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetParameters( _  
    ByRef Params As Variant, _  
    ByRef Values As Variant _  
)
```

SOLIDWORKS Type Library

GetParent Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetParent() As Configuration
```

SOLIDWORKS Type Library

GetPartExplodeStep Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPartExplodeStep( _  
    ByVal Index As Long _  
) As Object
```

SOLIDWORKS Type Library

GetRepresentationParent Method (Configuration)

Syntax

```
Public Function GetRepresentationParent() As String
```

SOLIDWORKS Type Library

GetRootComponent Method (Configuration)

Syntax

```
Public Function GetRootComponent() As Object
```

SOLIDWORKS Type Library

GetRootComponent3 Method (Configuration)

Syntax

```
Public Function GetRootComponent3( _  
    ByVal Resolve As Boolean _  
) As Component2
```

SOLIDWORKS Type Library

GetScene Method (Configuration)

Syntax

```
Public Function GetScene() As SWScene
```

SOLIDWORKS Type Library

GetStreamName Method (Configuration)

Syntax

```
Public Function GetStreamName() As String
```

SOLIDWORKS Type Library

HideNewComponentModels Property (Configuration)

Syntax

```
Public Property HideNewComponentModels As Boolean
```

SOLIDWORKS Type Library

IAddExplodeStep Method (Configuration)

Syntax

```
Public Function IAddExplodeStep( _  
    ByVal ExplDist As Double, _  
    ByVal ReverseDir As Boolean, _  
    ByVal RigidSubassembly As Boolean, _  
    ByVal ExplodeRelated As Boolean _  
) As ExplodeStep
```

SOLIDWORKS Type Library

IGetChildren Method (Configuration)

Syntax

```
Public Function IGetChildren( _  
    ByVal NumChildren As Long _  
    ) As Configuration
```

SOLIDWORKS Type Library

IGetCustomProperties Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub IGetCustomProperties( _  
    ByVal NumProps As Long, _  
    ByRef PropNames As String, _  
    ByRef PropValues As String, _  
    ByRef PropTypes As Long _  
    )
```

SOLIDWORKS Type Library

IGetDisplayStates Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetDisplayStates( _  
    ByVal Count As Long _  
    ) As String
```

SOLIDWORKS Type Library

IGetExplodeStep Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetExplodeStep( _  
    ByVal ExplodeStepIndex As Long _  
    ) As ExplodeStep
```

SOLIDWORKS Type Library

IGetParameters Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub IGetParameters( _  
    ByVal NParamCount As Long, _  
    ByRef Params As String, _  
    ByRef Values As String _  
    )
```

SOLIDWORKS Type Library

IGetRootComponent Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetRootComponent() As Component
```

SOLIDWORKS Type Library

IGetRootComponent2 Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetRootComponent2() As Component2
```

SOLIDWORKS Type Library

IsDefeature Method (Configuration)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IsDefeature() As Boolean
```

SOLIDWORKS Type Library

IsDerived Method (Configuration)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IsDerived() As Boolean
```

SOLIDWORKS Type Library

IsDirty Method (Configuration)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IsDirty() As Boolean
```

SOLIDWORKS Type Library

ISetParameters Method (Configuration)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetParameters( _  
    ByVal NParamCount As Long, _  
    ByRef Params As String, _  
    ByRef Values As String _  
)
```

SOLIDWORKS Type Library

IsLoaded Method (Configuration)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IsLoaded() As Boolean
```

SOLIDWORKS Type Library

IsSpeedPak Method (Configuration)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IsSpeedPak() As Boolean
```

SOLIDWORKS Type Library

LargeDesignReviewMark Property (Configuration)



Syntax

Visual Basic for Applications (VBA)

```
Public Property LargeDesignReviewMark As Boolean
```

SOLIDWORKS Type Library

Lock Property (Configuration)



Syntax

Visual Basic for Applications (VBA)

Public Property Lock As Boolean

SOLIDWORKS Type Library

Name Property (Configuration)

 Syntax

Visual Basic for Applications (VBA)

Public Property Name As String

SOLIDWORKS Type Library

NeedsRebuild Property (Configuration)

 Syntax

Visual Basic for Applications (VBA)

Public Property NeedsRebuild As Boolean

SOLIDWORKS Type Library

RenameDisplayState Method (Configuration)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function RenameDisplayState( _  
    ByVal OldDisplayStateName As String, _  
    ByVal NewDisplayStateName As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

RepresentationShared Property (Configuration)

 Syntax

Visual Basic for Applications (VBA)

Public Property RepresentationShared As Boolean

SOLIDWORKS Type Library

Select Method (Configuration)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function Select( _  
    ByVal AppendFlag As Boolean _  
    ) As Boolean
```

SOLIDWORKS Type Library

Select2 Method (Configuration)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function Select2( _  
    ByVal AppendFlag As Boolean, _  
    ByVal SelectData As SelectData _  
    ) As Boolean
```

SOLIDWORKS Type Library

Set3DEXperienceType Method (Configuration)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function Set3DExperienceType( _  
    ByVal IsPhysicalProduct As Boolean, _  
    ByVal RepresentationParentName As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

SetColor Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetColor( _  
    ByVal ColorIn As Long _  
    ) As Boolean
```

SOLIDWORKS Type Library

SetExpanded Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetExpanded( _  
    ByVal WhichPane As Long, _  
    ByVal Expanded As Boolean _  
    )
```

SOLIDWORKS Type Library

SetParameters Method (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetParameters( _  
    ByRef Params As Variant, _  
    ByRef Values As Variant _  
    )
```

SOLIDWORKS Type Library

ShowChildComponentsInBOM Property (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ShowChildComponentsInBOM As Boolean
```

SOLIDWORKS Type Library

SuppressNewComponentModels Property (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Property SuppressNewComponentModels As Boolean
```

SOLIDWORKS Type Library

SuppressNewFeatures Property (Configuration)

Syntax

Visual Basic for Applications (VBA)

```
Public Property SuppressNewFeatures As Boolean
```

SOLIDWORKS Type Library

Type Property (Configuration)



Visual Basic for Applications (VBA)

Public Property Type As Long

SOLIDWORKS Type Library

UpdateSpeedPak Method (Configuration)



Visual Basic for Applications (VBA)

Public Function UpdateSpeedPak() As Boolean

SOLIDWORKS Type Library

UseAlternateNameInBOM Property (Configuration)



Visual Basic for Applications (VBA)

Public Property UseAlternateNameInBOM As Boolean

SOLIDWORKS Type Library

UseDescriptionInBOM Property (Configuration)




Visual Basic for Applications (VBA)

Public Property UseDescriptionInBOM As Boolean

ConfigurationManager (Type)

SOLIDWORKS Type Library
ConfigurationManager Object

Object Model

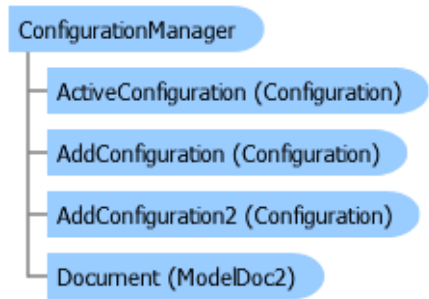

SOLIDWORKS Type Library
ConfigurationManager Object Members

Public Methods

	AddCADFamilyConfiguration
	AddConfiguration
	AddConfiguration2
	AddRebuildSaveMark
	AddSpeedPak
	AddSpeedPak2
	GetConfigurationParams
	GetConfigurationParamsCount
	IGetConfigurationParams
	ISetConfigurationParams
	RemoveMarkForAllConfigurations
	SetConfigurationParams
	SetExpanded
	SortConfigurationTree

Public Properties

	ActiveConfiguration
	Document
	EnableConfigurationTree
	LinkDisplayStatesToConfigurations
	ShowConfigurationDescriptions
	ShowConfigurationNames
	ShowPreview

SOLIDWORKS Type Library
ActiveConfiguration Property (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

Public Property ActiveConfiguration As [Configuration](#)

SOLIDWORKS Type Library

AddCADFamilyConfiguration Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddCADFamilyConfiguration( _  
    ByVal Name As String, _  
    ByVal Description As String, _  
    ByVal IsPhysicalProduct As Boolean, _  
    ByVal RepresentationParentName As String, _  
    ByVal ConfigOptions As Long, _  
    ByVal ChildCompDisplayOption As Long, _  
    ByVal Rebuild As Boolean _  
) As Object
```

SOLIDWORKS Type Library

AddConfiguration Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddConfiguration( _  
    ByVal Name As String, _  
    ByVal Comment As String, _  
    ByVal AlternateName As String, _  
    ByVal Options As Long, _  
    ByVal ParentConfigName As String, _  
    ByVal Description As String _  
) As Configuration
```

SOLIDWORKS Type Library

AddConfiguration2 Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddConfiguration2( _  
    ByVal Name As String, _  
    ByVal Comment As String, _  
    ByVal AlternateName As String, _  
    ByVal Options As Long, _  
    ByVal ParentConfigName As String, _  
    ByVal Description As String, _  
    ByVal Rebuild As Boolean _  
) As Configuration
```

SOLIDWORKS Type Library

AddRebuildSaveMark Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddRebuildSaveMark( _  
    ByVal WhichConfigurations As Long, _  
    ByVal ConfigNames As Variant _  
) As Boolean
```

SOLIDWORKS Type Library

AddSpeedPak Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddSpeedPak( _  
    ByVal Type As Long, _  
    ByVal PartThreshold As Double, _  
    ByVal FaceThreshold As Double _  
) As Object
```

SOLIDWORKS Type Library

AddSpeedPak2 Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddSpeedPak2( _  
    ByVal Type As Long, _  
    ByVal PartThreshold As Double _  
) As Object
```

SOLIDWORKS Type Library

Document Property (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Document As ModelDoc2
```

SOLIDWORKS Type Library

EnableConfigurationTree Property (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property EnableConfigurationTree As Boolean
```

SOLIDWORKS Type Library

GetConfigurationParams Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetConfigurationParams( _  
    ByVal ConfigName As String, _  
    ByRef Params As Variant, _  
    ByRef Values As Variant _  
) As Boolean
```

SOLIDWORKS Type Library

GetConfigurationParamsCount Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetConfigurationParamsCount( _  
    ByVal ConfigName As String _  
) As Long
```

SOLIDWORKS Type Library

IGetConfigurationParams Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetConfigurationParams( _  
    ByVal ConfigName As String, _  
    ByVal ParamCount As Long, _  
    ByRef ParamNames As String, _
```

```
ByRef ParamValues As String _  
) As Boolean
```

SOLIDWORKS Type Library

ISetConfigurationParams Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ISetConfigurationParams( _  
    ByVal ConfigName As String, _  
    ByVal ParamCount As Long, _  
    ByRef ParamNames As String, _  
    ByRef ParamValues As String _  
) As Boolean
```

SOLIDWORKS Type Library

LinkDisplayStatesToConfigurations Property (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property LinkDisplayStatesToConfigurations As Boolean
```

SOLIDWORKS Type Library

RemoveMarkForAllConfigurations Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function RemoveMarkForAllConfigurations() As Boolean
```

SOLIDWORKS Type Library

SetConfigurationParams Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetConfigurationParams( _  
    ByVal ConfigName As String, _  
    ByRef ParamNames As Variant, _  
    ByRef ParamValues As Variant _  
) As Boolean
```

SOLIDWORKS Type Library

SetExpanded Method (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetExpanded( _  
    ByVal WhichPane As Long, _  
    ByVal Expand As Boolean _  
)
```

SOLIDWORKS Type Library

ShowConfigurationDescriptions Property (ConfigurationManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ShowConfigurationDescriptions As Boolean
```

SOLIDWORKS Type Library

ShowConfigurationNames Property (ConfigurationManager)



Visual Basic for Applications (VBA)

```
Public Property ShowConfigurationNames As Boolean
```

SOLIDWORKS Type Library

ShowPreview Property (ConfigurationManager)



Visual Basic for Applications (VBA)

```
Public Property ShowPreview As Boolean
```

SOLIDWORKS Type Library

SortConfigurationTree Method (ConfigurationManager)



Visual Basic for Applications (VBA)

```
Public Sub SortConfigurationTree( _  
    ByVal InSelType As Long _  
)
```

ConnectionPointFeatureData (Type)

SOLIDWORKS Type Library
ConnectionPointFeatureData Object

Object Model

ConnectionPointFeatureData

SOLIDWORKS Type Library
ConnectionPointFeatureData Object Members

Public Methods

	AccessSelections
	IAccessSelections
	ReleaseSelectionAccess

Public Properties

	Direction
	ElectricalPinID
	Location
	Name2
	PortID
	RouteDiameter
	RouteSubType
	RouteType
	StubLength

SOLIDWORKS Type Library
AccessSelections Method (ConnectionPointFeatureData)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Function AccessSelections(_ ByVal TopDoc As Object, _ ByVal Component As Object _) As Boolean</pre>

SOLIDWORKS Type Library
Direction Property (ConnectionPointFeatureData)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Property Direction As Variant</pre>

SOLIDWORKS Type Library
ElectricalPinID Property (ConnectionPointFeatureData)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Property ElectricalPinID As String</pre>

SOLIDWORKS Type Library

IAccessSelections Method (ConnectionPointFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
    ) As Boolean
```

SOLIDWORKS Type Library

Location Property (ConnectionPointFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property Location As Variant
```

SOLIDWORKS Type Library

Name2 Property (ConnectionPointFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property Name2 As String
```

SOLIDWORKS Type Library

PortID Property (ConnectionPointFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property PortID As String
```

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (ConnectionPointFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

RouteDiameter Property (ConnectionPointFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property RouteDiameter As Double
```

SOLIDWORKS Type Library

RouteSubType Property (ConnectionPointFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property RouteSubType As Long
```

SOLIDWORKS Type Library

RouteType Property (ConnectionPointFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Property RouteType As Long

SOLIDWORKS Type Library

StubLength Property (ConnectionPointFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Property StubLength As Double

ConvertSolidFeatureData (Type)

SOLIDWORKS Type Library

ConvertSolidFeatureData Object

Object Model

ConvertSolidFeatureData

SOLIDWORKS Type Library

ConvertSolidFeatureData Object Members

Public Methods

	AccessSelections
	GetBendEdgesCount
	GetCustomBendAllowance
	GetFixedFace
	Initialize
	ReleaseSelectionAccess
	SetFixedFace

Public Properties

	BendEdges
	BendRadius
	CornerDefaults
	GaugeBendRadius
	GaugeTableFile
	GaugeThickness
	KeepBody
	OverrideBendRadius
	OverrideDefaultAutoReliefParameters
	OverrideDefaultBendAllowanceParameters
	OverrideDefaultSheetMetalParameters
	OverrideSheetThickness
	ReliefRatio
	ReliefType
	ReverseThickness
	RipGap
	RipOverlapRatio
	RipSketches
	SheetMetalProcess
	SheetThickness

SOLIDWORKS Type Library

AccessSelections Method (ConvertSolidFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As Object, _  
    ByVal Component As Object _  
    ) As Boolean
```

SOLIDWORKS Type Library

BendEdges Property (ConvertSolidFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property BendEdges As Variant
```

SOLIDWORKS Type Library

BendRadius Property (ConvertSolidFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property BendRadius As Double
```

SOLIDWORKS Type Library

CornerDefaults Property (ConvertSolidFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property CornerDefaults As Long
```

SOLIDWORKS Type Library

GaugeBendRadius Property (ConvertSolidFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property GaugeBendRadius As Double
```

SOLIDWORKS Type Library

GaugeTableFile Property (ConvertSolidFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property GaugeTableFile As String
```

SOLIDWORKS Type Library

GaugeThickness Property (ConvertSolidFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property GaugeThickness As String
```

SOLIDWORKS Type Library

GetBendEdgesCount Method (ConvertSolidFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBendEdgesCount() As Long
```

SOLIDWORKS Type Library

GetCustomBendAllowance Method (ConvertSolidFeatureData)



Visual Basic for Applications (VBA)

```
Public Function GetCustomBendAllowance() As Object
```

SOLIDWORKS Type Library

GetFixedFace Method (ConvertSolidFeatureData)



Visual Basic for Applications (VBA)

```
Public Function GetFixedFace() As Object
```

SOLIDWORKS Type Library

Initialize Method (ConvertSolidFeatureData)



Visual Basic for Applications (VBA)

```
Public Sub Initialize( _  
    ByVal UseMaterialSheetMetalParameters As Boolean, _  
    ByVal UseGaugeTableParameters As Boolean, _  
    ByVal CustomBendAllowance As Object _  
)
```

SOLIDWORKS Type Library

KeepBody Property (ConvertSolidFeatureData)



Visual Basic for Applications (VBA)

```
Public Property KeepBody As Boolean
```

SOLIDWORKS Type Library

OverrideBendRadius Property (ConvertSolidFeatureData)



Visual Basic for Applications (VBA)

```
Public Property OverrideBendRadius As Boolean
```

SOLIDWORKS Type Library

OverrideDefaultAutoReliefParameters Property (ConvertSolidFeatureData)



Visual Basic for Applications (VBA)

```
Public Property OverrideDefaultAutoReliefParameters As Boolean
```

SOLIDWORKS Type Library

OverrideDefaultBendAllowanceParameters Property (ConvertSolidFeatureData)



Visual Basic for Applications (VBA)

```
Public Property OverrideDefaultBendAllowanceParameters As Boolean
```

SOLIDWORKS Type Library

OverrideDefaultSheetMetalParameters Property (ConvertSolidFeatureData)



Visual Basic for Applications (VBA)

```
Public Property OverrideDefaultSheetMetalParameters As Boolean
```

SOLIDWORKS Type Library

OverrideSheetThickness Property (ConvertSolidFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property OverrideSheetThickness As Boolean
```

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (ConvertSolidFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

ReliefRatio Property (ConvertSolidFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReliefRatio As Double
```

SOLIDWORKS Type Library

ReliefType Property (ConvertSolidFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReliefType As Long
```

SOLIDWORKS Type Library

ReverseThickness Property (ConvertSolidFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReverseThickness As Boolean
```

SOLIDWORKS Type Library

RipGap Property (ConvertSolidFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property RipGap As Double
```

SOLIDWORKS Type Library

RipOverlapRatio Property (ConvertSolidFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property RipOverlapRatio As Double
```

SOLIDWORKS Type Library

RipSketches Property (ConvertSolidFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property RipSketches As Variant
```

SetFixedFace Method (ConvertSolidFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetFixedFace( _  
    ByVal FaceIn As Object _  
)
```

SheetMetalProcess Property (ConvertSolidFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Property SheetMetalProcess As String
```

SheetThickness Property (ConvertSolidFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Property SheetThickness As Double
```

CoordinateSystemElement (Type)

SOLIDWORKS Type Library
CoordinateSystemElement Object

Object Model

CoordinateSystemElement

SOLIDWORKS Type Library
CoordinateSystemElement Object Members

Public Methods

 [GetCoordinateSystem](#)

 [GetElementType](#)

SOLIDWORKS Type Library
GetCoordinateSystem Method (CoordinateSystemElement)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCoordinateSystem() As Object
```

SOLIDWORKS Type Library
GetElementType Method (CoordinateSystemElement)


Syntax

Visual Basic for Applications (VBA)

```
Public Function GetElementType() As Long
```

CoordinateSystemFeatureData (Type)

SOLIDWORKS Type Library
CoordinateSystemFeatureData Object

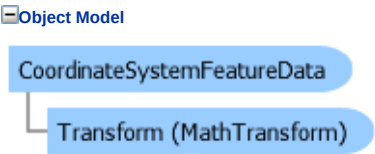

SOLIDWORKS Type Library
CoordinateSystemFeatureData Object Members

Public Methods

	AccessSelections
	GetOriginEntityType
	GetXAxisEntitiesCount
	GetXAxisEntitiesTypes
	GetYAxisEntitiesCount
	GetYAxisEntitiesTypes
	GetZAxisEntitiesCount
	GetZAxisEntitiesTypes
	IAccessSelections
	IGetOriginEntity
	IGetOriginEntityType
	IGetXAxisEntities
	IGetXAxisEntitiesTypes
	IGetYAxisEntities
	IGetYAxisEntitiesTypes
	IGetZAxisEntities
	IGetZAxisEntitiesTypes
	ISetOriginEntity
	ISetXAxisEntities
	ISetYAxisEntities
	ISetZAxisEntities
	ReleaseSelectionAccess

Public Properties

	OriginEntity
	Transform
	XAxisEntities
	XFlipped
	YAxisEntities
	YFlipped
	ZAxisEntities
	ZFlipped



SOLIDWORKS Type Library

AccessSelections Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
    ) As Boolean
```

SOLIDWORKS Type Library

GetOriginEntityType Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetOriginEntityType() As Long
```

SOLIDWORKS Type Library

GetXAxisEntitiesCount Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetXAxisEntitiesCount() As Long
```

SOLIDWORKS Type Library

GetXAxisEntitiesTypes Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetXAxisEntitiesTypes() As Variant
```

SOLIDWORKS Type Library

GetYAxisEntitiesCount Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetYAxisEntitiesCount() As Long
```

SOLIDWORKS Type Library

GetYAxisEntitiesTypes Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetYAxisEntitiesTypes() As Variant
```

SOLIDWORKS Type Library

GetZAxisEntitiesCount Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetZAxisEntitiesCount() As Long
```

SOLIDWORKS Type Library

GetZAxisEntitiesTypes Method (CoordinateSystemFeatureData)

Syntax

```
Public Function GetZAxisEntitiesTypes() As Variant
```

SOLIDWORKS Type Library

IAccessSelections Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
    ) As Boolean
```

SOLIDWORKS Type Library

IGetOriginEntity Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetOriginEntity() As Object
```

SOLIDWORKS Type Library

IGetOriginEntityType Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetOriginEntityType() As Long
```

SOLIDWORKS Type Library

IGetXAxisEntities Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetXAxisEntities( _  
    ByVal Count As Long _  
    ) As Object
```

SOLIDWORKS Type Library

IGetXAxisEntitiesTypes Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetXAxisEntitiesTypes() As Long
```

SOLIDWORKS Type Library

IGetYAxisEntities Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetYAxisEntities( _  
    ByVal Count As Long _  
    ) As Object
```

SOLIDWORKS Type Library

IGetYAxisEntitiesTypes Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetYAxisEntitiesTypes() As Long
```

SOLIDWORKS Type Library

IGetZAxisEntities Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetZAxisEntities( _  
    ByVal Count As Long _  
) As Object
```

SOLIDWORKS Type Library

IGetZAxisEntitiesTypes Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetZAxisEntitiesTypes() As Long
```

SOLIDWORKS Type Library

ISetOriginEntity Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetOriginEntity( _  
    ByVal Ent As Object _  
)
```

SOLIDWORKS Type Library

ISetXAxisEntities Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetXAxisEntities( _  
    ByVal Count As Long, _  
    ByRef EntArray As Object _  
)
```

SOLIDWORKS Type Library

ISetYAxisEntities Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetYAxisEntities( _  
    ByVal Count As Long, _  
    ByRef EntArray As Object _  
)
```

SOLIDWORKS Type Library

ISetZAxisEntities Method (CoordinateSystemFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetZAxisEntities( _  
    ByVal Count As Long, _  
    ByRef EntArray As Object _  
)
```

SOLIDWORKS Type Library

SOLIDWORKS Type Library

OriginEntity Property (CoordinateSystemFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Property OriginEntity As Object

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (CoordinateSystemFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Sub ReleaseSelectionAccess()

SOLIDWORKS Type Library

Transform Property (CoordinateSystemFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Property Transform As [MathTransform](#)

SOLIDWORKS Type Library

XAxisEntities Property (CoordinateSystemFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Property XAxisEntities As Variant

SOLIDWORKS Type Library

XFlipped Property (CoordinateSystemFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Property XFlipped As Boolean

SOLIDWORKS Type Library

YAxisEntities Property (CoordinateSystemFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Property YAxisEntities As Variant

SOLIDWORKS Type Library

YFlipped Property (CoordinateSystemFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Property YFlipped As Boolean

SOLIDWORKS Type Library

ZAxisEntities Property (CoordinateSystemFeatureData)



Syntax

Visual Basic for Applications (VBA)

Public Property ZAxisEntities As Variant

SOLIDWORKS Type Library



Syntax

Visual Basic for Applications (VBA)

```
Public Property ZFlipped As Boolean
```