

SOLIDWORKS API (VB6 COM) — Reference (26/102): EdgeFlangeFeatureData- EnumSketchHatches

SOLIDWORKS API Documentation (converted from CHM)

EdgeFlangeFeatureData (Type)

SOLIDWORKS Type Library
EdgeFlangeFeatureData Object

Object Model

EdgeFlangeFeatureData

GetCustomBendAllowance (CustomBendAllowance)

SOLIDWORKS Type Library
EdgeFlangeFeatureData Object Members

Public Methods

	AccessSelections
	AddEdges
	GetCustomBendAllowance
	GetEdgeCount
	GetPositionReferenceType
	IAccessSelections
	IAccessSelections2
	IGetEdges
	ISetEdges
	ReleaseSelectionAccess
	RemoveEdges
	SetCustomBendAllowance

Public Properties

	AngleReference
	AutoReliefType
	BendAngle
	BendRadius
	Edge
	Edges
	GapDistance
	LockAngle
	NormalToFlangePlane
	OffsetDimType
	OffsetDistance
	OffsetReference
	OffsetType
	PerpendicularToFace
	PositionOffsetDistance
	PositionOffsetReference
	PositionOffsetType
	PositionType

	
	ReliefDepth
	ReliefRatio
	ReliefTearType
	ReliefWidth
	ReverseOffset
	ReversePositionOffset
	UseDefaultBendAllowance
	UseDefaultBendRadius
	UseDefaultBendRelief
	UsePositionOffset
	UsePositionTrimSideBends
	UseReliefRatio

SOLIDWORKS Type Library

AccessSelections Method (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _
    ByVal TopDoc As Object, _
    ByVal Component As Object _
) As Boolean
```

SOLIDWORKS Type Library

AddEdges Method (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddEdges( _
    ByVal EdgeArray As Variant, _
    ByVal SketchArray As Variant _
) As Long
```

SOLIDWORKS Type Library

AngleReference Property (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property AngleReference As Object
```

SOLIDWORKS Type Library

AutoReliefType Property (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property AutoReliefType As Long
```

SOLIDWORKS Type Library

BendAngle Property (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property BendAngle As Double
```

SOLIDWORKS Type Library

BendRadius Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property BendRadius As Double
```

SOLIDWORKS Type Library

Edge Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property Edge As Object
```

SOLIDWORKS Type Library

Edges Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property Edges As Variant
```

SOLIDWORKS Type Library

GapDistance Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property GapDistance As Double
```

SOLIDWORKS Type Library

GetCustomBendAllowance Method (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCustomBendAllowance() As CustomBendAllowance
```

SOLIDWORKS Type Library

GetEdgeCount Method (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEdgeCount() As Long
```

SOLIDWORKS Type Library

GetPositionReferenceType Method (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPositionReferenceType() As Long
```

SOLIDWORKS Type Library

IAccessSelections Method (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections( _  
    ByVal TopDoc As ModelDoc, _
```

```
ByVal Component As Component _  
) As Boolean
```

SOLIDWORKS Type Library

IAccessSelections2 Method (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections2( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
) As Boolean
```

SOLIDWORKS Type Library

IGetEdges Method (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetEdges( _  
    ByVal EdgeCount As Long _  
) As Object
```

SOLIDWORKS Type Library

ISetEdges Method (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetEdges( _  
    ByVal EdgeCount As Long, _  
    ByRef EdgeArray As Object _  
)
```

SOLIDWORKS Type Library

LockAngle Property (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property LockAngle As Boolean
```

SOLIDWORKS Type Library

NormalToFlangePlane Property (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property NormalToFlangePlane As Boolean
```

SOLIDWORKS Type Library

OffsetDimType Property (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property OffsetDimType As Long
```

SOLIDWORKS Type Library

OffsetDistance Property (EdgeFlangeFeatureData)

Syntax

Visual Basic for Applications (VBA)

Public Property OffsetDistance As Double

SOLIDWORKS Type Library

OffsetReference Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

Public Property OffsetReference As Object

SOLIDWORKS Type Library

OffsetType Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

Public Property OffsetType As Long

SOLIDWORKS Type Library

PerpendicularToFace Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

Public Property PerpendicularToFace As Boolean

SOLIDWORKS Type Library

PositionOffsetDistance Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

Public Property PositionOffsetDistance As Double

SOLIDWORKS Type Library

PositionOffsetReference Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

Public Property PositionOffsetReference As Object

SOLIDWORKS Type Library

PositionOffsetType Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

Public Property PositionOffsetType As Long

SOLIDWORKS Type Library

PositionType Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

Public Property PositionType As Long

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

ReliefDepth Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

```
Public Property ReliefDepth As Double
```

SOLIDWORKS Type Library

ReliefRatio Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

```
Public Property ReliefRatio As Double
```

SOLIDWORKS Type Library

ReliefTearType Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

```
Public Property ReliefTearType As Long
```

SOLIDWORKS Type Library

ReliefWidth Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

```
Public Property ReliefWidth As Double
```

SOLIDWORKS Type Library

RemoveEdges Method (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

```
Public Function RemoveEdges( _  
    ByVal EdgeArray As Variant _  
    ) As Long
```

SOLIDWORKS Type Library

ReverseOffset Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

```
Public Property ReverseOffset As Boolean
```

SOLIDWORKS Type Library

ReversePositionOffset Property (EdgeFlangeFeatureData)



Visual Basic for Applications (VBA)

```
Public Property ReversePositionOffset As Boolean
```

SOLIDWORKS Type Library

SetCustomBendAllowance Method (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetCustomBendAllowance( _  
    ByVal PBendData As CustomBendAllowance _  
)
```

SOLIDWORKS Type Library

UseDefaultBendAllowance Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property UseDefaultBendAllowance As Boolean
```

SOLIDWORKS Type Library

UseDefaultBendRadius Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property UseDefaultBendRadius As Boolean
```

SOLIDWORKS Type Library

UseDefaultBendRelief Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property UseDefaultBendRelief As Boolean
```

SOLIDWORKS Type Library

UsePositionOffset Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property UsePositionOffset As Boolean
```

SOLIDWORKS Type Library

UsePositionTrimSideBends Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property UsePositionTrimSideBends As Boolean
```

SOLIDWORKS Type Library

UseReliefRatio Property (EdgeFlangeFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property UseReliefRatio As Boolean
```

EdgePoint (Type)

SOLIDWORKS Type Library

EdgePoint Object

Object Model

EdgePoint

SOLIDWORKS Type Library

EdgePoint Object Members

Public Methods

 [GetPointCoordinates](#)

 [Select](#)

Public Properties

 [Entity](#)

 [Position](#)

SOLIDWORKS Type Library

Entity Property (EdgePoint)

Syntax

Visual Basic for Applications (VBA)

Public Property Entity As Object

SOLIDWORKS Type Library

GetPointCoordinates Method (EdgePoint)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetPointCoordinates( _  
    ByRef X As Double, _  
    ByRef Y As Double, _  
    ByRef Z As Double _  
)
```

SOLIDWORKS Type Library

Position Property (EdgePoint)

Syntax

Visual Basic for Applications (VBA)

Public Property Position As Double

SOLIDWORKS Type Library

Select Method (EdgePoint)


Syntax

Visual Basic for Applications (VBA)

```
Public Function Select( _  
    ByVal BAppend As Boolean, _  
    ByVal SelMark As Long _  
) As Boolean
```

EndCapFeatureData (Type)

SOLIDWORKS Type Library
EndCapFeatureData Object

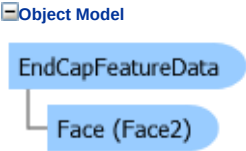

SOLIDWORKS Type Library
EndCapFeatureData Object Members

Public Methods

- [AccessSelections](#)
- [ReleaseSelectionAccess](#)

Public Properties

- [ChamferDistance](#)
- [DepthDistance](#)
- [Face](#)
- [IsEndCapInward](#)
- [OffsetDistance](#)
- [Thickness](#)
- [ThicknessRatioForOffset](#)
- [UseChamferCorners](#)
- [UseCornerTreatment](#)
- [UseReverse](#)
- [UseThicknessRatioForOffset](#)

SOLIDWORKS Type Library
AccessSelections Method (EndCapFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
    ) As Boolean
```

SOLIDWORKS Type Library
ChamferDistance Property (EndCapFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ChamferDistance As Double
```

SOLIDWORKS Type Library
DepthDistance Property (EndCapFeatureData)

Syntax

Visual Basic for Applications (VBA)

Public Property DepthDistance As Double

SOLIDWORKS Type Library

Face Property (EndCapFeatureData)

 Syntax

Visual Basic for Applications (VBA)

Public Property Face As [Face2](#)

SOLIDWORKS Type Library

IsEndCapInward Property (EndCapFeatureData)

 Syntax

Visual Basic for Applications (VBA)

Public Property IsEndCapInward As Long

SOLIDWORKS Type Library

OffsetDistance Property (EndCapFeatureData)

 Syntax

Visual Basic for Applications (VBA)

Public Property OffsetDistance As Double

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (EndCapFeatureData)

 Syntax

Visual Basic for Applications (VBA)

Public Sub ReleaseSelectionAccess()

SOLIDWORKS Type Library

Thickness Property (EndCapFeatureData)

 Syntax

Visual Basic for Applications (VBA)

Public Property Thickness As Double

SOLIDWORKS Type Library

ThicknessRatioForOffset Property (EndCapFeatureData)

 Syntax

Visual Basic for Applications (VBA)

Public Property ThicknessRatioForOffset As Double

SOLIDWORKS Type Library

UseChamferCorners Property (EndCapFeatureData)

 Syntax

Visual Basic for Applications (VBA)

Public Property UseChamferCorners As Boolean

SOLIDWORKS Type Library

UseCornerTreatment Property (EndCapFeatureData)

 Syntax

Visual Basic for Applications (VBA)

Public Property UseCornerTreatment As Boolean

SOLIDWORKS Type Library

UseReverse Property (EndCapFeatureData)



Visual Basic for Applications (VBA)

Public Property UseReverse As Boolean

SOLIDWORKS Type Library

UseThicknessRatioForOffset Property (EndCapFeatureData)



Visual Basic for Applications (VBA)


Public Property UseThicknessRatioForOffset As Boolean

Entity (Type)

SOLIDWORKS Type Library

Entity Object

Object Model

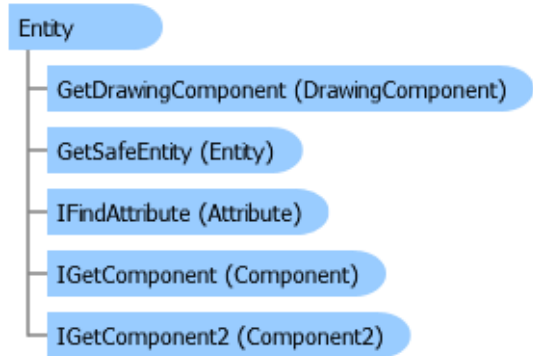

SOLIDWORKS Type Library

Entity Object Members

Public Methods

	CreateStringAttribute
	CreateStringAttributeDefinition
	DeleteModelName
	DeSelect
	FindAttribute
	FindStringAttribute
	GetComponent
	GetDistance
	GetDrawingComponent
	GetSafeEntity
	GetType
	IFindAttribute
	IGetComponent
	IGetComponent2
	IGetDistance
	RemoveStringAttribute
	Select
	Select2
	Select3
	Select4
	SelectByMark

Public Properties

	IsSafe
	ModelName

CreateStringAttribute Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function CreateStringAttribute( _  
    ByVal DefinitionTag As Long, _  
    ByVal StringValue As String _  
) As Boolean
```

CreateStringAttributeDefinition Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function CreateStringAttributeDefinition( _  
    ByVal IdentifierString As String _  
) As Long
```

DeleteModelName Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub DeleteModelName()
```

DeSelect Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function DeSelect() As Boolean
```

FindAttribute Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function FindAttribute( _  
    ByVal AttributeDef As Object, _  
    ByVal WhichOne As Long _  
) As Object
```

FindStringAttribute Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function FindStringAttribute( _  
    ByVal DefinitionTag As Long _  
) As String
```

GetComponent Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetComponent() As Object
```

GetDistance Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetDistance( _  
    ByVal BaseEntity As Object, _  
    ByVal MinDistance As Boolean, _  
    ByVal Parameter As Variant, _  
    ByRef Position1 As Variant, _  
    ByRef Position2 As Variant, _  
    ByRef Distance As Double _  
) As Long
```

GetDrawingComponent Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetDrawingComponent( _  
    ByVal View As View _  
) As DrawingComponent
```

GetSafeEntity Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetSafeEntity() As Entity
```

GetType Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetType() As Long
```

IFindAttribute Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IFindAttribute( _  
    ByVal AttributeDef As AttributeDef, _  
    ByVal WhichOne As Long _  
) As Attribute
```

IGetComponent Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetComponent() As Component
```

IGetComponent2 Method (Entity) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetComponent2() As Component2
```

SOLIDWORKS Type Library

IGetDistance Method (Entity)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetDistance( _  
    ByVal BaseEntity As Entity, _  
    ByVal MinDistance As Boolean, _  
    ByRef Parameter As Double, _  
    ByRef Position1 As Double, _  
    ByRef Position2 As Double, _  
    ByRef Distance As Double _  
) As Long
```

SOLIDWORKS Type Library

IsSafe Property (Entity)

Syntax

Visual Basic for Applications (VBA)

```
Public Property IsSafe As Boolean
```

SOLIDWORKS Type Library

ModelName Property (Entity)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ModelName As String
```

SOLIDWORKS Type Library

RemoveStringAttribute Method (Entity)

Syntax

Visual Basic for Applications (VBA)

```
Public Function RemoveStringAttribute( _  
    ByVal DefinitionTag As Long _  
) As Boolean
```

SOLIDWORKS Type Library

Select Method (Entity)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Select( _  
    ByVal AppendFlag As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

Select2 Method (Entity)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Select2( _  
    ByVal Append As Boolean, _  
    ByVal Mark As Long _  
) As Boolean
```

Select3 Method (Entity)**Syntax**

Visual Basic for Applications (VBA)

```
Public Function Select3( _  
    ByVal Append As Boolean, _  
    ByVal Mark As Long, _  
    ByVal Callout As Callout _  
) As Boolean
```

Select4 Method (Entity)**Syntax**

Visual Basic for Applications (VBA)

```
Public Function Select4( _  
    ByVal Append As Boolean, _  
    ByVal Data As SelectData _  
) As Boolean
```

SelectByMark Method (Entity)**Syntax**

Visual Basic for Applications (VBA)

```
Public Function SelectByMark( _  
    ByVal AppendFlag As Boolean, _  
    ByVal Mark As Long _  
) As Boolean
```

EnumBodies (Type)

SOLIDWORKS Type Library
EnumBodies Object

Object Model

EnumBodies

SOLIDWORKS Type Library
EnumBodies Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumBodies)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumBodies _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumBodies)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As Body, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumBodies)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumBodies)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumBodies2 (Type)

SOLIDWORKS Type Library
EnumBodies2 Object

Object Model

EnumBodies2

SOLIDWORKS Type Library
EnumBodies2 Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumBodies2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumBodies2 _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumBodies2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As Body2, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumBodies2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumBodies2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumCoEdges (Type)

SOLIDWORKS Type Library
EnumCoEdges Object

Object Model

EnumCoEdges

SOLIDWORKS Type Library
EnumCoEdges Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumCoEdges)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumCoEdges _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumCoEdges)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As CoEdge, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumCoEdges)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumCoEdges)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumComponents (Type)

SOLIDWORKS Type Library
EnumComponents Object

Object Model

EnumComponents

SOLIDWORKS Type Library
EnumComponents Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumComponents)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumComponents _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumComponents)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As Component, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumComponents)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumComponents)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumComponents2 (Type)

SOLIDWORKS Type Library

EnumComponents2 Object

Object Model

EnumComponents2

SOLIDWORKS Type Library

EnumComponents2 Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library

Clone Method (EnumComponents2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Clone(  
    ByRef Ppenum As EnumComponents2 _  
) As HRESULT
```

SOLIDWORKS Type Library

Next Method (EnumComponents2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Next(  
    ByVal Celt As Long, _  
    ByRef Rgelt As Component2, _  
    ByRef PceltFetched As Long _  
) As HRESULT
```

SOLIDWORKS Type Library

Reset Method (EnumComponents2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library

Skip Method (EnumComponents2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Skip(  
    ByVal Celt As Long _  
) As HRESULT
```

EnumDisplayDimensions (Type)

SOLIDWORKS Type Library

EnumDisplayDimensions Object

Object Model

EnumDisplayDimensions

SOLIDWORKS Type Library

EnumDisplayDimensions Object Members

Public Methods

Clone

Next

Reset

Skip

SOLIDWORKS Type Library

Clone Method (EnumDisplayDimensions)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Clone(  
    ByRef Ppenum As EnumDisplayDimensions _  
) As HRESULT
```

SOLIDWORKS Type Library

Next Method (EnumDisplayDimensions)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Next(  
    ByVal Celt As Long, _  
    ByRef Rgelt As DisplayDimension, _  
    ByRef PceltFetched As Long _  
) As HRESULT
```

SOLIDWORKS Type Library

Reset Method (EnumDisplayDimensions)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library

Skip Method (EnumDisplayDimensions)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Skip(  
    ByVal Celt As Long _  
) As HRESULT
```

EnumDocuments (Type)

SOLIDWORKS Type Library
EnumDocuments Object

Object Model

EnumDocuments

SOLIDWORKS Type Library
EnumDocuments Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumDocuments)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumDocuments _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumDocuments)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As ModelDoc, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumDocuments)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumDocuments)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumDocuments2 (Type)

SOLIDWORKS Type Library
EnumDocuments2 Object

Object Model

EnumDocuments2

SOLIDWORKS Type Library
EnumDocuments2 Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumDocuments2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumDocuments2 _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumDocuments2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As ModelDoc2, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumDocuments2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumDocuments2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumDrSections (Type)

SOLIDWORKS Type Library
EnumDrSections Object

Object Model

EnumDrSections

SOLIDWORKS Type Library
EnumDrSections Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumDrSections)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumDrSections _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumDrSections)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As DrSection, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumDrSections)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumDrSections)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumEdges (Type)

SOLIDWORKS Type Library

EnumEdges Object

Object Model

EnumEdges

SOLIDWORKS Type Library

EnumEdges Object Members

Public Methods

Clone

Next

Reset

Skip

SOLIDWORKS Type Library

Clone Method (EnumEdges)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Clone( _  
    ByRef Ppenum As EnumEdges _  
) As HRESULT
```

SOLIDWORKS Type Library

Next Method (EnumEdges)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Next( _  
    ByVal Celt As Long, _  
    ByRef Rgelt As Edge, _  
    ByRef PceltFetched As Long _  
) As HRESULT
```

SOLIDWORKS Type Library

Reset Method (EnumEdges)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library

Skip Method (EnumEdges)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Skip( _  
    ByVal Celt As Long _  
) As HRESULT
```

EnumFaces (Type)

SOLIDWORKS Type Library

EnumFaces Object

Object Model

EnumFaces

SOLIDWORKS Type Library

EnumFaces Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library

Clone Method (EnumFaces)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Clone(  
    ByRef Ppenum As EnumFaces _  
) As HRESULT
```

SOLIDWORKS Type Library

Next Method (EnumFaces)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Next(  
    ByVal Celt As Long, _  
    ByRef Rgelt As Face, _  
    ByRef PceltFetched As Long _  
) As HRESULT
```

SOLIDWORKS Type Library

Reset Method (EnumFaces)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library

Skip Method (EnumFaces)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Skip(  
    ByVal Celt As Long _  
) As HRESULT
```

EnumFaces2 (Type)

SOLIDWORKS Type Library
EnumFaces2 Object

Object Model

EnumFaces2

SOLIDWORKS Type Library
EnumFaces2 Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumFaces2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumFaces2 _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumFaces2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As Face2, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumFaces2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumFaces2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumLoops (Type)

SOLIDWORKS Type Library

EnumLoops Object

Object Model

EnumLoops

SOLIDWORKS Type Library

EnumLoops Object Members

Public Methods

Clone

Next

Reset

Skip

SOLIDWORKS Type Library

Clone Method (EnumLoops)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Clone( _  
    ByRef Ppenum As EnumLoops _  
) As HRESULT
```

SOLIDWORKS Type Library

Next Method (EnumLoops)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Next( _  
    ByVal Celt As Long, _  
    ByRef Rgelt As Loop, _  
    ByRef PceltFetched As Long _  
) As HRESULT
```

SOLIDWORKS Type Library

Reset Method (EnumLoops)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library

Skip Method (EnumLoops)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Skip( _  
    ByVal Celt As Long _  
) As HRESULT
```

EnumLoops2 (Type)

SOLIDWORKS Type Library
EnumLoops2 Object

Object Model

EnumLoops2

SOLIDWORKS Type Library
EnumLoops2 Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumLoops2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumLoops2 _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumLoops2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As Loop2, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumLoops2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumLoops2)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumModelViews (Type)

SOLIDWORKS Type Library

EnumModelViews Object

Object Model

EnumModelViews

SOLIDWORKS Type Library

EnumModelViews Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library

Clone Method (EnumModelViews)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Clone(  
    ByRef Ppenum As EnumModelViews _  
) As HRESULT
```

SOLIDWORKS Type Library

Next Method (EnumModelViews)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Next(  
    ByVal Celt As Long, _  
    ByRef Rgelt As ModelView, _  
    ByRef PceltFetched As Long _  
) As HRESULT
```

SOLIDWORKS Type Library

Reset Method (EnumModelViews)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library

Skip Method (EnumModelViews)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Skip(  
    ByVal Celt As Long _  
) As HRESULT
```

EnumSketchHatches (Type)

SOLIDWORKS Type Library
EnumSketchHatches Object

Object Model

EnumSketchHatches

SOLIDWORKS Type Library
EnumSketchHatches Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumSketchHatches)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumSketchHatches _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumSketchHatches)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As SketchHatch, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumSketchHatches)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumSketchHatches)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```