

SOLIDWORKS API (VB6 COM) — Reference (27/102): EnumSketchPoints-ExtrudeFeatureData

SOLIDWORKS API Documentation (converted from CHM)

EnumSketchPoints (Type)

SOLIDWORKS Type Library
EnumSketchPoints Object

Object Model

EnumSketchPoints

SOLIDWORKS Type Library
EnumSketchPoints Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumSketchPoints)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumSketchPoints _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumSketchPoints)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As SketchPoint, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumSketchPoints)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumSketchPoints)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

EnumSketchSegments (Type)

SOLIDWORKS Type Library
EnumSketchSegments Object

Object Model

EnumSketchSegments

SOLIDWORKS Type Library
EnumSketchSegments Object Members

Public Methods

- Clone
- Next
- Reset
- Skip

SOLIDWORKS Type Library
Clone Method (EnumSketchSegments)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Clone( _
    ByRef Ppenum As EnumSketchSegments _
) As HRESULT
```

SOLIDWORKS Type Library
Next Method (EnumSketchSegments)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Next( _
    ByVal Celt As Long, _
    ByRef Rgelt As SketchSegment, _
    ByRef PceltFetched As Long _
) As HRESULT
```

SOLIDWORKS Type Library
Reset Method (EnumSketchSegments)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Reset() As HRESULT
```

SOLIDWORKS Type Library
Skip Method (EnumSketchSegments)

Syntax

```
Visual Basic for Applications (VBA)

Public Function Skip( _
    ByVal Celt As Long _
) As HRESULT
```

Environment (Type)

SOLIDWORKS Type Library
Environment Object

Object Model

Environment

SOLIDWORKS Type Library
Environment Object Members

Public Methods

 GetIsBound
 GetSymArcs
 GetSymArcs2
 GetSymCircles
 GetSymEdgeCounts
 GetSymLines
 GetSymText
 GetSymTextPoints
 GetSymTriangles
 IGetSymArcs
 IGetSymCircles
 IGetSymEdgeCounts
 IGetSymLines
 IGetSymTextPoints
 IGetSymTriangles

SOLIDWORKS Type Library
GetIsBound Method (Environment)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetIsBound( _  
    ByVal SymId As String, _  
    ByRef Retval As Boolean _  
)
```

SOLIDWORKS Type Library
GetSymArcs Method (Environment)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymArcs( _  
    ByVal SymId As String _  
) As Variant
```

SOLIDWORKS Type Library
GetSymArcs2 Method (Environment)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymArcs2( _  
    ByVal SymId As String _  
) As Variant
```

SOLIDWORKS Type Library

GetSymCircles Method (Environment)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymCircles( _  
    ByVal SymId As String _  
) As Variant
```

SOLIDWORKS Type Library

GetSymEdgeCounts Method (Environment)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymEdgeCounts( _  
    ByVal SymId As String _  
) As Variant
```

SOLIDWORKS Type Library

GetSymLines Method (Environment)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymLines( _  
    ByVal SymId As String _  
) As Variant
```

SOLIDWORKS Type Library

GetSymText Method (Environment)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymText( _  
    ByVal SymId As String _  
) As Variant
```

SOLIDWORKS Type Library

GetSymTextPoints Method (Environment)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymTextPoints( _  
    ByVal SymId As String _  
) As Variant
```

SOLIDWORKS Type Library

GetSymTriangles Method (Environment)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymTriangles( _  
    ByVal SymId As String _  
) As Variant
```

IGetSymArcs Method (Environment) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetSymArcs( _  
    ByVal SymId As String _  
) As Double
```

IGetSymCircles Method (Environment) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetSymCircles( _  
    ByVal SymId As String _  
) As Double
```

IGetSymEdgeCounts Method (Environment) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetSymEdgeCounts( _  
    ByVal SymId As String _  
) As Integer
```

IGetSymLines Method (Environment) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetSymLines( _  
    ByVal SymId As String _  
) As Double
```

IGetSymTextPoints Method (Environment) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetSymTextPoints( _  
    ByVal SymId As String _  
) As Double
```

IGetSymTriangles Method (Environment) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetSymTriangles( _  
    ByVal SymId As String _  
) As Double
```

EquationMgr (Type)

SOLIDWORKS Type Library
EquationMgr Object

 Object Model

EquationMgr

SOLIDWORKS Type Library
EquationMgr Object Members

 Public Methods

 Add
 Add2
 Add3
 ChangeSuppressionForAllConfigurations
 ChangeSuppressionForConfiguration
 Delete
 EvaluateAll
 GetConfigurationOption
 GetCount
 GetDisabledEquationCount
 IAdd3
 ISetEquationAndConfigurationOption
 SetEquationAndConfigurationOption
 UpdateValuesFromExternalEquationFile

 Public Properties

 AngularEquationUnits
 AutomaticRebuild
 AutomaticSolveOrder
 Disabled
 Equation
 FilePath
 GlobalVariable
 LinkToFile
 Status
 Suppression
 Value

SOLIDWORKS Type Library
Add Method (EquationMgr)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function Add( _  
    ByVal Index As Long, _
```

```
    ByVal Equation As String _  
  ) As Long
```

SOLIDWORKS Type Library

Add2 Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Add2( _  
    ByVal Index As Long, _  
    ByVal Equation As String, _  
    ByVal Solve As Boolean _  
  ) As Long
```

SOLIDWORKS Type Library

Add3 Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Add3( _  
    ByVal Index As Long, _  
    ByVal Equation As String, _  
    ByVal Solve As Boolean, _  
    ByVal WhichConfigurations As Long, _  
    ByVal ConfigNames As Variant _  
  ) As Long
```

SOLIDWORKS Type Library

AngularEquationUnits Property (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Property AngularEquationUnits As Long
```

SOLIDWORKS Type Library

AutomaticRebuild Property (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Property AutomaticRebuild As Boolean
```

SOLIDWORKS Type Library

AutomaticSolveOrder Property (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Property AutomaticSolveOrder As Boolean
```

SOLIDWORKS Type Library

ChangeSuppressionForAllConfigurations Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ChangeSuppressionForAllConfigurations( _  
    ByVal Index As Long, _  
    ByVal State As Boolean _  
  ) As Long
```

SOLIDWORKS Type Library

ChangeSuppressionForConfiguration Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ChangeSuppressionForConfiguration( _  
    ByVal Index As Long, _  
    ByVal ConfigName As String, _  
    ByVal State As Boolean _  
    ) As Long
```

SOLIDWORKS Type Library

Delete Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Delete( _  
    ByVal Index As Long _  
    ) As Long
```

SOLIDWORKS Type Library

Disabled Property (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Disabled( _  
    ByVal Index As Long _  
    ) As Boolean
```

SOLIDWORKS Type Library

Equation Property (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Equation( _  
    ByVal Index As Long _  
    ) As String
```

SOLIDWORKS Type Library

EvaluateAll Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function EvaluateAll() As Long
```

SOLIDWORKS Type Library

FilePath Property (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Property FilePath As String
```

SOLIDWORKS Type Library

GetConfigurationOption Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetConfigurationOption( _  
    ByVal Index As Long _  
    ) As Long
```

SOLIDWORKS Type Library

GetCount Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCount() As Long
```

SOLIDWORKS Type Library

GetDisabledEquationCount Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisabledEquationCount() As Long
```

SOLIDWORKS Type Library

GlobalVariable Property (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Property GlobalVariable( _  
    ByVal Index As Long _  
    ) As Boolean
```

SOLIDWORKS Type Library

IAdd3 Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IAdd3( _  
    ByVal Index As Long, _  
    ByVal Equation As String, _  
    ByVal Solve As Boolean, _  
    ByVal WhichConfigurations As Long, _  
    ByVal ConfigCount As Long, _  
    ByRef ConfigNames As String _  
    ) As Long
```

SOLIDWORKS Type Library

ISetEquationAndConfigurationOption Method (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ISetEquationAndConfigurationOption( _  
    ByVal Index As Long, _  
    ByVal Equation As String, _  
    ByVal WhichConfigurations As Long, _  
    ByVal ConfigCount As Long, _  
    ByRef ConfigNames As String _  
    ) As Long
```

SOLIDWORKS Type Library

LinkToFile Property (EquationMgr)

Syntax

Visual Basic for Applications (VBA)

Public Property LinkToFile As Boolean

SOLIDWORKS Type Library

SetEquationAndConfigurationOption Method (EquationMgr)



Visual Basic for Applications (VBA)

```
Public Function SetEquationAndConfigurationOption( _  
    ByVal Index As Long, _  
    ByVal Equation As String, _  
    ByVal WhichConfigurations As Long, _  
    ByVal ConfigNames As Variant _  
    ) As Long
```

SOLIDWORKS Type Library

Status Property (EquationMgr)



Visual Basic for Applications (VBA)

```
Public Property Status As Long
```

SOLIDWORKS Type Library

Suppression Property (EquationMgr)



Visual Basic for Applications (VBA)

```
Public Property Suppression( _  
    ByVal Index As Long _  
    ) As Boolean
```

SOLIDWORKS Type Library

UpdateValuesFromExternalEquationFile Method (EquationMgr)



Visual Basic for Applications (VBA)

```
Public Function UpdateValuesFromExternalEquationFile() As Boolean
```

SOLIDWORKS Type Library

Value Property (EquationMgr)



Visual Basic for Applications (VBA)

```
Public Property Value( _  
    ByVal Index As Long _  
    ) As Double
```

ExplodeStep (Type)

SOLIDWORKS Type Library
ExplodeStep Object

Object Model

ExplodeStep

IGetComponent (Component)

SOLIDWORKS Type Library
ExplodeStep Object Members

Public Methods

	GetComponent
	GetComponentName
	GetComponents
	GetComponentXform
	GetExplodeDirection
	GetNumOfComponents
	GetRotationAxis
	GetSpecificComponentXForm
	GetSubAssemblyExplodeSteps
	IGetComponent
	IGetComponentXform
	IsSubAssemblyRigid
	SetComponents
	SetExplodeDirection
	SetRotationAxis

Public Properties

	AutoSpaceComponentsOnDrag
	DivergeDirection
	DivergeFromAxis
	ExplodeDistance
	ExplodeStepType
	Name
	ReverseRotationDirection
	ReverseTranslationDirection
	RotateAboutEachComponentOrigin
	RotationAngle

SOLIDWORKS Type Library
AutoSpaceComponentsOnDrag Property (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

Public Property AutoSpaceComponentsOnDrag As Boolean

SOLIDWORKS Type Library

DivergeDirection Property (ExplodeStep)



Visual Basic for Applications (VBA)

Public Property DivergeDirection As Object

SOLIDWORKS Type Library

DivergeFromAxis Property (ExplodeStep)



Visual Basic for Applications (VBA)

Public Property DivergeFromAxis As Boolean

SOLIDWORKS Type Library

ExplodeDistance Property (ExplodeStep)



Visual Basic for Applications (VBA)

Public Property ExplodeDistance As Double

SOLIDWORKS Type Library

ExplodeStepType Property (ExplodeStep)



Visual Basic for Applications (VBA)

Public Property ExplodeStepType As Long

SOLIDWORKS Type Library

GetComponent Method (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Function GetComponent( _  
    ByVal Index As Integer _  
) As Object
```

SOLIDWORKS Type Library

GetComponentName Method (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Function GetComponentName( _  
    ByVal Index As Integer _  
) As String
```

SOLIDWORKS Type Library

GetComponents Method (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Function GetComponents() As Variant
```

SOLIDWORKS Type Library

GetComponentXform Method (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetComponentXform() As Variant
```

SOLIDWORKS Type Library

GetExplodeDirection Method (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetExplodeDirection( _  
    ByRef ExplDirIndex As Long _  
) As Object
```

SOLIDWORKS Type Library

GetNumOfComponents Method (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNumOfComponents() As Integer
```

SOLIDWORKS Type Library

GetRotationAxis Method (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetRotationAxis( _  
    ByRef RotAxisIndex As Long _  
) As Object
```

SOLIDWORKS Type Library

GetSpecificComponentXForm Method (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSpecificComponentXForm( _  
    ByVal Index As Long _  
) As Variant
```

SOLIDWORKS Type Library

GetSubAssemblyExplodeSteps Method (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSubAssemblyExplodeSteps() As Variant
```

SOLIDWORKS Type Library

IGetComponent Method (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetComponent( _  
    ByVal Index As Integer _  
) As Component
```

SOLIDWORKS Type Library

IGetComponentXform Method (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Function IGetComponentXform() As Double
```

SOLIDWORKS Type Library

IsSubAssemblyRigid Method (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Function IsSubAssemblyRigid() As Boolean
```

SOLIDWORKS Type Library

Name Property (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Property Name As String
```

SOLIDWORKS Type Library

ReverseRotationDirection Property (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Property ReverseRotationDirection As Boolean
```

SOLIDWORKS Type Library

ReverseTranslationDirection Property (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Property ReverseTranslationDirection As Boolean
```

SOLIDWORKS Type Library

RotateAboutEachComponentOrigin Property (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Property RotateAboutEachComponentOrigin As Boolean
```

SOLIDWORKS Type Library

RotationAngle Property (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Property RotationAngle As Double
```

SOLIDWORKS Type Library

SetComponents Method (ExplodeStep)



Visual Basic for Applications (VBA)

```
Public Sub SetComponents( _  
    ByVal Components As Variant _  
)
```

SOLIDWORKS Type Library

SetExplodeDirection Method (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetExplodeDirection( _  
    ByVal ExplodeDirection As Object, _  
    ByVal ExplDirIndex As Long _  
)
```

SOLIDWORKS Type Library

SetRotationAxis Method (ExplodeStep)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetRotationAxis( _  
    ByVal RotationAxis As Object, _  
    ByVal RotAxisIndex As Long _  
)
```

ExportPdfData (Type)

SOLIDWORKS Type Library

ExportPdfData Object

Object Model

ExportPdfData

SOLIDWORKS Type Library

ExportPdfData Object Members

Public Methods

GetSheets

GetWhichSheets

SetSheets

Public Properties

ExportAs3D

ViewPdfAfterSaving

SOLIDWORKS Type Library

ExportAs3D Property (ExportPdfData)

Syntax

Visual Basic for Applications (VBA)

Public Property ExportAs3D As Boolean

SOLIDWORKS Type Library

GetSheets Method (ExportPdfData)

Syntax

Visual Basic for Applications (VBA)

Public Function GetSheets() As Variant

SOLIDWORKS Type Library

GetWhichSheets Method (ExportPdfData)

Syntax

Visual Basic for Applications (VBA)

Public Function GetWhichSheets() As Long

SOLIDWORKS Type Library

SetSheets Method (ExportPdfData)

Syntax

Visual Basic for Applications (VBA)

Public Function SetSheets(_
 ByVal Which As Long, _
 ByVal Sheets As Variant _
) As Boolean

SOLIDWORKS Type Library


ViewPdfAfterSaving Property (ExportPdfData)

Public Property ViewPdfAfterSaving As Boolean

ExtrudeFeatureData (Type)

SOLIDWORKS Type Library
ExtrudeFeatureData Object

Object Model

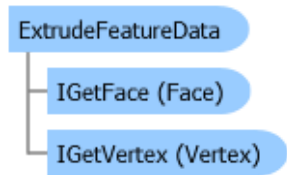

SOLIDWORKS Type Library
ExtrudeFeatureData Object Members

Public Methods

	AccessSelections
	GetDepth
	GetDraftAngle
	GetDraftOutward
	GetDraftWhileExtruding
	GetEndCondition
	GetFace
	GetVertex
	GetWallThickness
	IAccessSelections
	IGetFace
	IGetVertex
	IsBaseExtrude
	IsBossFeature
	ISetFace
	ISetVertex
	IsThinFeature
	ReleaseSelectionAccess
	SetDepth
	SetDraftAngle
	SetDraftOutward
	SetDraftWhileExtruding
	SetEndCondition
	SetFace
	SetVertex
	SetWallThickness

Public Properties


	BothDirections
	CapEnds



[CapThickness](#)



[FlipSideToCut](#)



[ReverseDirection](#)



[ThinWallType](#)

SOLIDWORKS Type Library

AccessSelections Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As Object, _  
    ByVal Component As Object _  
    ) As Boolean
```

SOLIDWORKS Type Library

BothDirections Property (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property BothDirections As Boolean
```

SOLIDWORKS Type Library

CapEnds Property (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property CapEnds As Boolean
```

SOLIDWORKS Type Library

CapThickness Property (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property CapThickness As Double
```

SOLIDWORKS Type Library

FlipSideToCut Property (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property FlipSideToCut As Boolean
```

SOLIDWORKS Type Library

GetDepth Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDepth( _  
    ByVal Forward As Boolean _  
    ) As Double
```

SOLIDWORKS Type Library

GetDraftAngle Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDraftAngle( _  
    ByVal Forward As Boolean _  
) As Double
```

SOLIDWORKS Type Library

GetDraftOutward Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDraftOutward( _  
    ByVal Forward As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

GetDraftWhileExtruding Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDraftWhileExtruding( _  
    ByVal Forward As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

GetEndCondition Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEndCondition( _  
    ByVal Forward As Boolean _  
) As Integer
```

SOLIDWORKS Type Library

GetFace Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFace( _  
    ByVal Forward As Boolean _  
) As Object
```

SOLIDWORKS Type Library

GetVertex Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetVertex( _  
    ByVal Forward As Boolean _  
) As Object
```

SOLIDWORKS Type Library

GetWallThickness Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetWallThickness( _  
    ByVal Forward As Boolean _  
) As Double
```

IAccessSelections Method (ExtrudeFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections( _  
    ByVal TopDoc As ModelDoc, _  
    ByVal Component As Component _  
    ) As Boolean
```

IGetFace Method (ExtrudeFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetFace( _  
    ByVal Forward As Boolean _  
    ) As Face
```

IGetVertex Method (ExtrudeFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetVertex( _  
    ByVal Forward As Boolean _  
    ) As Vertex
```

IsBaseExtrude Method (ExtrudeFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IsBaseExtrude() As Boolean
```

IsBossFeature Method (ExtrudeFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IsBossFeature() As Boolean
```

ISetFace Method (ExtrudeFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub ISetFace( _  
    ByVal Forward As Boolean, _  
    ByVal Face As Face _  
    )
```

ISetVertex Method (ExtrudeFeatureData) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub ISetVertex(  
    ByVal Forward As Boolean, _
```

```
    ByVal Face As Vertex _  
)
```

SOLIDWORKS Type Library

IsThinFeature Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IsThinFeature() As Boolean
```

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

ReverseDirection Property (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReverseDirection As Boolean
```

SOLIDWORKS Type Library

SetDepth Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetDepth( _  
    ByVal Forward As Boolean, _  
    ByVal Depth As Double _  
)
```

SOLIDWORKS Type Library

SetDraftAngle Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetDraftAngle( _  
    ByVal Forward As Boolean, _  
    ByVal DraftAngle As Double _  
)
```

SOLIDWORKS Type Library

SetDraftOutward Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetDraftOutward( _  
    ByVal Forward As Boolean, _  
    ByVal DraftOutward As Boolean _  
)
```

SOLIDWORKS Type Library

SetDraftWhileExtruding Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetDraftWhileExtruding( _  
    ByVal Forward As Boolean, _  
    ByVal DraftWhileExtrude As Boolean _  
)
```

SOLIDWORKS Type Library

SetEndCondition Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetEndCondition( _  
    ByVal Forward As Boolean, _  
    ByVal EndCondition As Integer _  
)
```

SOLIDWORKS Type Library

SetFace Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetFace( _  
    ByVal Forward As Boolean, _  
    ByVal Face As Object _  
)
```

SOLIDWORKS Type Library

SetVertex Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetVertex( _  
    ByVal Forward As Boolean, _  
    ByVal Face As Object _  
)
```

SOLIDWORKS Type Library

SetWallThickness Method (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetWallThickness( _  
    ByVal Forward As Boolean, _  
    ByVal WallThickness As Double _  
)
```

SOLIDWORKS Type Library

ThinWallType Property (ExtrudeFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ThinWallType As Integer
```