


SOLIDWORKS API (VB6 COM) — Reference (28/102): ExtrudeFeatureData2-Face

SOLIDWORKS API Documentation (converted from CHM)

ExtrudeFeatureData2 (Type)

SOLIDWORKS Type Library
ExtrudeFeatureData2 Object

Object Model

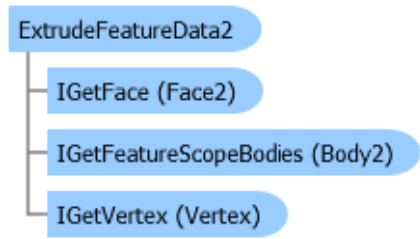

SOLIDWORKS Type Library
ExtrudeFeatureData2 Object Members

Public Methods

	AccessSelections
	GetAutoFilletCorners
	GetAutoFilletRadius
	GetContoursCount
	GetDepth
	GetDirectionReference
	GetDraftAngle
	GetDraftOutward
	GetDraftWhileExtruding
	GetEndCondition
	GetEndConditionReference
	GetFace
	GetFeatureScopeBodiesCount
	GetFromEntity
	GetReverseOffset
	GetTranslateSurface
	GetVertex
	GetWallThickness
	IAccessSelections
	IGetContours
	IGetFace
	IGetFeatureScopeBodies
	IGetVertex
	IsBaseExtrude
	IsBossFeature
	ISetChangeToConfigurations
	ISetContours
	ISetFace

 IsFeatureScopeBodies
 IsVertex
 IsThinFeature
 ReleaseSelectionAccess
 SetAutoFillet
 SetChangeToConfigurations
 SetDepth
 SetDirectionReference
 SetDraftAngle
 SetDraftOutward
 SetDraftWhileExtruding
 SetEndCondition
 SetEndConditionReference
 SetFace
 SetFromEntity
 SetReverseOffset
 SetTranslateSurface
 SetVertex
 SetWallThickness

Public Properties

 AssemblyFeatureScope
 AutoSelect
 AutoSelectComponents
 BothDirections
 CapEnds
 CapThickness
 Contours
 FeatureScope
 FeatureScopeBodies
 FlipSideToCut
 FromOffsetDistance
 FromOffsetReverse
 FromType
 LinkToThickness
 Merge
 NormalCut
 OptimizeGeometry
 PropagateFeatureToParts
 ReverseDirection
 ThinWallType



Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As Object, _  
    ByVal Component As Object _  
    ) As Boolean
```

SOLIDWORKS Type Library

AssemblyFeatureScope Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property AssemblyFeatureScope As Boolean
```

SOLIDWORKS Type Library

AutoSelect Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property AutoSelect As Boolean
```

SOLIDWORKS Type Library

AutoSelectComponents Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property AutoSelectComponents As Boolean
```

SOLIDWORKS Type Library

BothDirections Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property BothDirections As Boolean
```

SOLIDWORKS Type Library

CapEnds Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property CapEnds As Boolean
```

SOLIDWORKS Type Library

CapThickness Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property CapThickness As Double
```

SOLIDWORKS Type Library

Contours Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property Contours As Variant
```

SOLIDWORKS Type Library

FeatureScope Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FeatureScope As Boolean
```

SOLIDWORKS Type Library

FeatureScopeBodies Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FeatureScopeBodies As Variant
```

SOLIDWORKS Type Library

FlipSideToCut Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FlipSideToCut As Boolean
```

SOLIDWORKS Type Library

FromOffsetDistance Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FromOffsetDistance As Double
```

SOLIDWORKS Type Library

FromOffsetReverse Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FromOffsetReverse As Boolean
```

SOLIDWORKS Type Library

FromType Property (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FromType As Long
```

SOLIDWORKS Type Library

GetAutoFilletCorners Method (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAutoFilletCorners() As Boolean
```

SOLIDWORKS Type Library

GetAutoFilletRadius Method (ExtrudeFeatureData2)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAutoFilletRadius() As Double
```

SOLIDWORKS Type Library

GetContoursCount Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetContoursCount() As Long
```

SOLIDWORKS Type Library

GetDepth Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDepth( _  
    ByVal Forward As Boolean _  
    ) As Double
```

SOLIDWORKS Type Library

GetDirectionReference Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDirectionReference( _  
    ByRef Ref1 As Object, _  
    ByRef Type1 As Long, _  
    ByRef Ref2 As Object, _  
    ByRef Type2 As Long _  
    ) As Long
```

SOLIDWORKS Type Library

GetDraftAngle Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDraftAngle( _  
    ByVal Forward As Boolean _  
    ) As Double
```

SOLIDWORKS Type Library

GetDraftOutward Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDraftOutward( _  
    ByVal Forward As Boolean _  
    ) As Boolean
```

SOLIDWORKS Type Library

GetDraftWhileExtruding Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDraftWhileExtruding( _  
    ByVal Forward As Boolean _  
    ) As Boolean
```

SOLIDWORKS Type Library

GetEndCondition Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEndCondition( _  
    ByVal Forward As Boolean _  
) As Integer
```

SOLIDWORKS Type Library

GetEndConditionReference Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEndConditionReference( _  
    ByVal Forward As Boolean, _  
    ByRef ReferenceType As Long _  
) As Object
```

SOLIDWORKS Type Library

GetFace Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFace( _  
    ByVal Forward As Boolean _  
) As Object
```

SOLIDWORKS Type Library

GetFeatureScopeBodiesCount Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFeatureScopeBodiesCount() As Long
```

SOLIDWORKS Type Library

GetFromEntity Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetFromEntity( _  
    ByRef FromEntity As Object, _  
    ByRef Type As Long _  
)
```

SOLIDWORKS Type Library

GetReverseOffset Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetReverseOffset( _  
    ByVal Fwd As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

GetTranslateSurface Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTranslateSurface( _  
    ByVal Fwd As Boolean _  
) As Boolean
```

GetVertex Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetVertex( _  
    ByVal Forward As Boolean _  
) As Object
```

GetWallThickness Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetWallThickness( _  
    ByVal Forward As Boolean _  
) As Double
```

IAccessSelections Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
) As Boolean
```

IGetContours Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetContours( _  
    ByVal Count As Long _  
) As Object
```

IGetFace Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetFace( _  
    ByVal Forward As Boolean _  
) As Face2
```

IGetFeatureScopeBodies Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetFeatureScopeBodies( _  
    ByVal Count As Long _  
) As Body2
```

IGetVertex Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetVertex( _  
    ByVal Forward As Boolean _  
    ) As Vertex
```

SOLIDWORKS Type Library

IsBaseExtrude Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IsBaseExtrude() As Boolean
```

SOLIDWORKS Type Library

IsBossFeature Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IsBossFeature() As Boolean
```

SOLIDWORKS Type Library

ISetChangeToConfigurations Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ISetChangeToConfigurations( _  
    ByVal Config_opt As Long, _  
    ByVal Config_count As Long, _  
    ByRef Config_names As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

ISetContours Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetContours( _  
    ByVal Count As Long, _  
    ByRef Contours As Object _  
    )
```

SOLIDWORKS Type Library

ISetFace Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetFace( _  
    ByVal Forward As Boolean, _  
    ByVal Face As Face2 _  
    )
```

SOLIDWORKS Type Library

ISetFeatureScopeBodies Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetFeatureScopeBodies( _  
    ByVal Count As Long, _  
    ByVal BodyArr As Body2 _  
    )
```

SOLIDWORKS Type Library

ISetVertex Method (ExtrudeFeatureData2)



Visual Basic for Applications (VBA)

```
Public Sub ISetVertex( _  
    ByVal Forward As Boolean, _  
    ByVal Face As Vertex _  
)
```

SOLIDWORKS Type Library

IsThinFeature Method (ExtrudeFeatureData2)



Visual Basic for Applications (VBA)

```
Public Function IsThinFeature() As Boolean
```

SOLIDWORKS Type Library

LinkToThickness Property (ExtrudeFeatureData2)



Visual Basic for Applications (VBA)

```
Public Property LinkToThickness As Boolean
```

SOLIDWORKS Type Library

Merge Property (ExtrudeFeatureData2)



Visual Basic for Applications (VBA)

```
Public Property Merge As Boolean
```

SOLIDWORKS Type Library

NormalCut Property (ExtrudeFeatureData2)



Visual Basic for Applications (VBA)

```
Public Property NormalCut As Boolean
```

SOLIDWORKS Type Library

OptimizeGeometry Property (ExtrudeFeatureData2)



Visual Basic for Applications (VBA)

```
Public Property OptimizeGeometry As Boolean
```

SOLIDWORKS Type Library

PropagateFeatureToParts Property (ExtrudeFeatureData2)



Visual Basic for Applications (VBA)

```
Public Property PropagateFeatureToParts As Boolean
```

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (ExtrudeFeatureData2)



Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

ReverseDirection Property (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReverseDirection As Boolean
```

SOLIDWORKS Type Library

SetAutoFillet Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetAutoFillet( _  
    ByVal AutoFillet As Boolean, _  
    ByVal Radius As Double _  
) As Boolean
```

SOLIDWORKS Type Library

SetChangeToConfigurations Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetChangeToConfigurations( _  
    ByVal Config_opt As Long, _  
    ByVal Config_names As Variant _  
) As Boolean
```

SOLIDWORKS Type Library

SetDepth Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetDepth( _  
    ByVal Forward As Boolean, _  
    ByVal Depth As Double _  
)
```

SOLIDWORKS Type Library

SetDirectionReference Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetDirectionReference( _  
    ByVal Ref1 As Object, _  
    ByVal Ref2 As Object _  
)
```

SOLIDWORKS Type Library

SetDraftAngle Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetDraftAngle( _  
    ByVal Forward As Boolean, _  
    ByVal DraftAngle As Double _  
)
```

SetDraftOutward Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetDraftOutward( _  
    ByVal Forward As Boolean, _  
    ByVal DraftOutward As Boolean _  
)
```

SetDraftWhileExtruding Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetDraftWhileExtruding( _  
    ByVal Forward As Boolean, _  
    ByVal DraftWhileExtrude As Boolean _  
)
```

SetEndCondition Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetEndCondition( _  
    ByVal Forward As Boolean, _  
    ByVal EndCondition As Integer _  
)
```

SetEndConditionReference Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetEndConditionReference( _  
    ByVal Forward As Boolean, _  
    ByVal PDisp As Object _  
)
```

SetFace Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetFace( _  
    ByVal Forward As Boolean, _  
    ByVal Face As Object _  
)
```

SetFromEntity Method (ExtrudeFeatureData2) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetFromEntity( _  
    ByVal FromEntity As Object _  
)
```

SetReverseOffset Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetReverseOffset( _  
    ByVal Fwd As Boolean, _  
    ByVal ValIn As Boolean _  
)
```

SOLIDWORKS Type Library

SetTranslateSurface Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetTranslateSurface( _  
    ByVal Fwd As Boolean, _  
    ByVal ValIn As Boolean _  
)
```

SOLIDWORKS Type Library

SetVertex Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetVertex( _  
    ByVal Forward As Boolean, _  
    ByVal Face As Object _  
)
```

SOLIDWORKS Type Library

SetWallThickness Method (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetWallThickness( _  
    ByVal Forward As Boolean, _  
    ByVal WallThickness As Double _  
)
```

SOLIDWORKS Type Library

ThinWallType Property (ExtrudeFeatureData2)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ThinWallType As Integer
```

Face (Type)

SOLIDWORKS Type Library

Face Object

Object Model

Face

EnumEdges

EnumLoops

ICreateSheetBody (Body)

ICreateSheetBodyByFaceExtension (Body)

IGetBody (Body)

IGetEdges (Edge)

IGetFeature (Feature)

IGetFirstLoop (Loop)

IGetNextFace (Face)

IGetPatternSeedFeature (Feature)

IGetSilhoutteEdges (Edge)

IGetSurface (Surface)

IRemoveInnerLoops (Face)

SOLIDWORKS Type Library

Face Object Members

Public Methods

[AddPropertyExtension](#)

[CreateSheetBody](#)

[CreateSheetBodyByFaceExtension](#)

[EnumEdges](#)

[EnumLoops](#)

[FaceInSurfaceSense](#)

[GetArea](#)

[GetBody](#)

[GetBox](#)

[GetClosestPointOn](#)

[GetEdgeCount](#)

[GetEdges](#)

[GetFaceId](#)

[GetFeature](#)

	<u>GetFeatureId</u>
	<u>GetFirstLoop</u>
	<u>GetLoopCount</u>
	<u>GetNextFace</u>
	<u>GetPatternSeedFeature</u>
	<u>GetPropertyExtension</u>
	<u>GetShellType</u>
	<u>GetSilhouetteEdges</u>
	<u>GetSilhouetteEdgesVB</u>
	<u>GetSurface</u>
	<u>GetTessNorms</u>
	<u>GetTessTriangleCount</u>
	<u>GetTessTriangles</u>
	<u>GetTessTriStripEdges</u>
	<u>GetTessTriStripNorms</u>
	<u>GetTessTriStrip</u>
	<u>GetTessTriStripSize</u>
	<u>GetTrimCurves</u>
	<u>GetTrimCurves2</u>
	<u>GetTrimCurveTopology</u>
	<u>GetTrimCurveTopologyCount</u>
	<u>GetTrimCurveTopologyTypes</u>
	<u>GetUVBounds</u>
	<u>Highlight</u>
	<u>ISheetBody</u>
	<u>ISheetBodyByFaceExtension</u>
	<u>IGetBody</u>
	<u>IGetBox</u>
	<u>IGetClosestPointOn</u>
	<u>IGetEdges</u>
	<u>IGetFacetData</u>
	<u>IGetFeature</u>
	<u>IGetFirstLoop</u>
	<u>IGetNextFace</u>
	<u>IGetPatternSeedFeature</u>
	<u>IGetSilhouetteEdgeCount</u>
	<u>IGetSilhouetteEdges</u>
	<u>IGetSurface</u>
	<u>IGetTessNorms</u>
	<u>IGetTessTriangles</u>
	<u>IGetTessTriStripEdges</u>
	<u>IGetTessTriStripEdgeSize</u>
	<u>IGetTessTriStripNorms</u>

 IGetTessTriStrips
 IGetTrimCurve
 IGetTrimCurveSize
 IGetTrimCurveSize2
 IGetTrimCurveTopology
 IGetTrimCurveTopologyTypes
 IGetUVBounds
 IHighlight
 ItsSame
 IRemoveInnerLoops
 IsSame
 RemoveFacetId
 RemoveInnerLoops
 RemoveMaterialProperty
 RemoveRedundantTopology
 ResetPropertyExtension
 SetFacetId

Public Properties

 IMaterialPropertyValues
 INormal
 MaterialIdName
 MaterialPropertyValues
 MaterialUserName
 Normal

SOLIDWORKS Type Library

AddPropertyExtension Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddPropertyExtension( _
    ByVal PropertyExtension As Variant _
) As Long
```

SOLIDWORKS Type Library

CreateSheetBody Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateSheetBody() As Object
```

SOLIDWORKS Type Library

CreateSheetBodyByFaceExtension Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateSheetBodyByFaceExtension( _  
    ByVal BoxLowIn As Variant, _  
    ByVal BoxHighIn As Variant _  
    ) As Object
```

SOLIDWORKS Type Library

EnumEdges Method (Face)



Syntax

Visual Basic for Applications (VBA)

```
Public Function EnumEdges() As EnumEdges
```

SOLIDWORKS Type Library

EnumLoops Method (Face)



Syntax

Visual Basic for Applications (VBA)

```
Public Function EnumLoops() As EnumLoops
```

SOLIDWORKS Type Library

FaceInSurfaceSense Method (Face)



Syntax

Visual Basic for Applications (VBA)

```
Public Function FaceInSurfaceSense() As Boolean
```

SOLIDWORKS Type Library

GetArea Method (Face)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArea() As Double
```

SOLIDWORKS Type Library

GetBody Method (Face)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBody() As Object
```

SOLIDWORKS Type Library

GetBox Method (Face)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBox() As Variant
```

SOLIDWORKS Type Library

GetClosestPointOn Method (Face)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetClosestPointOn( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double _  
) As Variant
```

SOLIDWORKS Type Library

GetEdgeCount Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEdgeCount() As Long
```

SOLIDWORKS Type Library

GetEdges Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEdges() As Variant
```

SOLIDWORKS Type Library

GetFaceId Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFaceId() As Integer
```

SOLIDWORKS Type Library

GetFeature Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFeature() As Object
```

SOLIDWORKS Type Library

GetFeatureId Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFeatureId() As Long
```

SOLIDWORKS Type Library

GetFirstLoop Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstLoop() As Object
```

SOLIDWORKS Type Library

GetLoopCount Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLoopCount() As Long
```

SOLIDWORKS Type Library

GetNextFace Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFace() As Object
```

SOLIDWORKS Type Library

GetPatternSeedFeature Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPatternSeedFeature() As Object
```

SOLIDWORKS Type Library

GetPropertyExtension Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPropertyExtension( _  
    ByVal ID As Long _  
) As Variant
```

SOLIDWORKS Type Library

GetShellType Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetShellType() As Integer
```

SOLIDWORKS Type Library

GetSilhoutteEdges Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSilhoutteEdges( _  
    ByRef Root As Double, _  
    ByRef Normal As Double _  
) As Variant
```

SOLIDWORKS Type Library

GetSilhoutteEdgesVB Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSilhoutteEdgesVB( _  
    ByVal Xroot As Double, _  
    ByVal Yroot As Double, _  
    ByVal Zroot As Double, _  
    ByVal Xnormal As Double, _  
    ByVal Ynormal As Double, _  
    ByVal Znormal As Double _  
) As Variant
```

SOLIDWORKS Type Library

GetSurface Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSurface() As Object
```

SOLIDWORKS Type Library

GetTessNorms Method (Face)



Visual Basic for Applications (VBA)

```
Public Function GetTessNorms() As Variant
```

SOLIDWORKS Type Library

GetTessTriangleCount Method (Face)



Visual Basic for Applications (VBA)

```
Public Function GetTessTriangleCount() As Long
```

SOLIDWORKS Type Library

GetTessTriangles Method (Face)



Visual Basic for Applications (VBA)

```
Public Function GetTessTriangles( _  
    ByVal NoConversion As Boolean _  
    ) As Variant
```

SOLIDWORKS Type Library

GetTessTriStripEdges Method (Face)



Visual Basic for Applications (VBA)

```
Public Function GetTessTriStripEdges() As Variant
```

SOLIDWORKS Type Library

GetTessTriStripNorms Method (Face)



Visual Basic for Applications (VBA)

```
Public Function GetTessTriStripNorms() As Variant
```

SOLIDWORKS Type Library

GetTessTriStrips Method (Face)



Visual Basic for Applications (VBA)

```
Public Function GetTessTriStrips( _  
    ByVal NoConversion As Boolean _  
    ) As Variant
```

SOLIDWORKS Type Library

GetTessTriStripSize Method (Face)



Visual Basic for Applications (VBA)

```
Public Function GetTessTriStripSize() As Long
```

SOLIDWORKS Type Library

GetTrimCurves Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTrimCurves( _  
    ByVal WantCubic As Boolean _  
) As Variant
```

SOLIDWORKS Type Library

GetTrimCurves2 Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTrimCurves2( _  
    ByVal WantCubic As Boolean, _  
    ByVal WantNRational As Boolean _  
) As Variant
```

SOLIDWORKS Type Library

GetTrimCurveTopology Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTrimCurveTopology() As Variant
```

SOLIDWORKS Type Library

GetTrimCurveTopologyCount Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTrimCurveTopologyCount() As Long
```

SOLIDWORKS Type Library

GetTrimCurveTopologyTypes Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTrimCurveTopologyTypes() As Variant
```

SOLIDWORKS Type Library

GetUVBounds Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetUVBounds() As Variant
```

SOLIDWORKS Type Library

Highlight Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub Highlight( _  
    ByVal State As Boolean _  
)
```

SOLIDWORKS Type Library

ICreateSheetBody Method (Face)



Visual Basic for Applications (VBA)

```
Public Function ICreateSheetBody() As Body
```

SOLIDWORKS Type Library

ICreateSheetBodyByFaceExtension Method (Face)



Visual Basic for Applications (VBA)

```
Public Function ICreateSheetBodyByFaceExtension( _  
    ByRef BoxLowIn As Double, _  
    ByRef BoxHighIn As Double _  
) As Body
```

SOLIDWORKS Type Library

IGetBody Method (Face)



Visual Basic for Applications (VBA)

```
Public Function IGetBody() As Body
```

SOLIDWORKS Type Library

IGetBox Method (Face)



Visual Basic for Applications (VBA)

```
Public Function IGetBox() As Double
```

SOLIDWORKS Type Library

IGetClosestPointOn Method (Face)



Visual Basic for Applications (VBA)

```
Public Function IGetClosestPointOn( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double _  
) As Double
```

SOLIDWORKS Type Library

IGetEdges Method (Face)



Visual Basic for Applications (VBA)

```
Public Function IGetEdges() As Edge
```

SOLIDWORKS Type Library

IGetFacetData Method (Face)



Visual Basic for Applications (VBA)

```
Public Sub IGetFacetData( _  
    ByVal FacetMesh As Integer, _  
    ByRef NFacets As Integer, _  
    ByRef NStrips As Integer, _  
    ByVal StripVertexNums As Integer, _  
    ByVal VertexCoords As Single, _  
    ByVal NormalCoords As Single _  
)
```

SOLIDWORKS Type Library

IGetFeature Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFeature() As Feature
```

SOLIDWORKS Type Library

IGetFirstLoop Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstLoop() As Loop
```

SOLIDWORKS Type Library

IGetNextFace Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNextFace() As Face
```

SOLIDWORKS Type Library

IGetPatternSeedFeature Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetPatternSeedFeature() As Feature
```

SOLIDWORKS Type Library

IGetSilhoutteEdgeCount Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSilhoutteEdgeCount( _  
    ByRef Root As Double, _  
    ByRef Normal As Double _  
) As Long
```

SOLIDWORKS Type Library

IGetSilhoutteEdges Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSilhoutteEdges( _  
    ByRef Root As Double, _  
    ByRef Normal As Double _  
) As Edge
```

SOLIDWORKS Type Library

IGetSurface Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSurface() As Surface
```

SOLIDWORKS Type Library

IGetTessNorms Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTessNorms() As Single
```

SOLIDWORKS Type Library

IGetTessTriangles Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTessTriangles( _  
    ByVal NoConversion As Boolean _  
) As Single
```

SOLIDWORKS Type Library

IGetTessTriStripEdges Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTessTriStripEdges() As Long
```

SOLIDWORKS Type Library

IGetTessTriStripEdgeSize Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTessTriStripEdgeSize() As Long
```

SOLIDWORKS Type Library

IGetTessTriStripNorms Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTessTriStripNorms() As Single
```

SOLIDWORKS Type Library

IGetTessTriStrips Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTessTriStrips( _  
    ByVal NoConversion As Boolean _  
) As Single
```

SOLIDWORKS Type Library

IGetTrimCurve Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTrimCurve() As Double
```

SOLIDWORKS Type Library

IGetTrimCurveSize Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTrimCurveSize( _  
    ByVal WantCubic As Boolean _  
) As Long
```

SOLIDWORKS Type Library

IGetTrimCurveSize2 Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTrimCurveSize2( _  
    ByVal WantCubic As Long, _  
    ByVal WantNRational As Long _  
) As Long
```

SOLIDWORKS Type Library

IGetTrimCurveTopology Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTrimCurveTopology() As Object
```

SOLIDWORKS Type Library

IGetTrimCurveTopologyTypes Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTrimCurveTopologyTypes() As Long
```

SOLIDWORKS Type Library

IGetUVBounds Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetUVBounds() As Double
```

SOLIDWORKS Type Library

IHighlight Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub IHighlight( _  
    ByVal State As Boolean _  
)
```

SOLIDWORKS Type Library

IIsSame Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IIsSame( _  
    ByVal FaceIn As Face _  
    ) As Boolean
```

SOLIDWORKS Type Library

IMaterialPropertyValues Property (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Property IMaterialPropertyValues As Double
```

SOLIDWORKS Type Library

INormal Property (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Property INormal As Double
```

SOLIDWORKS Type Library

IRemoveInnerLoops Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IRemoveInnerLoops( _  
    ByVal NumOfLoops As Long, _  
    ByVal InnerLoopsIn As Loop _  
    ) As Face
```

SOLIDWORKS Type Library

IsSame Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IsSame( _  
    ByVal FaceIn As Object _  
    ) As Boolean
```

SOLIDWORKS Type Library

MaterialIdName Property (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Property MaterialIdName As String
```

SOLIDWORKS Type Library

MaterialPropertyValues Property (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Property MaterialPropertyValues As Variant
```

SOLIDWORKS Type Library

MaterialUserName Property (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Property MaterialUserName As String
```

SOLIDWORKS Type Library

Normal Property (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Normal As Variant
```

SOLIDWORKS Type Library

RemoveFaceId Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub RemoveFaceId( _  
    ByVal IdIn As Integer _  
)
```

SOLIDWORKS Type Library

RemoveInnerLoops Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function RemoveInnerLoops( _  
    ByVal NumOfLoops As Long, _  
    ByVal InnerLoopsIn As Variant _  
) As Object
```

SOLIDWORKS Type Library

RemoveMaterialProperty Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function RemoveMaterialProperty() As Boolean
```

SOLIDWORKS Type Library

RemoveRedundantTopology Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Function RemoveRedundantTopology() As Boolean
```

SOLIDWORKS Type Library

ResetPropertyExtension Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ResetPropertyExtension()
```

SOLIDWORKS Type Library

SetFaceId Method (Face)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetFaceId( _  
    ByVal IdIn As Integer _  
)
```