


# **SOLIDWORKS API (VB6 COM) — Reference (35/102): GeneralToleranceTableAnnotation- HealEdgesFeatureData**

SOLIDWORKS API Documentation (converted from CHM)

# GeneralToleranceTableAnnotation (Type)

SOLIDWORKS Type Library  
GeneralToleranceTableAnnotation Object

 Object Model



SOLIDWORKS Type Library  
GeneralToleranceTableAnnotation Object Members



 Public Properties

 [GeneralToleranceTableFeature](#)

SOLIDWORKS Type Library  
GeneralToleranceTableFeature Property (GeneralToleranceTableAnnotation)


 Syntax

Visual Basic for Applications (VBA)

Public Property GeneralToleranceTableFeature As [GeneralToleranceTableFeature](#)

# GeneralToleranceTableFeature (Type)

SOLIDWORKS Type Library  
GeneralToleranceTableFeature Object

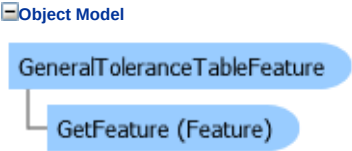

SOLIDWORKS Type Library  
GeneralToleranceTableFeature Object Members

Public Methods

- [GetFeature](#)
- [GetTableAnnotations](#)

SOLIDWORKS Type Library  
GetFeature Method (GeneralToleranceTableFeature)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFeature() As Feature
```

SOLIDWORKS Type Library  
GetTableAnnotations Method (GeneralToleranceTableFeature)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTableAnnotations() As Variant
```

# GraphicsBody (Type)

SOLIDWORKS Type Library

## GraphicsBody Object

### Object Model

GraphicsBody

SOLIDWORKS Type Library

## GraphicsBody Object Members

### Public Methods

- [GetBody](#)
- [GetFacetCount](#)
- [GetFacets](#)
- [SurfaceFromMesh](#)

SOLIDWORKS Type Library

## GetBody Method (GraphicsBody)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBody() As Object
```

SOLIDWORKS Type Library

## GetFacetCount Method (GraphicsBody)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacetCount() As Long
```

SOLIDWORKS Type Library

## GetFacets Method (GraphicsBody)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacets() As Variant
```

SOLIDWORKS Type Library

## SurfaceFromMesh Method (GraphicsBody)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function SurfaceFromMesh( _  
    ByVal SurfaceType As Long, _  
    ByVal FacetTolerance As Double, _  
    ByVal ExtendSurfaceSize As Double, _  
    ByRef ErrorCode As Long _  
) As Object
```

# GroundPlaneFeatureData (Type)

SOLIDWORKS Type Library  
GroundPlaneFeatureData Object

## Object Model

### GroundPlaneFeatureData

SOLIDWORKS Type Library  
GroundPlaneFeatureData Object Members

## Public Methods

- AccessSelections
- ReleaseSelectionAccess

## Public Properties

- PlanarEntity
- ReverseDirection

SOLIDWORKS Type Library  
AccessSelections Method (GroundPlaneFeatureData)

## Syntax

```
Visual Basic for Applications (VBA)

Public Function AccessSelections( _
    ByVal TopDoc As Object, _
    ByVal Component As Object _
) As Boolean
```

SOLIDWORKS Type Library  
PlanarEntity Property (GroundPlaneFeatureData)

## Syntax

```
Visual Basic for Applications (VBA)

Public Property PlanarEntity As Object
```

SOLIDWORKS Type Library  
ReleaseSelectionAccess Method (GroundPlaneFeatureData)

## Syntax

```
Visual Basic for Applications (VBA)

Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library  
ReverseDirection Property (GroundPlaneFeatureData)

## Syntax

```
Visual Basic for Applications (VBA)


Public Property ReverseDirection As Boolean
```

# Gtol (Type)

SOLIDWORKS Type Library

Gtol Object

Object Model

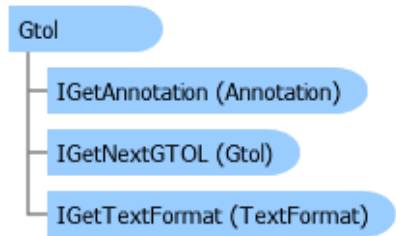

SOLIDWORKS Type Library

Gtol Object Members

Public Methods

|  |                                                      |
|--|------------------------------------------------------|
|  | <a href="#">AddFrame</a>                             |
|  | <a href="#">CanConvertFormat</a>                     |
|  | <a href="#">ConvertFormat</a>                        |
|  | <a href="#">DeleteBelowFrameTextAt</a>               |
|  | <a href="#">DeleteFrame</a>                          |
|  | <a href="#">GetAllAround</a>                         |
|  | <a href="#">GetAllAroundThisSide</a>                 |
|  | <a href="#">GetAllOver</a>                           |
|  | <a href="#">GetAllOverThisSide</a>                   |
|  | <a href="#">GetAnnotation</a>                        |
|  | <a href="#">GetArcAtIndex</a>                        |
|  | <a href="#">GetArcCount</a>                          |
|  | <a href="#">GetArrowHeadAtIndex</a>                  |
|  | <a href="#">GetArrowHeadCount</a>                    |
|  | <a href="#">GetArrowHeadInfo</a>                     |
|  | <a href="#">GetAttachPos</a>                         |
|  | <a href="#">GetBelowFrameTextAt</a>                  |
|  | <a href="#">GetBelowFrameTextLineCount</a>           |
|  | <a href="#">GetBetweenTwoPoints</a>                  |
|  | <a href="#">GetBetweenTwoPointsText</a>              |
|  | <a href="#">GetCompositeFrame</a>                    |
|  | <a href="#">GetCompositeFrame2</a>                   |
|  | <a href="#">GetDatumIdentifier</a>                   |
|  | <a href="#">GetDisplayDualDimensionInRangeValues</a> |
|  | <a href="#">GetFontInfo</a>                          |
|  | <a href="#">GetFormat</a>                            |
|  | <a href="#">GetFrame</a>                             |
|  | <a href="#">GetFrameCount</a>                        |

|                                                                                     |                                                  |
|-------------------------------------------------------------------------------------|--------------------------------------------------|
|    | <a href="#"><u>GetFrameDiameterSymbols</u></a>   |
|    | <a href="#"><u>GetFrameSymbols</u></a>           |
|    | <a href="#"><u>GetFrameSymbols2</u></a>          |
|    | <a href="#"><u>GetFrameSymbols3</u></a>          |
|    | <a href="#"><u>GetFrameValues</u></a>            |
|    | <a href="#"><u>GetFromTo</u></a>                 |
|    | <a href="#"><u>GetFromToText</u></a>             |
|    | <a href="#"><u>GetHeight</u></a>                 |
|    | <a href="#"><u>GetLeaderAtIndex</u></a>          |
|    | <a href="#"><u>GetLeaderAtIndex2</u></a>         |
|    | <a href="#"><u>GetLeaderCount</u></a>            |
|    | <a href="#"><u>GetLeaderInfo</u></a>             |
|    | <a href="#"><u>GetLeaderSide</u></a>             |
|    | <a href="#"><u>GetLineAtIndex</u></a>            |
|    | <a href="#"><u>GetLineCount</u></a>              |
|    | <a href="#"><u>GetNextGTOL</u></a>               |
|    | <a href="#"><u>GetPTZHeight</u></a>              |
|    | <a href="#"><u>GetPTZHeight2</u></a>             |
|    | <a href="#"><u>GetSymArcs</u></a>                |
|    | <a href="#"><u>GetSymCircles</u></a>             |
|    | <a href="#"><u>GetSymDesc</u></a>                |
|    | <a href="#"><u>GetSymEdgeCounts</u></a>          |
|   | <a href="#"><u>GetSymLines</u></a>               |
|  | <a href="#"><u>GetSymName</u></a>                |
|  | <a href="#"><u>GetSymText</u></a>                |
|  | <a href="#"><u>GetSymTextPoints</u></a>          |
|  | <a href="#"><u>GetText</u></a>                   |
|  | <a href="#"><u>GetTextAngleAtIndex</u></a>       |
|  | <a href="#"><u>GetTextAtIndex</u></a>            |
|  | <a href="#"><u>GetTextCount</u></a>              |
|  | <a href="#"><u>GetTextFont</u></a>               |
|  | <a href="#"><u>GetTextFormat</u></a>             |
|  | <a href="#"><u>GetTextHeightAtIndex</u></a>      |
|  | <a href="#"><u>GetTextInvertAtIndex</u></a>      |
|  | <a href="#"><u>GetTextPoint</u></a>              |
|  | <a href="#"><u>GetTextPositionAtIndex</u></a>    |
|  | <a href="#"><u>GetTextRefPositionAtIndex</u></a> |
|  | <a href="#"><u>GetTriangleAtIndex</u></a>        |
|  | <a href="#"><u>GetTriangleCount</u></a>          |
|  | <a href="#"><u>GetUseDocTextFormat</u></a>       |
|  | <a href="#"><u>GetWitnessLine</u></a>            |
|  | <a href="#"><u>HasExtraLeader</u></a>            |
|  | <a href="#"><u>IGetAnnotation</u></a>            |

|                                                                                     |                                                             |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------|
|    | <a href="#"><u>IGetArcAtIndex</u></a>                       |
|    | <a href="#"><u>IGetArrowHeadAtIndex</u></a>                 |
|    | <a href="#"><u>IGetArrowHeadInfo</u></a>                    |
|    | <a href="#"><u>IGetAttachPos</u></a>                        |
|    | <a href="#"><u>IGetFontInfo</u></a>                         |
|    | <a href="#"><u>IGetFrameDiameterSymbols</u></a>             |
|    | <a href="#"><u>IGetFrameSymbols</u></a>                     |
|    | <a href="#"><u>IGetFrameSymbols2</u></a>                    |
|    | <a href="#"><u>IGetFrameValues</u></a>                      |
|    | <a href="#"><u>IGetLeaderAtIndex</u></a>                    |
|    | <a href="#"><u>IGetLeaderAtIndex2</u></a>                   |
|    | <a href="#"><u>IGetLeaderInfo</u></a>                       |
|    | <a href="#"><u>IGetLineAtIndex</u></a>                      |
|    | <a href="#"><u>IGetNextGTOL</u></a>                         |
|    | <a href="#"><u>IGetSymArcs</u></a>                          |
|    | <a href="#"><u>IGetSymCircles</u></a>                       |
|    | <a href="#"><u>IGetSymEdgeCounts</u></a>                    |
|    | <a href="#"><u>IGetSymLines</u></a>                         |
|    | <a href="#"><u>IGetSymText</u></a>                          |
|    | <a href="#"><u>IGetSymTextPoints</u></a>                    |
|    | <a href="#"><u>IGetTextFormat</u></a>                       |
|   | <a href="#"><u>IGetTextPoint</u></a>                        |
|  | <a href="#"><u>IGetTextPositionAtIndex</u></a>              |
|  | <a href="#"><u>IGetTriangleAtIndex</u></a>                  |
|  | <a href="#"><u>IGetWitnessLine</u></a>                      |
|  | <a href="#"><u>InsertBelowFrameTextAt</u></a>               |
|  | <a href="#"><u>IsAttached</u></a>                           |
|  | <a href="#"><u>ISetTextFormat</u></a>                       |
|  | <a href="#"><u>SetAllAroundThisSide</u></a>                 |
|  | <a href="#"><u>SetAllOver</u></a>                           |
|  | <a href="#"><u>SetAllOverThisSide</u></a>                   |
|  | <a href="#"><u>SetBelowFrameTextAt</u></a>                  |
|  | <a href="#"><u>SetBetweenTwoPoints</u></a>                  |
|  | <a href="#"><u>SetCompositeFrame</u></a>                    |
|  | <a href="#"><u>SetCompositeFrame2</u></a>                   |
|  | <a href="#"><u>SetDatumIdentifier</u></a>                   |
|  | <a href="#"><u>setDisplayDualDimensionInRangeValues</u></a> |
|  | <a href="#"><u>SetFrameSymbols</u></a>                      |
|  | <a href="#"><u>SetFrameSymbols2</u></a>                     |
|  | <a href="#"><u>SetFrameValues</u></a>                       |
|  | <a href="#"><u>SetFrameValues2</u></a>                      |
|  | <a href="#"><u>SetFromToText</u></a>                        |
|  | <a href="#"><u>SetLeader</u></a>                            |

|                                                                                   |                               |
|-----------------------------------------------------------------------------------|-------------------------------|
|  | <a href="#">SetPosition</a>   |
|  | <a href="#">SetPTZHeight</a>  |
|  | <a href="#">SetPTZHeight2</a> |
|  | <a href="#">SetText</a>       |
|  | <a href="#">SetTextFormat</a> |

## Public Properties

|                                                                                   |                                     |
|-----------------------------------------------------------------------------------|-------------------------------------|
|  | <a href="#">Angle</a>               |
|  | <a href="#">SeparateRequirement</a> |

SOLIDWORKS Type Library

## AddFrame Method (Gtol)

### Syntax

|                                       |
|---------------------------------------|
| Visual Basic for Applications (VBA)   |
| Public Function AddFrame() As Boolean |

SOLIDWORKS Type Library

## Angle Property (Gtol)

### Syntax

|                                     |
|-------------------------------------|
| Visual Basic for Applications (VBA) |
| Public Property Angle As Double     |

SOLIDWORKS Type Library

## CanConvertFormat Method (Gtol)

### Syntax

|                                               |
|-----------------------------------------------|
| Visual Basic for Applications (VBA)           |
| Public Function CanConvertFormat() As Boolean |

SOLIDWORKS Type Library

## ConvertFormat Method (Gtol)

### Syntax

|                                         |
|-----------------------------------------|
| Visual Basic for Applications (VBA)     |
| Public Function ConvertFormat() As Long |

SOLIDWORKS Type Library

## DeleteBelowFrameTextAt Method (Gtol)

### Syntax

|                                                                                           |
|-------------------------------------------------------------------------------------------|
| Visual Basic for Applications (VBA)                                                       |
| Public Function DeleteBelowFrameTextAt( _<br>ByVal <i>Index</i> As Long _<br>) As Boolean |

SOLIDWORKS Type Library

## DeleteFrame Method (Gtol)

### Syntax

|                                                                                   |
|-----------------------------------------------------------------------------------|
| Visual Basic for Applications (VBA)                                               |
| Public Function DeleteFrame( _<br>ByVal <i>FrameNum</i> As Long _<br>) As Boolean |

SOLIDWORKS Type Library

### GetAllAround Method (Gtol)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAllAround() As Boolean
```

SOLIDWORKS Type Library

### GetAllAroundThisSide Method (Gtol)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAllAroundThisSide() As Boolean
```

SOLIDWORKS Type Library

### GetAllOver Method (Gtol)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAllOver() As Boolean
```

SOLIDWORKS Type Library

### GetAllOverThisSide Method (Gtol)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAllOverThisSide() As Boolean
```

SOLIDWORKS Type Library

### GetAnnotation Method (Gtol)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAnnotation() As Object
```

SOLIDWORKS Type Library

### GetArcAtIndex Method (Gtol)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArcAtIndex( _  
    ByVal Index As Long _  
) As Variant
```

SOLIDWORKS Type Library

### GetArcCount Method (Gtol)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArcCount() As Long
```

SOLIDWORKS Type Library

### GetArrowHeadAtIndex Method (Gtol)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArrowHeadAtIndex( _  
    ByVal Index As Long _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetArrowHeadCount Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArrowHeadCount() As Long
```

SOLIDWORKS Type Library

**GetArrowHeadInfo Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArrowHeadInfo() As Variant
```

SOLIDWORKS Type Library

**GetAttachPos Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAttachPos() As Variant
```

SOLIDWORKS Type Library

**GetBelowFrameTextAt Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBelowFrameTextAt( _  
    ByVal Index As Long _  
    ) As String
```

SOLIDWORKS Type Library

**GetBelowFrameTextLineCount Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBelowFrameTextLineCount() As Long
```

SOLIDWORKS Type Library

**GetBetweenTwoPoints Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBetweenTwoPoints() As Boolean
```

SOLIDWORKS Type Library

**GetBetweenTwoPointsText Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBetweenTwoPointsText( _  
    ByVal Index As Long _  
    ) As String
```

SOLIDWORKS Type Library

### GetCompositeFrame Method (Gtol)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCompositeFrame() As Boolean
```

SOLIDWORKS Type Library

### GetCompositeFrame2 Method (Gtol)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCompositeFrame2( _  
    ByVal FrameNum As Integer _  
) As Boolean
```

SOLIDWORKS Type Library

### GetDatumIdentifier Method (Gtol)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDatumIdentifier() As String
```

SOLIDWORKS Type Library

### GetDisplayDualDimensionInRangeValues Method (Gtol)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayDualDimensionInRangeValues() As Boolean
```

SOLIDWORKS Type Library

### GetFontInfo Method (Gtol)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFontInfo() As Variant
```

SOLIDWORKS Type Library

### GetFormat Method (Gtol)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFormat() As Long
```

SOLIDWORKS Type Library

### GetFrame Method (Gtol)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFrame( _  
    ByVal FrameIndex As Long _  
) As Object
```

SOLIDWORKS Type Library

### GetFrameCount Method (Gtol)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFrameCount() As Integer
```

SOLIDWORKS Type Library

**GetFrameDiameterSymbols Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFrameDiameterSymbols( _  
    ByVal FrameNumber As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetFrameSymbols Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFrameSymbols( _  
    ByVal FrameNumber As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetFrameSymbols2 Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFrameSymbols2( _  
    ByVal FrameNumber As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetFrameSymbols3 Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFrameSymbols3( _  
    ByVal FrameNumber As Long _  
) As Variant
```

SOLIDWORKS Type Library

**GetFrameValues Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFrameValues( _  
    ByVal FrameNumber As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetFromTo Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFromTo() As Boolean
```

SOLIDWORKS Type Library

**GetFromToText Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFromToText( _  
    ByRef FromText As String, _  
    ByRef ToText As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

**GetHeight Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function GetHeight() As Double
```

SOLIDWORKS Type Library

**GetLeaderAtIndex Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function GetLeaderAtIndex( _  
    ByVal Index As Long _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetLeaderAtIndex2 Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function GetLeaderAtIndex2( _  
    ByVal Index As Long _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetLeaderCount Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function GetLeaderCount() As Long
```

SOLIDWORKS Type Library

**GetLeaderInfo Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function GetLeaderInfo() As Variant
```

SOLIDWORKS Type Library

**GetLeaderSide Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function GetLeaderSide() As Long
```

SOLIDWORKS Type Library

**GetLineAtIndex Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function GetLineAtIndex( _  
    ByVal Index As Long _  
) As Variant
```

SOLIDWORKS Type Library

**GetLineCount Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLineCount() As Long
```

SOLIDWORKS Type Library

**GetNextGTOL Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextGTOL() As Object
```

SOLIDWORKS Type Library

**GetPTZHeight Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPTZHeight() As String
```

SOLIDWORKS Type Library

**GetPTZHeight2 Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPTZHeight2( _  
    ByVal FrameNumber As Long, _  
    ByVal TolNumber As Long, _  
    ByRef PtzDisplay As Boolean, _  
    ByRef PtzHt As String _  
) As Boolean
```

SOLIDWORKS Type Library

**GetSymArcs Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymArcs( _  
    ByVal SymIdx As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetSymCircles Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymCircles( _  
    ByVal SymIdx As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetSymDesc Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymDesc( _  
    ByVal SymIdx As Integer _  
) As String
```

SOLIDWORKS Type Library

**GetSymEdgeCounts Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymEdgeCounts( _  
    ByVal SymIdx As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetSymLines Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymLines( _  
    ByVal SymIdx As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetSymName Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymName( _  
    ByVal SymIdx As Integer _  
) As String
```

SOLIDWORKS Type Library

**GetSymText Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymText( _  
    ByVal SymIdx As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetSymTextPoints Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymTextPoints( _  
    ByVal SymIdx As Integer _  
) As Variant
```

SOLIDWORKS Type Library

**GetText Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetText( _  
    ByVal WhichText As Long _  
) As String
```

SOLIDWORKS Type Library

**GetTextAngleAtIndex Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextAngleAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

**GetTextAtIndex Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextAtIndex( _  
    ByVal Index As Long _  
) As String
```

SOLIDWORKS Type Library

**GetTextCount Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextCount() As Long
```

SOLIDWORKS Type Library

**GetTextFont Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextFont() As String
```

SOLIDWORKS Type Library

**GetTextFormat Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextFormat() As Object
```

SOLIDWORKS Type Library

**GetTextHeightAtIndex Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextHeightAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

**GetTextInvertAtIndex Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextInvertAtIndex( _  
    ByVal Index As Long _  
    ) As Long
```

SOLIDWORKS Type Library

**GetTextPoint Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextPoint() As Variant
```

SOLIDWORKS Type Library

**GetTextPositionAtIndex Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextPositionAtIndex( _  
    ByVal Index As Long _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetTextRefPositionAtIndex Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextRefPositionAtIndex( _  
    ByVal Index As Long _  
    ) As Long
```

SOLIDWORKS Type Library

**GetTriangleAtIndex Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTriangleAtIndex( _  
    ByVal Index As Long _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetTriangleCount Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTriangleCount() As Long
```

SOLIDWORKS Type Library

**GetUseDocTextFormat Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetUseDocTextFormat() As Boolean
```

SOLIDWORKS Type Library

**GetWitnessLine Method (Gtol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetWitnessLine() As Variant
```

SOLIDWORKS Type Library

**HasExtraLeader Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function HasExtraLeader() As Boolean
```

SOLIDWORKS Type Library

**IGetAnnotation Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function IGetAnnotation() As Annotation
```

SOLIDWORKS Type Library

**IGetArcAtIndex Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function IGetArcAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

**IGetArrowHeadAtIndex Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function IGetArrowHeadAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

**IGetArrowHeadInfo Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function IGetArrowHeadInfo() As Double
```

SOLIDWORKS Type Library

**IGetAttachPos Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function IGetAttachPos() As Double
```

SOLIDWORKS Type Library

**IGetFontInfo Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function IGetFontInfo() As Double
```

SOLIDWORKS Type Library

## IGetFrameDiameterSymbols Method (Gtol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFrameDiameterSymbols( _  
    ByVal FrameNumber As Integer _  
) As Boolean
```

SOLIDWORKS Type Library

## IGetFrameSymbols Method (Gtol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFrameSymbols( _  
    ByVal FrameNumber As Integer _  
) As Integer
```

SOLIDWORKS Type Library

## IGetFrameSymbols2 Method (Gtol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFrameSymbols2( _  
    ByVal FrameNumber As Integer _  
) As String
```

SOLIDWORKS Type Library

## IGetFrameValues Method (Gtol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFrameValues( _  
    ByVal FrameNumber As Integer _  
) As String
```

SOLIDWORKS Type Library

## IGetLeaderAtIndex Method (Gtol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetLeaderAtIndex( _  
    ByVal Index As Long, _  
    ByRef PointCount As Long _  
) As Double
```

SOLIDWORKS Type Library

## IGetLeaderAtIndex2 Method (Gtol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetLeaderAtIndex2( _  
    ByVal Index As Long, _  
    ByRef PointCount As Long _  
) As Double
```

SOLIDWORKS Type Library

## IGetLeaderInfo Method (Gtol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetLeaderInfo( _  
    ByRef PointCount As Long _  
    ) As Double
```

SOLIDWORKS Type Library

#### IGetLineAtIndex Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetLineAtIndex( _  
    ByVal Index As Long _  
    ) As Double
```

SOLIDWORKS Type Library

#### IGetNextGTOL Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNextGTOL() As Gtol
```

SOLIDWORKS Type Library

#### IGetSymArcs Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSymArcs( _  
    ByVal SymIdx As Integer _  
    ) As Double
```

SOLIDWORKS Type Library

#### IGetSymCircles Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSymCircles( _  
    ByVal SymIdx As Integer _  
    ) As Double
```

SOLIDWORKS Type Library

#### IGetSymEdgeCounts Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSymEdgeCounts( _  
    ByVal SymIdx As Integer _  
    ) As Integer
```

SOLIDWORKS Type Library

#### IGetSymLines Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSymLines( _  
    ByVal SymIdx As Integer _  
    ) As Double
```

SOLIDWORKS Type Library

#### IGetSymText Method (Gtol)

## Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSymText( _  
    ByVal SymIdx As Integer _  
) As String
```

SOLIDWORKS Type Library

**IGetSymTextPoints Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSymTextPoints( _  
    ByVal SymIdx As Integer _  
) As Double
```

SOLIDWORKS Type Library

**IGetTextFormat Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTextFormat() As TextFormat
```

SOLIDWORKS Type Library

**IGetTextPoint Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTextPoint() As Double
```

SOLIDWORKS Type Library

**IGetTextPositionAtIndex Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTextPositionAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

**IGetTriangleAtIndex Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTriangleAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

**IGetWitnessLine Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetWitnessLine() As Double
```

SOLIDWORKS Type Library

**InsertBelowFrameTextAt Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertBelowFrameTextAt( _  
    ByVal Index As Long, _  
    ByVal Text As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

**IsAttached Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function IsAttached() As Boolean
```

SOLIDWORKS Type Library

**ISetTextFormat Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Function ISetTextFormat( _  
    ByVal TextFormatType As Long, _  
    ByVal TextFormat As TextFormat _  
    ) As Boolean
```

SOLIDWORKS Type Library

**SeparateRequirement Property (Gtol)**



Visual Basic for Applications (VBA)

```
Public Property SeparateRequirement As Boolean
```

SOLIDWORKS Type Library

**SetAllAroundThisSide Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Sub SetAllAroundThisSide( _  
    ByVal AllAroundTS As Boolean _  
    )
```

SOLIDWORKS Type Library

**SetAllOver Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Sub SetAllOver( _  
    ByVal AllOver As Boolean _  
    )
```

SOLIDWORKS Type Library

**SetAllOverThisSide Method (Gtol)**



Visual Basic for Applications (VBA)

```
Public Sub SetAllOverThisSide( _  
    ByVal AllOverTS As Boolean _  
    )
```

SOLIDWORKS Type Library

**SetBelowFrameTextAt Method (Gtol)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetBelowFrameTextAt( _  
    ByVal Index As Long, _  
    ByVal Text As String, _  
    ByVal Overwrite As Boolean _  
    ) As Boolean
```

SOLIDWORKS Type Library

### SetBetweenTwoPoints Method (Gtol)

## Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetBetweenTwoPoints( _  
    ByVal Between As Boolean, _  
    ByVal TextFrom As String, _  
    ByVal TextTo As String _  
    )
```

SOLIDWORKS Type Library

### SetCompositeFrame Method (Gtol)

## Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetCompositeFrame( _  
    ByVal Composite As Boolean _  
    )
```

SOLIDWORKS Type Library

### SetCompositeFrame2 Method (Gtol)

## Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetCompositeFrame2( _  
    ByVal Composite As Boolean, _  
    ByVal FrameNum As Integer _  
    )
```

SOLIDWORKS Type Library

### SetDatumIdentifier Method (Gtol)

## Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetDatumIdentifier( _  
    ByVal DatumIdentifier As String _  
    )
```

SOLIDWORKS Type Library

### SetDisplayDualDimensionInRangeValues Method (Gtol)

## Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetDisplayDualDimensionInRangeValues( _  
    ByVal InValue As Boolean _  
    )
```

SOLIDWORKS Type Library

### SetFrameSymbols Method (Gtol)

## Syntax

```
Public Sub SetFrameSymbols( _
    ByVal FrameNumber As Integer, _
    ByVal GCS As Integer, _
    ByVal TolDia1 As Boolean, _
    ByVal TolMC1 As Integer, _
    ByVal TolDia2 As Boolean, _
    ByVal TolMC2 As Integer, _
    ByVal DatumMC1 As Integer, _
    ByVal DatumMC2 As Integer, _
    ByVal DatumMC3 As Integer _
)
```

**SetFrameSymbols2 Method (Gtol)**

```
Public Sub SetFrameSymbols2( _
    ByVal FrameNumber As Integer, _
    ByVal GCS As String, _
    ByVal TolDia1 As Boolean, _
    ByVal TolMC1 As String, _
    ByVal TolDia2 As Boolean, _
    ByVal TolMC2 As String, _
    ByVal DatumMC1 As String, _
    ByVal DatumMC2 As String, _
    ByVal DatumMC3 As String _
)
```

**SetFrameValues Method (Gtol)**

```
Public Sub SetFrameValues( _
    ByVal FrameNumber As Integer, _
    ByVal Tol1 As String, _
    ByVal Tol2 As String, _
    ByVal Datum1 As String, _
    ByVal Datum2 As String, _
    ByVal Datum3 As String _
)
```

**SetFrameValues2 Method (Gtol)**

```
Public Function SetFrameValues2( _
    ByVal FrameNumber As Integer, _
    ByVal Tol1 As String, _
    ByVal Tol2 As String, _
    ByVal Datum1 As String, _
    ByVal Datum2 As String, _
    ByVal Datum3 As String _
) As Boolean
```

**SetFromToText Method (Gtol)**

```
Public Function SetFromToText( _  
    ByVal EnableFromTo As Boolean, _  
    ByVal FromText As String, _  
    ByVal ToText As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

#### SetLeader Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetLeader( _  
    ByVal Leader As Boolean, _  
    ByVal LeaderSide As Long, _  
    ByVal BentLeader As Boolean, _  
    ByVal AllAround As Boolean _  
    )
```

SOLIDWORKS Type Library

#### SetPosition Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetPosition( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double _  
    )
```

SOLIDWORKS Type Library

#### SetPTZHeight Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetPTZHeight( _  
    ByVal PtzHt As String, _  
    ByVal DisplayIn As Boolean _  
    )
```

SOLIDWORKS Type Library

#### SetPTZHeight2 Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetPTZHeight2( _  
    ByVal FrameNumber As Long, _  
    ByVal TolNumber As Long, _  
    ByVal PtzDisplay As Boolean, _  
    ByVal PtzHt As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

#### SetText Method (Gtol)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetText( _  
    ByVal WhichText As Long, _  
    ByVal Text As String _  
    ) As Boolean
```



## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetTextFormat( _  
    ByVal TextFormatType As Long, _  
    ByVal TextFormat As Object _  
    ) As Boolean
```

# GtolFrame (Type)

SOLIDWORKS Type Library

GtolFrame Object

Object Model

GtolFrame

SOLIDWORKS Type Library

GtolFrame Object Members

Public Methods

|                                                                                   |                                       |
|-----------------------------------------------------------------------------------|---------------------------------------|
|  | <a href="#">AddIndicator</a>          |
|  | <a href="#">DeleteIndicator</a>       |
|  | <a href="#">GetFrameToleranceType</a> |
|  | <a href="#">GetIndicator</a>          |
|  | <a href="#">GetIndicatorCount</a>     |
|  | <a href="#">GetSymbolXml</a>          |
|  | <a href="#">SetFrameToleranceType</a> |
|  | <a href="#">SetIndicator</a>          |
|  | <a href="#">SetSymbolXml</a>          |

SOLIDWORKS Type Library

AddIndicator Method (GtolFrame)

Syntax

```
Visual Basic for Applications (VBA)

Public Function AddIndicator( _
    ByVal BorderType As Long, _
    ByVal TolType As Long, _
    ByVal Datum As String _
) As Boolean
```

SOLIDWORKS Type Library

DeleteIndicator Method (GtolFrame)

Syntax

```
Visual Basic for Applications (VBA)

Public Function DeleteIndicator( _
    ByVal IndicatorIndex As Long _
) As Boolean
```

SOLIDWORKS Type Library

GetFrameToleranceType Method (GtolFrame)

Syntax

```
Visual Basic for Applications (VBA)

Public Function GetFrameToleranceType( _
    ByRef TolType As Long _
) As Boolean
```

SOLIDWORKS Type Library

GetIndicator Method (GtolFrame)

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetIndicator( _  
    ByVal IndicatorIndex As Long, _  
    ByRef BorderType As Long, _  
    ByRef TolType As Long, _  
    ByRef Datum As String _  
) As Boolean
```

SOLIDWORKS Type Library

**GetIndicatorCount Method (GtolFrame)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetIndicatorCount() As Long
```

SOLIDWORKS Type Library

**GetSymbolXml Method (GtolFrame)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSymbolXml() As String
```

SOLIDWORKS Type Library

**SetFrameToleranceType Method (GtolFrame)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetFrameToleranceType( _  
    ByVal TolType As Long _  
) As Boolean
```

SOLIDWORKS Type Library

**SetIndicator Method (GtolFrame)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetIndicator( _  
    ByVal IndicatorIndex As Long, _  
    ByVal BorderType As Long, _  
    ByVal TolType As Long, _  
    ByVal Datum As String _  
) As Boolean
```

SOLIDWORKS Type Library

**SetSymbolXml Method (GtolFrame)**

## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetSymbolXml( _  
    ByVal Xmlstring As String _  
) As Boolean
```

# GussetFeatureData (Type)

SOLIDWORKS Type Library  
GussetFeatureData Object

Object Model

GussetFeatureData

SOLIDWORKS Type Library  
GussetFeatureData Object Members

Public Methods

|                                                                                   |                                        |
|-----------------------------------------------------------------------------------|----------------------------------------|
|  | <a href="#">AccessSelections</a>       |
|  | <a href="#">GetSupportingFaces</a>     |
|  | <a href="#">ReleaseSelectionAccess</a> |
|  | <a href="#">SetSupportingFaces</a>     |

Public Properties

|                                                                                     |                                               |
|-------------------------------------------------------------------------------------|-----------------------------------------------|
|    | <a href="#">FlipOffsetDirection</a>           |
|    | <a href="#">FlipProfileDistanceParameters</a> |
|    | <a href="#">OffsetUsed</a>                    |
|    | <a href="#">ProfileAngle</a>                  |
|   | <a href="#">ProfileDistance1</a>              |
|  | <a href="#">ProfileDistance2</a>              |
|  | <a href="#">ProfileDistance3</a>              |
|  | <a href="#">ProfileDistance4</a>              |
|  | <a href="#">ProfileLocation</a>               |
|  | <a href="#">ProfileOffsetDistance</a>         |
|  | <a href="#">ProfileType</a>                   |
|  | <a href="#">Thickness</a>                     |
|  | <a href="#">ThicknessType</a>                 |
|  | <a href="#">UseAngle</a>                      |

SOLIDWORKS Type Library  
AccessSelections Method (GussetFeatureData)

Syntax

|                                                                                                                                                                              |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Visual Basic for Applications (VBA)                                                                                                                                          |
| <pre>Public Function AccessSelections( _<br/>    ByVal TopDoc As <a href="#">ModelDoc2</a>, _<br/>    ByVal Component As <a href="#">Component2</a> _<br/>) As Boolean</pre> |

SOLIDWORKS Type Library  
FlipOffsetDirection Property (GussetFeatureData)

Syntax

|                                                           |
|-----------------------------------------------------------|
| Visual Basic for Applications (VBA)                       |
| <pre>Public Property FlipOffsetDirection As Boolean</pre> |

SOLIDWORKS Type Library

## FlipProfileDistanceParameters Property (GussetFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Property FlipProfileDistanceParameters As Boolean
```

SOLIDWORKS Type Library

## GetSupportingFaces Method (GussetFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSupportingFaces( _  
    ByRef PFace1 As Face2, _  
    ByRef PFace2 As Face2 _  
) As Boolean
```

SOLIDWORKS Type Library

## OffsetUsed Property (GussetFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Property OffsetUsed As Boolean
```

SOLIDWORKS Type Library

## ProfileAngle Property (GussetFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Property ProfileAngle As Double
```

SOLIDWORKS Type Library

## ProfileDistance1 Property (GussetFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Property ProfileDistance1 As Double
```

SOLIDWORKS Type Library

## ProfileDistance2 Property (GussetFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Property ProfileDistance2 As Double
```

SOLIDWORKS Type Library

## ProfileDistance3 Property (GussetFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Property ProfileDistance3 As Double
```

SOLIDWORKS Type Library

## ProfileDistance4 Property (GussetFeatureData)

### Syntax

Visual Basic for Applications (VBA)

Public Property ProfileDistance4 As Double

SOLIDWORKS Type Library

**ProfileLocation Property (GussetFeatureData)**



Visual Basic for Applications (VBA)

Public Property ProfileLocation As Long

SOLIDWORKS Type Library

**ProfileOffsetDistance Property (GussetFeatureData)**



Visual Basic for Applications (VBA)

Public Property ProfileOffsetDistance As Double

SOLIDWORKS Type Library

**ProfileType Property (GussetFeatureData)**



Visual Basic for Applications (VBA)

Public Property ProfileType As Long

SOLIDWORKS Type Library

**ReleaseSelectionAccess Method (GussetFeatureData)**



Visual Basic for Applications (VBA)

Public Sub ReleaseSelectionAccess()

SOLIDWORKS Type Library

**SetSupportingFaces Method (GussetFeatureData)**



Visual Basic for Applications (VBA)

```
Public Function SetSupportingFaces( _  
    ByVal PFace1 As Face2, _  
    ByVal PFace2 As Face2 _  
    ) As Boolean
```

SOLIDWORKS Type Library

**Thickness Property (GussetFeatureData)**



Visual Basic for Applications (VBA)

Public Property Thickness As Double

SOLIDWORKS Type Library

**ThicknessType Property (GussetFeatureData)**



Visual Basic for Applications (VBA)

Public Property ThicknessType As Long

SOLIDWORKS Type Library

**UseAngle Property (GussetFeatureData)**

Public Property UseAngle As Boolean

# HealEdgesFeatureData (Type)

SOLIDWORKS Type Library

HealEdgesFeatureData Object

Object Model

HealEdgesFeatureData

IGetFaces (Face2)

SOLIDWORKS Type Library

HealEdgesFeatureData Object Members

Public Methods

- AccessSelections
- GetEdgeInformation
- GetFacesCount
- HealEdges
- IGetFaces
- ISetFaces
- ReleaseSelectionAccess

Public Properties

- AngularTolerance
- EdgeLengthTolerance
- Faces

SOLIDWORKS Type Library

AccessSelections Method (HealEdgesFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
    ) As Boolean
```

SOLIDWORKS Type Library

AngularTolerance Property (HealEdgesFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property AngularTolerance As Double
```

SOLIDWORKS Type Library

EdgeLengthTolerance Property (HealEdgesFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property EdgeLengthTolerance As Double
```

SOLIDWORKS Type Library

## Faces Property (HealEdgesFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Property Faces As Variant
```

## SOLIDWORKS Type Library

### GetEdgeInformation Method (HealEdgesFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetEdgeInformation( _  
    ByRef EdgeCountBefore As Long, _  
    ByRef EdgeCountAfter As Long _  
)
```

## SOLIDWORKS Type Library

### GetFacesCount Method (HealEdgesFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacesCount() As Long
```

## SOLIDWORKS Type Library

### HealEdges Method (HealEdgesFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Sub HealEdges()
```

## SOLIDWORKS Type Library

### IGetFaces Method (HealEdgesFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFaces( _  
    ByVal Count As Long _  
) As Face2
```

## SOLIDWORKS Type Library

### ISetFaces Method (HealEdgesFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetFaces( _  
    ByVal Count As Long, _  
    ByVal EntIn As Face2 _  
)
```

## SOLIDWORKS Type Library

### ReleaseSelectionAccess Method (HealEdgesFeatureData)

### Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```