

SOLIDWORKS API (VB6 COM) — Reference (52/102): MassProperty2-MathTransform

SOLIDWORKS API Documentation (converted from CHM)

MassProperty2 (Type)

SOLIDWORKS Type Library
MassProperty2 Object

Object Model

MassProperty2

SOLIDWORKS Type Library
MassProperty2 Object Members

Public Methods

-  [GetMomentOfInertia](#)
-  [GetOverrideOptions](#)
-  [Recalculate](#)
-  [SetCoordinateSystem](#)
-  [SetOverrideOptions](#)

Public Properties

-  [AccuracyLevel](#)
-  [CenterOfMass](#)
-  [Density](#)
-  [IncludeHiddenBodiesOrComponents](#)
-  [Mass](#)
-  [PrincipalAxesOfInertia](#)
-  [PrincipalMomentsOfInertia](#)
-  [SelectedItems](#)
-  [ShowWeldBeadMass](#)
-  [SurfaceArea](#)
-  [UseSystemUnits](#)
-  [Volume](#)
-  [WeldBeadMass](#)

SOLIDWORKS Type Library
AccuracyLevel Property (MassProperty2)

Syntax

Visual Basic for Applications (VBA)

Public Property AccuracyLevel As Long

SOLIDWORKS Type Library
CenterOfMass Property (MassProperty2)

Syntax

Visual Basic for Applications (VBA)

Public Property CenterOfMass As Variant

SOLIDWORKS Type Library
Density Property (MassProperty2)



Visual Basic for Applications (VBA)

Public Property Density As Double

SOLIDWORKS Type Library

GetMomentOfInertia Method (MassProperty2)



Visual Basic for Applications (VBA)

```
Public Function GetMomentOfInertia( _  
    ByVal WhereTaken As Long _  
) As Variant
```

SOLIDWORKS Type Library

GetOverrideOptions Method (MassProperty2)



Visual Basic for Applications (VBA)

```
Public Function GetOverrideOptions() As Object
```

SOLIDWORKS Type Library

IncludeHiddenBodiesOrComponents Property (MassProperty2)



Visual Basic for Applications (VBA)

```
Public Property IncludeHiddenBodiesOrComponents As Boolean
```

SOLIDWORKS Type Library

Mass Property (MassProperty2)



Visual Basic for Applications (VBA)

```
Public Property Mass As Double
```

SOLIDWORKS Type Library

PrincipalAxesOfInertia Property (MassProperty2)



Visual Basic for Applications (VBA)

```
Public Property PrincipalAxesOfInertia( _  
    ByVal Axis As Long _  
) As Variant
```

SOLIDWORKS Type Library

PrincipalMomentsOfInertia Property (MassProperty2)



Visual Basic for Applications (VBA)

```
Public Property PrincipalMomentsOfInertia As Variant
```

SOLIDWORKS Type Library

Recalculate Method (MassProperty2)



Visual Basic for Applications (VBA)

```
Public Function Recalculate() As Boolean
```

SOLIDWORKS Type Library

SelectedItems Property (MassProperty2)

Syntax

Visual Basic for Applications (VBA)

```
Public Property SelectedItems As Variant
```

SOLIDWORKS Type Library

SetCoordinateSystem Method (MassProperty2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetCoordinateSystem( _  
    ByVal Coords As Object _  
) As Boolean
```

SOLIDWORKS Type Library

SetOverrideOptions Method (MassProperty2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetOverrideOptions( _  
    ByVal Options As Object, _  
    ByVal Config_option As Long, _  
    ByVal Config_names As Variant _  
) As Boolean
```

SOLIDWORKS Type Library

ShowWeldBeadMass Property (MassProperty2)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ShowWeldBeadMass As Boolean
```

SOLIDWORKS Type Library

SurfaceArea Property (MassProperty2)

Syntax

Visual Basic for Applications (VBA)

```
Public Property SurfaceArea As Double
```

SOLIDWORKS Type Library

UseSystemUnits Property (MassProperty2)

Syntax

Visual Basic for Applications (VBA)

```
Public Property UseSystemUnits As Boolean
```

SOLIDWORKS Type Library

Volume Property (MassProperty2)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Volume As Double
```

SOLIDWORKS Type Library

WeldBeadMass Property (MassProperty2)

Public Property WeldBeadMass As Double

MassPropertyOverrideOptions (Type)

SOLIDWORKS Type Library
MassPropertyOverrideOptions Object

Object Model

MassPropertyOverrideOptions

SOLIDWORKS Type Library
MassPropertyOverrideOptions Object Members

Public Methods

 GetOverrideCenterOfMassValue
 GetOverrideMassValue
 GetOverrideMomentsOfInertiaValue
 GetOverridePrincipalAxesOrientation
 GetOverridePrincipalMomentsOfInertia
 SetOverrideCenterOfMassValue
 SetOverrideMassValue
 SetOverrideMomentsOfInertiaValue
 SetOverridePrincipalAxesOrientation
 SetOverridePrincipalMomentsOfInertia

Public Properties

 OverrideCenterOfMass
 OverrideMass
 OverrideMomentsOfInertia

SOLIDWORKS Type Library
GetOverrideCenterOfMassValue Method (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Function GetOverrideCenterOfMassValue(_ ByRef <i>CoordinateSystemName</i> As String _) As Variant</pre>

SOLIDWORKS Type Library
GetOverrideMassValue Method (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Function GetOverrideMassValue() As Double</pre>

SOLIDWORKS Type Library
GetOverrideMomentsOfInertiaValue Method (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Function GetOverrideMomentsOfInertiaValue(_ ByRef <i>IsReferenceFrameSet</i> As Boolean, _</pre>

```
ByRef CoordinateSystemName As String _  
) As Variant
```

SOLIDWORKS Type Library

GetOverridePrincipalAxesOrientation Method (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetOverridePrincipalAxesOrientation( _  
    ByVal Axis As Long _  
) As Variant
```

SOLIDWORKS Type Library

GetOverridePrincipalMomentsOfInertia Method (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetOverridePrincipalMomentsOfInertia() As Variant
```

SOLIDWORKS Type Library

OverrideCenterOfMass Property (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)

```
Public Property OverrideCenterOfMass As Boolean
```

SOLIDWORKS Type Library

OverrideMass Property (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)

```
Public Property OverrideMass As Boolean
```

SOLIDWORKS Type Library

OverrideMomentsOfInertia Property (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)

```
Public Property OverrideMomentsOfInertia As Boolean
```

SOLIDWORKS Type Library

SetOverrideCenterOfMassValue Method (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetOverrideCenterOfMassValue( _  
    ByVal Value As Variant, _  
    ByVal CoordinateSystemName As String _  
) As Boolean
```

SOLIDWORKS Type Library

SetOverrideMassValue Method (MassPropertyOverrideOptions)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetOverrideMassValue( _  
    ByVal Value As Double _  
) As Boolean
```

SetOverrideMomentsOfInertiaValue Method (MassPropertyOverrideOptions) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetOverrideMomentsOfInertiaValue( _  
    ByVal ReferenceFrame As Long, _  
    ByVal Value As Variant, _  
    ByVal CoordinateSystemName As String _  
) As Boolean
```

SetOverridePrincipalAxesOrientation Method (MassPropertyOverrideOptions) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetOverridePrincipalAxesOrientation( _  
    ByVal Axis As Long, _  
    ByVal Value As Variant, _  
    ByVal AutoCorrect As Boolean _  
) As Boolean
```

SetOverridePrincipalMomentsOfInertia Method (MassPropertyOverrideOptions) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetOverridePrincipalMomentsOfInertia( _  
    ByVal Value As Variant _  
) As Boolean
```

Mate (Type)

SOLIDWORKS Type Library

Mate Object

Object Model

Mate

IGetEntity (Entity)

SOLIDWORKS Type Library

Mate Object Members

Public Methods

	GetEntity
	GetMateDimensionValue
	GetMateEntities
	GetMateParams
	IGetEntity
	IGetMateDimensionValue
	IGetMateEntities
	IGetMateParams

SOLIDWORKS Type Library

GetEntity Method (Mate)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Function GetEntity(_ ByVal WhichOne As Integer _) As Object</pre>

SOLIDWORKS Type Library

GetMateDimensionValue Method (Mate)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Function GetMateDimensionValue() As Variant</pre>

SOLIDWORKS Type Library

GetMateEntities Method (Mate)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Function GetMateEntities() As Variant</pre>

SOLIDWORKS Type Library

GetMateParams Method (Mate)

Syntax

Visual Basic for Applications (VBA)
<pre>Public Function GetMateParams() As Variant</pre>

IGetEntity Method (Mate)**Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetEntity( _  
    ByVal WhichOne As Integer _  
) As Entity
```

IGetMateDimensionValue Method (Mate)**Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetMateDimensionValue() As Double
```

IGetMateEntities Method (Mate)**Syntax**

Visual Basic for Applications (VBA)

```
Public Sub IGetMateEntities( _  
    ByRef Entity1 As MateEntity, _  
    ByRef Entity2 As MateEntity _  
)
```

IGetMateParams Method (Mate)**Syntax**

Visual Basic for Applications (VBA)

```
Public Sub IGetMateParams( _  
    ByRef MateType As Long, _  
    ByRef AlignFlag As Long, _  
    ByRef CanBeFlipped As Long _  
)
```

Mate2 (Type)

SOLIDWORKS Type Library

Mate2 Object

Object Model



SOLIDWORKS Type Library

Mate2 Object Members

Public Methods

	ForceMisalignment
	GetConcentricAlignmentType
	GetCurrentMisalignedDeviation
	GetForce
	GetLinkedMate
	GetMateEntityCount
	GetMaximumMisalignedDeviation
	GetSupplementalFaces
	GetTorque
	GetUseMisalignedDeviationDocumentProperty
	IGetSupplementalFaces
	MateEntity
	RemoveMisalignment
	SetConcentricAlignmentType
	SetForce
	SetMaximumMisalignedDeviation
	SetTorque
	SetUseMisalignedDeviationDocumentProperty

Public Properties

	Alignment
	CanBeFlipped
	DisplayDimension

 DisplayDimension2
 DistanceFirstArcCondition
 DistanceSecondArcCondition
 Flipped
 HasLoadBearingFaces
 HasTreatInterferenceAsShrinkFit
 IsLoadBearingFacesBonded
 LockMagneticMate
 MateLoadReference
 MaximumVariation
 MinimumVariation
 Type

SOLIDWORKS Type Library

Alignment Property (Mate2)

 Syntax

Visual Basic for Applications (VBA)

Public Property Alignment As Long

SOLIDWORKS Type Library

CanBeFlipped Property (Mate2)

 Syntax

Visual Basic for Applications (VBA)

Public Property CanBeFlipped As Boolean

SOLIDWORKS Type Library

DisplayDimension Property (Mate2)

 Syntax

Visual Basic for Applications (VBA)

Public Property DisplayDimension As [DisplayDimension](#)

SOLIDWORKS Type Library

DisplayDimension2 Property (Mate2)

 Syntax

Visual Basic for Applications (VBA)

Public Property DisplayDimension2(_
 ByVal *Index* As Long _
) As [DisplayDimension](#)

SOLIDWORKS Type Library

DistanceFirstArcCondition Property (Mate2)

 Syntax

Visual Basic for Applications (VBA)

Public Property DistanceFirstArcCondition As Long

SOLIDWORKS Type Library

DistanceSecondArcCondition Property (Mate2)

 Syntax

Visual Basic for Applications (VBA)

Public Property DistanceSecondArcCondition As Long

SOLIDWORKS Type Library

Flipped Property (Mate2)



Visual Basic for Applications (VBA)

Public Property Flipped As Boolean

SOLIDWORKS Type Library

ForceMisalignment Method (Mate2)



Visual Basic for Applications (VBA)

Public Function ForceMisalignment() As Boolean

SOLIDWORKS Type Library

GetConcentricAlignmentType Method (Mate2)



Visual Basic for Applications (VBA)

Public Function GetConcentricAlignmentType() As Long

SOLIDWORKS Type Library

GetCurrentMisalignedDeviation Method (Mate2)



Visual Basic for Applications (VBA)

Public Function GetCurrentMisalignedDeviation() As Double

SOLIDWORKS Type Library

GetForce Method (Mate2)



Visual Basic for Applications (VBA)

Public Function GetForce(_
 ByRef *Magnitude* As Double _
) As [MathVector](#)

SOLIDWORKS Type Library

GetLinkedMate Method (Mate2)



Visual Basic for Applications (VBA)

Public Function GetLinkedMate() As Object

SOLIDWORKS Type Library

GetMateEntityCount Method (Mate2)



Visual Basic for Applications (VBA)

Public Function GetMateEntityCount() As Long

SOLIDWORKS Type Library

GetMaximumMisalignedDeviation Method (Mate2)



Visual Basic for Applications (VBA)

```
Public Function GetMaximumMisalignedDeviation() As Double
```

SOLIDWORKS Type Library

GetSupplementalFaces Method (Mate2)



Visual Basic for Applications (VBA)

```
Public Function GetSupplementalFaces( _  
    ByVal WhichOne As Long _  
    ) As Variant
```

SOLIDWORKS Type Library

GetTorque Method (Mate2)



Visual Basic for Applications (VBA)

```
Public Function GetTorque( _  
    ByRef Angle As Double _  
    ) As MathVector
```

SOLIDWORKS Type Library

GetUseMisalignedDeviationDocumentProperty Method (Mate2)



Visual Basic for Applications (VBA)

```
Public Function GetUseMisalignedDeviationDocumentProperty() As Boolean
```

SOLIDWORKS Type Library

HasLoadBearingFaces Property (Mate2)



Visual Basic for Applications (VBA)

```
Public Property HasLoadBearingFaces As Boolean
```

SOLIDWORKS Type Library

HasTreatInterferenceAsShrinkFit Property (Mate2)



Visual Basic for Applications (VBA)

```
Public Property HasTreatInterferenceAsShrinkFit As Boolean
```

SOLIDWORKS Type Library

IGetSupplementalFaces Method (Mate2)



Visual Basic for Applications (VBA)

```
Public Function IGetSupplementalFaces( _  
    ByVal WhichOne As Long, _  
    ByVal FaceCount As Long _  
    ) As Face2
```

SOLIDWORKS Type Library

IsLoadBearingFacesBonded Property (Mate2)



Visual Basic for Applications (VBA)

Public Property IsLoadBearingFacesBonded As Boolean

SOLIDWORKS Type Library

LockMagneticMate Property (Mate2)



Visual Basic for Applications (VBA)

Public Property LockMagneticMate As Boolean

SOLIDWORKS Type Library

MateEntity Method (Mate2)



Visual Basic for Applications (VBA)

```
Public Function MateEntity( _  
    ByVal Index As Long _  
) As MateEntity2
```

SOLIDWORKS Type Library

MateLoadReference Property (Mate2)



Visual Basic for Applications (VBA)

Public Property MateLoadReference As [MateLoadReference](#)

SOLIDWORKS Type Library

MaximumVariation Property (Mate2)



Visual Basic for Applications (VBA)

Public Property MaximumVariation As Double

SOLIDWORKS Type Library

MinimumVariation Property (Mate2)



Visual Basic for Applications (VBA)

Public Property MinimumVariation As Double

SOLIDWORKS Type Library

RemoveMisalignment Method (Mate2)



Visual Basic for Applications (VBA)

```
Public Function RemoveMisalignment() As Boolean
```

SOLIDWORKS Type Library

SetConcentricAlignmentType Method (Mate2)



Visual Basic for Applications (VBA)

```
Public Sub SetConcentricAlignmentType( _  
    ByVal PositionType As Long _  
)
```

SOLIDWORKS Type Library

SetForce Method (Mate2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetForce( _  
    ByVal Magnitude As Double, _  
    ByVal Direction As MathVector _  
    ) As Boolean
```

SOLIDWORKS Type Library

SetMaximumMisalignedDeviation Method (Mate2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetMaximumMisalignedDeviation( _  
    ByVal MaximumDeviation As Double _  
    )
```

SOLIDWORKS Type Library

SetTorque Method (Mate2)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetTorque( _  
    ByVal Angle As Double, _  
    ByVal Axis As MathVector _  
    ) As Boolean
```

SOLIDWORKS Type Library

SetUseMisalignedDeviationDocumentProperty Method (Mate2)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetUseMisalignedDeviationDocumentProperty( _  
    ByVal UseDocumentProperty As Boolean _  
    )
```

SOLIDWORKS Type Library

Type Property (Mate2)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Type As Long
```

MateControllerFeatureData (Type)

SOLIDWORKS Type Library

MateControllerFeatureData Object

Object Model

MateControllerFeatureData

SOLIDWORKS Type Library

MateControllerFeatureData Object Members

Public Methods

 AccessSelections
 AddConfigurationFromPosition
 AddNewPosition
 DeletePosition
 GetPositions
 GetValues
 Initialize
 ReleaseSelectionAccess
 ReOrderPositions
 SetValues

Public Properties

 Mates

SOLIDWORKS Type Library

AccessSelections Method (MateControllerFeatureData)

Syntax

```
Visual Basic for Applications (VBA)

Public Function AccessSelections( _
    ByVal TopDoc As Object, _
    ByVal Component As Object _
) As Boolean
```

SOLIDWORKS Type Library

AddConfigurationFromPosition Method (MateControllerFeatureData)

Syntax

```
Visual Basic for Applications (VBA)

Public Function AddConfigurationFromPosition( _
    ByVal PositionName As String, _
    ByVal IsUpdate As Boolean _
) As Boolean
```

SOLIDWORKS Type Library

AddNewPosition Method (MateControllerFeatureData)

Syntax

```
Visual Basic for Applications (VBA)
```

```
Public Function AddNewPosition( _  
    ByVal PositionName As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

DeletePosition Method (MateControllerFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function DeletePosition( _  
    ByVal PositionName As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

GetPositions Method (MateControllerFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPositions() As Variant
```

SOLIDWORKS Type Library

GetValues Method (MateControllerFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetValues( _  
    ByVal PositionName As String _  
    ) As Variant
```

SOLIDWORKS Type Library

Initialize Method (MateControllerFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub Initialize( _  
    ByVal Mates As Variant _  
    )
```

SOLIDWORKS Type Library

Mates Property (MateControllerFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Mates As Variant
```

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (MateControllerFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

ReOrderPositions Method (MateControllerFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReOrderPositions( _  
    ByVal Positions As Variant _  
)
```

SOLIDWORKS Type Library

SetValues Method (MateControllerFeatureData)

Syntax

Visual Basic for Applications (VBA)


```
Public Sub SetValues( _  
    ByVal PositionName As String, _  
    ByVal Values As Variant _  
)
```

MateEntity (Type)

SOLIDWORKS Type Library

MateEntity Object

Object Model

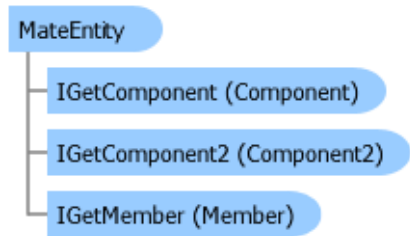

SOLIDWORKS Type Library

MateEntity Object Members



Public Methods

	GetComponent
	GetComponentName
	GetEntityParams
	GetEntityType
	GetMember
	IGetComponent
	IGetComponent2
	IGetEntityParams
	IGetMember

SOLIDWORKS Type Library

GetComponent Method (MateEntity)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetComponent() As Object
```

SOLIDWORKS Type Library

GetComponentName Method (MateEntity)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetComponentName() As String
```

SOLIDWORKS Type Library

GetEntityParams Method (MateEntity)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEntityParams() As Variant
```

SOLIDWORKS Type Library

GetEntityType Method (MateEntity)

Syntax

```
Public Function GetEntityType() As Long
```

SOLIDWORKS Type Library

GetMember Method (MateEntity)



```
Public Function GetMember() As Object
```

SOLIDWORKS Type Library

IGetComponent Method (MateEntity)



```
Public Function IGetComponent() As Component
```

SOLIDWORKS Type Library

IGetComponent2 Method (MateEntity)



```
Public Function IGetComponent2() As Component2
```

SOLIDWORKS Type Library

IGetEntityParams Method (MateEntity)



```
Public Function IGetEntityParams() As Double
```

SOLIDWORKS Type Library

IGetMember Method (MateEntity)



```
Public Function IGetMember() As Member
```

MateEntity2 (Type)

SOLIDWORKS Type Library

MateEntity2 Object

Object Model

MateEntity2

ReferenceComponent (Component2)

SOLIDWORKS Type Library

MateEntity2 Object Members

Public Methods

GetEntityParamsSize

IGetEntityParams

Public Properties

EntityParams

Reference

ReferenceComponent

ReferenceType

ReferenceType2

SOLIDWORKS Type Library

EntityParams Property (MateEntity2)

Syntax

Visual Basic for Applications (VBA)

Public Property EntityParams As Variant

SOLIDWORKS Type Library

GetEntityParamsSize Method (MateEntity2)

Syntax

Visual Basic for Applications (VBA)

Public Function GetEntityParamsSize() As Long

SOLIDWORKS Type Library

IGetEntityParams Method (MateEntity2)

Syntax

Visual Basic for Applications (VBA)

Public Function IGetEntityParams(_
 ByVal NParamsSize As Long _
) As Double

SOLIDWORKS Type Library

Reference Property (MateEntity2)

Syntax

Visual Basic for Applications (VBA)

Public Property Reference As Object

SOLIDWORKS Type Library

ReferenceComponent Property (MateEntity2)



Visual Basic for Applications (VBA)

Public Property ReferenceComponent As [Component2](#)

SOLIDWORKS Type Library

ReferenceType Property (MateEntity2)



Visual Basic for Applications (VBA)

Public Property ReferenceType As Long

SOLIDWORKS Type Library

ReferenceType2 Property (MateEntity2)



Visual Basic for Applications (VBA)

Public Property ReferenceType2 As Long

MateFeatureData (Type)

SOLIDWORKS Type Library
MateFeatureData Object

Object Model

MateFeatureData

SOLIDWORKS Type Library
MateFeatureData Object Members



Public Properties

ErrorStatus

TypeName

SOLIDWORKS Type Library
ErrorStatus Property (MateFeatureData)

Syntax

Visual Basic for Applications (VBA)

Public Property ErrorStatus As Long

SOLIDWORKS Type Library
TypeName Property (MateFeatureData)

Syntax

Visual Basic for Applications (VBA)

Public Property TypeName As Long

MateInPlace (Type)

SOLIDWORKS Type Library

MateInPlace Object

 Object Model

MateInPlace

Component (Component2)

SOLIDWORKS Type Library

MateInPlace Object Members

 Public Methods

 [GetMateEntityCount](#)

 Public Properties

 [Component](#)

 [MateComponentName](#)

 [MateEntity](#)

 [MateEntityType](#)

SOLIDWORKS Type Library

Component Property (MateInPlace)

 Syntax

Visual Basic for Applications (VBA)

Public Property Component As [Component2](#)

SOLIDWORKS Type Library

GetMateEntityCount Method (MateInPlace)

 Syntax

Visual Basic for Applications (VBA)

Public Function GetMateEntityCount() As Long

SOLIDWORKS Type Library

MateComponentName Property (MateInPlace)

 Syntax

Visual Basic for Applications (VBA)

```
Public Property MateComponentName( _  
    ByVal NIndex As Long _  
) As String
```

SOLIDWORKS Type Library

MateEntity Property (MateInPlace)

 Syntax

Visual Basic for Applications (VBA)

```
Public Property MateEntity( _  
    ByVal NIndex As Long _  
) As Object
```



Syntax

Visual Basic for Applications (VBA)


```
Public Property MateEntityType( _  
    ByVal NIndex As Long _  
) As Long
```

MateLoadReference (Type)

SOLIDWORKS Type Library

MateLoadReference Object

Object Model

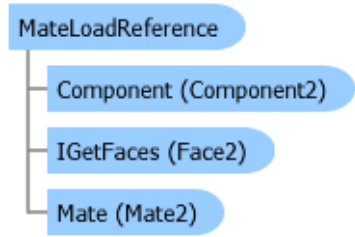

SOLIDWORKS Type Library

MateLoadReference Object Members



Public Methods

[Delete](#)

[GetFaces](#)

[GetFacesCount](#)

[IGetFaces](#)

Public Properties

[Component](#)

[Mate](#)

[Name](#)

SOLIDWORKS Type Library

Component Property (MateLoadReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Component( _  
    ByVal WhichOne As Long _  
) As Component2
```

SOLIDWORKS Type Library

Delete Method (MateLoadReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Delete() As Boolean
```

SOLIDWORKS Type Library

GetFaces Method (MateLoadReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFaces( _  
    ByVal WhichOne As Long _  
) As Variant
```

SOLIDWORKS Type Library

GetFacesCount Method (MateLoadReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacesCount( _  
    ByVal WhichOne As Long _  
) As Long
```

SOLIDWORKS Type Library

IGetFaces Method (MateLoadReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFaces( _  
    ByVal WhichOne As Long, _  
    ByVal FaceCount As Long _  
) As Face2
```

SOLIDWORKS Type Library

Mate Property (MateLoadReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Mate As Mate2
```

SOLIDWORKS Type Library

Name Property (MateLoadReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Name As String
```

MateReference (Type)

SOLIDWORKS Type Library

MateReference Object

Object Model

MateReference

ReferenceEntity (Entity)

SOLIDWORKS Type Library

MateReference Object Members

Public Methods

Edit

Public Properties

Name

ReferenceAlignment

ReferenceEntity

ReferenceEntity2

ReferenceEntityCount

ReferenceEntityType

ReferenceType

SOLIDWORKS Type Library

Edit Method (MateReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Edit( _  
    ByVal BstrMateReferenceName As String, _  
    ByVal PrimaryReferenceEntity As Entity, _  
    ByVal PrimaryReferenceType As Long, _  
    ByVal PrimaryReferenceAlignment As Long, _  
    ByVal SecondaryReferenceEntity As Entity, _  
    ByVal SecondaryReferenceType As Long, _  
    ByVal SecondaryReferenceAlignment As Long, _  
    ByVal TertiaryReferenceEntity As Entity, _  
    ByVal TertiaryReferenceType As Long, _  
    ByVal TertiaryReferenceAlignment As Long _  
) As Boolean
```

SOLIDWORKS Type Library

Name Property (MateReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Name As String
```

SOLIDWORKS Type Library

ReferenceAlignment Property (MateReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReferenceAlignment( _  
    ByVal Index As Long _  
) As Long
```

SOLIDWORKS Type Library

ReferenceEntity Property (MateReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReferenceEntity( _  
    ByVal Index As Long _  
) As Entity
```

SOLIDWORKS Type Library

ReferenceEntity2 Property (MateReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReferenceEntity2( _  
    ByVal Index As Long _  
) As Object
```

SOLIDWORKS Type Library

ReferenceEntityCount Property (MateReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReferenceEntityCount As Long
```

SOLIDWORKS Type Library

ReferenceEntityType Property (MateReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReferenceEntityType( _  
    ByVal Index As Long _  
) As Long
```

SOLIDWORKS Type Library

ReferenceType Property (MateReference)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReferenceType( _  
    ByVal Index As Long _  
) As Long
```

MaterialVisualPropertiesData (Type)

SOLIDWORKS Type Library
MaterialVisualPropertiesData Object

Object Model

MaterialVisualPropertiesData

SOLIDWORKS Type Library
MaterialVisualPropertiesData Object Members

Public Properties

 AdvancedGraphics
 Angle
 ApplyAppearance
 ApplyMaterialColorToPart
 ApplyMaterialHatchToSection
 BlendColor
 RealView
 Scale2

SOLIDWORKS Type Library
AdvancedGraphics Property (MaterialVisualPropertiesData)

Syntax

Visual Basic for Applications (VBA)
Public Property AdvancedGraphics As Boolean

SOLIDWORKS Type Library
Angle Property (MaterialVisualPropertiesData)

Syntax

Visual Basic for Applications (VBA)
Public Property Angle As Double

SOLIDWORKS Type Library
ApplyAppearance Property (MaterialVisualPropertiesData)

Syntax

Visual Basic for Applications (VBA)
Public Property ApplyAppearance As Boolean

SOLIDWORKS Type Library
ApplyMaterialColorToPart Property (MaterialVisualPropertiesData)

Syntax

Visual Basic for Applications (VBA)
Public Property ApplyMaterialColorToPart As Boolean

SOLIDWORKS Type Library
ApplyMaterialHatchToSection Property (MaterialVisualPropertiesData)



Visual Basic for Applications (VBA)

```
Public Property ApplyMaterialHatchToSection As Boolean
```

SOLIDWORKS Type Library

BlendColor Property (MaterialVisualPropertiesData)



Visual Basic for Applications (VBA)

```
Public Property BlendColor As Boolean
```

SOLIDWORKS Type Library

RealView Property (MaterialVisualPropertiesData)



Visual Basic for Applications (VBA)

```
Public Property RealView As Boolean
```

SOLIDWORKS Type Library

Scale2 Property (MaterialVisualPropertiesData)



Visual Basic for Applications (VBA)


```
Public Property Scale2 As Double
```

MathPoint (Type)

SOLIDWORKS Type Library

MathPoint Object

Object Model

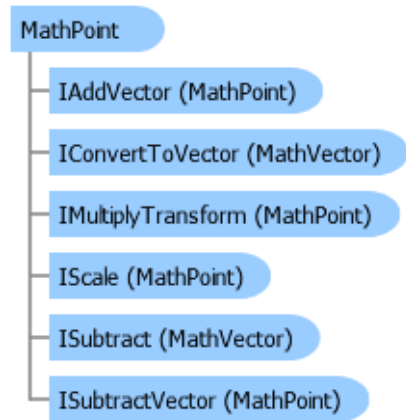

SOLIDWORKS Type Library

MathPoint Object Members

Public Methods

	AddVector
	ConvertToVector
	IAddVector
	IConvertToVector
	IMultiplyTransform
	IScale
	ISubtract
	ISubtractVector
	MultiplyTransform
	Scale
	Subtract
	SubtractVector

Public Properties

	ArrayData
	IArrayData

SOLIDWORKS Type Library

AddVector Method (MathPoint)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddVector( _  
    ByVal VectorObjIn As Object _  
) As Object
```

SOLIDWORKS Type Library

ArrayData Property (MathPoint)



Syntax

Visual Basic for Applications (VBA)

```
Public Property ArrayData As Variant
```

SOLIDWORKS Type Library

ConvertToVector Method (MathPoint)



Syntax

Visual Basic for Applications (VBA)

```
Public Function ConvertToVector() As Object
```

SOLIDWORKS Type Library

IAddVector Method (MathPoint)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IAddVector( _  
    ByVal VectorObjIn As MathVector _  
    ) As MathPoint
```

SOLIDWORKS Type Library

IArrayData Property (MathPoint)



Syntax

Visual Basic for Applications (VBA)

```
Public Property IArrayData As Double
```

SOLIDWORKS Type Library

ICovertToVector Method (MathPoint)



Syntax

Visual Basic for Applications (VBA)

```
Public Function ICovertToVector() As MathVector
```

SOLIDWORKS Type Library

IMultiplyTransform Method (MathPoint)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IMultiplyTransform( _  
    ByVal TransformObjIn As MathTransform _  
    ) As MathPoint
```

SOLIDWORKS Type Library

IScale Method (MathPoint)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IScale( _  
    ByVal ValueIn As Double _  
    ) As MathPoint
```

SOLIDWORKS Type Library

ISubtract Method (MathPoint)



Syntax

Visual Basic for Applications (VBA)

```
Public Function ISubtract( _  
    ByVal PointObjIn As MathPoint _  
    ) As MathVector
```

SOLIDWORKS Type Library

ISubtractVector Method (MathPoint)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ISubtractVector( _  
    ByVal VectorObjIn As MathVector _  
    ) As MathPoint
```

SOLIDWORKS Type Library

MultiplyTransform Method (MathPoint)

Syntax

Visual Basic for Applications (VBA)

```
Public Function MultiplyTransform( _  
    ByVal TransformObjIn As Object _  
    ) As Object
```

SOLIDWORKS Type Library

Scale Method (MathPoint)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Scale( _  
    ByVal ValueIn As Double _  
    ) As Object
```

SOLIDWORKS Type Library

Subtract Method (MathPoint)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Subtract( _  
    ByVal PointObjIn As Object _  
    ) As Object
```

SOLIDWORKS Type Library

SubtractVector Method (MathPoint)

Syntax

Visual Basic for Applications (VBA)


```
Public Function SubtractVector( _  
    ByVal VectorObjIn As Object _  
    ) As Object
```

MathTransform (Type)

SOLIDWORKS Type Library

MathTransform Object

Object Model

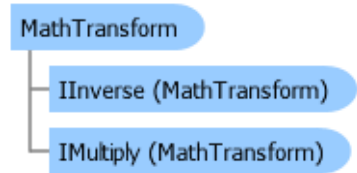

SOLIDWORKS Type Library

MathTransform Object Members

Public Methods

	GetData
	GetData2
	IGetData
	IGetData2
	Inverse
	IMultiply
	Inverse
	ISetData
	Multiply
	SetData

Public Properties

	ArrayData
	IArrayData

SOLIDWORKS Type Library

ArrayData Property (MathTransform)

Syntax

Visual Basic for Applications (VBA)

Public Property ArrayData As Variant

SOLIDWORKS Type Library

GetData Method (MathTransform)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetData( _
    ByRef XAxisObjOut As Object, _
    ByRef YAxisObjOut As Object, _
    ByRef ZAxisObjOut As Object, _
    ByRef TransformObjOut As Object, _
    ByRef ScaleOut As Double _
)
```

SOLIDWORKS Type Library

GetData2 Method (MathTransform)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetData2( _  
    ByRef XAxisObjOut As Object, _  
    ByRef YAxisObjOut As Object, _  
    ByRef ZAxisObjOut As Object, _  
    ByRef TransformObjOut As Object, _  
    ByRef ScaleOut As Double _  
)
```

SOLIDWORKS Type Library

IArrayData Property (MathTransform)

Syntax

Visual Basic for Applications (VBA)

```
Public Property IArrayData As Double
```

SOLIDWORKS Type Library

IGetData Method (MathTransform)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub IGetData( _  
    ByRef XAxisObjOut As MathVector, _  
    ByRef YAxisObjOut As MathVector, _  
    ByRef ZAxisObjOut As MathVector, _  
    ByRef TransformObjOut As MathVector, _  
    ByRef ScaleOut As Double _  
)
```

SOLIDWORKS Type Library

IGetData2 Method (MathTransform)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub IGetData2( _  
    ByRef XAxisObjOut As MathVector, _  
    ByRef YAxisObjOut As MathVector, _  
    ByRef ZAxisObjOut As MathVector, _  
    ByRef TransformObjOut As MathVector, _  
    ByRef ScaleOut As Double _  
)
```

SOLIDWORKS Type Library

IInverse Method (MathTransform)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IInverse() As MathTransform
```

SOLIDWORKS Type Library

IMultiply Method (MathTransform)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IMultiply( _  
    ByVal TransformObjIn As MathTransform _  
) As MathTransform
```

Inverse Method (MathTransform)

Visual Basic for Applications (VBA)

```
Public Function Inverse() As Object
```

ISetData Method (MathTransform)

Visual Basic for Applications (VBA)

```
Public Sub ISetData( _  
    ByVal XAxisObjIn As MathVector, _  
    ByVal YAxisObjIn As MathVector, _  
    ByVal ZAxisObjIn As MathVector, _  
    ByVal TransformObjIn As MathVector, _  
    ByVal ScaleValIn As Double _  
)
```

Multiply Method (MathTransform)

Visual Basic for Applications (VBA)

```
Public Function Multiply( _  
    ByVal TransformObjIn As Object _  
) As Object
```

SetData Method (MathTransform)

Visual Basic for Applications (VBA)

```
Public Sub SetData( _  
    ByVal XAxisObjIn As Object, _  
    ByVal YAxisObjIn As Object, _  
    ByVal ZAxisObjIn As Object, _  
    ByVal TransformObjIn As Object, _  
    ByVal ScaleValIn As Double _  
)
```