

# **SOLIDWORKS API (VB6 COM) — Reference (53/102): MathUtility-MidSurface3**


SOLIDWORKS API Documentation (converted from CHM)

# MathUtility (Type)

SOLIDWORKS Type Library

## MathUtility Object

### Object Model

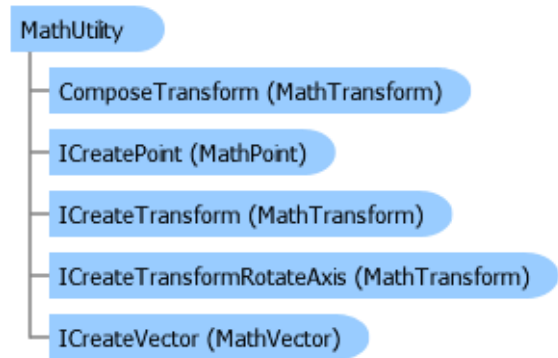

SOLIDWORKS Type Library

## MathUtility Object Members

### Public Methods

- [ComposeTransform](#)
- [CreatePoint](#)
- [CreateTransform](#)
- [CreateTransformRotateAxis](#)
- [CreateVector](#)
- [ICreatePoint](#)
- [ICreateTransform](#)
- [ICreateTransformRotateAxis](#)
- [ICreateVector](#)

SOLIDWORKS Type Library

## ComposeTransform Method (MathUtility)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function ComposeTransform( _
    ByVal XVec As MathVector, _
    ByVal YVec As MathVector, _
    ByVal ZVec As MathVector, _
    ByVal TransVec As MathVector, _
    ByVal Scale As Double _
) As MathTransform
```

SOLIDWORKS Type Library

## CreatePoint Method (MathUtility)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function CreatePoint( _
    ByVal ArrayDataIn As Variant _
) As Object
```

**CreateTransform Method (MathUtility)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function CreateTransform( _  
    ByVal ArrayDataIn As Variant _  
) As Object
```

**CreateTransformRotateAxis Method (MathUtility)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function CreateTransformRotateAxis( _  
    ByVal PointObjIn As Object, _  
    ByVal VectorObjIn As Object, _  
    ByVal Angle As Double _  
) As Object
```

**CreateVector Method (MathUtility)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function CreateVector( _  
    ByVal ArrayDataIn As Variant _  
) As Object
```

**ICreatePoint Method (MathUtility)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function ICreatePoint( _  
    ByRef ArrayDataIn As Double _  
) As MathPoint
```

**ICreateTransform Method (MathUtility)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function ICreateTransform( _  
    ByRef ArrayDataIn As Double _  
) As MathTransform
```

**ICreateTransformRotateAxis Method (MathUtility)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function ICreateTransformRotateAxis( _  
    ByVal PointObjIn As MathPoint, _  
    ByVal VectorObjIn As MathVector, _  
    ByVal Angle As Double _  
) As MathTransform
```

**ICreateVector Method (MathUtility)**


```
Public Function ICreateVector( _  
    ByRef ArrayDataIn As Double _  
) As MathVector
```

# MathVector (Type)

SOLIDWORKS Type Library

MathVector Object

Object Model

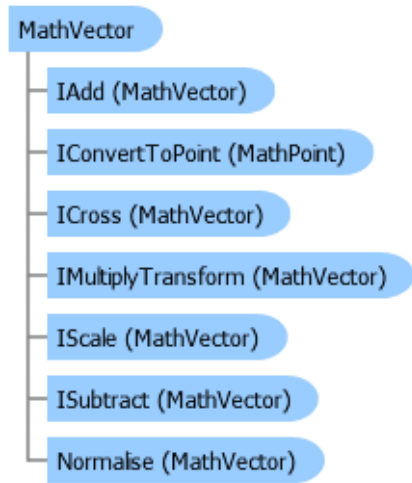

SOLIDWORKS Type Library

MathVector Object Members

Public Methods

|                                                                                     |                                    |
|-------------------------------------------------------------------------------------|------------------------------------|
|  | <a href="#">Add</a>                |
|  | <a href="#">ConvertToPoint</a>     |
|  | <a href="#">Cross</a>              |
|  | <a href="#">Dot</a>                |
|  | <a href="#">GetLength</a>          |
|  | <a href="#">IAdd</a>               |
|  | <a href="#">IConvertToPoint</a>    |
|  | <a href="#">ICross</a>             |
|  | <a href="#">IDot</a>               |
|  | <a href="#">IMultiplyTransform</a> |
|  | <a href="#">IScale</a>             |
|  | <a href="#">ISubtract</a>          |
|  | <a href="#">MultiplyTransform</a>  |
|  | <a href="#">Normalise</a>          |
|  | <a href="#">Scale</a>              |
|  | <a href="#">Subtract</a>           |

Public Properties

|                                                                                     |                            |
|-------------------------------------------------------------------------------------|----------------------------|
|  | <a href="#">ArrayData</a>  |
|  | <a href="#">IArrayData</a> |

SOLIDWORKS Type Library

Add Method (MathVector)

Syntax

Visual Basic for Applications (VBA)

```
Public Function Add( _  
    ByVal VectorObjIn As Object _  
) As Object
```

SOLIDWORKS Type Library

**ArrayData Property (MathVector)**

 Syntax

Visual Basic for Applications (VBA)

```
Public Property ArrayData As Variant
```

SOLIDWORKS Type Library

**ConvertToPoint Method (MathVector)**

 Syntax

Visual Basic for Applications (VBA)

```
Public Function ConvertToPoint() As Object
```

SOLIDWORKS Type Library

**Cross Method (MathVector)**

 Syntax

Visual Basic for Applications (VBA)

```
Public Function Cross( _  
    ByVal VectorObjIn As Object _  
) As Object
```

SOLIDWORKS Type Library

**Dot Method (MathVector)**

 Syntax

Visual Basic for Applications (VBA)

```
Public Function Dot( _  
    ByVal VectorObjIn As Object _  
) As Double
```

SOLIDWORKS Type Library

**GetLength Method (MathVector)**

 Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLength() As Double
```

SOLIDWORKS Type Library

**IAdd Method (MathVector)**

 Syntax

Visual Basic for Applications (VBA)

```
Public Function IAdd( _  
    ByVal VectorObjIn As MathVector _  
) As MathVector
```

SOLIDWORKS Type Library

**IArrayData Property (MathVector)**

 Syntax

Visual Basic for Applications (VBA)

Public Property IArrayData As Double

SOLIDWORKS Type Library

**IConvertToPoint Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function IConvertToPoint() As MathPoint
```

SOLIDWORKS Type Library

**ICross Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function ICross(  
    ByVal VectorObjIn As MathVector _  
) As MathVector
```

SOLIDWORKS Type Library

**IDot Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function IDot(  
    ByVal VectorObjIn As MathVector _  
) As Double
```

SOLIDWORKS Type Library

**IMultiplyTransform Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function IMultiplyTransform(  
    ByVal TransformObjIn As MathTransform _  
) As MathVector
```

SOLIDWORKS Type Library

**IScale Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function IScale(  
    ByVal ValueIn As Double _  
) As MathVector
```

SOLIDWORKS Type Library

**ISubtract Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function ISubtract(  
    ByVal VectorObjIn As MathVector _  
) As MathVector
```

SOLIDWORKS Type Library

**MultiplyTransform Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function MultiplyTransform( _  
    ByVal TransformObjIn As Object _  
) As Object
```

SOLIDWORKS Type Library

**Normalise Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function Normalise() As MathVector
```

SOLIDWORKS Type Library

**Scale Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function Scale( _  
    ByVal ValueIn As Double _  
) As Object
```

SOLIDWORKS Type Library

**Subtract Method (MathVector)**



Visual Basic for Applications (VBA)

```
Public Function Subtract( _  
    ByVal VectorObjIn As Object _  
) As Object
```

# MBD3DPdfData (Type)

SOLIDWORKS Type Library

MBD3DPdfData Object

Object Model

MBD3DPdfData

SOLIDWORKS Type Library

MBD3DPdfData Object Members

Public Methods

|                                                                                     |                                            |
|-------------------------------------------------------------------------------------|--------------------------------------------|
|    | <a href="#">GetAttachments</a>             |
|    | <a href="#">GetBomAreaCount</a>            |
|    | <a href="#">GetImportedNotes</a>           |
|    | <a href="#">GetMoreViews</a>               |
|    | <a href="#">GetStandardViews</a>           |
|    | <a href="#">GetTextAndCustomProperties</a> |
|    | <a href="#">SetAttachments</a>             |
|    | <a href="#">SetBomTable</a>                |
|    | <a href="#">SetImportedNote</a>            |
|    | <a href="#">SetIndependentViewPort</a>     |
|  | <a href="#">SetMoreViews</a>               |
|  | <a href="#">SetStandardViews</a>           |

Public Properties

|                                                                                     |                                           |
|-------------------------------------------------------------------------------------|-------------------------------------------|
|  | <a href="#">Accuracy</a>                  |
|  | <a href="#">CompressLossyTessellation</a> |
|  | <a href="#">CreateAttachSTEP242</a>       |
|  | <a href="#">ExcludeFromAnnotationView</a> |
|  | <a href="#">FilePath</a>                  |
|  | <a href="#">STEP242Edition</a>            |
|  | <a href="#">ThemeName</a>                 |
|  | <a href="#">ViewPdfAfterSaving</a>        |

SOLIDWORKS Type Library

Accuracy Property (MBD3DPdfData)

Syntax

Visual Basic for Applications (VBA)

Public Property Accuracy As Long

SOLIDWORKS Type Library

CompressLossyTessellation Property (MBD3DPdfData)

Syntax

Visual Basic for Applications (VBA)

Public Property CompressLossyTessellation As Boolean

SOLIDWORKS Type Library

### CreateAttachSTEP242 Property (MBD3DPdfData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property CreateAttachSTEP242 As Boolean
```

SOLIDWORKS Type Library

### ExcludeFromAnnotationView Property (MBD3DPdfData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property ExcludeFromAnnotationView As Boolean
```

SOLIDWORKS Type Library

### FilePath Property (MBD3DPdfData)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FilePath As String
```

SOLIDWORKS Type Library

### GetAttachments Method (MBD3DPdfData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAttachments() As Variant
```

SOLIDWORKS Type Library

### GetBomAreaCount Method (MBD3DPdfData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBomAreaCount() As Long
```

SOLIDWORKS Type Library

### GetImportedNotes Method (MBD3DPdfData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetImportedNotes() As Variant
```

SOLIDWORKS Type Library

### GetMoreViews Method (MBD3DPdfData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetMoreViews() As Variant
```

SOLIDWORKS Type Library

### GetStandardViews Method (MBD3DPdfData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetStandardViews() As Variant
```

SOLIDWORKS Type Library

### GetTextAndCustomProperties Method (MBD3DPdfData)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextAndCustomProperties() As Variant
```

SOLIDWORKS Type Library

### SetAttachments Method (MBD3DPdfData)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetAttachments( _  
    ByVal Values As Variant _  
)
```

SOLIDWORKS Type Library

### SetBomTable Method (MBD3DPdfData)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetBomTable( _  
    ByVal Index As Long, _  
    ByVal BomTableName As String, _  
    ByVal Columns As Variant _  
) As Long
```

SOLIDWORKS Type Library

### SetImportedNote Method (MBD3DPdfData)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetImportedNote( _  
    ByVal Name As String, _  
    ByVal Note As Object _  
) As Boolean
```

SOLIDWORKS Type Library

### SetIndependentViewPort Method (MBD3DPdfData)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetIndependentViewPort( _  
    ByVal ViewName As String _  
) As Boolean
```

SOLIDWORKS Type Library

### SetMoreViews Method (MBD3DPdfData)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetMoreViews( _  
    ByVal Values As Variant _  
)
```

SOLIDWORKS Type Library

### SetStandardViews Method (MBD3DPdfData)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetStandardViews( _  
    ByVal Values As Variant _  
)
```

SOLIDWORKS Type Library

**STEP242Edition Property (MBD3DPdfData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property STEP242Edition As Long
```

SOLIDWORKS Type Library

**ThemeName Property (MBD3DPdfData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property ThemeName As String
```

SOLIDWORKS Type Library

**ViewPdfAfterSaving Property (MBD3DPdfData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property ViewPdfAfterSaving As Boolean
```

# MBDSTEP242Data (Type)

SOLIDWORKS Type Library

MBDSTEP242Data Object

Object Model

MBDSTEP242Data

SOLIDWORKS Type Library

MBDSTEP242Data Object Members

Public Properties

|                                                                                                                                  |
|----------------------------------------------------------------------------------------------------------------------------------|
|  <a href="#">CustomPropertiesToPublish</a>      |
|  <a href="#">ExportFaceEdgeProperties</a>       |
|  <a href="#">PublishFileName</a>                |
|  <a href="#">PublishWithAllCustomProperties</a> |
|  <a href="#">SplitPeriodicFaces</a>             |
|  <a href="#">STEP242Edition</a>                 |

SOLIDWORKS Type Library

CustomPropertiesToPublish Property (MBDSTEP242Data)

Syntax

Visual Basic for Applications (VBA)

```
Public Property CustomPropertiesToPublish As Variant
```

SOLIDWORKS Type Library

ExportFaceEdgeProperties Property (MBDSTEP242Data)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ExportFaceEdgeProperties As Boolean
```

SOLIDWORKS Type Library

PublishFileName Property (MBDSTEP242Data)

Syntax

Visual Basic for Applications (VBA)

```
Public Property PublishFileName As String
```

SOLIDWORKS Type Library

PublishWithAllCustomProperties Property (MBDSTEP242Data)

Syntax

Visual Basic for Applications (VBA)

```
Public Property PublishWithAllCustomProperties As Boolean
```

SOLIDWORKS Type Library

SplitPeriodicFaces Property (MBDSTEP242Data)

Syntax

Visual Basic for Applications (VBA)

Public Property SplitPeriodicFaces As Boolean

SOLIDWORKS Type Library

STEP242Edition Property (MBDSTEP242Data)



Visual Basic for Applications (VBA)

Public Property STEP242Edition As Long

# Measure (Type)

SOLIDWORKS Type Library

Measure Object

Object Model

Measure

SOLIDWORKS Type Library

Measure Object Members

Public Methods

- Calculate
- SetProjectionEntity

Public Properties

- Angle
- AngleDecimalPlaces
- ArcLength
- ArcOption
- Area
- CenterDistance
- ChordLength
- DeltaX
- DeltaY
- DeltaZ
- Diameter
- Distance
- IsConcentricSpheres
- IsIntersect
- IsParallel
- IsPerpendicular
- Length
- LengthDecimalPlaces
- Normal
- NormalDistance
- Perimeter
- Projection
- ProjectionOption
- Radius
- SphericalCenterDistance
- TotalArea
- TotalLength
- X



SOLIDWORKS Type Library

### Angle Property (Measure)



Visual Basic for Applications (VBA)

```
Public Property Angle As Double
```

SOLIDWORKS Type Library

### AngleDecimalPlaces Property (Measure)



Visual Basic for Applications (VBA)

```
Public Property AngleDecimalPlaces As Long
```

SOLIDWORKS Type Library

### ArcLength Property (Measure)



Visual Basic for Applications (VBA)

```
Public Property ArcLength As Double
```

SOLIDWORKS Type Library

### ArcOption Property (Measure)



Visual Basic for Applications (VBA)

```
Public Property ArcOption As Long
```

SOLIDWORKS Type Library

### Area Property (Measure)



Visual Basic for Applications (VBA)

```
Public Property Area As Double
```

SOLIDWORKS Type Library

### Calculate Method (Measure)



Visual Basic for Applications (VBA)

```
Public Function Calculate( _  
    ByVal Entities As Variant _  
    ) As Boolean
```

SOLIDWORKS Type Library

### CenterDistance Property (Measure)



Visual Basic for Applications (VBA)

```
Public Property CenterDistance As Double
```

SOLIDWORKS Type Library

### ChordLength Property (Measure)



Visual Basic for Applications (VBA)

Public Property ChordLength As Double

SOLIDWORKS Type Library

DeltaX Property (Measure)



Visual Basic for Applications (VBA)

Public Property DeltaX As Double

SOLIDWORKS Type Library

DeltaY Property (Measure)



Visual Basic for Applications (VBA)

Public Property DeltaY As Double

SOLIDWORKS Type Library

DeltaZ Property (Measure)



Visual Basic for Applications (VBA)

Public Property DeltaZ As Double

SOLIDWORKS Type Library

Diameter Property (Measure)



Visual Basic for Applications (VBA)

Public Property Diameter As Double

SOLIDWORKS Type Library

Distance Property (Measure)



Visual Basic for Applications (VBA)

Public Property Distance As Double

SOLIDWORKS Type Library

IsConcentricSpheres Property (Measure)



Visual Basic for Applications (VBA)

Public Property IsConcentricSpheres As Boolean

SOLIDWORKS Type Library

IsIntersect Property (Measure)



Visual Basic for Applications (VBA)

Public Property IsIntersect As Boolean

SOLIDWORKS Type Library

IsParallel Property (Measure)



Visual Basic for Applications (VBA)

```
Public Property IsParallel As Boolean
```

SOLIDWORKS Type Library

**IsPerpendicular Property (Measure)**



Visual Basic for Applications (VBA)

```
Public Property IsPerpendicular As Boolean
```

SOLIDWORKS Type Library

**Length Property (Measure)**



Visual Basic for Applications (VBA)

```
Public Property Length As Double
```

SOLIDWORKS Type Library

**LengthDecimalPlaces Property (Measure)**



Visual Basic for Applications (VBA)

```
Public Property LengthDecimalPlaces As Long
```

SOLIDWORKS Type Library

**Normal Property (Measure)**



Visual Basic for Applications (VBA)

```
Public Property Normal As Double
```

SOLIDWORKS Type Library

**NormalDistance Property (Measure)**



Visual Basic for Applications (VBA)

```
Public Property NormalDistance As Double
```

SOLIDWORKS Type Library

**Perimeter Property (Measure)**



Visual Basic for Applications (VBA)

```
Public Property Perimeter As Double
```

SOLIDWORKS Type Library

**Projection Property (Measure)**



Visual Basic for Applications (VBA)

```
Public Property Projection As Double
```

SOLIDWORKS Type Library

**ProjectionOption Property (Measure)**



### Syntax

Visual Basic for Applications (VBA)

```
Public Property ProjectionOption As Long
```

SOLIDWORKS Type Library

### Radius Property (Measure)



### Syntax

Visual Basic for Applications (VBA)

```
Public Property Radius As Double
```

SOLIDWORKS Type Library

### SetProjectionEntity Method (Measure)



### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetProjectionEntity( _  
    ByVal Entity As Object _  
    ) As Boolean
```

SOLIDWORKS Type Library

### SpericalCenterDistance Property (Measure)



### Syntax

Visual Basic for Applications (VBA)

```
Public Property SpericalCenterDistance As Double
```

SOLIDWORKS Type Library

### TotalArea Property (Measure)



### Syntax

Visual Basic for Applications (VBA)

```
Public Property TotalArea As Double
```

SOLIDWORKS Type Library

### TotalLength Property (Measure)



### Syntax

Visual Basic for Applications (VBA)

```
Public Property TotalLength As Double
```

SOLIDWORKS Type Library

### X Property (Measure)



### Syntax

Visual Basic for Applications (VBA)

```
Public Property X As Double
```

SOLIDWORKS Type Library

### Y Property (Measure)



### Syntax

Visual Basic for Applications (VBA)

```
Public Property Y As Double
```

SOLIDWORKS Type Library



Syntax

Visual Basic for Applications (VBA)

Public Property Z As Double

# Member (Type)

SOLIDWORKS Type Library

Member Object

 Object Model

Member

SOLIDWORKS Type Library

Member Object Members



# MeshBody (Type)

SOLIDWORKS Type Library

## MeshBody Object

Object Model

MeshBody

SOLIDWORKS Type Library

## MeshBody Object Members

Public Methods

- [GetBody](#)
- [GetFacetCount](#)
- [GetFacets](#)
- [SurfaceFromMesh](#)

SOLIDWORKS Type Library

## GetBody Method (MeshBody)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBody() As Object
```

SOLIDWORKS Type Library

## GetFacetCount Method (MeshBody)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacetCount() As Long
```

SOLIDWORKS Type Library

## GetFacets Method (MeshBody)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacets() As Variant
```

SOLIDWORKS Type Library

## SurfaceFromMesh Method (MeshBody)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SurfaceFromMesh( _  
    ByVal SurfaceType As Long, _  
    ByVal FacetTolerance As Double, _  
    ByVal ExtendSurfaceSize As Double, _  
    ByRef ErrorCode As Long _  
) As Object
```

# MessageBarDefinition (Type)

SOLIDWORKS Type Library

MessageBarDefinition Object

Object Model

## MessageBarDefinition

SOLIDWORKS Type Library

MessageBarDefinition Object Members

Public Properties

|                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------|
|  <a href="#">IncludeDoNotShowAgain</a> |
|  <a href="#">Message</a>               |
|  <a href="#">ResponseAText</a>         |
|  <a href="#">ResponseAType</a>         |
|  <a href="#">ResponseBText</a>         |
|  <a href="#">ResponseBType</a>         |
|  <a href="#">Severity</a>              |
|  <a href="#">Title</a>                 |
|  <a href="#">UniqueName</a>            |

SOLIDWORKS Type Library

IncludeDoNotShowAgain Property (MessageBarDefinition)

Syntax

|                                                  |
|--------------------------------------------------|
| Visual Basic for Applications (VBA)              |
| Public Property IncludeDoNotShowAgain As Boolean |

SOLIDWORKS Type Library

Message Property (MessageBarDefinition)

Syntax

|                                     |
|-------------------------------------|
| Visual Basic for Applications (VBA) |
| Public Property Message As String   |

SOLIDWORKS Type Library

ResponseAText Property (MessageBarDefinition)

Syntax

|                                         |
|-----------------------------------------|
| Visual Basic for Applications (VBA)     |
| Public Property ResponseAText As String |

SOLIDWORKS Type Library

ResponseAType Property (MessageBarDefinition)

Syntax

|                                       |
|---------------------------------------|
| Visual Basic for Applications (VBA)   |
| Public Property ResponseAType As Long |

SOLIDWORKS Type Library

ResponseBText Property (MessageBarDefinition)



Visual Basic for Applications (VBA)

Public Property ResponseBText As String

SOLIDWORKS Type Library

ResponseBType Property (MessageBarDefinition)



Visual Basic for Applications (VBA)

Public Property ResponseBType As Long

SOLIDWORKS Type Library

Severity Property (MessageBarDefinition)



Visual Basic for Applications (VBA)

Public Property Severity As Long

SOLIDWORKS Type Library

Title Property (MessageBarDefinition)



Visual Basic for Applications (VBA)

Public Property Title As String

SOLIDWORKS Type Library

UniqueName Property (MessageBarDefinition)



Visual Basic for Applications (VBA)

Public Property UniqueName As String

# MidSurface (Type)

SOLIDWORKS Type Library

MidSurface Object

## Object Model

### MidSurface

- IEdgeGetFace (Face)
- IGetFirstFace (Face)
- IGetFirstFaceArray (Face)
- IGetFirstFacePair (Face)
- IGetFirstNeutralSheet (Body)
- IGetNextFace (Face)
- IGetNextFaceArray (Face)
- IGetNextFacePair (Face)
- IGetNextNeutralSheet (Body)

SOLIDWORKS Type Library

MidSurface Object Members

## Public Methods

|                                                                                     |                                       |
|-------------------------------------------------------------------------------------|---------------------------------------|
|  | <a href="#">EdgeGetFace</a>           |
|  | <a href="#">GetFaceCount</a>          |
|  | <a href="#">GetFacePairCount</a>      |
|  | <a href="#">GetFirstFace</a>          |
|  | <a href="#">GetFirstFaceArray</a>     |
|  | <a href="#">GetFirstFacePair</a>      |
|  | <a href="#">GetFirstNeutralSheet</a>  |
|  | <a href="#">GetNeutralSheetCount</a>  |
|  | <a href="#">GetNextFace</a>           |
|  | <a href="#">GetNextFaceArray</a>      |
|  | <a href="#">GetNextFacePair</a>       |
|  | <a href="#">GetNextNeutralSheet</a>   |
|  | <a href="#">IEdgeGetFace</a>          |
|  | <a href="#">IGetFirstFace</a>         |
|  | <a href="#">IGetFirstFaceArray</a>    |
|  | <a href="#">IGetFirstFacePair</a>     |
|  | <a href="#">IGetFirstNeutralSheet</a> |
|  | <a href="#">IGetNextFace</a>          |
|  | <a href="#">IGetNextFaceArray</a>     |

 [IGetNextFacePair](#)

 [IGetNextNeutralSheet](#)

SOLIDWORKS Type Library

### EdgeGetFace Method (MidSurface)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function EdgeGetFace( _  
    ByVal EdgeInDisp As Object _  
) As Object
```

SOLIDWORKS Type Library

### GetFaceCount Method (MidSurface)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFaceCount() As Long
```

SOLIDWORKS Type Library

### GetFacePairCount Method (MidSurface)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacePairCount() As Long
```

SOLIDWORKS Type Library

### GetFirstFace Method (MidSurface)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstFace( _  
    ByRef FromFace1Disp As Object, _  
    ByRef FromFace2Disp As Object, _  
    ByRef Thickness As Double _  
) As Object
```

SOLIDWORKS Type Library

### GetFirstFaceArray Method (MidSurface)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstFaceArray( _  
    ByRef Thickness As Double _  
) As Variant
```

SOLIDWORKS Type Library

### GetFirstFacePair Method (MidSurface)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Object _  
) As Object
```

SOLIDWORKS Type Library

### GetFirstNeutralSheet Method (MidSurface)



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstNeutralSheet() As Object
```

SOLIDWORKS Type Library

**GetNeutralSheetCount Method (MidSurface)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNeutralSheetCount() As Long
```

SOLIDWORKS Type Library

**GetNextFace Method (MidSurface)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFace( _  
    ByRef FromFace1Disp As Object, _  
    ByRef FromFace2Disp As Object, _  
    ByRef Thickness As Double _  
    ) As Object
```

SOLIDWORKS Type Library

**GetNextFaceArray Method (MidSurface)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFaceArray( _  
    ByRef Thickness As Double _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetNextFacePair Method (MidSurface)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Object _  
    ) As Object
```

SOLIDWORKS Type Library

**GetNextNeutralSheet Method (MidSurface)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextNeutralSheet() As Object
```

SOLIDWORKS Type Library

**IEdgeGetFace Method (MidSurface)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function IEdgeGetFace( _  
    ByVal EdgeInDisp As Edge _  
    ) As Face
```

SOLIDWORKS Type Library

## IGetFirstFace Method (MidSurface)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstFace( _  
    ByRef FromFace1Disp As Face, _  
    ByRef FromFace2Disp As Face, _  
    ByRef Thickness As Double _  
    ) As Face
```

SOLIDWORKS Type Library

## IGetFirstFaceArray Method (MidSurface)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstFaceArray( _  
    ByRef FromFrontFaceListDisp As Face, _  
    ByRef SizeOfFrontFaceList As Long, _  
    ByRef FromFaceBackListDisp As Face, _  
    ByRef SizeOfBackFaceList As Long, _  
    ByRef Thickness As Double _  
    ) As Face
```

SOLIDWORKS Type Library

## IGetFirstFacePair Method (MidSurface)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Face _  
    ) As Face
```

SOLIDWORKS Type Library

## IGetFirstNeutralSheet Method (MidSurface)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstNeutralSheet() As Body
```

SOLIDWORKS Type Library

## IGetNextFace Method (MidSurface)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNextFace( _  
    ByRef FromFace1Disp As Face, _  
    ByRef FromFace2Disp As Face, _  
    ByRef Thickness As Double _  
    ) As Face
```

SOLIDWORKS Type Library

## IGetNextFaceArray Method (MidSurface)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNextFaceArray( _  
    ByRef FromFrontFaceListDisp As Face, _  
    ByRef SizeOfFrontFaceList As Long, _  
    ByRef FromFaceBackListDisp As Face, _
```

```
ByRef SizeOfBackFaceList As Long, _  
ByRef Thickness As Double _  
) As Face
```

SOLIDWORKS Type Library

**IGetNextFacePair Method (MidSurface)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNextFacePair( _  
ByRef Thickness As Double, _  
ByRef PartnerFaceDisp As Face _  
) As Face
```

SOLIDWORKS Type Library

**IGetNextNeutralSheet Method (MidSurface)**

#### Syntax


Visual Basic for Applications (VBA)

```
Public Function IGetNextNeutralSheet() As Body
```

# MidSurface2 (Type)

SOLIDWORKS Type Library  
MidSurface2 Object

Object Model

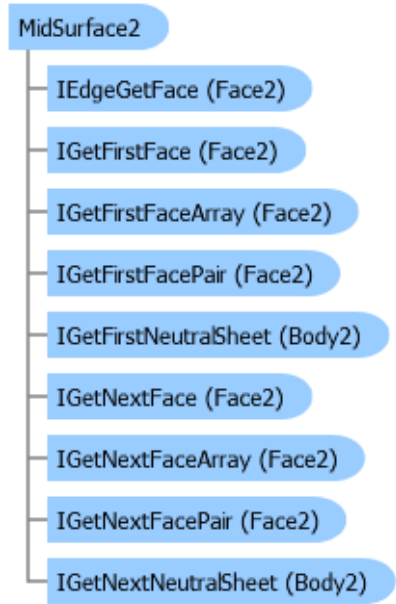

SOLIDWORKS Type Library  
MidSurface2 Object Members

Public Methods

|  |                                       |
|--|---------------------------------------|
|  | <a href="#">EdgeGetFace</a>           |
|  | <a href="#">GetFaceCount</a>          |
|  | <a href="#">GetFacePairCount</a>      |
|  | <a href="#">GetFirstFace</a>          |
|  | <a href="#">GetFirstFaceArray</a>     |
|  | <a href="#">GetFirstFacePair</a>      |
|  | <a href="#">GetFirstNeutralSheet</a>  |
|  | <a href="#">GetNeutralSheetCount</a>  |
|  | <a href="#">GetNextFace</a>           |
|  | <a href="#">GetNextFaceArray</a>      |
|  | <a href="#">GetNextFacePair</a>       |
|  | <a href="#">GetNextNeutralSheet</a>   |
|  | <a href="#">IEdgeGetFace</a>          |
|  | <a href="#">IGetFirstFace</a>         |
|  | <a href="#">IGetFirstFaceArray</a>    |
|  | <a href="#">IGetFirstFacePair</a>     |
|  | <a href="#">IGetFirstNeutralSheet</a> |
|  | <a href="#">IGetNextFace</a>          |
|  | <a href="#">IGetNextFaceArray</a>     |

 [IGetNextFacePair](#)

 [IGetNextNeutralSheet](#)

SOLIDWORKS Type Library

### EdgeGetFace Method (MidSurface2)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function EdgeGetFace( _  
    ByVal EdgeInDisp As Object _  
) As Object
```

SOLIDWORKS Type Library

### GetFaceCount Method (MidSurface2)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFaceCount() As Long
```

SOLIDWORKS Type Library

### GetFacePairCount Method (MidSurface2)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacePairCount() As Long
```

SOLIDWORKS Type Library

### GetFirstFace Method (MidSurface2)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstFace( _  
    ByRef FromFace1Disp As Object, _  
    ByRef FromFace2Disp As Object, _  
    ByRef Thickness As Double _  
) As Object
```

SOLIDWORKS Type Library

### GetFirstFaceArray Method (MidSurface2)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstFaceArray( _  
    ByRef Thickness As Double _  
) As Variant
```

SOLIDWORKS Type Library

### GetFirstFacePair Method (MidSurface2)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Object _  
) As Object
```

SOLIDWORKS Type Library

### GetFirstNeutralSheet Method (MidSurface2)



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstNeutralSheet() As Object
```

SOLIDWORKS Type Library

**GetNeutralSheetCount Method (MidSurface2)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNeutralSheetCount() As Long
```

SOLIDWORKS Type Library

**GetNextFace Method (MidSurface2)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFace( _  
    ByRef FromFace1Disp As Object, _  
    ByRef FromFace2Disp As Object, _  
    ByRef Thickness As Double _  
    ) As Object
```

SOLIDWORKS Type Library

**GetNextFaceArray Method (MidSurface2)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFaceArray( _  
    ByRef Thickness As Double _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetNextFacePair Method (MidSurface2)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Object _  
    ) As Object
```

SOLIDWORKS Type Library

**GetNextNeutralSheet Method (MidSurface2)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextNeutralSheet() As Object
```

SOLIDWORKS Type Library

**IEdgeGetFace Method (MidSurface2)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function IEdgeGetFace( _  
    ByVal EdgeInDisp As Edge _  
    ) As Face2
```

SOLIDWORKS Type Library

## IGetFirstFace Method (MidSurface2)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstFace( _  
    ByRef FromFace1Disp As Face2, _  
    ByRef FromFace2Disp As Face2, _  
    ByRef Thickness As Double _  
    ) As Face2
```

SOLIDWORKS Type Library

## IGetFirstFaceArray Method (MidSurface2)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstFaceArray( _  
    ByRef FromFrontFaceListDisp As Face2, _  
    ByRef SizeOfFrontFaceList As Long, _  
    ByRef FromFaceBackListDisp As Face2, _  
    ByRef SizeOfBackFaceList As Long, _  
    ByRef Thickness As Double _  
    ) As Face2
```

SOLIDWORKS Type Library

## IGetFirstFacePair Method (MidSurface2)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Face2 _  
    ) As Face2
```

SOLIDWORKS Type Library

## IGetFirstNeutralSheet Method (MidSurface2)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstNeutralSheet() As Body2
```

SOLIDWORKS Type Library

## IGetNextFace Method (MidSurface2)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNextFace( _  
    ByRef FromFace1Disp As Face2, _  
    ByRef FromFace2Disp As Face2, _  
    ByRef Thickness As Double _  
    ) As Face2
```

SOLIDWORKS Type Library

## IGetNextFaceArray Method (MidSurface2)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNextFaceArray( _  
    ByRef FromFrontFaceListDisp As Face2, _  
    ByRef SizeOfFrontFaceList As Long, _  
    ByRef FromFaceBackListDisp As Face2, _
```

```
ByRef SizeOfBackFaceList As Long, _  
ByRef Thickness As Double _  
) As Face2
```

SOLIDWORKS Type Library

**IGetNextFacePair Method (MidSurface2)**



Visual Basic for Applications (VBA)

```
Public Function IGetNextFacePair( _  
ByRef Thickness As Double, _  
ByRef PartnerFaceDisp As Face2 _  
) As Face2
```

SOLIDWORKS Type Library

**IGetNextNeutralSheet Method (MidSurface2)**



Visual Basic for Applications (VBA)


```
Public Function IGetNextNeutralSheet() As Body2
```

# MidSurface3 (Type)

SOLIDWORKS Type Library

MidSurface3 Object

## Object Model

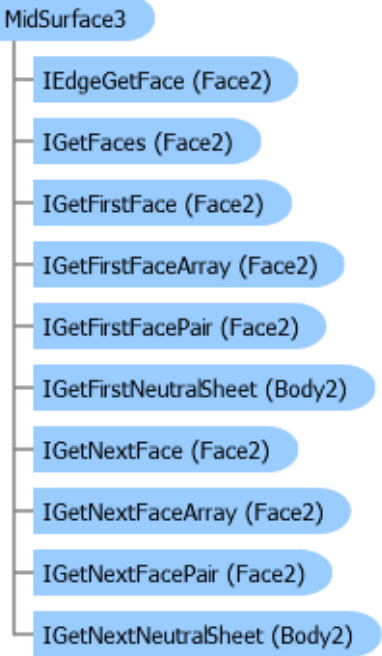

SOLIDWORKS Type Library

MidSurface3 Object Members

## Public Methods

|  |                                      |
|--|--------------------------------------|
|  | <a href="#">EdgeGetFace</a>          |
|  | <a href="#">GetFaceCount</a>         |
|  | <a href="#">GetFacePairCount</a>     |
|  | <a href="#">GetFaces</a>             |
|  | <a href="#">GetFirstFace</a>         |
|  | <a href="#">GetFirstFaceArray</a>    |
|  | <a href="#">GetFirstFacePair</a>     |
|  | <a href="#">GetFirstNeutralSheet</a> |
|  | <a href="#">GetNeutralSheetCount</a> |
|  | <a href="#">GetNextFace</a>          |
|  | <a href="#">GetNextFaceArray</a>     |
|  | <a href="#">GetNextFacePair</a>      |
|  | <a href="#">GetNextNeutralSheet</a>  |
|  | <a href="#">IEdgeGetFace</a>         |
|  | <a href="#">IGetFaces</a>            |
|  | <a href="#">IGetFirstFace</a>        |
|  | <a href="#">IGetFirstFaceArray</a>   |
|  | <a href="#">IGetFirstFacePair</a>    |

|                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------|
|  <a href="#">IGetFirstNeutralSheet</a> |
|  <a href="#">IGetNextFace</a>          |
|  <a href="#">IGetNextFaceArray</a>     |
|  <a href="#">IGetNextFacePair</a>      |
|  <a href="#">IGetNextNeutralSheet</a>  |

SOLIDWORKS Type Library

### EdgeGetFace Method (MidSurface3)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function EdgeGetFace( _  
    ByVal EdgeInDisp As Object _  
) As Object
```

SOLIDWORKS Type Library

### GetFaceCount Method (MidSurface3)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFaceCount() As Long
```

SOLIDWORKS Type Library

### GetFacePairCount Method (MidSurface3)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacePairCount() As Long
```

SOLIDWORKS Type Library

### GetFaces Method (MidSurface3)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFaces() As Variant
```

SOLIDWORKS Type Library

### GetFirstFace Method (MidSurface3)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstFace( _  
    ByRef FromFace1Disp As Object, _  
    ByRef FromFace2Disp As Object, _  
    ByRef Thickness As Double _  
) As Object
```

SOLIDWORKS Type Library

### GetFirstFaceArray Method (MidSurface3)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstFaceArray( _  
    ByRef Thickness As Double _  
) As Variant
```

SOLIDWORKS Type Library

## GetFirstFacePair Method (MidSurface3)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Object _  
) As Object
```

SOLIDWORKS Type Library

## GetFirstNeutralSheet Method (MidSurface3)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFirstNeutralSheet() As Object
```

SOLIDWORKS Type Library

## GetNeutralSheetCount Method (MidSurface3)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNeutralSheetCount() As Long
```

SOLIDWORKS Type Library

## GetNextFace Method (MidSurface3)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFace( _  
    ByRef FromFace1Disp As Object, _  
    ByRef FromFace2Disp As Object, _  
    ByRef Thickness As Double _  
) As Object
```

SOLIDWORKS Type Library

## GetNextFaceArray Method (MidSurface3)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFaceArray( _  
    ByRef Thickness As Double _  
) As Variant
```

SOLIDWORKS Type Library

## GetNextFacePair Method (MidSurface3)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Object _  
) As Object
```

SOLIDWORKS Type Library

## GetNextNeutralSheet Method (MidSurface3)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNextNeutralSheet() As Object
```

SOLIDWORKS Type Library

**IEdgeGetFace Method (MidSurface3)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IEdgeGetFace( _  
    ByVal EdgeInDisp As Edge _  
    ) As Face2
```

SOLIDWORKS Type Library

**IGetFaces Method (MidSurface3)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFaces( _  
    ByVal NumFaces As Long _  
    ) As Face2
```

SOLIDWORKS Type Library

**IGetFirstFace Method (MidSurface3)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstFace( _  
    ByRef FromFace1Disp As Face2, _  
    ByRef FromFace2Disp As Face2, _  
    ByRef Thickness As Double _  
    ) As Face2
```

SOLIDWORKS Type Library

**IGetFirstFaceArray Method (MidSurface3)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstFaceArray( _  
    ByRef FromFrontFaceListDisp As Face2, _  
    ByRef SizeOfFrontFaceList As Long, _  
    ByRef FromFaceBackListDisp As Face2, _  
    ByRef SizeOfBackFaceList As Long, _  
    ByRef Thickness As Double _  
    ) As Face2
```

SOLIDWORKS Type Library

**IGetFirstFacePair Method (MidSurface3)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFirstFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Face2 _  
    ) As Face2
```

SOLIDWORKS Type Library

**IGetFirstNeutralSheet Method (MidSurface3)**

#### Syntax

Visual Basic for Applications (VBA)

Public Function IGetFirstNeutralSheet() As [Body2](#)

SOLIDWORKS Type Library

**IGetNextFace Method (MidSurface3)**

 **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetNextFace( _  
    ByRef FromFace1Disp As Face2, _  
    ByRef FromFace2Disp As Face2, _  
    ByRef Thickness As Double _  
) As Face2
```

SOLIDWORKS Type Library

**IGetNextFaceArray Method (MidSurface3)**

 **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetNextFaceArray( _  
    ByRef FromFrontFaceListDisp As Face2, _  
    ByRef SizeOfFrontFaceList As Long, _  
    ByRef FromFaceBackListDisp As Face2, _  
    ByRef SizeOfBackFaceList As Long, _  
    ByRef Thickness As Double _  
) As Face2
```

SOLIDWORKS Type Library

**IGetNextFacePair Method (MidSurface3)**

 **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetNextFacePair( _  
    ByRef Thickness As Double, _  
    ByRef PartnerFaceDisp As Face2 _  
) As Face2
```

SOLIDWORKS Type Library

**IGetNextNeutralSheet Method (MidSurface3)**

 **Syntax**

Visual Basic for Applications (VBA)

```
Public Function IGetNextNeutralSheet() As Body2
```