

SOLIDWORKS API (VB6 COM) — Reference (68/102): ModelView-MotionPlotFeatureData


SOLIDWORKS API Documentation (converted from CHM)

ModelView (Type)

SOLIDWORKS Type Library

ModelView Object

Object Model

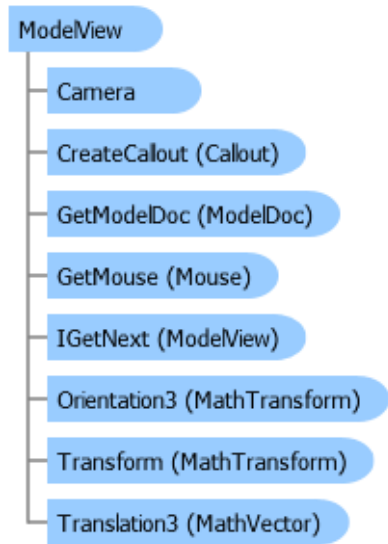

SOLIDWORKS Type Library

ModelView Object Members

Public Methods

	Activate
	AddPerspective
	CreateCallout
	DrawHighlightedItems
	DrawTransparentFeatureTree
	GetBkgdImageDisplayAreaAspectRatio
	GetDIBHeader
	GetDIBHeaderx64
	GetDisplayState
	GetEyePoint
	GetIsoPlaneDistance
	GetModelDoc
	GetMouse
	GetNext
	GetStereoSeparation
	GetStripsOFDIB
	GetStripsOFDIBx64
	GetViewDIB
	GetViewDIBx64
	GetViewHWnd
	GetViewHWndx64

	GetViewPlaneDistance
	GetVisibleBox
	GraphicsRedraw
	HasPerspective
	HideMagnifyingGlass
	IGetEyePoint
	IGetNext
	IGetStereoSeparation
	IGetVisibleBox
	IGraphicsRedraw
	InitializeShading
	ISetEyePoint
	ISetStereoSeparation
	MoveMagnifyingGlass
	ProjectModelPoint
	RemovePerspective
	RollBy
	RotateAboutAxis
	RotateAboutCenter
	RotateAboutPoint
	SectionAnnotationViewAttr
	SetCameraByName
	SetEyePoint
	SetStereoSeparation
	ShowMagnifyingGlass
	StartDynamics
	StopDynamics
	TranslateBy
	TurnBy
	UnprojectModelPoint
	ZoomByFactor

Public Properties

	Camera
	DisplayMode
	DisplayZebraStripes
	DynamicMode
	EnableGraphicsUpdate
	FrameHeight
	FrameLeft
	FrameState
	FrameTop
	FrameWidth

 HlrQuality
 IOrientation
 IOrientation2
 ITranslation
 ITranslation2
 IXform
 Linked
 ObjectSizesAway
 Orientation
 Orientation2
 Orientation3
 Scale
 Scale2
 SuppressWaitCursorDuringRedraw
 Transform
 Translation
 Translation2
 Translation3
 UpAxisFlyout
 UpdateAllGraphicsLayers
 VisibilityViewTools
 Xform
 XorHighlight

Events

 BufferSwapNotify
 DestroyNotify
 DestroyNotify2
 DisplayModeChangePostNotify
 DisplayModeChangePreNotify
 GraphicsRenderPostNotify
 PerspectiveViewNotify
 PrintNotify
 PrintNotify2
 RenderLayer0Notify
 RepaintNotify
 RepaintPostNotify
 UserClearSelectionsNotify
 ViewChangeNotify

SOLIDWORKS Type Library

Activate Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub Activate()
```

SOLIDWORKS Type Library

AddPerspective Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub AddPerspective()
```

SOLIDWORKS Type Library

BufferSwapNotify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event BufferSwapNotify()
```

SOLIDWORKS Type Library

Camera Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Camera As Camera
```

SOLIDWORKS Type Library

CreateCallout Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateCallout( _  
    ByVal NumberOfRows As Long, _  
    ByVal LpHandler As Object _  
    ) As Callout
```

SOLIDWORKS Type Library

DestroyNotify2 Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event DestroyNotify2( _  
    ByVal DestroyType As Long _  
    )
```

SOLIDWORKS Type Library

DestroyNotify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event DestroyNotify()
```

SOLIDWORKS Type Library

DisplayMode Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

Public Property DisplayMode As Long

SOLIDWORKS Type Library

DisplayModeChangePostNotify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

Public Event DisplayModeChangePostNotify()

SOLIDWORKS Type Library

DisplayModeChangePreNotify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

Public Event DisplayModeChangePreNotify()

SOLIDWORKS Type Library

DisplayZebraStripes Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

Public Property DisplayZebraStripes As Boolean

SOLIDWORKS Type Library

DrawHighlightedItems Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

Public Sub DrawHighlightedItems()

SOLIDWORKS Type Library

DrawTransparentFeatureTree Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

Public Sub DrawTransparentFeatureTree()

SOLIDWORKS Type Library

DynamicMode Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

Public Property DynamicMode As Long

SOLIDWORKS Type Library

EnableGraphicsUpdate Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

Public Property EnableGraphicsUpdate As Boolean

SOLIDWORKS Type Library

FrameHeight Property (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FrameHeight As Integer
```

SOLIDWORKS Type Library

FrameLeft Property (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FrameLeft As Integer
```

SOLIDWORKS Type Library

FrameState Property (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FrameState As Integer
```

SOLIDWORKS Type Library

FrameTop Property (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FrameTop As Integer
```

SOLIDWORKS Type Library

FrameWidth Property (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Property FrameWidth As Integer
```

SOLIDWORKS Type Library

GetBgkdImageDisplayAreaAspectRatio Method (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBgkdImageDisplayAreaAspectRatio() As Double
```

SOLIDWORKS Type Library

GetDIBHeader Method (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetDIBHeader( _  
    ByVal Ldib As Long _  
)
```

SOLIDWORKS Type Library

GetDIBHeaderx64 Method (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetDIBHeaderx64( _  
    ByVal Ldib As Unknown _  
)
```

SOLIDWORKS Type Library

GetDisplayState Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayState( _  
    ByVal DisplayType As Long _  
) As Boolean
```

SOLIDWORKS Type Library

GetEyePoint Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEyePoint() As Variant
```

SOLIDWORKS Type Library

GetIsoPlaneDistance Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetIsoPlaneDistance() As Double
```

SOLIDWORKS Type Library

GetModelDoc Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetModelDoc() As ModelDoc
```

SOLIDWORKS Type Library

GetMouse Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetMouse() As Mouse
```

SOLIDWORKS Type Library

GetNext Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNext() As Object
```

SOLIDWORKS Type Library

GetStereoSeparation Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetStereoSeparation() As Variant
```

SOLIDWORKS Type Library

GetStripsOfDIB Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetStripsOfDIB( _  
    ByVal Ldib As Long, _  
    ByVal NScanLinesPerStrip As Long, _  
    ByVal StripIndex As Long _  
)
```

SOLIDWORKS Type Library

GetStripsOfDIBx64 Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetStripsOfDIBx64( _  
    ByVal Ldib As Unknown, _  
    ByVal NScanLinesPerStrip As Long, _  
    ByVal StripIndex As Long _  
)
```

SOLIDWORKS Type Library

GetViewDIB Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetViewDIB() As Long
```

SOLIDWORKS Type Library

GetViewDIBx64 Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetViewDIBx64() As Unknown
```

SOLIDWORKS Type Library

GetViewHWnd Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetViewHWnd() As Long
```

SOLIDWORKS Type Library

GetViewHWndx64 Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetViewHWndx64() As Unknown
```

SOLIDWORKS Type Library

GetViewPlaneDistance Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetViewPlaneDistance() As Double
```

SOLIDWORKS Type Library

GetVisibleBox Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetVisibleBox() As Variant
```

SOLIDWORKS Type Library

GraphicsRedraw Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GraphicsRedraw( _  
    ByVal Rect As Variant _  
)
```

SOLIDWORKS Type Library

GraphicsRenderPostNotify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event GraphicsRenderPostNotify()
```

SOLIDWORKS Type Library

HasPerspective Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function HasPerspective() As Boolean
```

SOLIDWORKS Type Library

HideMagnifyingGlass Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub HideMagnifyingGlass()
```

SOLIDWORKS Type Library

HlrQuality Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property HlrQuality As Long
```

SOLIDWORKS Type Library

IGetEyePoint Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub IGetEyePoint( _  
    ByRef Eyept As Double _  
)
```

SOLIDWORKS Type Library

IGetNext Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNext() As ModelView
```

SOLIDWORKS Type Library

IGetStereoSeparation Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetStereoSeparation() As Double
```

SOLIDWORKS Type Library

IGetVisibleBox Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetVisibleBox() As Long
```

SOLIDWORKS Type Library

IGraphicsRedraw Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub IGraphicsRedraw( _  
    ByRef Rect As Long _  
)
```

SOLIDWORKS Type Library

InitializeShading Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub InitializeShading()
```

SOLIDWORKS Type Library

IOrientation Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property IOrientation As Double
```

SOLIDWORKS Type Library

IOrientation2 Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property IOrientation2 As Double
```

SOLIDWORKS Type Library

ISetEyePoint Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ISetEyePoint( _  
    ByRef Eyept As Double _  
) As Boolean
```

SOLIDWORKS Type Library

ISetStereoSeparation Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ISetStereoSeparation( _  
    ByRef DfSeparation As Double _  
) As Boolean
```

SOLIDWORKS Type Library

ITranslation Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ITranslation As Double
```

SOLIDWORKS Type Library

ITranslation2 Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ITranslation2 As Double
```

SOLIDWORKS Type Library

IXform Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property IXform As Double
```

SOLIDWORKS Type Library

Linked Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Linked As Boolean
```

SOLIDWORKS Type Library

MoveMagnifyingGlass Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub MoveMagnifyingGlass( _  
    ByVal Ptx As Double, _  
    ByVal Pty As Double, _  
    ByVal Ptz As Double _  
)
```

SOLIDWORKS Type Library

ObjectSizesAway Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ObjectSizesAway As Double
```

SOLIDWORKS Type Library

Orientation Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Orientation As Variant
```

SOLIDWORKS Type Library

Orientation2 Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Orientation2 As Variant
```

SOLIDWORKS Type Library

Orientation3 Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Orientation3 As MathTransform
```

SOLIDWORKS Type Library

PerspectiveViewNotify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event PerspectiveViewNotify( _  
    ByVal Left As Double, _  
    ByVal Right As Double, _  
    ByVal bottom As Double, _  
    ByVal Top As Double, _  
    ByVal zNear As Double, _  
    ByVal zFar As Double _  
)
```

SOLIDWORKS Type Library

PrintNotify2 Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event PrintNotify2( _  
    ByVal pDC As Unknown, _  
    ByVal bPreview As Boolean _  
)
```

SOLIDWORKS Type Library

PrintNotify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event PrintNotify( _  
    ByVal pDC As Unknown _  
)
```

SOLIDWORKS Type Library

ProjectModelPoint Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ProjectModelPoint( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double, _
```

```
ByRef XOut As Double, _  
ByRef YOut As Double, _  
ByRef ZOut As Double _  
)
```

SOLIDWORKS Type Library

RemovePerspective Method (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub RemovePerspective()
```

SOLIDWORKS Type Library

RenderLayer0Notify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event RenderLayer0Notify()
```

SOLIDWORKS Type Library

RepaintNotify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event RepaintNotify( _  
    ByVal paintType As Long _  
)
```

SOLIDWORKS Type Library

RepaintPostNotify Event (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Event RepaintPostNotify()
```

SOLIDWORKS Type Library

RollBy Method (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub RollBy( _  
    ByVal Angle As Double _  
)
```

SOLIDWORKS Type Library

RotateAboutAxis Method (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub RotateAboutAxis( _  
    ByVal Angle As Double, _  
    ByVal Ptx As Double, _  
    ByVal Pty As Double, _  
    ByVal Ptz As Double, _  
    ByVal AxisVecX As Double, _
```

```
    ByVal AxisVecY As Double, _  
    ByVal AxisVecZ As Double _  
)
```

SOLIDWORKS Type Library

RotateAboutCenter Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub RotateAboutCenter( _  
    ByVal XAngle As Double, _  
    ByVal YAngle As Double _  
)
```

SOLIDWORKS Type Library

RotateAboutPoint Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub RotateAboutPoint( _  
    ByVal XAngle As Double, _  
    ByVal YAngle As Double, _  
    ByVal Ptx As Double, _  
    ByVal Pty As Double, _  
    ByVal Ptz As Double _  
)
```

SOLIDWORKS Type Library

Scale Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Scale As Double
```

SOLIDWORKS Type Library

Scale2 Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Scale2 As Double
```

SOLIDWORKS Type Library

SectionAnnotationViewAttr Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SectionAnnotationViewAttr( _  
    ByVal BarrayIn As Boolean, _  
    ByVal DistIn As Double, _  
    ByVal LabelIn As String _  
)
```

SOLIDWORKS Type Library

SetCameraByName Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetCameraByName( _  
    ByVal Name As String _  
    ) As Boolean
```

SOLIDWORKS Type Library

SetEyePoint Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetEyePoint( _  
    ByVal Eyept As Variant _  
    ) As Boolean
```

SOLIDWORKS Type Library

SetStereoSeparation Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetStereoSeparation( _  
    ByVal DfSeparation As Variant _  
    ) As Boolean
```

SOLIDWORKS Type Library

ShowMagnifyingGlass Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ShowMagnifyingGlass( _  
    ByVal Ptx As Double, _  
    ByVal Pty As Double, _  
    ByVal Ptz As Double, _  
    ByVal ZoomFactor As Double, _  
    ByVal HideOnClick As Boolean, _  
    ByVal FollowMouse As Boolean _  
    )
```

SOLIDWORKS Type Library

StartDynamics Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub StartDynamics()
```

SOLIDWORKS Type Library

StopDynamics Method (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub StopDynamics()
```

SOLIDWORKS Type Library

SuppressWaitCursorDuringRedraw Property (ModelView)

Syntax

Visual Basic for Applications (VBA)

```
Public Property SuppressWaitCursorDuringRedraw As Boolean
```

SOLIDWORKS Type Library

Transform Property (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Property Transform As MathTransform
```

SOLIDWORKS Type Library

TranslateBy Method (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub TranslateBy( _  
    ByVal X As Double, _  
    ByVal Y As Double _  
)
```

SOLIDWORKS Type Library

Translation Property (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Property Translation As Variant
```

SOLIDWORKS Type Library

Translation2 Property (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Property Translation2 As Variant
```

SOLIDWORKS Type Library

Translation3 Property (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Property Translation3 As MathVector
```

SOLIDWORKS Type Library

TurnBy Method (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub TurnBy( _  
    ByVal XAngle As Double, _  
    ByVal YAngle As Double _  
)
```

SOLIDWORKS Type Library

UnprojectModelPoint Method (ModelView)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub UnprojectModelPoint( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double, _  
    ByRef XOut As Double, _  
    ByRef YOut As Double, _
```

```
ByRef ZOut As Double _  
)
```

SOLIDWORKS Type Library

UpAxisFlyout Property (ModelView)

 Syntax

Visual Basic for Applications (VBA)

```
Public Property UpAxisFlyout As Long
```

SOLIDWORKS Type Library

UpdateAllGraphicsLayers Property (ModelView)

 Syntax

Visual Basic for Applications (VBA)

```
Public Property UpdateAllGraphicsLayers As Boolean
```

SOLIDWORKS Type Library

UserClearSelectionsNotify Event (ModelView)



 Syntax

Visual Basic for Applications (VBA)

```
Public Event UserClearSelectionsNotify()
```

SOLIDWORKS Type Library

ViewChangeNotify Event (ModelView)



 Syntax

Visual Basic for Applications (VBA)

```
Public Event ViewChangeNotify( _  
    ByVal View As Variant _  
)
```

SOLIDWORKS Type Library

VisibilityViewTools Property (ModelView)

 Syntax

Visual Basic for Applications (VBA)

```
Public Property VisibilityViewTools As Boolean
```

SOLIDWORKS Type Library

Xform Property (ModelView)

 Syntax

Visual Basic for Applications (VBA)

```
Public Property Xform As Variant
```

SOLIDWORKS Type Library

XorHighlight Property (ModelView)

 Syntax

Visual Basic for Applications (VBA)

```
Public Property XorHighlight As Boolean
```

SOLIDWORKS Type Library



Syntax

Visual Basic for Applications (VBA)

```
Public Sub ZoomByFactor( _  
    ByVal Factor As Double _  
)
```

ModelViewManager (Type)

SOLIDWORKS Type Library

ModelViewManager Object

Object Model



SOLIDWORKS Type Library

ModelViewManager Object Members

Public Methods

	ActivateControlTab
	ActivateModelTab
	AddControl
	AddControl2
	AddControl3
	AddSnapShot
	CreateFeatureMgrControl
	CreateFeatureMgrControl2
	CreateFeatureMgrControl3
	CreateFeatureMgrControl4
	CreateFeatureMgrView
	CreateFeatureMgrView2

 CreateFeatureMgrWindowFromHandle
 CreateFeatureMgrWindowFromHandlex64
 CreateManipulator
 CreateSectionView
 CreateSectionViewData
 DeleteControlTab
 DeleteSnapshot
 DisplayWindowFromHandle
 DisplayWindowFromHandlex64
 GetConfigurationManagerTabIndex
 GetControl
 GetDimXpertManagerTabIndex
 GetDisplayManagerTabIndex
 GetFeatureManagerTabs
 GetFeatureManagerTreeTabIndex
 GetFeatureMgrViewHWnd
 GetFeatureMgrViewHWndx64
 GetPropertyManagerTabIndex
 GetSectionViewData
 GetSnapshot
 GetSnapshots
 IGetControl
 IsControlTabActive
 IsModelTabActive
 RemoveSectionView

Public Properties

 ActiveFeatureManagerTabIndex
 Document
 FeatureManagerTabsVisible
 LinkedViews
 ViewportDisplay

SOLIDWORKS Type Library

ActivateControlTab Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ActivateControlTab( _
    ByVal Name As String _
) As Boolean
```

SOLIDWORKS Type Library

ActivateModelTab Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ActivateModelTab() As Boolean
```

ActiveFeatureManagerTabIndex Property (ModelViewManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Property ActiveFeatureManagerTabIndex As Long
```

AddControl Method (ModelViewManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function AddControl( _  
    ByVal Name As String, _  
    ByVal ControlName As String, _  
    ByVal BstrLicKey As String _  
) As Unknown
```

AddControl2 Method (ModelViewManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function AddControl2( _  
    ByVal Name As String, _  
    ByVal ControlName As String, _  
    ByVal BstrLicKey As String _  
) As Unknown
```

AddControl3 Method (ModelViewManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function AddControl3( _  
    ByVal Name As String, _  
    ByVal ControlName As String, _  
    ByVal BstrLicKey As String, _  
    ByVal SplitWindow As Boolean _  
) As Unknown
```

AddSnapShot Method (ModelViewManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function AddSnapShot( _  
    ByVal SnapShotName As String _  
) As SnapShot
```

CreateFeatureMgrControl Method (ModelViewManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function CreateFeatureMgrControl( _  
    ByVal PPicture As Object, _  
    ByVal Class As String, _  
    ByVal LicKey As String, _  
    ByVal ToolTip As String, _
```

```
ByVal WhichPane As Long _  
) As FeatMgrView
```

SOLIDWORKS Type Library

CreateFeatureMgrControl2 Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateFeatureMgrControl2( _  
    ByVal BitMapFile As String, _  
    ByVal Class As String, _  
    ByVal LicKey As String, _  
    ByVal ToolTip As String, _  
    ByVal WhichPane As Long _  
) As FeatMgrView
```

SOLIDWORKS Type Library

CreateFeatureMgrControl3 Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateFeatureMgrControl3( _  
    ByVal BitMapFile As String, _  
    ByVal Class As String, _  
    ByVal LicKey As String, _  
    ByVal ToolTip As String, _  
    ByVal WhichPane As Long _  
) As FeatMgrView
```

SOLIDWORKS Type Library

CreateFeatureMgrControl4 Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateFeatureMgrControl4( _  
    ByVal BitMapFileNames As Variant, _  
    ByVal Class As String, _  
    ByVal LicKey As String, _  
    ByVal ToolTip As String, _  
    ByVal WhichPane As Long _  
) As FeatMgrView
```

SOLIDWORKS Type Library

CreateFeatureMgrView Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateFeatureMgrView( _  
    ByVal PPicture As Object, _  
    ByVal ToolTip As String, _  
    ByVal WhichPane As Long _  
) As FeatMgrView
```

SOLIDWORKS Type Library

CreateFeatureMgrView2 Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateFeatureMgrView2( _  
    ByVal BitMapFile As String, _  
    ByVal ToolTip As String, _
```

```
ByVal WhichPane As Long _  
) As FeatMgrView
```

SOLIDWORKS Type Library

CreateFeatureMgrWindowFromHandle Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateFeatureMgrWindowFromHandle( _  
    ByVal BitMapFile As String, _  
    ByVal WindowHandle As Long, _  
    ByVal ToolTip As String, _  
    ByVal WhichPane As Long _  
) As FeatMgrView
```

SOLIDWORKS Type Library

CreateFeatureMgrWindowFromHandlex64 Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateFeatureMgrWindowFromHandlex64( _  
    ByVal BitMapFile As String, _  
    ByVal WindowHandle As Unknown, _  
    ByVal ToolTip As String, _  
    ByVal WhichPane As Long _  
) As FeatMgrView
```

SOLIDWORKS Type Library

CreateManipulator Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateManipulator( _  
    ByVal Type As Long, _  
    ByVal PHandler As Object _  
) As Manipulator
```

SOLIDWORKS Type Library

CreateSectionView Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateSectionView( _  
    ByVal SectionData As SectionViewData _  
) As Boolean
```

SOLIDWORKS Type Library

CreateSectionViewData Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateSectionViewData() As SectionViewData
```

SOLIDWORKS Type Library

DeleteControlTab Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function DeleteControlTab( _  
    ByVal Name As String _
```

) As Boolean

SOLIDWORKS Type Library

DeleteSnapShot Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function DeleteSnapShot( _  
    ByVal SnapShotName As String _  
) As Boolean
```

SOLIDWORKS Type Library

DisplayWindowFromHandle Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function DisplayWindowFromHandle( _  
    ByVal Name As String, _  
    ByVal WindowHandle As Long, _  
    ByVal SplitWindow As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

DisplayWindowFromHandlex64 Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function DisplayWindowFromHandlex64( _  
    ByVal Name As String, _  
    ByVal WindowHandle As Unknown, _  
    ByVal SplitWindow As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

Document Property (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Document As ModelDoc2
```

SOLIDWORKS Type Library

FeatureManagerTabsVisible Property (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property FeatureManagerTabsVisible As Boolean
```

SOLIDWORKS Type Library

GetConfigurationManagerTabIndex Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetConfigurationManagerTabIndex() As Long
```

SOLIDWORKS Type Library

GetControl Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetControl( _  
    ByVal Name As String _  
    ) As Object
```

SOLIDWORKS Type Library

GetDimXpertManagerTabIndex Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDimXpertManagerTabIndex() As Long
```

SOLIDWORKS Type Library

GetDisplayManagerTabIndex Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayManagerTabIndex() As Long
```

SOLIDWORKS Type Library

GetFeatureManagerTabs Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFeatureManagerTabs() As Variant
```

SOLIDWORKS Type Library

GetFeatureManagerTreeTabIndex Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFeatureManagerTreeTabIndex() As Long
```

SOLIDWORKS Type Library

GetFeatureMgrViewHWnd Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFeatureMgrViewHWnd( _  
    ByVal FeatMgrViewPane As Long _  
    ) As Long
```

SOLIDWORKS Type Library

GetFeatureMgrViewHWndx64 Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFeatureMgrViewHWndx64( _  
    ByVal FeatMgrViewPane As Long _  
    ) As Unknown
```

SOLIDWORKS Type Library

GetPropertyManagerTabIndex Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPropertyManagerTabIndex() As Long
```

SOLIDWORKS Type Library

GetSectionViewData Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSectionViewData( _  
    ByVal ViewName As String _  
) As SectionViewData
```

SOLIDWORKS Type Library

GetSnapshot Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSnapshot( _  
    ByVal SnapshotName As String _  
) As Snapshot
```

SOLIDWORKS Type Library

GetSnapshots Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSnapshots() As Variant
```

SOLIDWORKS Type Library

IGetControl Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetControl( _  
    ByVal Name As String _  
) As Unknown
```

SOLIDWORKS Type Library

IsControlTabActive Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IsControlTabActive( _  
    ByVal Name As String _  
) As Boolean
```

SOLIDWORKS Type Library

IsModelTabActive Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IsModelTabActive() As Boolean
```

SOLIDWORKS Type Library

LinkedViews Property (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property LinkedViews As Boolean
```

SOLIDWORKS Type Library

RemoveSectionView Method (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function RemoveSectionView() As Boolean
```

SOLIDWORKS Type Library

ViewportDisplay Property (ModelViewManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ViewportDisplay
```

ModelWindow (Type)

SOLIDWORKS Type Library

ModelWindow Object

Object Model

ModelWindow

ModelDoc (ModelDoc2)

SOLIDWORKS Type Library

ModelWindow Object Members

Public Methods

Activate

Public Properties

HWnd

HWndx64

ModelDoc

Title

SOLIDWORKS Type Library

Activate Method (ModelWindow)

Syntax

Visual Basic for Applications (VBA)

Public Sub Activate()

SOLIDWORKS Type Library

HWnd Property (ModelWindow)

Syntax

Visual Basic for Applications (VBA)

Public Property HWnd As Long

SOLIDWORKS Type Library

HWndx64 Property (ModelWindow)

Syntax

Visual Basic for Applications (VBA)

Public Property HWndx64 As Unknown

SOLIDWORKS Type Library

ModelDoc Property (ModelWindow)

Syntax

Visual Basic for Applications (VBA)

Public Property ModelDoc As [ModelDoc2](#)

SOLIDWORKS Type Library


Title Property (ModelWindow)

Syntax

Public Property Title As String

MotionPlotAxisFeatureData (Type)

SOLIDWORKS Type Library
MotionPlotAxisFeatureData Object

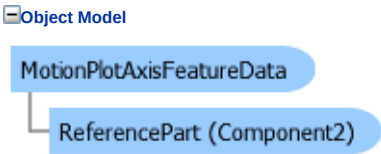

SOLIDWORKS Type Library
MotionPlotAxisFeatureData Object Members

Public Properties

- [Component](#)
- [Entities](#)
- [ReferencePart](#)
- [Type](#)

SOLIDWORKS Type Library
Component Property (MotionPlotAxisFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Component As Long
```

SOLIDWORKS Type Library
Entities Property (MotionPlotAxisFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Entities As Variant
```

SOLIDWORKS Type Library
ReferencePart Property (MotionPlotAxisFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReferencePart As Component2
```

SOLIDWORKS Type Library
Type Property (MotionPlotAxisFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Type As Long
```

MotionPlotFeatureData (Type)

SOLIDWORKS Type Library

MotionPlotFeatureData Object

Object Model



SOLIDWORKS Type Library

MotionPlotFeatureData Object Members

Public Methods

AddYAxis

GetXAxis

GetYAxis

IGetYAxis

Public Properties

Visibility

SOLIDWORKS Type Library

AddYAxis Method (MotionPlotFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddYAxis( _  
    ByVal YAxis As MotionPlotAxisFeatureData _  
    ) As Boolean
```

SOLIDWORKS Type Library

GetXAxis Method (MotionPlotFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetXAxis() As Feature
```

SOLIDWORKS Type Library

GetYAxis Method (MotionPlotFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetYAxis() As Variant
```

SOLIDWORKS Type Library

IGetYAxis Method (MotionPlotFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetYAxis( _  
    ByVal Count As Long _
```

) As [Feature](#)

SOLIDWORKS Type Library

Visibility Property (MotionPlotFeatureData)

 **Syntax**

Visual Basic for Applications (VBA)

Public Property Visibility As Boolean