

SOLIDWORKS API (VB6 COM) — Reference (69/102): Mouse-MultiJogLeader

SOLIDWORKS API Documentation (converted from CHM)

Mouse (Type)

SOLIDWORKS Type Library

Mouse Object

Object Model

Mouse

SOLIDWORKS Type Library

Mouse Object Members

Public Methods

 [MouseWheelXYZ](#)

 [Move](#)

 [MoveXYZ](#)

Events

 [MouseLBtnDbtClkNotify](#)

 [MouseLBtnDownNotify](#)

 [MouseLBtnUpNotify](#)

 [MouseMBtnDbtClkNotify](#)

 [MouseMBtnDownNotify](#)

 [MouseMBtnUpNotify](#)

 [MouseMoveNotify](#)

 [MouseNotify](#)

 [MouseRBtnDbtClkNotify](#)

 [MouseRBtnDownNotify](#)

 [MouseRBtnUpNotify](#)

 [MouseSelectNotify](#)

SOLIDWORKS Type Library

MouseLBtnDbtClkNotify Event (Mouse)

Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseLBtnDbtClkNotify( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseLBtnDownNotify Event (Mouse)

Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseLBtnDownNotify( _  
    ByVal X As Long, _
```

```
ByVal Y As Long, _  
ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseLBtnUpNotify Event (Mouse)



Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseLBtnUpNotify( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseMBtnDbClkNotify Event (Mouse)



Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseMBtnDbClkNotify( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseMBtnDownNotify Event (Mouse)



Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseMBtnDownNotify( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseMBtnUpNotify Event (Mouse)



Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseMBtnUpNotify( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseMoveNotify Event (Mouse)



Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseMoveNotify( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseNotify Event (Mouse)



Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseNotify( _  
    ByVal Message As Long, _  
    ByVal WParam As Long, _  
    ByVal LParam As Long _  
)
```

SOLIDWORKS Type Library

MouseRBtnDbClkNotify Event (Mouse)



Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseRBtnDbClkNotify( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseRBtnDownNotify Event (Mouse)



Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseRBtnDownNotify( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseRBtnUpNotify Event (Mouse)



Syntax

Visual Basic for Applications (VBA)

```
Public Event MouseRBtnUpNotify( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal WParam As Long _  
)
```

SOLIDWORKS Type Library

MouseSelectNotify Event (Mouse)



Syntax

```
Public Event MouseSelectNotify( _  
    ByVal Ix As Long, _  
    ByVal Iy As Long, _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double _  
)
```

MouseWheelXYZ Method (Mouse)**Syntax**

```
Public Function MouseWheelXYZ( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double, _  
    ByVal Clicks As Long, _  
    ByVal Flags As Long _  
) As Boolean
```

Move Method (Mouse)**Syntax**

```
Public Function Move( _  
    ByVal X As Long, _  
    ByVal Y As Long, _  
    ByVal Flags As Long _  
) As Boolean
```

MoveXYZ Method (Mouse)**Syntax**

```
Public Function MoveXYZ( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double, _  
    ByVal Flags As Long _  
) As Boolean
```

MoveCopyBodyFeatureData (Type)

SOLIDWORKS Type Library

MoveCopyBodyFeatureData Object

Object Model

MoveCopyBodyFeatureData

AddMate (Mate2)

IAddMate (Mate2)

IGetBodies (Body2)

SOLIDWORKS Type Library

MoveCopyBodyFeatureData Object Members

Public Methods

	AccessSelections
	AddMate
	GetBodiesCount
	IAddMate
	IGetBodies
	ISetBodies
	ReleaseSelectionAccess

Public Properties

	Bodies
	Copy
	NumberOfCopies
	RotationOriginX
	RotationOriginY
	RotationOriginZ
	TransformReferenceEntity
	TransformType
	TransformValue
	TransformX
	TransformY
	TransformZ
	TranslateToVertex

SOLIDWORKS Type Library

AccessSelections Method (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal PTopDoc As ModelDoc2, _
```

```
ByVal PComponent As Component2 _  
) As Boolean
```

SOLIDWORKS Type Library

AddMate Method (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddMate( _  
    ByVal MateEntVar As Variant, _  
    ByVal MateTypeFromEnum As Long, _  
    ByVal AlignFromEnum As Long, _  
    ByVal Distance As Double, _  
    ByVal Angle As Double, _  
    ByRef ErrorStatus As Long _  
) As Mate2
```

SOLIDWORKS Type Library

Bodies Property (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Bodies As Variant
```

SOLIDWORKS Type Library

Copy Property (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Copy As Boolean
```

SOLIDWORKS Type Library

GetBodiesCount Method (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBodiesCount() As Long
```

SOLIDWORKS Type Library

IAddMate Method (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IAddMate( _  
    ByVal Nsize As Long, _  
    ByRef MateEntArr As Object, _  
    ByVal MateTypeFromEnum As Long, _  
    ByVal AlignFromEnum As Long, _  
    ByVal Distance As Double, _  
    ByVal Angle As Double, _  
    ByRef ErrorStatus As Long _  
) As Mate2
```

SOLIDWORKS Type Library

IGetBodies Method (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetBodies( _  
    ByVal NCount As Long _
```

) As [Body2](#)

SOLIDWORKS Type Library

ISetBodies Method (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetBodies( _  
    ByVal NCount As Long, _  
    ByVal PBodies As Body2 _  
)
```

SOLIDWORKS Type Library

NumberOfCopies Property (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property NumberOfCopies As Long
```

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

RotationOriginX Property (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property RotationOriginX As Double
```

SOLIDWORKS Type Library

RotationOriginY Property (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property RotationOriginY As Double
```

SOLIDWORKS Type Library

RotationOriginZ Property (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property RotationOriginZ As Double
```

SOLIDWORKS Type Library

TransformReferenceEntity Property (MoveCopyBodyFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property TransformReferenceEntity As Object
```

SOLIDWORKS Type Library

TransformType Property (MoveCopyBodyFeatureData)

Syntax

Public Property TransformType As Long

SOLIDWORKS Type Library

TransformValue Property (MoveCopyBodyFeatureData)



Public Property TransformValue As Double

SOLIDWORKS Type Library

TransformX Property (MoveCopyBodyFeatureData)



Public Property TransformX As Double

SOLIDWORKS Type Library

TransformY Property (MoveCopyBodyFeatureData)



Public Property TransformY As Double

SOLIDWORKS Type Library

TransformZ Property (MoveCopyBodyFeatureData)



Public Property TransformZ As Double

SOLIDWORKS Type Library

TranslateToVertex Property (MoveCopyBodyFeatureData)



Public Property TranslateToVertex As Object

MoveFaceFeatureData (Type)

SOLIDWORKS Type Library

MoveFaceFeatureData Object

Object Model

MoveFaceFeatureData

IGetFaces (Face2)

SOLIDWORKS Type Library

MoveFaceFeatureData Object Members

Public Methods

	AccessSelections
	GetDirectionReference
	GetEndConditionEntity
	GetFacesCount
	GetFromEntity
	IGetFaces
	IGetTriadRotationParameters
	IGetTriadTranslationParameters
	ISetFaces
	ISetTriadRotationParameters
	ISetTriadTranslationParameters
	ReleaseSelectionAccess
	SetDirectionReference
	SetEndConditionEntity
	SetFromEntity

Public Properties

	Angle
	Distance
	EndCondition
	Faces
	MoveType
	OffsetDistance
	ReverseDirection
	TriadRotationParameters
	TriadTranslationParameters

SOLIDWORKS Type Library

AccessSelections Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
    ) As Boolean
```

SOLIDWORKS Type Library

Angle Property (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Angle As Double
```

SOLIDWORKS Type Library

Distance Property (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Distance As Double
```

SOLIDWORKS Type Library

EndCondition Property (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property EndCondition As Long
```

SOLIDWORKS Type Library

Faces Property (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Faces As Variant
```

SOLIDWORKS Type Library

GetDirectionReference Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDirectionReference( _  
    ByRef DirRefType As Long _  
    ) As Object
```

SOLIDWORKS Type Library

GetEndConditionEntity Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetEndConditionEntity() As Object
```

SOLIDWORKS Type Library

GetFacesCount Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetFacesCount() As Long
```

SOLIDWORKS Type Library

GetFromEntity Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub GetFromEntity( _  
    ByRef FromEntity As Object, _  
    ByRef Type As Long _  
)
```

SOLIDWORKS Type Library

IGetFaces Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFaces( _  
    ByVal Count As Long _  
) As Face2
```

SOLIDWORKS Type Library

IGetTriadRotationParameters Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTriadRotationParameters() As Double
```

SOLIDWORKS Type Library

IGetTriadTranslationParameters Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTriadTranslationParameters() As Double
```

SOLIDWORKS Type Library

ISetFaces Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetFaces( _  
    ByVal Count As Long, _  
    ByVal EntIn As Face2 _  
)
```

SOLIDWORKS Type Library

ISetTriadRotationParameters Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetTriadRotationParameters( _  
    ByRef RotationParameters As Double _  
)
```

SOLIDWORKS Type Library

ISetTriadTranslationParameters Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetTriadTranslationParameters( _  
    ByRef TranslationParameters As Double _  
)
```

SOLIDWORKS Type Library

MoveType Property (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property MoveType As Long
```

SOLIDWORKS Type Library

OffsetDistance Property (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property OffsetDistance As Double
```

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

ReverseDirection Property (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property ReverseDirection As Boolean
```

SOLIDWORKS Type Library

SetDirectionReference Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SetDirectionReference( _  
    ByVal LpDispatch As Object _  
) As Boolean
```

SOLIDWORKS Type Library

SetEndConditionEntity Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetEndConditionEntity( _  
    ByVal EndEntity As Object _  
)
```

SOLIDWORKS Type Library

SetFromEntity Method (MoveFaceFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetFromEntity( _  
    ByVal FromEntity As Object _
```

)

SOLIDWORKS Type Library

TriadRotationParameters Property (MoveFaceFeatureData)

 Syntax

Visual Basic for Applications (VBA)

Public Property TriadRotationParameters As Variant

SOLIDWORKS Type Library

TriadTranslationParameters Property (MoveFaceFeatureData)

 Syntax

Visual Basic for Applications (VBA)


Public Property TriadTranslationParameters As Variant

MultiJogLeader (Type)

SOLIDWORKS Type Library

MultiJogLeader Object

Object Model

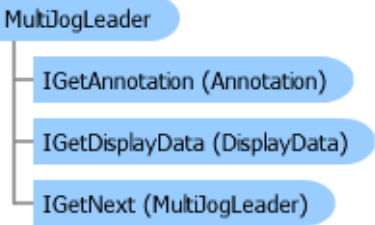

SOLIDWORKS Type Library

MultiJogLeader Object Members

Public Methods

	GetAnnotation
	GetArrowHeadAtIndex
	GetArrowHeadCount
	GetDisplayData
	GetLineAtIndex
	GetLineCount
	GetNext
	IGetAnnotation
	IGetArrowHeadAtIndex
	IGetDisplayData
	IGetLineAtIndex
	IGetNext

SOLIDWORKS Type Library

GetAnnotation Method (MultiJogLeader)

Syntax

```
Visual Basic for Applications (VBA)

Public Function GetAnnotation() As Object
```

SOLIDWORKS Type Library

GetArrowHeadAtIndex Method (MultiJogLeader)

Syntax

```
Visual Basic for Applications (VBA)

Public Function GetArrowHeadAtIndex( _
    ByVal Index As Long _
) As Variant
```

SOLIDWORKS Type Library

GetArrowHeadCount Method (MultiJogLeader)

Syntax

```
Visual Basic for Applications (VBA)
```

```
Public Function GetArrowHeadCount() As Long
```

SOLIDWORKS Type Library

GetDisplayData Method (MultiJogLeader)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDisplayData() As Object
```

SOLIDWORKS Type Library

GetLineAtIndex Method (MultiJogLeader)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLineAtIndex( _  
    ByVal Index As Long _  
) As Variant
```

SOLIDWORKS Type Library

GetLineCount Method (MultiJogLeader)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLineCount() As Long
```

SOLIDWORKS Type Library

GetNext Method (MultiJogLeader)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetNext() As Object
```

SOLIDWORKS Type Library

IGetAnnotation Method (MultiJogLeader)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetAnnotation() As Annotation
```

SOLIDWORKS Type Library

IGetArrowHeadAtIndex Method (MultiJogLeader)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetArrowHeadAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

IGetDisplayData Method (MultiJogLeader)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetDisplayData() As DisplayData
```

SOLIDWORKS Type Library

IGetLineAtIndex Method (MultiJogLeader)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetLineAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

IGetNext Method (MultiJogLeader)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNext() As MultiJogLeader
```