

# **SOLIDWORKS API (VB6 COM) — Reference (81/102): SFSymbol-ShellFeatureData**


SOLIDWORKS API Documentation (converted from CHM)

# SFSymbol (Type)

SOLIDWORKS Type Library

SFSymbol Object

Object Model

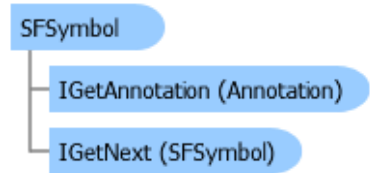

SOLIDWORKS Type Library

SFSymbol Object Members

Public Methods

|                                                                                     |                                           |
|-------------------------------------------------------------------------------------|-------------------------------------------|
|    | <a href="#">GetAngle</a>                  |
|    | <a href="#">GetAnnotation</a>             |
|    | <a href="#">GetArcAtIndex</a>             |
|    | <a href="#">GetArcCount</a>               |
|    | <a href="#">GetArrowHeadAtIndex</a>       |
|    | <a href="#">GetArrowHeadCount</a>         |
|    | <a href="#">GetArrowHeadInfo</a>          |
|  | <a href="#">GetDirectionOfLayer</a>       |
|  | <a href="#">GetLeaderAtIndex</a>          |
|  | <a href="#">GetLeaderCount</a>            |
|  | <a href="#">GetLineAtIndex</a>            |
|  | <a href="#">GetLineCount</a>              |
|  | <a href="#">GetNext</a>                   |
|  | <a href="#">GetSymbol</a>                 |
|  | <a href="#">GetSymbolAllAround</a>        |
|  | <a href="#">GetSymbolSurfaceTexture</a>   |
|  | <a href="#">GetSymbolType</a>             |
|  | <a href="#">GetText</a>                   |
|  | <a href="#">GetTextAngleAtIndex</a>       |
|  | <a href="#">GetTextAtIndex</a>            |
|  | <a href="#">GetTextCount</a>              |
|  | <a href="#">GetTextFontAtIndex</a>        |
|  | <a href="#">GetTextHeightAtIndex</a>      |
|  | <a href="#">GetTextInvertAtIndex</a>      |
|  | <a href="#">GetTextPositionAtIndex</a>    |
|  | <a href="#">GetTextRefPositionAtIndex</a> |
|  | <a href="#">GetTriangleAtIndex</a>        |
|  | <a href="#">GetTriangleCount</a>          |
|  | <a href="#">HasExtralLeader</a>           |
|                                                                                     | <a href="#">IGetAnnotation</a>            |

|                                                                                   |                                         |
|-----------------------------------------------------------------------------------|-----------------------------------------|
|  |                                         |
|  | <a href="#">IGetArcAtIndex</a>          |
|  | <a href="#">IGetArrowHeadAtIndex</a>    |
|  | <a href="#">IGetArrowHeadInfo</a>       |
|  | <a href="#">IGetLeaderAtIndex</a>       |
|  | <a href="#">IGetLineAtIndex</a>         |
|  | <a href="#">IGetNext</a>                |
|  | <a href="#">IGetTextPositionAtIndex</a> |
|  | <a href="#">IGetTriangleAtIndex</a>     |
|  | <a href="#">IsAttached</a>              |
|  | <a href="#">SetAngle</a>                |
|  | <a href="#">SetDirectionOfLayer</a>     |
|  | <a href="#">SetSymbol</a>               |
|  | <a href="#">SetSymbolType</a>           |
|  | <a href="#">SetText</a>                 |

### Public Properties

|                                                                                     |                                   |
|-------------------------------------------------------------------------------------|-----------------------------------|
|    | <a href="#">GOSTDefaultSymbol</a> |
|    | <a href="#">GOSTNotation</a>      |
|    | <a href="#">Grinding</a>          |
|    | <a href="#">Orientation</a>       |
|   | <a href="#">ProfileAngle</a>      |
|  | <a href="#">ProfileDirection</a>  |
|  | <a href="#">Rotated</a>           |

SOLIDWORKS Type Library

### GetAngle Method (SFSymbol)

### Syntax

| Visual Basic for Applications (VBA)             |
|-------------------------------------------------|
| <pre>Public Function GetAngle() As Double</pre> |

SOLIDWORKS Type Library

### GetAnnotation Method (SFSymbol)

### Syntax

| Visual Basic for Applications (VBA)                  |
|------------------------------------------------------|
| <pre>Public Function GetAnnotation() As Object</pre> |

SOLIDWORKS Type Library

### GetArcAtIndex Method (SFSymbol)

### Syntax

| Visual Basic for Applications (VBA)                                                |
|------------------------------------------------------------------------------------|
| <pre>Public Function GetArcAtIndex( _     ByVal Index As Long _ ) As Variant</pre> |

SOLIDWORKS Type Library

### GetArcCount Method (SFSymbol)



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArcCount() As Long
```

SOLIDWORKS Type Library

**GetArrowHeadAtIndex Method (SFSymbol)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArrowHeadAtIndex( _  
    ByVal Index As Long _  
) As Variant
```

SOLIDWORKS Type Library

**GetArrowHeadCount Method (SFSymbol)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArrowHeadCount() As Long
```

SOLIDWORKS Type Library

**GetArrowHeadInfo Method (SFSymbol)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetArrowHeadInfo() As Variant
```

SOLIDWORKS Type Library

**GetDirectionOfLay Method (SFSymbol)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDirectionOfLay() As Long
```

SOLIDWORKS Type Library

**GetLeaderAtIndex Method (SFSymbol)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLeaderAtIndex( _  
    ByVal Index As Long _  
) As Variant
```

SOLIDWORKS Type Library

**GetLeaderCount Method (SFSymbol)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLeaderCount() As Long
```

SOLIDWORKS Type Library

**GetLineAtIndex Method (SFSymbol)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLineAtIndex( _  
    ByVal Index As Long _
```

) As Variant

SOLIDWORKS Type Library

**GetLineCount Method (SFSymbol)**



Visual Basic for Applications (VBA)

```
Public Function GetLineCount() As Long
```

SOLIDWORKS Type Library

**GetNext Method (SFSymbol)**



Visual Basic for Applications (VBA)

```
Public Function GetNext() As Object
```

SOLIDWORKS Type Library

**GetSymbol Method (SFSymbol)**



Visual Basic for Applications (VBA)

```
Public Function GetSymbol() As Long
```

SOLIDWORKS Type Library

**GetSymbolAllAround Method (SFSymbol)**



Visual Basic for Applications (VBA)

```
Public Function GetSymbolAllAround() As Boolean
```

SOLIDWORKS Type Library

**GetSymbolSurfaceTexture Method (SFSymbol)**



Visual Basic for Applications (VBA)

```
Public Function GetSymbolSurfaceTexture() As Long
```

SOLIDWORKS Type Library

**GetSymbolType Method (SFSymbol)**



Visual Basic for Applications (VBA)

```
Public Function GetSymbolType() As Long
```

SOLIDWORKS Type Library

**GetText Method (SFSymbol)**



Visual Basic for Applications (VBA)

```
Public Function GetText( _  
    ByVal WhichOne As Long _  
) As String
```

SOLIDWORKS Type Library

**GetTextAngleAtIndex Method (SFSymbol)**



Visual Basic for Applications (VBA)

```
Public Function GetTextAngleAtIndex( _  
    ByVal Index As Long _  
    ) As Double
```

SOLIDWORKS Type Library

**GetTextAtIndex Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextAtIndex( _  
    ByVal Index As Long _  
    ) As String
```

SOLIDWORKS Type Library

**GetTextCount Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextCount() As Long
```

SOLIDWORKS Type Library

**GetTextFontAtIndex Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextFontAtIndex( _  
    ByVal Index As Long _  
    ) As String
```

SOLIDWORKS Type Library

**GetTextHeightAtIndex Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextHeightAtIndex( _  
    ByVal Index As Long _  
    ) As Double
```

SOLIDWORKS Type Library

**GetTextInvertAtIndex Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextInvertAtIndex( _  
    ByVal Index As Long _  
    ) As Long
```

SOLIDWORKS Type Library

**GetTextPositionAtIndex Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextPositionAtIndex( _  
    ByVal Index As Long _  
    ) As Variant
```

SOLIDWORKS Type Library

**GetTextRefPositionAtIndex Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTextRefPositionAtIndex( _  
    ByVal Index As Long _  
) As Long
```

SOLIDWORKS Type Library

**GetTriangleAtIndex Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTriangleAtIndex( _  
    ByVal Index As Long _  
) As Variant
```

SOLIDWORKS Type Library

**GetTriangleCount Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTriangleCount() As Long
```

SOLIDWORKS Type Library

**GOSTDefaultSymbol Property (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property GOSTDefaultSymbol As Boolean
```

SOLIDWORKS Type Library

**GOSTNotation Property (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property GOSTNotation As Boolean
```

SOLIDWORKS Type Library

**Grinding Property (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property Grinding As Boolean
```

SOLIDWORKS Type Library

**HasExtraLeader Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function HasExtraLeader() As Boolean
```

SOLIDWORKS Type Library

**IGetAnnotation Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetAnnotation() As Annotation
```

SOLIDWORKS Type Library

## IGetArcAtIndex Method (SFSymbol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetArcAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

## IGetArrowHeadAtIndex Method (SFSymbol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetArrowHeadAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

## IGetArrowHeadInfo Method (SFSymbol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetArrowHeadInfo() As Double
```

SOLIDWORKS Type Library

## IGetLeaderAtIndex Method (SFSymbol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetLeaderAtIndex( _  
    ByVal Index As Long, _  
    ByRef PointCount As Long _  
) As Double
```

SOLIDWORKS Type Library

## IGetLineAtIndex Method (SFSymbol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetLineAtIndex( _  
    ByVal Index As Long _  
) As Double
```

SOLIDWORKS Type Library

## IGetNext Method (SFSymbol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetNext() As SFSymbol
```

SOLIDWORKS Type Library

## IGetTextPositionAtIndex Method (SFSymbol)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTextPositionAtIndex( _  
    ByVal Index As Long _  
    ) As Double
```

SOLIDWORKS Type Library

**IGetTriangleAtIndex Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetTriangleAtIndex( _  
    ByVal Index As Long _  
    ) As Double
```

SOLIDWORKS Type Library

**IsAttached Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IsAttached() As Boolean
```

SOLIDWORKS Type Library

**Orientation Property (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property Orientation As Long
```

SOLIDWORKS Type Library

**ProfileAngle Property (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property ProfileAngle As Double
```

SOLIDWORKS Type Library

**ProfileDirection Property (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property ProfileDirection As Long
```

SOLIDWORKS Type Library

**Rotated Property (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property Rotated As Boolean
```

SOLIDWORKS Type Library

**SetAngle Method (SFSymbol)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetAngle( _  
    ByVal Angle As Double _  
    ) As Boolean
```

**SetDirectionOfLay Method (SFSymbol)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetDirectionOfLay( _  
    ByVal Direction As Long _  
) As Boolean
```

**SetSymbol Method (SFSymbol)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetSymbol( _  
    ByVal Symbol As Long, _  
    ByVal SurfaceTexture As Long, _  
    ByVal AllAround As Boolean _  
) As Boolean
```

**SetSymbolType Method (SFSymbol)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetSymbolType( _  
    ByVal SymbolType As Long _  
) As Boolean
```

**SetText Method (SFSymbol)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetText( _  
    ByVal WhichOne As Long, _  
    ByVal Text As String _  
) As Boolean
```

# Sheet (Type)

SOLIDWORKS Type Library

Sheet Object

## Object Model

Sheet

GetTemplateSketch (Sketch)

IGetBomTable (BomTable)

IGetMagneticLines (MagneticLine)

InsertMagneticLine (MagneticLine)

InsertRevisionTable (RevisionTableAnnotation)

InsertRevisionTable2 (RevisionTableAnnotation)

InsertTitleBlock (TitleBlock)

IPageSetup (PageSetup)

RevisionTable (RevisionTableAnnotation)

TableAnchor

TitleBlock

SOLIDWORKS Type Library

Sheet Object Members

## Public Methods

- CreateOLEObject
- GetBomTable
- GetCustomColorsCount
- GetDrawingZone
- GetID
- GetMagneticLines
- GetMagneticLinesCount
- GetName
- GetOLEObjectCount
- GetOLEObjectData
- GetOLEObjectSettings
- GetProperties
- GetProperties2
- GetSheetFormatName
- GetSize
- GetTemplateName
- GetTemplateSketch

|                                                                                                                             |
|-----------------------------------------------------------------------------------------------------------------------------|
|  <a href="#">GetViews</a>                  |
|  <a href="#">GetZoneMargin</a>             |
|  <a href="#">GetZoneSizeDistribution</a>   |
|  <a href="#">GetZoneSizeRegion</a>         |
|  <a href="#">ICreateOLEObject</a>          |
|  <a href="#">IGetBomTable</a>              |
|  <a href="#">IGetCustomColors</a>          |
|  <a href="#">IGetMagneticLines</a>         |
|  <a href="#">IGetOLEObjectData</a>         |
|  <a href="#">IGetOLEObjectSettings</a>     |
|  <a href="#">IGetProperties</a>            |
|  <a href="#">InsertFamilyTable</a>         |
|  <a href="#">InsertMagneticLine</a>        |
|  <a href="#">InsertRevisionTable</a>       |
|  <a href="#">InsertRevisionTable2</a>      |
|  <a href="#">InsertTitleBlock</a>          |
|  <a href="#">IsLoaded</a>                  |
|  <a href="#">ReloadTemplate</a>            |
|  <a href="#">SaveFormat</a>                |
|  <a href="#">SetAsTableAnchor</a>          |
|  <a href="#">SetName</a>                   |
|  <a href="#">SetProperties</a>             |
|  <a href="#">SetProperties2</a>           |
|  <a href="#">SetScale</a>                |
|  <a href="#">SetSheetFormatName</a>      |
|  <a href="#">SetSize</a>                 |
|  <a href="#">SetTemplateName</a>         |
|  <a href="#">SetZoneMargin</a>           |
|  <a href="#">SetZoneSizeDistribution</a> |
|  <a href="#">SetZoneSizeRegion</a>       |

## Public Properties

|                                                                                                                        |
|------------------------------------------------------------------------------------------------------------------------|
|  <a href="#">CustomPropertyView</a> |
|  <a href="#">FocusLocked</a>        |
|  <a href="#">IPageSetup</a>         |
|  <a href="#">PageSetup</a>          |
|  <a href="#">RevisionTable</a>      |
|  <a href="#">SheetFormatVisible</a> |
|  <a href="#">TableAnchor</a>        |
|  <a href="#">TitleBlock</a>         |

SOLIDWORKS Type Library

## CreateOLEObject Method (Sheet)

## Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateOLEObject( _  
    ByVal Aspect As Long, _  
    ByVal Position As Variant, _  
    ByVal Buffer As Variant _  
) As Boolean
```

SOLIDWORKS Type Library

**CustomPropertyView Property (Sheet)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property CustomPropertyView As String
```

SOLIDWORKS Type Library

**FocusLocked Property (Sheet)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property FocusLocked As Boolean
```

SOLIDWORKS Type Library

**GetBomTable Method (Sheet)**



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBomTable() As Object
```

SOLIDWORKS Type Library

**GetCustomColorsCount Method (Sheet)**



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCustomColorsCount() As Long
```

SOLIDWORKS Type Library

**GetDrawingZone Method (Sheet)**



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDrawingZone( _  
    ByVal X As Double, _  
    ByVal Y As Double _  
) As String
```

SOLIDWORKS Type Library

**GetID Method (Sheet)**



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetID() As Long
```

SOLIDWORKS Type Library

**GetMagneticLines Method (Sheet)**



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetMagneticLines() As Variant
```

SOLIDWORKS Type Library

**GetMagneticLinesCount Method (Sheet)**



Visual Basic for Applications (VBA)

```
Public Function GetMagneticLinesCount() As Long
```

SOLIDWORKS Type Library

**GetName Method (Sheet)**



Visual Basic for Applications (VBA)

```
Public Function GetName() As String
```

SOLIDWORKS Type Library

**GetOLEObjectCount Method (Sheet)**



Visual Basic for Applications (VBA)

```
Public Function GetOLEObjectCount() As Long
```

SOLIDWORKS Type Library

**GetOLEObjectData Method (Sheet)**



Visual Basic for Applications (VBA)

```
Public Function GetOLEObjectData( _  
    ByVal Index As Long _  
) As Variant
```

SOLIDWORKS Type Library

**GetOLEObjectSettings Method (Sheet)**



Visual Basic for Applications (VBA)

```
Public Function GetOLEObjectSettings( _  
    ByVal Index As Long, _  
    ByRef ByteCount As Long, _  
    ByRef Aspect As Long _  
) As Variant
```

SOLIDWORKS Type Library

**GetProperties Method (Sheet)**



Visual Basic for Applications (VBA)

```
Public Function GetProperties() As Variant
```

SOLIDWORKS Type Library

**GetProperties2 Method (Sheet)**



Visual Basic for Applications (VBA)

```
Public Function GetProperties2() As Variant
```

**GetSheetFormatName Method (Sheet)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetSheetFormatName() As String
```

**GetSize Method (Sheet)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetSize( _  
    ByRef Width As Double, _  
    ByRef Height As Double _  
) As Long
```

**GetTemplateName Method (Sheet)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetTemplateName() As String
```

**GetTemplateSketch Method (Sheet)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetTemplateSketch() As Sketch
```

**GetViews Method (Sheet)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetViews() As Variant
```

**GetZoneMargin Method (Sheet)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetZoneMargin( _  
    ByVal ZoneMargin As Long _  
) As Double
```

**GetZoneSizeDistribution Method (Sheet)****Syntax**

Visual Basic for Applications (VBA)

```
Public Function GetZoneSizeDistribution( _  
    ByRef Rows As Long, _  
    ByRef Columns As Long _  
) As Long
```

## GetZoneSizeRegion Method (Sheet)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetZoneSizeRegion() As Long
```

SOLIDWORKS Type Library

## ICreateOLEObject Method (Sheet)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function ICreateOLEObject( _  
    ByVal Aspect As Long, _  
    ByRef Position As Double, _  
    ByVal ByteCount As Long, _  
    ByRef Buffer As Byte _  
    ) As Boolean
```

SOLIDWORKS Type Library

## IGetBomTable Method (Sheet)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetBomTable() As BomTable
```

SOLIDWORKS Type Library

## IGetCustomColors Method (Sheet)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetCustomColors() As Long
```

SOLIDWORKS Type Library

## IGetMagneticLines Method (Sheet)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetMagneticLines( _  
    ByVal Count As Long _  
    ) As MagneticLine
```

SOLIDWORKS Type Library

## IGetOLEObjectData Method (Sheet)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetOLEObjectData( _  
    ByVal Index As Long, _  
    ByRef Buffer As Byte _  
    ) As Boolean
```

SOLIDWORKS Type Library

## IGetOLEObjectSettings Method (Sheet)

### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetOLEObjectSettings( _  
    ByVal Index As Long, _  
    ByRef ByteCount As Long, _
```

```
ByRef Aspect As Long, _  
ByRef Position As Double _  
) As Boolean
```

SOLIDWORKS Type Library

#### IGetProperties Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetProperties() As Double
```

SOLIDWORKS Type Library

#### InsertFamilyTable Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertFamilyTable( _  
ByVal AttachToAnchorPoint As Boolean, _  
ByVal X As Double, _  
ByVal Y As Double, _  
ByVal ModelName As String, _  
ByVal TableTemplateName As String, _  
ByVal DimColumnType As Long, _  
ByVal UseAllConfigs As Boolean, _  
ByVal ConfigArray As Variant, _  
ByVal ItemNumberStart As Long, _  
ByVal ItemNumberIncrement As Long, _  
ByVal FollowConfigTreeOrder As Boolean _  
) As Object
```

SOLIDWORKS Type Library

#### InsertMagneticLine Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertMagneticLine( _  
ByVal StartPoint As MathPoint, _  
ByVal EndPoint As MathPoint _  
) As MagneticLine
```

SOLIDWORKS Type Library

#### InsertRevisionTable Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertRevisionTable( _  
ByVal UseAnchorPoint As Boolean, _  
ByVal X As Double, _  
ByVal Y As Double, _  
ByVal AnchorType As Long, _  
ByVal TableTemplate As String _  
) As RevisionTableAnnotation
```

SOLIDWORKS Type Library

#### InsertRevisionTable2 Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertRevisionTable2( _  
ByVal UseAnchorPoint As Boolean, _  
ByVal X As Double, _  
ByVal Y As Double, _
```

```
ByVal AnchorType As Long, _  
ByVal TableTemplate As String, _  
ByVal Shape As Long, _  
ByVal AutoUpdateZoomCells As Boolean _  
) As RevisionTableAnnotation
```

SOLIDWORKS Type Library

#### InsertTitleBlock Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertTitleBlock( _  
ByVal Notes As Variant _  
) As TitleBlock
```

SOLIDWORKS Type Library

#### IPageSetup Property (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property IPageSetup As PageSetup
```

SOLIDWORKS Type Library

#### IsLoaded Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function IsLoaded() As Boolean
```

SOLIDWORKS Type Library

#### PageSetup Property (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property PageSetup As Object
```

SOLIDWORKS Type Library

#### ReloadTemplate Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function ReloadTemplate( _  
ByVal KeepNoteChanges As Boolean _  
) As Long
```

SOLIDWORKS Type Library

#### RevisionTable Property (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Property RevisionTable As RevisionTableAnnotation
```

SOLIDWORKS Type Library

#### SaveFormat Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SaveFormat( _  
    ByVal FileName As String _  
) As Boolean
```

SOLIDWORKS Type Library

#### SetAsTableAnchor Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetAsTableAnchor( _  
    ByVal TableType As Long _  
) As Object
```

SOLIDWORKS Type Library

#### SetName Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetName( _  
    ByVal NameIn As String _  
)
```

SOLIDWORKS Type Library

#### SetProperties Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetProperties( _  
    ByVal PaperSz As Long, _  
    ByVal Templ As Long, _  
    ByVal Scale1 As Double, _  
    ByVal Scale2 As Double, _  
    ByVal FirstAngle As Boolean, _  
    ByVal Width As Double, _  
    ByVal Height As Double _  
)
```

SOLIDWORKS Type Library

#### SetProperties2 Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetProperties2( _  
    ByVal PaperSz As Long, _  
    ByVal Templ As Long, _  
    ByVal Scale1 As Double, _  
    ByVal Scale2 As Double, _  
    ByVal FirstAngle As Boolean, _  
    ByVal Width As Double, _  
    ByVal Height As Double, _  
    ByVal SameCustomPropAsSheetInDocProp As Boolean _  
)
```

SOLIDWORKS Type Library

#### SetScale Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetScale( _  
    ByVal Numerator As Double, _  
    ByVal Denominator As Double, _
```

```
ByVal ScaleAnnoPosition As Boolean, _  
ByVal ScaleAnnoTextHeight As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

#### SetSheetFormatName Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetSheetFormatName( _  
ByVal Name As String _  
) As Boolean
```

SOLIDWORKS Type Library

#### SetSize Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetSize( _  
ByVal Size As Long, _  
ByVal Width As Double, _  
ByVal Height As Double _  
) As Boolean
```

SOLIDWORKS Type Library

#### SetTemplateName Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetTemplateName( _  
ByVal NameIn As String _  
)
```

SOLIDWORKS Type Library

#### SetZoneMargin Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetZoneMargin( _  
ByVal ZoneMarginType As Long, _  
ByVal MarginValue As Double _  
) As Boolean
```

SOLIDWORKS Type Library

#### SetZoneSizeDistribution Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetZoneSizeDistribution( _  
ByVal Type As Long, _  
ByVal Rows As Long, _  
ByVal Column As Long _  
) As Boolean
```

SOLIDWORKS Type Library

#### SetZoneSizeRegion Method (Sheet)

##### Syntax

Visual Basic for Applications (VBA)

```
Public Function SetZoneSizeRegion( _  
    ByVal RegionType As Long _  
    ) As Boolean
```

SOLIDWORKS Type Library

SheetFormatVisible Property (Sheet)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property SheetFormatVisible As Boolean
```

SOLIDWORKS Type Library

TableAnchor Property (Sheet)

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property TableAnchor( _  
    ByVal TableType As Long _  
    ) As TableAnchor
```

SOLIDWORKS Type Library

TitleBlock Property (Sheet)

#### Syntax


Visual Basic for Applications (VBA)

```
Public Property TitleBlock As TitleBlock
```

# SheetMetalFeatureData (Type)

SOLIDWORKS Type Library  
SheetMetalFeatureData Object

Object Model



SOLIDWORKS Type Library  
SheetMetalFeatureData Object Members

Public Methods

|  |                                              |
|--|----------------------------------------------|
|  | <a href="#">AccessSelections</a>             |
|  | <a href="#">GetCustomBendAllowance</a>       |
|  | <a href="#">GetOverrideDefaultParameter</a>  |
|  | <a href="#">GetOverrideDefaultParameter2</a> |
|  | <a href="#">GetUseGaugeTable</a>             |
|  | <a href="#">IAccessSelections</a>            |
|  | <a href="#">IAccessSelections2</a>           |
|  | <a href="#">ReleaseSelectionAccess</a>       |
|  | <a href="#">SetCustomBendAllowance</a>       |
|  | <a href="#">SetOverrideDefaultParameter</a>  |
|  | <a href="#">SetOverrideDefaultParameter2</a> |
|  | <a href="#">SetUseGaugeTable</a>             |

Public Properties

|  |                                                 |
|--|-------------------------------------------------|
|  | <a href="#">AutoReliefType</a>                  |
|  | <a href="#">BendAllowance</a>                   |
|  | <a href="#">BendAllowanceType</a>               |
|  | <a href="#">BendRadius</a>                      |
|  | <a href="#">BendTableFile</a>                   |
|  | <a href="#">FixedReference</a>                  |
|  | <a href="#">KFactor</a>                         |
|  | <a href="#">ReliefRatio</a>                     |
|  | <a href="#">Thickness</a>                       |
|  | <a href="#">UseAutoRelief</a>                   |
|  | <a href="#">UseMaterialSheetMetalParameters</a> |

SOLIDWORKS Type Library  
AccessSelections Method (SheetMetalFeatureData)

Syntax

```
Visual Basic for Applications (VBA)

Public Function AccessSelections( _
    ByVal TopDoc As Object, _
```

```
ByVal Component As Object _  
) As Boolean
```

SOLIDWORKS Type Library

**AutoReliefType Property (SheetMetalFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property AutoReliefType As Long
```

SOLIDWORKS Type Library

**BendAllowance Property (SheetMetalFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property BendAllowance As Double
```

SOLIDWORKS Type Library

**BendAllowanceType Property (SheetMetalFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property BendAllowanceType As Long
```

SOLIDWORKS Type Library

**BendRadius Property (SheetMetalFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property BendRadius As Double
```

SOLIDWORKS Type Library

**BendTableFile Property (SheetMetalFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property BendTableFile As String
```

SOLIDWORKS Type Library

**FixedReference Property (SheetMetalFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property FixedReference As Object
```

SOLIDWORKS Type Library

**GetCustomBendAllowance Method (SheetMetalFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCustomBendAllowance() As CustomBendAllowance
```

SOLIDWORKS Type Library

**GetOverrideDefaultParameter Method (SheetMetalFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetOverrideDefaultParameter( _  
    ByRef OverrideDefaultParameter As Boolean _  
    ) As Long
```

SOLIDWORKS Type Library

**GetOverrideDefaultParameter2 Method (SheetMetalFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetOverrideDefaultParameter2( _  
    ByVal Parameter As Long, _  
    ByRef OverrideDefaultParameter As Boolean _  
    ) As Long
```

SOLIDWORKS Type Library

**GetUseGaugeTable Method (SheetMetalFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function GetUseGaugeTable( _  
    ByRef UseGaugeTable As Boolean, _  
    ByRef GaugeTableFile As String _  
    ) As Long
```

SOLIDWORKS Type Library

**IAccessSelections Method (SheetMetalFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections( _  
    ByVal TopDoc As ModelDoc, _  
    ByVal Component As Component _  
    ) As Boolean
```

SOLIDWORKS Type Library

**IAccessSelections2 Method (SheetMetalFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections2( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
    ) As Boolean
```

SOLIDWORKS Type Library

**KFactor Property (SheetMetalFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Property KFactor As Double
```

SOLIDWORKS Type Library

**ReleaseSelectionAccess Method (SheetMetalFeatureData)**

#### Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

**ReliefRatio Property (SheetMetalFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Property ReliefRatio As Double
```

**SetCustomBendAllowance Method (SheetMetalFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub SetCustomBendAllowance( _  
    ByVal PBendData As CustomBendAllowance _  
)
```

**SetOverrideDefaultParameter Method (SheetMetalFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetOverrideDefaultParameter( _  
    ByVal OverrideDefaultParameter As Boolean _  
) As Long
```

**SetOverrideDefaultParameter2 Method (SheetMetalFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetOverrideDefaultParameter2( _  
    ByVal Parameter As Long, _  
    ByVal OverrideDefaultParameter As Boolean _  
) As Long
```

**SetUseGaugeTable Method (SheetMetalFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Function SetUseGaugeTable( _  
    ByVal UseGaugeTable As Boolean, _  
    ByVal GaugeTableFile As String _  
) As Long
```

**Thickness Property (SheetMetalFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Property Thickness As Double
```

**UseAutoRelief Property (SheetMetalFeatureData)** **Syntax**

Visual Basic for Applications (VBA)

```
Public Property UseAutoRelief As Boolean
```



## Syntax


Visual Basic for Applications (VBA)

```
Public Property UseMaterialSheetMetalParameters As Boolean
```

# SheetMetalFolder (Type)

SOLIDWORKS Type Library  
SheetMetalFolder Object

Object Model



SOLIDWORKS Type Library  
SheetMetalFolder Object Members

Public Methods

|                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------|
|  <a href="#">GetFeature</a>         |
|  <a href="#">GetSheetMetalCount</a> |
|  <a href="#">GetSheetMetals</a>     |

SOLIDWORKS Type Library  
GetFeature Method (SheetMetalFolder)

Syntax

```
Visual Basic for Applications (VBA)  
  
Public Function GetFeature() As Feature
```

SOLIDWORKS Type Library  
GetSheetMetalCount Method (SheetMetalFolder)

Syntax

```
Visual Basic for Applications (VBA)  
  
Public Function GetSheetMetalCount() As Long
```

SOLIDWORKS Type Library  
GetSheetMetals Method (SheetMetalFolder)

Syntax

```
Visual Basic for Applications (VBA)  
  
Public Function GetSheetMetals() As Variant
```

# SheetMetalGaugeTableParameters (Type)

SOLIDWORKS Type Library  
SheetMetalGaugeTableParameters Object

 Object Model

SheetMetalGaugeTableParameters

SOLIDWORKS Type Library  
SheetMetalGaugeTableParameters Object Members

 Public Methods

|                                                                                                                            |
|----------------------------------------------------------------------------------------------------------------------------|
|  <a href="#">GetAvailableGaugeNumbers</a> |
|  <a href="#">GetAvailableRadii</a>        |
|  <a href="#">GetCurrentGaugeNumber</a>    |
|  <a href="#">GetCurrentRadius</a>         |
|  <a href="#">GetGaugeNumberCount</a>      |
|  <a href="#">GetGaugeTablePath</a>        |
|  <a href="#">GetRadiiCount</a>            |
|  <a href="#">GetThickness</a>             |
|  <a href="#">SetCurrentGaugeNumber</a>    |
|  <a href="#">SetGaugeTablePath</a>       |
|  <a href="#">SetRadius</a>              |
|  <a href="#">SetThickness</a>           |

 Public Properties

|                                                                                                                       |
|-----------------------------------------------------------------------------------------------------------------------|
|  <a href="#">OverrideRadius</a>    |
|  <a href="#">OverrideThickness</a> |
|  <a href="#">Process</a>           |
|  <a href="#">ReverseDirection</a>  |

SOLIDWORKS Type Library  
GetAvailableGaugeNumbers Method (SheetMetalGaugeTableParameters)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAvailableGaugeNumbers() As Variant
```

SOLIDWORKS Type Library  
GetAvailableRadii Method (SheetMetalGaugeTableParameters)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function GetAvailableRadii() As Variant
```

SOLIDWORKS Type Library  
GetCurrentGaugeNumber Method (SheetMetalGaugeTableParameters)

 Syntax

Visual Basic for Applications (VBA)

```
Public Function GetCurrentGaugeNumber() As String
```

SOLIDWORKS Type Library

**GetCurrentRadius Method (SheetMetalGaugeTableParameters)**



Visual Basic for Applications (VBA)

```
Public Function GetCurrentRadius() As Double
```

SOLIDWORKS Type Library

**GetGaugeNumberCount Method (SheetMetalGaugeTableParameters)**



Visual Basic for Applications (VBA)

```
Public Function GetGaugeNumberCount() As Long
```

SOLIDWORKS Type Library

**GetGaugeTablePath Method (SheetMetalGaugeTableParameters)**



Visual Basic for Applications (VBA)

```
Public Function GetGaugeTablePath( _  
    ByRef GaugeTablePath As String _  
) As Boolean
```

SOLIDWORKS Type Library

**GetRadiiCount Method (SheetMetalGaugeTableParameters)**



Visual Basic for Applications (VBA)

```
Public Function GetRadiiCount() As Long
```

SOLIDWORKS Type Library

**GetThickness Method (SheetMetalGaugeTableParameters)**



Visual Basic for Applications (VBA)

```
Public Function GetThickness() As Double
```

SOLIDWORKS Type Library

**OverrideRadius Property (SheetMetalGaugeTableParameters)**



Visual Basic for Applications (VBA)

```
Public Property OverrideRadius As Boolean
```

SOLIDWORKS Type Library

**OverrideThickness Property (SheetMetalGaugeTableParameters)**



Visual Basic for Applications (VBA)

```
Public Property OverrideThickness As Boolean
```

SOLIDWORKS Type Library

**Process Property (SheetMetalGaugeTableParameters)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Property Process As String
```

SOLIDWORKS Type Library

**ReverseDirection Property (SheetMetalGaugeTableParameters)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Property ReverseDirection As Boolean
```

SOLIDWORKS Type Library

**SetCurrentGaugeNumber Method (SheetMetalGaugeTableParameters)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetCurrentGaugeNumber( _  
    ByVal GaugeNumber As String _  
) As Boolean
```

SOLIDWORKS Type Library

**SetGaugeTablePath Method (SheetMetalGaugeTableParameters)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetGaugeTablePath( _  
    ByVal GaugeTablePath As String _  
) As Boolean
```

SOLIDWORKS Type Library

**SetRadius Method (SheetMetalGaugeTableParameters)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetRadius( _  
    ByVal Radius As Double, _  
    ByVal Override As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

**SetThickness Method (SheetMetalGaugeTableParameters)**



## Syntax

Visual Basic for Applications (VBA)

```
Public Function SetThickness( _  
    ByVal Thickness As Double, _  
    ByVal Override As Boolean _  
) As Boolean
```

# ShellFeatureData (Type)

SOLIDWORKS Type Library  
ShellFeatureData Object

## Object Model

### ShellFeatureData

SOLIDWORKS Type Library  
ShellFeatureData Object Members

## Public Methods

|                                                                                   |                                                |
|-----------------------------------------------------------------------------------|------------------------------------------------|
|  | <a href="#">AccessSelections</a>               |
|  | <a href="#">GetMultipleThicknessAtIndex</a>    |
|  | <a href="#">GetMultipleThicknessFacesCount</a> |
|  | <a href="#">IAccessSelections</a>              |
|  | <a href="#">IGetFacesRemoved</a>               |
|  | <a href="#">IGetMultipleThicknessFaces</a>     |
|  | <a href="#">ISetFacesRemoved</a>               |
|  | <a href="#">ISetMultipleThicknessFaces</a>     |
|  | <a href="#">ReleaseSelectionAccess</a>         |
|  | <a href="#">SetMultipleThicknessAtIndex</a>    |

## Public Properties

|                                                                                     |                                        |
|-------------------------------------------------------------------------------------|----------------------------------------|
|  | <a href="#">Direction</a>              |
|  | <a href="#">FacesRemoved</a>           |
|  | <a href="#">FacesRemovedCount</a>      |
|  | <a href="#">MultipleThicknessFaces</a> |
|  | <a href="#">Thickness</a>              |

SOLIDWORKS Type Library  
AccessSelections Method (ShellFeatureData)

## Syntax

|                                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------|
| Visual Basic for Applications (VBA)                                                                                                   |
| <pre>Public Function AccessSelections( _<br/>    ByVal TopDoc As Object, _<br/>    ByVal Component As Object _<br/>) As Boolean</pre> |

SOLIDWORKS Type Library  
Direction Property (ShellFeatureData)

## Syntax

|                                              |
|----------------------------------------------|
| Visual Basic for Applications (VBA)          |
| <pre>Public Property Direction As Long</pre> |

SOLIDWORKS Type Library  
FacesRemoved Property (ShellFeatureData)

## Syntax

## Public Property FacesRemoved As Variant

SOLIDWORKS Type Library

## FacesRemovedCount Property (ShellFeatureData)



Syntax

Visual Basic for Applications (VBA)

## Public Property FacesRemovedCount As Long

SOLIDWORKS Type Library

## GetMultipleThicknessAtIndex Method (ShellFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetMultipleThicknessAtIndex( _  
    ByVal Index As Integer _  
) As Double
```

SOLIDWORKS Type Library

## GetMultipleThicknessFacesCount Method (ShellFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetMultipleThicknessFacesCount() As Long
```

SOLIDWORKS Type Library

## IAccessSelections Method (ShellFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
) As Boolean
```

SOLIDWORKS Type Library

## IGetFacesRemoved Method (ShellFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetFacesRemoved( _  
    ByVal Count As Integer _  
) As Object
```

SOLIDWORKS Type Library

## IGetMultipleThicknessFaces Method (ShellFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetMultipleThicknessFaces( _  
    ByVal Count As Integer _  
) As Object
```

SOLIDWORKS Type Library

## ISetFacesRemoved Method (ShellFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetFacesRemoved( _  
    ByVal Count As Long, _  
    ByRef FaceArray As Object _  
)
```

SOLIDWORKS Type Library

**ISetMultipleThicknessFaces Method (ShellFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetMultipleThicknessFaces( _  
    ByVal Count As Long, _  
    ByRef FaceArray As Object _  
)
```

SOLIDWORKS Type Library

**MultipleThicknessFaces Property (ShellFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property MultipleThicknessFaces As Variant
```

SOLIDWORKS Type Library

**ReleaseSelectionAccess Method (ShellFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

**SetMultipleThicknessAtIndex Method (ShellFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetMultipleThicknessAtIndex( _  
    ByVal Index As Integer, _  
    ByVal Thickness As Double _  
)
```

SOLIDWORKS Type Library

**Thickness Property (ShellFeatureData)**



Syntax

Visual Basic for Applications (VBA)

```
Public Property Thickness As Double
```