

SOLIDWORKS Enumerations (swconst) — Examples (2/8): DP_Dimensions-DP_DimXpert-ChainDimension

SOLIDWORKS API Documentation (converted from CHM)

Document Properties > Dimensions

Document Properties - Dimensions

System Options Document Properties Search Options

Drafting Standard

- Annotations
 - Balloons
 - Datums
 - Geometric Tolerances
 - Notes
 - Revision Clouds
 - Surface Finishes
 - Weld Symbols
- Dimensions**
 - Virtual Sharps
 - Tables
 - DimXpert
- Detailing
- Grid/Snap
- Units
- Model Display
- Material Properties
- Image Quality
- Sheet Metal MBD
- Sheet Metal
- Weldments
- Plane Display
- Configurations

Overall drafting standard
ANSI

Text
Font... Century Gothic

Dual dimensions
☐ Dual dimensions display ☐ Show units for dual display
☒ Top ☐ Bottom ☐ Right ☐ Left

Primary precision
 $\frac{.01}{X.XXX}$.12 $\frac{.01}{X.XXX}$.12
 1.50 Same as nominal 1.50 Same as nominal

Dual precision
 $\frac{.01}{X.XXX}$.12 $\frac{.01}{X.XXX}$.12
 1.50 Same as nominal 1.50 Same as nominal

Fractional display
 Style: $\frac{x}{x}$ $\frac{x}{xx}$ $\frac{x}{xxx}$ $\frac{x}{xxxx}$ Stack size: 100%
 Show double prime mark ("): $\frac{x}{x''}$ $\frac{x}{xx''}$
☐ Include leading zero for values less than 1"

Bent leaders
 Leader length: 0.25in ☒ Extend to text

Zeros
 Leading zeroes: Standard
 Trailing zeroes:
 Dimensions: Smart
 Tolerances: Remove only on zero
 Properties: Show

Arrows
 0.04in 0.13in 0.25in
☐ Scale with dimension height
 Style:

Offset distances

 0.24in 0.39in

Radial/Diameter leader snap angle: 15deg

Tolerance...
☐ Apply updated rules


☐ Show units of dimensions
☐ Add parentheses by default
☐ Center between extension lines
☐ Include prefix inside basic tolerance box
☐ Display dual basic dimension in one box
☒ Show dimensions as broken in break views
☐ Highlight overridden dimensions in a different color

OK Cancel Help

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingDimension, <Value>)	See ITextFormat for font options	To set font property value implement ITextFormat , so the appropriate ITextFormat member values, and pass the ITextFormat object in I API set method
Dual dimensions - Dual dimensions display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingDimension, <OnFlag>)	Boolean value	Specifies whether to display dimensions in two kinds of units
Dual dimensions - Show units for dual display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowUnitsForDualDisplay, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowUnitsForDualDisplay, swUserPreferenceOption_e.swDetailingDimension, <OnFlag>)	Boolean value	Specifies whether to display units for dual dimensions


Dual dimensions - Dimension Position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingDimension, swDetailingDualDimPosition_e.<Value>)	See swDetailingDualDimPosition_e for valid options	Positions the display of dimensions in two kinds of units
Primary precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies primary precision for linear dimension
Primary precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies primary precision for linear tolerance
Primary precision - Link precisions with model	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingLinearDimPrecisionLinkWithModel, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingLinearDimPrecisionLinkWithModel, swUserPreferenceOption_e.swDetailingDimension, <OnFlag>)	Boolean value	
Dual precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies dual precision for alternate linear dimension
Dual precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies dual precision for alternate linear tolerance
Dual precision - Link precisions with model	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAltLinearDimPrecisionLinkWithModel, swUserPreferenceOption_e.swDetailingDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAltLinearDimPrecisionLinkWithModel, swUserPreferenceOption_e.swDetailingDimension, <OnFlag>)	Boolean value	
Fractional display - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimFractionStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimFractionStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDimFractionStyle_e.<Value>)	See swDetailingDimFractionStyle_e for valid options	
Fractional display - Stack size	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimFractionScaleIndex, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimFractionScaleIndex, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDimFractionScaleIndex_e.<Value>)	See swDetailingDimFractionScaleIndex_e for valid options	
Fractional display - Show double prime mark("")	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDoublePrimeMark, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDoublePrimeMark, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to show the double prime mark (") a fractional display
Fractional display - Include leading zero for values less than 1"	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsShowLeadingZeros, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsShowLeadingZeros, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to show leading zero for values less than 1" in a fractional display
Bent leaders - Leader length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDimBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDimBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies bent leader length
Zeros - Leading zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingLeadingZero_e.<Value>)	See swDetailingLeadingZero_e for valid options	
Zeros - Trailing zeroes - Dimensions	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : - swDimShowTrailingZeros - swDimRemoveTrailingZeros	
Zeros - Trailing zeroes - Tolerances	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingTrailingZeroTolerance, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingTrailingZeroTolerance, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : - swDimShowTrailingZeros - swDimRemoveTrailingZeros - swDimRemoveOnlyOnZero - swDimSameAsDimension	This property cannot be set if Dimensions (swDetailingDimTrailingZero) is set to Smart (swDimSmartTrailingZero)
Zeros - Trailing zeroes - Properties	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingTrailingZeroProperties, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingTrailingZeroProperties, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : - swDimShowTrailingZeros - swDimRemoveTrailingZeros - swDimSameAsDimension	This property cannot be set if Dimensions (swDetailingDimTrailingZero) is set to Smart (swDimSmartTrailingZero)
Show units of dimensions	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDimensionUnits, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDimensionUnits, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to show dimension units
Add parentheses by default	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsShowParenthesisByDefault, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsShowParenthesisByDefault, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to show reference dimensions with parentheses in drawings
Center between extension lines	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsCenterText, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsCenterText, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to center dimension text between extension lines
Include prefix inside basic tolerance box	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsPrefixInsideBasicTolBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsPrefixInsideBasicTolBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to include prefix inside basic tolerance box
Display dual basic dimension in one box	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDisplayDualBasicDimensionInOneBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDisplayDualBasicDimensionInOneBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to display dual basic dimensions in one box

Show dimensions as broken in break views	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsShowBroken, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsShowBroken, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to show dimensions as broken in break views
Highlight overridden dimensions in a different color	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDimOverriddenHighlight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDimOverriddenHighlight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	
Apply updated rules	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsApplyUpdatedRules, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsApplyUpdatedRules, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to apply updated rules
Radial/Diameter leader snap angle	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDimRadialSnapAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDimRadialSnapAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0 and 90	Specifies radial leader snap angle.
Tolerance...	See Comments	See Comments	See Dimension Tolerance
Arrows - Width	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingArrowWidth, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingArrowWidth, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies width of arrowheads
Arrows - Height	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingArrowHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingArrowHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies length of arrowheads
Arrows - Length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingArrowLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingArrowLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies length of arrows
Arrows - Scale with dimension height	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingScaleWithDimHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingScaleWithDimHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to scale the arrow head to the height of the dimension text
Arrows - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingArrowStyleForDimensions, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingArrowStyleForDimensions, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swArrowStyle_e.<Value>)	See swArrowStyle_e for valid options	Specifies the default style dimension arrows
Arrows - Position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionArrowPosition, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionArrowPosition, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimensionArrowsSide_e.<Value>)	See swDimensionArrowsSide_e for valid options	Specifies position of arrow
Offset distances - Annotation view layout	See Comments	See Comments	Not currently available in SOLIDWORKS API
Offset distances - Dimension to dimension offset	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDimToDimOffset, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDimToDimOffset, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies distance between dimension lines for baseline dimensions and Align Parallel/Concentric; offset distance for dimensions displayed with tolerances automatically doubled
Offset distances - Object to dimension offset	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingObjectToDimOffset, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingObjectToDimOffset, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies distance between model and first dimension baseline dimensions but not for Align Parallel/Concentric
Break dimension extension/leader lines - Gap	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDimBreakGap, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDimBreakGap, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	For drawings only; Specifies dimension's gap in extensions and leader lines when they are broken
Break dimension extension/leader lines - Break only around dimension arrows	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimBreakAroundArrow, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimBreakAroundArrow, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	For drawings only; Specifies whether to have breaks occur only where lines cross arrow
Extension lines - Gap	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingWitnessLineGap, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingWitnessLineGap, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	For drawings only; Specifies the distance between the model and dimension extension lines
Extension lines - Beyond dimension line	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingWitnessLineExtension, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingWitnessLineExtension, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	For drawings only; Specifies length of the extension line beyond dimension line

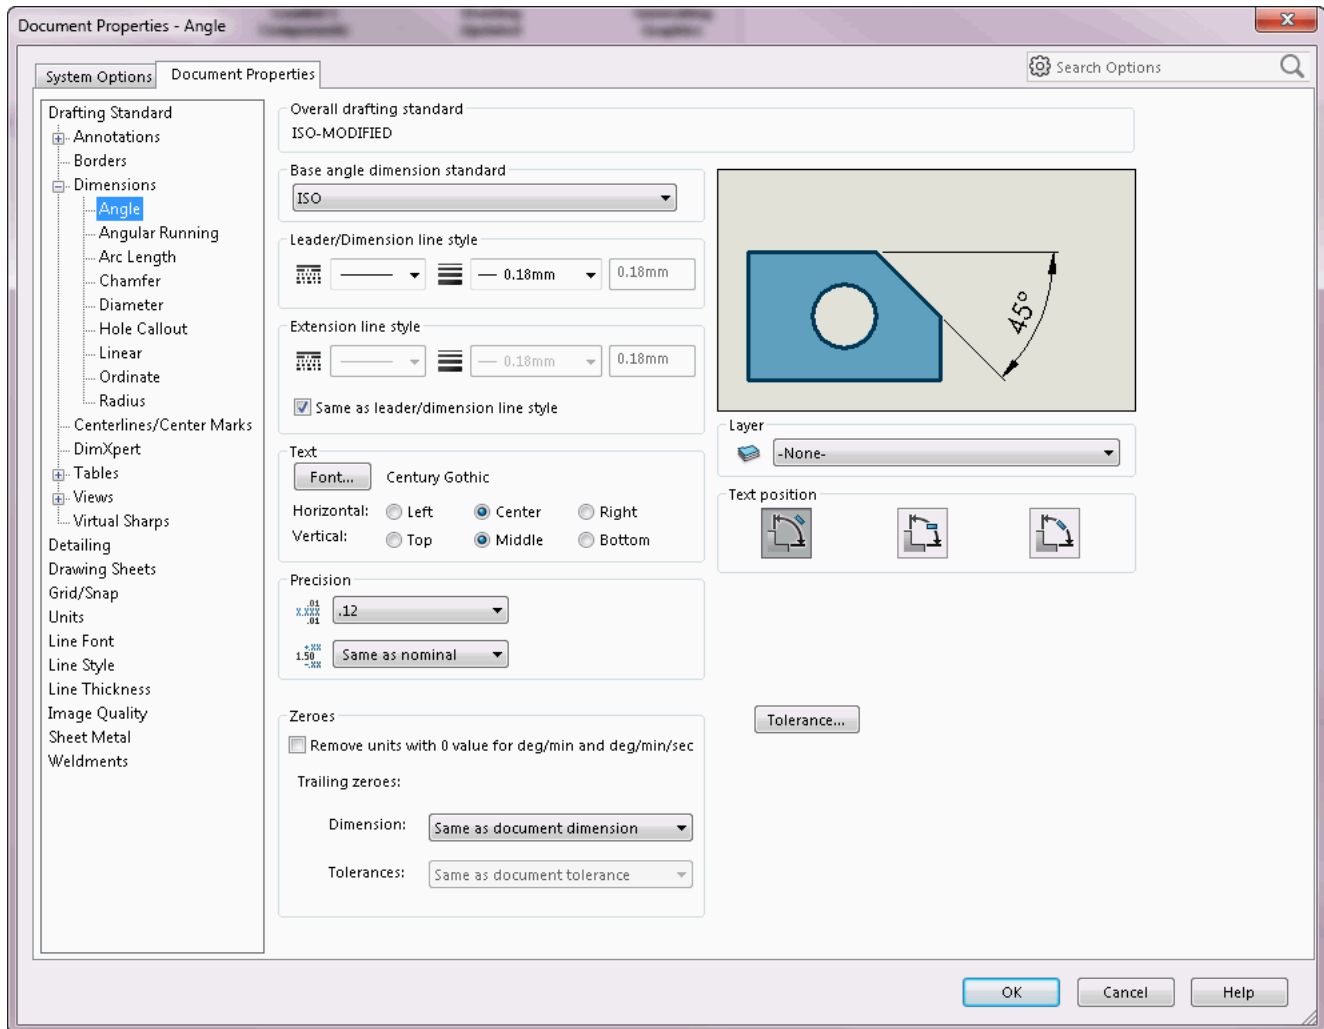

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Base angle dimension standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingAngleDimension, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base angle dimensioning standard to use
Leader/Dimension Line Style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingAngleDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style leader lines for angle dimensions
Leader/Dimension Line Style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingAngleDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of leader lines for angle dimensions
Leader/Dimension Line Style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingAngleDimension, <Value>)	Double value	Specifies a custom thickness for leader lines in angle dimensions; see Custom Thickness to the specified thickness and Leader Thickness to Custom Size

Extension Line Style - Extension Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingAngleDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style extension line: for angle dimensions
Extension Line Style - Extension Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingAngleDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of extension line: for angle dimensions
Extension Line Style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingAngleDimension, <Value>)	Double value	Specifies a custom thickness for extension line: in angle dimensions; see Extension Line Style - Custom Thickness to the specified thickness and Extension Line Style - Custom Thickness to Custom Size
Extension Line Style - Same as leader/dimension line style	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingAngleDimension, <OnFlag>)	Boolean value	Specifies whether the extension line style is the same as the leader/dimension line style
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingAngleDimension, <Value>)	See ITextFormat for font options	To set font property value implement ITextFormat , set the appropriate ITextFormat member value and pass the ITextFormat object in the A set method
Text - Horizontal	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingAngleDimension, swTextJustification_e.<Value>)	See swTextJustification_e for valid options	
Text - Vertical	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingAngleDimension, swTextAlignmentVertical_e.<Value>)	See swTextAlignmentVertical_e for valid options	
Precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngularDimPrecision, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngularDimPrecision, swUserPreferenceOption_e.swDetailingAngleDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies integer value for angular precision
Precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngularTolPrecision, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngularTolPrecision, swUserPreferenceOption_e.swDetailingAngleDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies integer value for tolerance precision
Zeros - Remove units with 0 value for deg/min and deg/min/sec	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAngDimensionsRemoveInsignificantZeros, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAngDimensionsRemoveInsignificantZeros, swUserPreferenceOption_e.swDetailingAngleDimension, <OnFlag>)	Boolean value	Specifies whether to hide angle dimension units when equal to 0 deg/min or 0 deg/min/sec
Zeros - Trailing zeros - Dimension	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngleTrailingZero, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngleTrailingZero, swUserPreferenceOption_e.swDetailingAngleDimension, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : - swDimShowTrailingZeros - swDimRemoveTrailingZeros - swDimSameAsDocumentDimension	
Zeros - Trailing zeros - Tolerances	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngleTrailingZeroTolerance, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngleTrailingZeroTolerance, swUserPreferenceOption_e.swDetailingAngleDimension, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : - swDimShowTrailingZeros - swDimRemoveTrailingZeros - swDimRemoveOnlyOnZero - swDimSameAsDocumentTolerance	
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingAngleDimension, <Value>)	Valid Options: "Border" "Dimensions" "Notes" "BOM" "FORMAT"	This setting is available only in drawings; depending on drawing, some options may not apply
Text position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingAngleDimension, swDisplayDimensionLeaderText_e.<Value>)	See swDisplayDimensionLeaderText_e for valid options	
Leader display - Use bent leaders	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimANSIBentLeader, swUserPreferenceOption_e.swDetailingAngleDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimANSIBentLeader, swUserPreferenceOption_e.swDetailingAngleDimension, <OnFlag>)	Boolean value	Specifies whether to use bent leaders only if detailing standard is ANSI
Tolerance...	See Comments	See Comments	See Dimension Tolerance

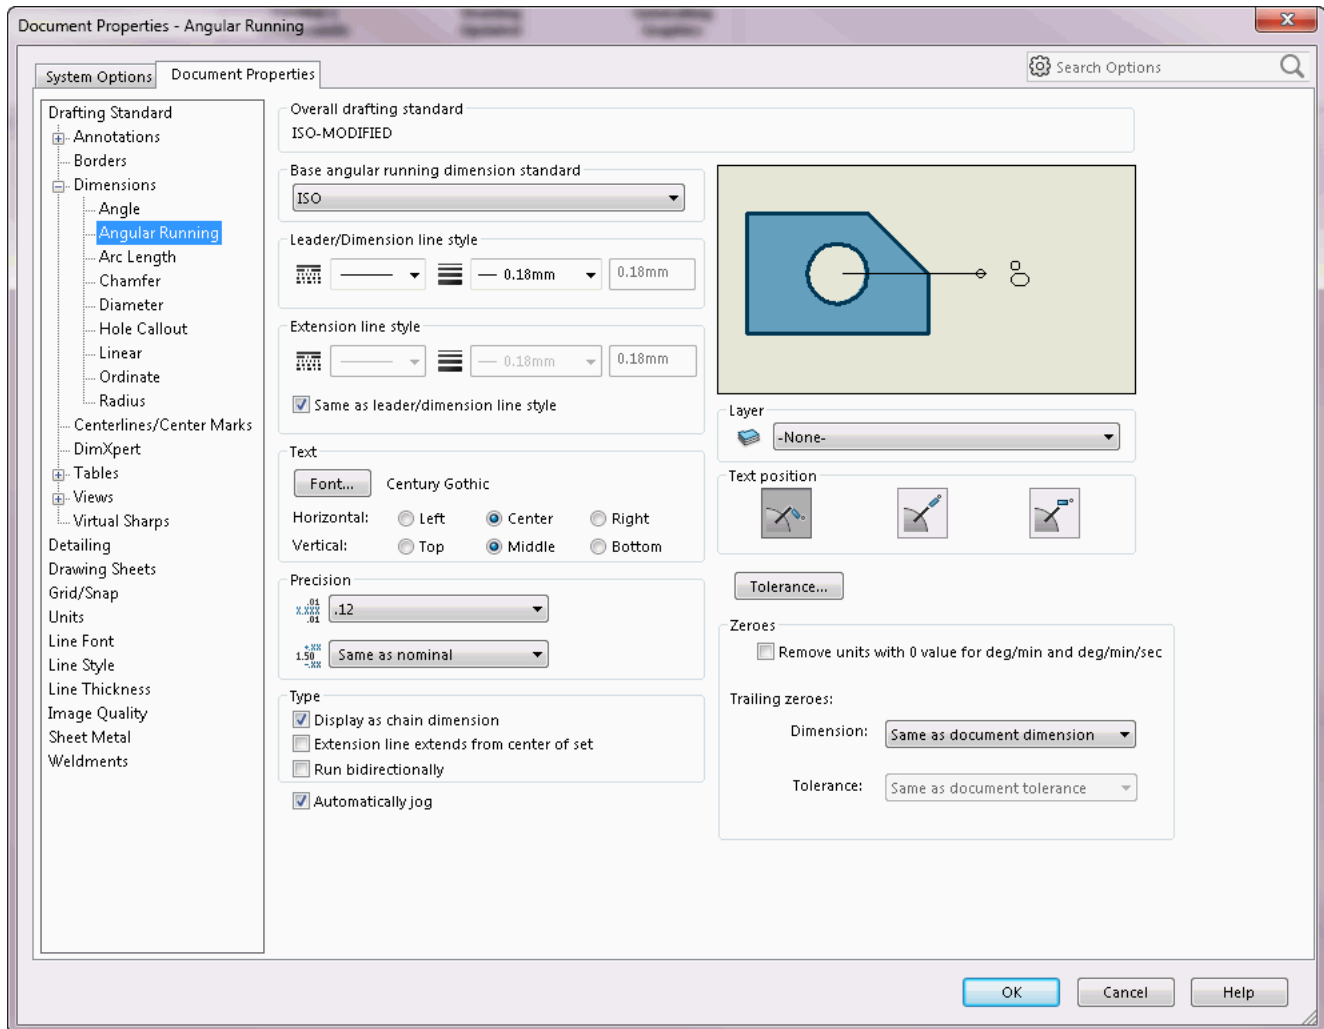


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Base angular running dimension standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base angular running dimensioning standard to use
Leader/Dimension Line Style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style of leader lines for angular running dimensions
Leader/Dimension Line Style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of leader lines for angular running dimensions
Leader/Dimension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <Value>)	Double value	Specifies a custom thickness for leader lines for angular running dimensions; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Extension Line Style - Extension Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style of extension lines for angular running dimensions

Extension Line Style - Extension Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of extension lines for angular running dimensions
Extension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <Value>)	Double value	Specifies a custom thickness for extension lines in angular running dimensions; sets Custom Thickness to the specified thickness and Extension Line Thickness to Custom Size
Extension Line Style - Same as leader/dimension line style	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <OnFlag>)	Boolean value	Specifies whether the extension line style is the same as the leader/dimension line style
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <Value>)	See ITextFormat for font options	To set font property values, implement <code>ITextFormat</code> , set the appropriate <code>ITextFormat</code> member values, and pass the <code>ITextFormat</code> object in the API set method
Text - Horizontal	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swTextJustification_e.<Value>)	See swTextJustification_e for valid options	
Text - Vertical	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swTextAlignmentVertical_e.<Value>)	See swTextAlignmentVertical_e for valid options	
Precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies primary precision for linear dimension
Precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies primary precision for tolerance
Type - Display as chain dimension	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAngularRunningDisplayAsChain, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAngularRunningDisplayAsChain, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <OnFlag>)	Boolean value	Specifies whether to display angular running dimensions as chain dimensions
Type - Extension line extends from center of set	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAngularRunningExtensionLineExtend, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAngularRunningExtensionLineExtend, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <OnFlag>)	Boolean value	Specifies whether to extend the angular running dimension extension line from center of set
Type - Run bidirectionally	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAngularRunningRunBidirectionally, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAngularRunningRunBidirectionally, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <OnFlag>)	Boolean value	Specifies whether to display bidirectional angular running dimensions
Automatically jog	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsAutoJogAngularRunning, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsAutoJogAngularRunning, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <OnFlag>)	Boolean value	Specifies whether to automatically jog angular running dimensions
Tolerance...	See Comments	See Comments	See Dimension Tolerance
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <Value>)	Valid Options: "Border" "Dimensions" "Notes" "BOM" "FORMAT"	This setting is available only on drawings; depending on drawing, some options may not apply
Text position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swDisplayDimensionLeaderText_e.<Value>)	See swDisplayDimensionLeaderText_e for valid options	Specifies how to display angular running dimension text
Zeroes - Remove units with 0 value for deg/min and deg/min/sec	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAndDimensionsRemoveInsignificantZeros, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAndDimensionsRemoveInsignificantZeros, swUserPreferenceOption_e.swDetailingAngularRunningDimension, <OnFlag>)	Boolean value	Specifies whether to hide angular running dimension units when equal to 0 deg/min or 0 deg/min/sec
Zeroes - Trailing zeroes - Dimension	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngularRunningTrailingZero, swUserPreferenceOption_e.swDetailingAngularRunningDimension)	Valid options in swDetailingDimTrailingZero_e : swDimShowTrailingZeroes	


	IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngularRunningTrailingZero, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swDetailingDimTrailingZero_e.<Value>)	• swDimRemoveTrailingZeroes • swDimSameAsDocumentDimension	
Zeroes - Trailing zeroes - Tolerance	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngularRunningTrailingZeroTolerance, swUserPreferenceOption_e.swDetailingAngularRunningDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAngularRunningTrailingZeroTolerance, swUserPreferenceOption_e.swDetailingAngularRunningDimension, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : • swDimShowTrailingZeroes • swDimRemoveTrailingZeroes • swDimRemoveOnlyOnZero • swDimSameAsDocumentTolerance	

Document Properties > Dimensions > Arc Length

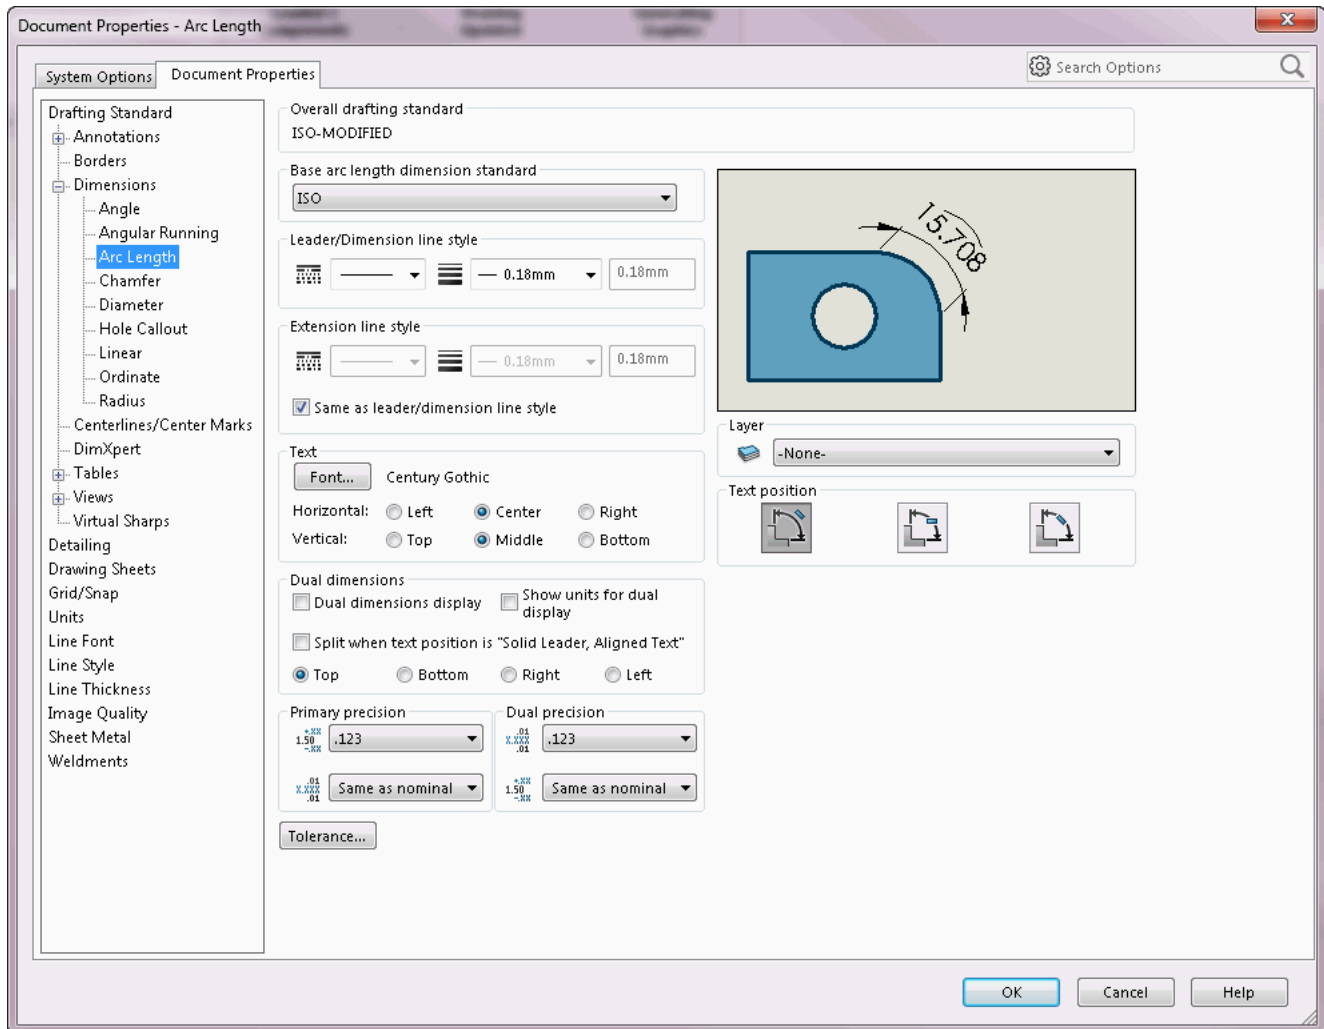


Setting	Get/Set Methods	Return Value or <Value>	
Base arc length dimension standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingArcLengthDimension, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base arc length dimension standard
Leader/Dimension Line Style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingArcLengthDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies styles of leader dimensions
Leader/Dimension Line Style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingArcLengthDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of leader dimensions
Leader/Dimension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	Double value	Specifies a custom thickness for leader dimensions; sets Custom Thickness and Leader Thickness
Extension Line Style - Extension Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingArcLengthDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies styles of extension dimensions
Extension Line Style - Extension Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingArcLengthDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of extension dimensions
Extension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	Double value	Specifies a custom thickness for extension dimensions; sets Custom Thickness and Extension Line Thickness

Extension Line Style - Same as leader/dimension line style	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	Boolean value	Specifies whether the extension line style is the same as the leader/dimension line style
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	See ITextFormat for font options	To set font property value, use appropriate ITextFormat object in the ITextFormat interface
Text - Horizontal	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingArcLengthDimension, swTextJustification_e.<Value>)	See swTextJustification_e for valid options	
Text - Vertical	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingArcLengthDimension, swTextAlignmentVertical_e.<Value>)	See swTextAlignmentVertical_e for valid options	
Dual dimensions - Dual dimensions display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	Boolean value	Specifies whether to display dual dimensions
Dual dimensions - Show units for dual display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	Boolean value	Specifies whether to display units for dual dimensions
Dual dimensions - Split when text position is "Solid Leader, Aligned Text"	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSplitDualDimensions, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSplitDualDimensions, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	Boolean value	Specifies whether to split dual dimensions below dimension lines; see swDisplayDimensionLeaderText_e
Dual dimensions - Dimension Position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingArcLengthDimension, swDetailingDualDimPosition_e.<Value>)	See swDetailingDualDimPosition_e for valid options	Positions the display of dual dimensions
Primary precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies primary dimension precision
Primary precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingArcLengthDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies primary dimension tolerance precision
Dual precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies dual dimension precision
Dual precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingArcLengthDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies dual dimension tolerance precision
Tolerance...	See Comments	See Comments	See Dimension Tolerance
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingArcLengthDimension, <Value>)	Valid Options: "Border" "Dimensions" "Notes" "BOM" "FORMAT"	This setting is available in the drawing, some options may not be available
Text position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingArcLengthDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingArcLengthDimension, swDisplayDimensionLeaderText_e.<Value>)	See swDisplayDimensionLeaderText_e for valid options	

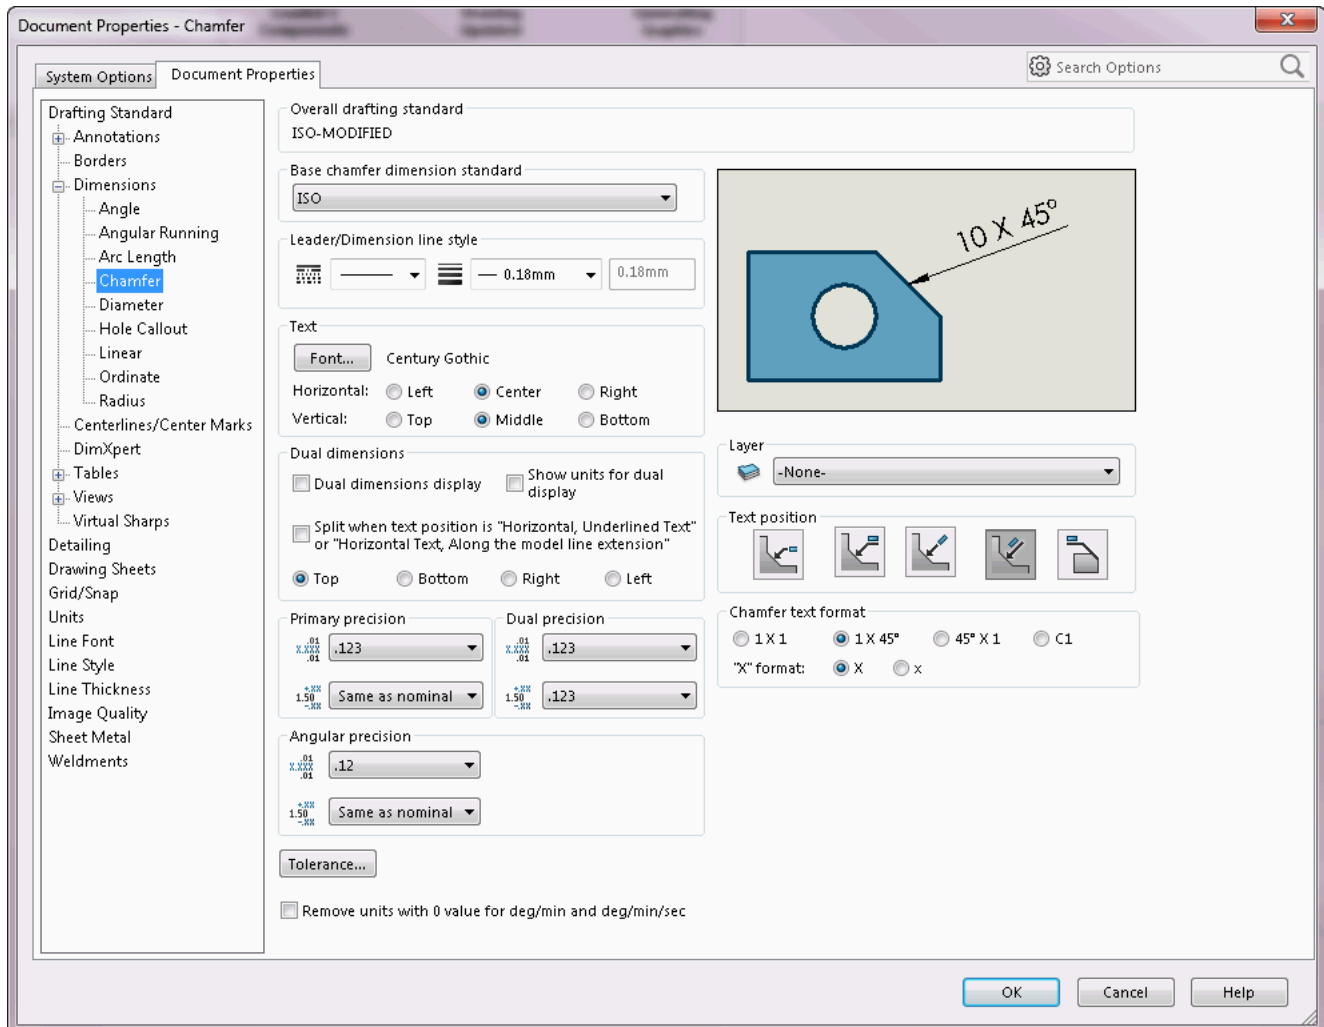


Setting	Get/Set Methods	Return Value or <Value>	
Base chamfer dimension standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingChamferDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingChamferDimension, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base
Leader/Dimension Line Style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingChamferDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingChamferDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style of le
Leader/Dimension Line Style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingChamferDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingChamferDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness
Leader/Dimension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingChamferDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	Double value	Specifies a custom Custom Thickness: Custom Size
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingChamferDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	See TextFormat for font options	To set font property (TextFormat membe method
Text - Horizontal	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingChamferDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingChamferDimension, swTextJustification_e.<Value>)	See swTextJustification_e for valid options	
Text - Vertical	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingChamferDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingChamferDimension, swTextAlignmentVertical_e.<Value>)	See swTextAlignmentVertical_e for valid options	

Dual dimensions - Dual dimensions display	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	Boolean value	Specifies whether to
Dual dimensions - Show units for dual display	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	Boolean value	Specifies whether to drawings
Dual dimensions - Split when text position is "Horizontal, Underlined Text" or "Horizontal Text, Along the model line extension"	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swDetailingSplitDualDimensions, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swDetailingSplitDualDimensions, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	Boolean value	Specifies whether to lines; valid only wht swDetailingChamfer or swDetailingChamfer
Dual dimensions - Dimension position	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingChamferDimension, swDetailingDualDimPosition_e.<Value>)	See swDetailingDualDimPosition_e for valid options	Positions the display
Primary precision - Unit Precision	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies primary p
Primary precision - Tolerance Precision	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingChamferDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies primary p
Dual precision - Unit Precision	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies dual precisi
Dual precision - Tolerance Precision	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingChamferDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies dual precisi
Angular precision - Unit Precision	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingAngularDimPrecision, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingAngularDimPrecision, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies integer va
Angular precision - Tolerance Precision	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingAngularTolPrecision, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingAngularTolPrecision, swUserPreferenceOption_e.swDetailingChamferDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies integer va
Tolerance...	See Comments	See Comments	See Dimension Tol
Layer	[ModelDocExtension::GetUserPreferenceString](swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceString](swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	Valid Options: "Border" "Dimensions" "Notes" "BOM" "FORMAT"	This setting is avail may not apply
Text position	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingChamferDimension, swDetailingChamferDimLeaderStyle_e.<Value>)	See swDetailingChamferDimLeaderStyle_e for valid options	Specifies how to dis
Chamfer text format - "X" format	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingChamferDimXStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swDetailingChamferDimXStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingChamferDimXStyle_e.<Value>)	See swDetailingChamferDimXStyle_e for valid options	Specifies whether t
Remove units with 0 value for deg/min and deg/min/sec	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swDetailingChamferRemoveInsignificantZeros, swUserPreferenceOption_e.swDetailingChamferDimension) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swDetailingChamferRemoveInsignificantZeros, swUserPreferenceOption_e.swDetailingChamferDimension, <Value>)	Boolean value	Specifies whether to l deg/min/sec

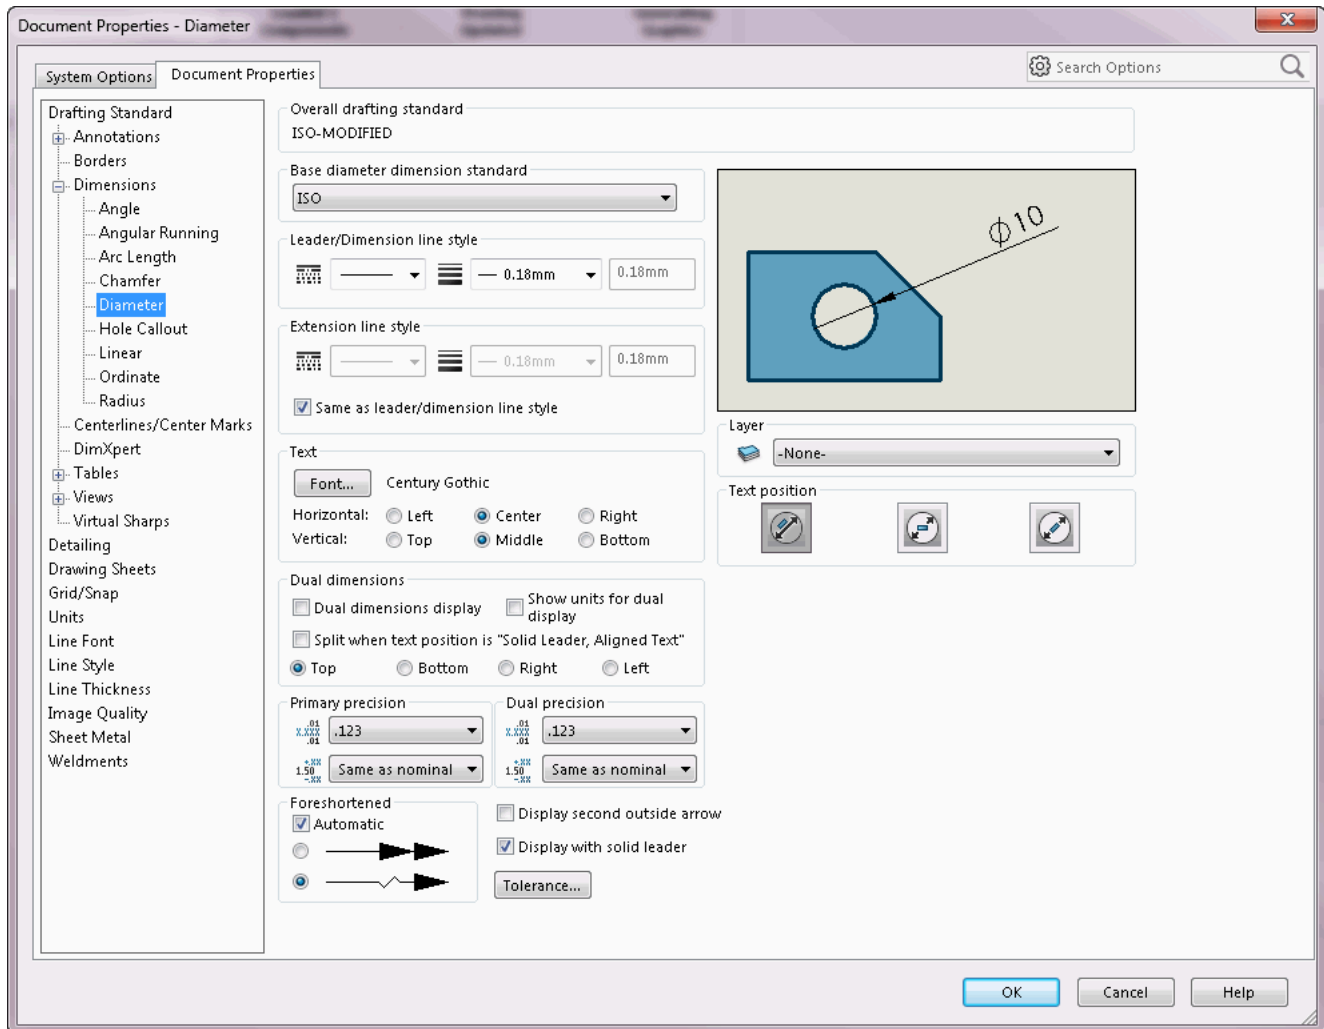

Setting	Get/Set Methods	Return Value or <Value>	
Base diameter dimension standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingDiameterDimension, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies
Leader/Dimension Line Style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingDiameterDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies
Leader/Dimension Line Style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingDiameterDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies
Leader/Dimension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Double value	Specifies dimension thickness
Extension Line Style - Extension Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingDiameterDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies
Extension Line Style - Extension Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingDiameterDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies dimension
Extension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Double value	Specifies dimension thickness


Extension Line Style - Same as leader/dimension line style	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Boolean value	Specifies leader/dim
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	See ITextFormat for font options	To set font appropriate ITextForm
Text - Horizontal	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	See swTextJustification_e for valid options	
Text - Vertical	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	See swTextAlignmentVertical_e for valid options	
Dual dimensions - Dual dimensions display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Boolean value	Specifies
Dual dimensions - Show units for dual display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Boolean value	Specifies available i
Dual dimensions - Split when text position is "Solid Leader, Aligned Text"	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSplitDualDimension, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSplitDualDimension, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Boolean value	Specifies below dim swDisplay
Dual dimensions - Dimension position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	See swDetailingDualDimPosition_e for valid options	Positions
Primary precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies
Primary precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies
Dual precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies
Dual precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies
Foreshortened - Automatic	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDiameterForeshortenedAutomatic, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDiameterForeshortenedAutomatic, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Boolean value	Specifies dimension
Foreshortened - Double Arrow or Zigzag	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingForeshortenedDiameterStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingForeshortenedDiameterStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See swDetailingForeshortenedDiameterStyle_e for valid options	Specifies dimension
Display second outside arrow	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplay2ndOutsideArrow, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplay2ndOutsideArrow, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Boolean value	Specifies
Display with solid leader	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplayWithSolidLeader, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplayWithSolidLeader, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Boolean value	Specifies leaders
Tolerance...	See Comments	See Comments	See Dime
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	Valid Options: "Border" "Dimensions" "Notes" "BOM" "FORMAT"	This settir drawing, s
Text position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingDiameterDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingDiameterDimension, <Value>)	See swDisplayDimensionLeaderText_e for valid options	Specifies

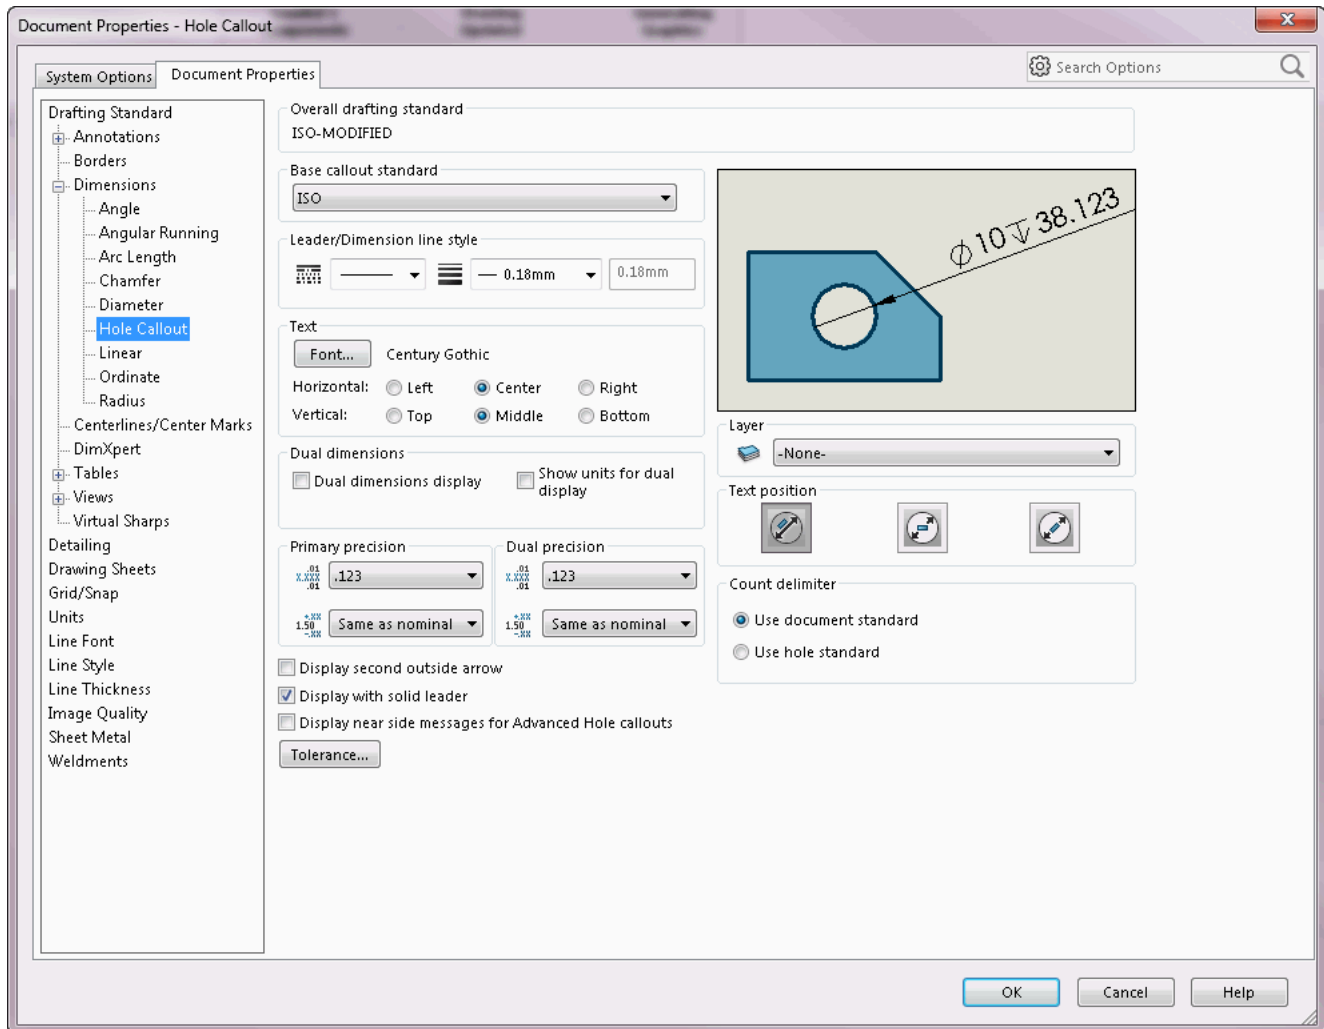

Setting	Get/Set Methods	Return Value or <Value>	Comments
Base callout standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingHoleDimension, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base callout dimensioning standard to use
Leader/Dimension Line Style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingHoleDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style of leader lines for hole callout dimensions
Leader/Dimension Line Style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingHoleDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of leader lines for hole callout dimensions
Leader/Dimension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	Double value	Specifies a custom thickness for leader lines in hole callout dimensions; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat

			member values, and pass the ITextFormat object in the API set method
Text - Horizontal	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingHoleDimension, swTextJustification_e.<Value>)	See swTextJustification_e for valid options	
Text - Vertical	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingHoleDimension, swTextAlignmentVertical_e.<Value>)	See swTextAlignmentVertical_e for valid options	
Dual dimensions - Dual dimensions display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	Boolean value	Specifies whether to display dimensions in two kinds of units
Dual dimensions - Show units for dual display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	Boolean value	Specifies whether to display units for dual dimensions; available only on drawings
Primary precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies primary precision for linear dimension
Primary precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingHoleDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies primary precision for tolerance
Dual precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies dual precision for alternate linear dimension
Dual precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingHoleDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies dual precision for alternate linear tolerance
Display second outside arrow	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplay2ndOutsideArrow, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplay2ndOutsideArrow, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	Boolean value	Specifies whether to display two outside arrows
Display with solid leader	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplayWithSolidLeader, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplayWithSolidLeader, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	Boolean value	Specifies whether to display the hole callout with a solid leader
Display near side messages for Advanced Hole callouts	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplayNearSideMessages, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplayNearSideMessages, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	Boolean value	Specifies whether to display near side messages for advanced hole callouts
Tolerance...	See Comments	See Comments	See Dimension Tolerance
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingHoleDimension, <Value>)	Valid Options: "Border" "Dimensions" "Notes" "BOM" "FORMAT"	This setting is available only on drawings; depending on drawing, some options may not apply
Text position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingHoleDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingHoleDimension, swDisplayDimensionLeaderText_e.<Value>)	See swDisplayDimensionLeaderText_e for valid options	Specifies how to display leader


Document Properties > Dimensions > Linear

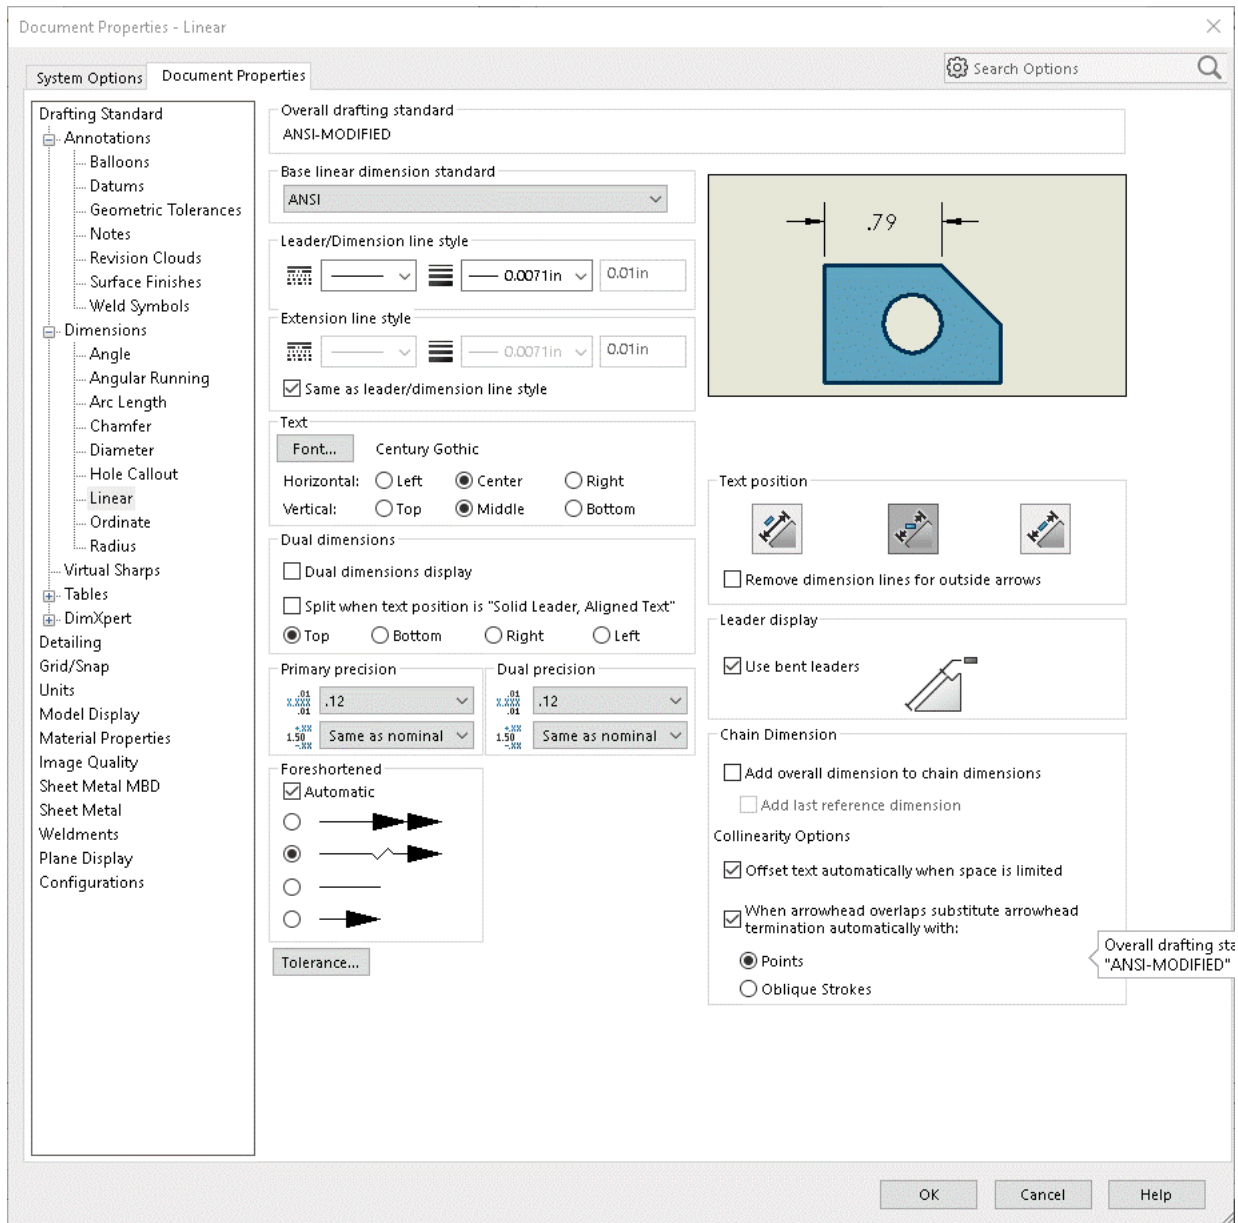

Setting	Get/Set Methods	Return Value or <Value>	
Base linear dimension standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingLinearDimension, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specific
Leader/Dimension Line Style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingLinearDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specific
Leader/Dimension Line Style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingLinearDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specific
Leader/Dimension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Double value	Specific dimension thickness

Extension Line Style - Extension Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingLinearDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specify
Extension Line Style - Extension Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingLinearDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specify
Extension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Double value	Specify dimension thickness
Extension Line Style - Same as leader/dimension line style	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	Specify leader/d
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	See ITextFormat for font options	To set font appropriately
Text - Horizontal	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingLinearDimension, swTextJustification_e.<Value>)	See swTextJustification_e for valid options	
Text - Vertical	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingLinearDimension, swTextAlignmentVertical_e.<Value>)	See swTextAlignmentVertical_e for valid options	
Dual dimensions - Dual dimensions display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	Specify
Dual dimensions - Show units for dual display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	Specify available
Dual dimensions - Split when text position is "Solid Leader, Aligned Text"	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSplitDualDimensions, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSplitDualDimensions, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	Specify below dimension display
Dual dimensions - Dimension position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingLinearDimension, swDetailingDualDimPosition_e.<Value>)	See swDetailingDualDimPosition_e for valid options	Position
Primary precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Number of decimal places to display; 0 through 8	Specify
Primary precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingLinearDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specify
Dual precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Number of decimal places to display; 0 through 8	Specify
Dual precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingLinearDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specify
Foreshortened - Automatic	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingLinearForeshortenedAutomatic, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingLinearForeshortenedAutomatic, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	Specify dimension
Foreshortened - Double Arrow, Zigzag, Line, or Single Arrow	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearForeshortened, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearForeshortened, swUserPreferenceOption_e.swDetailingLinearDimension, swDetailingLinearForeshortened_e.<Value>)	See swDetailingLinearForeshortened_e for valid options	Specify dimension
Tolerance...	See Comments	See Comments	See Dim
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Valid Options: "Border" "Dimensions" "Notes" "BOM" "FORMAT"	This set drawing
Text position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingLinearDimension, swDisplayDimensionLeaderText_e.<Value>)	See swDisplayDimensionLeaderText_e for valid options	Specify
Leader display - Use bent leaders	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimANSIBentLeader, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimANSIBentLeader, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	This set

Chain Dimension - Add overall dimension to chain dimensions	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingChainDimensionAddOverallDimensions, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingChainDimensionAddOverallDimensions, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	
Chain Dimension - Add overall dimension to chain dimensions - Add last reference dimension	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingChainDimensionAddLastReferenceDimension, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingChainDimensionAddLastReferenceDimension, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	This set swDetailingChainDimensionAddLastReferenceDimension is true
Chain Dimension - Collinearity Options - Offset text automatically when space is limited	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCollinearChainDimensionOffsetText, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCollinearChainDimensionOffsetText, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	
Chain Dimension - Collinearity Options - When arrowhead overlaps substitute arrowhead termination automatically with:	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCollinearChainDimensionArrowHeadTermination, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCollinearChainDimensionArrowHeadTermination, swUserPreferenceOption_e.swDetailingLinearDimension, <Value>)	Boolean value	
Chain Dimension - Collinearity Options - Points or Oblique Strokes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swCollinearChainDimensionArrowHeadTerminationStyle, swUserPreferenceOption_e.swDetailingLinearDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swCollinearChainDimensionArrowHeadTerminationStyle, swUserPreferenceOption_e.swDetailingLinearDimension, swCollinearChainDimArrowHeadStyle_e.<Value>)	See swCollinearChainDimArrowHeadStyle_e for valid options	

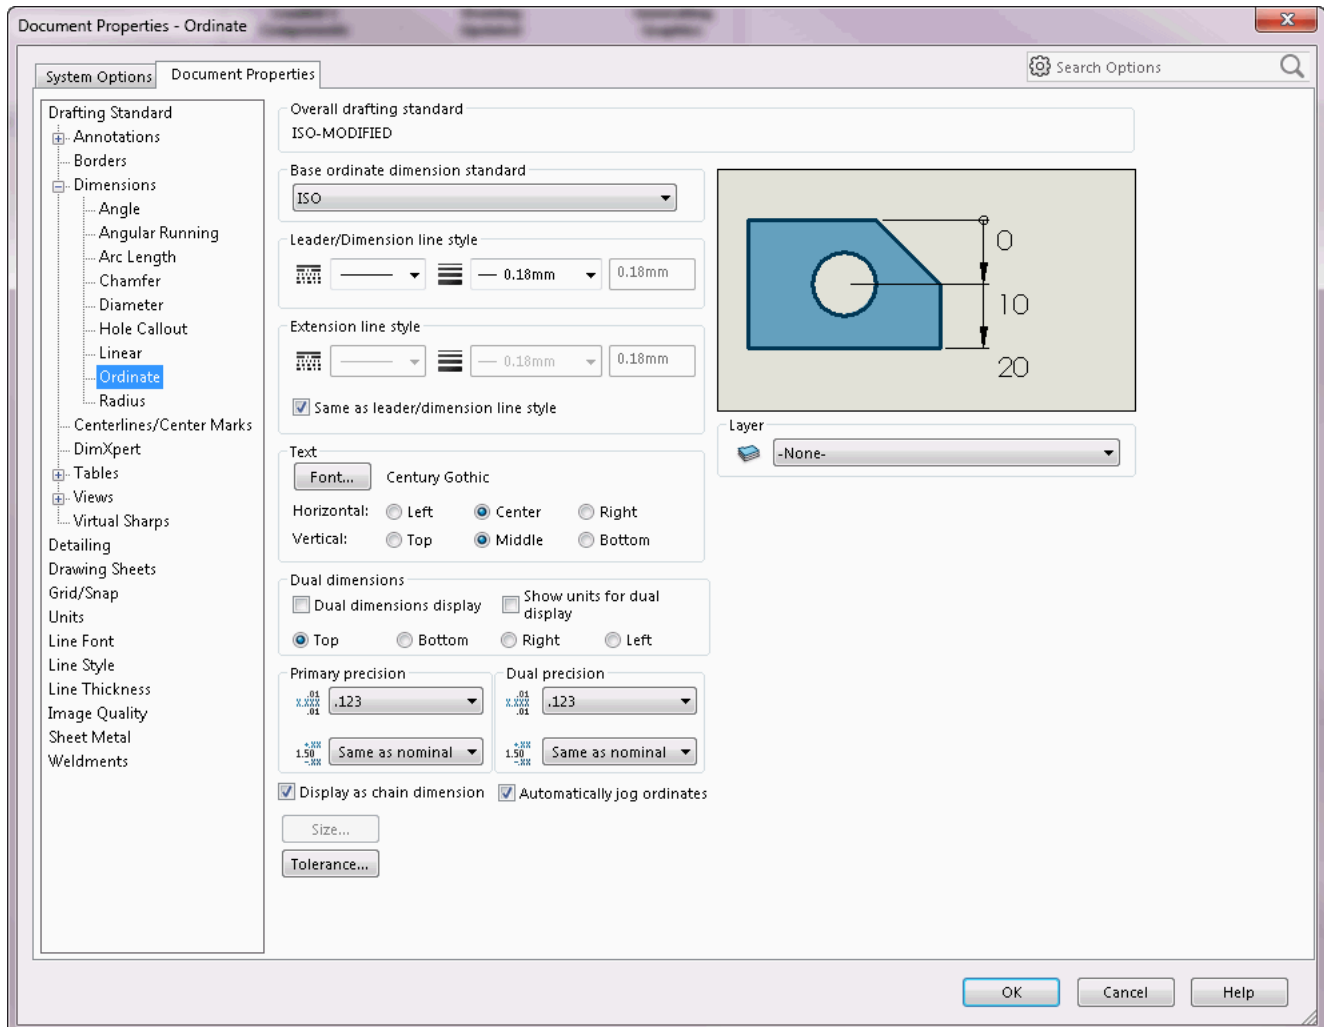

Setting	Get/Set Methods	Return Value or <Value>	Comments
Base ordinate dimension standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingOrdinateDimension, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base ordinate dimensioning standard to use
Leader/Dimension Line Style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingOrdinateDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style of leader lines for ordinate dimensions
Leader/Dimension Line Style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingOrdinateDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of leader lines for ordinate dimensions
Leader/Dimension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	Double value	Specifies a custom thickness for leader lines in ordinate dimensions; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Extension Line Style - Extension Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyle, swUserPreferenceOption_e.swDetailingOrdinateDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style of extension lines for ordinate dimensions


Extension Line Style - Extension Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDimensionsExtensionLineStyleThickness, swUserPreferenceOption_e.swDetailingOrdinateDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of extension lines for ordinate dimensions
Extension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDimensionsExtensionLineStyleThicknessCustom, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	Double value	Specifies a custom thickness for extension lines in ordinate dimensions; sets Custom Thickness to the specified thickness and Extension Line Thickness to Custom Size
Extension Line Style - Same as leader/dimension line style	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDimensionsExtensionLineStyleSameAsLeader, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	Boolean value	Specifies whether the extension line style is the same as the leader/dimension line style
Text - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat, set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method
Text - Horizontal	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingOrdinateDimension, swTextJustification_e.<Value>)	See swTextJustification_e for valid options	
Text - Vertical	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingOrdinateDimension, swTextAlignmentVertical_e.<Value>)	See swTextAlignmentVertical_e for valid options	
Dual dimensions - Dual dimensions display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	Boolean value	Specifies whether to display dimensions in two kinds of units
Dual dimensions - Show units for dual display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	Boolean value	Specifies whether to display units for dual dimensions; available only on drawings
Dual dimensions - Dimension position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingOrdinateDimension, swDetailingDualDimPosition_e.<Value>)	See swDetailingDualDimPosition_e for valid options	Positions the display of dimensions in two kinds of units
Primary precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies primary precision for linear dimension
Primary precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingOrdinateDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies primary precision for tolerance
Dual precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies dual precision for alternate linear dimension
Dual precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingOrdinateDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies dual precision for alternate linear tolerance
Display as chain dimension	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrdinateDisplayAsChain, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrdinateDisplayAsChain, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display ordinate dimension as chain dimension
Automatically jog ordinates	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsAutoJogOrdinates, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsAutoJogOrdinates, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically jog ordinates
Size	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingOrdinateSize, swUserPreferenceOption_e.swDetailingOrdinateDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingOrdinateSize, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	Double value	Specifies the base ordinate dimension arrow size; valid only if Base ordinate dimension standard is set to DIN
Tolerance	See Comments	See Comments	See Dimension Tolerance
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingOrdinateDimension)	Valid Options: • "Border"	This setting is available only on

	IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingOrdinateDimension, <Value>)	• "Dimensions" • "Notes" • "BOM" • "FORMAT"	drawings; depending on drawing, some options may not apply
--	--	---	--

Document Properties > Dimensions > Radius

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the Document Properties - Radius dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog, but are now obsolete and no longer appear on that dialog.

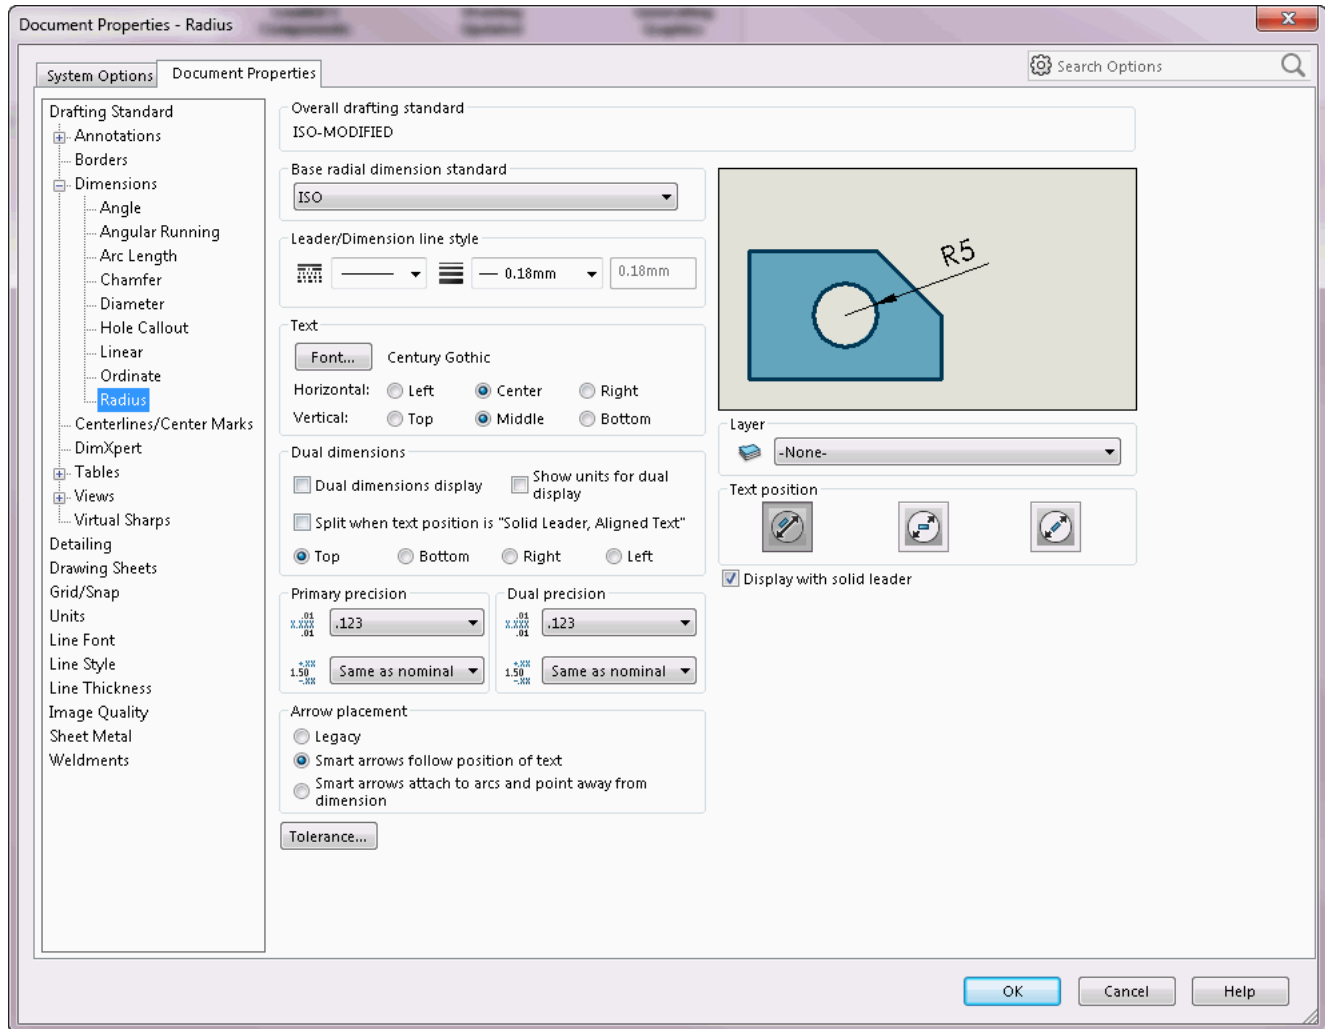


Setting	Get/Set Methods	Return Value or <Value>	
Base radial dimension standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingRadiusDimension, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base radial dimension standard
Leader/Dimension Line Style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsStyle, swUserPreferenceOption_e.swDetailingRadiusDimension, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style of leader
Leader/Dimension Line Style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDimensionsThickness, swUserPreferenceOption_e.swDetailingRadiusDimension, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of leader
Leader/Dimension Line Style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDimensionsThicknessCustom, swUserPreferenceOption_e.swDetailingRadiusDimension, <Value>)	Double value	Specifies a custom thickness; sets Custom thickness and Leader Text
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDimensionTextFormat, swUserPreferenceOption_e.swDetailingRadiusDimension, <Value>)	See ITextFormat for font options	To set font property value; appropriate ITextFormat object in the

Text - Horizontal	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentHorizontal, swUserPreferenceOption_e.swDetailingRadiusDimension, swTextJustification_e.<Value>)	See swTextJustification_e for valid options	
Text - Vertical	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAlignmentVertical, swUserPreferenceOption_e.swDetailingRadiusDimension, swTextAlignmentVertical_e.<Value>)	See swTextAlignmentVertical_e for valid options	
Dual dimensions - Dual dimensions display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDualDimensions, swUserPreferenceOption_e.swDetailingRadiusDimension, <Value>)	Boolean value	Specifies whether to display dual dimensions
Dual dimensions - Show units for dual display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowDualDimensionUnits, swUserPreferenceOption_e.swDetailingRadiusDimension, <Value>)	Boolean value	Specifies whether to display units only on drawings
Dual dimensions - Split when text position is "Solid Leader, Aligned Text"	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSplitWhenTextIsSolidLeaderAligned, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSplitWhenTextIsSolidLeaderAligned, swUserPreferenceOption_e.swDetailingRadiusDimension, <Value>)	Boolean value	Specifies whether to display dimension lines below dimension lines; 1 swDisplayDimensionLeaderText_e
Dual dimensions - Dimension position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingRadiusDimension, swDetailingDualDimPosition_e.<Value>)	See swDetailingDualDimPosition_e for valid options	Positions the display of dual dimensions
Primary precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearDimPrecision, swUserPreferenceOption_e.swDetailingRadiusDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies primary precision
Primary precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLinearTolPrecision, swUserPreferenceOption_e.swDetailingRadiusDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies primary precision
Dual precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearDimPrecision, swUserPreferenceOption_e.swDetailingRadiusDimension, <Value>)	Number of decimal places to display; 0 through 8	Specifies dual precision
Dual precision - Tolerance Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAltLinearTolPrecision, swUserPreferenceOption_e.swDetailingRadiusDimension, swDimensionPrecisionSettings_e.<Value>)	See swDimensionPrecisionSettings_e for valid options	Specifies dual precision
Arrow placement	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRadialDimsArrowPlacement, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRadialDimsArrowPlacement, swUserPreferenceOption_e.swDetailingRadiusDimension, swArrowPlacement_e.<Value>)	See swArrowPlacement_e for valid options	Specifies placement of arrows
Display with solid leader	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplayWithSolidLeader, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingRadialDimsDisplayWithSolidLeader, swUserPreferenceOption_e.swDetailingRadiusDimension, <Value>)	Boolean value	Specifies whether to display with solid leader
Tolerance...	See Comments	See Comments	See Dimension Tolerance
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingRadiusDimension, <Value>)	Valid Options: "Border" "Dimensions" "Notes" "BOM" "FORMAT"	This setting is available in drawings, some options are not available in 3D models
Text position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingRadiusDimension) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionTextAndLeaderStyle, swUserPreferenceOption_e.swDetailingRadiusDimension, swDisplayDimensionLeaderText_e.<Value>)	See swDisplayDimensionLeaderText_e for valid options	Specifies how to display dimension text

Obsolete Enumerators

Enumerator	Comment
swDetailingRadialDimsArrowsFollowText	Obsolete
swDetailingRadialDimsDisplay2ndOutsideArrow	Obsolete

Document Properties > Dimensions > Dimension Tolerance

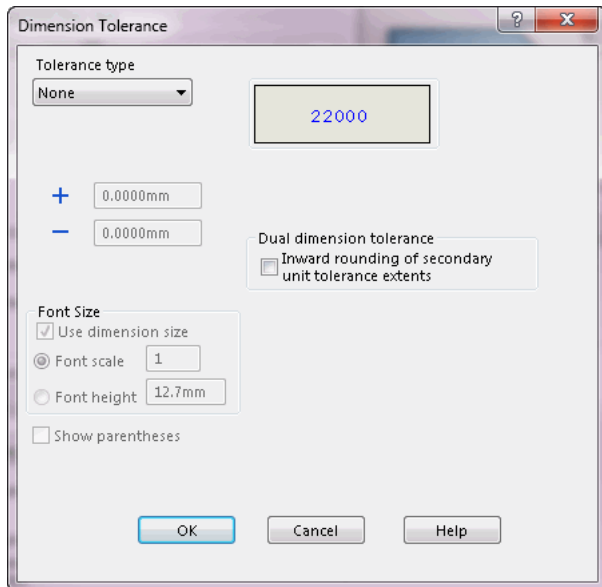

The dialog above appears when the **Tolerance** button is clicked on the following document property pages:

Document Properties page	<UserPrefOption>
Dimensions	swDetailingDimension
Dimensions > Angle	swDetailingAngleDimension
Dimensions > Angular Running	swDetailingAngularRunningDimension
Dimensions > Arc Length	swDetailingArcLengthDimension
Dimensions > Chamfer	swDetailingChamferDimension
Dimensions > Diameter	swDetailingDiameterDimension
Dimensions > Hole Callout	swDetailingHoleDimension
Dimensions > Linear	swDetailingLinearDimension
Dimensions > Ordinate	swDetailingOrdinateDimension
Dimensions > Radius	swDetailingRadiusDimension

Substitute <UserPrefOption> in the methods following to get and set the dimension tolerance settings for a given dimension document property.

Setting	Get/Set Methods	Return Value or <Value>	Comments
Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingToleranceStyle, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingToleranceStyle, swUserPreferenceOption_e.<UserPrefOption>, swTolType_e.<Value>)	See swTolType_e for valid options	
Maximum tolerance value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingMaxToleranceValue, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingMaxToleranceValue, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Double value	Specifies the maximum tolerance for dimensions in a drawing document
Minimum tolerance value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingMinToleranceValue, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingMinToleranceValue, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Double value	Specifies the minimum tolerance for dimensions in a drawing document
Dual dimension tolerance - Inward rounding of secondary unit tolerance extents	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsToleranceInwardRounding, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsToleranceInwardRounding, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Boolean value	Specifies whether to set the limits of the secondary unit's tolerance range to fit within the tolerance range of the primary unit by using inward rounding so that the dual dimension does not

			conflict with the primary dimension
Font - Use dimension font	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsToleranceUseDimensionFont, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsToleranceUseDimensionFont, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Boolean value	Specifies whether to change font size for dimension tolerance text
Font - Size by scale or height	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingToleranceTextSizing, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingToleranceTextSizing, swUserPreferenceOption_e.<UserPrefOption>, swDetailingToleranceTextSizing_e.<Value>)	See swDetailingToleranceTextSizing_e for valid options; depending on the option chosen, also set either font scale value or font height value	Specifies how to size the tolerance text
Font - Font scale value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingToleranceTextScale, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingToleranceTextScale, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Double value (0 - 10.0)	Specifies value to scale tolerance font
Font - Font height value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingToleranceTextHeight, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingToleranceTextHeight, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Double value in meters	Specifies height of tolerance font
Fit tolerance font - Use dimension font	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsToleranceFitToUseDimensionFont, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsToleranceFitToUseDimensionFont, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Boolean value	For Fit and Fit-with-tolerance tolerance types only; specifies whether to use dimension tolerance text
Fit tolerance font - Size by scale or height	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingToleranceFitToTextSizing, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingToleranceFitToTextSizing, swUserPreferenceOption_e.<UserPrefOption>, swDetailingToleranceTextSizing_e.<Value>)	See swDetailingToleranceTextSizing_e for valid options; depending on the option chosen, also set either fit tolerance font scale value or font height value	For Fit and Fit-with-tolerance tolerance types only; specifies how to size the fit tolerance text
Fit tolerance font - Font scale	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingToleranceFitToTextScale, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingToleranceFitToTextScale, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Double value (0 - 10.0)	For Fit and Fit-with-tolerance tolerance types only; specifies scale for fit tolerance font
Fit tolerance font - Font height	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingToleranceFitToTextHeight, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingToleranceFitToTextHeight, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Double value in meters	For Fit and Fit-with-tolerance tolerance types only; specifies height of fit tolerance font
Show parentheses	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsToleranceUseParentheses, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsToleranceUseParentheses, swUserPreferenceOption_e.<UserPrefOption>, <Value>)	Boolean value	For Bilateral, Symmetric, or Fit-with-tolerance tolerance types only; specifies whether to show parentheses around linear tolerances
Fit tolerance display	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingToleranceFitToDisplay, swUserPreferenceOption_e.<UserPrefOption>) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingToleranceFitToDisplay, swUserPreferenceOption_e.<UserPrefOption>, swFitToDisplay_e.<Value>)	See swFitToDisplay_e for valid options	For Fit and Fit-with-tolerance tolerance types only

Document Properties > DimXpert

Document Properties - DimXpert

System Options Document Properties Search Options

Drafting Standard

- Annotations
 - Balloons
 - Datums
 - Geometric Tolerances
 - Notes
 - Revision Clouds
 - Surface Finishes
 - Weld Symbols
- Dimensions
 - Angle
 - Angular Running
 - Arc Length
 - Chamfer
 - Diameter
 - Hole Callout
 - Linear
 - Ordinate
 - Radius
 - Virtual Sharps
- Tables
- DimXpert**
- Detailing
- Grid/Snap
- Units
- Model Display
- Material Properties
- Image Quality
- Sheet Metal MBD
- Sheet Metal
- Weldments
- Plane Display
- Configurations

Overall drafting standard
ANSI-MODIFIED

Base DimXpert standard
ASME Y14.5 2009

Methods
☐ Block Tolerance ☒ General Tolerance ☐ General Block Tolerance

Block tolerance

Length unit dimensions
Decimals: Value:

Tolerance 1: 2 0.0003937in
Tolerance 2: 3 0.00055118in
Tolerance 3: 4 0.0009843in

Angular unit dimensions
Tolerance: 0.01deg

General tolerance
Tolerance class: Custom1 Load Custom
Load custom table from: E:\Program Files\SOLIDWORKS Corp\SOLIDWORKS\lang\


General block tolerance
Length tolerance: 0.01968504in
Angle tolerance: 0.50deg

OK Cancel Help

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Methods - Block Tolerance or General Tolerance or General Block Tolerance	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e, swPartDimXpertToleranceMethod, swUserPreferenceOption_e, swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e, swPartDimXpertToleranceMethod, swUserPreferenceOption_e, swDetailingNoOptionSpecified, swPartDimXpertToleranceMethod_e, <Value>)	See swPartDimXpertToleranceMethod_e for valid options	
Block Tolerance - Length unit dimensions - Tolerance 1 - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e, swPartDimXpertLengthUnitTol1Decimals, swUserPreferenceOption_e, swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e, swPartDimXpertLengthUnitTol1Decimals, swUserPreferenceOption_e, swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies number of decimal places for first tolerance
Block Tolerance - Length unit dimensions	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e, swPartDimXpertLengthUnitTol1Value, swUserPreferenceOption_e, swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e, swPartDimXpertLengthUnitTol1Value, swUserPreferenceOption_e, swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies symmetric plus or minus tolerance for first tolerance

- Tolerance 1 - Value			
Block Tolerance - Length unit dimensions - Tolerance 2 - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLengthUnitTol2Decimals, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLengthUnitTol2Decimals, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies number of decimal places for second tolerance
Block Tolerance - Length unit dimensions - Tolerance 2 - Value	ModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLengthUnitTol2Value, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLengthUnitTol2Value, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies symmetric plus or minus tolerance for second tolerance
Block Tolerance - Length unit dimensions - Tolerance 3 - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLengthUnitTol3Decimals, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLengthUnitTol3Decimals, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies number of decimal places for third tolerance
Block Tolerance - Length unit dimensions - Tolerance 3 - Value	ModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLengthUnitTol3Value, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLengthUnitTol3Value, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies symmetric plus or minus tolerance for third tolerance
Angular unit dimensions - Tolerance	ModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertAngularUnitTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertAngularUnitTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in radians	Specifies the tolerance value to use for all angular dimensions
General tolerance - Tolerance class	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertGeneralToleranceClass, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertGeneralToleranceClass, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertGeneralTolClass_e.<Value>)	See swDimXpertGeneralTolClass_e for valid options	Specifies the part tolerance class
General tolerance - Load custom table from	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swLoadCustomTableFrom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLoadCustomTableFrom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	Specifies the full path name of the custom table to load; non-empty value only for Parts and when Tolerance class is set to swDimXpertGeneralTolClass_Custom1 or swDimXpertGeneralTolClass_Custom2

Document Properties > DimXpert > Chain Dimension

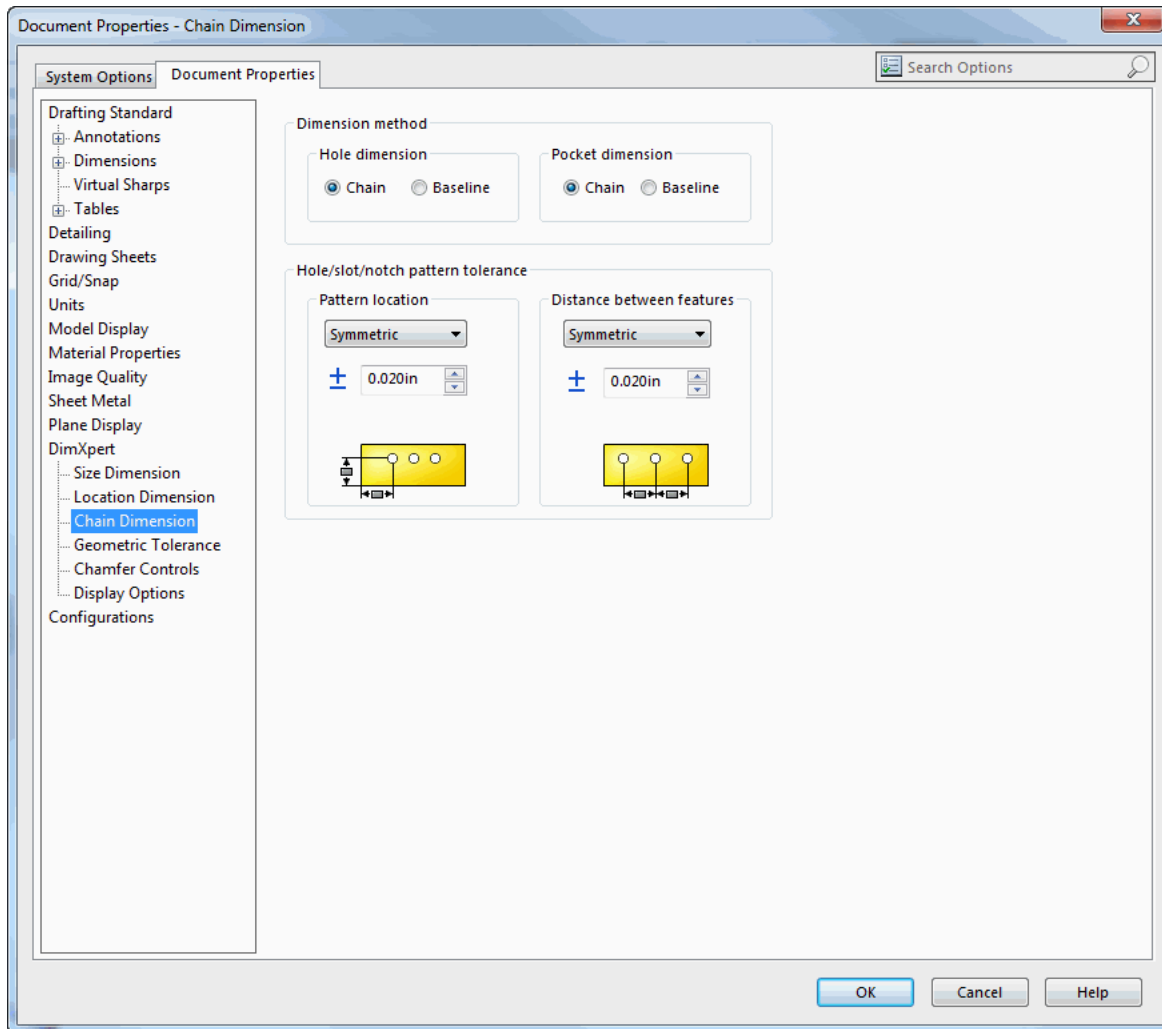

Setting	Get/Set Methods	Return Value or <Value>	Comments
Dimension method - Hole dimension - Chain or Baseline	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertChainHoleDimensionChain, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertChainHoleDimensionChain, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use a chain or baseline type of dimension for holes
Dimension method - Pocket dimension - Chain or Baseline	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertChainPocketDimensionChain, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertChainPocketDimensionChain, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use a chain or baseline type of dimension for pockets
Hole/slot/notch pattern tolerance - Pattern location - Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChainPatternLocToType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChainPatternLocToType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertToType_e.<Value>)	See swDimXpertToType_e for valid options	Specifies tolerance type for the pattern location
Hole/slot/notch pattern tolerance - Pattern location - Bilateral or Symmetric tolerance upper value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChainPatternLocToTypeUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChainPatternLocToTypeUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies: - the upper and lower symmetric tolerances - or - - the upper bilateral tolerance for the pattern location
Hole/slot/notch pattern tolerance - Pattern location - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChainPatternLocToTypeLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChainPatternLocToTypeLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance for the pattern location

Hole/slot/notch pattern tolerance - Pattern location - Block tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChainPatternLocBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChainPatternLocBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance for the pattern location
Hole/slot/notch pattern tolerance - Distance between features - Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChainInnerTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChainInnerTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertTolType_e.<Value>)	See swDimXpertTolType_e for valid options	Specifies tolerance type for the distance between features
Hole/slot/notch pattern tolerance - Distance between features - Bilateral or Symmetric tolerance upper value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChainInnerTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChainInnerTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies: - the upper and lower symmetric tolerances - or - - the upper bilateral tolerance for the distance between features
Hole/slot/notch pattern tolerance - Distance between features - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChainInnerTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChainInnerTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance for the distance between features
Hole/slot/notch pattern tolerance - Distance between features - Block tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChainDistanceBwtnFeatBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChainDistanceBwtnFeatBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance for the distance between features