



SOLIDWORKS Enumerations (swconst) — Examples (3/8): DP_DimXpert- ChamferControls-DP_PlaneDisplay

SOLIDWORKS API Documentation (converted from CHM)

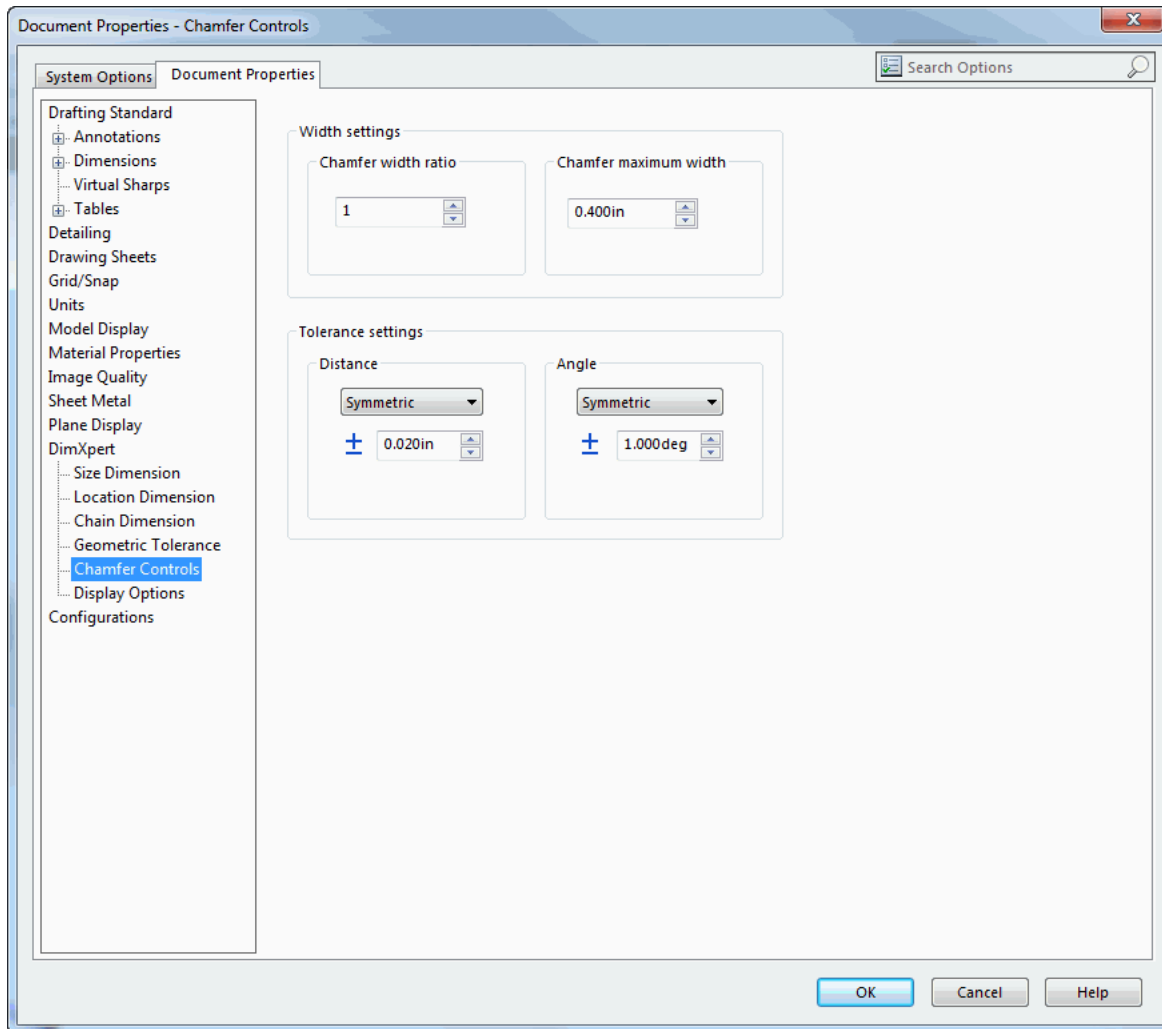

Setting	Get/Set Methods	Return Value or <Value>	Comments
Width settings - Chamfer width ratio	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferWidthRatio, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferWidthRatio, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets the chamfer width ratio
Width settings - Chamfer maximum width	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferMaxWidth, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferMaxWidth, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets the maximum chamfer width
Tolerance settings - Distance - Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChamferDistanceToType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChamferDistanceToType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertToType_e.<Value>)	See swDimXpertToType_e for valid options	Sets chamfer distance tolerance type
Tolerance settings - Distance - Bilateral or Symmetric tolerance upper value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferDistanceToUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferDistanceToUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies: - the upper and lower symmetric tolerances - or - - the upper bilateral tolerance for chamfer distances
Tolerance settings - Distance - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferDistanceToLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferDistanceToLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance for chamfer distances
Tolerance settings - Distance - Block tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChamferDistanceBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChamferDistanceBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance for chamfer distances

Tolerance settings - Angle - Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChamferAngleTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChamferAngleTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertTolType_e.<Value>)	See swDimXpertTolType_e for valid options	Sets the chamfer angular tolerance type
Tolerance settings - Angle - Bilateral or Symmetric tolerance upper value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferAngleTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferAngleTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies: - the upper and lower symmetric tolerances - or - - the upper bilateral tolerance for chamfer angles
Tolerance settings - Angle - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferAngleTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertChamferAngleTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance for chamfer angles
Tolerance settings - Angle - Block tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChamferAngleBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertChamferAngleBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance for chamfer angles

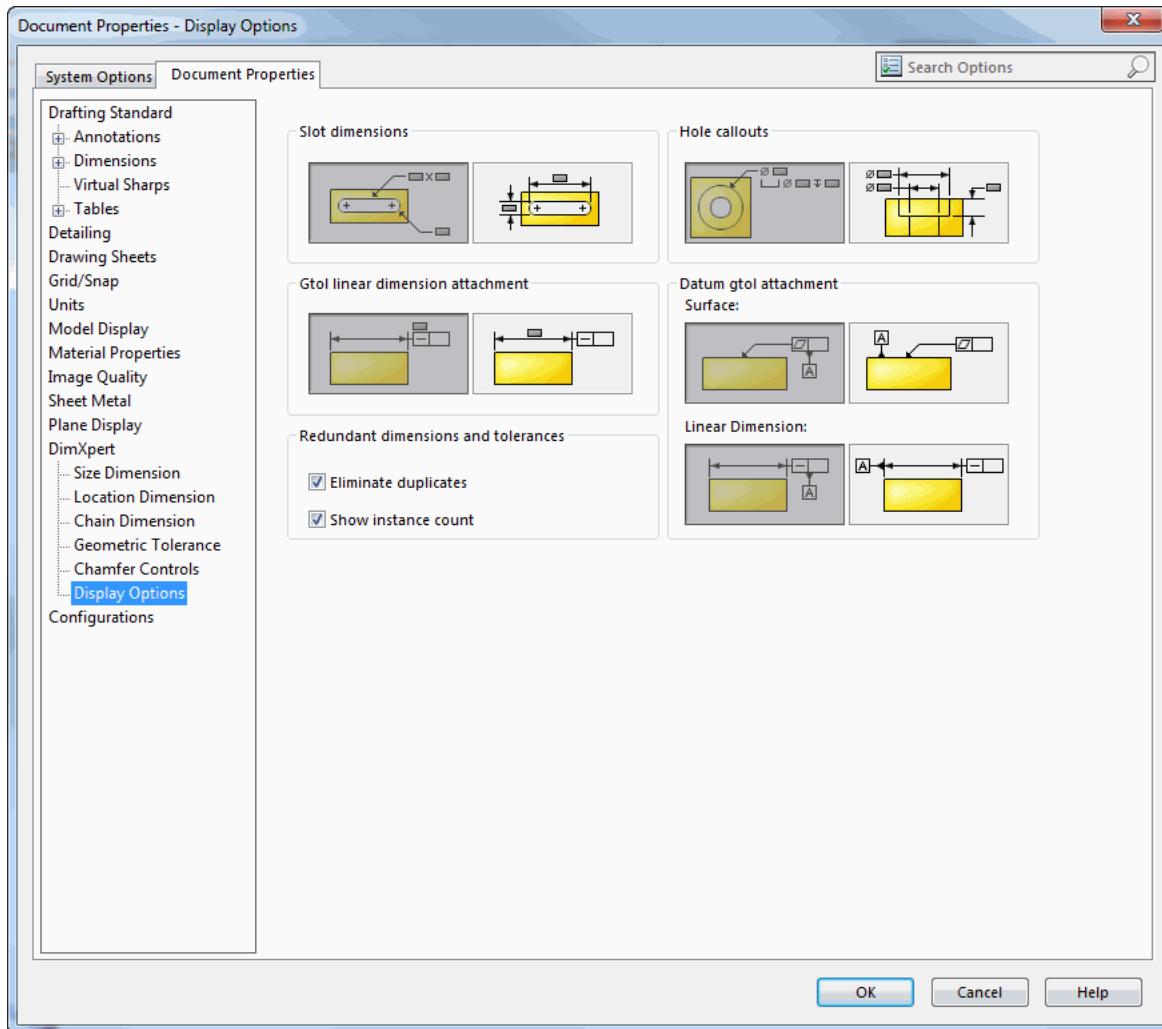


Setting	Get/Set Methods	Return Value or <Value>	Comments
Slot dimensions - Combined or Separate	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDisplaySlotDimensionType_e, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDisplaySlotDimensionType_e, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertDisplaySlotDimensionType_e.<Value>)	See swDimXpertDisplaySlotDimensionType_e for valid options	Specifies whether the length and width dimensions applied to slots are combined as a callout or placed separately
Gtol linear dimension attachment - Combined or Separate	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDisplayGtolLinearDimAttachmentType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDisplayGtolLinearDimAttachmentType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertDisplayGtolLinearDimAttachmentType_e.<Value>)	See swDimXpertDisplayGtolLinearDimAttachmentType_e for valid options	Specifies whether the geometric tolerance feature control frames are combined with the size limits or placed separately
Redundant dimensions and tolerances - Eliminate duplicates	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertDisplayEliminateDuplicates, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertDisplayEliminateDuplicates, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether duplicates are used
Redundant dimensions and tolerances - Show instance count	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertDisplayShowInstanceCount, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertDisplayShowInstanceCount, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether instance counts are applied

Hole callouts - Dimension type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDisplayHoleDimensionType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDisplayHoleDimensionType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertDisplayHoleDimensionType_e.<Value>)	See swDimXpertDisplayHoleDimensionType_e for valid options	Specifies whether hole callouts are displayed as combined or separate dimensions
Datum gtol attachment - Surface - Attached to feature control frame or Attached to surface and dimension	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDatumGtolSurfaceAttachment, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDatumGtolSurfaceAttachment, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertDisplayDatumGtolSurfaceAttachmentType_e.<Value>)	See swDimXpertDisplayDatumGtolSurfaceAttachmentType_e for valid options	Specifies whether datums are attached to the surface of the feature, to the dimension, or to the feature control frame
Linear Dimension - Attached to feature control frame or Attached to dimension	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDatumGtolLinearDimAttachment, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDatumGtolLinearDimAttachment, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertDisplayDatumGtolLinearDimAttachmentType_e.<Value>)	See swDimXpertDisplayDatumGtolLinearDimAttachmentType_e for valid options	Specifies whether datums are attached to the feature control frame or to the dimension

Document Properties > DimXpert > Geometric Tolerance

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog, but are now obsolete and no longer appear on that dialog.

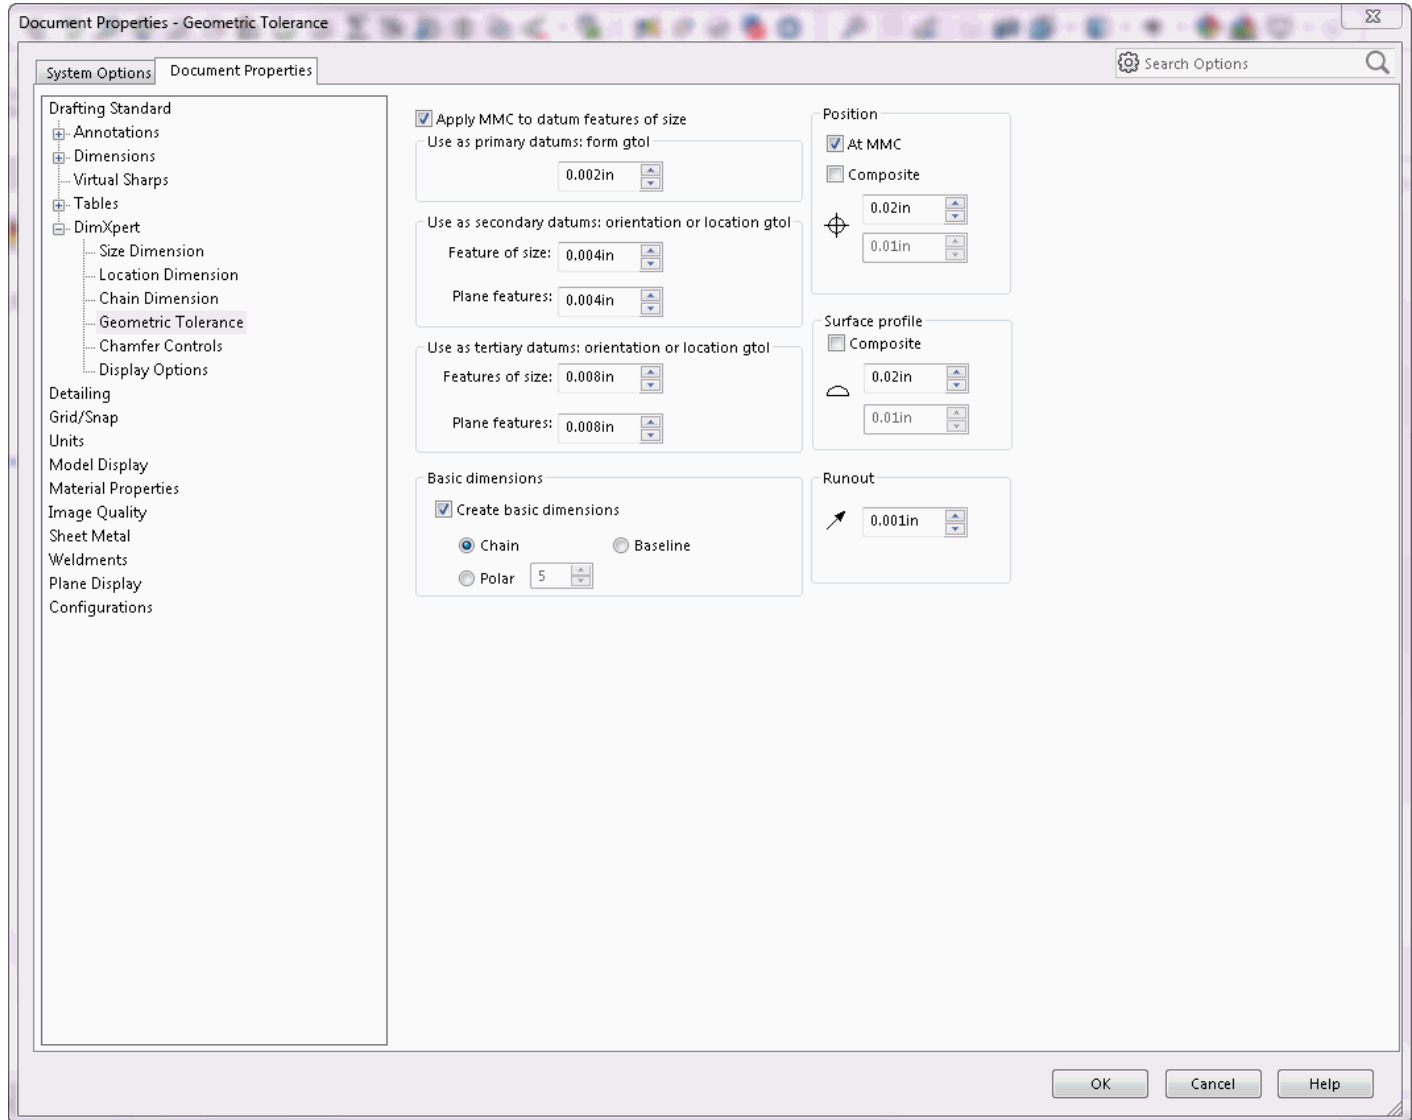

Setting	Get/Set Methods	Return Value or <Value>	Comments
Apply MMC to datum features of size	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricApplyMMC, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricApplyMMC, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether an MMC (maximum material condition) symbol is placed in the datum fields when the datum feature is a feature of size
Use as primary datums: form gtol	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricPrimaryTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricPrimaryTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets the tolerance value for the form tolerances that are applied to primary datum features


Use as secondary datums: orientation or location gtol - Feature of size	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricSecondFeatureSizeTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricSecondFeatureSizeTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets the tolerance value for the orientation and location tolerances that are applied to secondary datum features
Use as secondary datums: orientation or location gtol - Plane features	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricSecondPlaneFeatureTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricSecondPlaneFeatureTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets the tolerance value for the orientation and location tolerances that are applied to secondary datum features
Use as tertiary datums: orientation of location gtol - Features of size	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricThirdFeatureSizeTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricThirdFeatureSizeTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets the tolerance value for the orientation and location tolerances that are applied to tertiary datum features
Use as tertiary datums: orientation or location gtol - Plane features	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricThirdPlaneFeatureTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricThirdPlaneFeatureTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets the tolerance value for the orientation and location tolerances that are applied to tertiary datum features
Basic dimensions - Create basic dimensions	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricCreateBasicDimension, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricCreateBasicDimension, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to enable the creation of basic dimensions
Basic dimensions - Create basic dimensions - Chain or Baseline or Polar	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBasicDimType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBasicDimType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swBasicDimType_e.<Value>)	See swBasicDimType_e for valid options	Specifies whether to use chain, baseline, or polar dimension schemes when the creation of basic dimensions is enabled
Basic dimensions - Create basic dimensions - Polar - Minimum # holes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPolarMinHoles, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPolarMinHoles, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the minimum number of holes in a polar dimension scheme
Position - At MMC	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricPositionAtMMC, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricPositionAtMMC, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to place an MMC symbol
Position - Composite	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricPositionComposite, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricPositionComposite, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to create composite position tolerances
Position - Tolerance	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricPositionTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricPositionTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets position MMC or position composite tolerance
Position - Composite - Tolerance	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricPositionCompositeTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricPositionCompositeTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets position composite tolerance
Surface profile - Composite	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricSurfaceProfileComposite, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertGeometricSurfaceProfileComposite, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use tolerance values and criteria when creating surface profile tolerances
Surface profile - Tolerance	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricSurfaceProfileTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricSurfaceProfileTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets surface profile tolerance
Surface profile -	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricSurfaceProfileCompositeTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified)	Double value	Sets composite

Composite - Tolerance	IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricSurfaceProfileCompositeTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)		profile tolerance
Runout	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricRunoutTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertGeometricRunoutTolValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sets the tolerance to use when creating runout tolerances

Obsolete Enumerators


Enumerator	Comment
swPartDimXpertGeometricBasicDimensionChain	Obsolete

Document Properties > DimXpert > Location Dimension

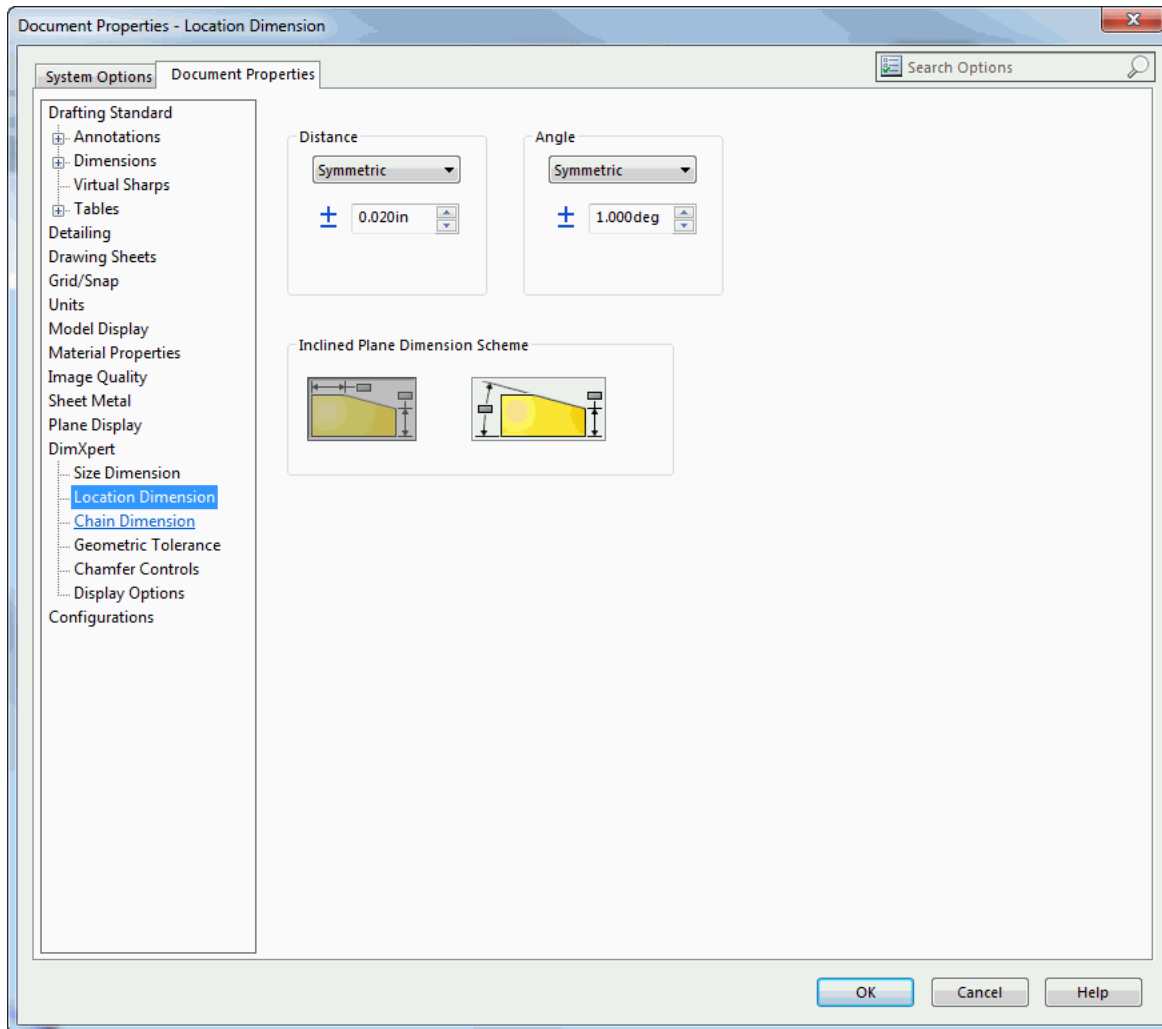

Setting	Get/Set Methods	Return Value or <Value>	Comments
Distance - Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLocationDistanceTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLocationDistanceTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertTolType_e.<Value>)	See swDimXpertTolType_e for valid options	Sets the tolerance type for linear dimensions between two features
Distance - Bilateral or Symmetric tolerance upper value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLocationDistanceTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLocationDistanceTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies: - the upper and lower symmetric tolerances - or - - the upper bilateral tolerance for the distance of linear dimensions between two features
Distance - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLocationDistanceTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLocationDistanceTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance for the distance of linear dimensions between two features
Distance - Block tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLocationDistanceBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLocationDistanceBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance for the distance of linear dimensions between two features
Angle - Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLocationAngleTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLocationAngleTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertTolType_e.<Value>)	See swDimXpertTolType_e for valid options	Sets the tolerance type for angular dimensions between two features
Angle - Bilateral or Symmetric	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLocationAngleTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified)	Double value	Specifies: the upper and lower

tolerance upper value	IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLocationAngleTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)		symmetric tolerances - or - • the upper bilateral tolerance for the angle of angular dimensions between two features
Angle - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLocationAngleTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertLocationAngleTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance for the angle of angular dimensions between two features
Angle - Block tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLocationAngleBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertLocationAngleBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance for the angle of angular dimensions between two features
Inclined Plane Dimension Scheme - Linear or Linear and angle	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertLocationInclinedPlane, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartDimXpertLocationInclinedPlane, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to locate planes with angular dimensions

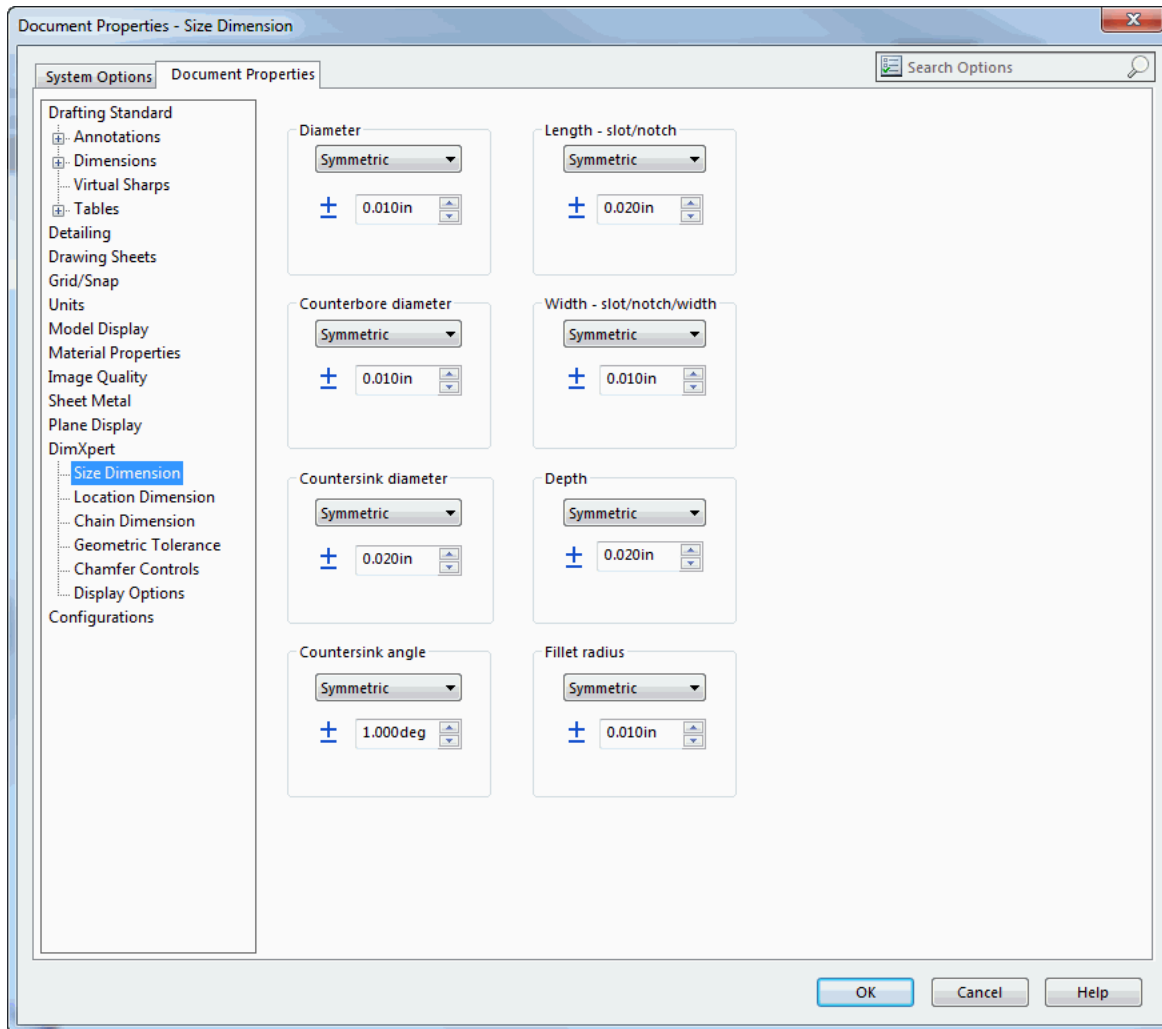


Setting	Get/Set Methods	Return Value or <Value>	Comments
Diameter - Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDiameterTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDiameterTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertTolType_e.<Value>)	See swDimXpertTolType_e for valid options	Sets the diameter tolerance type for bosses, cylinders, counterbore holes, countersink holes, and simple holes
Diameter - Bilateral or Symmetric tolerance upper value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertDiameterTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertDiameterTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies: - the upper and lower symmetric tolerances - or - - the upper bilateral tolerance of the diameters of bosses, cylinders, counterbore holes, countersink holes, and simple holes
Diameter - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertDiameterTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertDiameterTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance of the diameters of bosses, cylinders, counterbore holes, countersink holes, and simple holes
Diameter - Block tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertSizeDiameterBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertSizeDiameterBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance of the diameters of bosses, cylinders, counterbore holes, countersink holes, and simple holes

[illegible]


	IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertWidthSlotTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertTolType_e.<Value>)		
Width - slot/notch/width - Bilateral or Symmetric tolerance upper value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertWidthSlotTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertWidthSlotTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies: - the upper and lower symmetric tolerances - or - - the upper bilateral tolerance of the widths of slots/notches
Width - slot/notch/width - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertWidthSlotTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertWidthSlotTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance of the widths of slots/notches
Width - slot/notch/width - Block tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertSizeWidthSlotBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertSizeWidthSlotBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance of the widths of slots/notches
Depth - Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDepthTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertDepthTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertTolType_e.<Value>)	See swDimXpertTolType_e for valid options	Sets the depth tolerance type for counterbores, counterbore holes, countersinks, notches, pockets, simple holes, and slots
Depth - Bilateral or Symmetric tolerance upper value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertDepthTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertDepthTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies: - the upper and lower symmetric tolerances - or - - the upper bilateral tolerance of the depths of counterbores, counterbore holes, countersinks, notches, pockets, simple holes, and slots
Depth - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertDepthTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertDepthTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance of the depths of counterbores, counterbore holes, countersinks, notches, pockets, simple holes, and slots
Depth - Block tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertSizeDepthBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertSizeDepthBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance of the depths of counterbores, counterbore holes, countersinks, notches, pockets, simple holes, and slots
Fillet radius - Tolerance type	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertFilletRadiusTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertFilletRadiusTolType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertTolType_e.<Value>)	See swDimXpertTolType_e for valid options	Sets the fillet radius tolerance type
Fillet radius - Bilateral or Symmetric tolerance upper value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertFilletRadiusTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertFilletRadiusTolUpperValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies: - the upper and lower symmetric tolerances - or - - the upper bilateral tolerance for fillet radii
Fillet radius - Bilateral tolerance lower value	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertFilletRadiusTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPartDimXpertFilletRadiusTolLowerValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the lower bilateral tolerance for fillet radii
Fillet radius - Block precision tolerance value	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertSizeFilletRadiusBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPartDimXpertSizeFilletRadiusBlockPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDimXpertBlockPrecision_e.<Value>)	See swDimXpertBlockPrecision_e for valid options	Sets the block precision tolerance for fillet radii

Document Properties > DimXPert

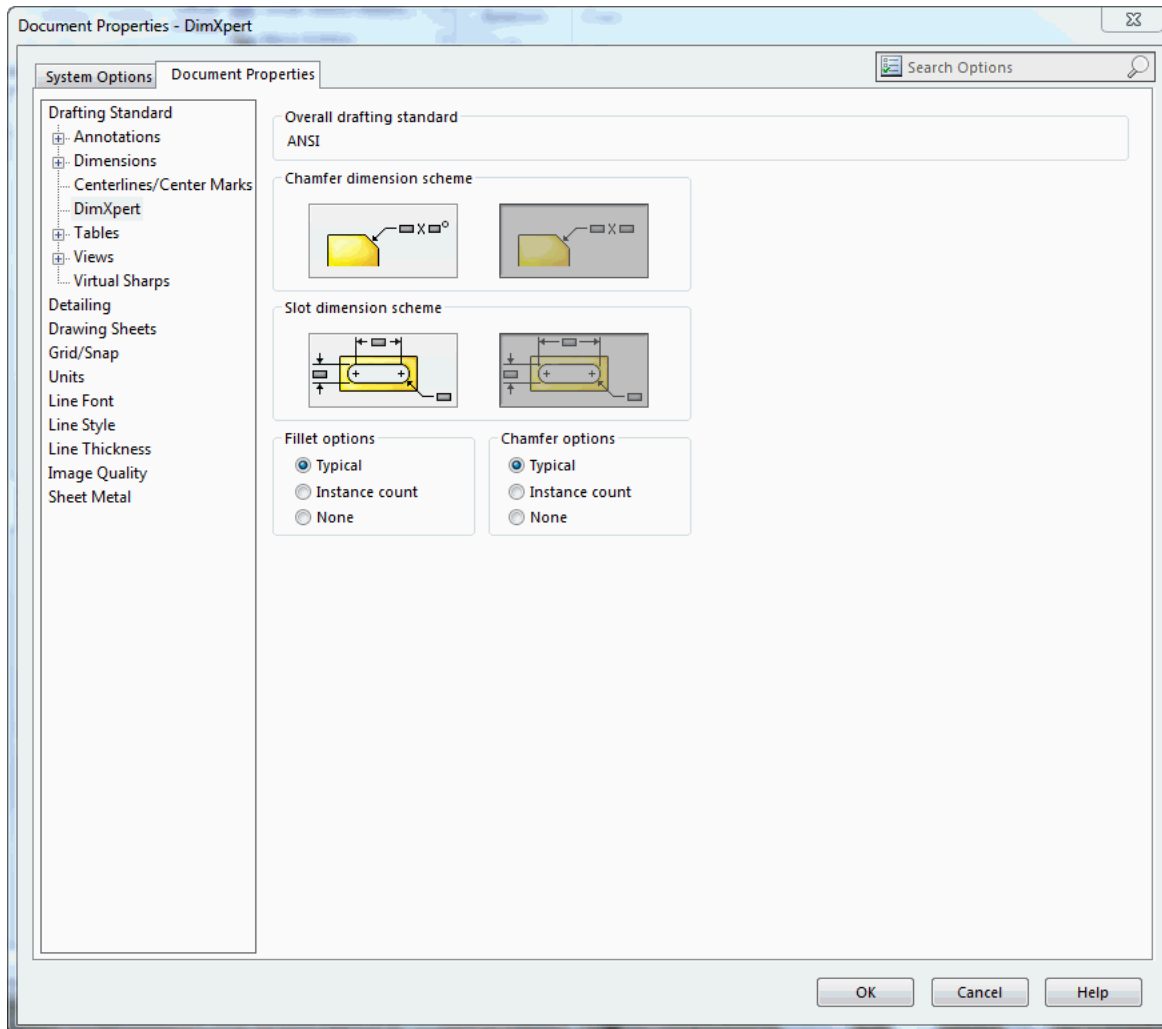

Setting	Get/Set Methods	Return Value or <Value>	Comments
Chamfer dimension scheme	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimXpertChamferScheme, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimXpertChamferScheme, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDimXpertChamferStyle_e.<Value>)	See swDetailingDimXpertChamferStyle_e for valid options	Specifies chamfer dimension scheme
Slot dimension scheme	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimXpertSlotScheme, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimXpertSlotScheme, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDimXpertSlotStyle_e.<Value>)	See swDetailingDimXpertSlotStyle_e for valid options	Specifies slot dimension scheme
Fillet options	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimXpertFilletOptions, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimXpertFilletOptions, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDimXpertFilletInstanceStyle_e.<Value>)	See swDetailingDimXpertFilletInstanceStyle_e for valid options	Specifies fillet options
Chamfer options	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimXpertChamferOptions, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimXpertChamferOptions, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDimXpertChamferInstanceStyle_e.<Value>)	See swDetailingDimXpertChamferInstanceStyle_e for valid options	Specifies chamfer options


Document Properties > Drafting Standard

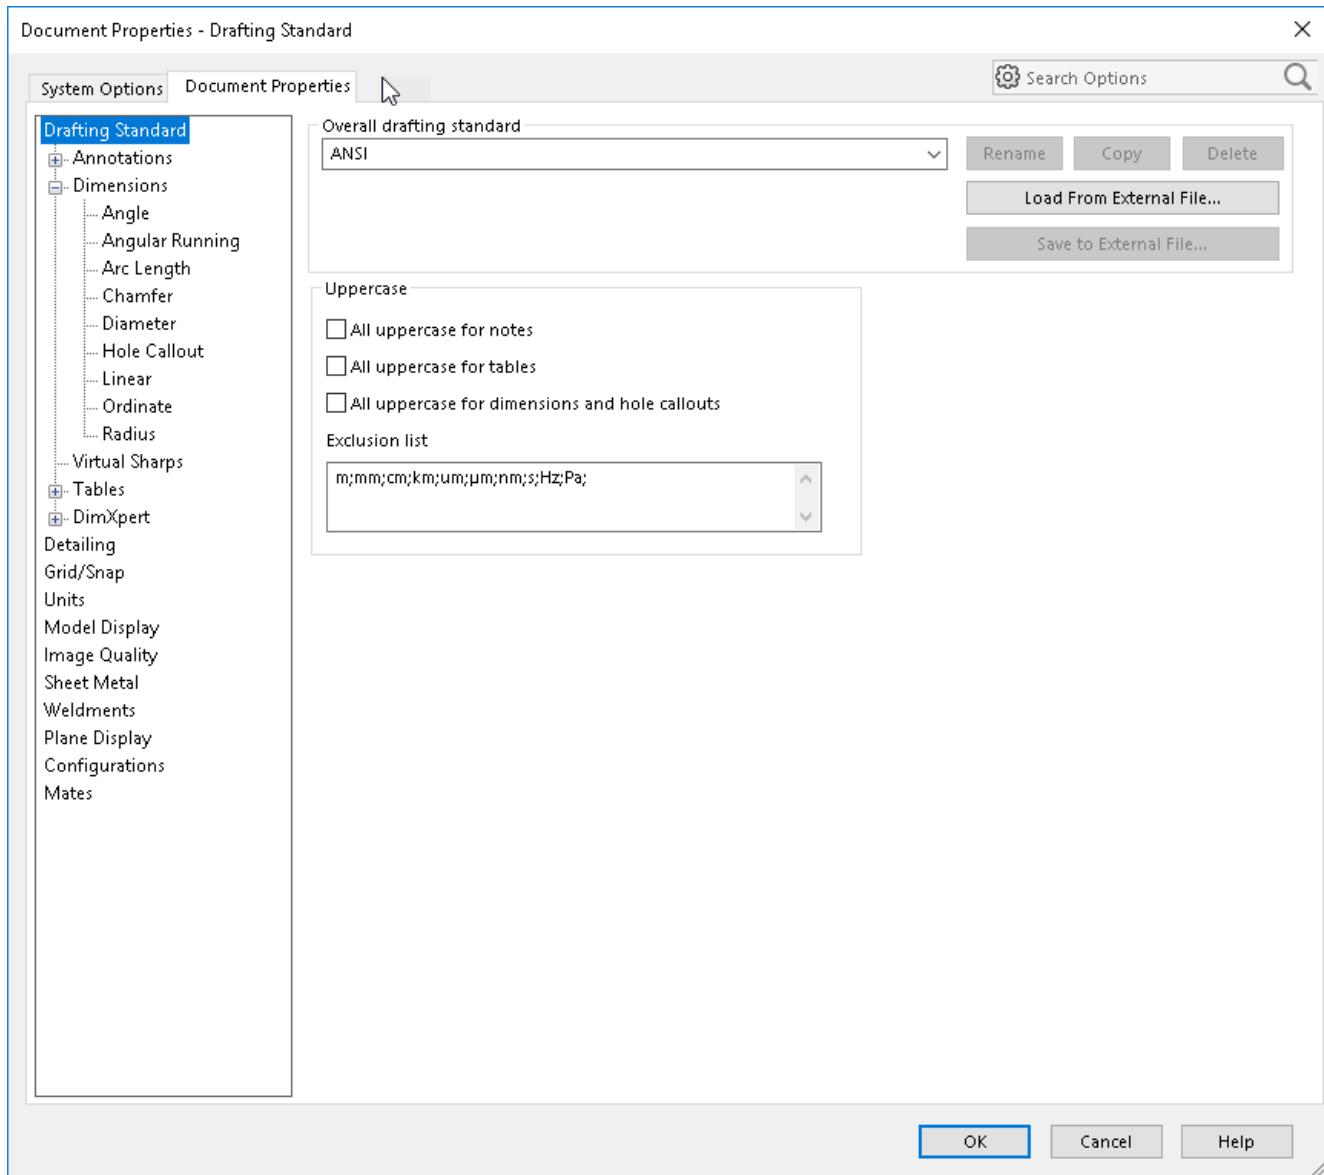

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Overall drafting standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base drafting standard to use
Uppercase - All uppercase for notes	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDraftingStandardUppercase, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDraftingStandardUppercase, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to set the drafting standard to all uppercase for notes
Uppercase - All uppercase for tables	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDraftingStandardAllUppercaseForTable, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDraftingStandardAllUppercaseForTable, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to set the drafting standard to all uppercase for tables
Uppercase - All uppercase for dimensions and hole callouts	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDraftingStandardAllUppercaseForDimensionsAndHoleCallouts, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDraftingStandardAllUppercaseForDimensionsAndHoleCallouts, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	

Uppercase - Exclusion list	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDraftStandardExclusionList, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDraftStandardExclusionList, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	Specifies the list of strings to exclude from making uppercase
-------------------------------	---	--------------	--


Document Properties > Drawing Sheets

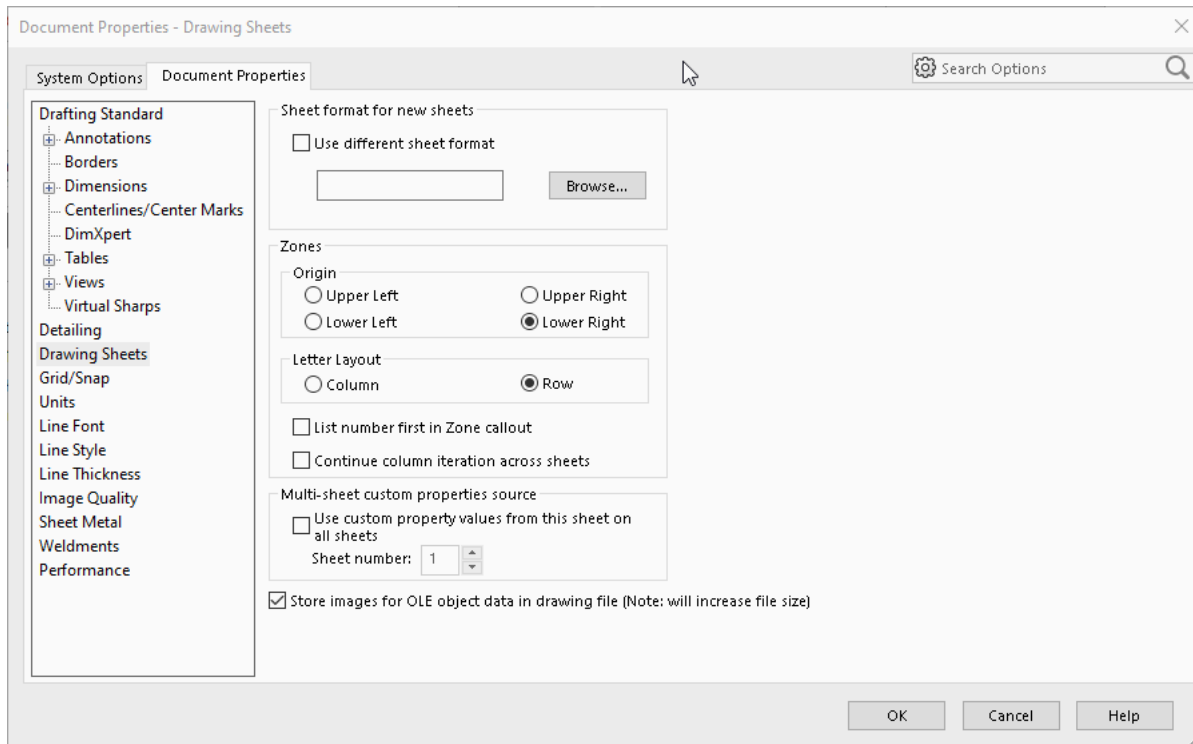

Setting	Get/Set Methods	Return Value or <Value>	Comments
Sheet format for new sheets - Use different sheet format	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetsUseDifferentSheetFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetsUseDifferentSheetFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use a different sheet format
Sheet format for new sheets - Sheet format file location	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swFileLocationsNewSheetFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swFileLocationsNewSheetFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	Specifies the location of the sheet format file to use
Zones - Origin	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDrawingSheetsZonesOrigin, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDrawingSheetsZonesOrigin, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDrawingSheetsZonesOrigin_e.<Value>)	See swDrawingSheetsZonesOrigin_e for valid options	Specifies the corner where the lowest letters and numbers start on the drawing sheet
Zones - Letter Layout	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDrawingSheetsZonesLetterLayout, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDrawingSheetsZonesLetterLayout, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDrawingSheetsZonesLetterLayout_e.<Value>)	See swDrawingSheetsZonesLetterLayout_e for valid options	Specifies where the letters and numbers appear on the drawing sheet
Zones - List number first in Zone callout	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetsListNumFirstInZoneCallout, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetsListNumFirstInZoneCallout, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to list letter or number as first character in zone callouts: - Letter first (A1, B3, C4, etc.); default - Number first (1A, 3B, 4C, etc.)
Zones - Continue column iteration across sheets	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetsContinueColumnIteration, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetsContinueColumnIteration, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to restart columns or rows (default) across drawing sheets; (i.e., A, B, C, etc.)
Multi-sheet custom properties source - Use custom property values from this sheet on all sheets	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetsMatchCustomPropVals, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetsMatchCustomPropVals, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use custom property values from this sheet on all sheets
Multi-sheet custom properties source - Sheet number	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDrawingSheetCustomPropSheetNo, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDrawingSheetCustomPropSheetNo, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Sheet number


Store images for OLE object data in drawing file (Note: will increase file size)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStoreOLEImagesWithModel, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStoreOLEImagesWithModel, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For drawings
--	---	---------------	--------------

Document Properties > Grip/Snap

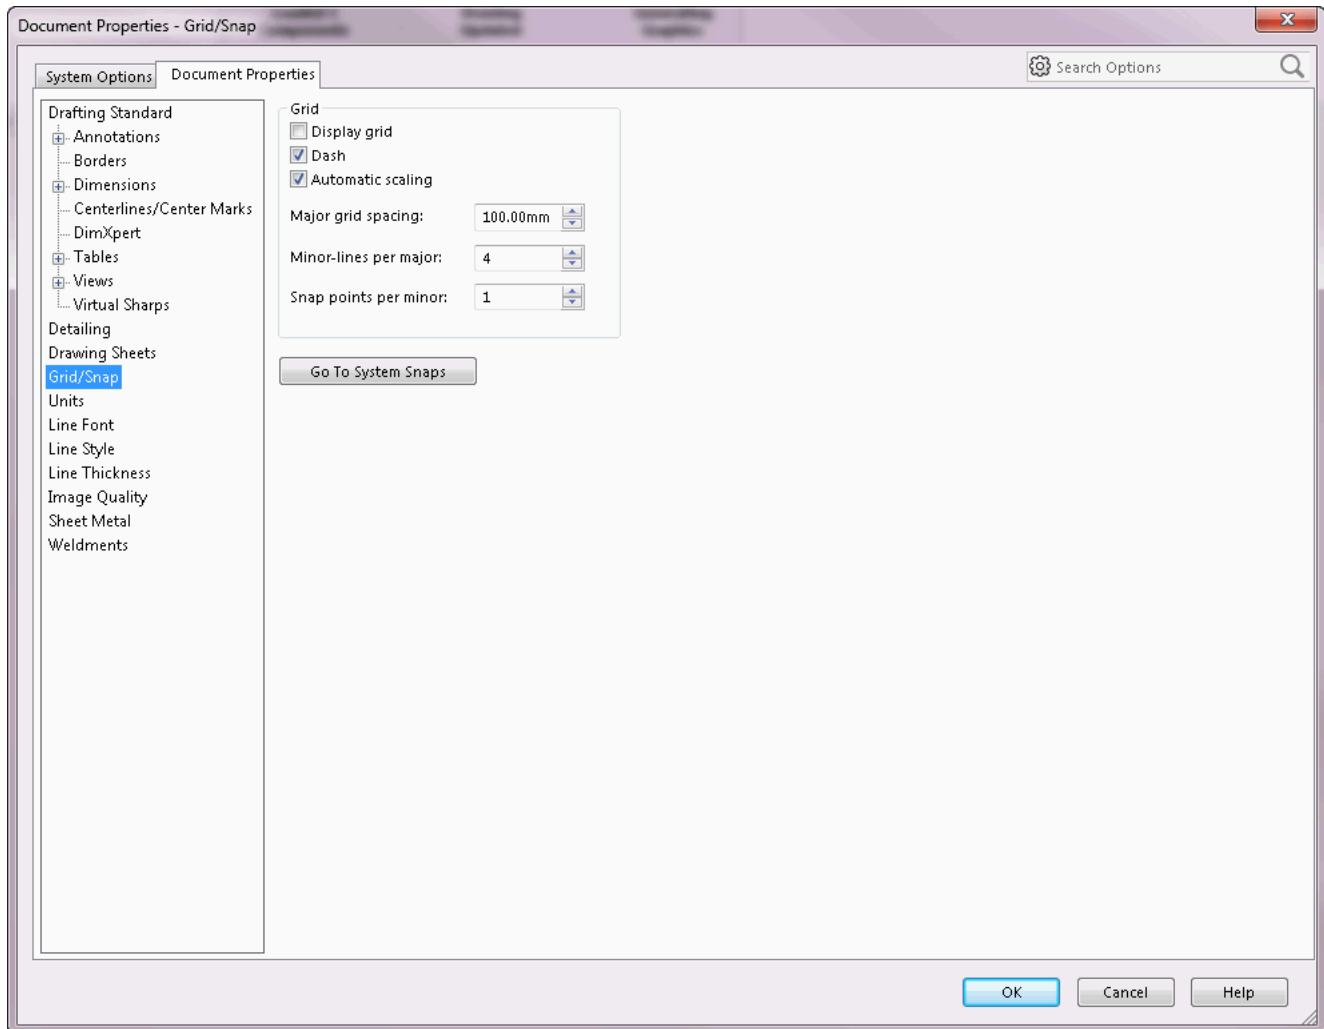

Setting	Get/Set Methods	Return Value or <Value>	Comments
Display grid	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swGridDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swGridDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display sketch grid
Dash	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swGridDisplayDashed, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swGridDisplayDashed, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use solid or dashed grid lines; does not affect current document; only affects future documents
Automatic scaling	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swGridAutomaticScaling, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swGridAutomaticScaling, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically adjust display of grid when zooming in and out
Major grid spacing	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swGridMajorSpacing, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swGridMajorSpacing, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies space between major grid lines
Minor-lines per major	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swGridMinorLinesPerMajor, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swGridMinorLinesPerMajor, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the number of minor grid lines between major grid lines
Snap points per minor	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSnapPointsPerMinor, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSnapPointsPerMinor, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the number of snap points between minor grid lines


Document Properties > Image Quality

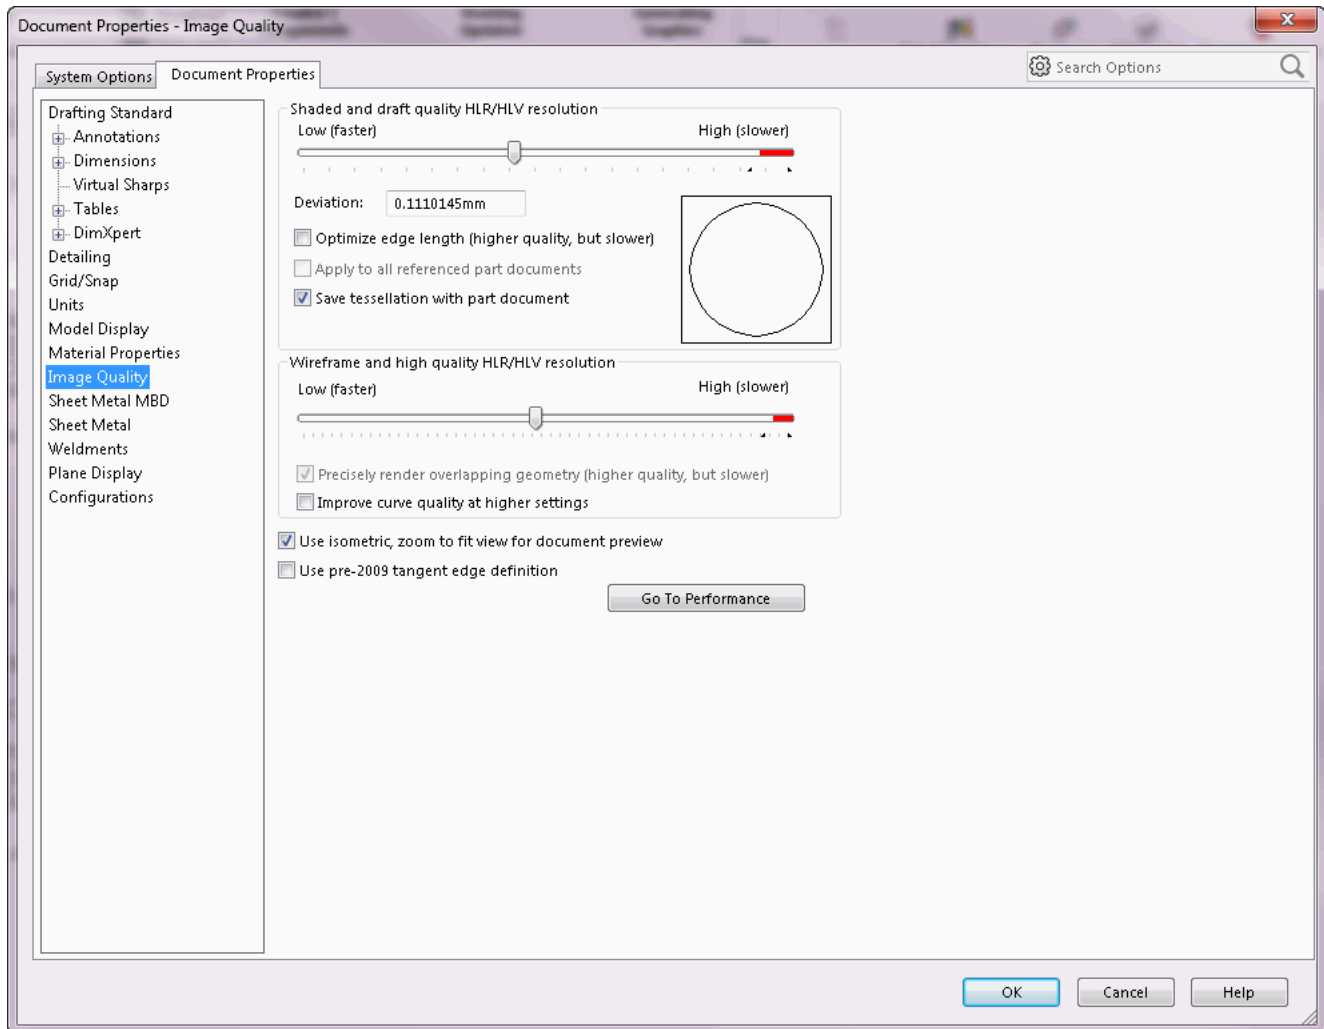

Setting	Get/Set Methods	Return Value or <Value>	Comments
Shaded and draft quality HLR/HLV resolution - Quality	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swImageQualityShaded, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swImageQualityShaded, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swImageQualityShaded_e.<Value>)	See swImageQualityShaded_e for valid options	Specifies the tessellation of cylindrical surface rendering output
Shaded and draft quality HLR/HLV resolution - Deviation	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swImageQualityShadedDeviation, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swImageQualityShadedDeviation, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies maximum chordal deviation in eff tuning levels; use IModelDocExtension::GetUserPreferenceD to get the current and valid minimum and n
Shaded and draft quality HLR/HLV resolution - Optimize edge length (higher quality, but slower)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityUseHighQualityEdgeSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityUseHighQualityEdgeSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to increase image quality
Shaded and draft quality HLR/HLV resolution - Apply to all referenced part documents	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityApplyToAllReferencedPartDoc, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityApplyToAllReferencedPartDoc, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For assemblies only; specifies whether to a quality settings to all part documents refere document
Shaded and draft quality HLR/HLV	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualitySaveTessellationWithPartDoc, swUserPreferenceOption_e.swDetailingNoOptionSpecified)	Boolean value	Specifies whether to save display informati document

resolution - Save tessellation with part document	IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualitySaveTessellationWithPartDoc, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)		
Wireframe and high quality HLR/HLV resolution - quality of wireframe display output	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swImageQualityWireframe, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swImageQualityWireframe, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swImageQualityWireframe_e.<Value>)	See swImageQualityWireframe_e for valid options	Specifies the wireframe quality: optimal or
Wireframe and high quality HLR/HLV resolution - wireframe quality	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swImageQualityWireframeValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swImageQualityWireframeValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value (1 - 100)	Specifies value for custom swImageQuality
Wireframe and high quality HLR/HLV resolution - Precisely render overlapping geometry (higher quality, but slower)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPreciseRenderingOfOverlappingGeometry, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPreciseRenderingOfOverlappingGeometry, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For wireframes and drawings only
Wireframe and high quality HLR/HLV resolution - Improve curve quality at higher settings	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityWireframeHighCurveQuality, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityWireframeHighCurveQuality, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to improve a curve's ang the high end of wireframe quality resolution quality slider settings between 92 and 100
Use isometric, zoom to fit view for document preview	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityZoomToFitForPreviewImages, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityZoomToFitForPreviewImages, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts and assemblies only; true to save zoom to fit view (default); false to save in th
Use pre-2009 tangent edge definition	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityUseOldTangentEdgeDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImageQualityUseOldTangentEdgeDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	True to leave tangent edges visible as in the pre SOLIDWORKS implementation; false to hide t the angle between adjacent faces is less than on

Document Properties > Line Font

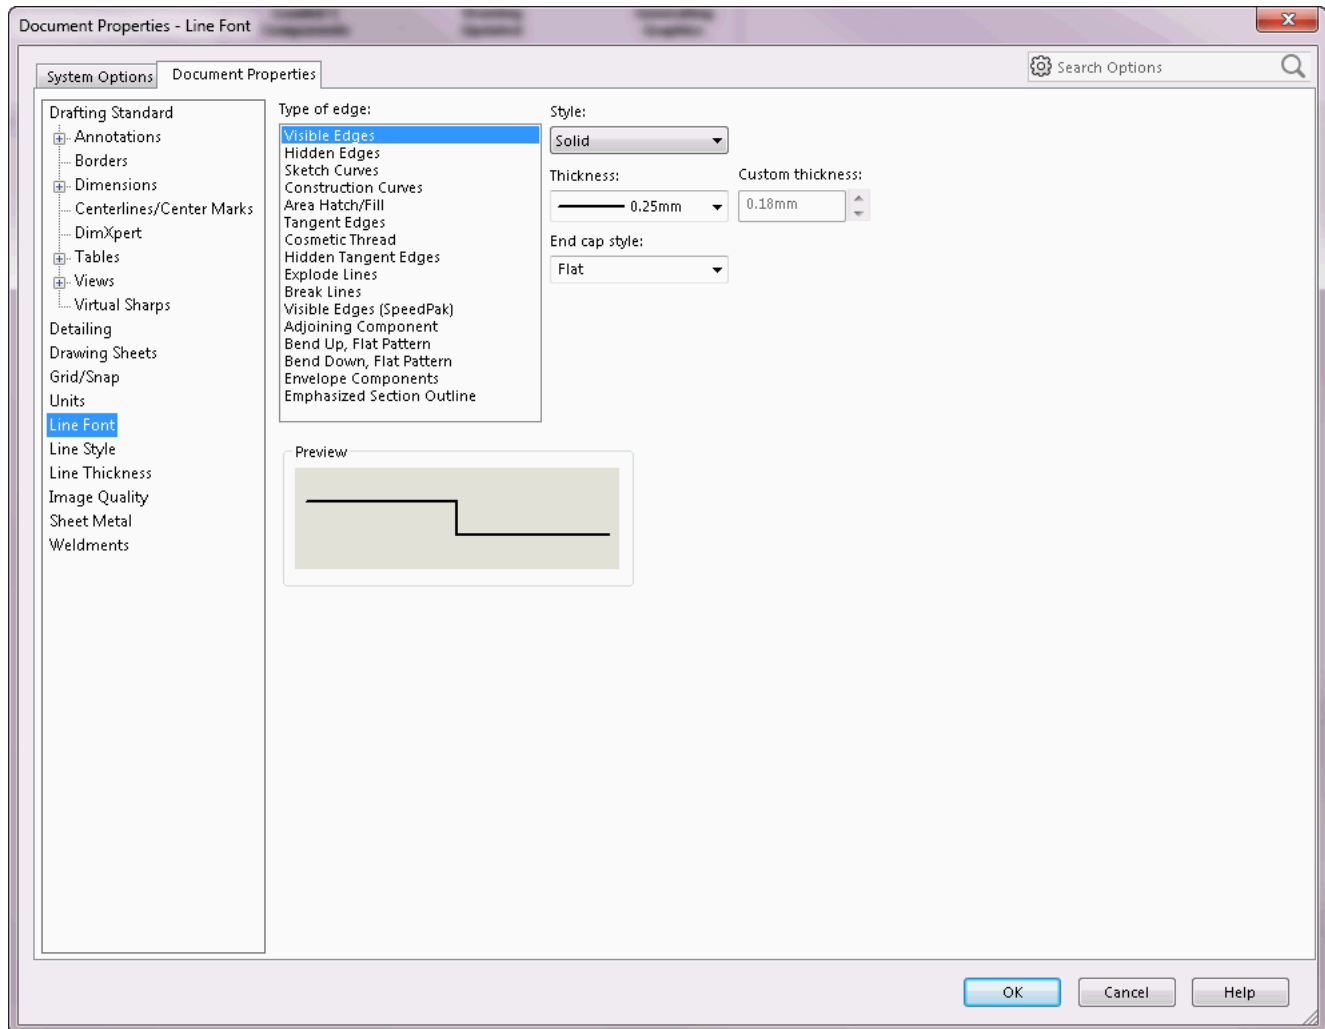


Setting	Get/Set Methods	Return Value or <Value>	Comments
Visible Edges - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontVisibleEdgesStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontVisibleEdgesStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options except swLineDEFAULT	Specifies style of visible edges
Visible Edges - Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontVisibleEdgesThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontVisibleEdgesThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of visible edges
Visible Edges - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontVisibleEdgesThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontVisibleEdgesThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies a custom thickness for visible edges
Visible Edges - End cap style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontVisibleEdgesEndCap, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontVisibleEdgesEndCap, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineEndCaps_e.<Value>)	See swLineEndCaps_e for valid options	Specifies style of visible edge end caps
Hidden Edges - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontHiddenEdgesStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontHiddenEdgesStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options except swLineDEFAULT	Specifies style of hidden edges
Hidden Edges - Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontHiddenEdgesThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontHiddenEdgesThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of hidden edges

[illegible]

			flat patterns in drawing documents
Bend Down, Flat Pattern - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontBendLineDownThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontBendLineDownThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies a custom thickness of the bend lines indicating where to bend the sheet metal down in flat patterns in drawing documents
Envelope Components - Style	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontEnvelopeComponentStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontEnvelopeComponentStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options except swLineDEFAULT	Specifies style of the edges of envelope components
Envelope Components - Thickness	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontEnvelopeComponentThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontEnvelopeComponentThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of the edges of envelope components
Envelope Components - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontEnvelopeComponentThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontEnvelopeComponentThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies a custom thickness of the edges of envelope components
Emphasized Section Outline - Style	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontEmphasizedSectionOutlineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontEmphasizedSectionOutlineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options except swLineDEFAULT	Specifies style of the outline of an emphasized section
Emphasized Section Outline - Thickness	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceDoubleValue_e.swLineFontEmphasizedSectionThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceDoubleValue_e.swLineFontEmphasizedSectionThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies the thickness of the outline of an emphasized section
Emphasized Section Outline - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontEmphasizedSectionThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontEmphasizedSectionThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies a custom thickness of the outline of an emphasized section
Emphasized Section Outline - End cap style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontEmphasizedSectionEndCapStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontEmphasizedSectionEndCapStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineEndCaps_e.<Value>)	See swLineEndCaps_e for valid options	Specifies style of emphasized section outline end caps


Document Properties > Line Thickness

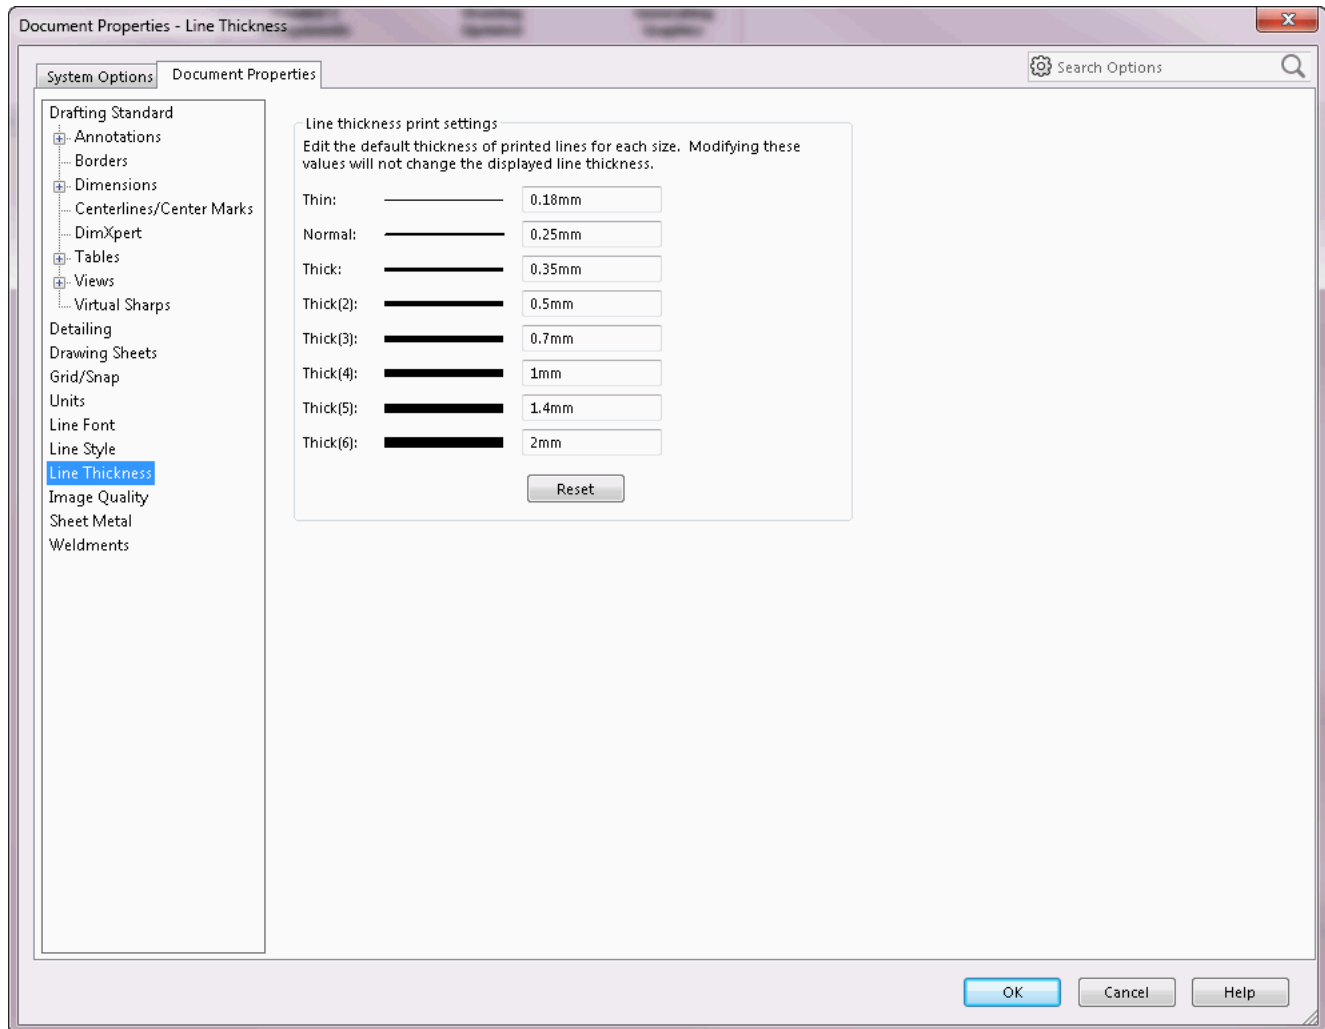

Setting	Get/Set Methods	Return Value or <Value>	Comments
Line thickness print settings - Thin	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThinLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThinLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies weight of thin line setting
Line thickness print settings - Normal	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterNormalLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterNormalLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies weight of normal line setting
Line thickness print settings - Thick	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThickLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThickLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies weight of first thick line setting
Line thickness print settings - Thick(2)	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick2LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick2LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies weight of second thick line setting
Line thickness print settings - Thick(3)	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick3LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick3LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies weight of third thick line setting
Line thickness print settings - Thick(4)	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick4LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick4LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies weight of fourth thick line setting


Line thickness print settings - Thick(5)	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick5LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick5LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies weight of fifth thick line setting
Line thickness print settings - Thick(6)	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick6LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick6LineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies weight of sixth thick line setting

Document Properties > Material Properties

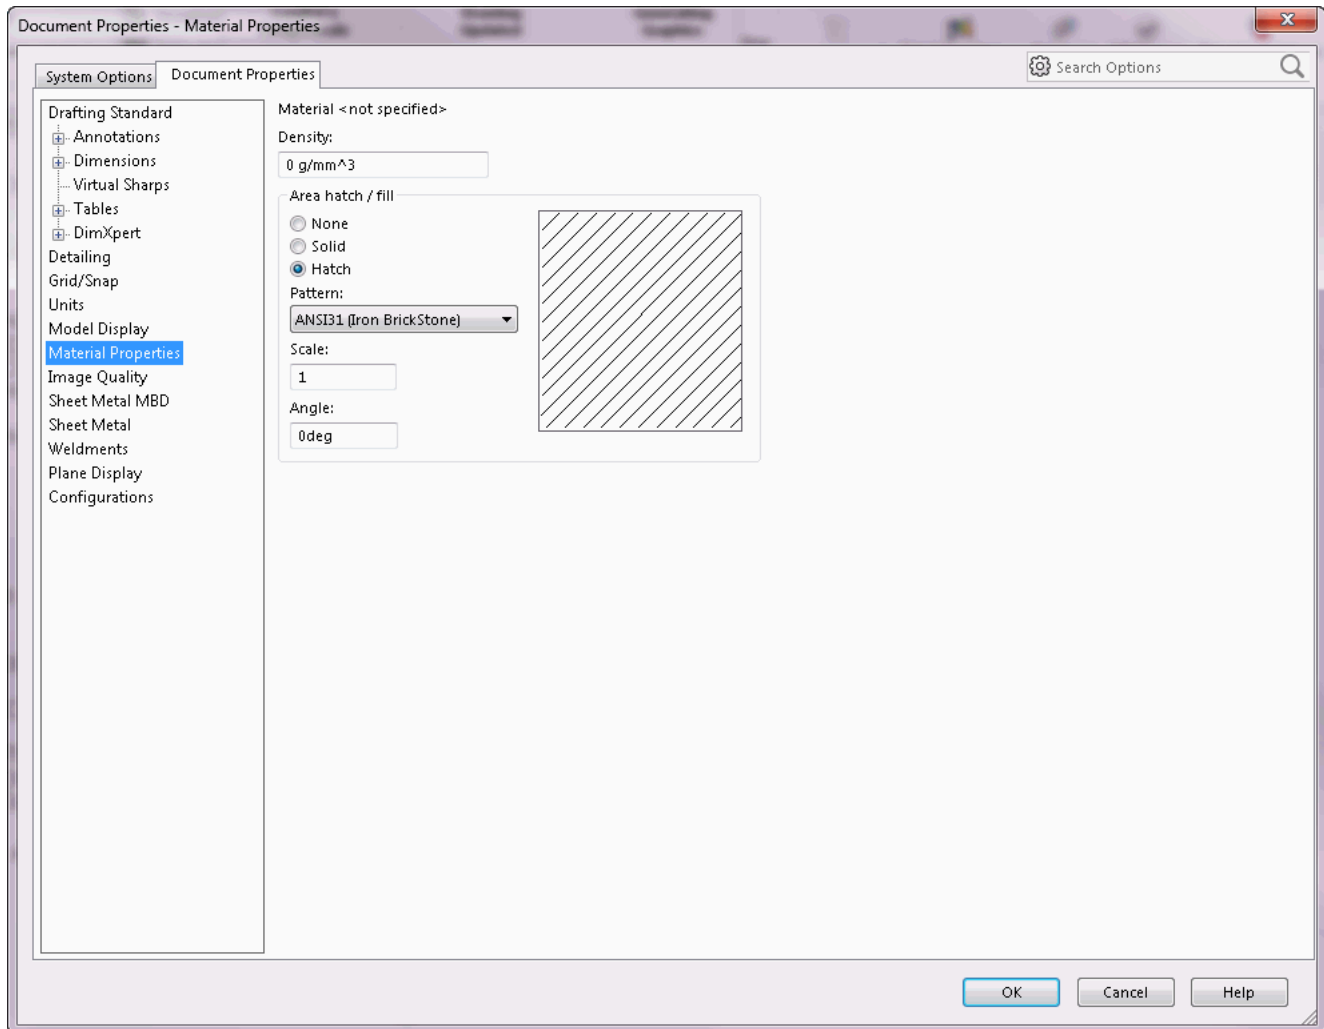

Setting	Get/Set Methods	Return Value or <Value>	Comments
Density	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swMaterialPropertyDensity, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swMaterialPropertyDensity, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in kg/m ³	For parts only; specifies material density
Area Hatch/Fill - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swMaterialPropertyAreaHatchFillStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swMaterialPropertyAreaHatchFillStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swAreaHatchFillStyle_e.<Value>)	See swAreaHatchFillStyle_e for valid options	
Area Hatch/Fill - Pattern	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swMaterialPropertyCrosshatchPattern, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swMaterialPropertyCrosshatchPattern, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Valid string values:	For parts only; for hatch style only

		AEC 2x12 Parquet Flooring AEC 8x16 Block Elev AEC 8x16 Block Elev. (MJ) AEC 8x8 Block Elev AEC Herringbone AEC Roof Shingle AEC Roof Wood Shake AEC Sand AEC Std Brick Elev AEC Std Brick Elev (MJ) AEC Stone ANGLE (Angle Steel) ANSI31 (Iron BrickStone) ANSI32 (Steel) ANSI33 (Bronze Brass) ANSI34 (Plastic Rubber) ANSI35 (Fire Brick) ANSI36 (Marble) ANSI37 (Lead Zinc Mg) ANSI38 (Aluminum) Box Steel Brass Brick or Masonry Brick or Stone Clay Concrete Cork Crosses Dashed Lines Dots Earth or Ground Escher Flexible Material Geological Rock Grass Grated Area Heat Transfer Hexagons Honeycomb Houndstooth Insulation ISO (Aluminum) ISO (Bronze Brass) ISO (Plastic) ISO (Steel) ISO02W100 ISO03W100 ISO04W100 ISO05W100 ISO06W100 ISO07W100 ISO08W100 ISO09W100 ISO10W100 ISO11W100 ISO12W100 ISO13W100 ISO14W100 ISO15W100 Mud or Sand Netting Network Parallel Lines Plastic Plastic2 Squares Stars Steel Swamp Teflon Triangles ZigZag	
Area Hatch/Fill - Scale	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swMaterialPropertyCrosshatchScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swMaterialPropertyCrosshatchScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	For parts only; for hatch style only; specifies value by which to scale crosshatch
Area Hatch/Fill - Angle	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swMaterialPropertyCrosshatchAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swMaterialPropertyCrosshatchAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	For parts only; for hatch style only; specifies angle for crosshatch

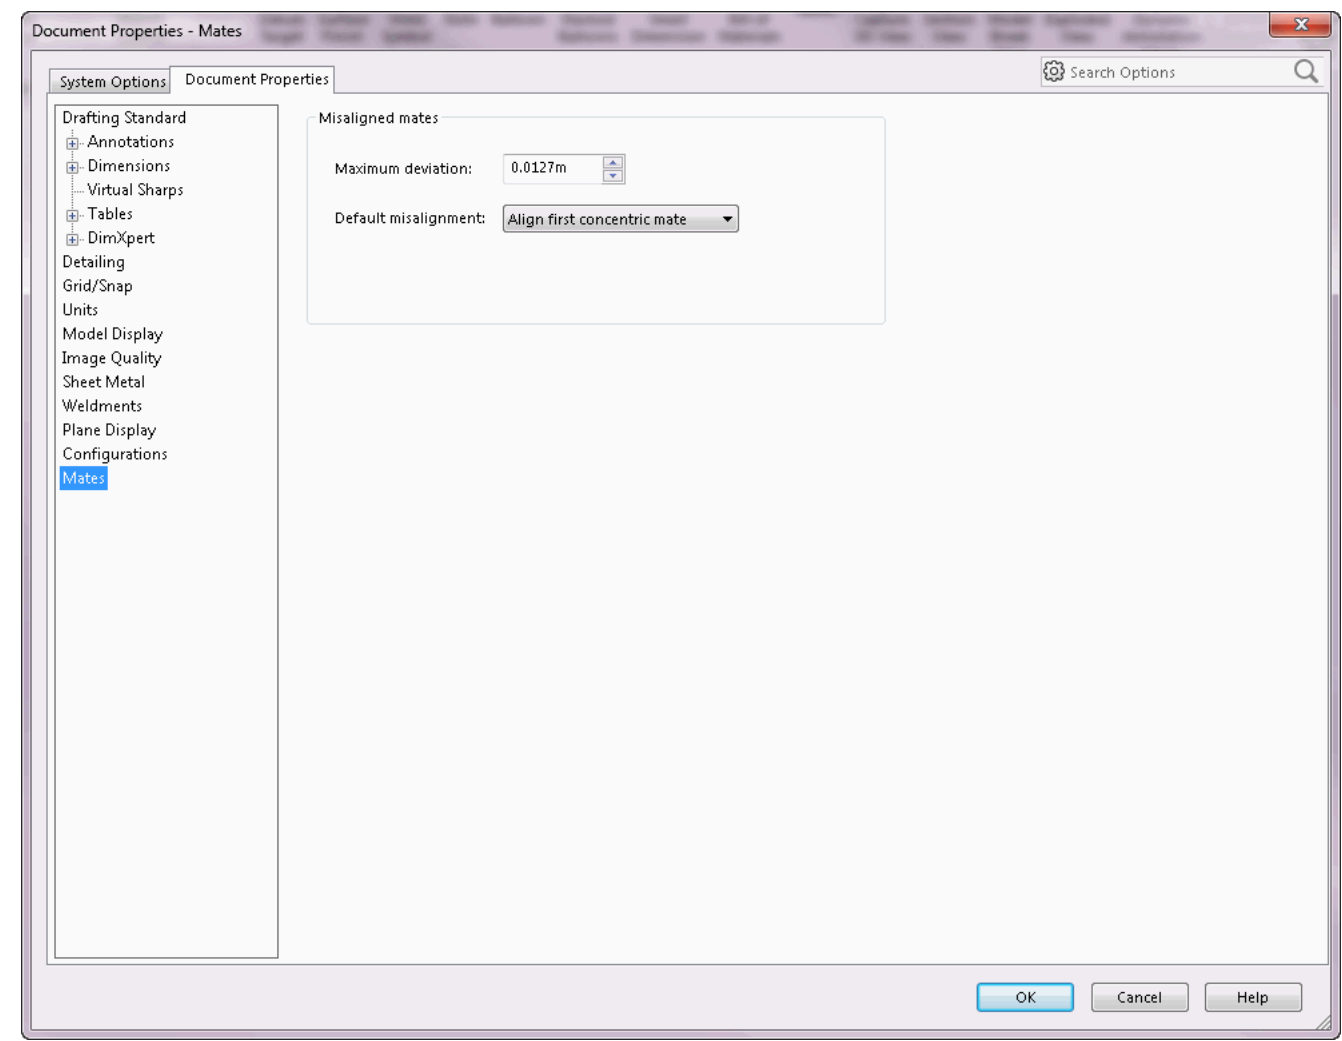

Setting	Get/Set Methods	Return Value or <Value>	Comments
Misaligned mates - Maximum deviation	[ModelDocExtension::GetUserPreferenceDouble](swUserPreferenceDoubleValue_e.swMatesMaximumDeviationForMisalignedMates, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceDouble](swUserPreferenceDoubleValue_e.swMatesMaximumDeviationForMisalignedMates, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Valid only for assemblies
Misaligned mates - Default misalignment	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swMatesDefaultMisalignedType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swMatesDefaultMisalignedType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swMatesDefaultMisalignment_e.<Value>)	Valid values as defined in swMatesDefaultMisalignment_e	Valid only for assemblies

Document Properties > Miscellaneous

Some document-level enumerators exist that do not correspond to any of the controls shown on the SOLIDWORKS **Tools > Options > Document Properties** dialogs. Click the links to jump to the tables in this Help topic or to the Help topics containing these miscellaneous document-level enumerators.

See [System Options and Document Properties](#) for details about system options and document properties.

Miscellaneous Document-level Enumerators		
SOLIDWORKS		SOLIDWORKS Routing
Related to categories on Document Properties tab	Not related to categories on Document Properties tab	
Annotations - Notes Dimensions - Hole Callout DimXpert Detailing Grid/Snap Material Properties Plane Display Configurations	Annotations folder shortcut menu Dimensions - Drafting Standard PropertyManager View menu Bounding Box Pdf	Route Properties PropertyManager page Twisted Pair Parameters

Annotations folder shortcut menu

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swShowAnnotationInAnnotationViews	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowAnnotationInAnnotationViews, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowAnnotationInAnnotationViews, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to enable annotation view visibility; corresponds to Annotations' folder shortcut menu item, Enable Annotation View Visibility

Detailing

Enumerator	Get/Set Methods	Return Value or <Value>	C
swDetailingAngularDimLeaderStyle	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingAngularDimLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingAngularDimLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDisplayDimensionLeaderText_e.<Value>)	See swDisplayDimensionLeaderText_e for valid options	Sp sty pla for lea
swDetailingAngularToleranceStyle	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingAngularDimLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingAngularDimLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swToType_e.<Value>)	See swToType_e for valid options	Sp an tol sty
swDetailingChamferDimTextStyle	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingChamferDimTextStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingChamferDimTextStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingChamferDimLeaderTextStyle_e.<Value>)	See swDetailingChamferDimLeaderTextStyle_e for valid options	Sp hov dis ref the
swDetailingCenterMarkShowLines	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkShowLines, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkShowLines, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Sp wh dis cer line
swDetailingCenterMarkUseCenterline	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkUseCenterline, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkUseCenterline, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Sp wh in c ma fon for cer
swDetailingDimFontHeight	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingDimFontHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingDimFontHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Sp hei din
swDetailingDisplayWithBrokenLeaders	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDisplayWithBrokenLeaders, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDisplayWithBrokenLeaders, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Foi dir sta onl spe wh dis bro lea
swDetailingLinearDimLeaderStyle	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingLinearDimLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingLinearDimLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDisplayDimensionLeaderText_e.<Value>)	See swDisplayDimensionLeaderText_e for valid options	Sp sty pla for lea
swDetailingLinearToleranceStyle	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingLinearToleranceStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingLinearToleranceStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swToType_e.<Value>)	See swToType_e for valid options	Sp line tol sty
swDetailingMaxAngularToleranceValue	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMaxAngularToleranceValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified)	Double value	Sp ma var the

	IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMaxAngularToleranceValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)		an tol sel
swDetailingMaxLinearToleranceValue	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMaxLinearToleranceValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMaxLinearToleranceValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Sp ma var typ tol sel
swDetailingMaxWitnessLineLength	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMaxWitnessLineLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMaxWitnessLineLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Sp ma len wit
swDetailingMinAngularToleranceValue	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMinAngularToleranceValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMinAngularToleranceValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Sp mir var typ an tol sel
swDetailingMinLinearToleranceValue	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMinLinearToleranceValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingMinLinearToleranceValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Sp mir var typ tol sel
swDetailingNoteFontHeight	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingNoteFontHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDouble_e.swDetailingNoteFontHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Sp hei not
swDetailingRadialDimLeaderStyle	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingRadialDimLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingRadialDimLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDisplayDimensionLeaderText_e.<Value>)	See swDisplayDimensionLeaderText_e for valid options	Sp sty pla for lea
swDetailingToleranceFitToDisplayAngular	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingToleranceFitToDisplayAngular, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingToleranceFitToDisplayAngular, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swFitToDisplay_e.<Value>)	If swToType_e set to swToFIT, swToFITWITHTOL, or swToFITTOLONLY, then see swFitToDisplay_e for valid options	
swDetailingToleranceFitToDisplayLinear	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingToleranceFitToDisplayLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingToleranceFitToDisplayLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swFitToDisplay_e.<Value>)	If swToType_e set to swToFIT, swToFITWITHTOL, or swToFITTOLONLY, then see swFitToDisplay_e for valid options	

[Back to top](#)

Dimensions - Drafting Standard

Enumerator	Get/Set Methods	Return Value or <Value>	
swDetailingAutoInsertDimsMarkedForDrawing	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertDimsMarkedForDrawing, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertDimsMarkedForDrawing, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Spe inse drai IDis for i for i
swDetailingDimensionsAngularToleranceUseParentheses	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsAngularToleranceUseParentheses, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimensionsAngularToleranceUseParentheses, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For tol to s tol
swDetailingDimensionStandardName	IModelDocExtension::GetUserPreferenceString (swUserPreferenceString_e.swDetailingDimensionStandardName, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceString_e.swDetailingDimensionStandardName, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Valid string values: • ANSI • ISO • DIN • JIS • BSI • GOST • GB	Det
swDetailingDimLeaderOverrideStandard	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimLeaderOverrideStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimLeaderOverrideStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Spe star
swDetailingDimOffsetText	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimOffsetText, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimOffsetText, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Spe text
swDetailingDimsFollowDimXpertLayout	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsFollowDimXpertLayout, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsFollowDimXpertLayout, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Spe dim
swDetailingDimsSnapTextToGrid	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsSnapTextToGrid, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDimsSnapTextToGrid, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Spe text
swDetailingShowHaloAroundAnnotation	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowHaloAroundAnnotation, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowHaloAroundAnnotation, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Spe spa ann view are:

[Back to top](#)

Dimensions - Hole Callout

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swDetailingDualDimPosition	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDetailingDualDimPosition, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingDualDimPosition_e.<Value>)	See swDetailingDualDimPosition_e for valid options	Allows the display of dimensions in two kinds of units

[Back to top](#)

DimXpert

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swDisplayComponentDimXpertAnnotations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayComponentDimXpertAnnotations, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayComponentDimXpertAnnotations, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	

[Back to top](#)

Grid/Snap

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swSnapOnlyIfGridDisplayed	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSnapOnlyIfGridDisplayed, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSnapOnlyIfGridDisplayed, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to snap to grid if swGridDisplay is turned on
swSnapToAngle	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSnapToAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSnapToAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether sketched lines snap to predefined angle
swSnapToAngleValue	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDouble_e.swSnapToAngleValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDouble_e.swSnapToAngleValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies angle to which sketched lines should snap
swSnapToPoints	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSnapToPoints, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSnapToPoints, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether points snap to grid

[Back to top](#)

Material Properties

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swMaterialPropertySolidFill	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swMaterialPropertySolidFill, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swMaterialPropertySolidFill, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only; specifies whether to set the fill for area hatch or solid

[Back to top](#)

Notes

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swDetailingNotesDisplayWithBentLeader	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingNotesDisplayWithBentLeader, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingNotesDisplayWithBentLeader, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display notes using bent leaders

[Back to top](#)

Plane Display

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swPlaneDisplayShowEdges	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPlaneDisplayShowEdges, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPlaneDisplayShowEdges, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Edges of planes take the same color as the front and back faces, are not transparent, and are always displayed

[Back to top](#)

Configurations

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swDefaultConfigSortOrder	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swDefaultConfigSortOrder, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swDefaultConfigSortOrder, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swConfigTreeSortType_e.<Value>)	Values as defined in swConfigTreeSortType_e	ConfigurationManager RMB menu

[Back to top](#)

PropertyManager

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swPropertyManagerColorActiveClosedDivider	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorActiveClosedDivider, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorActiveClosedDivider, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColorBackground	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorBackground, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorBackground, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	

swPropertyManagerColor_Divider	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColor_Divider, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColor_Divider, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColorEditBox	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorEditBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorEditBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColor_EditText	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColor_EditText, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColor_EditText, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColorImportantMessage	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorImportantMessage, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorImportantMessage, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColorInnerBorder	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorInnerBorder, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorInnerBorder, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColorLabelAndIcon	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorLabelAndIcon, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorLabelAndIcon, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColorTitle	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorTitle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorTitle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColorOuterBorder	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorOuterBorder, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorOuterBorder, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColorTopBorder	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorTopBorder, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorTopBorder, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	
swPropertyManagerColorDivider	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorDivider, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceInteger_e.swPropertyManagerColorDivider, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Read-only integer value for RGB color in use	

[Back to top](#)

View menu

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swDisplayCameraFOVBox	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayCameraFOVBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayCameraFOVBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display Field of View (FOV) box in the graphics area when viewing through a camera

[Back to top](#)

Bounding Box

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swViewDispGlobalBBox	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swViewDispGlobalBBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swViewDispGlobalBBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	

[Back to top](#)


Pdf

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swPdfIncludeBookmarks	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPdfIncludeBookmarks, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPdfIncludeBookmarks, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	

[Back to top](#)


Document Properties > Performance

The Performance tab appears only when a drawing is open.

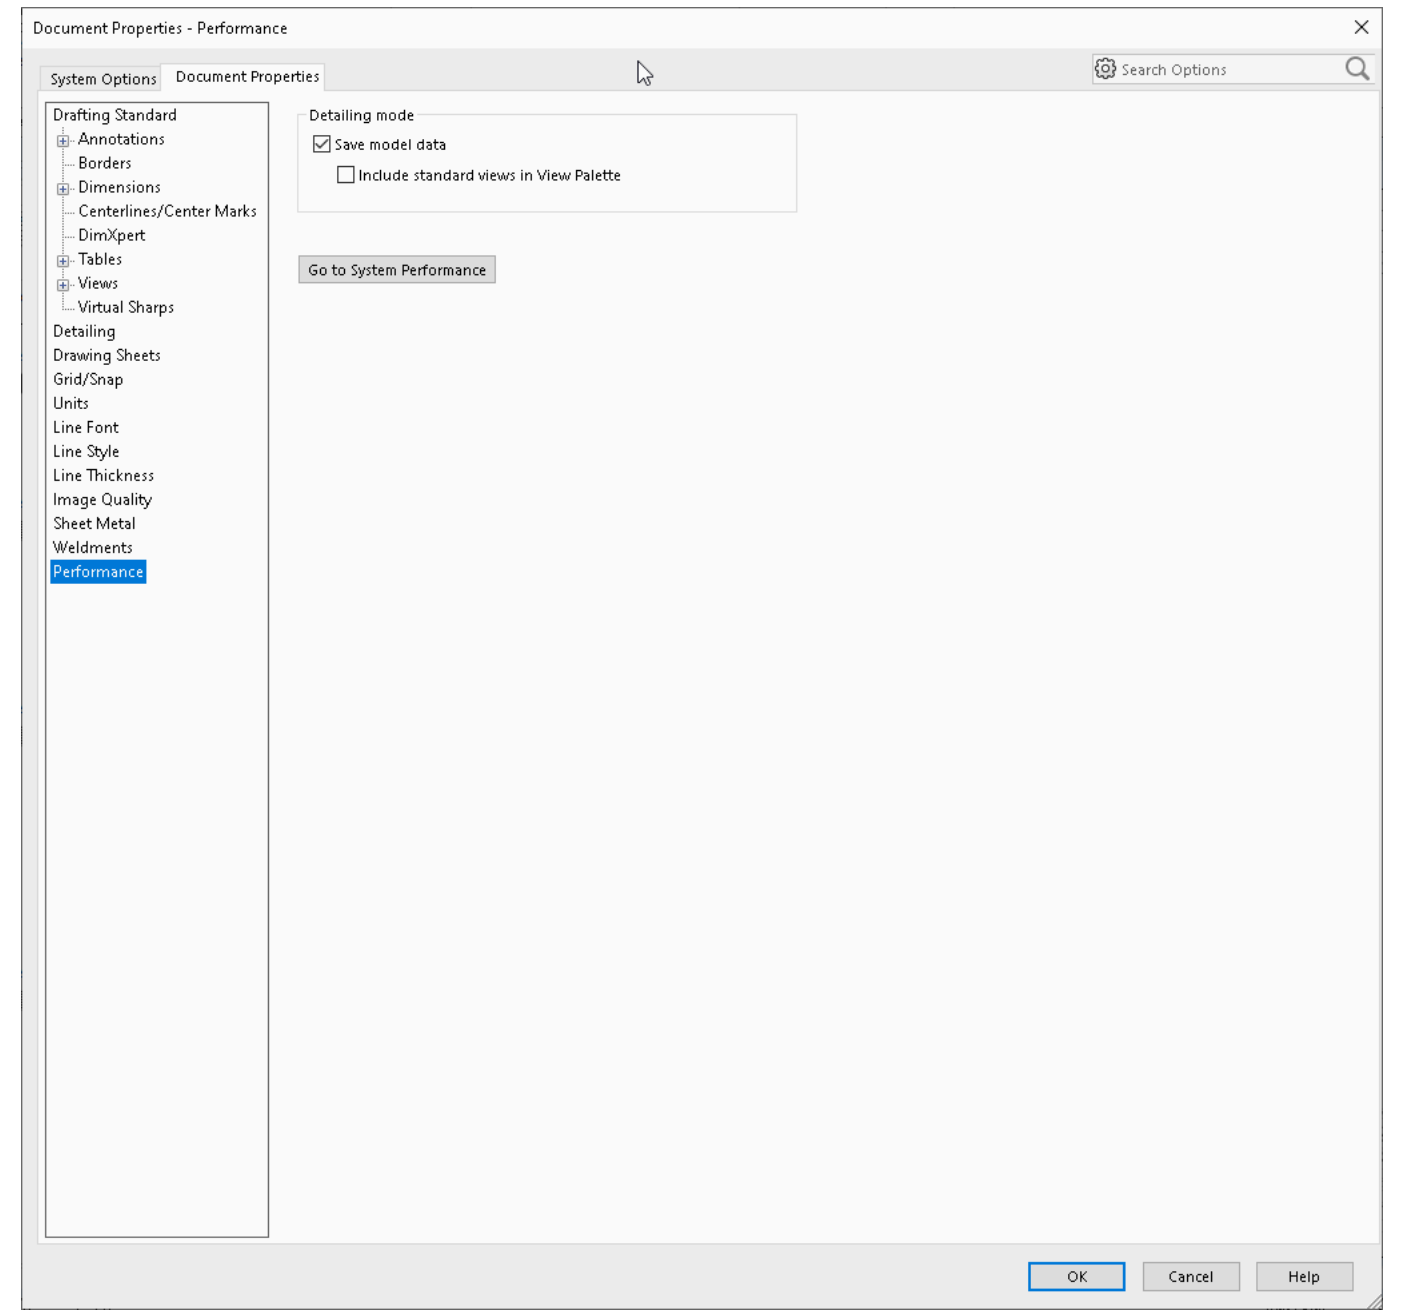

Setting	Get/Set Methods	Return Value or <Value>	Comments
Detailing mode - Save model data	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingModeSaveModelData, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingModeSaveModelData, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Valid only for drawings
Detailing mode - Include standard views in View Palette	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingModelIncludeStandardViewsInViewPalette, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingModelIncludeStandardViewsInViewPalette, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Valid only for drawings and when Save model data is set to true

Document Properties > Plane Display

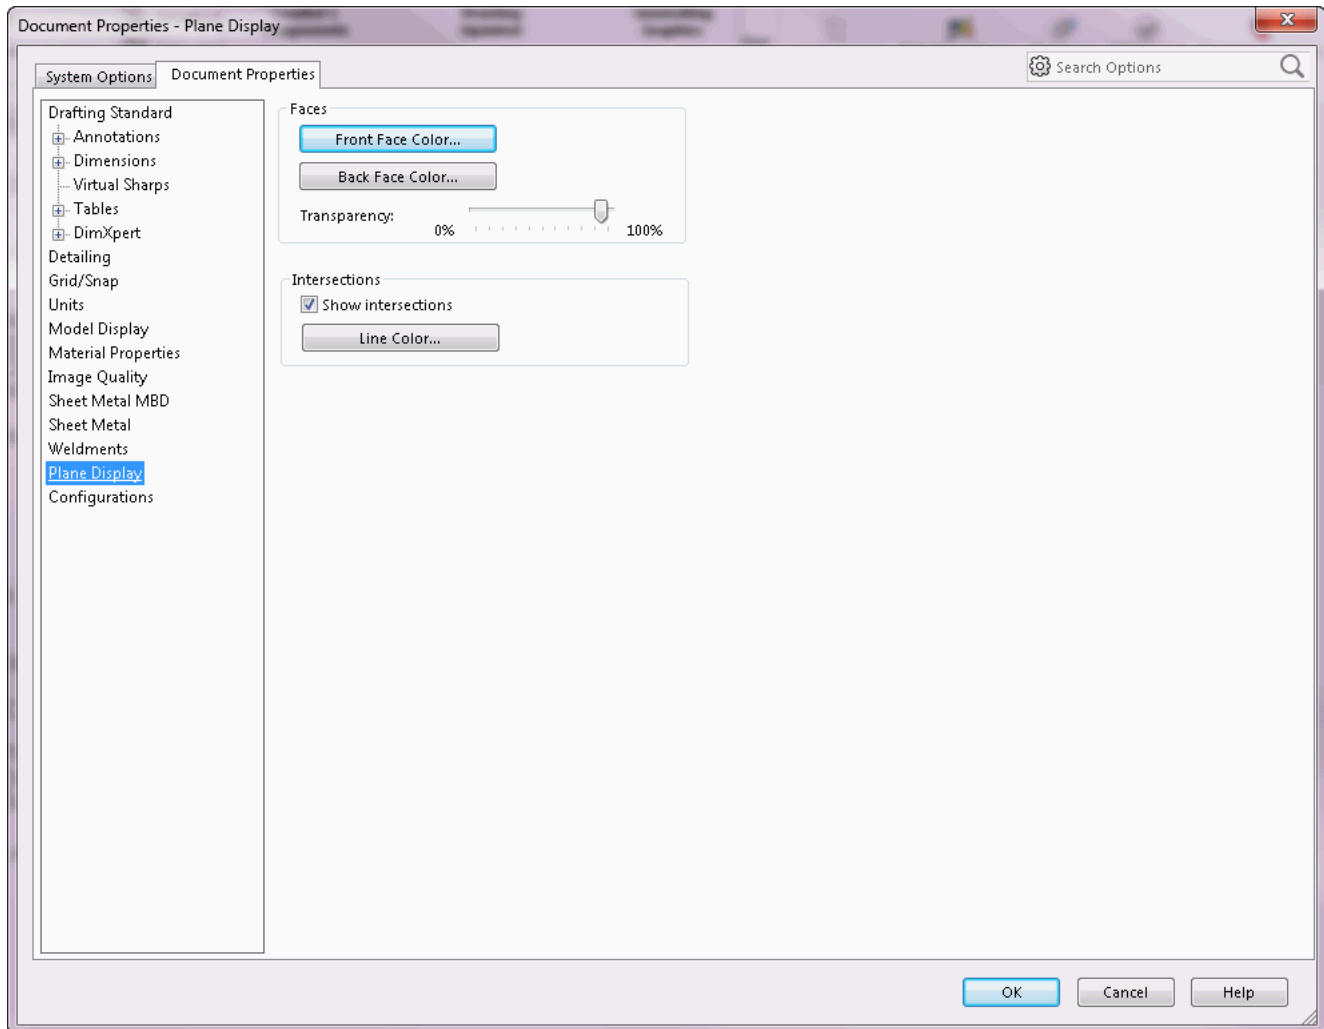

Setting	Get/Set Methods	Return Value or <Value>	Comments
Faces - Front Face Color...	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPlaneDisplayFrontFaceColor, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPlaneDisplayFrontFaceColor, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB color value	
Faces - Back Face Color...	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPlaneDisplayBackFaceColor, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPlaneDisplayBackFaceColor, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB color value	
Faces - Transparency	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPlaneDisplayTransparency, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPlaneDisplayTransparency, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer percentage value (0 - 100)	
Intersections - Show intersections	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPlaneDisplayShowIntersections, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPlaneDisplayShowIntersections, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display the line at which two planes intersect
Intersections - Line Color...	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPlaneDisplayIntersectionLineColor, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPlaneDisplayIntersectionLineColor, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB color value	