

SOLIDWORKS Enumerations (swconst) — Examples (5/8):


DP_ViewLabels-Section-FileSaveAsIGESOptions

SOLIDWORKS API Documentation (converted from CHM)

Document Properties > Views > Section

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the Document Properties - Section dialog corresponds to the settings on that dialog.
- titled **Obsolete Enumerators** contains enumerators that previously appeared on the Document Properties - Section dialog, but are now obsolete and no longer appear on that dialog.

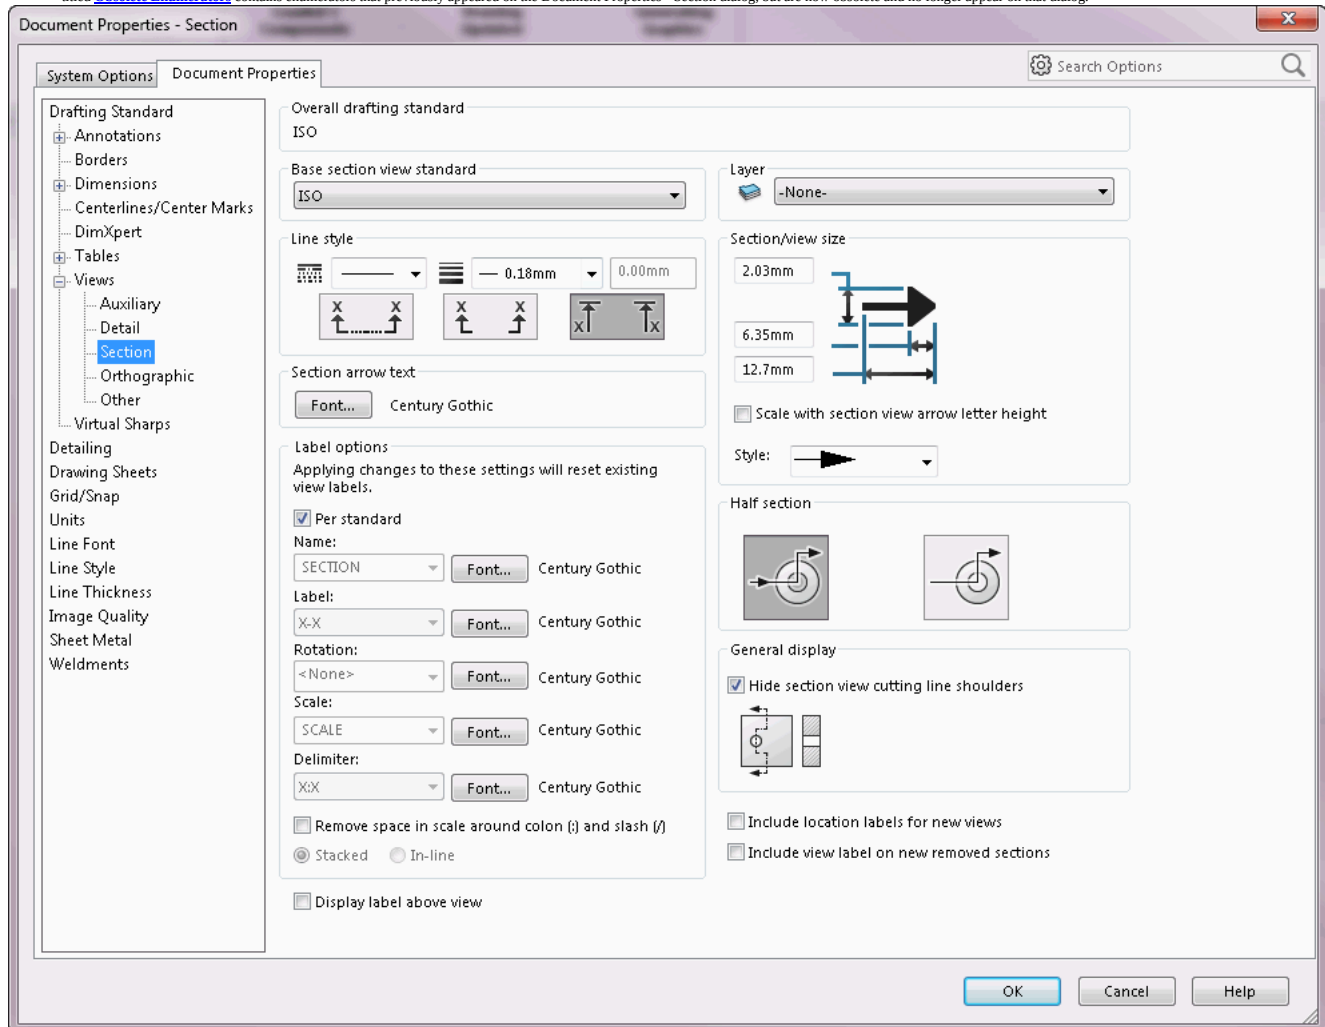


Setting	Get/Set Methods	Return Value or <Value>	
Base section view standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingSectionView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingSectionView, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base s
Line style - Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontSectionLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontSectionLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies the style c
Line style - Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontSectionLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontSectionLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies the thickn
Line style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontSectionLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontSectionLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom th the specified thickn
Line style-Standard with connector, Alternative without connector, Standard without connector	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLineStyleDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLineStyleDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingSectionViewLineStyle_e.<Value>)	See swDetailingSectionViewLineStyle_e for valid options	Specifies how secti
Section arrow text -	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified)	See ITextFormat for font options	To set font property ITextFormat membe

Font...	IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)		method
Label options - Per standard	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionViewLabels_PerStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionViewLabels_PerStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If... True False
Label options - Name	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLabels_Name, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLabels_Name, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsName_e.<Value>)	See swDetailingViewLabelsName_e for valid options	Specifies the label t swDetailingViewLat set Label options -
Label options - Name (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingSectionViewLabels_CustomName, swUserPreferenceOption_e.swDetailingSectionView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingSectionViewLabels_CustomName, swUserPreferenceOption_e.swDetailingSectionView, <Value>)	String value	Specifies the custor Label options - Na swDetailingViewLat
Label options - Name - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionLabelNameTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionLabelNameTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See TTextFormat for font options	To set font property v member values, and f
Label options - Label	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLabels_Label, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLabels_Label, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsLabel_e.<Value>)	See swDetailingViewLabelsLabel_e for valid options	Specifies the forma
Label options - Label - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionLabelLabelTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionLabelLabelTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See TTextFormat for font options	To set font property v member values, and f
Label options - Rotation	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionView_Rotation, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionView_Rotation, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewRotation_e.<Value>)	See swDetailingViewRotation_e for valid options	Specifies the rotatic
Label options - Rotation - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionView_RotationTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionView_RotationTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See TTextFormat for font options	To set font property v member values, and f
Label options - Scale	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLabels_Scale, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLabels_Scale, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsScale_e.<Value>)	See swDetailingViewLabelsScale_e for valid options	Specifies the label t swDetailingViewLat then set Label opti
Label options - Scale (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingSectionViewLabels_CustomScale, swUserPreferenceOption_e.swDetailingSectionView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingSectionViewLabels_CustomScale, swUserPreferenceOption_e.swDetailingSectionView, <Value>)	String value	Specifies the custor Label options - Sc swDetailingViewLat
Label options - Scale - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionLabelScaleTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionLabelScaleTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See TTextFormat for font options	To set font property v member values, and f
Label options - Delimiter	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLabels_Delimiter, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionViewLabels_Delimiter, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsDelimiter_e.<Value>)	See swDetailingViewLabelsDelimiter_e for valid options	Specifies the forma
Label options - Delimiter - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionLabelDelimiterTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSectionLabelDelimiterTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See TTextFormat for font options	To set font property v member values, and f
Label options - Remove space in scale around colon (:) and slash (/)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether t
Label options - Stacked or In-line	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionViewLabels_Stacked, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionViewLabels_Stacked, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If... True False
Display label above view	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionViewLabels_AboveView, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionViewLabels_AboveView, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether t
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingSectionView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingSectionView, <Value>)	Valid Options: • "Border" • "Dimensions" • "Notes" • "BOM"	This setting is avail options may not app

		• "FORMAT"	
Section/view size - Arrow width	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSectionArrowWidth, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSectionArrowWidth, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies width of a
Section/view size - Arrowhead length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSectionArrowHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSectionArrowHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies height of a
Section/view size - Arrow length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSectionArrowLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSectionArrowLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies length of a
Section/view size - Scale with section view arrow letter height	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingScaleWithSectionTextHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingScaleWithSectionTextHeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to scale to the end of the arrow
Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionArrowStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSectionArrowStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swArrowStyle_e.<Value>)	See swArrowStyle_e for valid options	Specifies style of section arrow
Half section	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingHalfSectionArrow, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingHalfSectionArrow, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See swDetailingHalfSectionArrow_e for valid options	Specifies the half section arrow style
General display - Hide section view cutting line shoulders	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionHideShoulders, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionHideShoulders, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to hide shoulders
Include location labels for new views	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionView_IncludeLocationLabelsForNewViews, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSectionView_IncludeLocationLabelsForNewViews, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to include location labels

Obsolete Enumerators

Enumerator	Comment
swDetailingDisplayAlternateSection	Obsolete.
swDetailingSectionLabelTextFormat	Obsolete. Use swDetailingSectionLabelNameTextFormat, swDetailingSectionLabelLabelTextFormat, swDetailingSectionLabelScaleTextFormat, or swDetailingSectionLabelDelimiterTextFormat

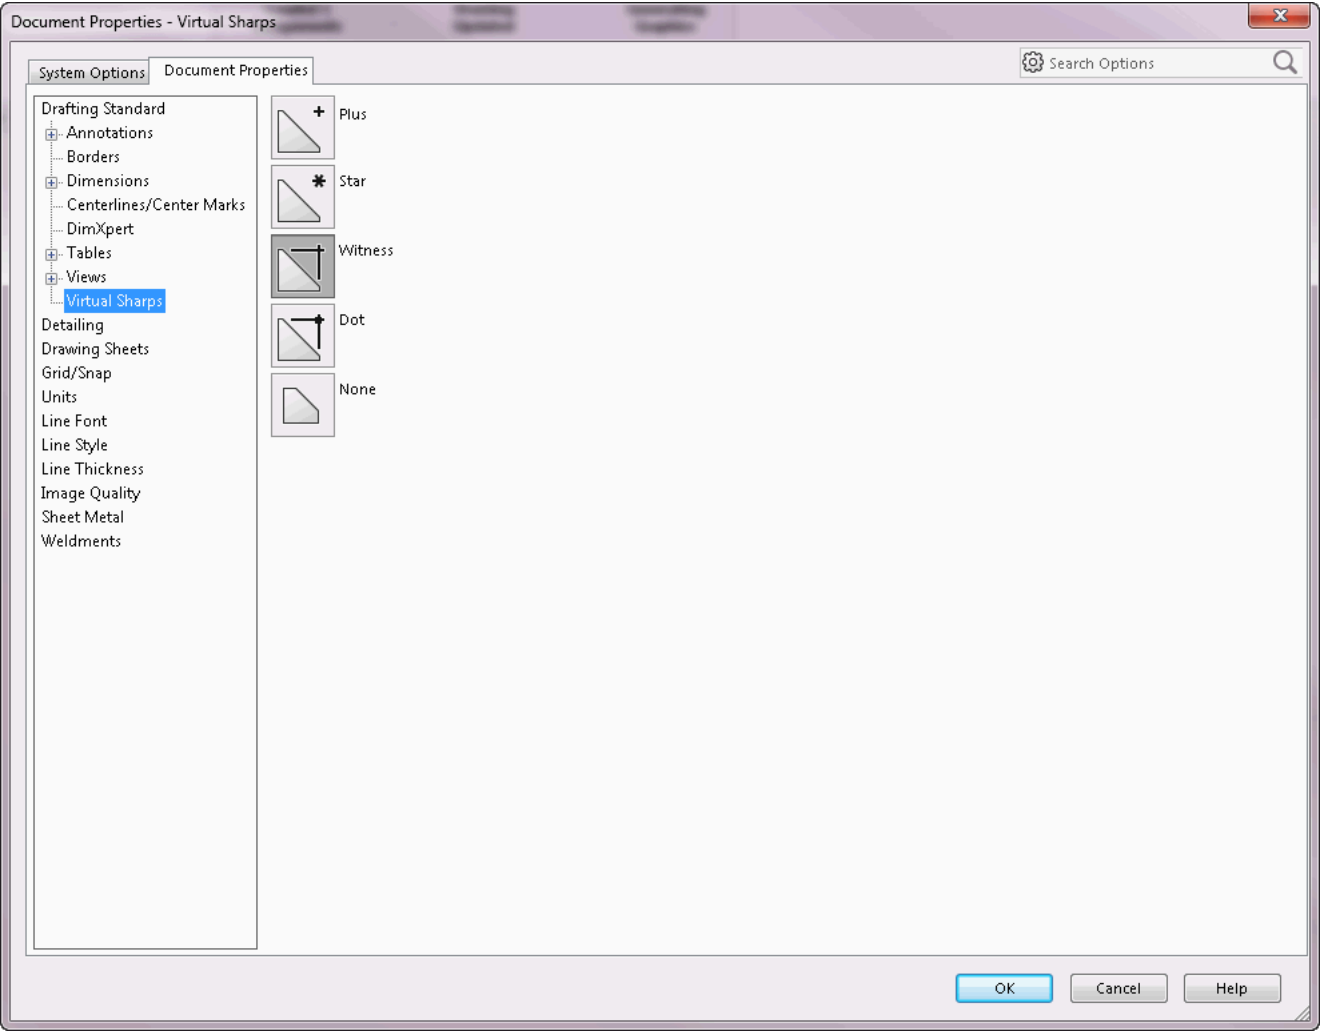

Setting	Get/Set Methods	Return Value or <Value>	Comments
Virtual sharp style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingVirtualSharpStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingVirtualSharpStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingVirtualSharp_e.<Value>)	See swDetailingVirtualSharp_e for valid options	Specifies display options for virtual sharps

Document Properties >Weldments

Document Properties - Weldments

System Options Document Properties Search Options

Document Properties

- Drafting Standard
- Annotations
- Dimensions
- Virtual Sharps
- Tables
- DimXpert
- Detailing
- Grid/Snap
- Units
- Model Display
- Material Properties
- Image Quality
- Sheet Metal MBD
- Sheet Metal
- Weldments
- Plane Display
- Configurations

Cut list options

- ☐ Automatically create cut lists
- ☐ Automatically update cut lists (may affect performance with many bodies)
- ☐ Rename cut list folders with Description property value
- ☐ Collect identical bodies
- ☐ Use English Description property name in Weldment Cut list

Weldment options

- ☒ Create derived configurations
- ☒ Assign configuration Description strings

Bounding Box Properties

Solid Bodies Description:

Plate, SW-Thickness x SW-Width x SW-Length

Text Expression: Plate, SW-Thickness x SW-Width x SW-Length

- ☒ Use default description

Sheet Metal Bodies Description:

Sheet

- ☒ Use default description

Apply to:

- ☒ New bounding boxes
- ☐ Existing and new bounding boxes

Cut list IDs

- ☐ Generate Cut list IDs

Structure Cut list ID:

%Description%, %MATERIAL%, %LENGTH%, %ANGLE1%, %ANGLE2%, %A

Sheet Metal Cut list ID:

%Description%, %MATERIAL%, %Bounding Box Length%, %Bounding Bc

Generic Cut list ID:

%Description%, %MATERIAL%


- ☐ Use document unit settings (Converts Cut list IDs to document's unit settings)

OK Cancel Help


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Cut list options - Automatically create cut lists	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentEnableAutomaticCutList) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentEnableAutomaticCutList, <OnFlag>)	Boolean value	Specifies whether to automatically create cut lists
Cut list options - Automatically update cut lists (may affect performance with many bodies)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentEnableAutomaticUpdate) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentEnableAutomaticUpdate, <OnFlag>)	Boolean value	Specifies whether to automatically update cut lists
Cut list options - Rename cut list folders with	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentRenameCutlistDescriptionPropertyValue) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentRenameCutlistDescriptionPropertyValue, <OnFlag>)	Boolean value	Specifies whether to automatically rename cut list folders using the Description property value

Description property value			
Cut list options - Collect identical bodies	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentCollectIdenticalBodies) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentCollectIdenticalBodies, <OnFlag>)	Boolean value	Specifies whether to collect identical bodies
Cut list options - Use English Description property name in Weldment Cut list	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentUseEnglishDescriptionNameInCutlist) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swWeldmentUseEnglishDescriptionNameInCutlist, <OnFlag>)	Boolean value	
Weldment options - Create derived configurations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisableDerivedConfigurations) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisableDerivedConfigurations, <OnFlag>)	Boolean value	Specifies whether to create derived configurations; affects newly added configurations only
Weldment options - Assign configuration Description strings	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisableWeldmentConfigStrings) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisableWeldmentConfigStrings, <OnFlag>)	Boolean value	Specifies whether to assign configuration strings; swDisableDerivedConfigurations must be true for this setting to be applicable
Bounding Box Properties - Solid Bodies Description - Prefix	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swSolidBodiesBBoxDescriptionPrefix, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swSolidBodiesBBoxDescriptionPrefix, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	Valid only if Solid Bodies Description - Use default description is set to true
Bounding Box Properties - Solid Bodies Description - First property	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSolidBodiesDescriptionFirstPropertyIndex, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSolidBodiesDescriptionFirstPropertyIndex, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swSolidBodiesDescriptionPropertyIndex.<Value>)	Integer value as defined in swSolidBodiesDescriptionPropertyIndex	Valid only if Solid Bodies Description - Use default description is set to true
Bounding Box Properties - Solid Bodies Description - First separator	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swSolidBodiesBBoxDescriptionFirstSeparator, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swSolidBodiesBBoxDescriptionFirstSeparator, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	Valid only if Solid Bodies Description - Use default description is set to true
Bounding Box Properties - Solid Bodies Description - Second property	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSolidBodiesDescriptionSecondPropertyIndex, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSolidBodiesDescriptionSecondPropertyIndex, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swSolidBodiesDescriptionPropertyIndex.<Value>)	Integer value as defined in swSolidBodiesDescriptionPropertyIndex	Valid only if Solid Bodies Description - Use default description is set to true
Bounding Box Properties - Solid Bodies Description - Second separator	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swSolidBodiesBBoxDescriptionSecondSeparator, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swSolidBodiesBBoxDescriptionSecondSeparator, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	Valid only if Solid Bodies Description - Use default description is set to true
Bounding Box Properties - Solid Bodies Description - Third property	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSolidBodiesDescriptionThirdPropertyIndex, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSolidBodiesDescriptionThirdPropertyIndex, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swSolidBodiesDescriptionPropertyIndex.<Value>)	Integer value as defined in swSolidBodiesDescriptionPropertyIndex	Valid only if Solid Bodies Description - Use default description is set to true
Bounding Box Properties - Solid Bodies Description - Suffix	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swSolidBodiesBBoxDescriptionSuffix, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swSolidBodiesBBoxDescriptionSuffix, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	Valid only if Solid Bodies Description - Use default description is set to true
Bounding Box Properties - Solid Bodies Description - Use default description	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSolidBBoxDescriptionUseDefault) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSolidBBoxDescriptionUseDefault, <OnFlag>)	Boolean value	
Bounding Box Properties - Sheet Metal Bodies Description - Description	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swSheetMetalDescription, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swSheetMetalDescription, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	Valid only if Sheet Metal Bodies Description - Use default description is set to true
Bounding Box Properties - Sheet Metal Bodies Description - Use default description	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalBodiesDescriptionUseDefault) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalBodiesDescriptionUseDefault, <OnFlag>)	Boolean value	

Bounding Box Properties - Apply to	[ModelDocExtension::GetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swBBoxDescriptionApplyMethod, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceInteger](swUserPreferenceIntegerValue_e.swBBoxDescriptionApplyMethod, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swBBoxDescriptionApplyMethod_e.<Value>)	Integer value as defined in swBBoxDescriptionApplyMethod_e	
Cut list IDs - Generate Cut list IDs	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swWeldmentGenerateCutlistIDs) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swWeldmentGenerateCutlistIDs, <OnFlag>)	Boolean value	If set to true and a cut list is available, generates cut list IDs
Cut list IDs - Structure Cut list ID	[ModelDocExtension::GetUserPreferenceString](swUserPreferenceStringValue_e.swWeldmentStructureCutlistID, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceString](swUserPreferenceStringValue_e.swWeldmentStructureCutlistID, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String values are properties that are listed in the Cut-List Properties dialog: "%Description%" "%MATERIAL%" "%LENGTH%" "%ANGLE1%" "%ANGLE2%" "%Angle Direction%" "%Angle Rotation%"	Valid only if Cut list IDs - General Cut list IDs is set to true
Cut list IDs - Sheet Metal Cut list ID	[ModelDocExtension::GetUserPreferenceString](swUserPreferenceStringValue_e.swWeldmentSheetmetalCutlistID, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceString](swUserPreferenceStringValue_e.swWeldmentSheetmetalCutlistID, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String values are properties that are listed in the Cut-List Properties dialog : "%Description%" "%MATERIAL%" "%Bounding Box Length%" "%Bounding Box Width%" "%Sheet Metal Thickness%" "%Bounding Box Area%" "%Bends%" "%Bend Radius%"	Valid only if Cut list IDs - General Cut list IDs is set to true
Cut list IDs - Generic Cut list ID	[ModelDocExtension::GetUserPreferenceString](swUserPreferenceStringValue_e.swWeldmentGenericCutlistID, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceString](swUserPreferenceStringValue_e.swWeldmentGenericCutlistID, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String values are properties that are listed in the Cut-List Properties dialog: "%Description%" "%MATERIAL%"	Valid only if Cut list IDs - General Cut list IDs is set to true
Cut list IDs - Use document unit settings (Converts Cut list IDs to document's unit settings)	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swGenerateCutlistIDsInDocUnits) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swGenerateCutlistIDsInDocUnits, <OnFlag>)	Boolean value	Valid only if Cut list IDs - General Cut list IDs is set to true

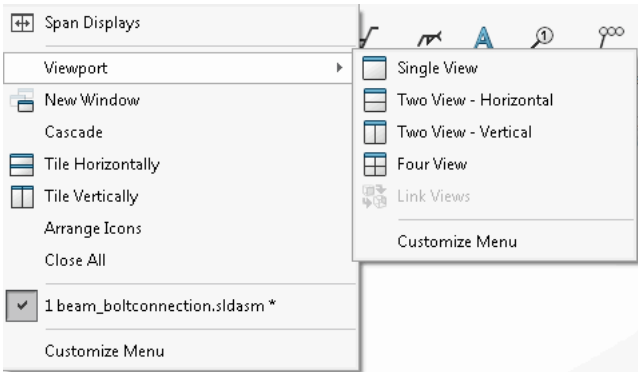

Setting	Get/Set Methods	Return Value or <Value>	Comment
Four View	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFourViewportProjectionType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFourViewportProjectionType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to view the model or drawing in four viewports

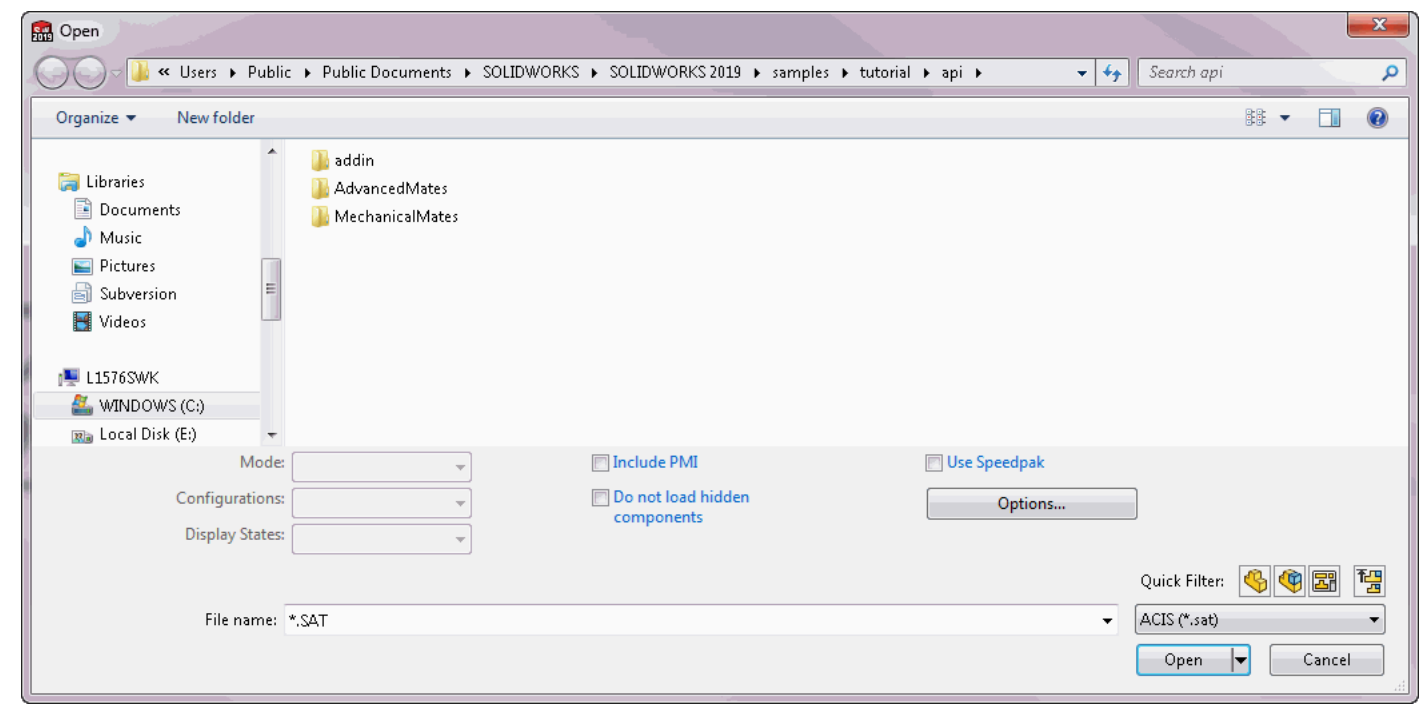


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Include PMI	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIncludePMI) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIncludePMI, <OnFlag>)	Boolean value	Specifies whether to include Product Manufacturing information when opening these non-native file types: • ACIS • CATIA V5 • Pro/ECreo • Unigraphics/NX • Inventor • Solid Edge

To display the dialog:

Select **Tools > Options > System Options > Import > File Format > 3MF**.

- or -

1. Select **File > Open**.
2. In **Files of type**, select **3D Manufacturing Format**.
3. Click **Options**.

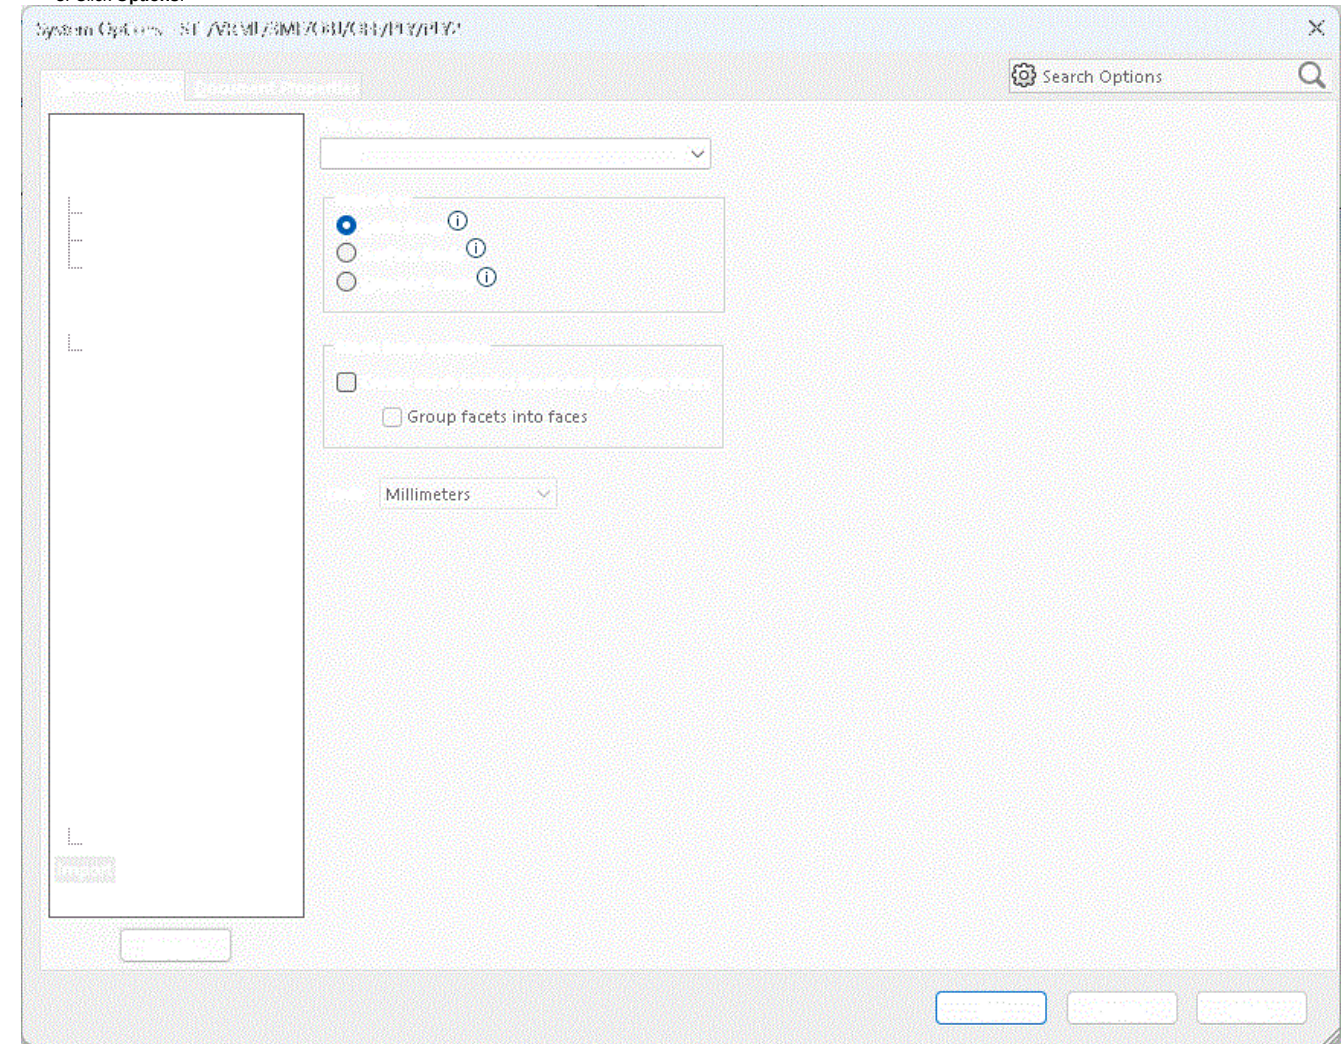

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Import as - Graphics body	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmIModelType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmIModelType, swImportStlVrmIModelType_e.swImportStlVrmIModelType_Graphics)	swImportStlVrmIModelType_e .swImportStlVrmIModelType_Graphics	
Import as - Solid body	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmIModelType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmIModelType, swImportStlVrmIModelType_e.swImportStlVrmIModelType_Solid)	swImportStlVrmIModelType_e .swImportStlVrmIModelType_Solid	
Import as - Surface body	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmIModelType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmIModelType, swImportStlVrmIModelType_e.swImportStlVrmIModelType_Surface)	swImportStlVrmIModelType_e .swImportStlVrmIModelType_Surface	

Mesh body options - Create mesh bodies bounded by single faces	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swVrmlStlImportAsPSMesh) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swVrmlStlImportAsPSMesh, <OnFlag>)	Boolean value	Valid only when importing as Solid body or Surface body, specifies whether to create mesh bodies bounded by single faces
Mesh body options - Group facets into faces	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swVrmlStlImportSegmented) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swVrmlStlImportSegmented, <OnFlag>)	Boolean value	Valid only if Create mesh bodies bounded by single faces is selected, specified whether to group facets into faces
Unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlUnits, swLengthUnit_e.<Value>)	Valid options from swLengthUnit_e : • 0 = swMM (millimeters) • 1 = swCM (centimeters) • 2 = swMETER • 3 = swINCHES • 4 = swFEET	

System Options > Import > General


This topic contains two tables. The information in the table:

- appearing immediately after the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

To display the dialog:

Select **Tools > Options > System Options > Import > File Format > General**.

- or -
1. Select **File > Open**.
 2. In **Files of type**, select:
 - Parasolid
 - IGES
 - STEP AP203/214/242
 - IFC 2x3
 - ACIS
 - VDAFS
 - Unigraphics/NX
 - Inventor Part
 - Inventor Assembly
 2. Click **Options**.

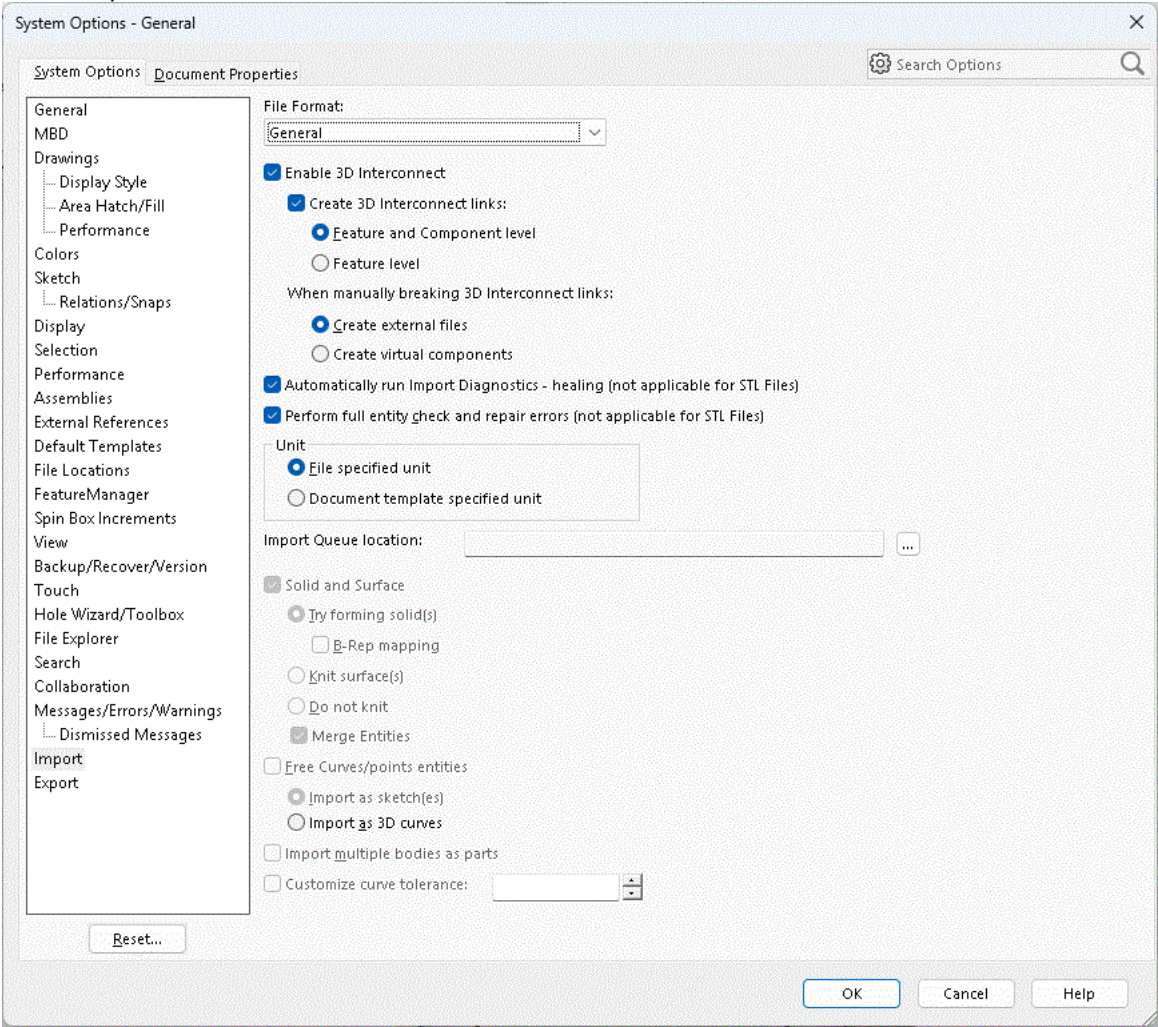

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>
Enable 3D Interconnect	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swMultiCAD_Enable3DInterconnect) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swMultiCAD_Enable3DInterconnect, <OnFlag>)	Boolean value

Create 3D Interconnect links	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swMultiCAD_3DInterconnectMaintainLinks) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swMultiCAD_3DInterconnectMaintainLinks, <OnFlag>)	Boolean value
Create 3D Interconnect links options	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swMultiCAD_3DInterconnectLinksFlag) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swMultiCAD_3DInterconnectLinksFlag, <OnFlag>)	False = Feature and component level (default) True = Feature level
When manually breaking 3D Interconnect links:	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swMultiCAD_3DInterconnectManualBreakLink) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swMultiCAD_3DInterconnectManualBreakLink, <OnFlag>)	False = Create external files (default) True = Create virtual components
Automatically run Import Diagnostics (Healing)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportAutoRunImportDiagnostics) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportAutoRunImportDiagnostics, <OnFlag>) and ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportAutoRunImportDiagnosticsPersist) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportAutoRunImportDiagnosticsPersist, <OnFlag>)	Boolean value and Boolean value
Perform full entity check and repair errors	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportCheckAndRepair) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportCheckAndRepair, <Value>)	0 = Do not check and repair 1 = Check and repair
Unit - File specified unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportUnitPreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportUnitPreference, swGeneralImportUnitsOptions_e.swGeneralImportFileSpecifiedUnit)	swGeneralImportUnitsOptions_e.swGeneralImportFileSpecifiedUnit
Unit - Document template specified unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportUnitPreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportUnitPreference, swGeneralImportUnitsOptions_e.swGeneralImportDocumentTemplateSpecifiedUnit)	swGeneralImportUnitsOptions_e.swGeneralImportDocumentTemplateSpecifiedUnit
Import Queue location	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swMultiCAD_ImportQueuePath) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swMultiCAD_ImportQueuePath, <Value>)	String value
Solid and Surface	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSolidSurface) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSolidSurface, <OnFlag>)	Boolean value
Try forming solid(s)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swCreateBodyFromSurfacesOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swCreateBodyFromSurfacesOption, swGeneralImportSurfaceSolidEntityOptions_e.swGeneralImportTryFormingSolids)	swGeneralImportSurfaceSolidEntityOptions_e.swGeneralImportTryFormingSolids
B-Rep mapping	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportUseBrep) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swCreateBodyFromSurfacesOption, swGeneralImportSurfaceSolidEntityOptions_e.swImportUseBrep) and ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swCreateBodyFromSurfacesOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swCreateBodyFromSurfacesOption, swGeneralImportSurfaceSolidEntityOptions_e.swGeneralImportByBrep)	0 = Import the model by directly mapping topologies using BREP data 1 = Do not import the model by directly mapping topologies using BREP data NOTE: You must set ISldWorks::SetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swGeneralImportSurfaceSolidEntityOptions_e.swGeneralImportByBrep) for swGeneralImportSurfaceSolidEntityOptions_e.swImportUseBrep to have an affect. and swGeneralImportSurfaceSolidEntityOptions_e.swGeneralImportByBrep
Knit surface(s)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swCreateBodyFromSurfacesOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swCreateBodyFromSurfacesOption, swGeneralImportSurfaceSolidEntityOptions_e.swGeneralImportKnitSurfaces)	swGeneralImportSurfaceSolidEntityOptions_e.swGeneralImportKnitSurfaces
Do not knit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swCreateBodyFromSurfacesOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swCreateBodyFromSurfacesOption, swGeneralImportSurfaceSolidEntityOptions_e.swGeneralImportDoNotKnit)	swGeneralImportSurfaceSolidEntityOptions_e.swGeneralImportDoNotKnit
Merge Entities	See Comment	See Comment
Free Curves/points entities	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportFreeCurves) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportFreeCurves, <OnFlag>)	Boolean value
Import as sketch(es)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportCurvePreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportCurvePreference, swGeneralImportFreePointCurveEntityOptions_e.swGeneralImportAsSketches)	swGeneralImportFreePointCurveEntityOptions_e.swGeneralImportAsSketches
Import as 3D curves	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportCurvePreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportCurvePreference, swGeneralImportFreePointCurveEntityOptions_e.swGeneralImportAs3dCurves)	swGeneralImportFreePointCurveEntityOptions_e.swGeneralImportAs3dCurves
Import multiple bodies as parts	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportMultBodyAsPartData) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportMultBodyAsPartData, <OnFlag>)	Boolean value
Customize curve tolerance	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swUseCustomizedImportTolerance) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swUseCustomizedImportTolerance, <Value>)	0 = Do not use customized import tolerance 1 = Use customized import tolerance
Customize curve tolerance <n>	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swCustomizedImportTolerance) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swCustomizedImportTolerance, <Value>)	Double value in meters
IGES - Show IGES levels	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESImportShowLevel) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESImportShowLevel, <OnFlag>)	Boolean value
STEP - Map configuration data	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportStepConfigData) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportStepConfigData, <OnFlag>)	Boolean value

Obsolete Enumerators

Enumerator	Comment
swImportUGToolBodies	Obsolete

swMultiCAD_ApplyOnlyToParts	Obsolete
swMultiCAD_CreateNewComponentsAsExternalFiles	Obsolete
swForceEnableImportDiagnosis	Obsolete


System Options > Import > IDF

To display the dialog:

Click **Tools > Options > System Options > Import > IDF** in **File Format**.

- or -

- 1. Click **File > Open**.
- 2. In **Files of type**, select **IDF**.
- 3. Click **Options**.

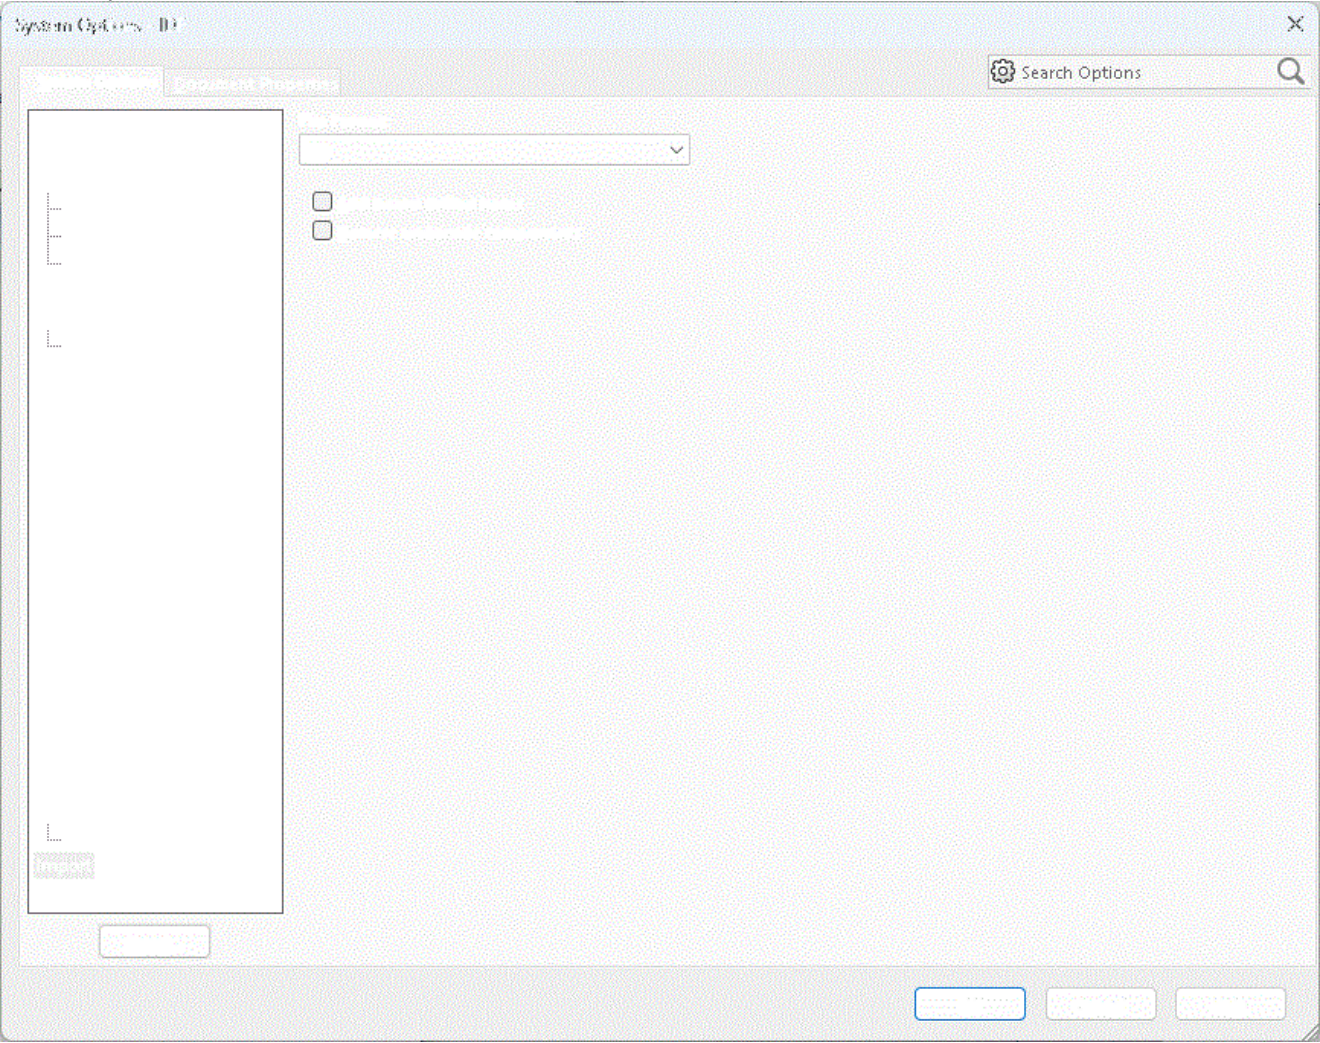

Setting	Get/Set Methods	Return Value or <OnFlag>	Comment
Add board drilled holes	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportIDFAddDrilledHoles) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportIDFAddDrilledHoles, <OnFlag>)	Boolean value	Specifies whether to add drilled holes from the circuit board; for Intermediate Data Format (IDF) circuit boards files only
Reverse underside components	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportIDFReverseUndersideComponents) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportIDFReverseUndersideComponents, <OnFlag>)	Boolean value	Specifies whether to compensate for incorrectly rotated components by allowing proper location of the component features; for Intermediate Data Format (IDF) circuit board files only


System Options > Import > Inventor/Catia V5/Creo/NX/Solid Edge

To display the dialog:

Select **Tools > Options > System Options > Import > File Format > Inventor/Catia V5/Creo/NX/Solid Edge**.

- or -

1. Click **File > Open**.
2. In **Files of type**, select **Inventor (Part or Assembly)**, **Catia V5**, **ProE/Creo (Part or Assembly)**, **Unigraphics/NX**, or **Solid Edge (Part or Assembly)**.
3. Click **Options**.

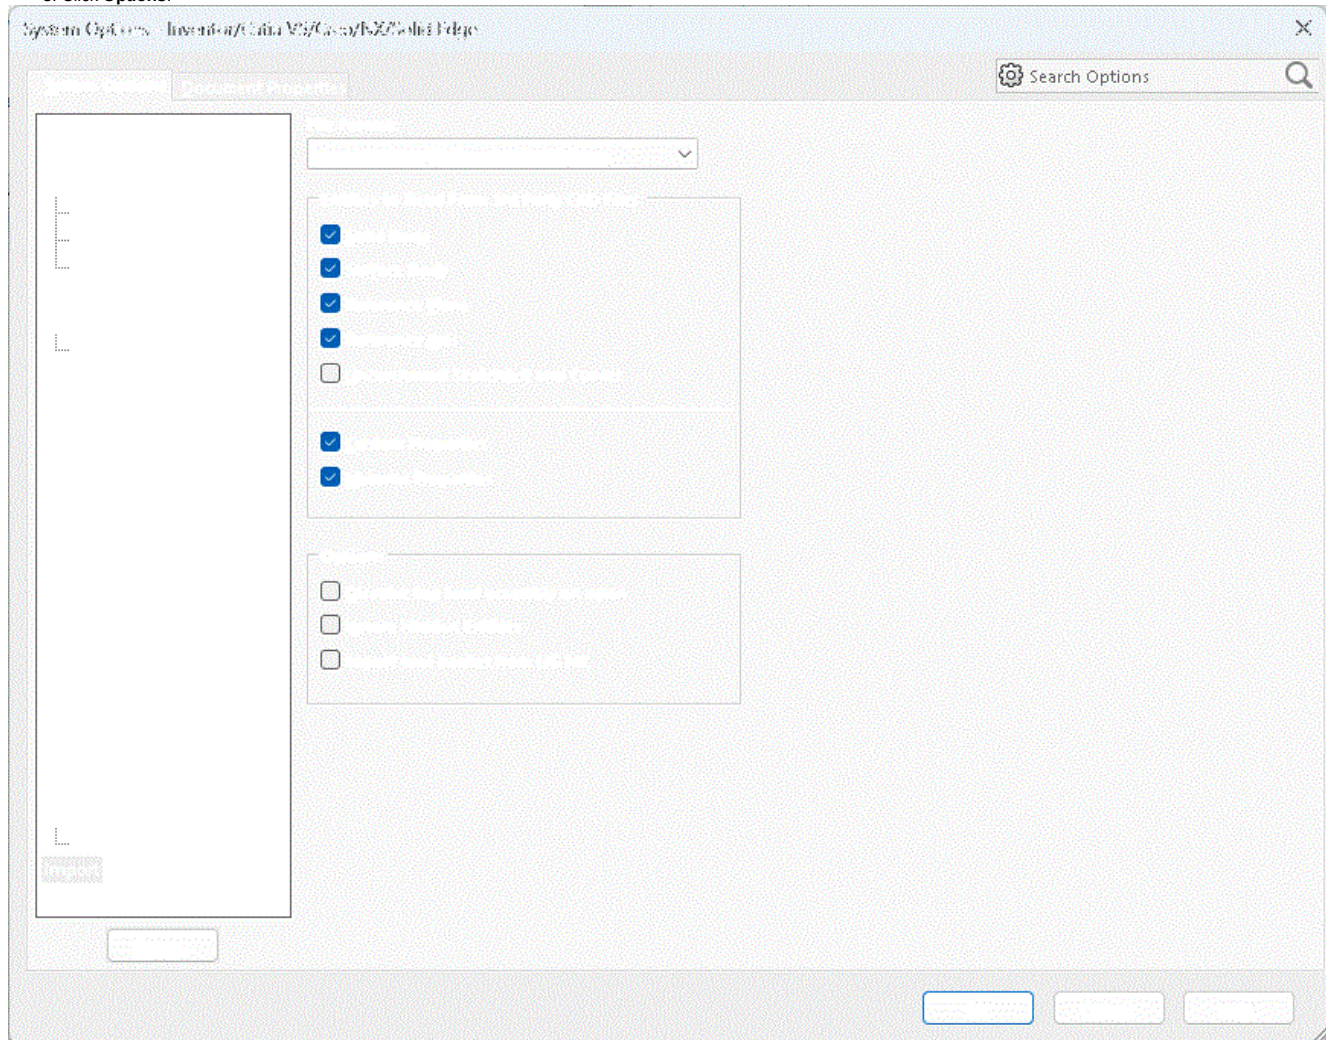

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Entities to Read From 3rd Party CAD Files - Solid Body	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSolidBody) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSolidBody, <OnFlag>)	Boolean value	
Entities to Read From 3rd Party CAD Files - Surface Body	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSurfaceBody) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSurfaceBody, <OnFlag>)	Boolean value	
Entities to Read From 3rd Party CAD Files - Reference Plane	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportReferencePlane) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportReferencePlane, <OnFlag>)	Boolean value	
Entities to Read From 3rd Party CAD Files - Reference Axis	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportReferenceAxis) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportReferenceAxis, <OnFlag>)	Boolean value	
Entities to Read From 3rd Party CAD Files - Unconsumed Sketch(es) and Curves	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportUnconsumedSketchesAndCurves) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportUnconsumedSketchesAndCurves, <OnFlag>)	Boolean value	
Entities to Read From 3rd Party CAD Files - Custom Properties	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportCustomProperties) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportCustomProperties, <OnFlag>)	Boolean value	
Entities to Read From 3rd Party CAD Files - Material Properties	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportMaterialProperties) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportMaterialProperties, <OnFlag>)	Boolean value	

Options - Dissolve top level assembly on open (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportDissolveTopLevelAssemblyOnOpen) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportDissolveTopLevelAssemblyOnOpen, <OnFlag>)	Boolean value	
Options - Ignore Hidden Entities	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportIgnoreHiddenEntities) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportIgnoreHiddenEntities, <OnFlag>)	Boolean value	
Options - Import tool bodies from UG NX	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportToolBodiesFromUGNX) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportToolBodiesFromUGNX, <OnFlag>)	Boolean value	


System Options > Import > Parasolid

To display the dialog:


Select **Tools > Options > System Options > Import > File Format > Parasolid**.

- or -

- 1. Select **File > Open**.
- 2. In **Files of type**, select **Parasolid**.
- 3. Click **Options**.

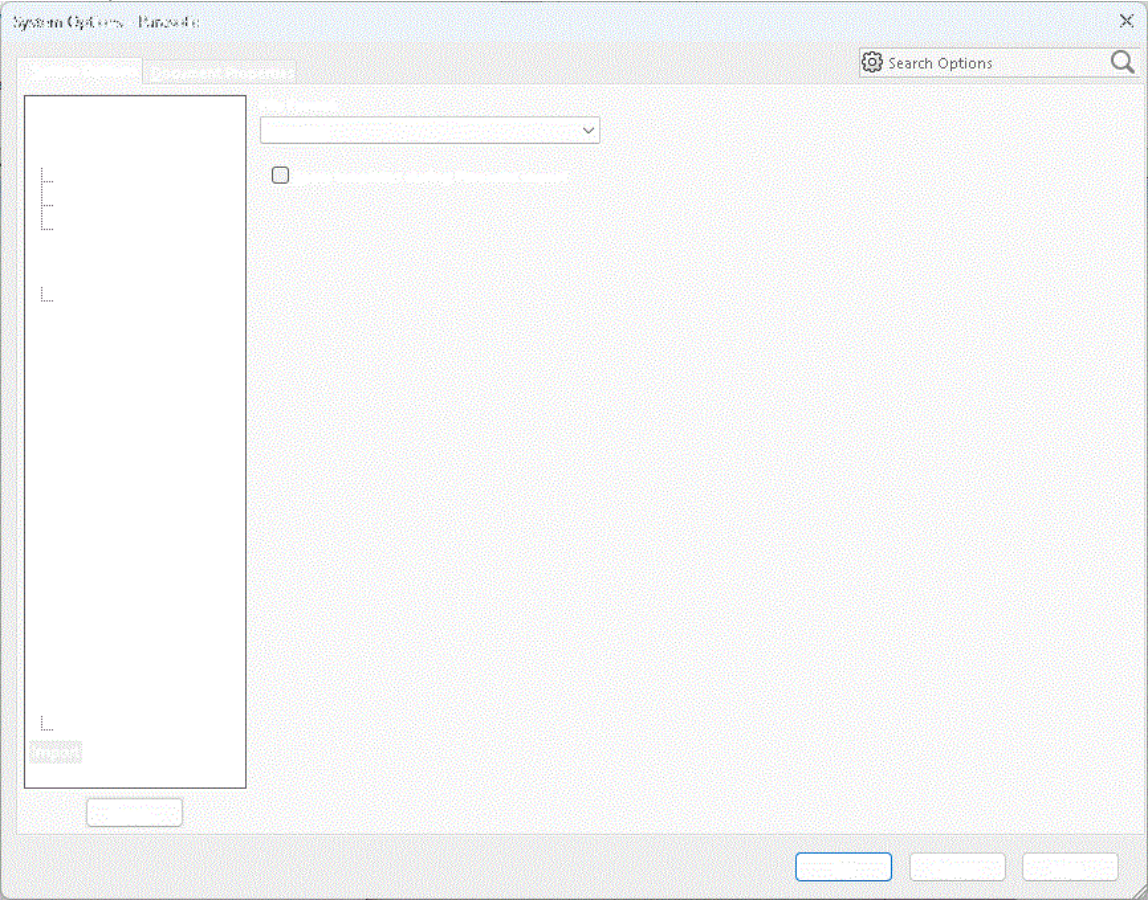

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Apply templates during Parasolid import	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportPSEnableTemplates) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportPSEnableTemplates, <OnFlag>)	Boolean value	

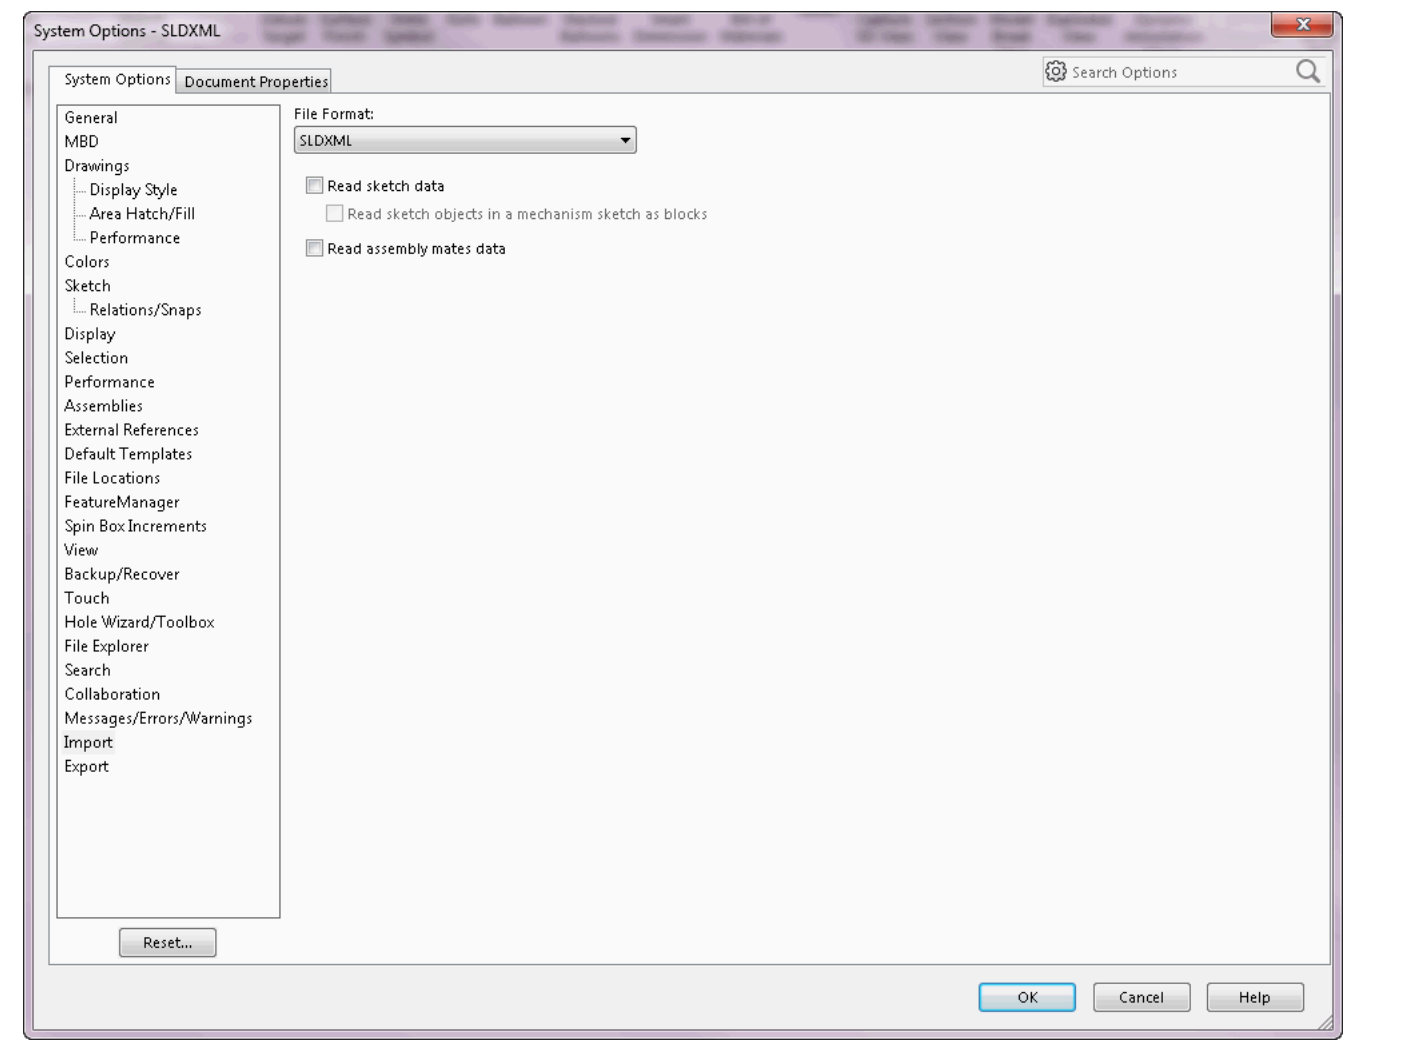

Setting	Get/Set Methods	Return Value or <OnFlag>	Comment
Import sketch data	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSLDXMLImportSketchData) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSLDXMLImportSketchData, <OnFlag>)	Boolean value	Specifies whether to import sketch data
Import sketch objects in a mechanism sketch as blocks	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSLDXMLImportMechanismSketchObjectsAsBlocks) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSLDXMLImportMechanismSketchObjectsAsBlocks, <OnFlag>)	Boolean value	Specifies whether to import sketch objects in a mechanism sketch as blocks; swImportSLDXMLImportSketchData must be true for this option to be applicable
Import assembly mates data	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSLDXMLImportAssemblyMatesData) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportSLDXMLImportAssemblyMatesData, <OnFlag>)	Boolean value	Specifies whether to import assembly mates data


System Options > Import > STEP/IGES/ACIS

To display the dialog:

Select **Tools > Options > System Options > Import > File Format > STEP/IGES/ACIS**.

- or -

1. Select **File > Open**.
2. In **Files of type**, select **IGES, ACIS, or STEP AP203/214/242**.
3. Click **Options**.

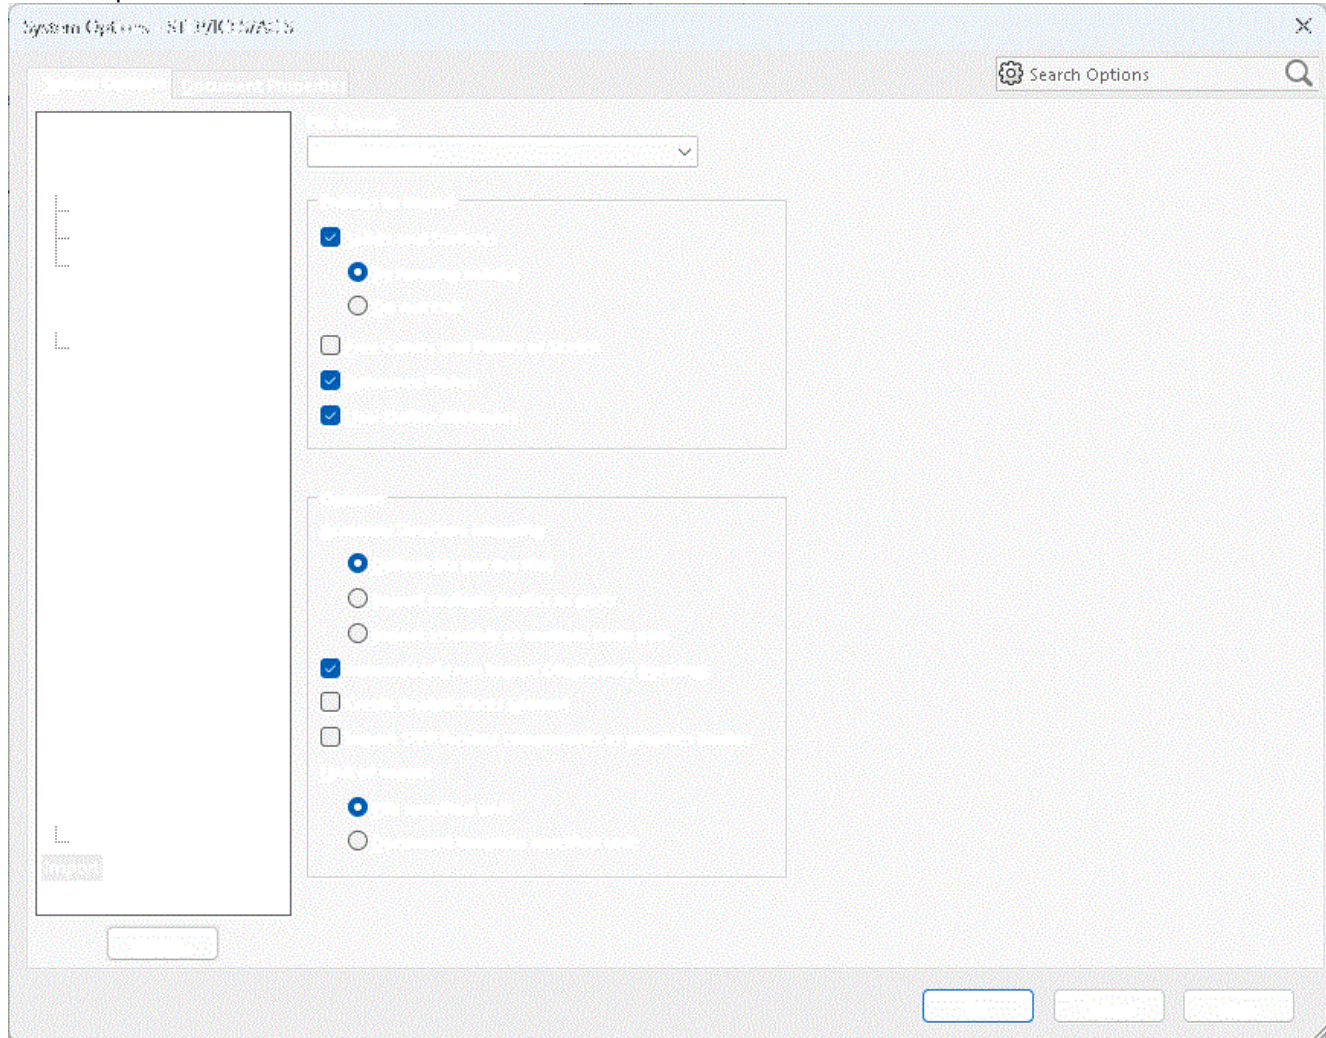

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Entities to Import - Solids and Surfaces	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutral_SolidandSurface) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutral_SolidandSurface, <OnFlag>)	Boolean value	
Entities to Import - Try forming solid(s) or Do not knit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportNeutral_KnitOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportNeutral_KnitOption, swImportNeutralKnitOption_e.<Value>)	Integer value as defined in swImportNeutralKnitOption_e	Valid only if Entities to Import - Solids and Surfaces is set to true
Entities to Import - Free Curves and Points as Sketch	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutral_FreeCurvesAndPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutral_FreeCurvesAndPoints, <OnFlag>)	Boolean value	
Entities to Import - Reference Planes	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutralReferencePlane) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutralReferencePlane, <OnFlag>)	Boolean value	
Entities to Import - User Define Attributes	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutral_AttributesAndProperties) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutral_AttributesAndProperties, <OnFlag>)	Boolean value	


Options - Assembly Structure Mapping	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportNeutralAssemblyStructureMapping) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportNeutralAssemblyStructureMapping, swImportNeutralAssemblyStructureMapping_e.<Value>)	Integer value as defined in swImportNeutralAssemblyStructureMapping_e	
Options - Automatically run Import Diagnostics (Healing)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutralRunDiagnostics) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutralRunDiagnostics, <OnFlag>)	Boolean value	
Options - Create analytic faces (slower)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutralAnalyticalConversion) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportNeutralAnalyticalConversion, <OnFlag>)	Boolean value	
Options - Import STEP faceted components as graphic	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportAssemblyHybrid) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportAssemblyHybrid, <OnFlag>)	Boolean value	
Options - Unit of Import	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportNeutralUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportNeutralUnits, swImportNeutralUnits_e.<Value>)	Integer value as defined in swImportNeutralUnits_e	

To display the dialog:

Click **Tools > Options > System Options > Import > STL/OBJ/OFF/PLY/PLY2** in **File Format**.

- or -

1. Click **File > Open**.
2. In **Files of type**, select **Mesh Files**.
3. Click **Options**.

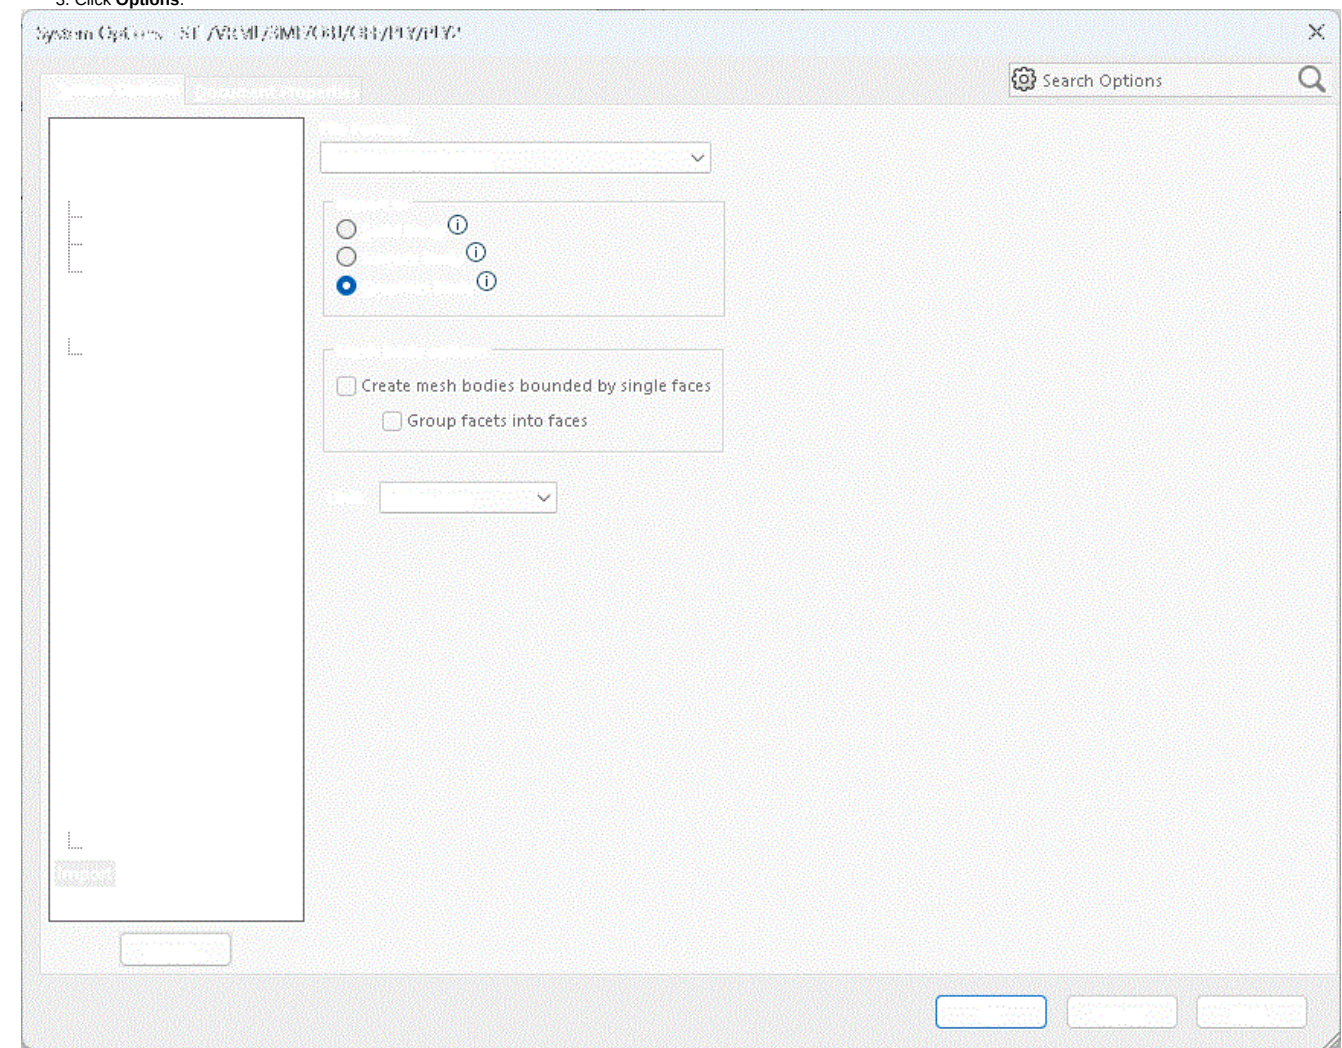

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Import as - Graphics body	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType, swImportStlVrmlModelType_e.swImportStlVrmlModelType_Graphics)	swImportStlVrmlModelType_e .swImportStlVrmlModelType_Graphics	
Import as - Solid body	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType, swImportStlVrmlModelType_e.swImportStlVrmlModelType_Solid)	swImportStlVrmlModelType_e .swImportStlVrmlModelType_Solid	
Import as - Surface body	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType, swImportStlVrmlModelType_e.swImportStlVrmlModelType_Surface)	swImportStlVrmlModelType_e .swImportStlVrmlModelType_Surface	

Mesh body options - Create mesh bodies bounded by single faces	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swVrmlStlImportAsPSMesh) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swVrmlStlImportAsPSMesh, <OnFlag>)	Boolean value	Valid only when importing as Solid body or Surface body, specifies whether to create mesh bodies bounded by single faces
Mesh body options - Group facets into faces	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swVrmlStlImportSegmented) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swVrmlStlImportSegmented, <OnFlag>)	Boolean value	Valid only if Create mesh bodies bounded by single faces is selected, specified whether to group facets into faces
Unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlUnits, swLengthUnit_e.<Value>)	Valid options from swLengthUnit_e : • 0 = swMM (millimeters) • 1 = swCM (centimeters) • 2 = swMETER • 3 = swINCHES • 4 = swFEET	

SOLIDWORKS API Help


System Options > Import > VRML or 3MF

To display the dialog:

Select **Tools > Options > System Options > Import > File Format > VRML or 3MF**.

- or -

- 1. Select **File > Open**.
- 2. In **Files of type**, select **VRML or 3D Manufacturing Format**.
- 3. Click **Options**.

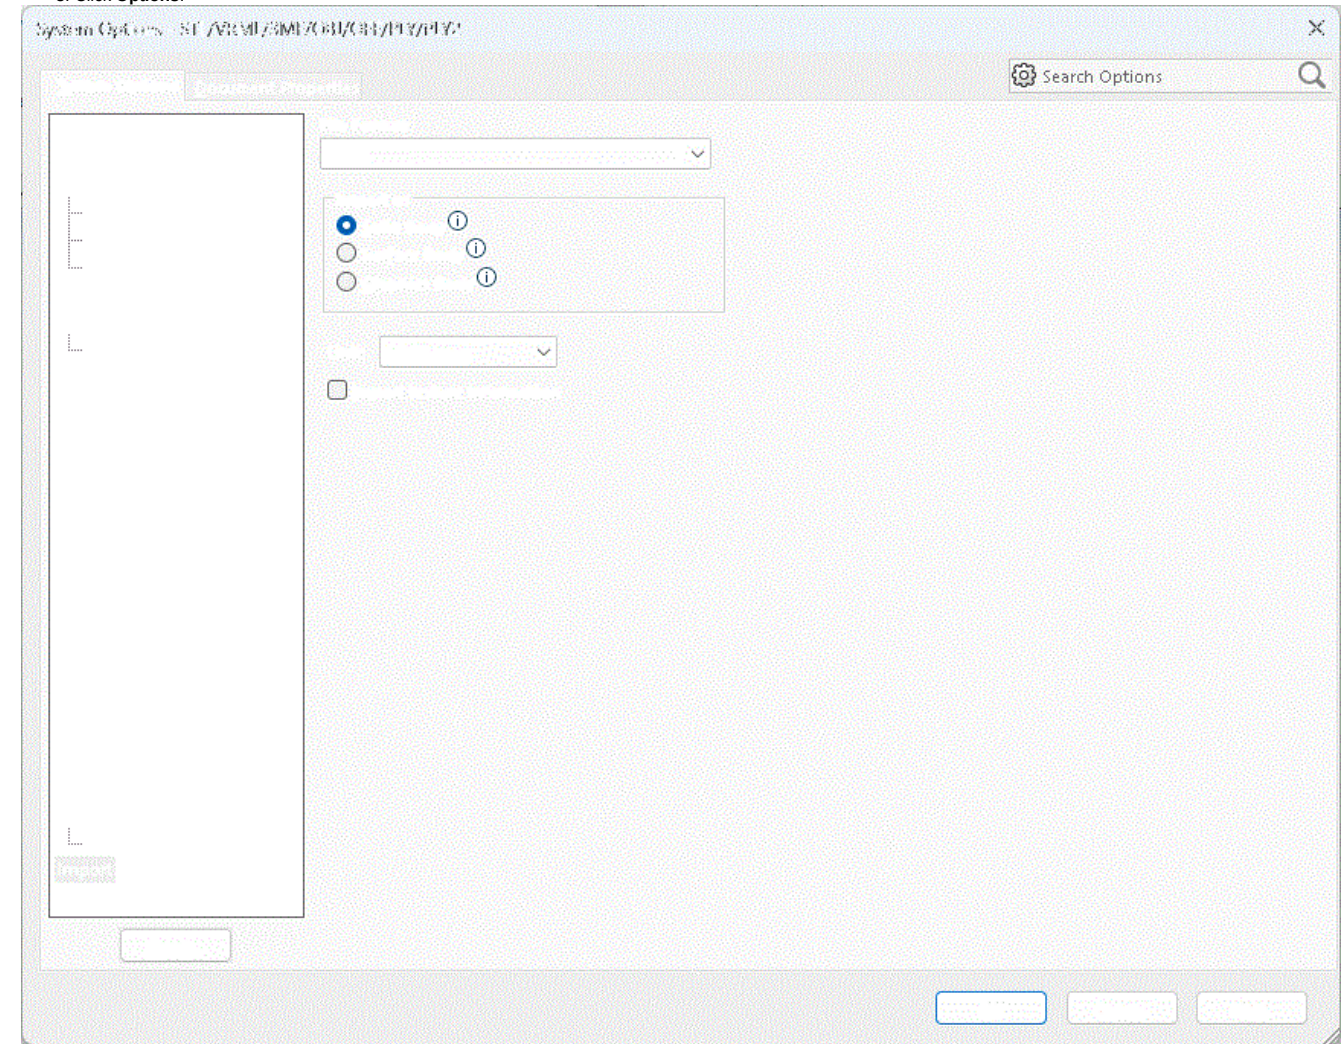


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Import as - Graphics body	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType, swImportStlVrmlModelType_e.swImportStlVrmlModelType_Graphics)	swImportStlVrmlModelType_e .swImportStlVrmlModelType_Graphics	
Import as - Solid body	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType, swImportStlVrmlModelType_e.swImportStlVrmlModelType_Solid)	swImportStlVrmlModelType_e .swImportStlVrmlModelType_Solid	
Import as - Surface body	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlModelType, swImportStlVrmlModelType_e.swImportStlVrmlModelType_Surface)	swImportStlVrmlModelType_e .swImportStlVrmlModelType_Surface	
Unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swImportStlVrmlUnits, swLengthUnit_e.<Value>)	Valid options from swLengthUnit_e : 0 = swMM (millimeters) 1 = swCM (centimeters) 2 = swMETER 3 = swINCHES 4 = swFEET	

Import texture information	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swImportStlVrmlTextureInformation) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swImportStlVrmlTextureInformation, <OnFlag>)	Boolean value	
----------------------------	--	---------------	--

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the Page Setup dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the Page Setup dialog, but are now obsolete and no longer appear on that dialog.

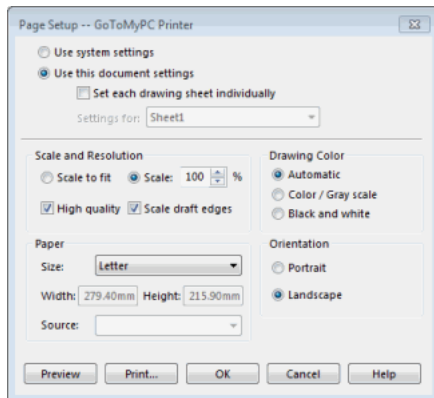

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Use system settings	See Comment	See Comment	Not currently available in SOLIDWORKS
Use this document settings	See Comment	See Comment	Not currently available in SOLIDWORKS
Set each drawing sheet individually	See Comment	See Comment	Not currently available in SOLIDWORKS
Settings for	See Comment	See Comment	Not currently available in SOLIDWORKS
Scale and Resolution - Scale to fit	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupDrawingScaleToFit) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupDrawingScaleToFit, <OnFlag>)	Boolean value	Specifies whether drawing sheet size; for drawing system setting Setup dialog mode selected when setting.
Scale and Resolution - Scale	See Comment	See Comment	Not currently available in SOLIDWORKS
Scale and Resolution - <N>	See Comment	See Comment	Not currently available in SOLIDWORKS
Scale and Resolution - High Quality	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupHighQuality) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupHighQuality, <OnFlag>)	Boolean value	Specifies whether model information memory; for drawing
Scale and Resolution - Scale draft edges	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupScaleDraftEdges) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupScaleDraftEdges, <OnFlag>)	Boolean value	Specifies whether edges; for drawing
Drawing Color - Automatic	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupDrawingColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupDrawingColor, swPageSetupDrawingColor_e.swPageSetup_AutomaticDrawingColor)	swPageSetupDrawingColor_e.swPageSetup_AutomaticDrawingColor	See swPageSetupColor for all valid options
Drawing Color - Color / Gray scale	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupDrawingColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupDrawingColor, swPageSetupDrawingColor_e.swPageSetup_ColorGrey)	swPageSetupDrawingColor_e.swPageSetup_ColorGrey)	See swPageSetupColor for all valid options
Drawing Color - Black and white	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupDrawingColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupDrawingColor, swPageSetupDrawingColor_e.swPageSetup_BlackAndWhite)	swPageSetupDrawingColor_e.swPageSetup_BlackAndWhite)	See swPageSetupColor for all valid options
Paper - Size	See Comment	See Comment	Defined by the system or by a device; there is SOLIDWORKS enumeration for
Paper - Source	See Comment	See Comment	Defined by the system or by a device; there is SOLIDWORKS enumeration for

Orientation - Portrait	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupPrinterOrientation) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupPrinterOrientation, swPageSetupOrientation_e.swPageSetupOrient_Portrait)	swPageSetupOrientation_e.swPageSetupOrient_Portrait	See swPageSetupC for all valid opti
Orientation - Landscape	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupPrinterOrientation) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPageSetupPrinterOrientation, swPageSetupOrientation_e.swPageSetupOrient_Landscape)	swPageSetupOrientation_e.swPageSetupOrient_Landscape	See swPageSetupC for all valid opti

Obsolete Enumerators


Enumerator	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
swPageSetupPrinterPartAsmPrintWindow	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupPrinterPartAsmPrintWindow) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupPrinterPartAsmPrintWindow, <OnFlag>)	Boolean value	Obsolete ; for parts and assemblies only; specified whether to print current view of the graphics area; Use system settings on Page Setup dialog must be selected when changing this setting
swPageSetupDrawingScale	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e, swPageSetupDrawingScale) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e, swPageSetupDrawingScale, <Value>)	Double value	Obsolete
swPageSetupPrinterPartAsmScale	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e, swPageSetupPrinterPartAsmScale) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e, swPageSetupPrinterPartAsmScale, <Value>)	Double value	Obsolete

File > Print > Line Thickness

Getting and setting system-level line thicknesses for a printer using the following enumerators are obsolete and superseded by [document-level enumerators](#).


IMPORTANT: In SOLIDWORKS 2009 and later, SOLIDWORKS recommends that you set document-level line weights instead of system-level line weights. However, if you must set system-level line weights on a document created in SOLIDWORKS 2008 or earlier, then you must set the system-level line weights before opening the document.

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swPageSetupPrinterThinLineWeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThinLineWeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThinLineWeight, <Value>)	Double value in meters	Obsolete; specified weight of thin line setting
swPageSetupPrinterNormalLineWeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterNormalLineWeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterNormalLineWeight, <Value>)	Double value in meters	Obsolete; specified weight of normal line setting
swPageSetupPrinterThickLineWeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThickLineWeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThickLineWeight, <Value>)	Double value in meters	Obsolete; specified weight of first thick line setting
swPageSetupPrinterThick2LineWeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick2LineWeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick2LineWeight, <Value>)	Double value in meters	Obsolete; specified weight of second thick line setting
swPageSetupPrinterThick3LineWeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick3LineWeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick3LineWeight, <Value>)	Double value in meters	Obsolete; specified weight of third thick line setting
swPageSetupPrinterThick4LineWeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick4LineWeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick4LineWeight, <Value>)	Double value in meters	Obsolete; specified weight of fourth thick line setting
swPageSetupPrinterThick5LineWeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick5LineWeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick5LineWeight, <Value>)	Double value in meters	Obsolete; specified weight of fifth thick line setting
swPageSetupPrinterThick6LineWeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick6LineWeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterThick6LineWeight, <Value>)	Double value in meters	Obsolete; specified weight of sixth thick line setting

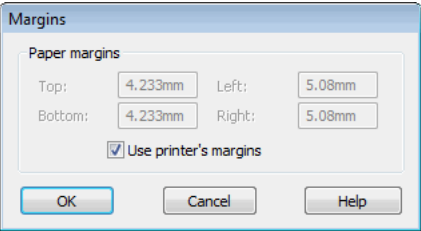


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Paper margins - Top	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterTopMargin) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterTopMargin, <Value>)	Double value in meters	Specifies width of left margin
Paper margins - Bottom	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterBottomMargin) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterBottomMargin, <Value>)	Double value in meters	Specifies width of left margin
Paper margins - Left	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterLeftMargin) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterLeftMargin, <Value>)	Double value in meters	Specifies width of left margin
Paper margins - Right	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterRightMargin) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPageSetupPrinterRightMargin, <Value>)	Double value in meters	Specifies width of left margin
Paper margins - Use printer's margins	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupPrinterUsePrinterMargin) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPageSetupPrinterUsePrinterMargin, <OnFlag>)	Boolean value	Specifies whether to print document with printer's default margin values



File > Print

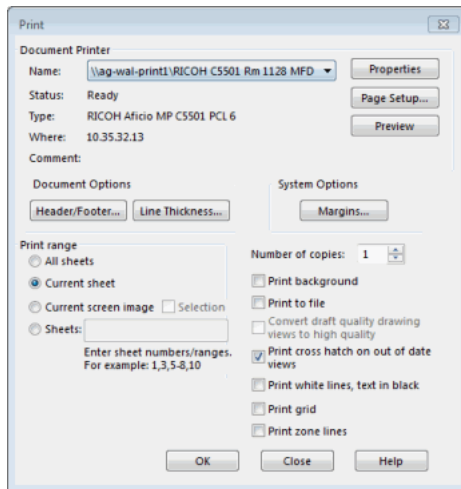


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Name	See Comment	See Comment	Not currently available in SOLIDWORKS API
Document Options - Header/Footer	See Comment	See Comment	Not currently available in SOLIDWORKS API
Document Options - Line Thickness	See Comment	See Comment	See Document Properties > Line Thickness
System Options - Margins	See Comment	See Comment	See File > Page Setup > Print > System Options > Margins
Print range - Entire model	See Comment	See Comment	Not currently available in SOLIDWORKS API
Print range - Current sheet	See Comment	See Comment	Not currently available in SOLIDWORKS API
Print range - Current screen image	See Comment	See Comment	Not currently available in SOLIDWORKS API
Print range - Sheets	See Comment	See Comment	Not currently available in SOLIDWORKS API
Print range - Sheets - <n>	See Comment	See Comment	Not currently available in SOLIDWORKS API
Number of copies <n>	See Comment	See Comment	Not currently available in SOLIDWORKS API
Print background	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPrintBackground) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPrintBackground, <OnFlag>)	Boolean value	Specifies whether to print the window background, in addition to the model and drawing
Print to file	See Comment	See Comment	Not currently available in SOLIDWORKS API
Convert draft quality drawing views to high quality	See Comment	See Comment	Not currently available in SOLIDWORKS API
Print cross hatch on out of date views	See Comment	See Comment	Not currently available in SOLIDWORKS API
Print white lines, text in black	See Comment	See Comment	Not currently available in SOLIDWORKS API
Print grid	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPrintGrid) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPrintGrid, <OnFlag>)	Boolean value	Specifies whether to print the grid
Print zone lines	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPrintZoneLines) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPrintZoneLines, <OnFlag>)	Boolean value	Specifies whether to print zone lines

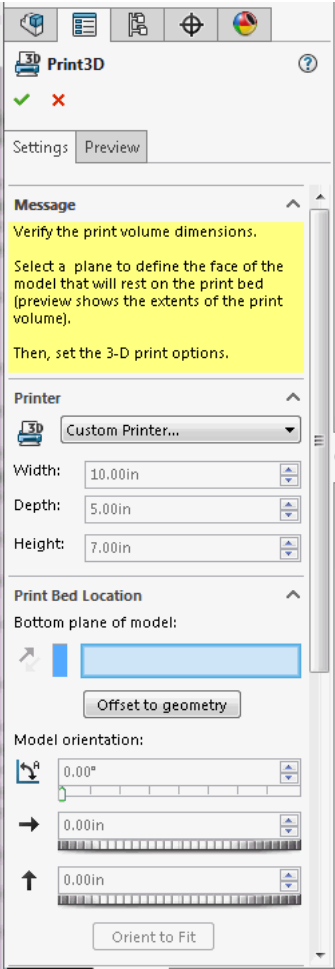

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Printer - Custom Printer - Width	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPrint3DBoxX) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPrint3DBoxX, <Value>)	Double value	
Printer - Custom Printer - Depth	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPrint3DBoxY) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPrint3DBoxY, <Value>)	Double value	
Printer - Custom Printer - Height	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPrint3DBoxZ) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPrint3DBoxZ, <Value>)	Double value	

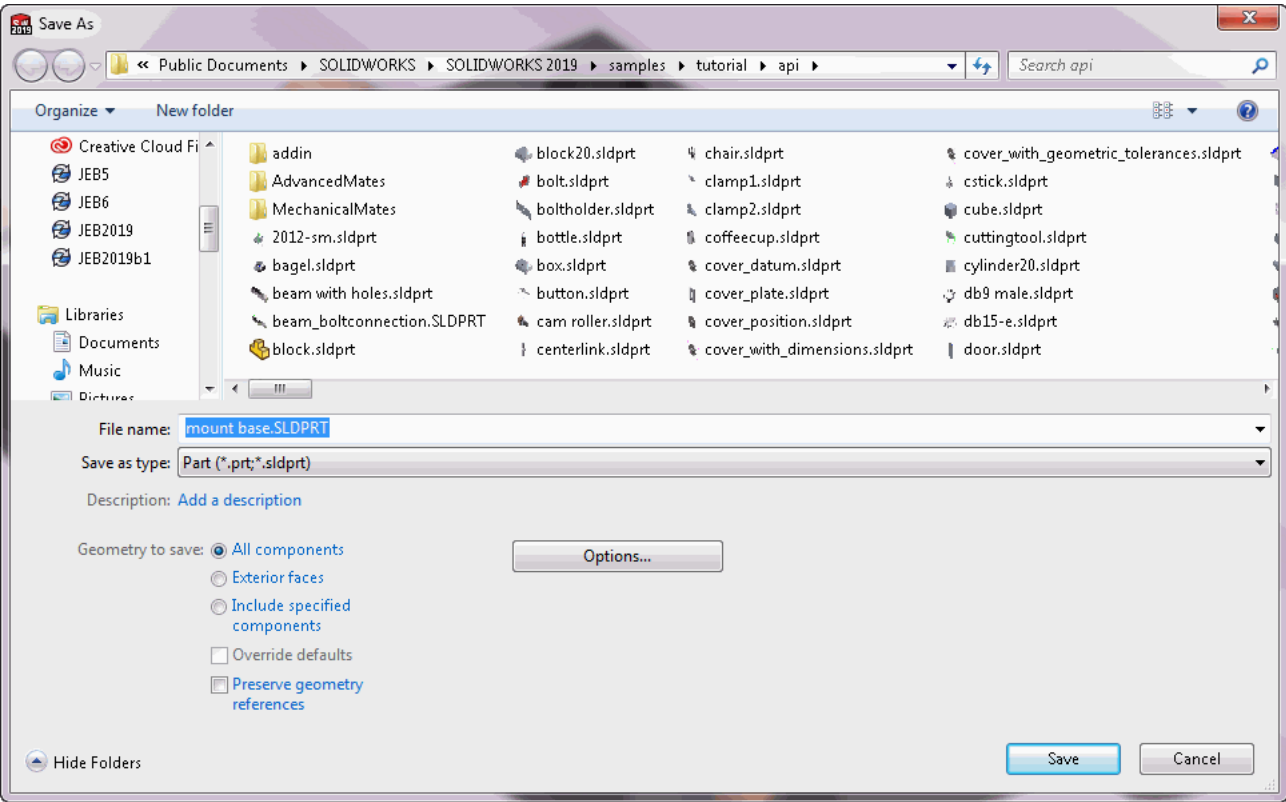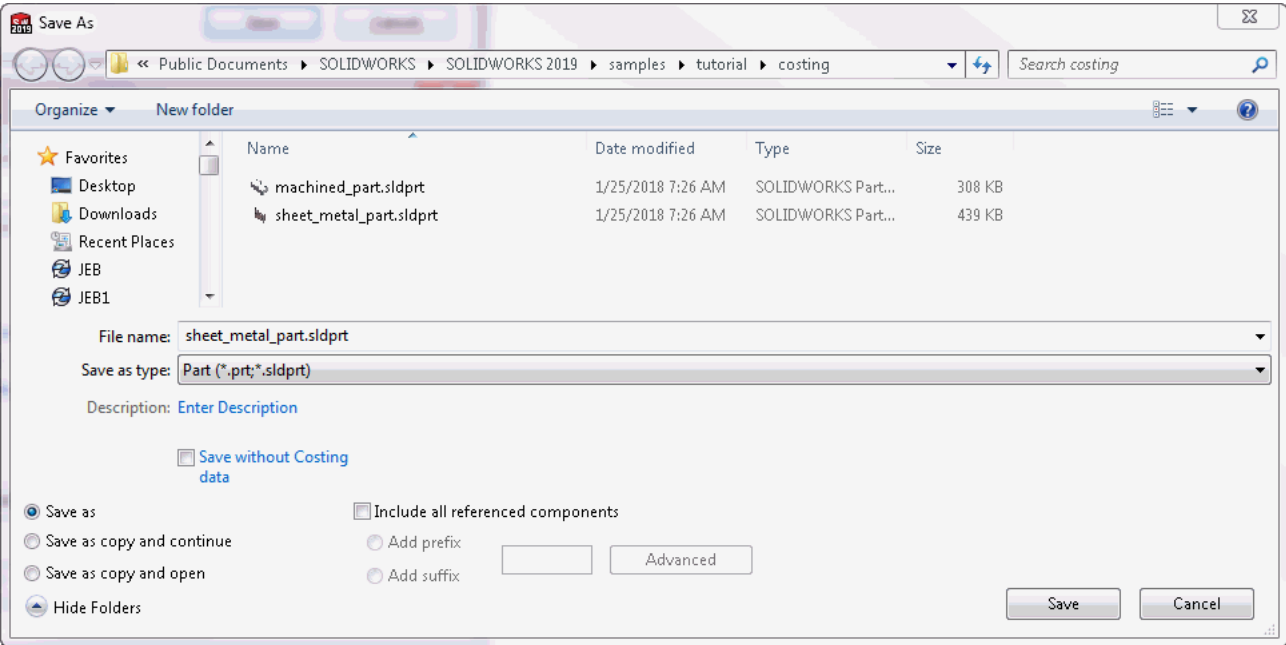

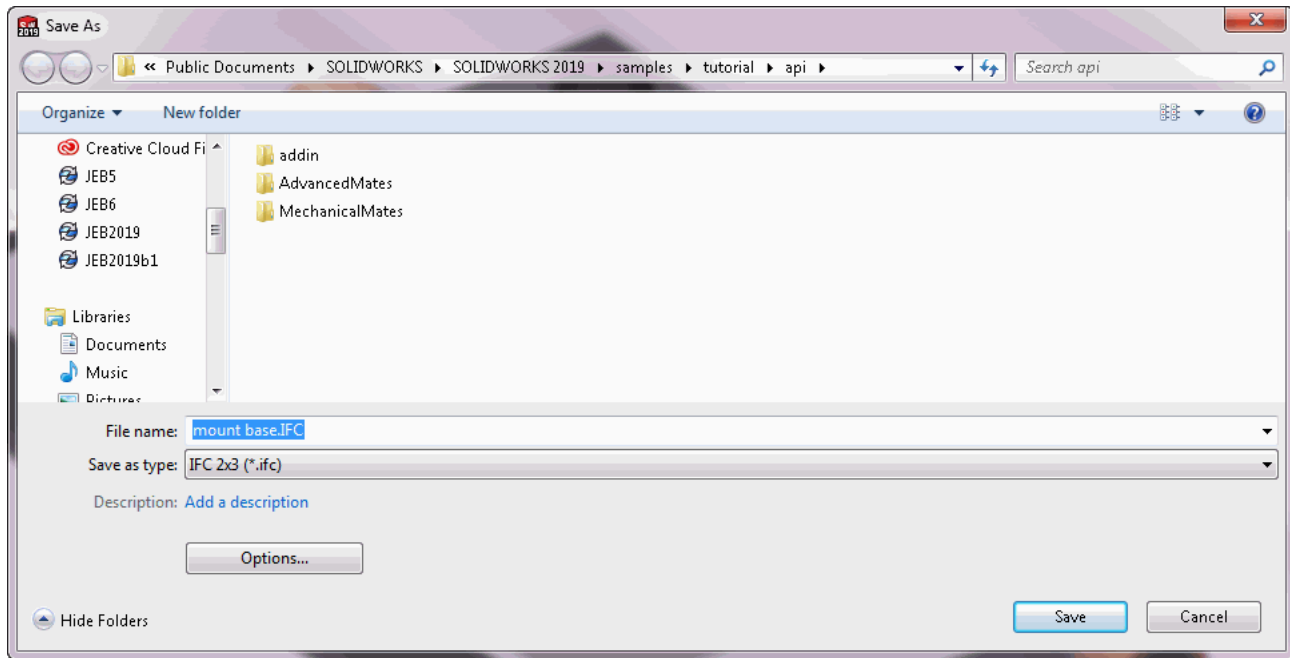


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Save without Costing data	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swSaveWithoutCostingData) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swSaveWithoutCostingData, <OnFlag>)	Boolean value	Specifies whether to save the sheet metal part without any Costing data
Geometry to save: - Exterior faces - Exterior components - All components	ISldWorks::GetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swSaveAssemblyAsPartOptions) ISldWorks::SetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swSaveAssemblyAsPartOptions, swSaveAsmAsPartOptions_e.<Value>)	See swSaveAsmAsPartOptions_e for valid options	Specifies the geometry of an assembly to save as a multi-body part
Preserve geometry references	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swSaveAsmAsPartPreserveIDs) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swSaveAsmAsPartPreserveIDs, <OnFlag>)	Boolean value	Specifies whether to preserve geometry reference IDs when saving an assembly as a part
Save as type - IFC 2x3 or IFC 4	ISldWorks::GetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swSaveIFCFormat) ISldWorks::SetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swSaveIFCFormat, <Value>)	23 = IFC 2x3 4 = IFC 4	Specifies the IFC format in which to save a part

To display the dialog:

Click **Tools > Options > System Options > Export > 3DPDF** in **File Format**.

- or -

- 1. Click **File > Save As**.
- 2. In **Save as type**, select **Adobe Portable Document Format**.
- 3. Select **Save as 3D PDF**.
- 4. Click **Options**.

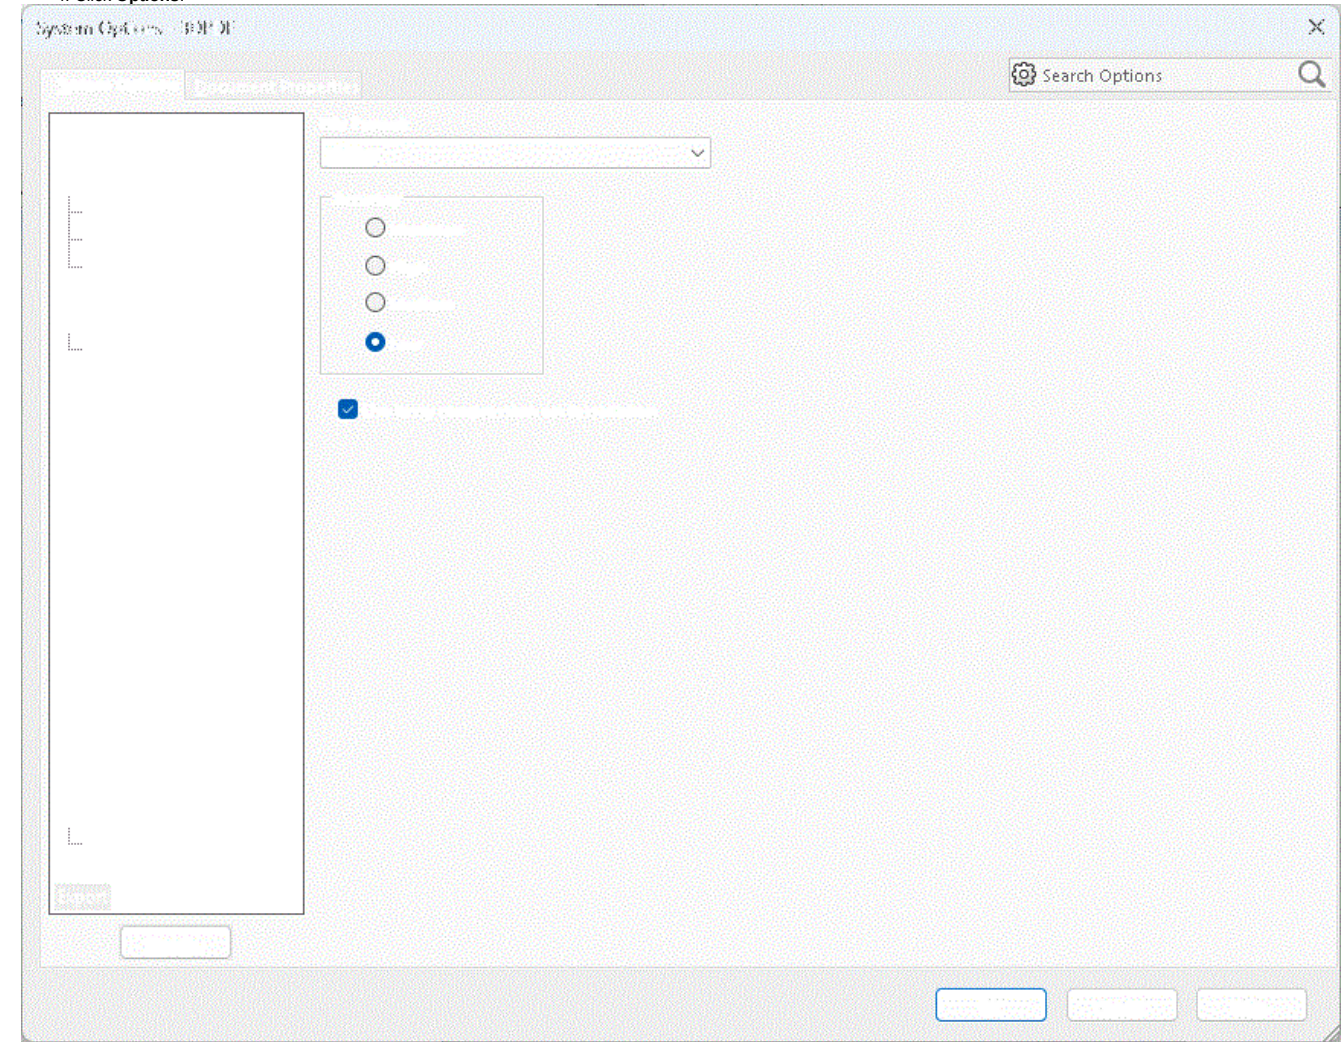

Setting	Get/Set Methods	Return Value or <OnFlag>	Comment
Accuracy - Maximum, High, Medium, or Low	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.sw3DPDFAccuracy) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.sw3DPDFAccuracy, sw3DPDFAccuracy_e.<Value>)	See sw3DPDFAccuracy_e for valid options	
Use lossy compression on tessellation	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.sw3DPDFCompressLossyTessellation) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.sw3DPDFCompressLossyTessellation, <OnFlag>)	Boolean value	Specifies whether to use lossy compression on tessellation

SOLIDWORKS API Help

System Options > Export > 3MF


This topic contains two tables. The information in the table:

- appearing immediately after the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

To display the dialog:

Click **Tools > Options > System Options > Export > 3MF in File Format**.

- or -
1. Click **File > Save As**.
 2. In **Save as type**, select **3D Manufacturing Format**.
 3. Click **Options**.

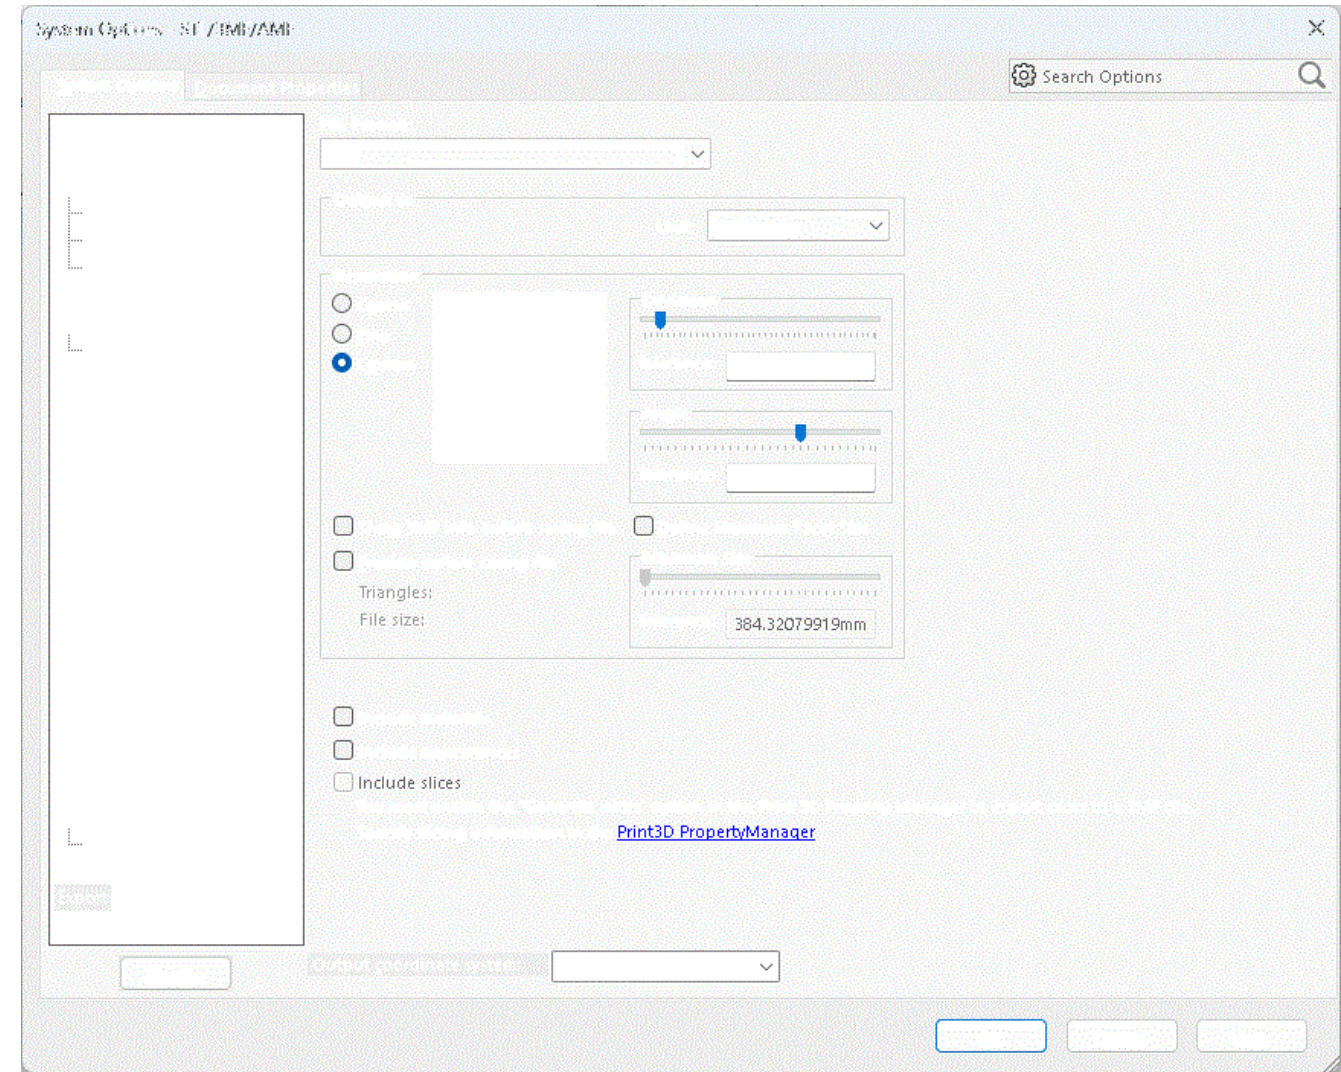

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Output as - Unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportStlUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportStlUnits, swLengthUnit_e.<Value>)	Valid options as defined in swLengthUnit_e : • 0 = swMM (millimeters) • 1 = swCM (centimeters) • 2 = swMETER • 3 = swINCHES • 4 = swFEET	
Resolution - • Coarse • Fine • Custom	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSTLQuality) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSTLQuality, swSTLQuality_e.<Value>)	See swSTLQuality_e for valid options	Specifies the resolution of the output for 3D manufacturing files

Resolution - Deviation - Tolerance	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLDeviation) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLDeviation, <Value>)	Double value	Specifies the deviation tolerance, which controls whole-part tessellation; lower numbers generate files with greater whole-part accuracy
Resolution - Angle - Tolerance	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLAngleTolerance) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLAngleTolerance, <Value>)	Double value	Specifies the angle tolerance, which controls smaller detail tessellation; lower numbers generate files with greater small-detail accuracy, but those files take longer to generate
Resolution - Show 3MF info before saving file	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e, sw3MFShowInfoOnSave) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e, sw3MFShowInfoOnSave, <OnFlag>)	Boolean value	Specifies whether to show 3MF info before saving the file
Resolution - Preview before saving file	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e, swSTLPreview) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e, swSTLPreview, <OnFlag>)	Boolean value	Specifies whether a faceted model preview is displayed in the graphics area
Include materials	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e, sw3MFMaterials) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e, sw3MFMaterials, <OnFlag>)	Boolean value	Specifies whether to include materials
Include appearances	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e, sw3MFAppearances) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e, sw3MFAppearances, <OnFlag>)	Boolean value	Specifies whether to include appearances
Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value	

Obsolete Enumerators

Enumerator	Comment
swFileSaveAsCoordinateSystem	Obsolete


System Options > Export > ACIS

To display the dialog:

Click **Tools > Options > System Options > Export > ACIS** in File Format.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **ACIS**.
3. Click **Options**.

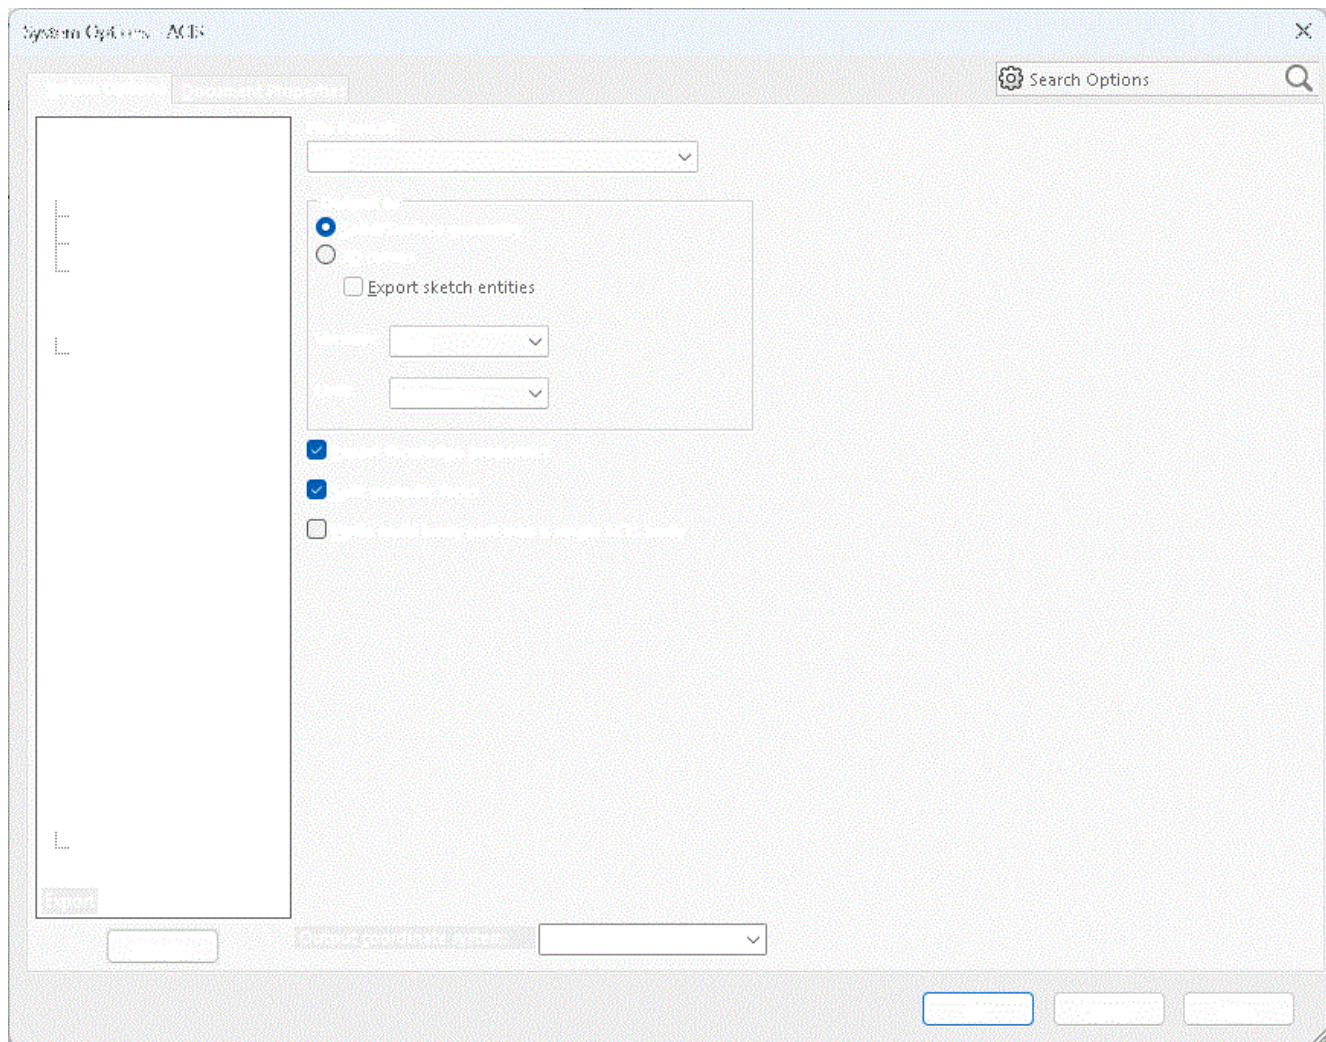

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>
Output as - Solid/Surface geometry	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputGeometryPreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputGeometryPreference, swAcisOutputGeometryPreference_e.swAcisOutputAsSolidAndSurface)	swAcisOutputGeometryPreference_e.swAcisOutputAsSolidAndSurface
Output as - 3D curves	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputGeometryPreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputGeometryPreference, swAcisOutputGeometryPreference_e.swAcisOutputAs3DCurves)	swAcisOutputGeometryPreference_e.swAcisOutputAs3DCurves
Output as - Export sketch entities	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputGeometryPreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputGeometryPreference, swAcisOutputGeometryPreference_e.swAcisOutputAs3DCurves_IncludeSketchEnts)	swAcisOutputGeometryPreference_e.swAcisOutputAs3DCurves_IncludeSketchEnts
Output as - Version	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputVersion) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputVersion, swAcisOutputVersion_e.<Value>)	See swAcisOutputVersion_e for valid options
Output as - Unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAcisOutputUnits, swLengthUnit_e.<Value>)	See swLengthUnit_e for valid options

Export face/edge properties	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSATExportFaceEdgeProps) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSATExportFaceEdgeProps, <OnFlag>)	Boolean value
Split periodic faces	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSATExportSplitPeriodic) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSATExportSplitPeriodic, <OnFlag>)	Boolean value
Write multi body part into a single ACIS body	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSATExportMultLumpsToSingleBody) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSATExportMultLumpsToSingleBody, <OnFlag>)	Boolean value
Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value

System Options > Export > AMF

This topic contains two tables. The information in the table:


- appearing immediately after the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

To display the dialog:

Click **Tools > Options > System Options > Export > AMF** in **File Format**.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **Additive Manufacturing File**.
3. Click **Options**.

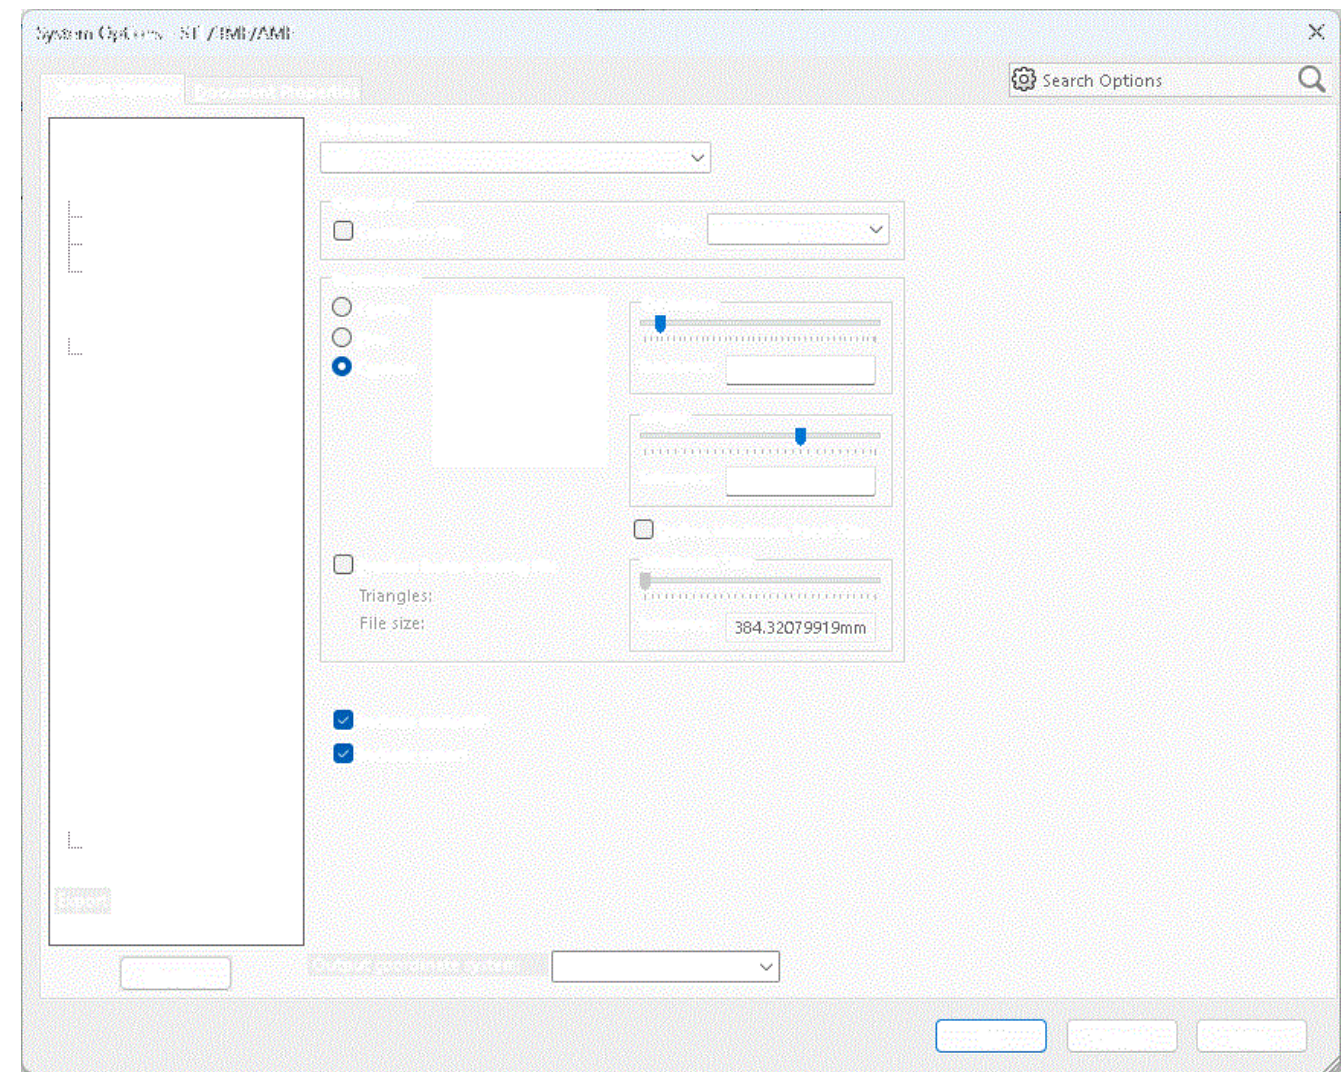

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Output as - Compress file	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e, swAMFCompression) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e, swAMFCompression, <OnFlag>)	Boolean value	Specifies whether to compress the output file
Output as - Unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e, swExportStlUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e, swExportStlUnits, swLengthUnit_e.<Value>)	Valid options as defined in swLengthUnit_e : • 0 = swMM (millimeters) • 1 = swCM (centimeters) • 2 = swMETER • 3 = swINCHES • 4 = swFEET	

Resolution - - Coarse - Fine - Custom	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSTLQuality) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSTLQuality, swSTLQuality_e, <Value>)	See swSTLQuality_e for valid options	Specifies the resolution of the output for additive manufacturing files
Resolution - Deviation - Tolerance	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLDeviation) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLDeviation, <Value>)	Double value	Specifies the deviation tolerance, which controls whole-part tessellation; lower numbers generate files with greater whole-part accuracy
Resolution - Angle - Tolerance	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLAngleTolerance) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLAngleTolerance, <Value>)	Double value	Specifies the angle tolerance, which controls smaller detail tessellation; lower numbers generate files with greater small-detail accuracy, but those files take longer to generate
Resolution - Preview before saving file	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e, swSTLPreview) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e, swSTLPreview, <OnFlag>)	Boolean value	Specifies whether a faceted model preview is displayed in the graphics area
Include materials	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e, swAMFMaterials) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e, swAMFMaterials, <OnFlag>)	Boolean value	Specifies whether to include materials
Include colors	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e, swAMFColors) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e, swAMFColors, <OnFlag>)	Boolean value	Specifies whether to include colors
Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value	

Obsolete Enumerators

Enumerator	Comment
swFileSaveAsCoordinateSystem	Obsolete

File > Save As > Save as type > Dxf or Dwg > Options

In order to display this dialog, open a part or drawing and:


Click **Tools > Options > System Options > Export > DXF/DWG**.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **Dxf or Dwg**.
3. Click **Options**.

This topic contains four tables. The information in the table:

- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Hidden Layers Dialog Enumerators](#) contains enumerators corresponding to options on the hidden layers warning dialog that pops up during export to DXF/DWG of drawings that have one or more hidden layers.
- titled [Miscellaneous Enumerators](#) contains miscellaneous DXF/DWG enumerators.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

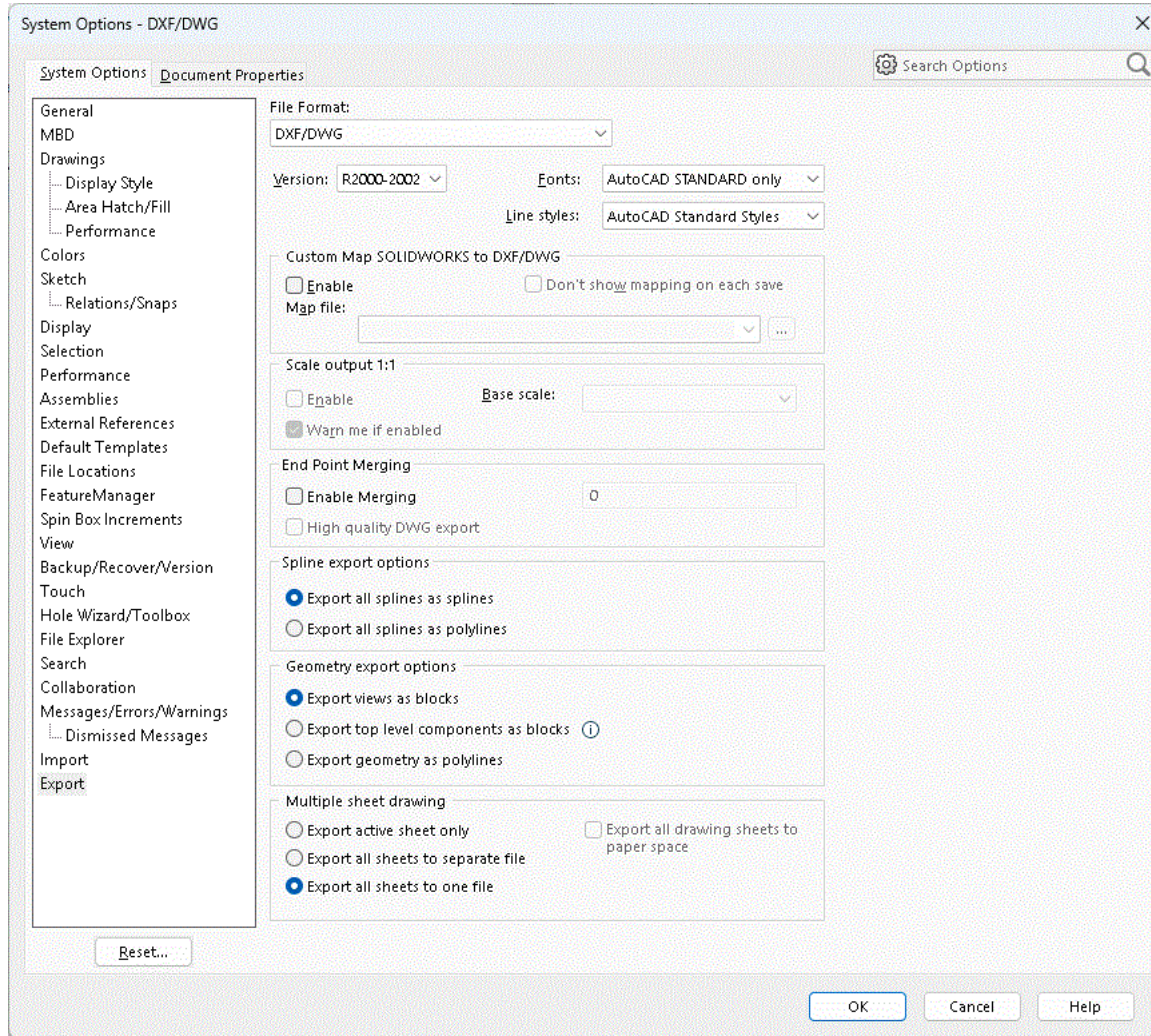


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comm
Version	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfVersion) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfVersion, swDxfFormat.e.<Value>)	See swDxfFormat.e for valid options	
Fonts	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfOutputFonts) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfOutputFonts, swDxfFormat.e.<Value>)	• 0 = AutoCAD STANDARD only • 1 = TrueType	
Line styles	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfOutputLineStyles) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfOutputLineStyles, swDxfFormat.e.<Value>)	• 0 = AutoCAD Standard Styles • 1 = SOLIDWORKS Custom Styles	
Custom Map SOLIDWORKS to DXF/DWG - Enable	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfMapping) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfMapping, <OnFlag>)	Boolean value	Specifies w to impleme mapping

Custom Map SOLIDWORKS to DXF/DWG - Don't show mapping on each save	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDXFDontShowMap) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDXFDontShowMap, <OnFlag>)	Boolean value	Specifies w dialog appe when savin drawing wh swDxfMap to True
Custom Map SOLIDWORKS to DXF/DWG - Map file	ISldWorks::GetUserPreferenceStringListValue (swUserPreferenceStringListValue_e.swDxfMappingFiles) ISldWorks::SetUserPreferenceStringListValue (swUserPreferenceStringListValue_e.swDxfMappingFiles, <Value>) IMPORTANT: In addition to specifying the custom map file, you must specify a custom map file index to indicate which custom map file to use in the custom map file list. The following code snippet shows how to specify the custom map file index when adding the first custom map file to the custom map file list: <pre>swApp.SetUserPreferenceStringListValue swUserPreferenceStringListValue_e.swDxfMappingFiles, mapFilePath index = swApp.GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfMappingFileIndex) If (index = -1) Then swApp.SetUserPreferenceIntegerValue swUserPreferenceIntegerValue_e.swDxfMappingFileIndex, 0 End If index = swApp.GetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swDxfMappingFileIndex) result= swModel.SaveAs4(outputPath, swSaveAsVersion_e.swSaveAsCurrentVersion, swSaveAsOptions_e.swSaveAsOptions_Silent, errors, warnings)</pre>	String value	Sets up DX mapping fil setting is p across SOLIDWOL sessions; y also interac get or set t custom ma setting by c File, Save or .dwg as as type, an Options; s each string list by a line (e.g., the v constant in Basic)
Scale output 1:1 - Enable and Base scale	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfOutputNoScale) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfOutputNoScale, <Value>)	0 = not enabled 1 = 1:1 scale	Enabled for drawings o options cur available to differentiate between st scale and v scale or sp scale factor
Scale output 1:1 - Warn me if enabled	See Comment	See Comment	Not current available in SOLIDWOL API
End Point Merging - Enable Merging	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfEndPointMerge) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfEndPointMerge, <OnFlag>)	Boolean value	Specifies w to merge th points of er when expo part to a DXF/DWG option help avoid gaps between m edges, but increases t export time by default
End Point Merging - <n>	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDxfMergingDistance) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDxfMergingDistance, <Value>)	Double value	Specifies th tolerance w which gaps between lin endpoints a eliminated
End Point Merging - High quality DWG export	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDXFHighQualityExport) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDXFHighQualityExport, <OnFlag>)	Boolean value	Only for En Merging - I Merging se True; speci whether to at a higher quality (with possible inc in time to e
Spline export options - Export all splines as splines	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfExportSplinesAsSplines) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfExportSplinesAsSplines, <OnFlag>)	True	Specifies to all splines i splines
Spline export options - Export all splines as polylines	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfExportSplinesAsSplines) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfExportSplinesAsSplines, <OnFlag>)	False	Specifies to all splines i polylines
Geometry export options - Export views as blocks	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfGeomExportOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfGeomExportOption, swExportGeomOptions_e.swExportViewAsBlock)	swExportGeomOptions_e.swExportViewAsBlock	Exports the geometry in views as bl
Geometry export options - Export top level components as blocks	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfGeomExportOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfGeomExportOption, swExportGeomOptions_e.swExportTopLevelCompAsBlock)	swExportGeomOptions_e.swExportTopLevelCompAsBlock	
Geometry export options - Export geometry as polylines	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfGeomExportOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfGeomExportOption, swExportGeomOptions_e.swExportGeomAsPoly)	swExportGeomOptions_e.swExportGeomAsPoly	

Multiple sheet drawing - Export active sheet only	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfMultiSheetOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfMultiSheetOption, swDxfMultiSheet_e.swDxfActiveSheetOnly)	swDxfMultiSheet_e.swDxfActiveSheetOnly	See swDxfMulti for all valid
Multiple sheet drawing - Export all sheets to separate files	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfMultiSheetOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfMultiSheetOption, swDxfMultiSheet_e.swDxfSeparateSheets)	swDxfMultiSheet_e.swDxfSeparateSheets	See swDxfMulti for all valid
Multiple sheet drawing - Export all sheets to one file	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfMultiSheetOption) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfMultiSheetOption, swDxfMultiSheet_e.swDxfMultiSheet)	swDxfMultiSheet_e.swDxfMultiSheet	See swDxfMulti for all valid
Multiple sheet drawing - Export all drawing sheets to paper space	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfExportAllSheetsToPaperSpace) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfExportAllSheetsToPaperSpace, <OnFlag>)	Boolean	Specifies to all sheets to space

Hidden Layers Enumerators

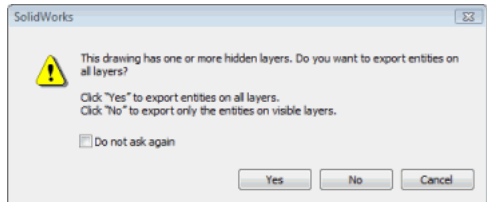

Setting	Get/Set Methods	Return Value or <OnFlag>	Comment
Do you want to export entities on all layers? <Yes/No>	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDXFExportHiddenLayersOn) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDXFExportHiddenLayersOn, <OnFlag>)	Boolean value	Specifies whether to export layers that are hidden in the drawing
Do not ask again	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDXFExportHiddenLayersWarnsOn) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDXFExportHiddenLayersWarnsOn, <OnFlag>)	Boolean value	Specifies whether to dismiss the hidden layers warning dialog on export; restore the dismissed dialog in System Options > Advanced

Miscellaneous Enumerators

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swDxfMappingFileIndex	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfMappingFileIndex) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDxfMappingFileIndex, <Value>) IMPORTANT: In addition to specifying the custom map file, you must specify a custom map file index to indicate which custom map file to use in the custom map file list. The following code snippet shows how to specify the custom map file index when adding the first custom map file to the custom map file list: <pre>swApp.SetUserPreferenceStringListValue _ swDxfMappingFiles, mapFilePath index = swApp.GetUserPreferenceIntegerValue _ swDxfMappingFileIndex) If (index = -1) Then swApp.SetUserPreferenceIntegerValue _ swDxfMappingFileIndex, 0 End If result= swModel.SaveAs4(outputPath,_ swSaveAsCurrentVersion, _ swSaveAsOptions_Silent, errors, warnings)</pre>	Integer value	Specifies a custom map file index to indicate which custom map file to use in the custom map file list; index into list of custom map files or -1
swDxfUseSolidworksLayers	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfUseSolidworksLayers) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfUseSolidworksLayers, <OnFlag>)	Boolean value	Specifies whether to apply the mapping file settings only to those entities whose layers are not defined and to preserve existing SOLIDWORKS drawing file layers in the exported file or to have the mapping file definitions overwrite all of the current SOLIDWORKS drawing file layers; this enumerator is equivalent to the Keep existing SOLIDWORKS drawing layer for entities option in the SOLIDWORKS to DXF/DWG Mapping dialog

Obsolete Enumerators

Enumerator	Get/Set Method	Return Value or <Value> or <OnFlag>	Comment
swDxfOutputScaleFactor	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDxfOutputScaleFactor) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDxfOutputScaleFactor, <Value>)	Double value	Specifies value to scale DXF output

swDxfExportViewAsBlock	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfExportViewAsBlock) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDxfExportViewAsBlock, <OnFlag>)	Boolean value	View export options - Export views as blocks
------------------------	--	---------------	--

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.


To display the dialog:

Click **Tools > Options > System Options > Export > EDRW/EPRT/EASM in File Format**.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **eDrawings**.
3. Click **Options**.

Exporting in the EDRW/EPRT/EASM file format is not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform.

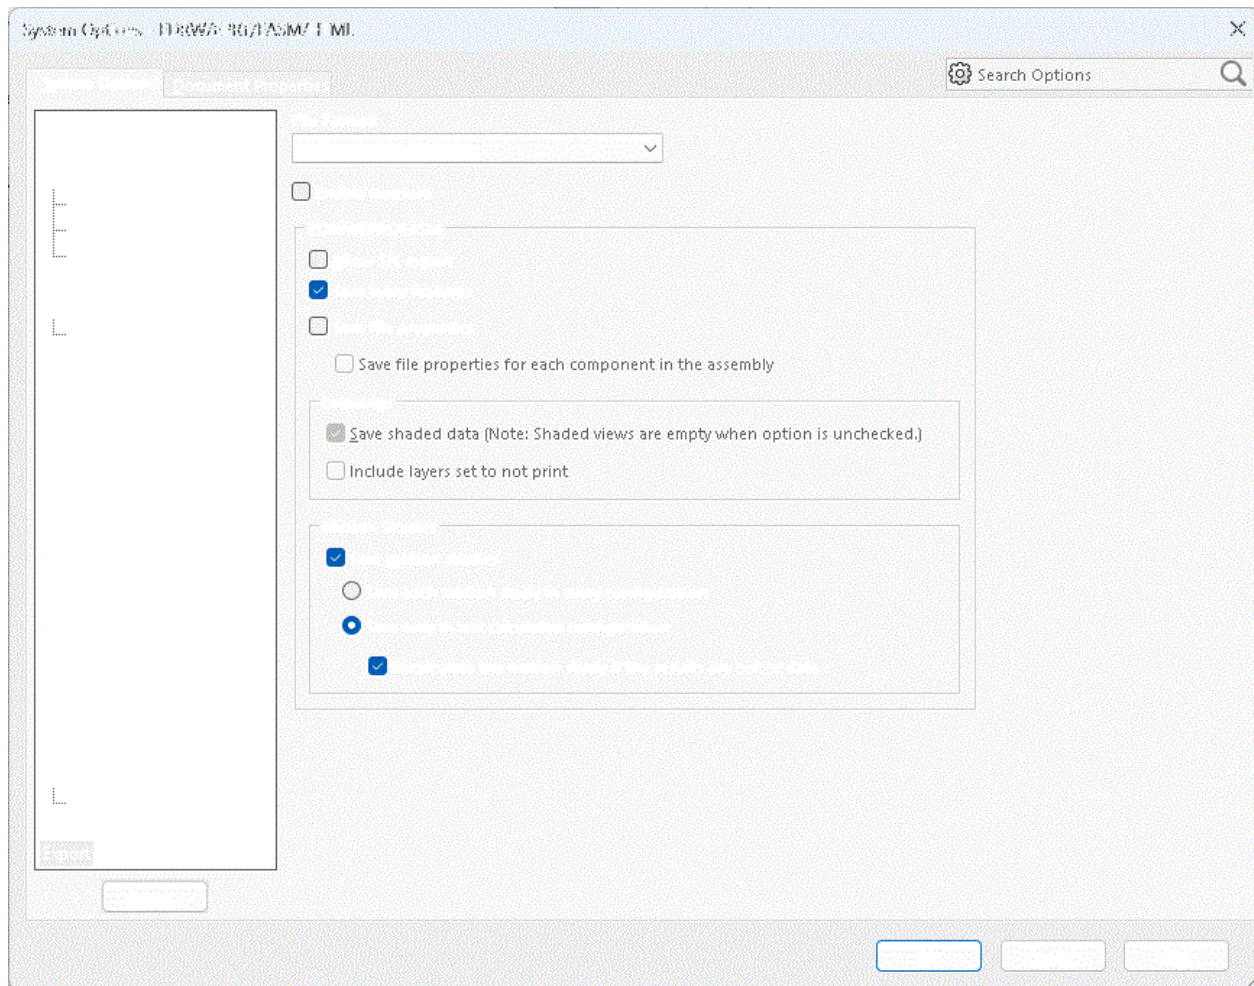

Setting	Get/Set Methods	Return Value or <OnFlag>	Comment
Enable Measure	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEDrawingsOkayToMeasure) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEDrawingsOkayToMeasure, <OnFlag>)	Boolean value	Specifies whether to enable measurement of geometry in eDrawings file
Allow STL export	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEDrawingsExportSTLOkay) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEDrawingsExportSTLOkay, <OnFlag>)	Boolean value	Specifies whether to allow recipients of eDrawings file to save it as STL file from eDrawings Viewer
Save table features	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEDrawingsSaveBOM) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEDrawingsSaveBOM, <OnFlag>)	Boolean value	
Save file properties	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveFileProperties) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveFileProperties, <OnFlag>)	Boolean value	
Save file properties for each component in the assembly	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveFilePropertiesForEachComp) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveFilePropertiesForEachComp, <OnFlag>)	Boolean value	For SOLIDWORKS assemblies only; valid only if Save file properties is set to true
Drawings - Save shaded data	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEDrawingsSaveShadedDataInDrawings) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEDrawingsSaveShadedDataInDrawings, <OnFlag>)	Boolean value	For SOLIDWORKS drawings only; specifies whether to save shaded data from SOLIDWORKS drawing document in published eDrawings file

Drawings - Include layers set to not print	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swEDrawingsIncludeLayersNotToPrint) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swEDrawingsIncludeLayersNotToPrint, <OnFlag>)	Boolean value	Specifies whether to include layers set not to print
Motion Studies - Save Motion Studies	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swEDrawingsSaveAnimationOkay) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swEDrawingsSaveAnimationOkay, <OnFlag>)	Boolean value	Specifies whether to save motion studies to eDrawings file
Save each motion study in every configuration - or - Save only in last configuration	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swEDrawingsSaveAnimationToAllConfigs) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swEDrawingsSaveAnimationToAllConfigs, <OnFlag>)	Boolean value: • True: Save each motion study in every configuration • False: save each motion study only in the configuration in which it was last calculated	Specifies how to save motion studies to eDrawings files
Recalculate the motion study if the results are out of date	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swEDrawingsSaveAnimationRecalculate) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swEDrawingsSaveAnimationRecalculate, <OnFlag>)	Boolean value	Specifies whether to recalculate the motion study or use existing results in eDrawings file; valid only if swEDrawingsSaveAnimationToAllConfigs is set to False

Obsolete Enumerators

Enumerator	Comment
swEDrawingsCompression	Obsolete
swEDrawingsSaveAsSelectionOption	Obsolete
swEModelSelectionList	Obsolete

System Options > Export > IFC

This topic contains two tables. The information in the table:


- appearing immediately after the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

To display the dialog:

Click **Tools > Options > System Options > Export > IFC in File Format**.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **IFC 2x3** or **IFC 4**.
3. Click **Options**.

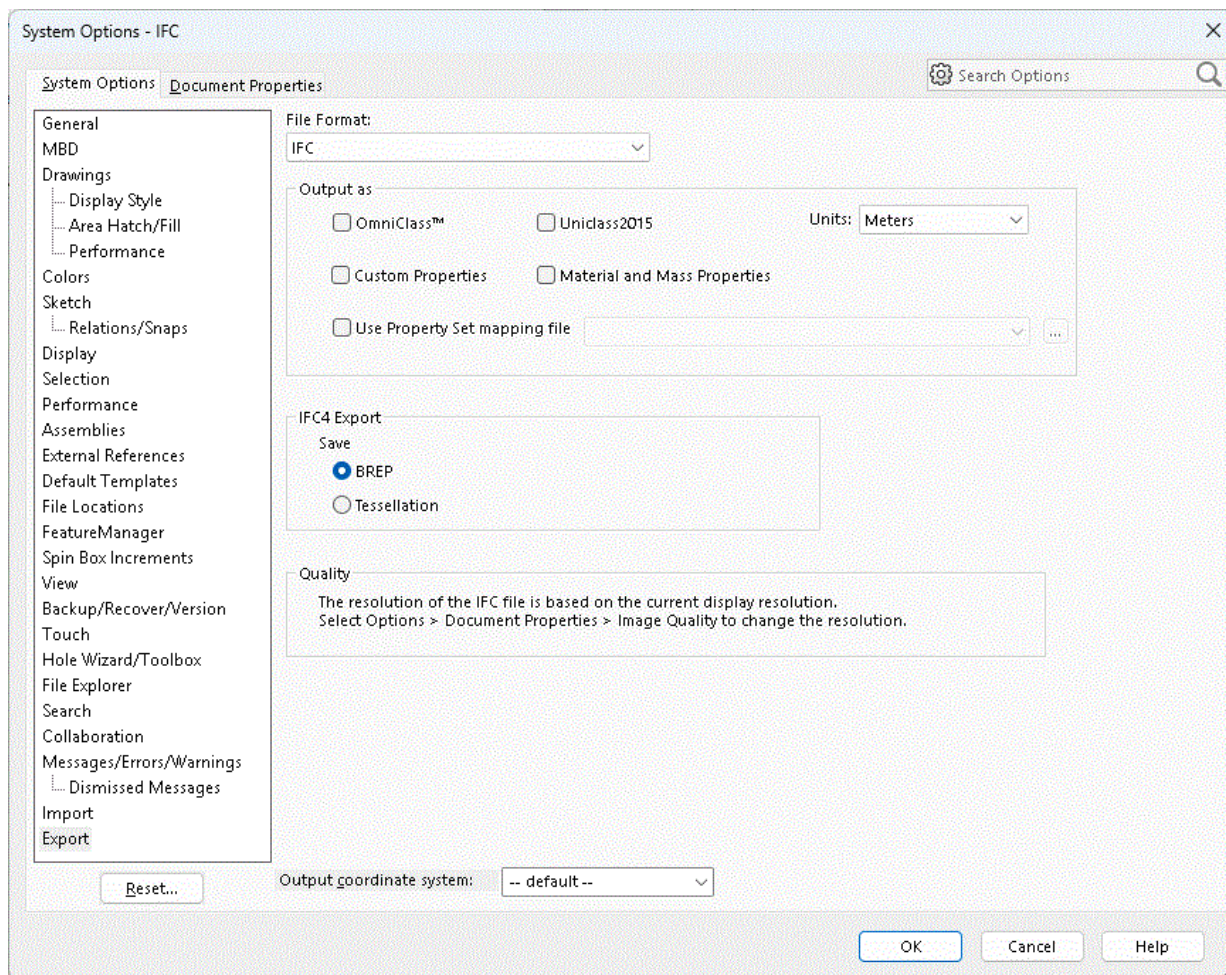

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	
Output as - OmniClass™	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIFCOmniClassPreference) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIFCOmniClassPreference, <OnFlag>)	Boolean value	
Output as - Uniclass2	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIFCUniclass2Preference) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIFCUniclass2Preference, <OnFlag>)	Boolean value	
Output as - Custom Properties	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIFCCustomPropsPreference) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIFCCustomPropsPreference, <OnFlag>)	Boolean value	
Output as - Material and Mass Properties	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIFCMaterialsMassPropertiesPreference) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIFCMaterialsMassPropertiesPreference, <OnFlag>)	Boolean value	

Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value	
--------------------------	---	--------------	--

Obsolete Enumerators

Enumerator	Comment
swIFCOmnUniClassPreference	Obsolete
swExportIFCUniClass2	Obsolete
swExportIFCType	Obsolete

System Options > Export > IGES 5.3


This topic contains two tables. The information in the table:

- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

To display the dialog:

Click **Tools > Options > System Options > Export > IGES 5.3** in **File Format**.

- or -
1. Click **File > Save As**.
 2. In **Save as type**, select **IGES**.
 3. Click **Options**.

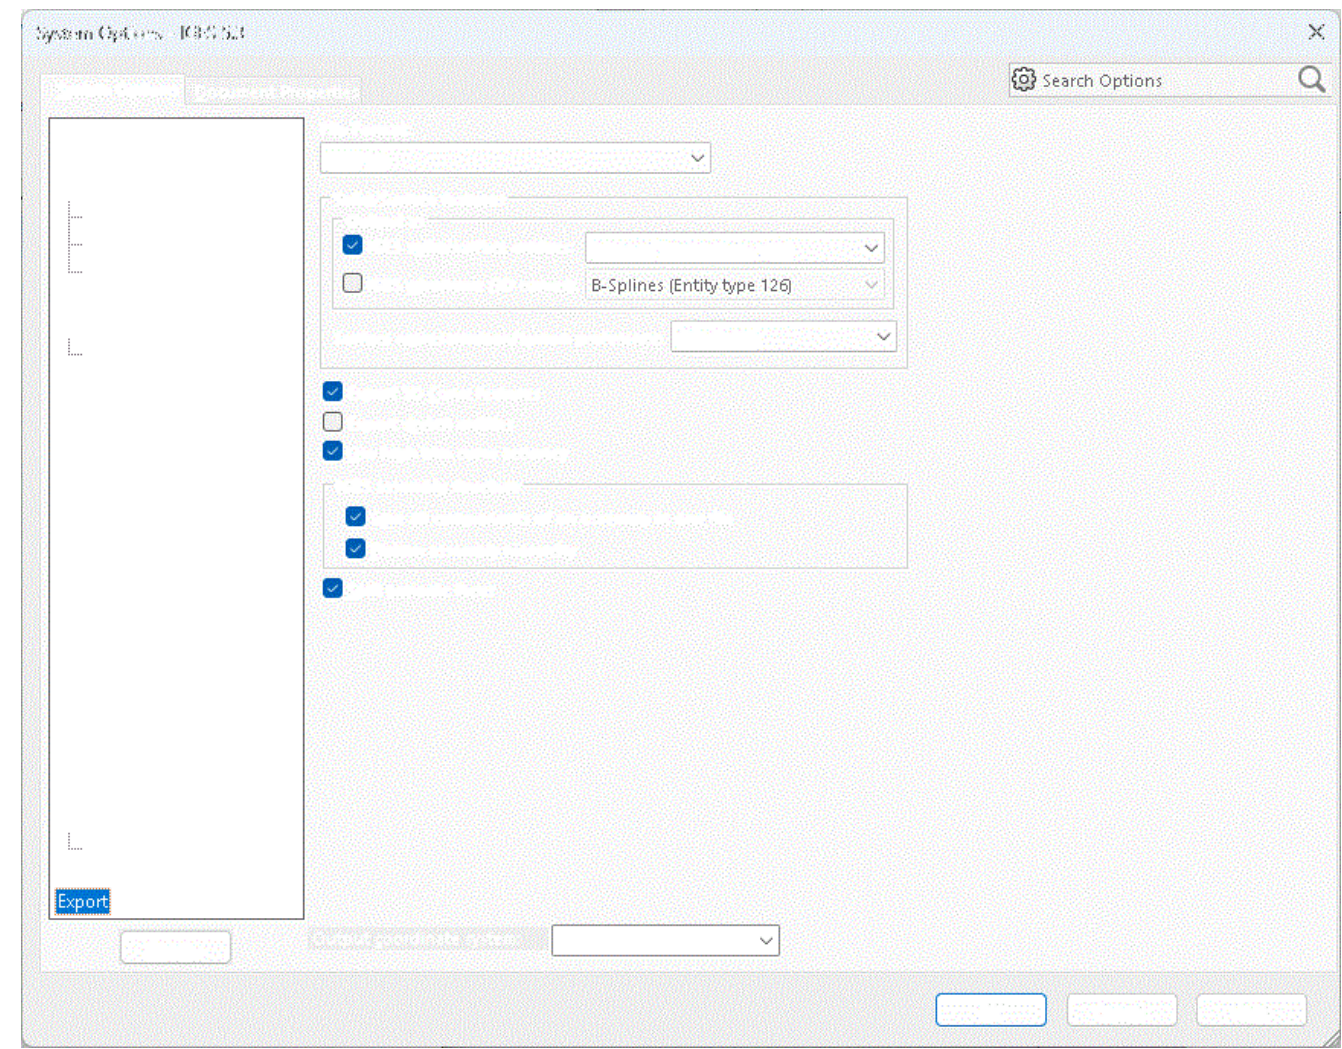

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Solid/Surface features - Output as - IGES solid/surface entities	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportSolidAndSurface) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportSolidAndSurface, <OnFlag>)	Boolean value	Specifies whether to export data as solid or surface entities
Solid/Surface features - Output as - IGES solid/surface entities <value>	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swIGESRepresentation) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swIGESRepresentation, swIGESRepresentation_e.<Value>)	See swIGESRepresentation_e for valid options	Specifies IGES representation type
Solid/Surface features - Output as - IGES wireframe (3D curves)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportAsWireframe) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportAsWireframe, <OnFlag>)	Boolean value	Specifies whether to convert solid body to a 3D wireframe representation in the IGES file
Solid/Surface features - Output as - IGES wireframe (3D curves) <value>	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swIGESCurveRepresentation) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swIGESCurveRepresentation, swIGESCurveRepresentation_e.<Value>)	See swIGESCurveRepresentation_e for valid options	Specifies the IGES curve representation

Solid/Surface features - Surface representation/System preference	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swIGESSystem) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swIGESSystem, swIGESPreferredSystem_e.<Value>)	See swIGESPreferredSystem_e for valid options	Specifies the IGES system setting
Export 3D Curve features	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportFreeCurves) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportFreeCurves, <OnFlag>)	Boolean value	Specifies whether to include 3D curve features in the exported file
Export sketch entities	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportSketchEntities) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportSketchEntities, <OnFlag>)	Boolean value	Specifies whether to export sketch entities
Use high trim curve accuracy	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESHHighTrimCurveAccuracy) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESHHighTrimCurveAccuracy, <OnFlag>)	Boolean value	Specifies whether to use high-trim curve accuracy
IGES assembly structure - Save all components of an assembly in one file	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESComponentsIntoOneFile) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESComponentsIntoOneFile, <OnFlag>)	Boolean value	Specifies whether to save all assembly components, sub-assemblies, and sub-assembly components in one file; for assemblies only
IGES assembly structure - Flatten assembly hierarchy	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESFlattenAssemHierarchy) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESFlattenAssemHierarchy, <OnFlag>)	Boolean value	Specifies whether to save assembly in flattened hierarchy (one level); for assemblies only
Split periodic faces	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportSplitPeriodic) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIGESExportSplitPeriodic, <OnFlag>)	Boolean value	Specifies whether to split periodic faces; for parts only
Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value	

Obsolete Enumerators

Enumerator	Comment
swIGESDuplicateEntities	Obsolete
swIGESNurbsSetting	Obsolete ; see swUserPreferenceIntegerValue_e.swIGESSystem
swIGESStandardSetting	Obsolete ; see swUserPreferenceIntegerValue_e.swIGESSystem
swFileSaveAsCoordinateSystem	Obsolete