

SOLIDWORKS Enumerations (swconst) — Examples (6/8): FileSaveAsParasolidOptions-So_Drawings

SOLIDWORKS API Documentation (converted from CHM)

This topic contains two tables. The information in the table:


- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

To display the dialog:

Click **Tools > Options > System Options > Export > Parasolid in File Format**.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **Parasolid** or **Parasolid Binary**.
3. Click **Options**.

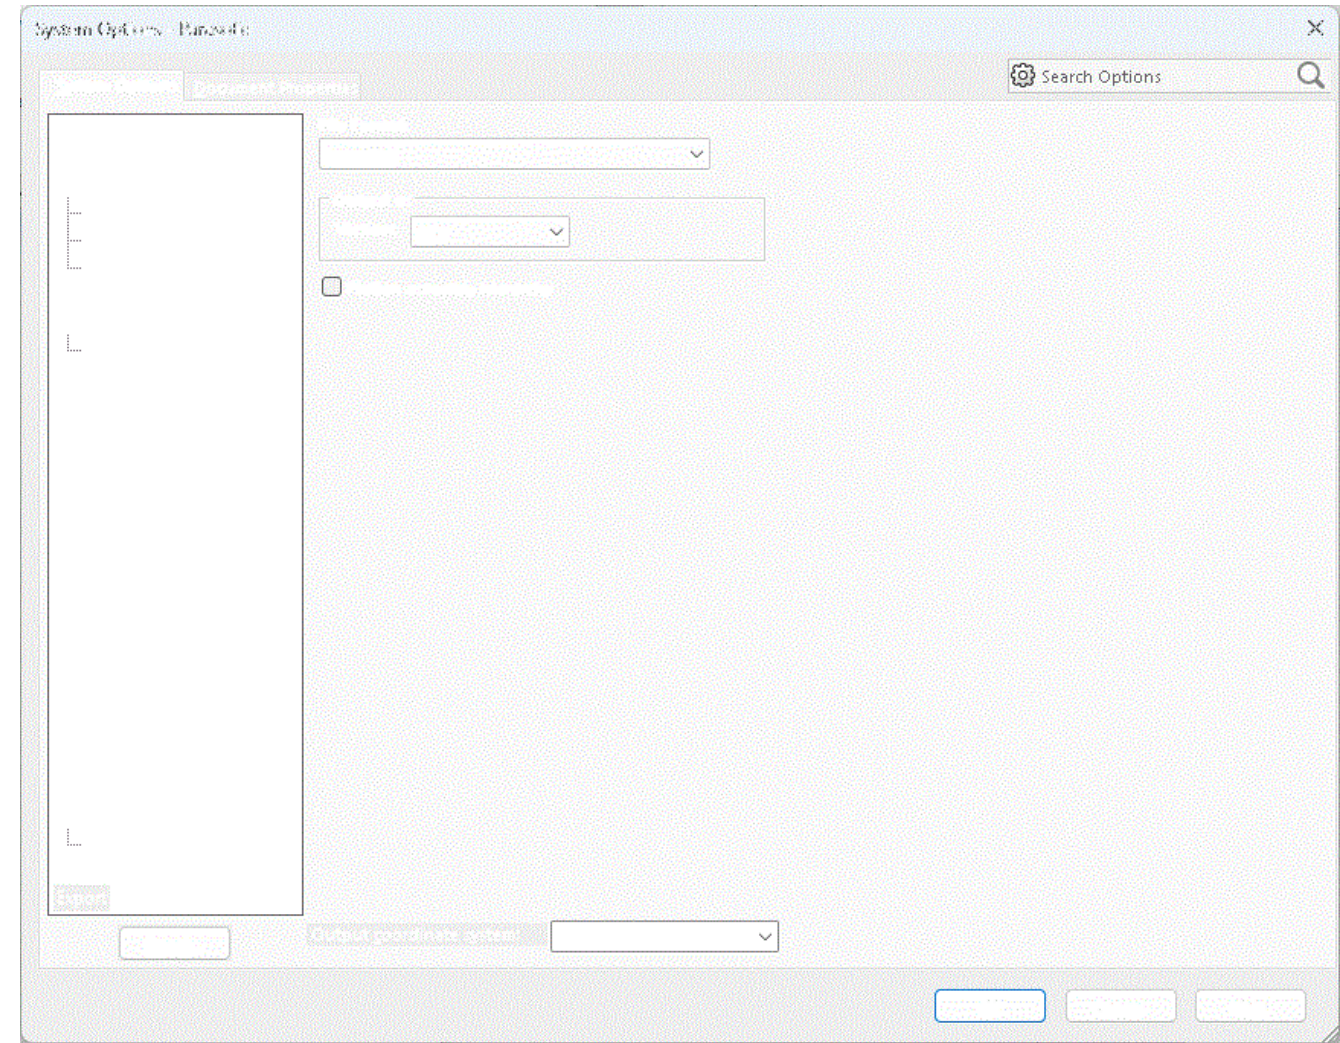


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Output as - Version	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swParasolidOutputVersion) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swParasolidOutputVersion, swParasolidOutputVersion_e.<Value>)	See swParasolidOutputVersion_e for valid options	
Flatten assembly hierarchy	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swXTAssemSaveFormat) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swXTAssemSaveFormat, <OnFlag>)	Boolean value	Specifies whether to flatten assembly hierarchy in Parasolid output; for assemblies only
Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value	

Obsolete Enumerators

Enumerator	Comment
------------	---------

swFileSaveAsCoordinateSystem	Obsolete
------------------------------	----------

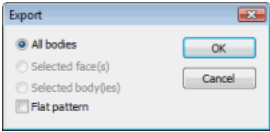


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Export sheet metal part in flattened mode	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPartExportFlatPattern) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPartExportFlatPattern, <OnFlag>)	Boolean value	Specifies whether to a export sheet metal part in flattened mode or not; for sheet metal parts only

To display the dialog:

Click **Tools > Options > System Options > Export > SLDPRT from assembly in File Format**.

- or -

- 1. Click **File > Save As**.
- 2. In **Save as type**, select **Part (*.prt, *.sldprt)**.
- 3. Click **Options**.

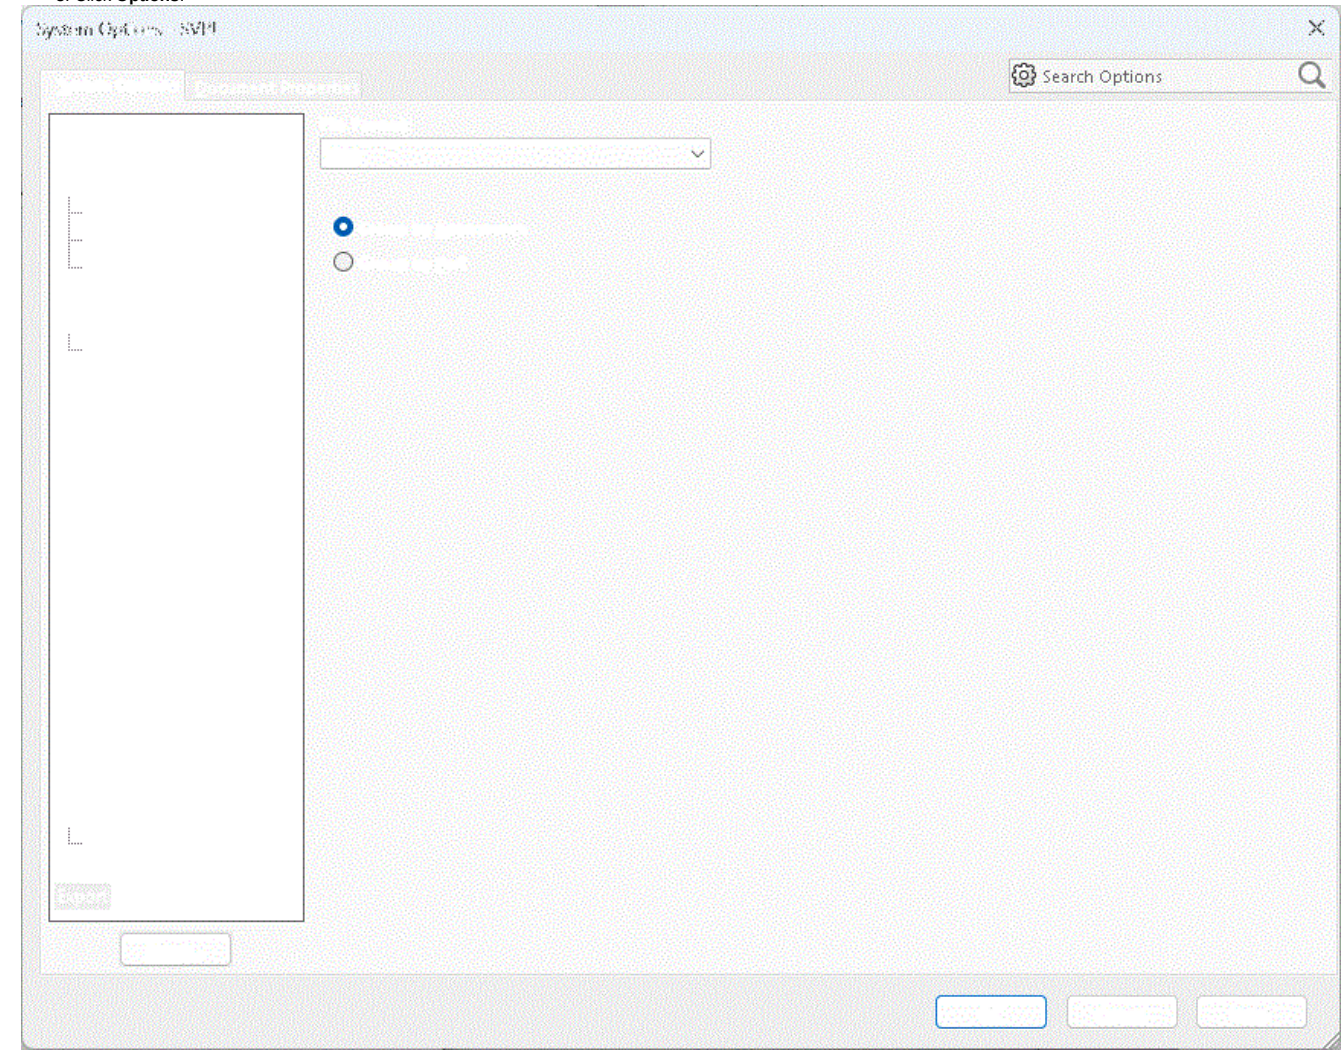

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Specified components - Remove - Visibility threshold (internal components)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swASMSLDPRT_ExcludeComponentsByVisibility) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swASMSLDPRT_ExcludeComponentsByVisibility, <OnFlag>)	Boolean value	Specifies whether to remove from the export components whose visibility is less than by swASMSLDPRT_ExcludeComponentsByVisibilityThreshold
Specified components - Remove - Visibility threshold (internal components) - (slider amount)	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swASMSLDPRT_ExcludeComponentsByVisibilityThreshold) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swASMSLDPRT_ExcludeComponentsByVisibilityThreshold, <Value>)	Double value in meters-cubed	Valid only if swASMSLDPRT_ExcludeComponentsByVisibilityThreshold is set to true
Specified components - Remove - Bounding box volume less than:	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExcludeComponentsByBBoxVolume) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExcludeComponentsByBBoxVolume, <OnFlag>)	Boolean value	Specifies whether to remove from the export components whose bounding box volume is less than the threshold specified by swASMSLDPRT_ExcludeComponentsByBBoxVolumeThreshold

Specified components - Remove - Bounding box volume less than: (amount)	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swASMSLDPRT_ExcludeComponentsByBBoxVolumeThreshold) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swASMSLDPRT_ExcludeComponentsByBBoxVolumeThreshold, <Value>)	Double value in meters-cubed	Valid only if swExcludeComponentsByB
Specified components - Remove - Fastener components	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swASMSLDPRT_ExcludeIfToolboxComponents) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swASMSLDPRT_ExcludeIfToolboxComponents, <OnFlag>)	Boolean value	Specifies whether to remove from the ex components
Specified components - Include - Mass properties	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swASMSLDPRT_IncludeMassProperties) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swASMSLDPRT_IncludeMassProperties, <OnFlag>)	Boolean value	Specifies whether to override the mass with the mass properties from the assen
Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value	


System Options > Export > PDF

To display the dialog:

Click **Tools > Options > System Options > Export > PDF** in File Format.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **Adobe Portable Document Format**.
3. Click **Options**.

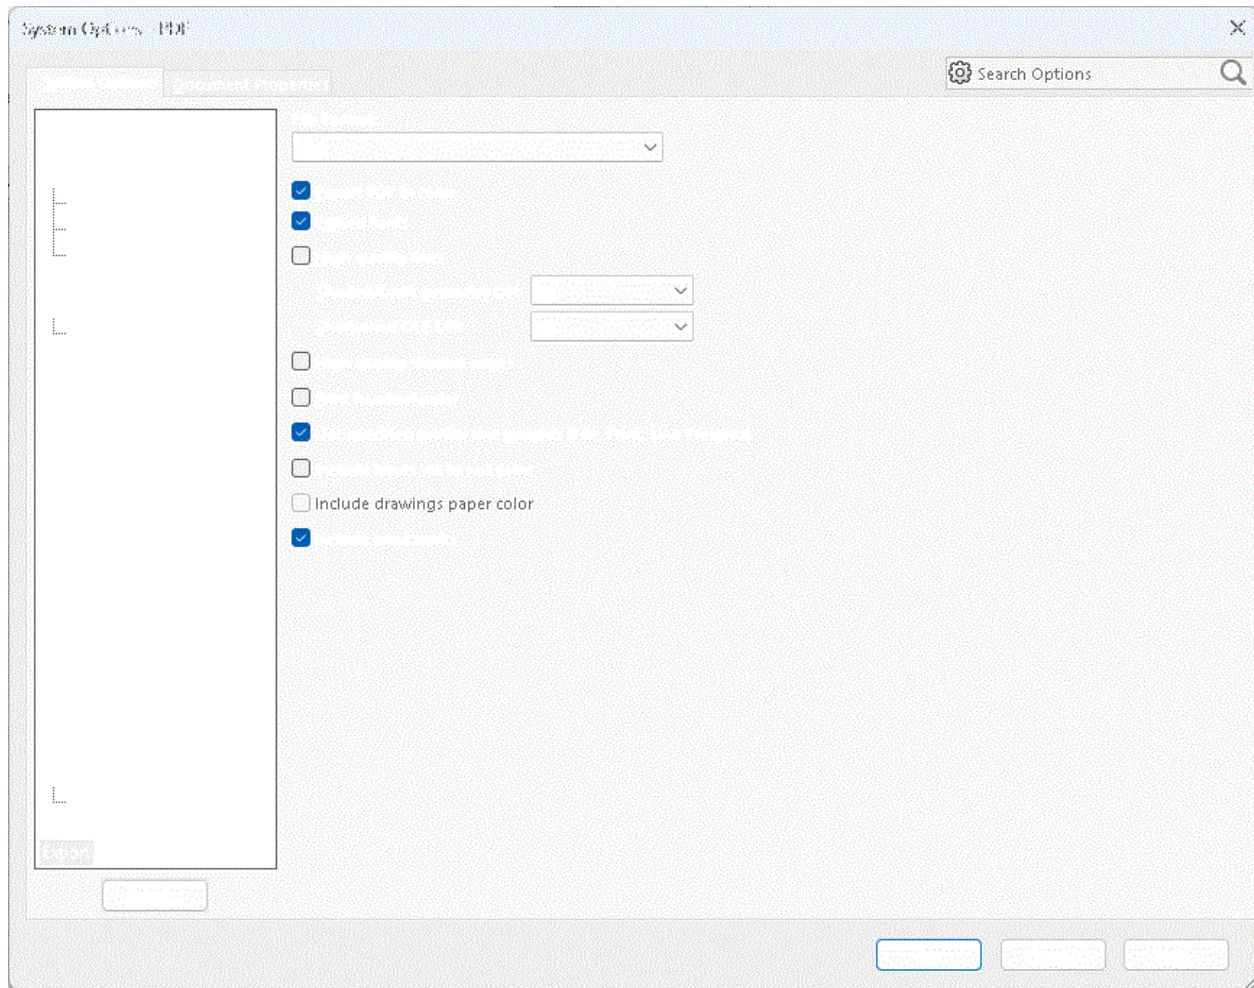

Setting	Get/Set Methods	Return Value or <OnFlag>	Comment
Export PDF in color	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportInColor) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportInColor, <OnFlag>)	Boolean value	Specifies whether to save documents in color when saving to PDF
Embed fonts	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportEmbedFonts) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportEmbedFonts, <OnFlag>)	Boolean value	Specifies whether to embed fonts when saving documents to PDF
High quality lines	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportHighQuality) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportHighQuality, <OnFlag>)	Boolean value	Specifies whether to save drawing documents in high quality when saving to PDF
Shaded/Draft geometry DPI	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPDFExportShadedDraftDPI) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPDFExportShadedDraftDPI, <Value>)	Integer value	For drawings only; controls dots per inch (DPI) setting for shaded and draft geometry; increased value improves quality while increasing the file size and the time to save the file
Sharpened OLE DPI	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPDFExportOLEDPI) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPDFExportOLEDPI, <Value>)	Integer value	For drawings only; controls DPI setting for Object Linking and Embedding (OLE) objects; increased value improves quality while increasing the file size and the time to save the file
High quality shaded edges	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportShadedEdgesHighQuality)	Boolean value	

	ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportShadedEdgesHighQuality, <OnFlag>)		
Print header/footer	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportPrintHeaderFooter) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportPrintHeaderFooter, <OnFlag>)	Boolean value	Specifies whether to use the header and footer specified in File > Print > Header Footer when saving documents to PDF
Use specified printer line weights (File > Print > Line Weights)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportUseCurrentPrintLineWeights) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportUseCurrentPrintLineWeights, <OnFlag>)	Boolean value	Specifies whether to use the default printer line weights when saving documents to PDF
Include layers set to not print	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportIncludeLayersNotToPrint) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportIncludeLayersNotToPrint, <OnFlag>)	Boolean value	Specifies whether to include layers set not to print
Include drawings paper color	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportIncludeDrawingsPaperColor) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPDFExportIncludeDrawingsPaperColor, <OnFlag>)	Boolean value	


System Options > Export > PLY

To display the dialog:

Click **Tools > Options > System Options > Export > PLY** in File Format.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **Polygon File Format**.
3. Click **Options**.

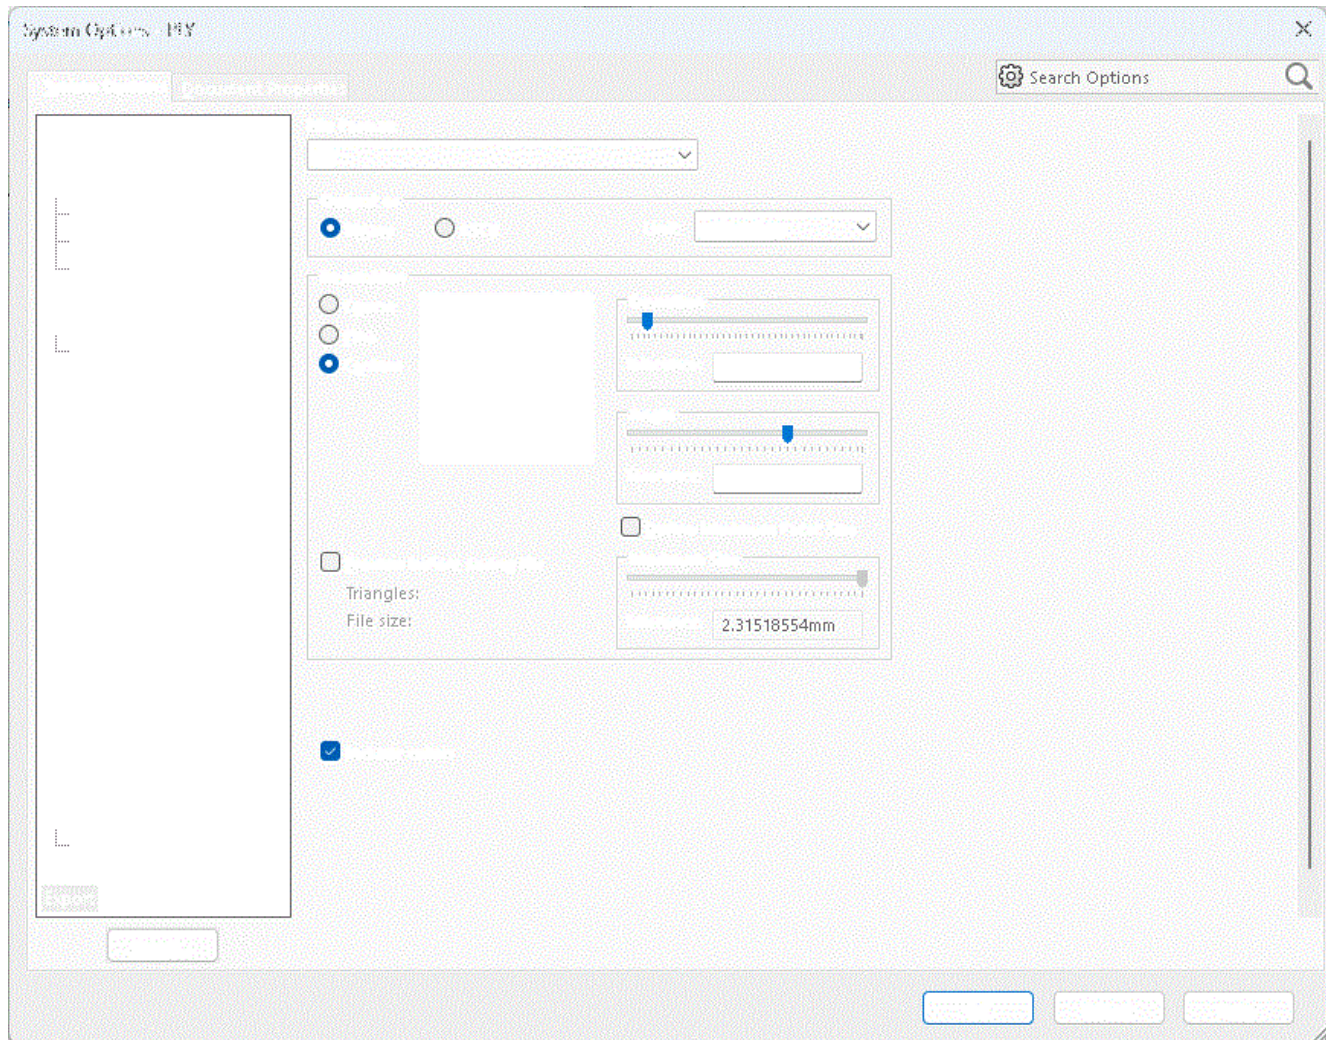

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Output as	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPLYBinaryFormat) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPLYBinaryFormat, <OnFlag>)	Boolean value	
Output as - Unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportPlyUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportPlyUnits, swLengthUnit_e.<Value>)	Integer value as defined in swLengthUnit_e	
Resolution	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPLYQuality) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPLYQuality, swPLYQuality_e.<Value>)	Integer value as defined in swPLYQuality_e	
Resolution - Deviation Tolerance	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPLYDeviation) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPLYDeviation, <Value>)	Double value in meters	Valid only if swPLYQuality is set to swPLYQuality_e.swPLYQuality_CUSTOM; the value range varies by part or assembly. Inspect the dialog for the range of values for the opened model.
Resolution - Angle Tolerance	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPLYAngleTolerance) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swPLYAngleTolerance, <Value>)	0.5236 >= Double value in radians >= 0.00873	Valid only if swPLYQuality is set to swPLYQuality_e.swPLYQuality_CUSTOM

Resolution - Preview before saving file	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPLYPreview) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPLYPreview, <OnFlag>)	Boolean value	
Include colors	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPLYIncludeColors) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPLYIncludeColors, <OnFlag>)	Boolean value	

System Options > Export > STEP

This topic contains two tables. The information in the table:


- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Miscellaneous Enumerators](#) contains enumerators related to saving STEP data.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

To display the dialog:

Click **Tools > Options > System Options > Export > STEP** in **File Format**.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **STEP AP203** or **STEP AP214**.
3. Click **Options**.

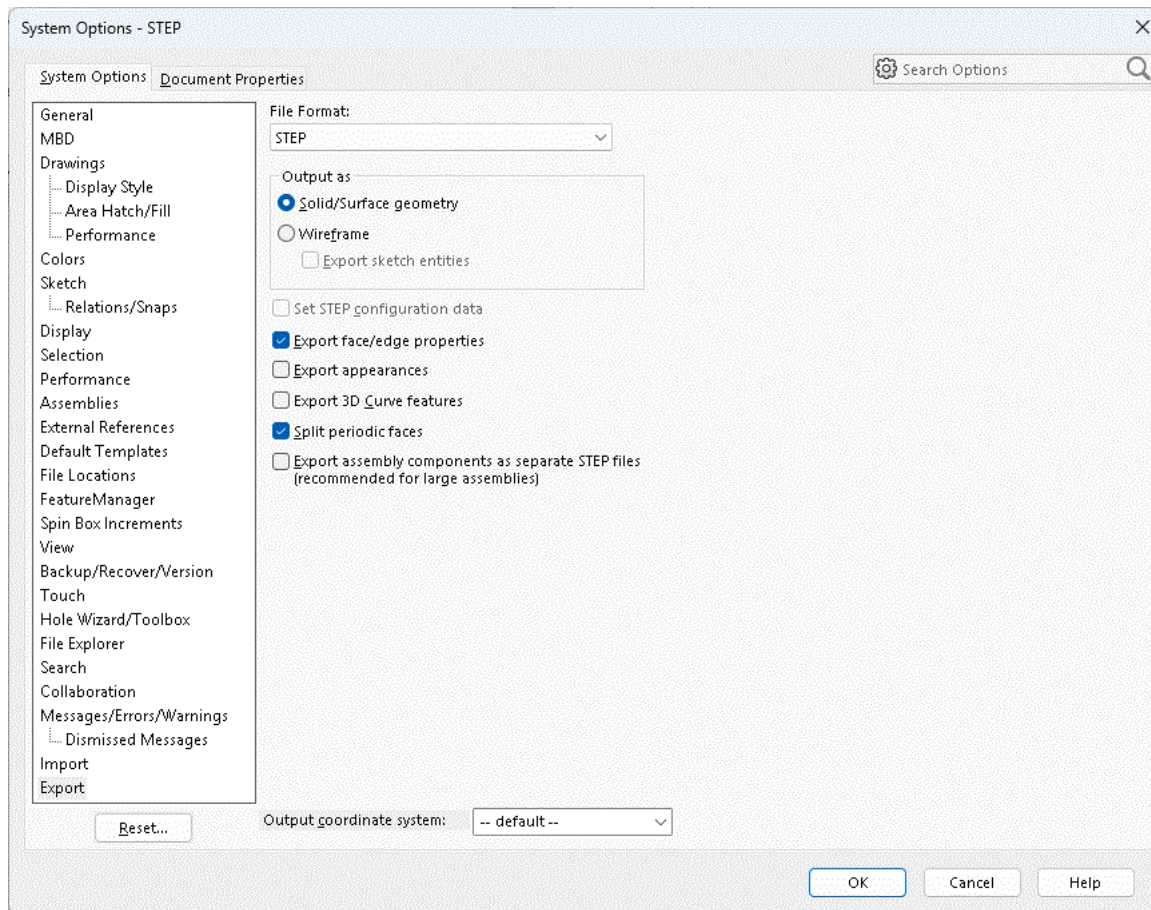

Setting	Get/Set Methods	Return Value or <Value>
Output as - Solid/Surface geometry	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swStepExportPreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swStepExportPreference, swAcisOutputGeometryPreference_e.swAcisOutputAsSolidAndSurface)	swAcisOutputGeometryPreference_e.swAcisOutputAsSolidAndSurface
Output as - Wireframe	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swStepExportPreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swStepExportPreference, swAcisOutputGeometryPreference_e.swAcisOutputAs3DCurves)	swAcisOutputGeometryPreference_e.swAcisOutputAs3DCurves
Output as - Wireframe - Export sketch entities	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swStepExportPreference) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swStepExportPreference, swAcisOutputGeometryPreference_e.swAcisOutputAs3DCurves_IncludeSketchEnts)	swAcisOutputGeometryPreference_e.swAcisOutputAs3DCurves_IncludeSketchEnts
Set STEP configuration data	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportConfigurationData, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportConfigurationData, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value
Export face/edge properties	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportFaceEdgeProps) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportFaceEdgeProps, <OnFlag>)	Boolean value
Export appearances	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportAppearances) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportAppearances, <OnFlag>)	Boolean value

Split periodic faces	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportSplitPeriodic) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportSplitPeriodic, <OnFlag>)	Boolean value
Export 3D Curve features	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExport3DCurveFeatures) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExport3DCurveFeatures, <OnFlag>)	Boolean value
Export assembly components as separate STEP files (recommended for large assemblies)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportAtomicSave) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStepExportAtomicSave, <OnFlag>)	Boolean value
Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value

Miscellaneous Enumerators

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swStepAP	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swStepAP) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swStepAP, <Value>)	Integer value: 203 = STEP AP203 format 214 = STEP AP214 format	Specifies STEP version number for files saved as STEP

Obsolete Enumerators

Enumerator	Comment
swFileSaveAsCoordinateSystem	Obsolete

System Options > Export > STL


This topic contains two tables. The information in the table:

- appearing immediately after the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

To display the dialog:

Click **Tools > Options > System Options > Export > STL in File Format**.

- or -
1. Click **File > Save As**.
 2. In **Save as type**, select **STL**.
 3. Click **Options**.

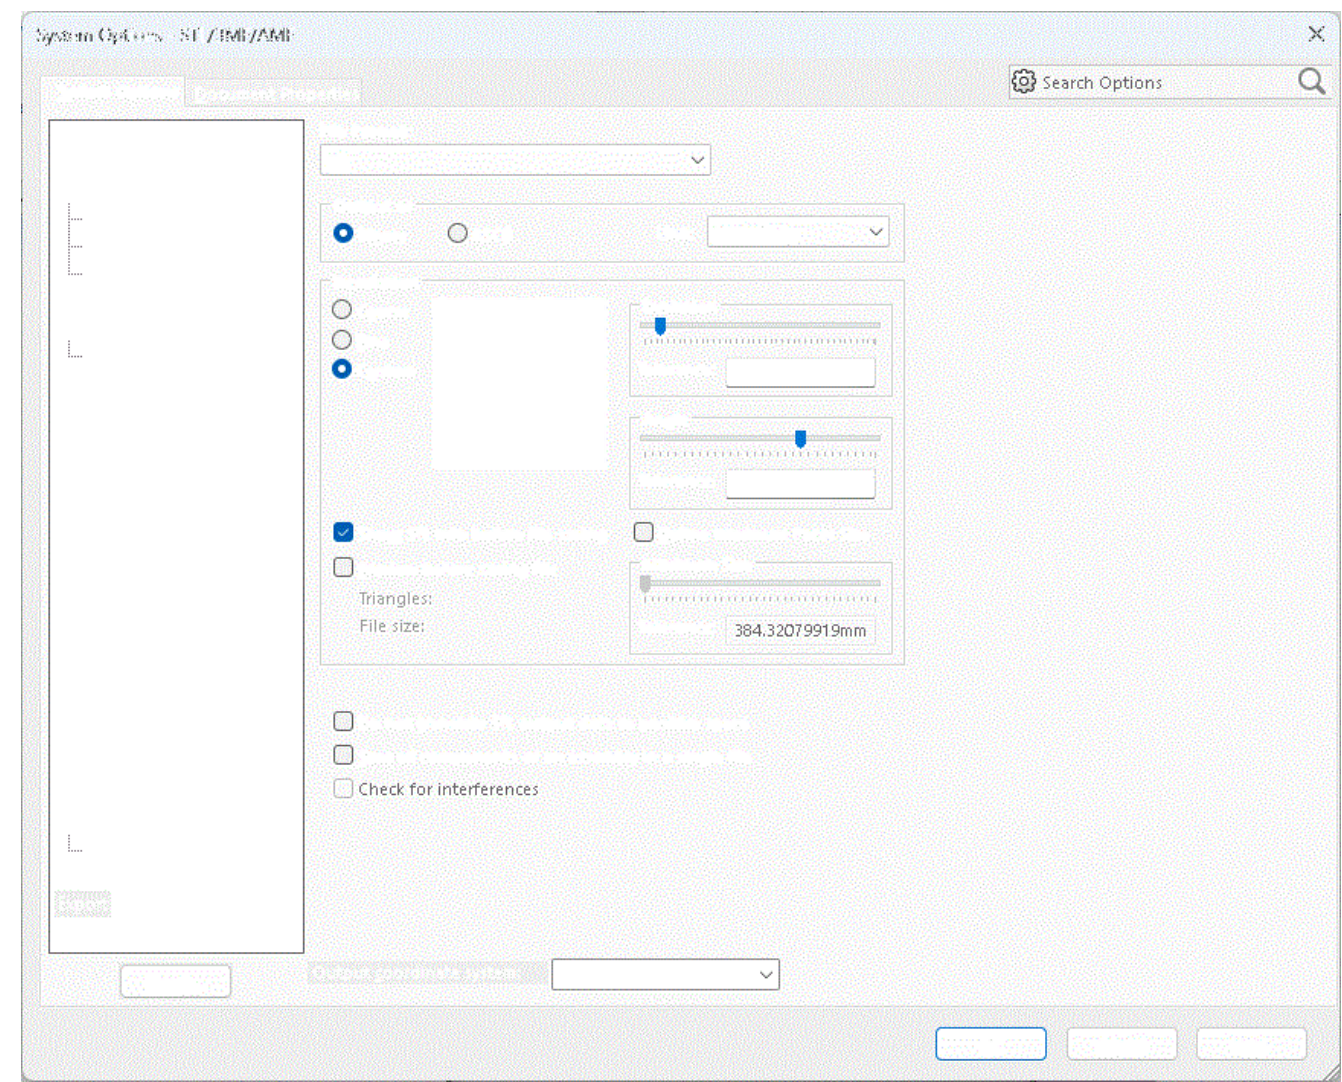

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Output as - Binary	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLBinaryFormat) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLBinaryFormat, <OnFlag>)	True	
Output as - ASCII	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLBinaryFormat) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLBinaryFormat, <OnFlag>)	False	
Output as - Unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportStlUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportStlUnits, swLengthUnit_e.<Value>)	Valid options as defined in swLengthUnit_e : • 0 = swMM (millimeters) • 1 = swCM (centimeters)	

		• 2 = swMETER • 3 = swINCHES • 4 = swFEET	
Resolution - • Coarse • Fine • Custom	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSTLQuality) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSTLQuality, swSTLQuality_e.<Value>)	See swSTLQuality_e for valid options	Specifies the resolution of the output for STL files
Resolution - Deviation - Tolerance	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLDeviation) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLDeviation, <Value>)	Double value	Specifies deviation tolerance, which controls whole-part tessellation; lower numbers generate files with greater whole-part accuracy
Resolution - Angle - Tolerance	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLAngleTolerance) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSTLAngleTolerance, <Value>)	Double value	Specifies angle tolerance, which controls smaller detail tessellation; lower numbers generate files with greater small-detail accuracy, but those files take longer to generate
Resolution - Show STL info before file saving	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLShowInfoOnSave) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLShowInfoOnSave, <OnFlag>)	Boolean value	Specifies whether to show STL information before saving the file
Resolution - Preview before saving file	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLPreview) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLPreview, <OnFlag>)	Boolean value	Specifies whether faceted model preview is displayed in the graphics area
Do not translate STL output data to positive space	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLDontTranslateToPositive) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLDontTranslateToPositive, <OnFlag>)	Boolean value	Specifies whether exported parts maintain original position in global space, relative to origin
Save all components of an assembly in a single file	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLComponentsIntoOneFile) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLComponentsIntoOneFile, <OnFlag>)	Boolean value	Specifies whether to save the assembly and its components to a single file
Check for interferences	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLCheckForInterference) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSTLCheckForInterference, <OnFlag>)	Boolean value	Specifies whether to check for interference prior to saving assembly document; swUserPreferenceToggle_e.swSTLComponentsIntoOneFile must be set to true
Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value	

Obsolete Enumerators

Enumerator	Comment
swFileSaveAsCoordinateSystem	Obsolete


System Options > Export > TIF/PSD/JPG/PNG

To display the dialog:

Click **Tools > Options > System Options > Export > TIF/PSD/JPG/PNG** in File Format.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **Tif**, **Adobe PhotoShop Files**, **JPEG**, or **Portable Network Graphics**.
3. Click **Options**.

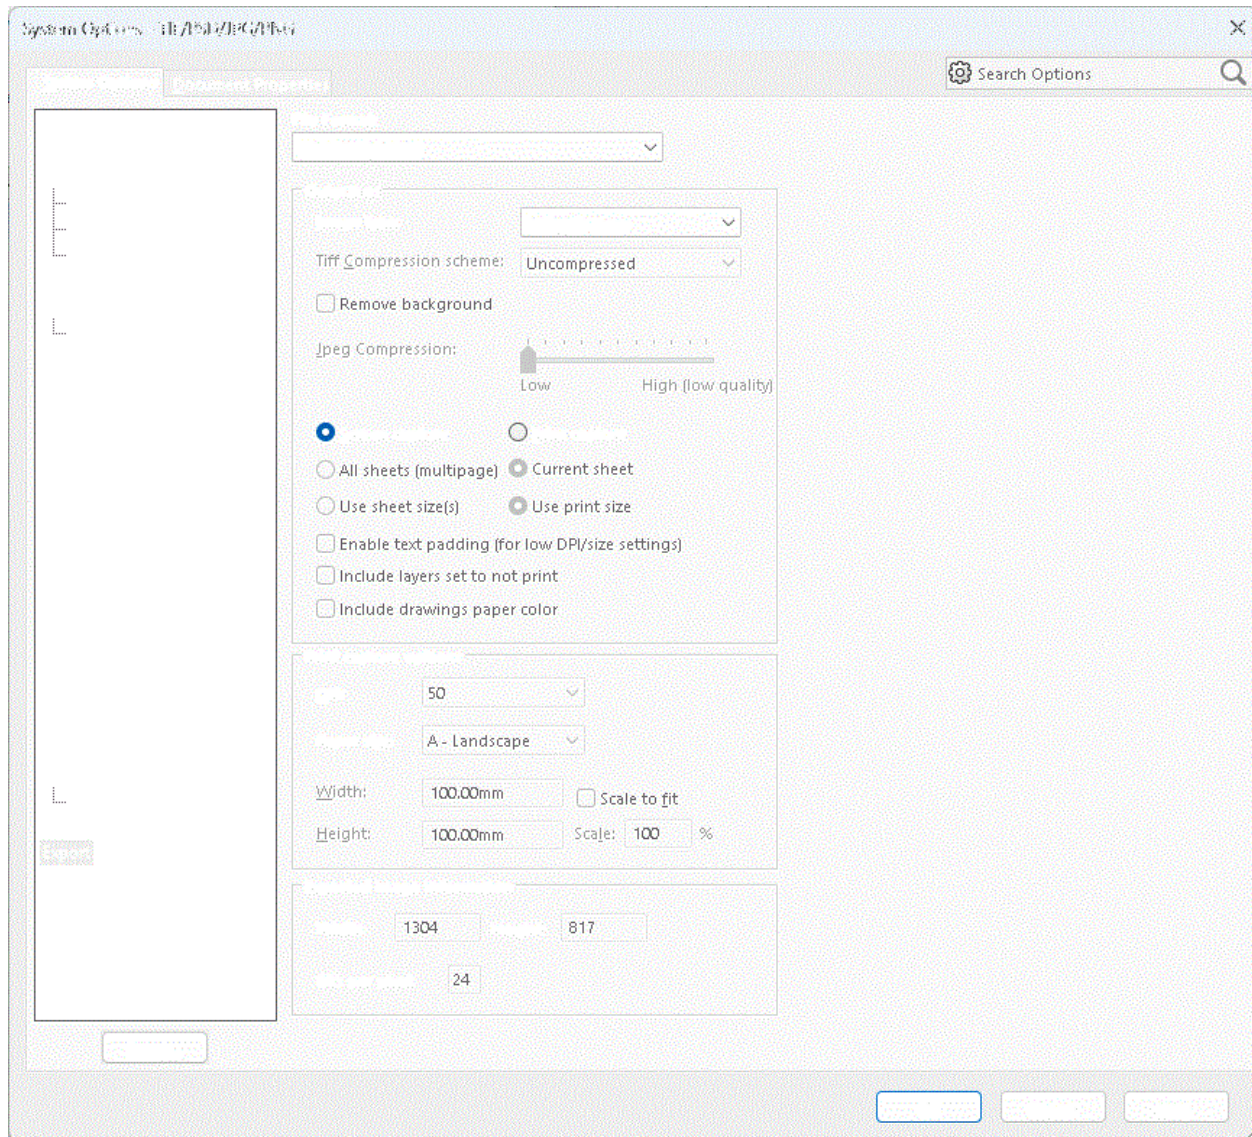

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Output as - Image type	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffImageType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffImageType, swTiffImageType_e.<Value>)	See swTiffImageType_e for valid options	
Output as - Tiff Compression scheme	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffCompressionScheme) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffCompressionScheme, swTiffCompressionScheme_e.<Value>)	See swTiffCompressionScheme_e for valid options	
Output as - Remove background	See Comment	See Comment	Currently not available in the SOLIDWORKS API
Output as - Jpeg Compression	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportJpegCompression) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportJpegCompression, <Value>)	Long value (1-100)	1 is for lowest compression; 100 is for highest compression (low quality)
Output as - Screen capture	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffScreenOrPrintCapture)	0	

	ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffScreenOrPrintCapture, <Value>)		
Output as - Print capture	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffScreenOrPrintCapture) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffScreenOrPrintCapture, <Value>)	1	
Output as - All sheets (multipage)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintAllSheets) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintAllSheets, <OnFlag>)	True	For Output as - Print capture only
Output as - Current sheet	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintAllSheets) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintAllSheets, <OnFlag>)	False	For Output as - Print capture only
Output as - Use sheet size(s)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintUseSheetSize) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintUseSheetSize, <OnFlag>)	True	For Output as - Print capture only
Output as - Use print size	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintUseSheetSize) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintUseSheetSize, <OnFlag>)	False	For Output as - Print capture only
Output as - Enable text padding (for low DPI/size settings)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintPadText) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintPadText, <OnFlag>)	Boolean value	Adjusts inter-character text spacing such that the text fills the bounding rectangle of the string; set to True when using low DPI and small paper sizes (A, A4, or A3)
Output as - Include layers set not to print	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffIncludeLayersNotToPrint) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffIncludeLayersNotToPrint, <OnFlag>)	Boolean value	Specifies whether to include layers set not to print
Output as - Include drawings paper color	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffExportIncludeDrawingsPaperColor) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffExportIncludeDrawingsPaperColor, <OnFlag>)	Boolean value	
Print capture options - DPI	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffPrintDPI) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffPrintDPI, <Value>)	Integer value	For drawings only; For Output as - Print capture only
Print capture options - Paper size	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffPrintPaperSize) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffPrintPaperSize, swDwgPaperSizes_e.<Value>)	See swDwgPaperSizes_e for valid options	
Print capture options - Width	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swTiffPrintDrawingPaperWidth) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swTiffPrintDrawingPaperWidth, <Value>)	Double value in meters	For drawings only; For Output as - Print capture only with Print capture options - Paper size set to User Defined
Print capture options - Height	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swTiffPrintDrawingPaperHeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swTiffPrintDrawingPaperHeight, <Value>)	Double value in meters	For drawings only; For Output as - Print capture only with Print capture options - Paper size set to User Defined
Print capture options - Scale to fit	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintScaleToFit) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTiffPrintScaleToFit, <OnFlag>)	Boolean value	For drawings only; specifies whether to scale drawing to fit page
Print capture options - Scale	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffPrintScaleFactor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTiffPrintScaleFactor, <Value>)	Integer value	Specifies the scale factor

System Options > Export > VRML

This topic contains two tables. The information in the table:


- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled **Obsolete Enumerators** contains enumerators that previously appeared on the dialog but are now obsolete.

To display the dialog:

Click **Tools > Options > System Options > Export > VRML in File Format**.

- or -

1. Click **File > Save As**.
2. In **Save as type**, select **VRML**.
3. Click **Options**.

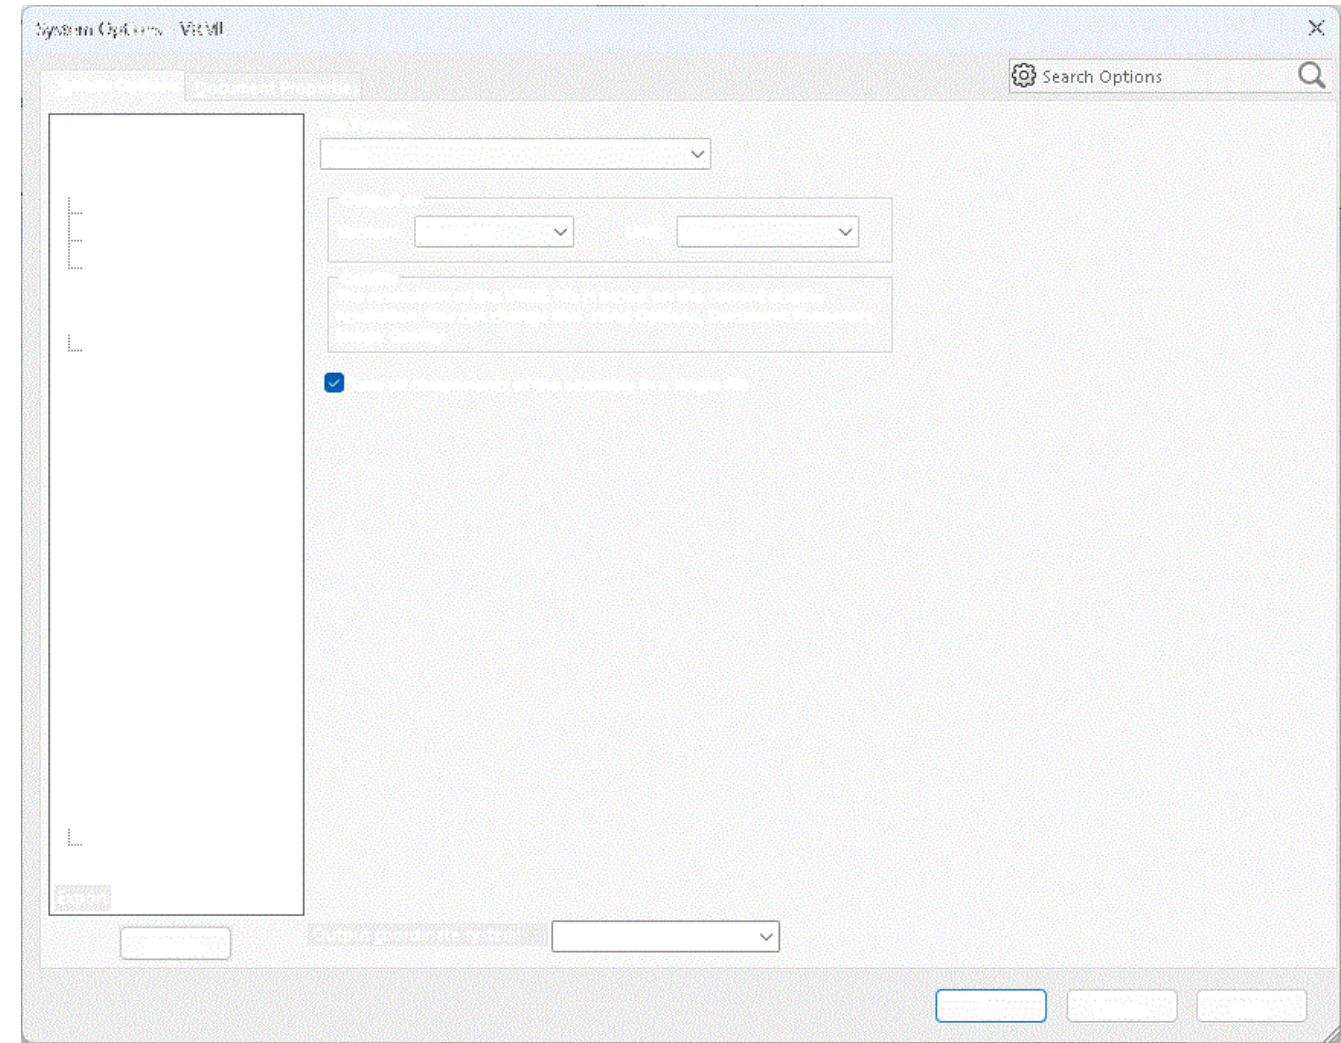


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Output as - Version	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportVrmlVersion) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportVrmlVersion, swVrmlOutputVersion_e.<Value>)	Values as defined in swVrmlOutputVersion_e	
Output as - Unit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportVrmlUnits) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExportVrmlUnits, swLengthUnit_e.<Value>)	Any of the following swLengthUnit_e values: • 0 = swMM (millimeters) • 1 = swCM (centimeters) • 2 = swMETER • 3 = swINCHES • 4 = swFEET	
Save all components of the assembly in a single file	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExportVrmlAllComponentsInSingleFile) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExportVrmlAllComponentsInSingleFile, <OnFlag>)	Boolean value	Specifies whether to save all of the components of an assembly to a single VRML (.wrl) file

Output coordinate system	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swExportOutputCoordinateSystem, <Value>)	String value	
--------------------------	--	--------------	--

Obsolete Enumerators


Enumerator	Comment
swFileSaveAsCoordinateSystem	Obsolete

Insert > Mate (assemblies only)

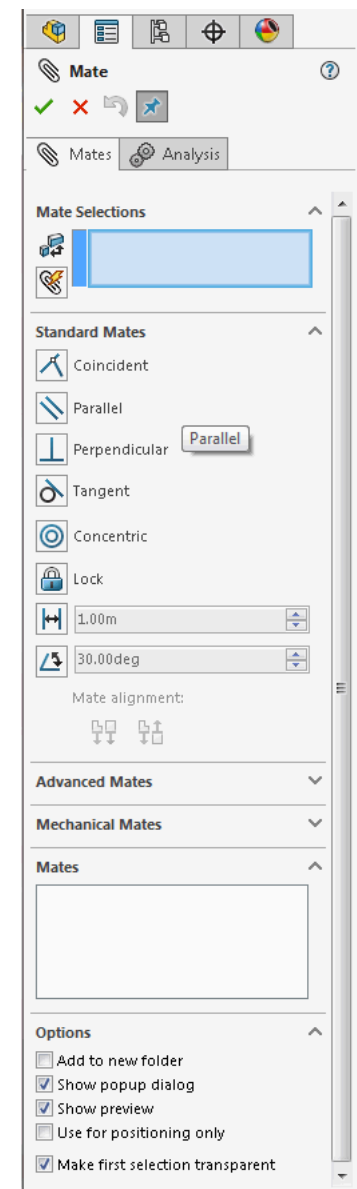


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Options - Make first selection transparent	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swMakeFirstSelectionTransparentInMateDialog, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swMakeFirstSelectionTransparentInMateDialog, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to make the first mate selection transparent

Route Properties PropertyManager

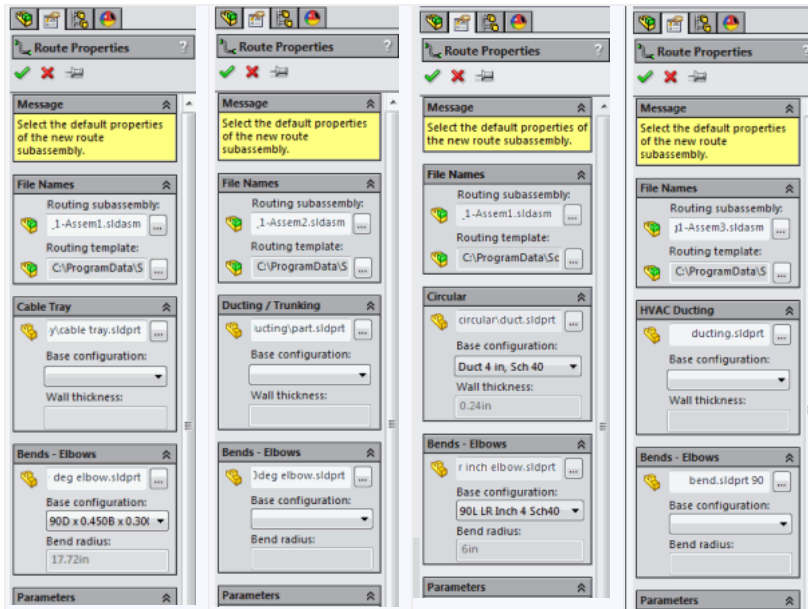

Setting	Get/Set Methods	Return Value or <Value>	Comments
Cable Tray - component path and file name	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swElecCableTrayDuctName, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swElecCableTrayDuctName, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	See SOLIDWORKS Routing Help for details about the electrical cable tray sub-route type
Bends - Elbows - component path and file name for Cable Tray	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swElecCableTrayElbowName, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swElecCableTrayElbowName, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	See SOLIDWORKS Routing Help for details about the electrical cable tray sub-route type
Ducting/Trunking - component path and file name	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swElecDuctingDuctName, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swElecDuctingDuctName, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	See SOLIDWORKS Routing Help for details about the electrical ducting/trunking sub-route type
Bends - Elbows - component path and file name for Ducting/Trunking	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swElecDuctingElbowName, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swElecDuctingElbowName, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	See SOLIDWORKS Routing Help for details about the electrical ducting/trunking sub-route type
Circular - component path and file name	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swHvacCirDuctName, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swHvacCirDuctName, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	See SOLIDWORKS Routing Help for details about the user-defined circular cross-section sub-route type
Bends - Elbows - component path and file name for Circular	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swHvacCirElbowName, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swHvacCirElbowName, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	See SOLIDWORKS Routing Help for details about the user-defined circular cross-section sub-route type
HVAC Ducting - component path and file name	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swHvacRectDuctName, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swHvacRectDuctName, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	See SOLIDWORKS Routing Help for details about the user-defined rectangular cross-section sub-route type
Bends - Elbows - component path and file name for HVAC Ducting	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swHvacRectElbowName, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swHvacRectElbowName, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	See SOLIDWORKS Routing Help for details about the user-defined rectangular cross-section sub-route type


Twisted Pair Parameters

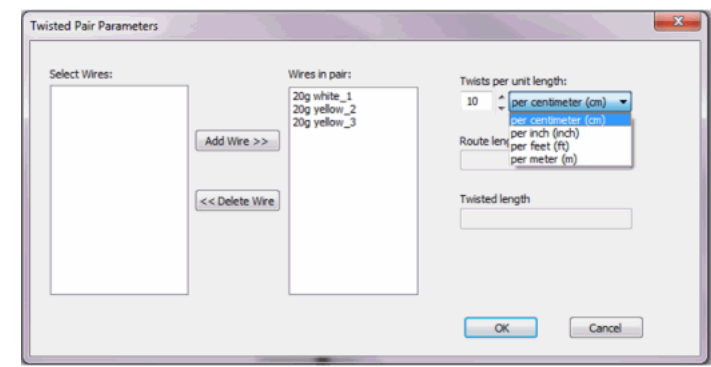

Setting	Get/Set Methods	Return Value or <Value>	Comments															
Twists per unit length - spin box	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swTwistCountValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swTwistCountValue, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the number of twists per unit length that the wires require in an electrical route; see SOLIDWORKS Routing Help for details about twisted pairs															
Twists per meter	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swTwistCountValuePerMeter, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swTwistCountValuePerMeter, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value For example: <table><tr><th>If swTwistCountValue is...</th><th>Desired unit is...</th><th>Then swTwistCountValuePerMeter is...</th></tr><tr><td>10</td><td>per centimeter (cm)</td><td>1000 (1 m = 100 cm)</td></tr><tr><td></td><td>per inch (inch)</td><td>393.7 (1 m = 39.37 in)</td></tr><tr><td></td><td>per feet (ft)</td><td>32.8 (1 m = 3.28 ft)</td></tr><tr><td></td><td>per meter (m)</td><td>10</td></tr></table>	If swTwistCountValue is...	Desired unit is...	Then swTwistCountValuePerMeter is...	10	per centimeter (cm)	1000 (1 m = 100 cm)		per inch (inch)	393.7 (1 m = 39.37 in)		per feet (ft)	32.8 (1 m = 3.28 ft)		per meter (m)	10	Specifies the number of twists per meter for the twisted pairs in an electrical route; see SOLIDWORKS Routing Help for details about twisted pairs
If swTwistCountValue is...	Desired unit is...	Then swTwistCountValuePerMeter is...																
10	per centimeter (cm)	1000 (1 m = 100 cm)																
	per inch (inch)	393.7 (1 m = 39.37 in)																
	per feet (ft)	32.8 (1 m = 3.28 ft)																
	per meter (m)	10																

System Options > 3DEXPERIENCE Integration

This dialog is only available in SOLIDWORKS Design connected to the 3DEXPERIENCE platform.

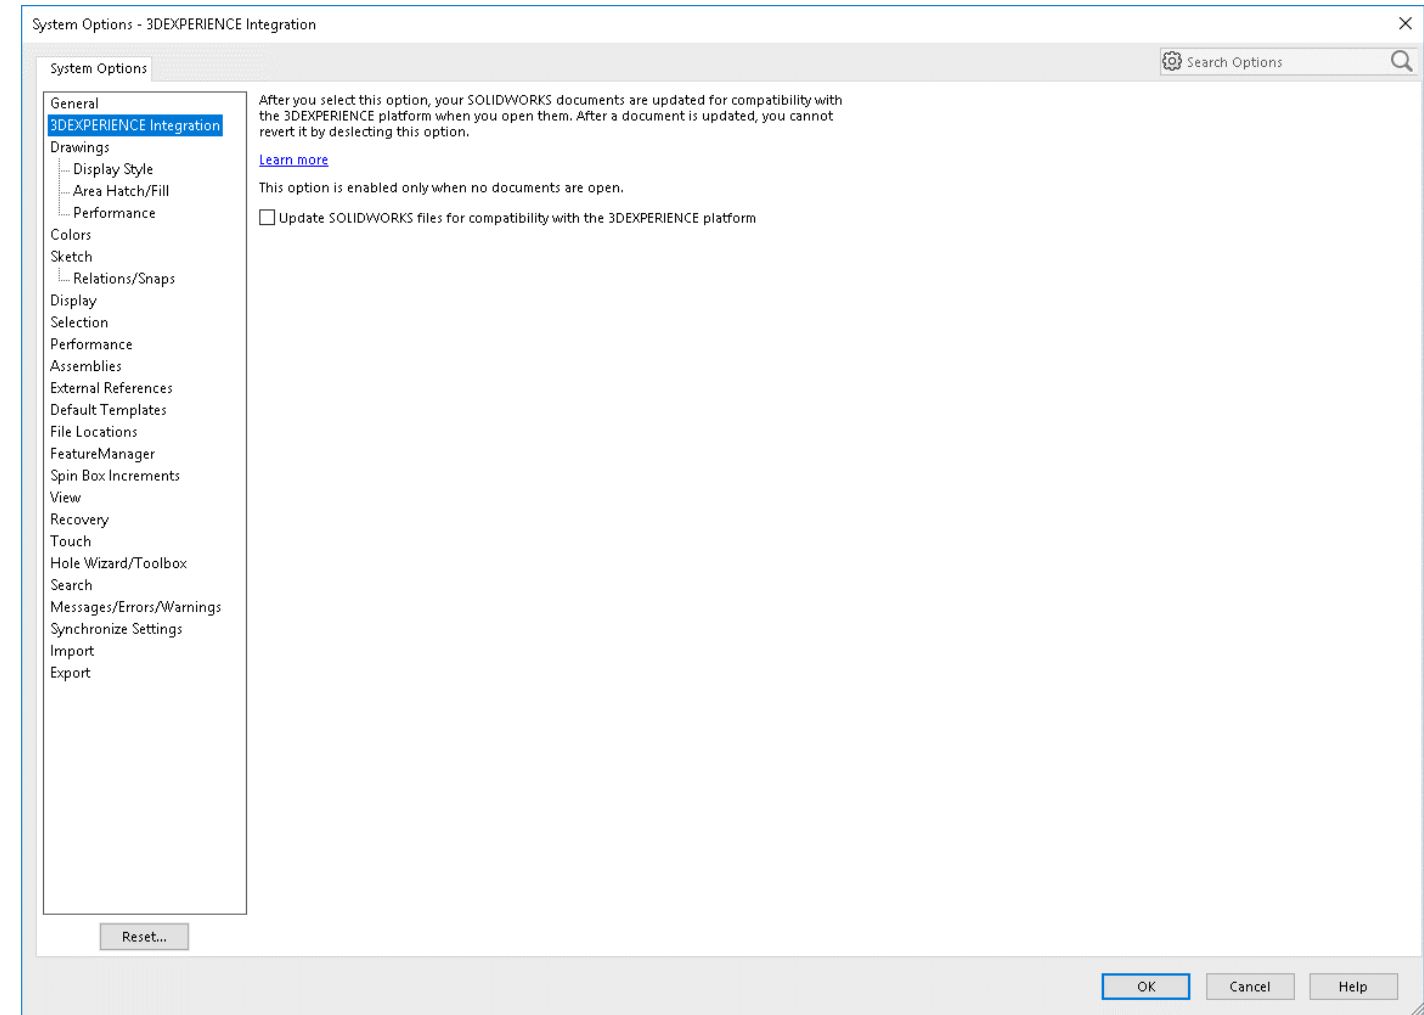


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Update SOLIDWORKS files for compatibility with the 3DEXPERIENCE platform	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEnable3DEXPERIENCEFileCompatibilityUpdate) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEnable3DEXPERIENCEFileCompatibilityUpdate, <OnFlag>)	Boolean value	This option is enabled only when no documents are open

System Options > Assemblies

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

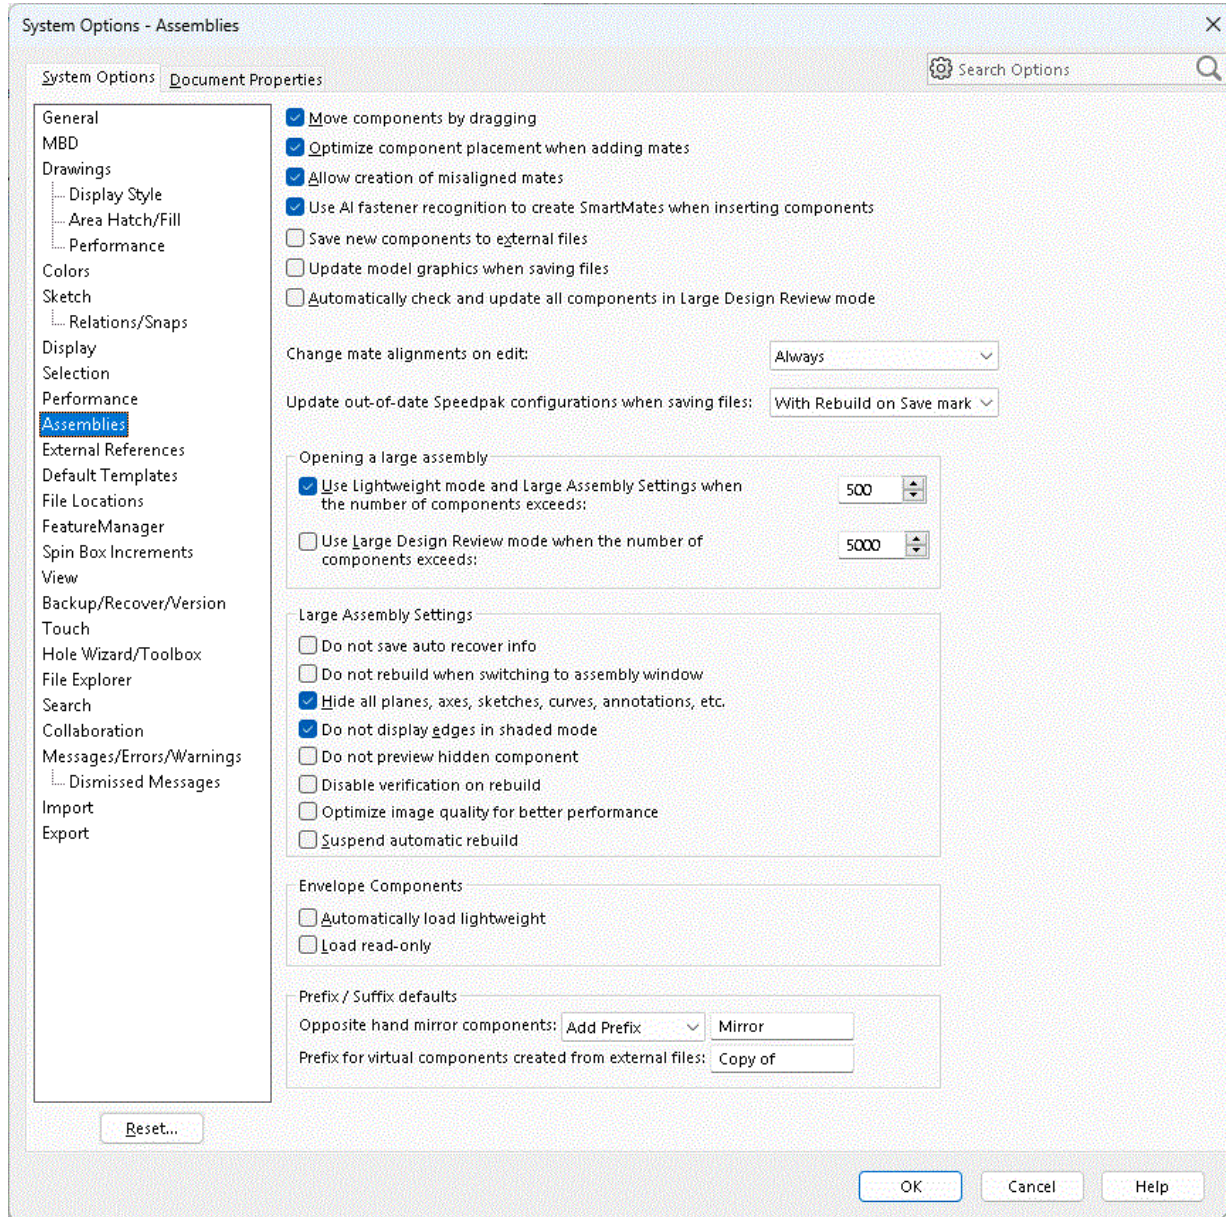

Setting	Get/Set Method	Return Value or <Value> or <OnFlag>	Comment
Move components by dragging	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyAllowComponentMoveByDragging) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyAllowComponentMoveByDragging, <OnFlag>)	Boolean value	Specifies whether to move assembly component the Move with Triad and Move Component tool.
Optimize component placement when adding mates	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swOptimizeMatePlacement) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swOptimizeMatePlacement, <OnFlag>)	Boolean value	
Allow creation of misaligned mates	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyAllowCreationOfMisalignedMates) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyAllowCreationOfMisalignedMates, <OnFlag>)	Boolean value	Specifies whether to allow the creation of misaligned mates.

Use AI fastener recognition to create SmartMates when inserting components	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyEnableCreationOfMatesUsingAI) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyEnableCreationOfMatesUsingAI, <OnFlag>)	Boolean value	
Save new components to external files	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveNewComponentsToExternalFile) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveNewComponentsToExternalFile, <OnFlag>)	Boolean value	Specifies whether to save new components to external files Not supported in SOLIDWORKS Design connect platform
Update model graphics when saving files	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyUpdateModelGraphicsWhenSavingFiles) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyUpdateModelGraphicsWhenSavingFiles, <OnFlag>)	Boolean value	Specifies whether to update model graphics when saving files
Automatically check and update all components in Large Design Review	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAutoCheckUpdateAllComponents) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAutoCheckUpdateAllComponents, <OnFlag>)	Boolean value	Specifies whether to automatically check and update components in Large Design Review
Allow graphics component	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyAllowGraphicsComponent) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAssemblyAllowGraphicsComponent, <OnFlag>)	Boolean value	Valid only if registry setting, "Software\\SolidWorks\\SOLIDWORKS\\version\\is set to true
Change mate alignments on edit	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEnableAutoMateFlip) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEnableAutoMateFlip, <Value>)	0 = Prompt 1 = Always 2 = Never	
Update out-of-date Speedpak configurations when saving files	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swUpdateOutOfDateSpeedPakConfigOnSave) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swUpdateOutOfDateSpeedPakConfigOnSave, swSpeedpakUpdate_e.<Value>)	Integer value as defined in swSpeedpakUpdate_e	Specifies under what conditions to update out-of-date Speedpak configurations when saving files
Opening a large assembly - Use Lightweight mode and Large Assembly Settings when the number of components exceeds: (Not supported in SOLIDWORKS Design connect to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeEnabled) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeEnabled, <OnFlag>) ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeThreshold) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeThreshold, <Value>)	Boolean value Integer value	Specifies whether to activate Large Assembly Mode Specifies the minimum number of components in a Large Assembly Mode
Opening a large assembly - Use Large Design Review mode when the number of components exceeds: (Not supported in SOLIDWORKS Design connect to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeLargeDesignReview) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeLargeDesignReview, <OnFlag>) ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeLargeDesignReviewThreshold) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeLargeDesignReviewThreshold, <Value>)	Boolean value Integer value	Specifies whether to automatically use Large Design Review components in the assembly; see swLargeAsmModeLargeDesignReview Specifies the minimum number of components in a Large Design Review
When Large Assembly Mode is active - Do not save auto recover info	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAutoRecover) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAutoRecover, <OnFlag>)	Boolean value	Specifies whether to automatically save model number of changes
When Large Assembly Mode is active - Do not rebuild when switching to assembly window	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDismissAutoUpdate) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDismissAutoUpdate, <OnFlag>)	Boolean value	Specifies whether to rebuild when switching to assembly window
When Large Assembly Mode is active - Hide all planes, axes, sketches, curves, annotations, etc.	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeHideAllItems) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeHideAllItems, <OnFlag>)	Boolean value	Specifies whether to hide all planes, axes, sketches, curves, annotations, etc.
When Large Assembly Mode is active - Do not display edges in shaded mode	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeUseHLREdgesInShaded) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeUseHLREdgesInShaded, <OnFlag>)	Boolean value	Specifies whether to use HLR edges in shaded mode
When Large Assembly Mode is active - Do not preview hidden component	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModePreviewHiddenComponent) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModePreviewHiddenComponent, <OnFlag>)	Boolean value	Specifies whether to not preview hidden components
When Large Assembly Mode is active - Disable verification on rebuild	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeVerificationOnRebuild) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeVerificationOnRebuild, <OnFlag>)	Boolean value	Specifies whether to disable verification on rebuild
When Large Assembly Mode is active - Optimize image quality for better performance	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeImageQualityPerformance) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeImageQualityPerformance, <OnFlag>)	Boolean value	Specifies whether to optimize image quality for better performance

When Large Assembly Mode is active - Suspend automatic rebuild	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeSuspendAutoRebuild) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeSuspendAutoRebuild, <OnFlag>)	Boolean value	Specifies whether to suspend automatic rebuild
Envelope Components - Automatically load lightweight	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLoadEnvelopeLightweight) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLoadEnvelopeLightweight, <OnFlag>)	Boolean value	Specifies whether to automatically load envelope mode
Envelope Components - Load read-only	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLoadEnvelopeReadOnly) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLoadEnvelopeReadOnly, <OnFlag>)	Boolean value	Specifies whether to load envelope component
Prefix/Suffix defaults - Opposite hand mirror components:	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swOppHandMirrorComp) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swOppHandMirrorComp, <Value>)	Integer value: Prefix = 0 Suffix = 1	
Prefix/Suffix defaults - prefix or suffix text	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swOppPrefixSuffixText) ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swOppPrefixSuffixText, <Value>)	String value	Value is prefix or suffix text, depending on value defaults - Opposite hand mirror components:
Prefix/Suffix defaults - Prefix for virtual components created from external files:	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swVirtualComponentPrefixedit) ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swVirtualComponentPrefixedit, <Value>)	String value	


Obsolete Enumerators

Enumerator	Comment
swPromptForAutoMateFlip	Obsolete
swLargeAsmModeAutoActivate	Obsolete

System Options > Backup/Recover

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

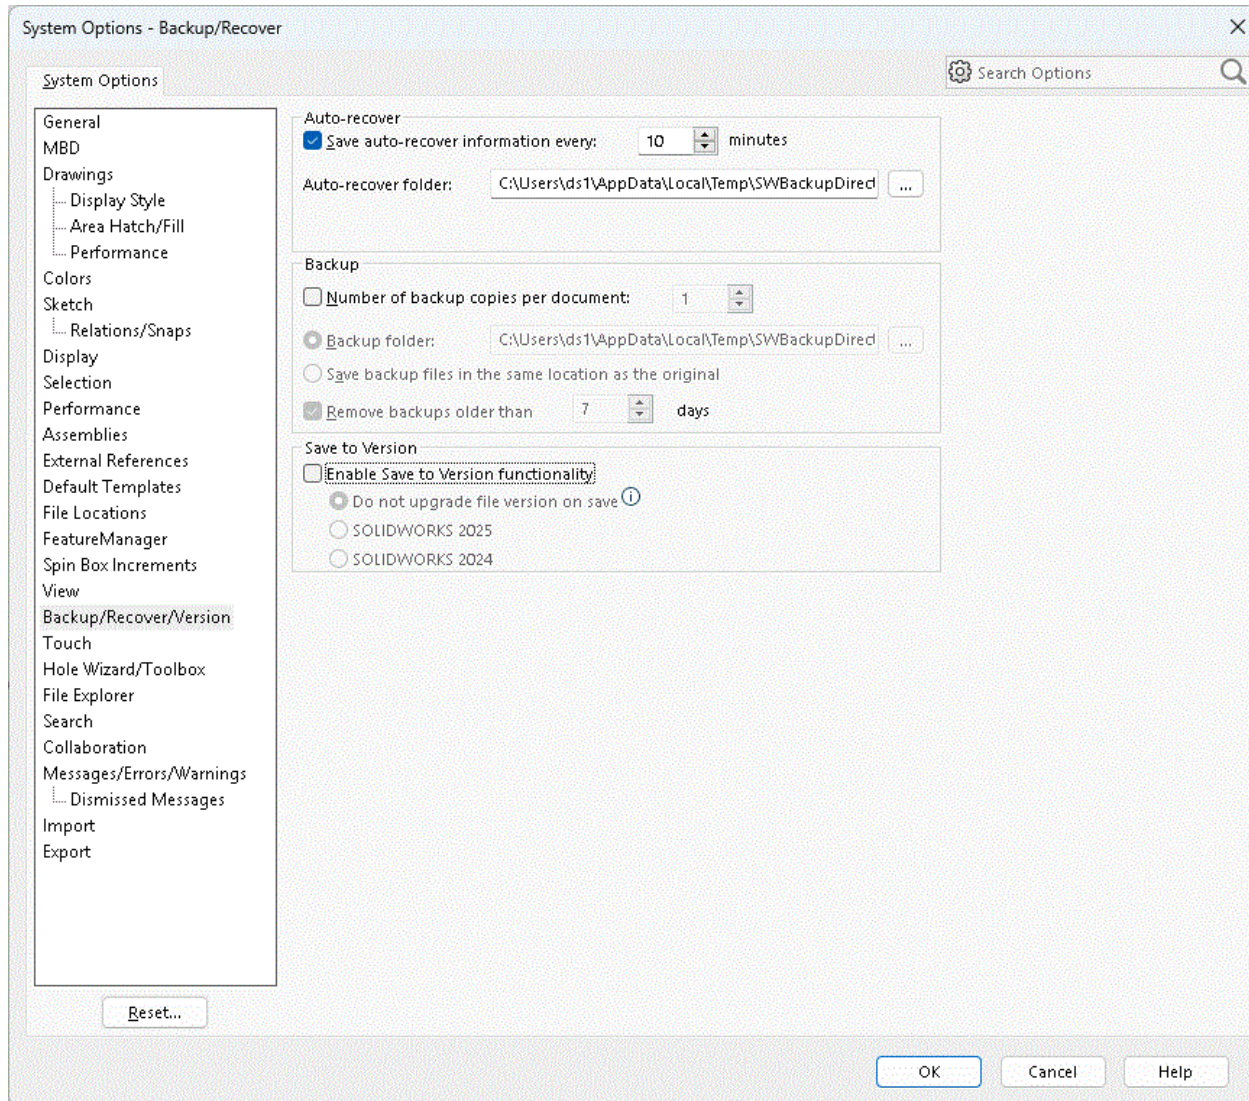

Setting	Get/Set Methods	Return value or <Value> or <OnFlag>	Comment
Auto-recover - Save auto-recover info every	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSaveEnable) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSaveEnable, <OnFlag>)	Boolean value	Specifies whether auto-recovery is enabled
Auto-recover - Save auto-recover info every - <n>	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAutoSaveInterval) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAutoSaveInterval, <Value>)	Integer value: • 0 = Turn off auto-recovery • non-0 = number of operations between auto-recoveries, up to 120	
Auto-recover - Save auto-recover info every - <units>	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAutoSaveIntervalMode) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAutoSaveIntervalMode, swAutoSaveIntervalMode_e.<Value>)	See swAutoSaveIntervalMode_e for valid options	Specifies auto-recover mode
Auto-recover - Auto-recover folder	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swAutoSaveDirectory) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swAutoSaveDirectory, <Value>)	String value	
Backup - Number of backup copies per document (Not supported in SOLIDWORKS Design connected to the	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBackupEnable) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBackupEnable, <OnFlag>)	Boolean value	Specifies whether backup copies of the document are created before any changes to the document are made

3DEXPERIENCE platform)			
Backup - Number of backup copies per document - <n> (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBackupCopiesPerDocument) ISldWorks::SetUserPreferenceIntegerString Value_e.swBackupCopiesPerDocument, <Value>)	Integer value: 1 - 10	Specifies number of backup copies per document
Backup - Backup folder Backup - Save backup files in the same location as the original (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveBackupFilesInSameLocationAsOriginal) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveBackupFilesInSameLocationAsOriginal, <OnFlag>)	Boolean value: - True: Specifies to save backup files in same location as original file - False: Specifies to save backup files in the folder specified in Backup folder	
Backup - Backup folder - <folder> (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swBackupDirectory) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swBackupDirectory, <Value>)	String value	Specifies the folder where to save backup files
Backup - Remove backups older (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBackupRemoveEnable) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBackupRemoveEnable, <OnFlag>)	Boolean value	Specifies whether backup documents older than the specified days are removed when you start up SOLIDWORKS
Backup - Remove backups older than <n> days (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBackupRemoveInterval) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBackupRemoveInterval, <Value>)	Integer value: 1 - 30	Specifies the number of days when to remove backup copies of a document
Enable Save to Version functionality	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableSaveToVersion) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableSaveToVersion, <OnFlag>)	Boolean value	Specifies whether a previous file format version should be used when saving SOLIDWORKS documents.
Backup - Remove backups older than <n> days	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSaveToVersion) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSaveToVersion, <Value>)	See swSaveToVersion_e for valid options	Specifies which file format version to be used when saving SOLIDWORKS documents.

Obsolete Enumerators


Enumerator	Comment
swBackupAfterMeshOrRunSimulationStudy	Obsolete

System Options > Collaboration

This topic contains two tables. The information in the table:

- appearing immediately after the dialog corresponds to the settings on that dialog.
- titled **Obsolete Enumerators** contains enumerators that previously appeared on the dialog but are now obsolete or have been moved to another location.

The Collaboration settings are not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform.

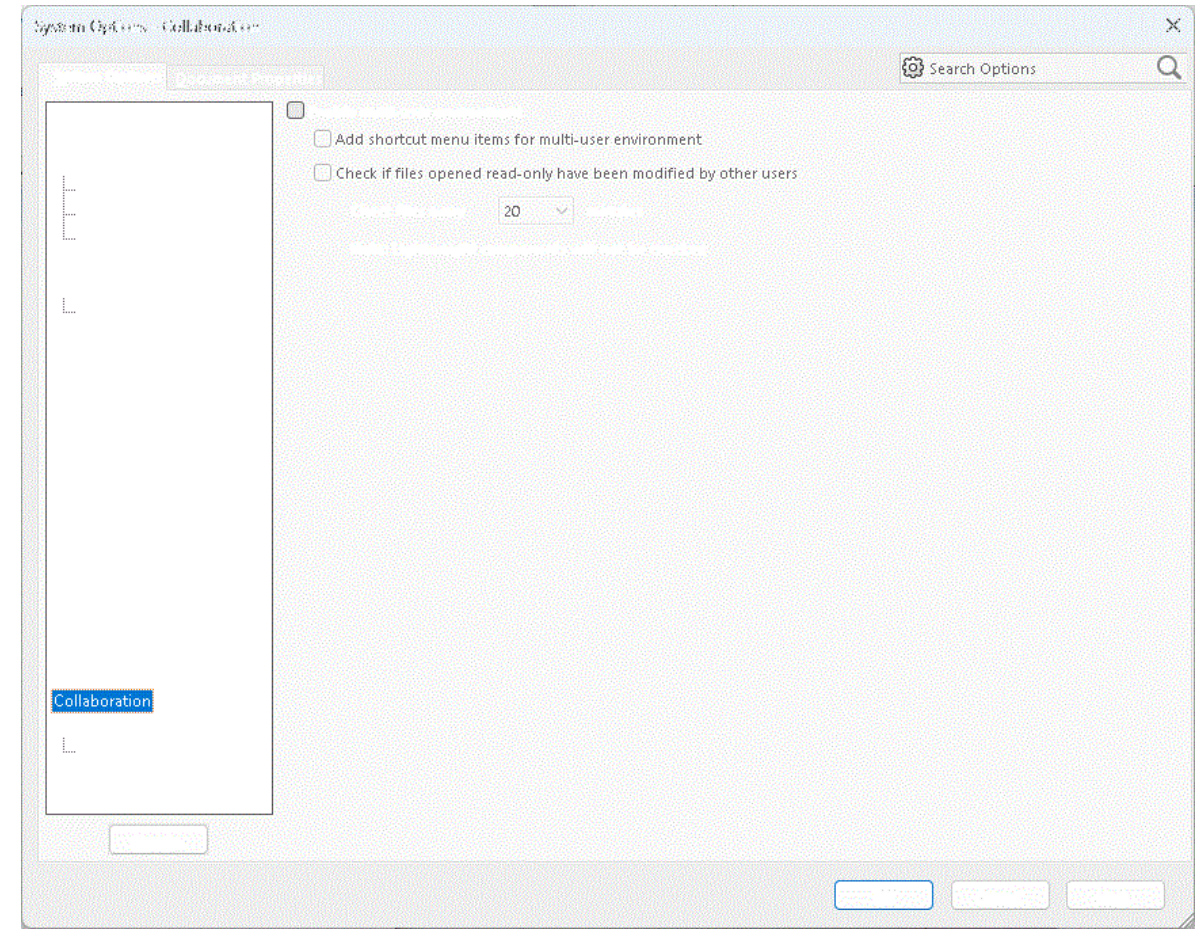

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	
Enable multi-user environment	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabEnableMultiuser) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabEnableMultiuser, <OnFlag>)	Boolean value	Specifies whether to enable m
Add shortcut menu items for multi-user environment	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabAddShortcutMenuItems) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabAddShortcutMenuItems, <OnFlag>)	Boolean value	Specifies whether to add short
Check if files opened read-only have been modified by other users	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabCheckReadOnlyModifiedByOthers) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabCheckReadOnlyModifiedByOthers, <OnFlag>)	Boolean value	Specifies whether to check if fil others; works with swUserPreferenceIntegerValue
Check files every <n> minutes	ISldWorks::GetUserPreferenceIntegerValue (wUserPreferenceIntegerValue_e.swCollabCheckReadOnlyModifiedInterval) ISldWorks::SetUserPreferenceIntegerValue (wUserPreferenceIntegerValue_e.swCollabCheckReadOnlyModifiedInterval, swCollabCheckReadOnlyModifiedInterval_e.<Value>)	See swCollabCheckReadOnlyModifiedInterval_e for valid options	Works with swUserPreferenceToggle_e.sw

Enumerator	Comment
swCollabAddTimeStampToComments	Moved to Tools > Options > FeatureManager


swCollabShowCommentsInPropertyManager

Moved to **Tools > Options > FeatureManager**

System Options > Colors

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

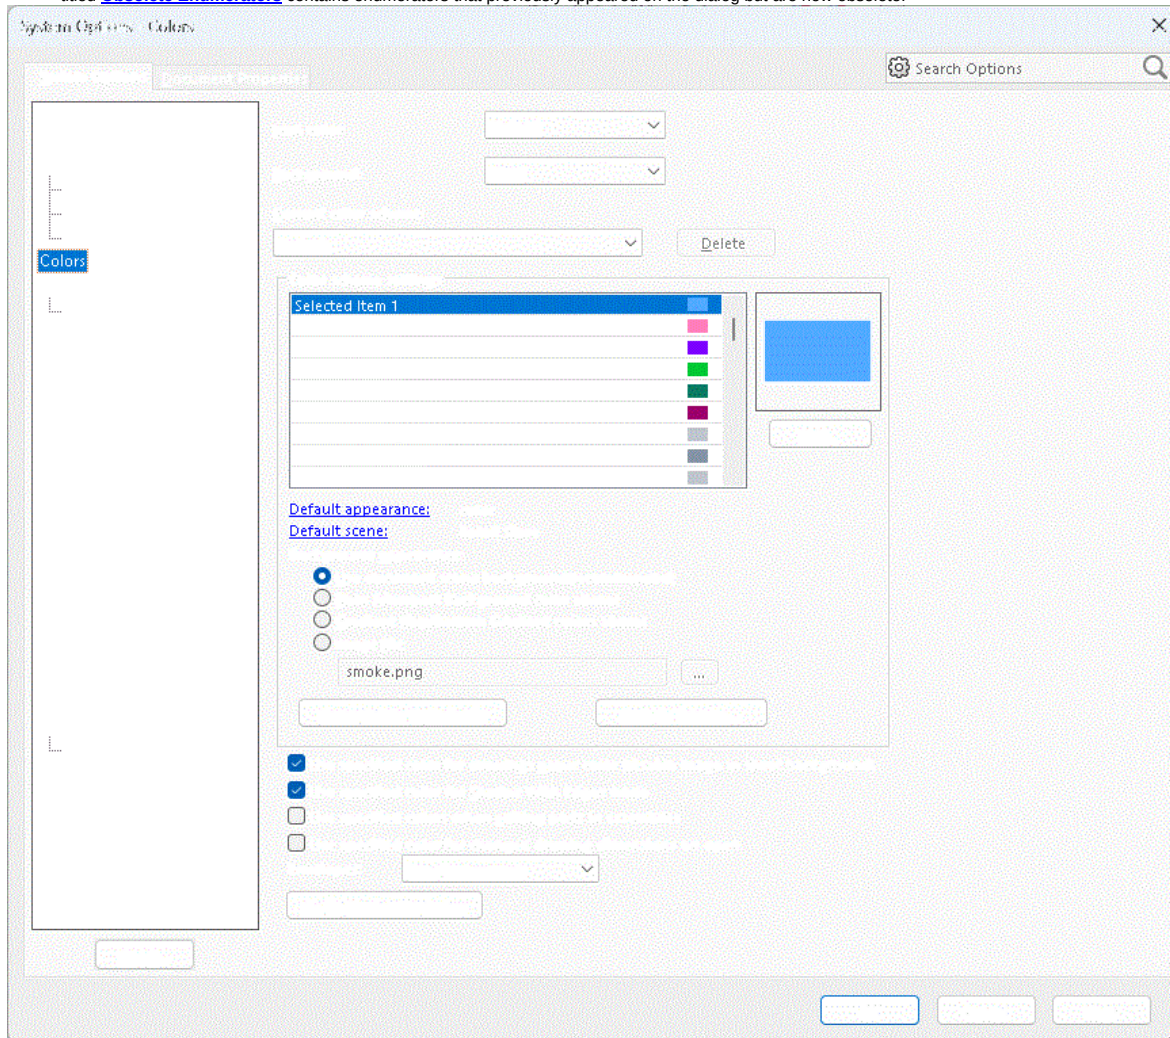

NOTE: The input or output value is the corresponding [IColorTable](#) value unless otherwise specified.

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Icon color (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsIconColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsIconColor, swSystemColorsIconColor_e.<Value>)	See swSystemColorsIconColor_e for valid options	
Background	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsBackground) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsBackground, swInterfaceBrightnessTheme_e.<Value>)	See swInterfaceBrightnessTheme_e for valid options	
Current color scheme	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsCurrentColorScheme) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsCurrentColorScheme, swSystemColorsCurrentColorScheme_e.<Value>)	See swSystemColorsCurrentColorScheme_e for valid options	
Color scheme settings - Viewport Background	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsViewportBackground) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsViewportBackground, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Top Gradient Color	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsTopGradientColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsTopGradientColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable

[illegible]


Temporary Graphics, Shaded	ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsTemporaryGraphicsShaded, <Value>)		SOLIDWORKS IColorTable
Color scheme settings - Temporary Graphics - Add Material	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTempGraphicsAddMaterialColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTempGraphicsAddMaterialColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Temporary Graphics - Remove Material	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTempGraphicsRemoveMaterialColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTempGraphicsRemoveMaterialColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Sheet Metal Temporary Graphics color	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSheetMetalTemporaryGraphics) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSheetMetalTemporaryGraphics, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Surfaces, Open Edges	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSurfacesOpenEdge) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSurfacesOpenEdge, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Edges in Shaded With Edges Mode	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsShadedEdge) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsShadedEdge, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - FeatureManager Design Tree Text	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsTreeItemNormal) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsTreeItemNormal, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Flyout FeatureManager Design Tree Text	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swGraphicsTreeItemNormalColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swGraphicsTreeItemNormalColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Annotations, Imported	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsImportedAnnotation) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsImportedAnnotation, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Annotations, Non Imported	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsNonImportedAnnotation) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsNonImportedAnnotation, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Assembly Interference Volume	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsAsmInterferenceVolume) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsAsmInterferenceVolume, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Hidden Edge Selection Show Color	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsHiddenEdgeSelectionShow) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsHiddenEdgeSelectionShow, <Value>)	Integer value	Read-only COLORREF value in SOLIDWORKS IColorTable ; although it appears that you have set it, the SOLIDWORKS Design software ignores your setting
Color scheme settings - Mate Callout, Healthy	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsMateCalloutHealthy) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsMateCalloutHealthy, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Mate Callout, Warning	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsMateCalloutWarning) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsMateCalloutWarning, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings -Mate Callout, Error	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsMateCalloutError) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsMateCalloutError, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Envelope Components	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEnvelopeComponentColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEnvelopeComponentColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Assembly Visualization First	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor1) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor1, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Assembly Visualization Second	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor2) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor2, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Assembly Visualization Third	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor3) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor3, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Assembly Visualization Fourth	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor4) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor4, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Assembly Visualization Fifth	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor5) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor5, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings -	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor6)	Integer value	COLORREF value in

Assembly Visualization Sixth	ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyVisualizationComponentColor6, <Value>)		SOLIDWORKS IColorTable
Color scheme settings - Manipulator connection point color	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swManipConnectionPointColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swManipConnectionPointColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Annotations, DimXpert	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSwiftAnnotations) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSwiftAnnotations, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - DimXpert, Under Constrained	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSwiftUnderConstrained) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSwiftUnderConstrained, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - DimXpert, Fully Constrained	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSwiftFullyConstrained) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSwiftFullyConstrained, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - DimXpert, Over Constrained	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSwiftOverConstrained) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsSwiftOverConstrained, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Annotations, TolAnalyst Dimension	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsToleranceAnalysisDim) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsToleranceAnalysisDim, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Zone row/column lines	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swZoneLineColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swZoneLineColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Recognized mesh face	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRecognizedMeshFaceColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRecognizedMeshFaceColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Unrecognized mesh face	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swUnrecognizedMeshFaceColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swUnrecognizedMeshFaceColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Dynamic Reference Visualization (Parent)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRefVisualizationParentColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRefVisualizationParentColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Dynamic Reference Visualization (Child)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRefVisualizationChildrenColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRefVisualizationChildrenColor, <Value>)	Integer value	COLORREF value in SOLIDWORKS IColorTable
Color scheme settings - Background appearance: Use document scene background	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swColorsBackgroundAppearance) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swColorsBackgroundAppearance, swColorsBackgroundAppearance_e.swColorsBackgroundAppearance_DocumentScene)	See swColorsBackgroundAppearance_e for valid options	
Color scheme settings - Background appearance: Plain (Viewport Background color above)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swColorsBackgroundAppearance) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swColorsBackgroundAppearance, swColorsBackgroundAppearance_e.swColorsBackgroundAppearance_Plain)	See swColorsBackgroundAppearance_e for valid options	
Color scheme settings - Background appearance: Gradient (Top/Bottom Gradient colors above)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swColorsBackgroundAppearance) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swColorsBackgroundAppearance, swColorsBackgroundAppearance_e.swColorsBackgroundAppearance_Gradient)	See swColorsBackgroundAppearance_e for valid options	
Color scheme settings - Background appearance: Image File	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swColorsBackgroundAppearance) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swColorsBackgroundAppearance, swColorsBackgroundAppearance_e.swColorsBackgroundAppearance_Image) and ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swColorsBackgroundImageFile) ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swColorsBackgroundImageFile, <Value>)	Integer value: See swColorsBackgroundAppearance_e for valid options String value: Path and file name of the file to use as the background for the SOLIDWORKS graphics window NOTE: If you omit the path, then the default image folder in the SOLIDWORKS install folder is assumed: \\data\\images\\textures\\background You can also use ISldWorks::GetDataFolder to get the data folder	
Use specified color for drawings paper color	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetBackgroundAsPicture) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSheetBackgroundAsPicture, <OnFlag>)	Boolean value	

Use specified color for Shaded With Edges mode	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swColorsUseShadedEdgeColor) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swColorsUseShadedEdgeColor, <OnFlag>)	Boolean value	Specifies whether to use specified colors for Shaded With Edges mode
Use specified colors when editing parts in assemblies	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swColorsUseSpecifiedEditColors) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swColorsUseSpecifiedEditColors, <OnFlag>)	Boolean value	Specifies whether to use specified colors when editing assemblies
Use specified color for changed drawing dimensions on open	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseChangedDimensions) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseChangedDimensions, <OnFlag>)	Boolean value	Specifies whether to highlight changed dimensions in a specified color after a drawing document is opened
Envelopes	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsEnvelopes) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsEnvelopes, swSystemColorsEnvelopes_e.<Value>)	See swSystemColorsEnvelopes_e for valid options	

Obsolete Enumerators

Enumerator	Comment
swColorsGradientPartBackground	Obsolete; used swColorsBackgroundAppearance_e
swColorsMatchViewAndFeatureManagerBackground	Obsolete
swSystemColorsDrawingsPaperBorder	Obsolete
swSystemColorsDrawingsPaperShadow	Obsolete
swSystemColorsPropertyManagerColor	Obsolete; used swPropertyManagerColorScheme_e
swSystemColorsRefTriadX	Obsolete
swSystemColorsRefTriadY	Obsolete
swSystemColorsRefTriadZ	Obsolete
swSystemColorsTreeItemSelected	Obsolete

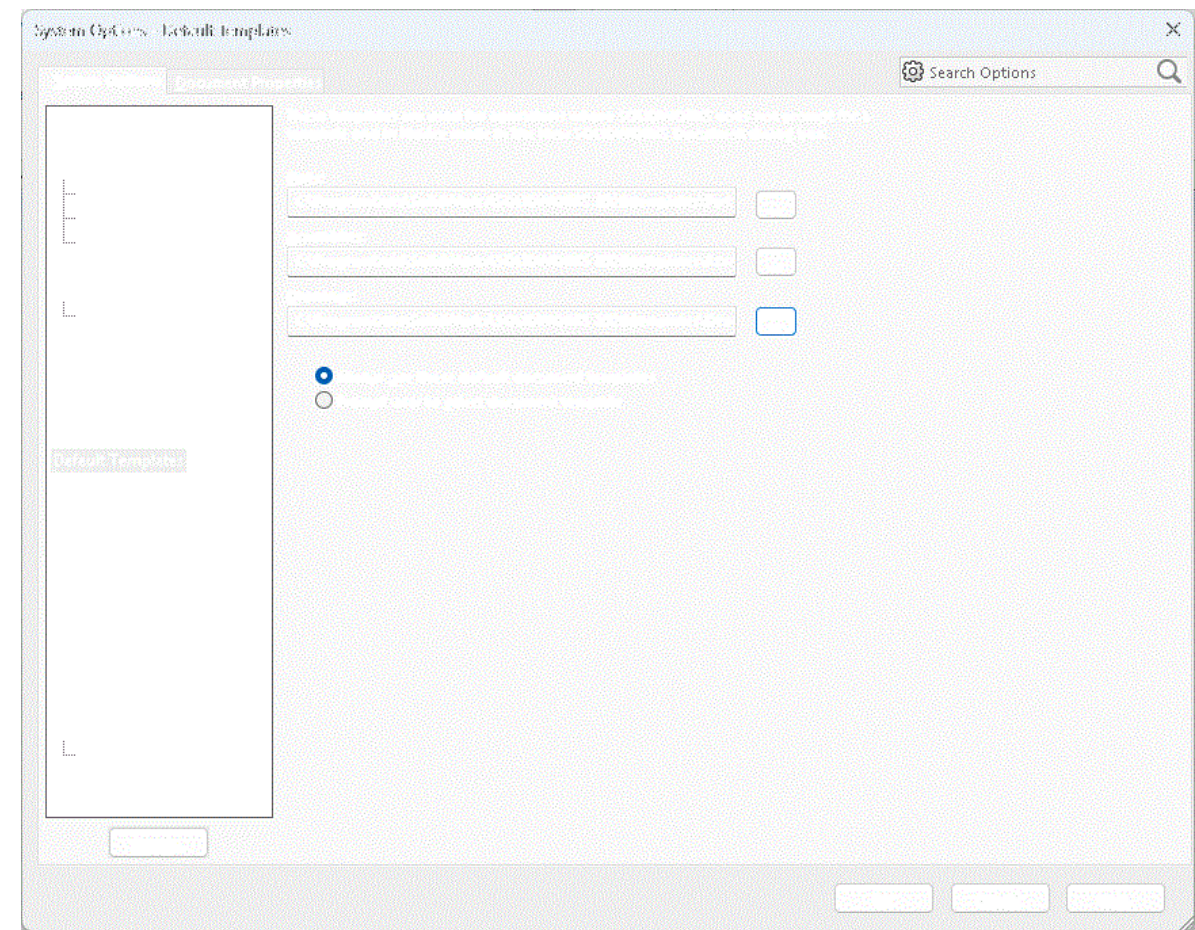


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Parts	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swDefaultTemplatePart) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swDefaultTemplatePart, <Value>)	String value	
Assemblies	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swDefaultTemplateAssembly) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swDefaultTemplateAssembly, <Value>)	String value	
Drawings	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swDefaultTemplateDrawing) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swDefaultTemplateDrawing, <Value>)	String value	
Always use these default document templates	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAlwaysUseDefaultTemplates) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAlwaysUseDefaultTemplates, <OnFlag>)	True	Specifies whether to use default template or prompt for name of template
Prompt user to select document template	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAlwaysUseDefaultTemplates) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAlwaysUseDefaultTemplates, <OnFlag>)	False	Specifies whether to prompt for name of template

System Options > Display

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

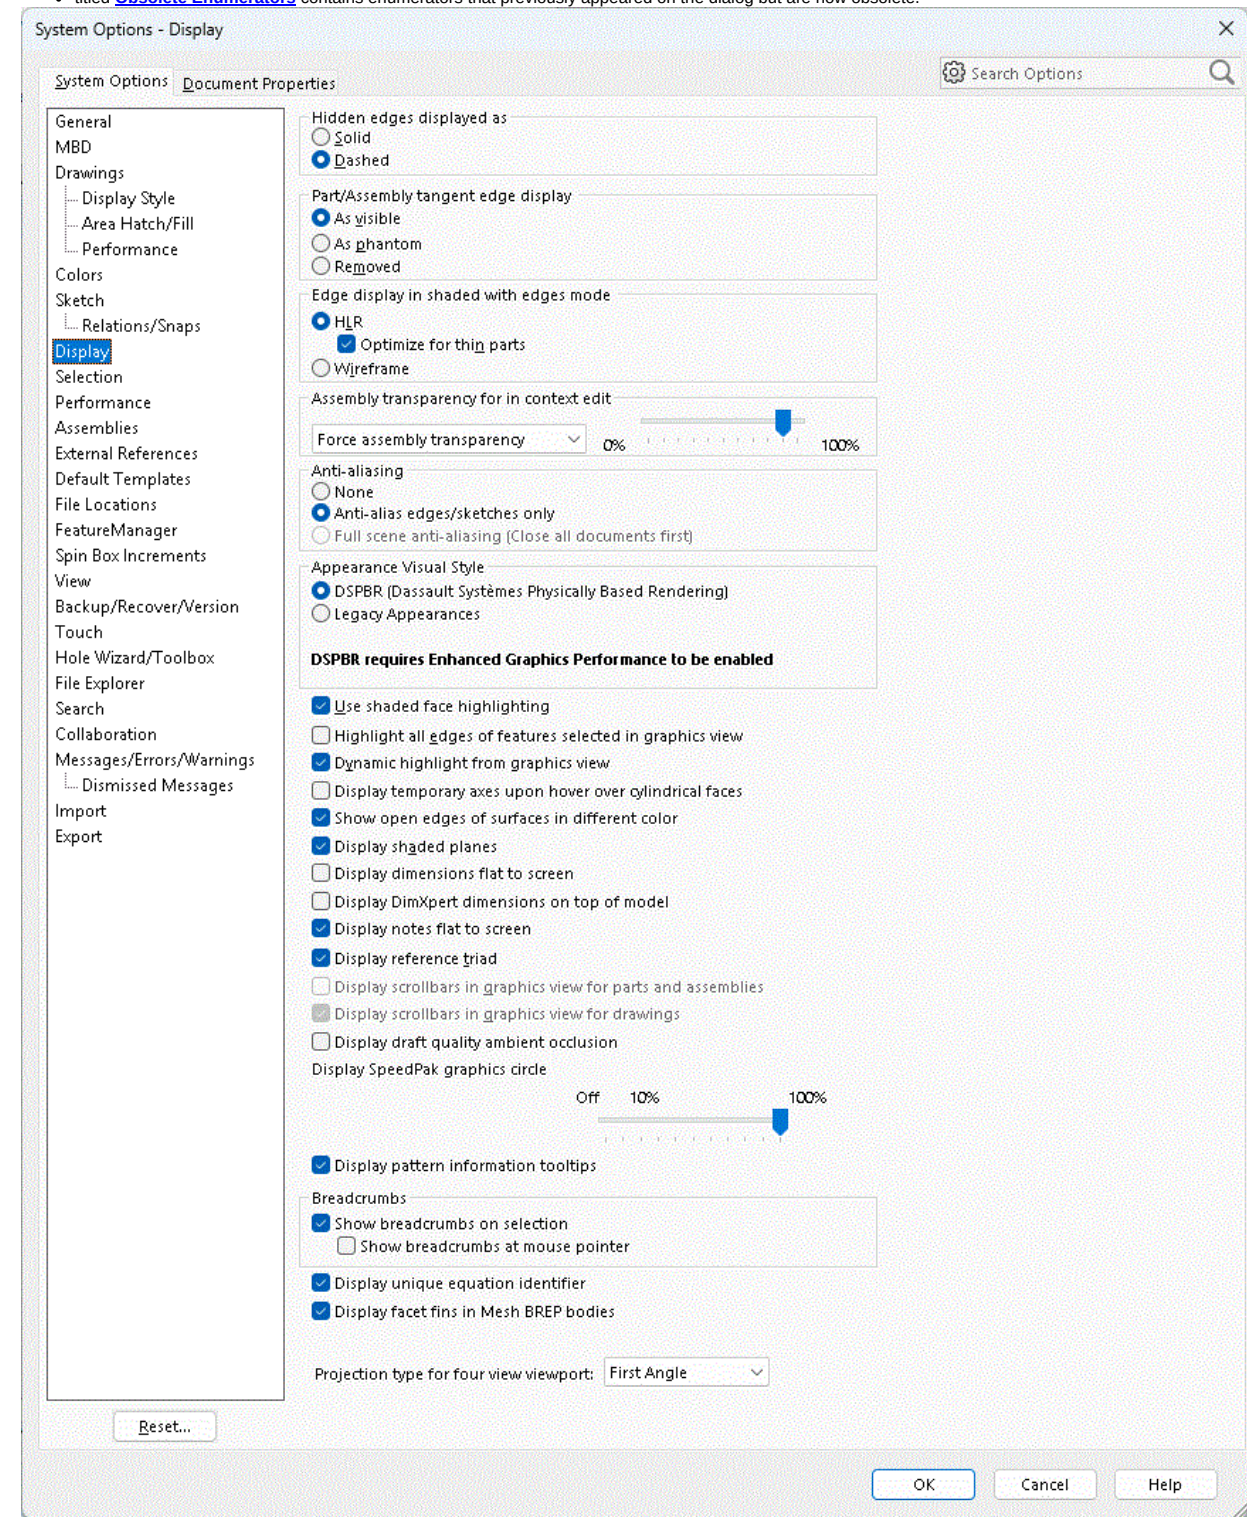

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>
---------	-----------------	---

Hidden edges displayed as - Solid	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesHiddenEdgeDisplay) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesHiddenEdgeDisplay, swEdgesHiddenEdgeDisplay_e.swEdgesHiddenEdgeDisplaySolid)	swEdgesHiddenEdgeDisplay_e .swEdgesHiddenEdgeDisplaySolid
Hidden edges displayed as - Dashed	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesHiddenEdgeDisplay) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesHiddenEdgeDisplay, swEdgesHiddenEdgeDisplay_e.swEdgesHiddenEdgeDisplayDashed)	swEdgesHiddenEdgeDisplay_e .swEdgesHiddenEdgeDisplayDashed
Part/Assembly tangent edge display - As visible	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesTangentEdgeDisplay) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesTangentEdgeDisplay, swEdgesTangentEdgeDisplay_e.swEdgesTangentEdgeDisplayVisible)	swEdgesTangentEdgeDisplay_e .swEdgesTangentEdgeDisplayVisible
Part/Assembly tangent edge display - As phantom	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesTangentEdgeDisplay) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesTangentEdgeDisplay, swEdgesTangentEdgeDisplay_e.swEdgesTangentEdgeDisplayPhantom)	swEdgesTangentEdgeDisplay_e .swEdgesTangentEdgeDisplayPhantom
Part/Assembly tangent edge display - Removed	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesTangentEdgeDisplay) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesTangentEdgeDisplay, swEdgesTangentEdgeDisplay_e.swEdgesTangentEdgeDisplayRemoved)	swEdgesTangentEdgeDisplay_e .swEdgesTangentEdgeDisplayRemoved
Edge display in shaded with edges mode - HLR	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesShadedModeDisplay) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesShadedModeDisplay, swEdgesShadedModeDisplay_e.swEdgesShadedModeDisplayHLR)	swEdgesShadedModeDisplay_e .swEdgesShadedModeDisplayHLR
Edge display in shaded with edges mode - HLR - Optimize for thin parts	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesShadedModeDisplayOptimizeForThinParts) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesShadedModeDisplayOptimizeForThinParts, <OnFlag>)	Boolean value
Edge display in shaded with edges mode - Wireframe	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesShadedModeDisplay) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesShadedModeDisplay, swEdgesShadedModeDisplay_e.swEdgesShadedModeDisplayWireframe)	swEdgesShadedModeDisplay_e .swEdgesShadedModeDisplayWireframe
Assembly transparency for in context edit - <selection box>	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesInContextEditTransparencyType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesInContextEditTransparencyType, swInContextEditTransparencyType_e.<Value>)	See swInContextEditTransparencyType_e for valid options
Assembly transparency for in context edit - <slider>	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesInContextEditTransparency) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swEdgesInContextEditTransparency, <Value>)	Integer value between 0 and 100 indicating transparency
Anti-aliasing	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemOptionDisplayAntiAliasing) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemOptionDisplayAntiAliasing, <Value>)	See swSystemOptionDisplayAntiAliasing_e for valid options
Appearance Visual Style - DSPBR or Legacy Appearances	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDspbrAppearances) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDspbrAppearances, <OnFlag>)	Boolean value
Use shaded face highlighting	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseShadedFaceHighlight) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseShadedFaceHighlight, <OnFlag>)	Boolean value
Highlight all edges of features selected in graphics view	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesHighlightFeatureEdges) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesHighlightFeatureEdges, <OnFlag>)	Boolean value
Dynamic highlight from graphics view	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesDynamicHighlight) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesDynamicHighlight, <OnFlag>)	Boolean value
Display temporary axes upon hover over cylindrical faces	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayTempAxesOnMouseHover) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayTempAxesOnMouseHover, <OnFlag>)	Boolean value
Show open edges of surfaces in different color	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesOpenEdgesDifferentColor) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesOpenEdgesDifferentColor, <OnFlag>)	Boolean value

Display shaded planes	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesDisplayShadedPlanes) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesDisplayShadedPlanes, <OnFlag>)	Boolean value
Display dimensions flat to screen	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDimensionsFlatToScreen) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDimensionsFlatToScreen, <OnFlag>)	Boolean value
Display DimXpert dimensions on top of model	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDispDimXpertDimOnTopOfModel) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDispDimXpertDimOnTopOfModel, <OnFlag>)	Boolean value
Display notes flat to screen	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayNotesFlatToScreen) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayNotesFlatToScreen, <OnFlag>)	Boolean value
Display reference triad	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayReferenceTriad) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayReferenceTriad, <OnFlag>)	Boolean value
Display scrollbars in graphics view for parts and assemblies	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayScrollbarsInGraphicsViewPartsAndAssemblies) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayScrollbarsInGraphicsViewPartsAndAssemblies, <OnFlag>)	Boolean value
Display scrollbars in graphics view for drawings	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayScrollbarsInGraphicsViewDrawings) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayScrollbarsInGraphicsViewDrawings, <OnFlag>)	Boolean value
Display draft quality ambient occlusion	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDraftQualityAmbientOcclusion) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDraftQualityAmbientOcclusion, <OnFlag>)	Boolean value
Display Speedpak graphics circle	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplaySpeedpakGraphicsCircle) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplaySpeedpakGraphicsCircle, <OnFlag>)	Boolean value
Display pattern information tooltips	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayPatternInformationToolTips) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayPatternInformationToolTips, <OnFlag>)	Boolean value
Breadcrumbs - Show breadcrumbs on selection	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowBreadcrumbsOnSelection) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowBreadcrumbsOnSelection, <OnFlag>)	Boolean value
Breadcrumbs - Show breadcrumbs at mouse pointer	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowBreadcrumbsAtMousePointer) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowBreadcrumbsAtMousePointer, <OnFlag>)	Boolean value
Display facet fins in Mesh BREP bodies	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayMeshBREPFacetFins) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayMeshBREPFacetFins, <OnFlag>)	Boolean value


Obsolete Enumerators

Enumerator	Comment
swDisplayEquationIds	Obsolete
swFourViewportProjectionType	Obsolete
swDisplayGraphicsComponents	Obsolete
swDisplayReferenceGeometryForXYZOrientation	Obsolete
swEdgesAntiAlias	Obsolete
swEdgesHighQualityDisplay	Obsolete
swEdgesRepaintAfterSelectionInHLR	Obsolete

System Options > Drawings

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

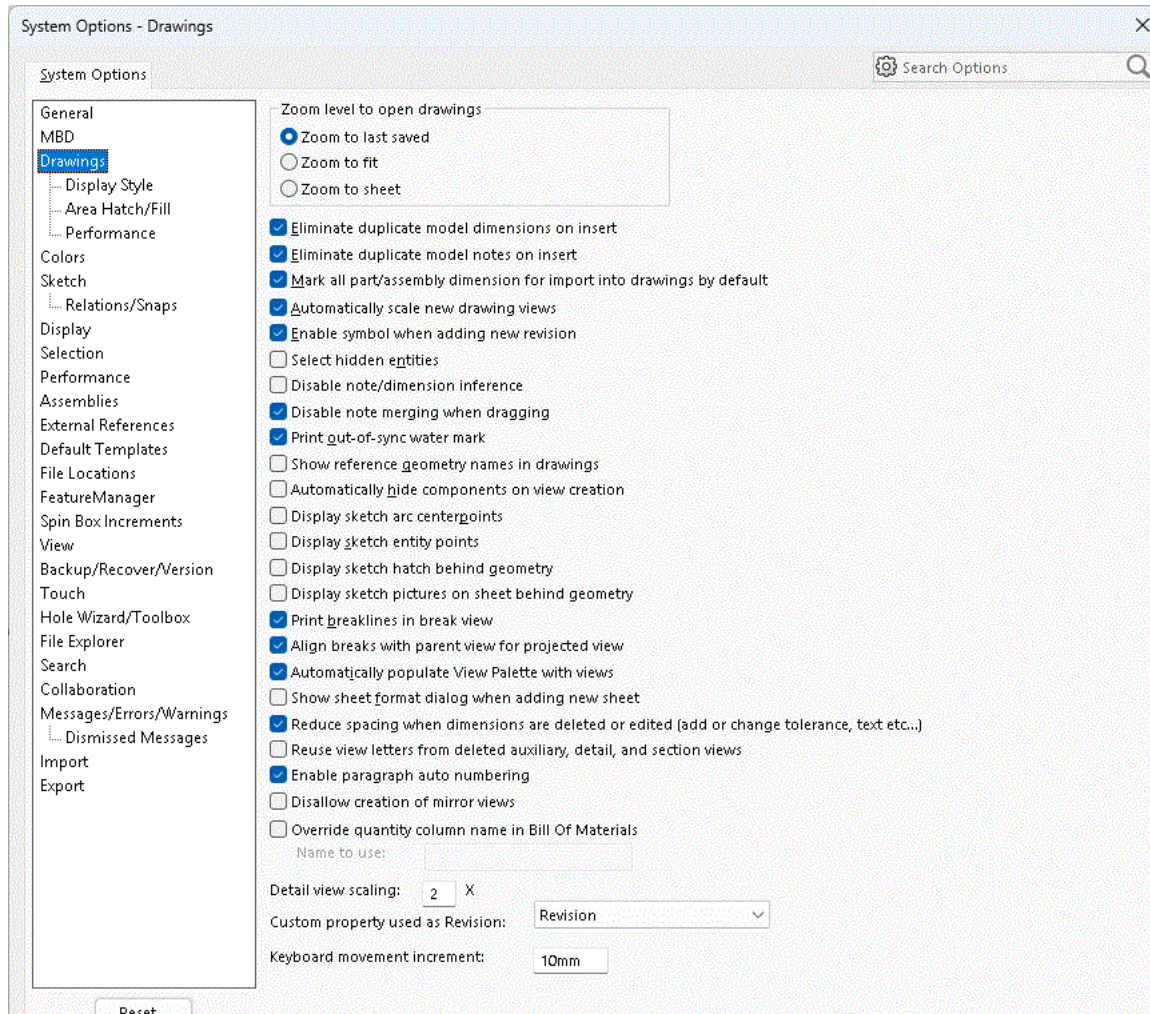

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Zoom level to open drawings	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swZoomLevelOnOpen) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swZoomLevelOnOpen, swZoomLevelOnOpenType_e.<Value>)	See swZoomLevelOnOpenType_e for valid options	
Eliminate duplicate model dimensions on insert	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingEliminateDuplicateDimsOnInsert) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingEliminateDuplicateDimsOnInsert, <OnFlag>)	Boolean value	Specifies whether duplicate dimensions are eliminated when model dimensions inserted
Eliminate duplicate model notes on insert	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingEliminateDuplicateModelNotesOnInsert) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingEliminateDuplicateModelNotesOnInsert, <OnFlag>)	Boolean value	Specifies whether to eliminate duplicate notes when model notes are inserted in a drawing
Mark all part/assembly dimension for import into drawings by default	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingMarkAllDimensionsForDrawing) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingMarkAllDimensionsForDrawing, <OnFlag>)	Boolean value	Specifies whether to mark all part and assembly dimensions for import into drawings by default
Automatically scale new drawing views	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticScaling3ViewDrawings) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticScaling3ViewDrawings, <OnFlag>)	Boolean value	Specifies whether new views are scaled to fit drawing sheet, regardless of selected paper size
Enable symbol when	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingEnableSymbolAddingNewRevision)	Boolean value	Specifies whether to

adding new revision	ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingEnableSymbolAddingNewRevision, <OnFlag>)		insert revision symbols when a new revision row is added to a revision table
Display new detail circles as circles	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingCreateDetailAsCircle) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingCreateDetailAsCircle, <OnFlag>)	Boolean value	Specifies whether new profiles for detail views are displayed as circles or sketched profiles
Select hidden entities	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSelectHiddenEntities) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSelectHiddenEntities, <OnFlag>)	Boolean value	Specifies whether hidden tangent edges and edges hidden manually can be selected
Disable note/dimension inference	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisableNoteDimensionInference) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisableNoteDimensionInference, <OnFlag>)	Boolean value	Specifies whether to disable note and dimension inferencing in drawings
Disable note merging when dragging	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisableNoteMergeWhenDragging) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisableNoteMergeWhenDragging, <OnFlag>)	Boolean	Specifies whether to merge two notes, or a note and a dimension, when dragged toward each other
Print out-of-sync water mark	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swRapidDraftPrintOutOfSynchWaterMark) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swRapidDraftPrintOutOfSynchWaterMark, <OnFlag>)	Boolean value	Specifies whether to print out-of-synch watermarks on detached drawings printouts if drawings not synchronized with the models
Show reference geometry names in drawings	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowRefGeomName) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowRefGeomName, <OnFlag>)	Boolean value	Specifies whether to show names of reference geometry entities when imported into a drawing
Automatically hide components on view creation	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingViewAutoHideComponents) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingViewAutoHideComponents, <OnFlag>)	Boolean value	Specifies whether any components of assembly not visible in a new drawing view are hidden
Display sketch arc centerpoints	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplayArcCenterPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplayArcCenterPoints, <OnFlag>)	Boolean value	Specifies whether to display arc center points
Display sketch entity points	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplayEntityPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplayEntityPoints, <OnFlag>)	Boolean value	Specifies whether to display sketch entity points
Display sketch hatch behind geometry	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplaySketchHatchBehindGeometry) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplaySketchHatchBehindGeometry, <OnFlag>)	Boolean value	Specifies whether to display sketch hatch behind geometry
Display sketch pictures on sheet behind geometry	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplaySketchPicturesOnSheetBehindGeometry) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplaySketchPicturesOnSheetBehindGeometry, <OnFlag>)	Boolean value	Specifies whether to display sketch pictures behind geometry
Print breaklines in break view	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingPrintBreaklinesInBrokenView) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingPrintBreaklinesInBrokenView, <OnFlag>)	Boolean value	Specifies whether to print breaklines in break views
Align breaks with parent view for projected view	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBreakAlignWithParent) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBreakAlignWithParent, <OnFlag>)	Boolean value	Specifies whether to align break lines of a projected view with its parent view; by default, set to true
Automatically populate View Palette with views	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowDrawingViewPalette) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowDrawingViewPalette, <OnFlag>)	Boolean value	Specifies whether to show View Palette
Show sheet format dialog when adding new sheet	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingShowSheetFormatDialog) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingShowSheetFormatDialog, <OnFlag>)	Boolean value	Specifies whether to show the drawing sheet format dialog when adding new drawing sheets
Reduce spacing when dimensions are deleted or edited (add or change tolerance, text etc...)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingAutoSpaceDimsOnDelete) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingAutoSpaceDimsOnDelete, <OnFlag>)	Boolean value	Specifies whether to adjust spacing when dimensions are deleted or text is removed
Reuse view letters from deleted auxiliary, detail, and section views	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingReuseViewLettersFromDeletedAuxiliary) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingReuseViewLettersFromDeletedAuxiliary, <OnFlag>)	Boolean value	Specifies whether to reuse letters from deleted views (auxiliary, detail, and section) in the drawing
Enable paragraph auto numbering	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swNoteParagraphAutoNumbering) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swNoteParagraphAutoNumbering, <OnFlag>)	Boolean value	Specifies whether to enable Microsoft Word-like auto-numbering behavior in notes; enabled by default
Disallow creation of mirror views	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisallowCreationOfMirrorViews) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisallowCreationOfMirrorViews, <OnFlag>)	Boolean value	Specifies whether to disable the creation of mirror views.
Override quantity column name in Bill Of Materials	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swOverrideQuantityColumnName) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swOverrideQuantityColumnName, <OnFlag>)	Boolean value	Specifies whether to override the quantity column name in Bill of Materials
Name to use	ISldWorks::GetStringValue (swUserPreferenceStringValue_e.swOverriddenQuantityColumnName) ISldWorks::SetStringValue (swUserPreferenceStringValue_e.swOverriddenQuantityColumnName, <Value>)	String value	String for quantity column name in Bill of Materials

Detail view scaling	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDrawingDetailViewScale) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDrawingDetailViewScale, <Value>)	Double value	Specifies value to scale detail views
Custom property used as Revision	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swDrawingCustomPropertyUsedAsRevision) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swDrawingCustomPropertyUsedAsRevision, <Value>)	String value	Specifies custom property for drawing revision
Keyboard movement increment	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDrawingKeyboardMovementIncrement) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.wDrawingKeyboardMovementIncrement, <Value>)	Double value	Specifies the unit value of movement when you use the arrow keys to move (nudge) drawing views, annotations, or dimensions

Obsolete Enumerators

Enumerator	Comment
swDrawingDetailInferCenter	Obsolete ; specified whether borders are displayed around individual drawing views
swDrawingDetailInferCorner	Obsolete ; specified whether when a corner is clicked and detail item dragged, corner can infer to the corners of stationary detail items, and vice versa
swDrawingAutomaticBOMUpdate	Obsolete ; use document-level property swUserPreferenceToggle_e.swDetailingAutoUpdateBOM
swDrawingProjectionType	Obsolete
swNoteZoomToFit	Obsolete; use swZoomLevelOnOpen