


SOLIDWORKS Enumerations (swconst) — Examples (7/8): SO_Drawings- AreaHatchFill-SO_Messages

SOLIDWORKS API Documentation (converted from CHM)

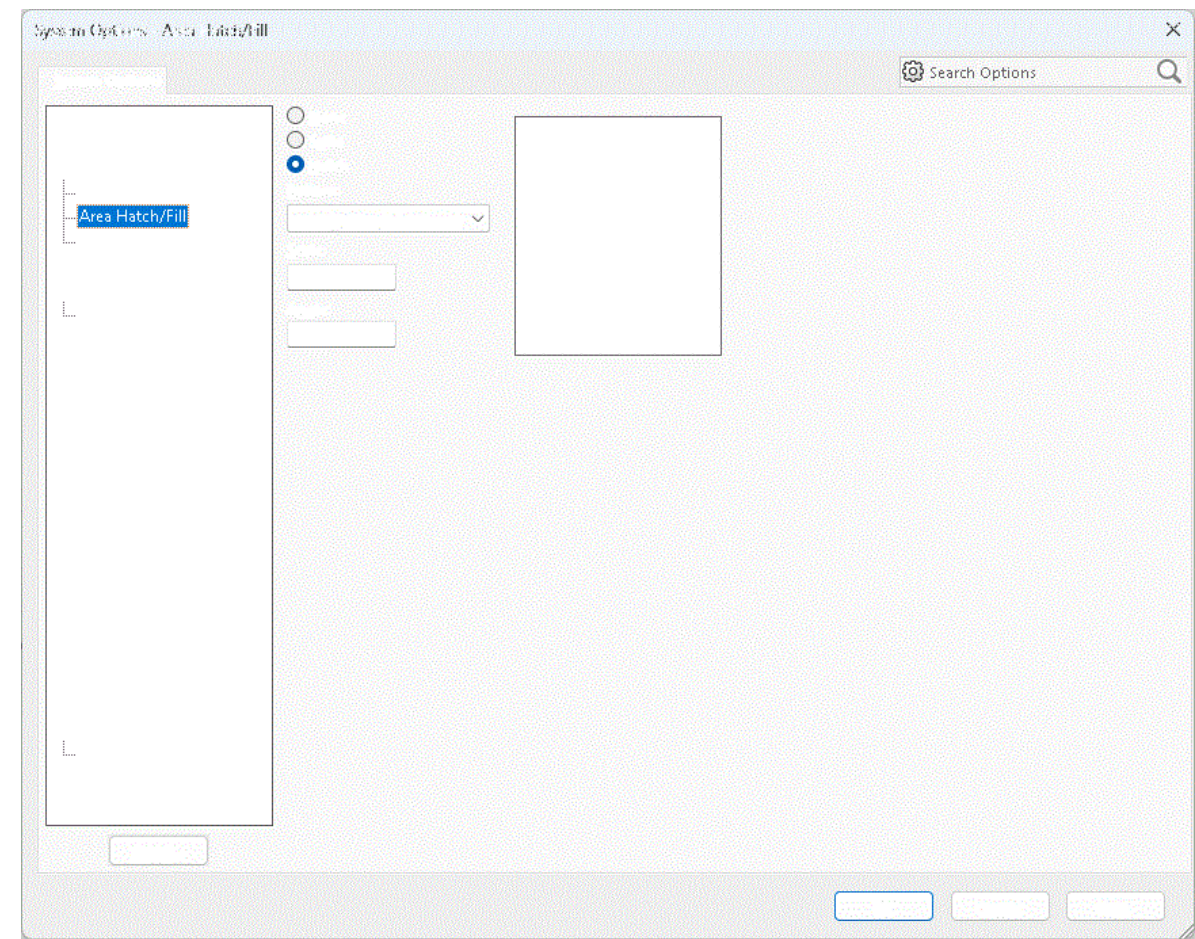


Setting	Get/Set Methods	Return Value or <Value>	Comment
None	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawingAreaHatchFillStyle) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawingAreaHatchFillStyle, swAreaHatchFillStyle_e.swAreaHatchFillStyle_None)	See swAreaHatchFillStyle_e for valid options	
Solid	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawingAreaHatchFillStyle) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawingAreaHatchFillStyle, swAreaHatchFillStyle_e.swAreaHatchFillStyle_Solid)	See swAreaHatchFillStyle_e for valid options	
Hatch	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawingAreaHatchFillStyle) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawingAreaHatchFillStyle, swAreaHatchFillStyle_e.swAreaHatchFillStyle_Pattern)	See swAreaHatchFillStyle_e for valid options	

Pattern	ISldWorks::GetUserPreferenceStringValue(swUserPreferenceStringValue_e.swDrawingAreaHatchPattern) ISldWorks::SetUserPreferenceStringValue(swUserPreferenceStringValue_e.swDrawingAreaHatchPattern, <Value>)	String value	AEC 2x12 Parquet Flooring AEC 8x16 Block Elev AEC 8x16 Block Elev. (MJ) AEC 8x8 Block Elev AEC Herringbone AEC Roof Shingle AEC Roof Wood Shake AEC Sand AEC Std Brick Elev AEC Std Brick Elev (MJ) AEC Stone ANGLE (Angle Steel) ANSI31 (Iron BrickStone) ANSI32 (Steel) ANSI33 (Bronze Brass) ANSI34 (Plastic Rubber) ANSI35 (Fire Brick) ANSI36 (Marble) ANSI37 (Lead Zinc Mg) ANSI38 (Aluminum) Box Steel Brass Brick or Masonry Brick or Stone Clay Concrete Cork Crosses Dashed Lines Dots Earth or Ground Escher Flexible Material Geological Rock Grass Grated Area Heat Transfer Hexagons Honeycomb Houndstooth Insulation ISO (Aluminum) ISO (Bronze Brass) ISO (Plastic) ISO (Steel) ISO02W100 ISO03W100 ISO04W100 ISO05W100 ISO06W100 ISO07W100 ISO08W100 ISO09W100 ISO10W100 ISO11W100 ISO12W100 ISO13W100 ISO14W100 ISO15W100 Mud or Sand Netting Network Parallel Lines Plastic Plastic2 Squares Stars Steel Swamp Teflon Triangles ZigZag
Scale	ISldWorks::GetUserPreferenceDoubleValue(swUserPreferenceDoubleValue_e.swDrawingAreaHatchScale) ISldWorks::SetUserPreferenceDoubleValue(swUserPreferenceDoubleValue_e.swDrawingAreaHatchScale, <Value>)	Double value	Specifies value to scale crosshatch
Angle	ISldWorks::GetUserPreferenceDoubleValue(swUserPreferenceDoubleValue_e.swDrawingAreaHatchAngle) ISldWorks::SetUserPreferenceDoubleValue(swUserPreferenceDoubleValue_e.swDrawingAreaHatchAngle, <Value>)	Double value	Specifies angle for crosshatch

System Options > Drawings > Display Style

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

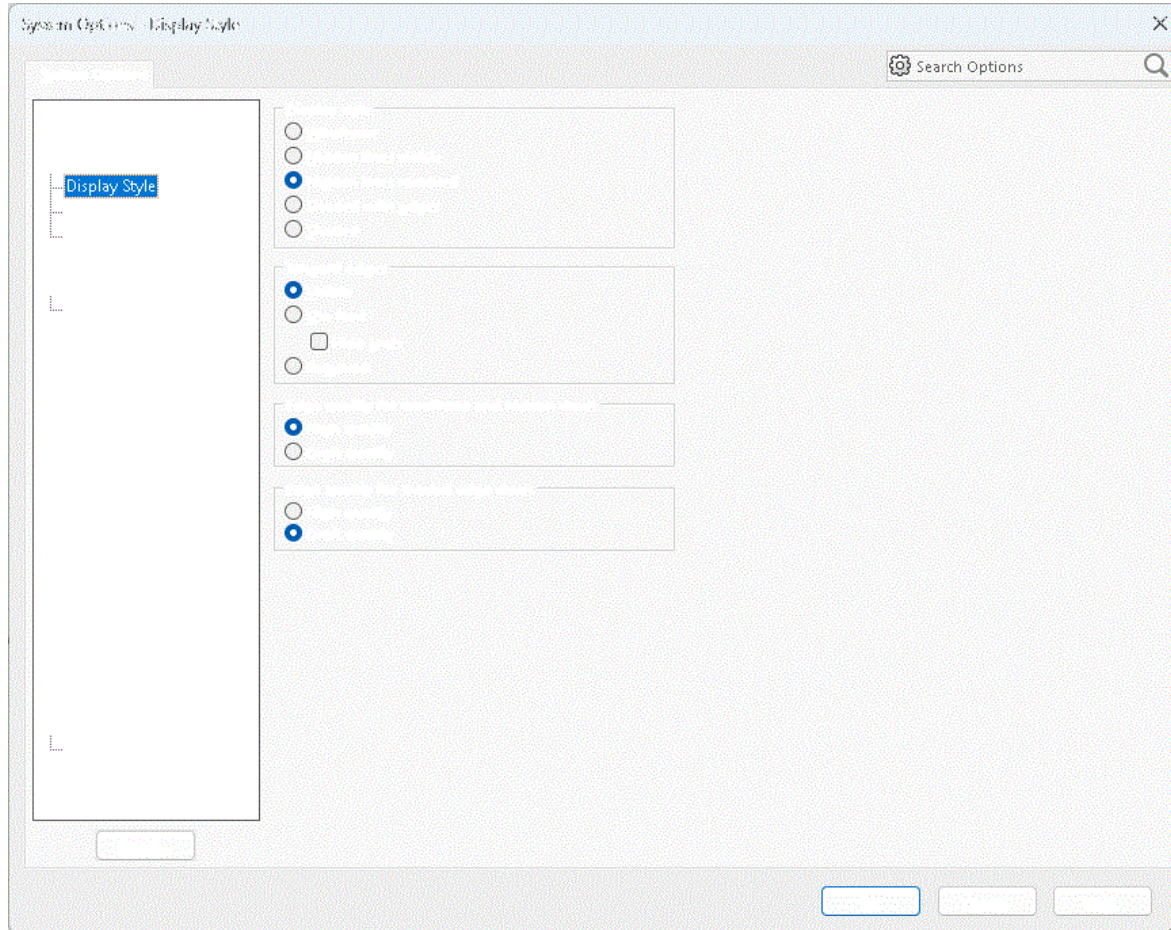


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	
Display style - Wireframe	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swHiddenEdgeDisplayDefault) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swHiddenEdgeDisplayDefault, <swDisplayMode_e.swWIREFRAME>)	See swDisplayMode_e for valid options	
Display style - Hidden lines visible	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swHiddenEdgeDisplayDefault) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swHiddenEdgeDisplayDefault, <swDisplayMode_e.swHIDDEN_GREYED>)	See swDisplayMode_e for valid options	
Display style - Hidden lines removed	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swHiddenEdgeDisplayDefault) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swHiddenEdgeDisplayDefault, <swDisplayMode_e.swHIDDEN>)	See swDisplayMode_e for valid options	
Display style - Shaded with edges	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swHiddenEdgeDisplayDefault) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swHiddenEdgeDisplayDefault, <swDisplayMode_e.swSHADED>)	See swDisplayMode_e for valid options	To display a drawing view shaded with edges, ISldWorks::SetUserPreferenceToggle (swUser True)
Display style - Shaded	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingsDefaultDisplayTypeHLEdgesWhenShaded) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingsDefaultDisplayTypeHLEdgesWhenShaded, <OnFlag>)	Boolean value	
Tangent edges - Visible	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTangentEdgeDisplayDefault) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTangentEdgeDisplayDefault, <swDisplayTangentEdges_e.swTangentEdgesVisible>)	See swDisplayTangentEdges_e for valid options	Specifies tangent edges using a solid line
Tangent edges - Use font	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTangentEdgeDisplayDefault) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTangentEdgeDisplayDefault, <swDisplayTangentEdges_e.swTangentEdgesVisibleAndFonted>)	See swDisplayTangentEdges_e for valid options	Specifies tangent edges using a line in the de


Tangent edges - Hide ends	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingHideEnds) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingHideEnds, <OnFlag>)	Boolean value	Specifies whether to hide the start and end segments of tangent edges
Tangent edges - Removed	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTangentEdgeDisplayDefault) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swTangentEdgeDisplayDefault, <swDisplayTangentEdges_e.swTangentEdgesHidden)	See swDisplayTangentEdges_e for valid options	Specifies to not display tangent edges
Edge quality for wireframe and hidden views - High/Draft quality	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgeQualityWireframeHiddenViews) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgeQualityWireframeHiddenViews, False)	Boolean value	True for high edge quality for wireframe and hidden views
Edge quality for shaded edge views - High/Draft quality	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgeQualityShadedEdgeViews) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgeQualityShadedEdgeViews, True)	Boolean value	True for high edge quality for shaded edge views

Obsolete Enumerators

Enumerator	Comment
swDrawingsDefaultDisplayTypeFastHLRHLV	Obsolete ; specified the display quality for new drawing views

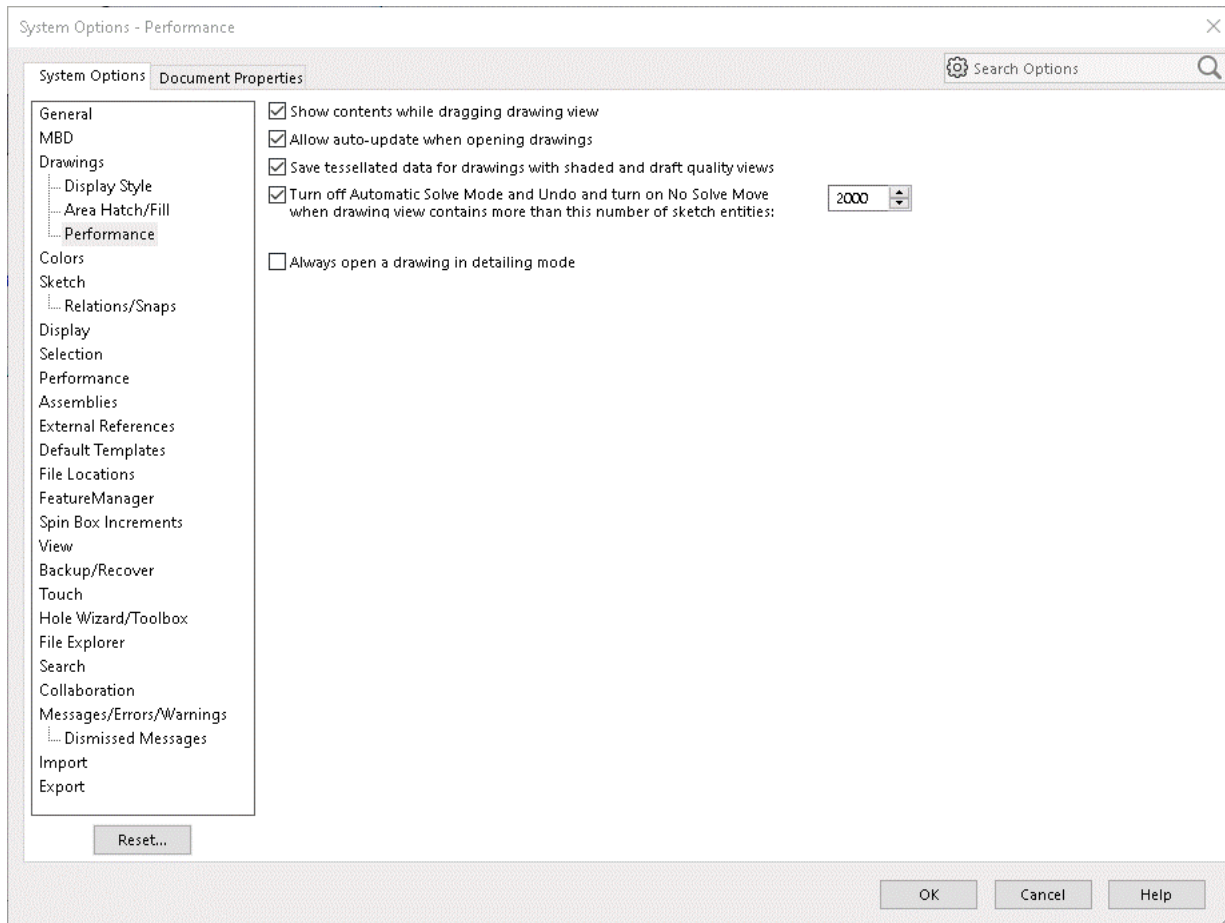


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Show contents while dragging drawing view	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingViewShowContentsWhileDragging) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingViewShowContentsWhileDragging, <OnFlag>)	Boolean value	Specifies whether model or view boundary is displayed when view is dragged
Allow auto-update when opening drawings	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticDrawingViewUpdateDefault) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticDrawingViewUpdateDefault, <OnFlag>)	Boolean value	Specifies whether drawing views are updated when a drawing is opened
Save tessellated data for drawings with shaded and draft quality views	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSaveShadedData) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingSaveShadedData, <OnFlag>)	Boolean value	Specifies whether to save tessellated data in drawing documents with shaded and draft quality views
Turn Off Automatic Solve Mode and Undo and turn on No Solve Mode when drawing view contains more than...	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingTurnOffAutomaticSolveModeAndUndo) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingTurnOffAutomaticSolveModeAndUndo, <OnFlag>)	Boolean value	True to turn off Automatic Solve Mode and Undo and turn on No Solve Mode when drawing view contains more than the specified number of sketch entities False to turn on Automatic Solve Mode and Undo and turn off No Solve Mode when drawing view contains more than the specified number of sketch entities
this number of sketch entities	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawing_Auto_Solve_Threshold) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawing_Auto_Solve_Threshold, <Value>)	Integer value	The specified number of sketch entities mentioned in the previous comment
Always open a drawing in detailing mode	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingOpenInDetailingMode) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingOpenInDetailingMode, <OnFlag>)	Boolean value	

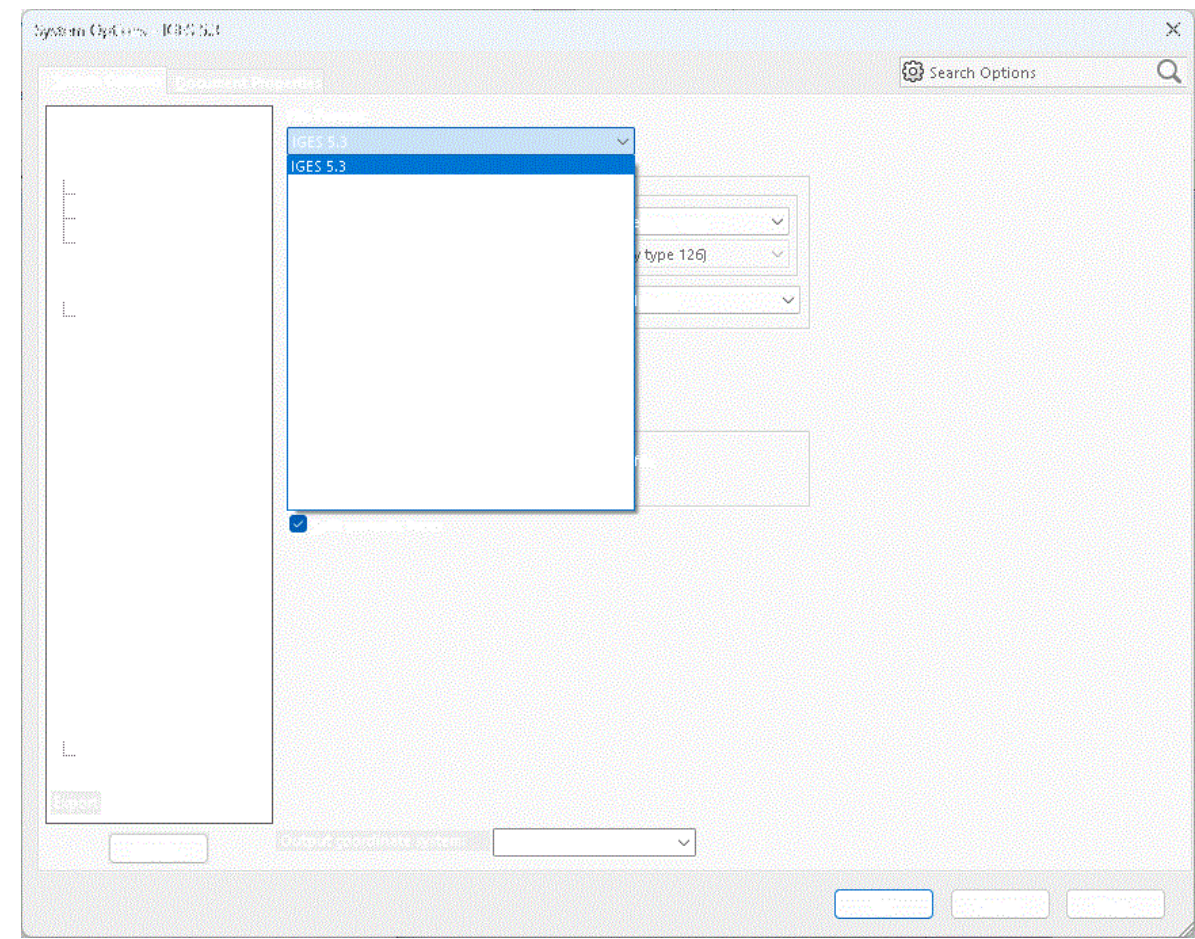

File Format Setting
IGES 5.3 (valid only for parts or assemblies)
STEP (valid only for parts or assemblies)
ACIS (valid only for parts or assemblies)
Parasolid (valid only for parts or assemblies)
VRML (valid only for parts or assemblies)
IFC (valid only for parts or assemblies)
STL (valid only for parts or assemblies)
VDA (not yet supported by the API)
AMF (valid only for parts or assemblies)
3MF (valid only for parts or assemblies)
PLY (valid only for parts or assemblies)
DXF/DWG (valid only for parts or drawings)
TIF/PSD/JPG/PNG
EDRW/EPRT/EASM
PDF
3DPPDF (valid only for parts or assemblies)
SMG (valid only for parts or assemblies)
SLDPRT from assembly (valid only for assemblies)

System Options > External References

- This topic contains two tables. The information in the table:
- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
 - titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.


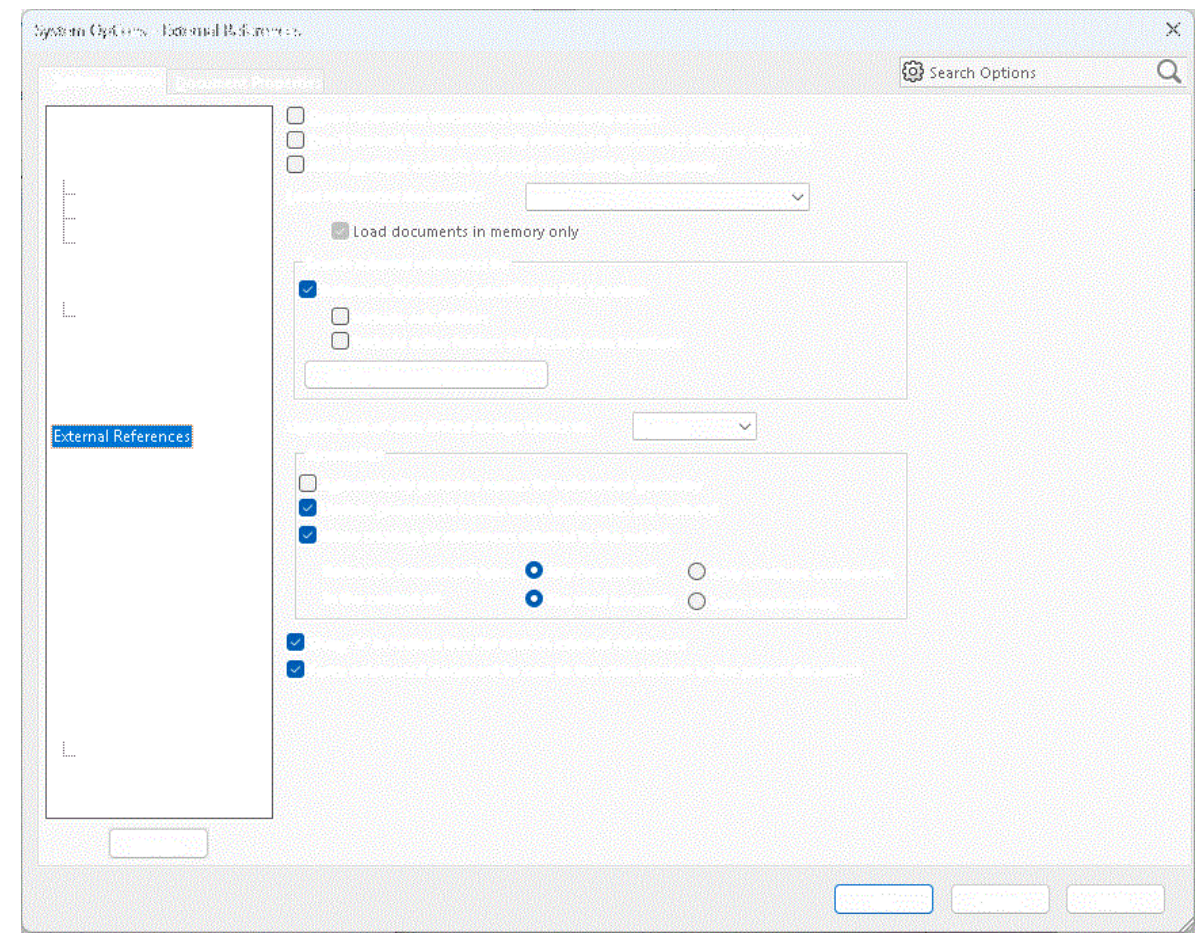


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>
Open referenced documents with read-only access (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefOpenReadOnly) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefOpenReadOnly, <OnFlag>)	Boolean value
Don't prompt to save read-only referenced documents (discard changes) (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefNoPromptOrSave) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefNoPromptOrSave, <OnFlag>)	Boolean value
Allow multiple contexts for parts when editing in assembly	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefMultipleContexts) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefMultipleContexts, <OnFlag>)	Boolean value
Load referenced documents	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLoadExternalReferences) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLoadExternalReferences, swLoadExternalReferences_e.<Value>)	See swLoadExternalReferences_e for valid options

Load documents in memory only	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefLoadRefDocsInMemory) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefLoadRefDocsInMemory, <OnFlag>)	Boolean value
Search external references in - Reference Documents specified in File Location (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseFolderSearchRules) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseFolderSearchRules, <OnFlag>)	Boolean value
Search external references in - Reference Documents specified in File Location - Include sub-folders (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefIncludeSubFolders) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefIncludeSubFolders, <OnFlag>)	Boolean value
Search external references in - Reference Documents specified in File Location - Exclude active folders and recent save locations (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefExcludeActiveFoldersAndRecentSaveLocations) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefExcludeActiveFoldersAndRecentSaveLocations, <OnFlag>)	Boolean value
Update out-of-date linked design tables to (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExternalReferencesUpdateOutOfDateLinkedDesignTable) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swExternalReferencesUpdateOutOfDateLinkedDesignTable, swExternalReferencesUpdateOutOfDateLinkedDesignTable_e.<Value>)	See swExternalReferencesUpdateOutOfDateLinkedDesignTable for valid options
Assemblies - Automatically generate names for referenced geometry	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefAutoGenNames) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefAutoGenNames, <OnFlag>)	Boolean value
Assemblies - Update component names when documents are replaced (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefUpdateCompNames) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefUpdateCompNames, <OnFlag>)	Boolean value
Assemblies - Allow creation of references external to the model	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAllowCreationOfReferencesExternalToModel) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAllowCreationOfReferencesExternalToModel, <OnFlag>)	Boolean value
Assemblies - Allow creation of references external to the model - Reference component type:	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swReferenceOnlyEnvelopeComponentType) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swReferenceOnlyEnvelopeComponentType, <OnFlag>)	Boolean value
Assemblies - Allow creation of references external to the model - In the context of:	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swReferenceInContextOfTopLevelAssembly) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swReferenceInContextOfTopLevelAssembly, <OnFlag>)	Boolean value
Show "x" in feature tree for broken external references	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefShowXInFeatureTree) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefShowXInFeatureTree, <OnFlag>)	Boolean value
Force referenced document to save to current major version	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefForceSaveToCurrentVersion) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swExtRefForceSaveToCurrentVersion, <OnFlag>)	Boolean value

Obsolete Enumerators

Enumerator	Comment
swExternalReferencesDisable	Obsolete
swIncludeSubfoldersForDrawingsSearchInPackAndGo	Obsolete

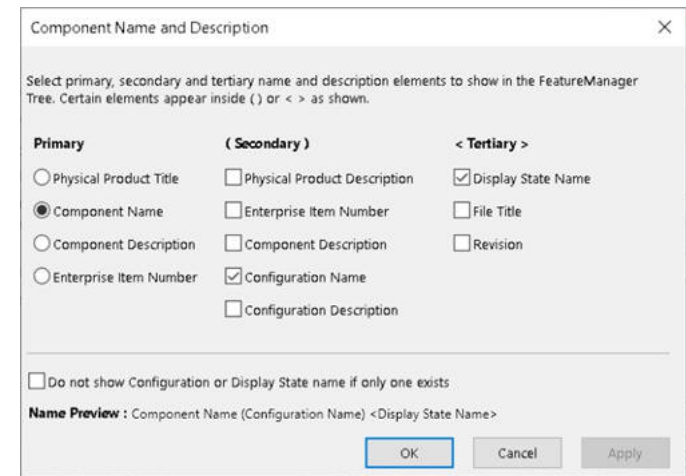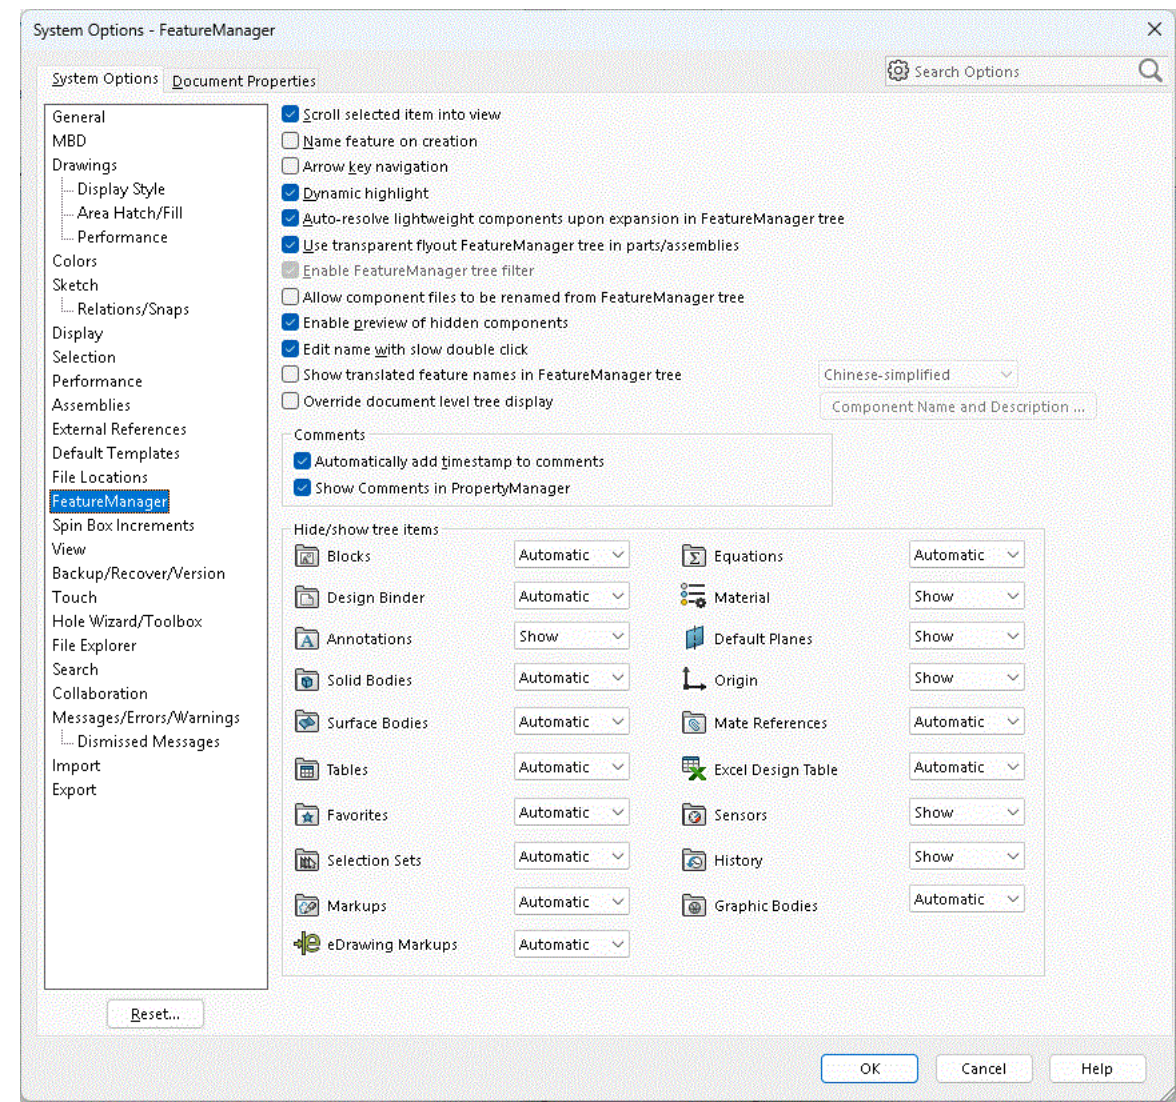


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	
---------	-----------------	---	--

Scroll selected item into view	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerEnsureVisible) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerEnsureVisible, <OnFlag>)	Boolean value	Specifies whether display feature icon
Name feature on creation	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerNameFeatureWhenCreated) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerNameFeatureWhenCreated, <OnFlag>)	Boolean value	Specifies to auto name it
Arrow key navigation	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerKeyboardNavigation) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerKeyboardNavigation, <OnFlag>)	Boolean value	Specifies whether tree, and expand
Dynamic highlight	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerDynamicHighlight) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerDynamicHighlight, <OnFlag>)	Boolean value	Specifies whether over item in FeatureManager tree
Auto-resolve lightweight components upon expansion in FeatureManager tree	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoResolveLightweightCompUponExplnFMTree) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoResolveLightweightCompUponExplnFMTree, <OnFlag>)	Boolean value	Specifies whether are expanded in tree
Use transparent flyout FeatureManager tree in parts/assemblies	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerTransparentFlyout) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerTransparentFlyout, <OnFlag>)	Boolean value	Specifies whether assembly document
Enable FeatureManager tree filter	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerEnableTreeFilter) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerEnableTreeFilter, <OnFlag>)	Boolean value	Specifies whether tree is open Unlike the user interface
Allow component files to be renamed from FeatureManager tree (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerEnableRenamingComponent) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerEnableRenamingComponent, <OnFlag>)	Boolean value	Specifies whether tree is open
Enable preview of hidden components	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerEnablePreviewHiddenComponents) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerEnablePreviewHiddenComponents, <OnFlag>)	Boolean value	Specifies whether hidden components are shown
Edit name with slow double click	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEditNameWithSlowDoubleClick) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEditNameWithSlowDoubleClick, <OnFlag>)	Boolean value	
Show translated feature names in FeatureManager tree	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerShowTranslatedNameInFMTree) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFeatureManagerShowTranslatedNameInFMTree, <OnFlag>)	Boolean value	
Language drop-down	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerTranslatedLanguage) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerTranslatedLanguage, swAutoHideShowResponse_e.<Value>)	See swUserPreferencesLanguages_e for valid options	Valid only if swUserPreferenceManagerTranslatedLanguage is set to true.
Override document level tree display	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swOverrideTreeDisplaySysSettings) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swOverrideTreeDisplaySysSettings, <OnFlag>)	Boolean value	Specifies whether override tree display settings. If Component Name the FeatureManager tree
Component Name and Description - Primary - Physical Product Title Component Name Component Description Enterprise Item Number	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPrimaryComponentIdentifier) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPrimaryComponentIdentifier, swComponentIdentifier_e.<Value>)	Valid options in swComponentIdentifier_e : swComponentIdentifier_PhysicalProductTitle swComponentIdentifier_ComponentName swComponentIdentifier_ComponentDescription swComponentIdentifier_EnterpriseItemNumber	Valid only if swUserPreferenceManagerSetToTrue is set to true.
Component Name and Description - (Secondary) - Physical Product Description	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryPhysicalProductDescription) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryPhysicalProductDescription, <OnFlag>)	Boolean value	Valid only for SOLIDWORKS platform and when swUserPreferenceManagerSetToTrue is set to true.
Component Name and Description - (Secondary) - Enterprise Item Number	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryEnterpriseItemNumber) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryEnterpriseItemNumber, <OnFlag>)	Boolean value	Valid only: for SOLIDWORKS platform: when swUserPreferenceManagerSetToTrue is true, - and - when swUserPreferenceManagerSetToTrue is set to swComponentIdentifier_e
Component Name and Description - (Secondary) - Component Description	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryComponentDescription) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryComponentDescription, <OnFlag>)	Boolean value	Valid only: when swUserPreferenceManagerSetToTrue is true, - and - when swUserPreferenceManagerSetToTrue is set to swComponentIdentifier_e
Component Name and Description - (Secondary) - Component Name	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryComponentName) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryComponentName, <OnFlag>)	Boolean value	Valid only when swUserPreferenceManagerSetToTrue is set to true.

Component Name and Description - (Secondary) - Configuration Description	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryConfigurationName) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSecondaryConfigurationName, <OnFlag>)	Boolean value	Valid only when swUserPreferenc
Component Name and Description - <Tertiary> - Display State Name	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTertiaryDisplayStateName) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTertiaryDisplayStateName, <OnFlag>)	Boolean value	Valid only when swUserPreferenc
Component Name and Description - <Tertiary> - File Title	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTertiaryFileTitle) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTertiaryFileTitle, <OnFlag>)	Boolean value	Valid only for SOL platform and whe swUserPreferenc
Component Name and Description - <Tertiary> - Revision	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTertiaryRevision) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTertiaryRevision, <OnFlag>)	Boolean value	Valid only for SOL platform and whe swUserPreferenc
Component Name and Description - Do not show Configuration or Display State name if only one exists	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDoNotShowConfigOrDisplayStateName) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDoNotShowConfigOrDisplayStateName, <OnFlag>)	Boolean value	Valid only when swUserPreferenc
Comments - Automatically add timestamp to comments	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabAddTimeStampToComments) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabAddTimeStampToComments, <OnFlag>)	Boolean value	
Comments - Show Comments in PropertyManager	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabShowCommentsInPropertyManager) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabShowCommentsInPropertyManager, <OnFlag>)	Boolean value	
Select a configuration view for the FeatureManager Tree Area - Only CAD Family View or Both CAD Family and Configurations (SOLIDWORKS Design connected to the 3DEXPERIENCE platform only)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swConfigurationViewForFeatureManagerTree) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swConfigurationViewForFeatureManagerTree, swFeatureManagerTreeViewCADFamily_e.<Value>)	See swFeatureManagerTreeViewCADFamily_e for valid options	
Hide/show tree items - Blocks	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerBlocksVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerBlocksVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Design Binder	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerDesignBinderVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerDesignBinderVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Annotations	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerAnnotationsVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerAnnotationsVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Solid Bodies	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerSolidBodiesVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerSolidBodiesVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Surface Bodies	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerSurfaceBodiesVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerSurfaceBodiesVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Tables	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerTableFolderVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerTableFolderVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Favorites	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerFavorites) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerFavorites, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - eDrawing Markups (not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerEDrawingMarkups) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerEDrawingMarkups, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Selection Sets	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerSelectionSetsVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerSelectionSetsVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Equations	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerEquationsVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerEquationsVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Material	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerMaterialVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerMaterialVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	

Hide/show tree items - Default Planes	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerDefaultPlanesVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerDefaultPlanesVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Origin	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerOriginVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerOriginVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Mate References	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerMateReferencesVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerMateReferencesVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Design Table	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerDesignTableVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerDesignTableVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Sensors	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerSensorVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerSensorVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - History	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerHistory) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerHistory, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Graphic Bodies	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerMeshBodiesVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerMeshBodiesVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
Hide/show tree items - Markups	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerMarkupsVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerMarkupsVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	

The File Explorer settings are not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform.

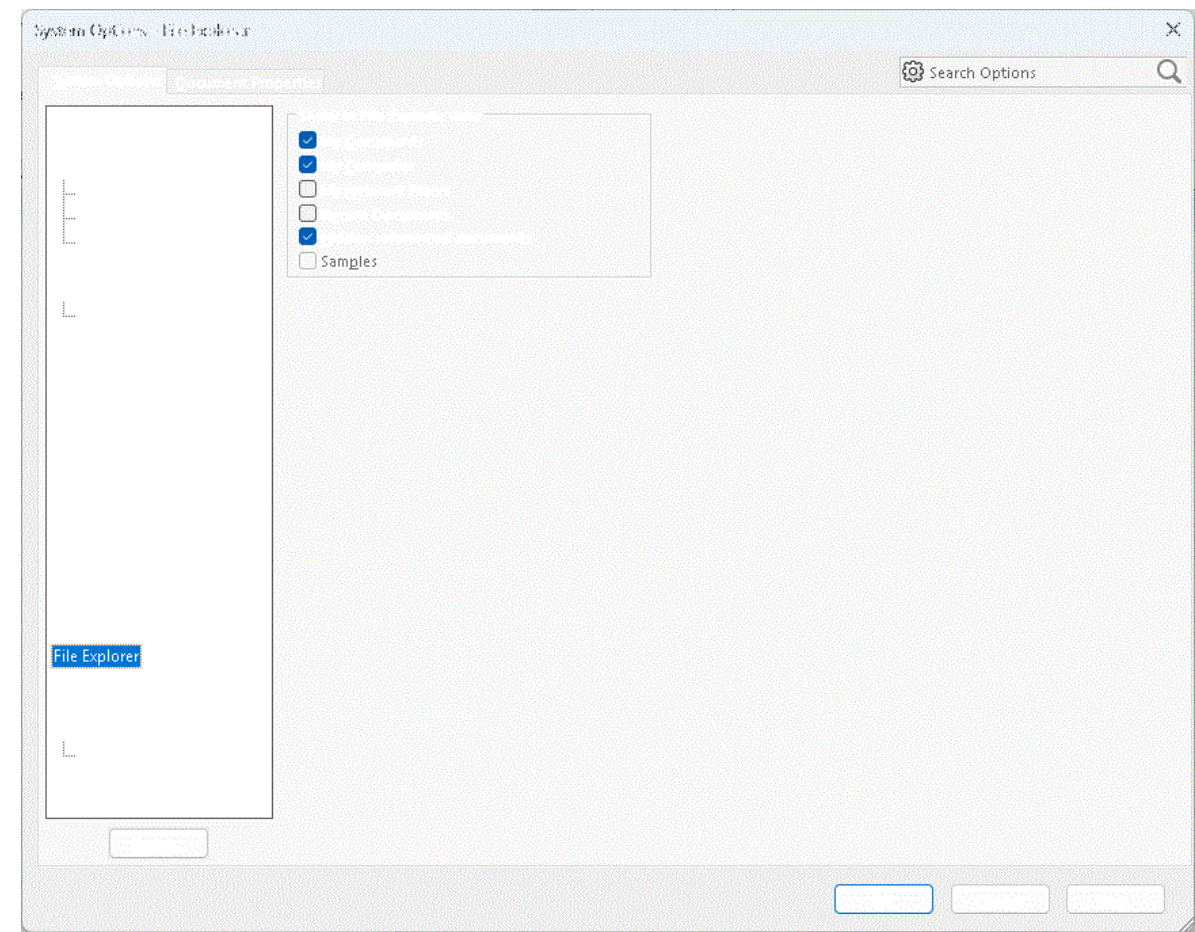


Setting	Get/Set Methods	Return Value or <OnFlag>	Comment
Show in File Explorer view - My Documents	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowMyDocuments) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowMyDocuments, <OnFlag>)	Boolean value	Specifies whether to show My Documents folder in SOLIDWORKS File Explorer
Show in File Explorer view - My Computer	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowMyComputer) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowMyComputer, <OnFlag>)	Boolean value	Specifies whether to show My Computer folder in SOLIDWORKS File Explorer
Show in File Explorer view - My Network Places	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowMyNetworkPlaces) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowMyNetworkPlaces, <OnFlag>)	Boolean value	Specifies whether to show My Documents folder in SOLIDWORKS File Explorer
Show in File Explorer view - Recent Documents	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowRecentDocuments) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowRecentDocuments, <OnFlag>)	Boolean value	Specifies whether to show My Documents folder in SOLIDWORKS File Explorer
Show in File Explorer view - Hidden referenced documents	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowHiddenReferencedDocuments) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowHiddenReferencedDocuments, <OnFlag>)	Boolean value	Specifies whether to show assembly components that are in memory, but are not open, in the Open in SOLIDWORKS folder in SOLIDWORKS File Explorer
Show in File Explorer view - Samples	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowSamples) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFileExplorerShowSamples, <OnFlag>)	Boolean value	Specifies whether to show the Sample folders, which contains online tutorial and What's New sample files, in SOLIDWORKS File Explorer

System Options > File Locations

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

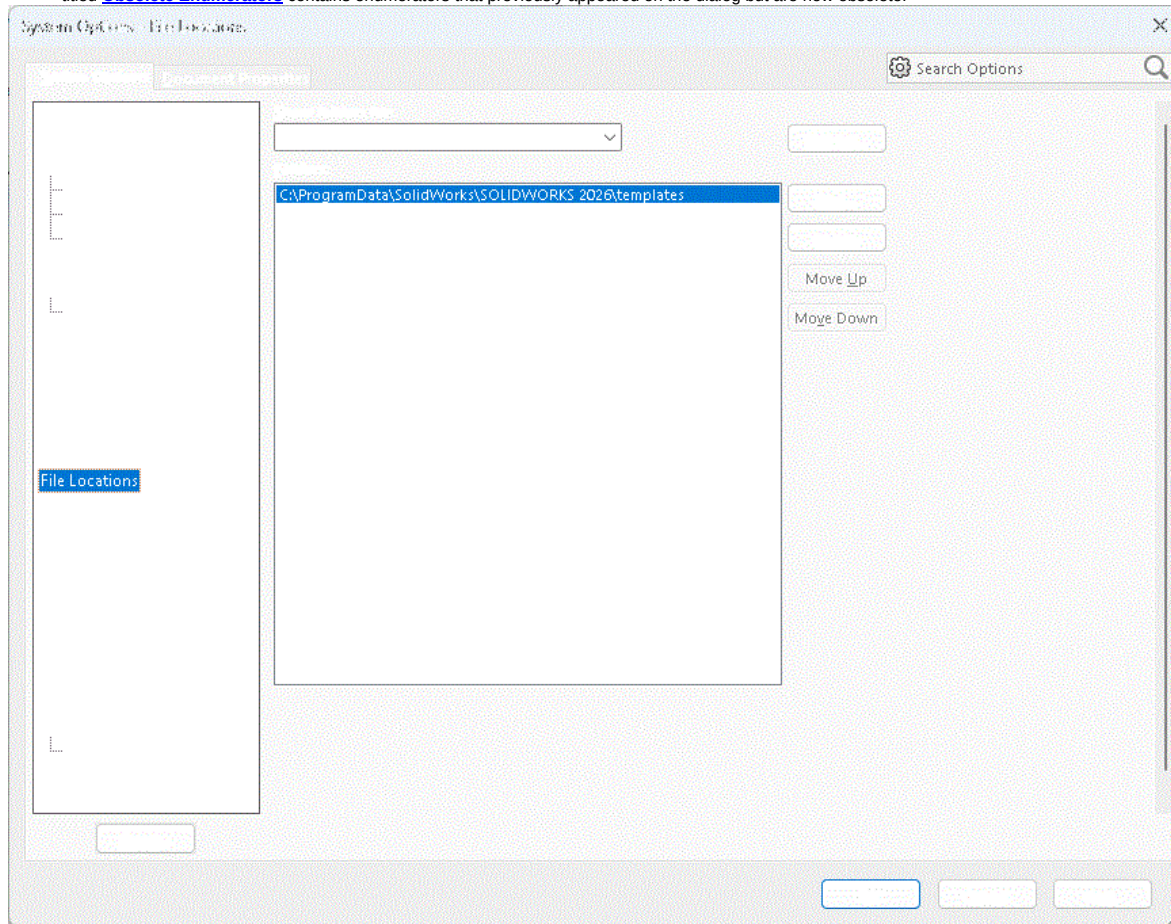

Setting	Get/Set Methods	Return Value or <Value>	Comment
Show folders for - Document Templates - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsDocumentTemplates) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsDocumentTemplates, <Value>)	String value	
Show folders for - Referenced Documents - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsDocuments) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsDocuments, <Value>)	String value	
Show folders for - Default Save Folder - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsDefaultSave) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsDefaultSave, <Value>)	String value	
Show folders for - Bend Table Template - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsBendTableTemplate) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsBendTableTemplate, <Value>)	String value	
Show folders for - Blocks - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsBlocks) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsBlocks, <Value>)	String value	
Show folders for - BOM Templates - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsBOMTemplates) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsBOMTemplates, <Value>)	String value	
Show folders for - Family Templates - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsFamilyTableTemplates) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsFamilyTableTemplates, <Value>)	String value	
Show folders for - Color Swatches - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsColorSwatches) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsColorSwatches, <Value>)	String value	
Show folders for - Costing Report Template Folder - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsCostingReportTemplateFolder) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsCostingReportTemplateFolder, <Value>)	String value	
Show folders for - Costing templates - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsCostingTemplates) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsCostingTemplates, <Value>)	String value	

[illegible]

Show folders for - Spelling Folders - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsSpellingFolders) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsSpellingFolders, <Value>)	String value	
Show folders for - Sustainability Report Template Folder - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsSustainabilityReportTemplateFolder) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsSustainabilityReportTemplateFolder, <Value>)	String value	
Show folders for - Symbol Library File - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsSymbolLibraryFolder) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsSymbolLibraryFolder, <Value>)	String value	
Show folders for - Textures - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsTextures) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsTextures, <Value>)	String value	
Show folders for - Thread Profiles - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsThreadProfiles) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsThreadProfiles, <Value>)	String value	
Show folders for - Title Block Table Template - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsTitleBlockTableTemplate) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsTitleBlockTableTemplate, <Value>)	String value	
Show folders for - Weld Table Template - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsWeldTableTemplate) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsWeldTableTemplate, <Value>)	String value	
Show folders for - Weldment Cut List Templates - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsWeldmentCutListTemplates) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsWeldmentCutListTemplates, <Value>)	String value	
Show folders for - Weldment Profiles - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsWeldmentProfiles) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsWeldmentProfiles, <Value>)	String value	
Show folders for - Weldment Property File - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsWeldmentPropertyFile) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsWeldmentPropertyFile, <Value>)	String value	
Show folders for - 3D PDF Themes	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsThemeFolder) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsThemeFolder, <Value>)	String value	Valid only for MBD
Show folders for - Appearance Folders - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsAppearances) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsAppearances, <Value>)	String value	
Show folders for - Light Folders - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsLights) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsLights, <Value>)	String value	
Show folders for - Scene Folders - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsScenes) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsScenes, <Value>)	String value	
Show folders for - Hole Tags List - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swHoleTagsList) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swHoleTagsList, <Value>)	String value	
Show folders for - Structure System Connection Elements - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsStructureSystemsConnectionElements) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsStructureSystemsConnectionElements, <Value>)	String value	
Show folders for - Inspection Project Template Folder - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsInspectionProjects) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsInspectionProjects, <Value>)	String value	
Show folders for - Inspection Report Template Folder - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsInspectionReports) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsInspectionReports, <Value>)	String value	
Show folders for - Inspection Default Export Folder - Folders	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsInspectionExports) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsInspectionExports, <Value>)	String value	
Show folders for - Design connected to the 3DEXPERIENCE platform Library - Folders (valid only for SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsConnectedLibrary) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsConnectedLibrary, <Value>)	String value	


Obsolete Enumerators

Enumerator	Comment
swFileLocationsJournalFile	Obsolete
swFileLocationsLibraryFeatures	Obsolete; use swFileLocationsDesignLibrary
swFileLocationsPaletteAssemblies	Obsolete; use swFileLocationsDesignLibrary
swFileLocationsPaletteFeatures	Obsolete; use swFileLocationsDesignLibrary
swFileLocationsPaletteFormTools	Obsolete; use swFileLocationsDesignLibrary
swFileLocationsPaletteParts	Obsolete; use swFileLocationsDesignLibrary
swFileLocationsDesignCheckerFile	Obsolete
swStructureSystemsFolder	Obsolete
swLocationsWebFolders	Obsolete
swFile.locations3DCCModelFolder	Obsolete

System Options > General

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

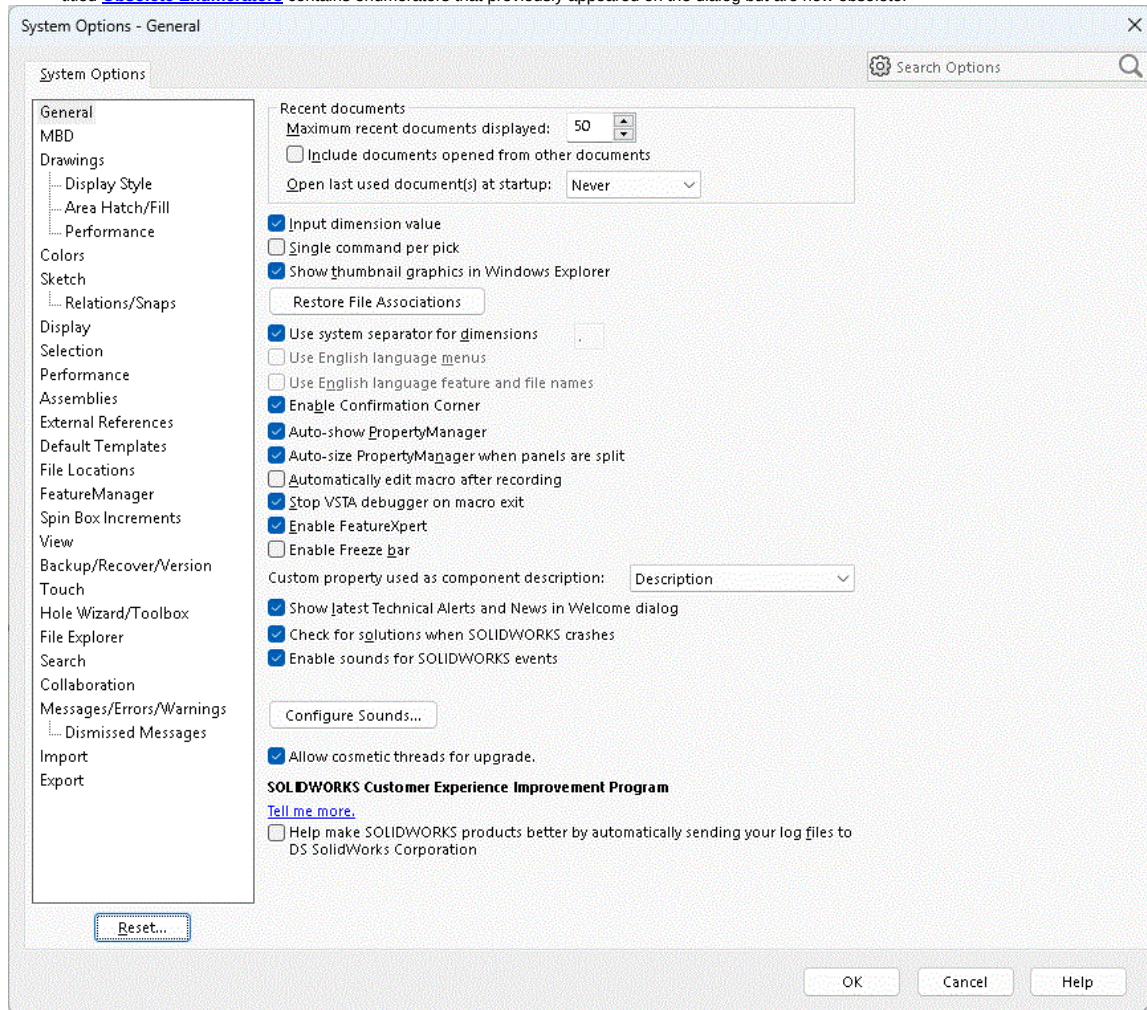


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Recent documents - Maximum recent documents displayed	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swMaximumRecentDocuments) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swMaximumRecentDocuments, <Value>)	1 <= Integer value <= 100	Specifies how many documents to display in the File > Open Recent list
Recent documents - Include documents opened from other documents	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIncludeDocumentsOpenedFromOtherDocuments) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIncludeDocumentsOpenedFromOtherDocuments, <OnFlag>)	Boolean value	Specifies whether to include the documents opened from other documents in the File > Open Recent list
Recent documents - Open last used document(s) at startup	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swOpenLastUsedDocumentAtStart) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swOpenLastUsedDocumentAtStart, <OnFlag>)	Boolean value	Specifies whether to open the last-used document when starting up SOLIDWORKS software; true if always, false if never
Input dimension value	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swInputDimValOnCreate) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swInputDimValOnCreate, <OnFlag>)	Boolean value	Specifies whether to automatically display Modify dialog when dimensioning new entities
Single command per pick	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSingleCommandPerPick) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSingleCommandPerPick, <OnFlag>)	Boolean value	Specifies whether to deselect sketch and dimension tools after each use
Use shaded face highlighting	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseShadedFaceHighlight) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseShadedFaceHighlight, <OnFlag>)	Boolean value	Specifies whether selected faces are displayed in a solid

			color (green by default)
Show thumbnail graphics in File Explorer	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swThumbnailGraphics) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swThumbnailGraphics, <OnFlag>)	Boolean value	Specifies whether thumbnail graphic instead of an icon in File Explorer is displayed for each SOLIDWORKS part or assembly document
Use system separator for dimensions	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseSystemSeparatorForDims) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseSystemSeparatorForDims, <OnFlag>)	Boolean value	Specifies whether default system decimal separator is used when displaying decimal numbers
Use English language menus	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseEnglishLanguage) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseEnglishLanguage, <OnFlag>)	Boolean value	Specifies whether to change to English if another language was selected when SOLIDWORKS software was installed; SOLIDWORKS software must be restarted for this change to take effect
Use English language feature and file names	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseEnglishLanguageFeatureNames) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseEnglishLanguageFeatureNames, <OnFlag>)	Boolean value	Specifies whether to use English feature and file names in languages other than English
Enable Confirmation Corner	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableConfirmationCorner) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableConfirmationCorner, <OnFlag>)	Boolean value	Specifies whether to display Confirmation Corner in the upper-right corner of the graphics area
Auto-show PropertyManager	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoShowPropertyManager) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoShowPropertyManager, <OnFlag>)	Boolean value	Specifies whether to automatically display PropertyManager when editing an entity
Auto-size PropertyManager when panels are split	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSizePropertyManager) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSizePropertyManager, <OnFlag>)	Boolean value	Specifies whether to autosize PropertyManager pages when panels are split
Automatically edit macro after recording	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEditMacroAfterRecord) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEditMacroAfterRecord, <OnFlag>)	Boolean value	Specifies whether to automatically edit a macro after recording it NOTE: If after recording a macro you select to save the macro as all macro types (.swp, .csproj, and .vbproj), then this option has no effect.
Stop VSTA debugger on macro exit	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStopDebuggingVstaOnExit) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStopDebuggingVstaOnExit, <OnFlag>)	Boolean value	Specifies whether to stop the debugger when the macro exits main() IMPORTANT: When debugging VSTA macros with user-interface components such as PropertyManager pages, manipulators, or other objects that use events or handler objects, it is necessary to keep the debugger running after the main() method of the VSTA macro exits.
Enable FeatureXpert	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUserEnableAutoFix) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUserEnableAutoFix, <OnFlag>)	Boolean value	Specifies whether to enable FeatureXpert
Enable Freeze bar	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUserEnableFreezeBar) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUserEnableFreezeBar, <OnFlag>)	Boolean value	Specifies whether to enable or disable the freeze bar
When rebuild error occurs	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRebuildErrorAction) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRebuildErrorAction, swStopContinuePrompt_e.<Value>)	See swStopContinuePrompt_e for valid options	
Custom property used as component description	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swCustomPropertyUsedAsComponentDescription) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swCustomPropertyUsedAsComponentDescription, <Value>)	String value	
Show latest Technical Alerts and News in Welcome dialog (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowNewsFeedsInTaskPane) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowNewsFeedsInTaskPane, <OnFlag>)	Boolean value	Specifies whether to show the latest Technical Alerts and News in the Welcome dialog
Check for solutions when SOLIDWORKS crashes	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCheckCrashSolutions) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCheckCrashSolutions, <OnFlag>)	Boolean value	
Enable sounds for SOLIDWORKS events	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableSoundsForSOLIDWORKSEvents) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableSoundsForSOLIDWORKSEvents, <OnFlag>)	Boolean value	
Allow cosmetic threads for upgrade	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableAllowCosmeticThreadsUpgrade) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableAllowCosmeticThreadsUpgrade, <OnFlag>)	Boolean value	Specifies whether to upgrade cosmetic


			threads to the latest design
SOLIDWORKS Customer Experience Improvement Program - Help make SOLIDWORKS products better by automatically sending your log files to DS SOLIDWORKS Corporation (Not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform)	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPerformanceFeedback) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPerformanceFeedback, swPerformanceFeedback_e.<Value>)	See swPerformanceFeedback_e for valid options	Specifies whether to enable or disable performance feedback or when to remind the user to enable it

Obsolete Enumerators

Enumerator	Comment
swCreateConfigurationTableOnOpen	Obsolete
swEnablePerformanceEmail	Obsolete
swEnablePerformanceFeedback	Obsolete; use swUserPreferenceIntegerValue_e.swPerformanceFeedback (shown in previous table)
swEnablePropertyManager	Obsolete; always enabled
swMaximizeDocumentOnOpen	Obsolete
swSaveEModelData	Obsolete
swShowDimensionNames	Obsolete
swEnableVSTAVersion3	Obsolete

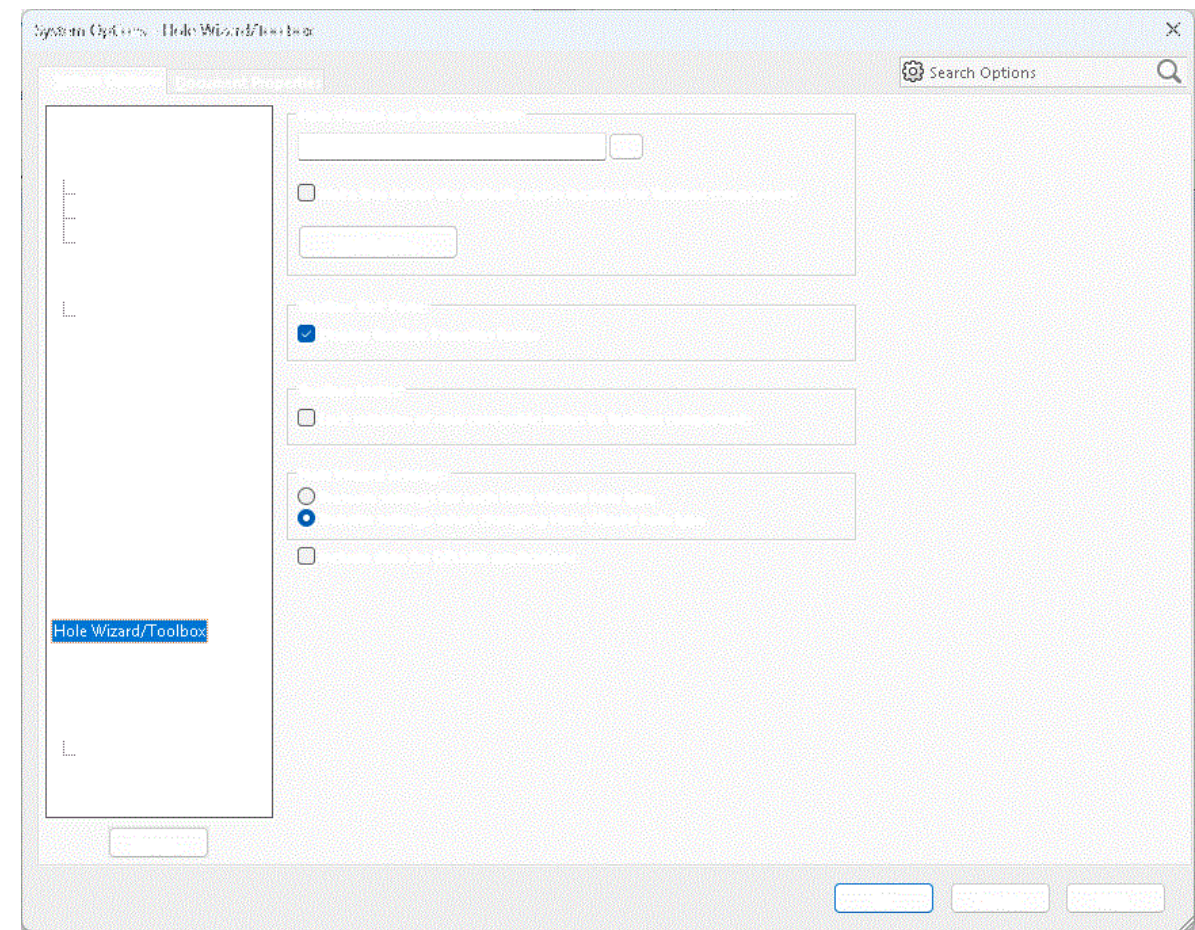


Setting	Get/Set Methods	Return Value or <Value>	Comment
Hole Wizard and Toolbox folder	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swHoleWizardToolBoxFolder) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swHoleWizardToolBoxFolder, <Value>)	String value	Specifies the location of the Hole Wizard/Toolbox folder
Make this folder the default search location for Toolbox components	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseFolderAsDefaultSearchLocation) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseFolderAsDefaultSearchLocation, <Value>)	Boolean value	Specifies whether to make the specified Hole Wizard and Toolbox folder the default search location for Toolbox components
Toolbox Task Pane - Display Toolbox Favorites folder	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowToolboxFavoritesFolder) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowToolboxFavoritesFolder, <Value>)	Boolean value	Specifies whether to display the Toolbox Favorites folder
Toolbox Mates - Lock rotation of new concentric mates to Toolbox components	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLockRotationConcentricMates) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLockRotationConcentricMates, <Value>)	Boolean value	
Hole Wizard settings	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTransferHoleWizardSizeComboBoxSettings) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTransferHoleWizardSizeComboBoxSettings, <Value>)	Boolean value	True to preserve settings for each Hole Wizard hole type, false to transfer settings when changing Hole Wizard hole type
Include data for DELMIA applications	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIncludeDataForDelmia) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIncludeDataForDelmia, <Value>)	Boolean value	

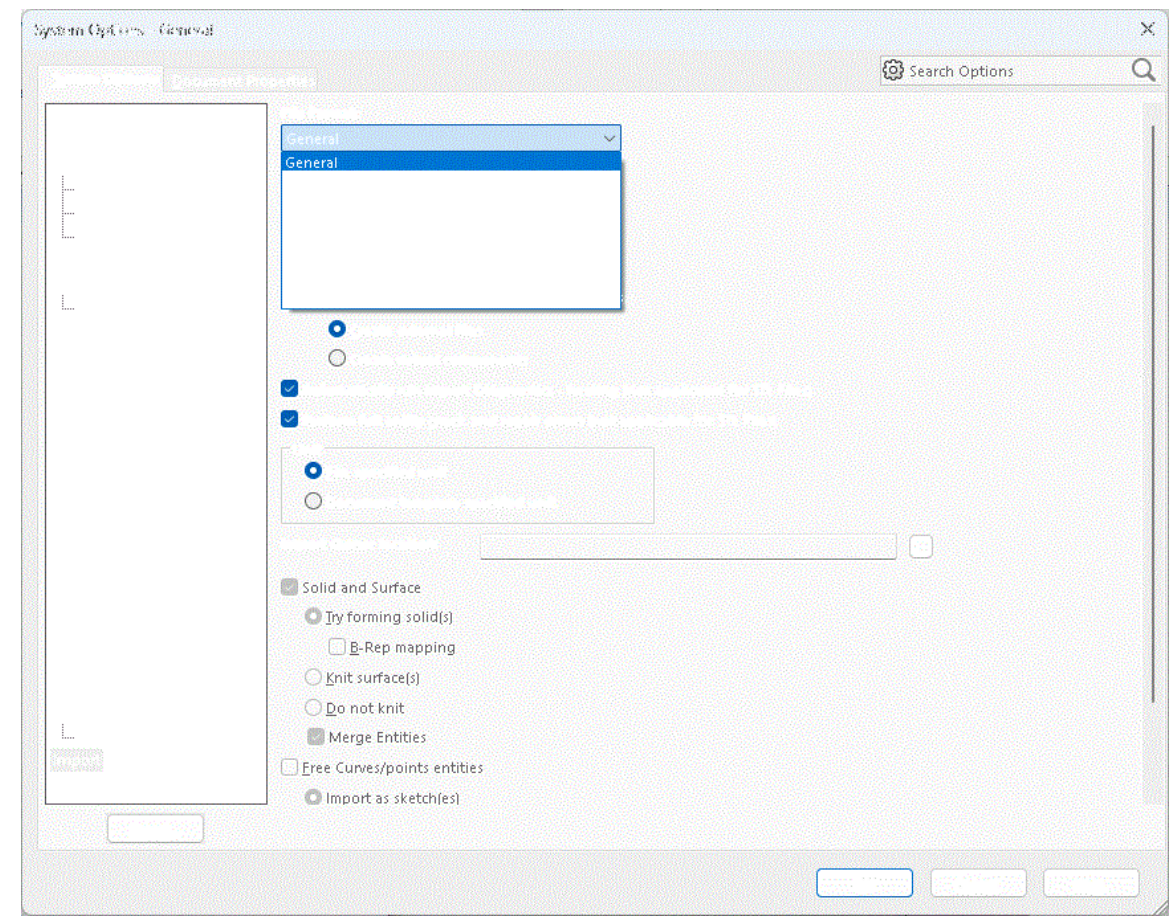



File Format Setting
General
STL/OBJ/OFF/PLY/PLY2
VRML
3MF
IDF
Inventor/Catia V5/Creo/NX/Solid Edge
SLDXML
STEP/IGES/ACIS
Parasolid

The following MBD settings are not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform.

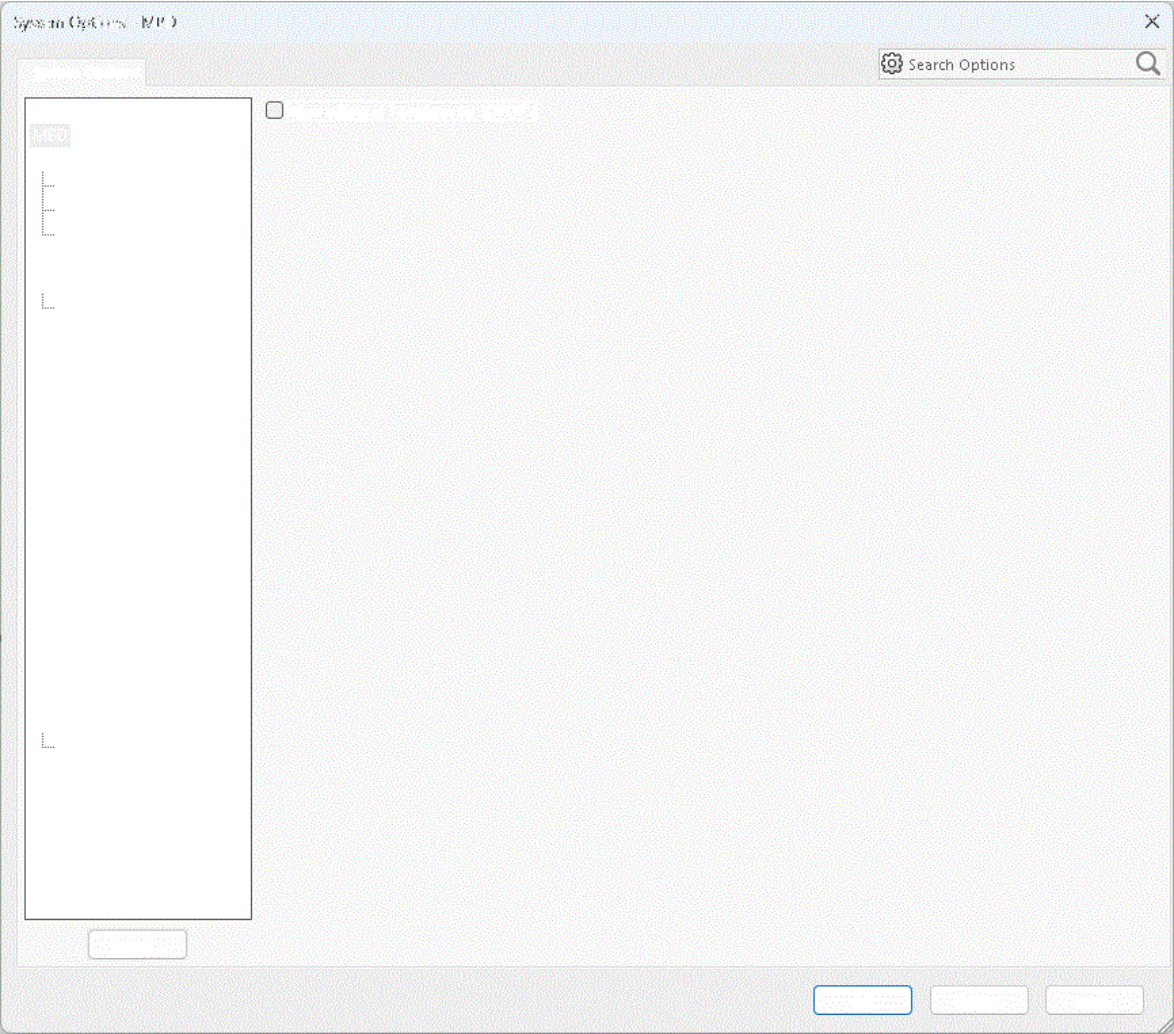

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Allow editing of Templates for 3DPDF's	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdit3DPDFTemplate) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdit3DPDFTemplate, <OnFlag>)	Boolean value	

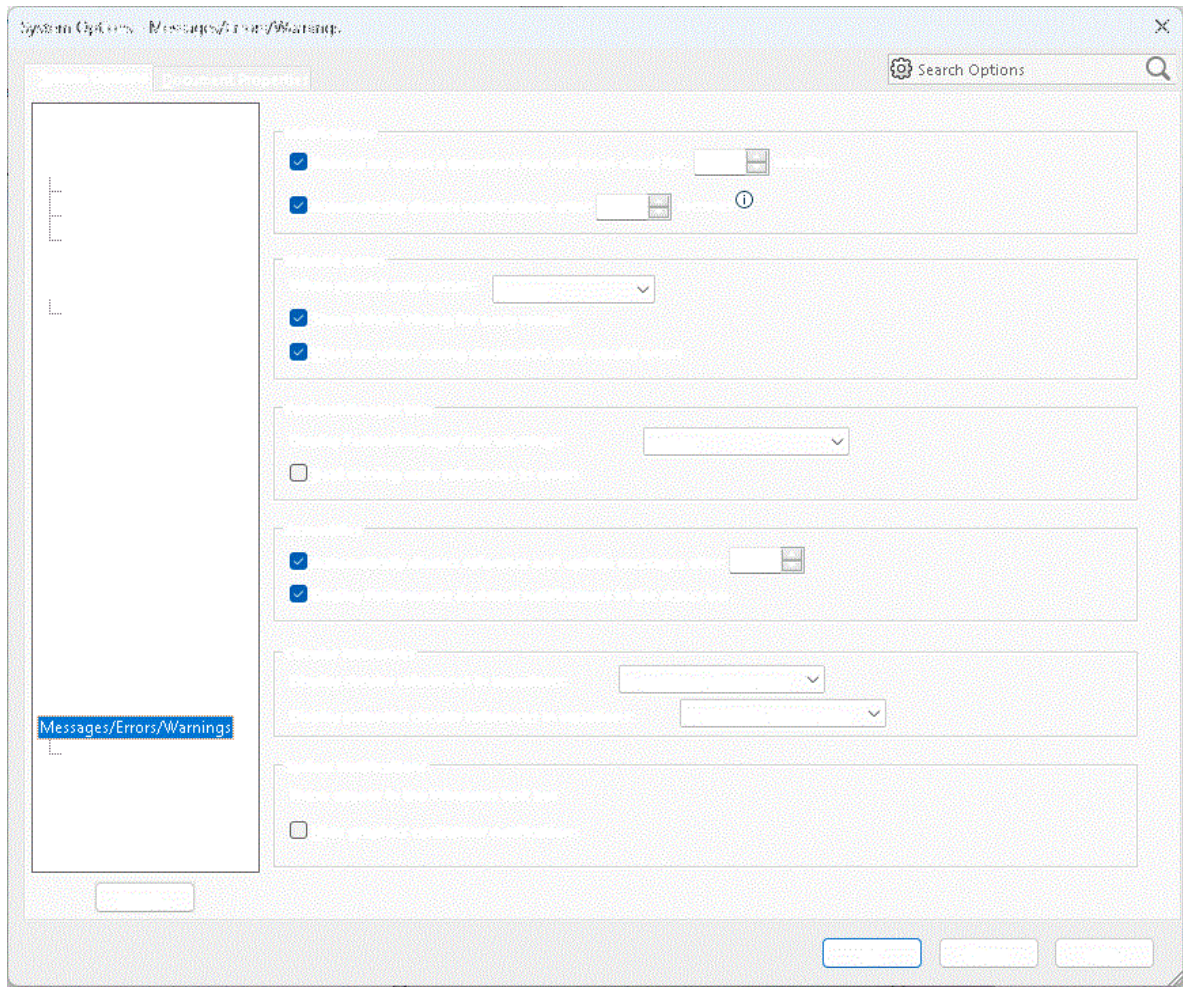

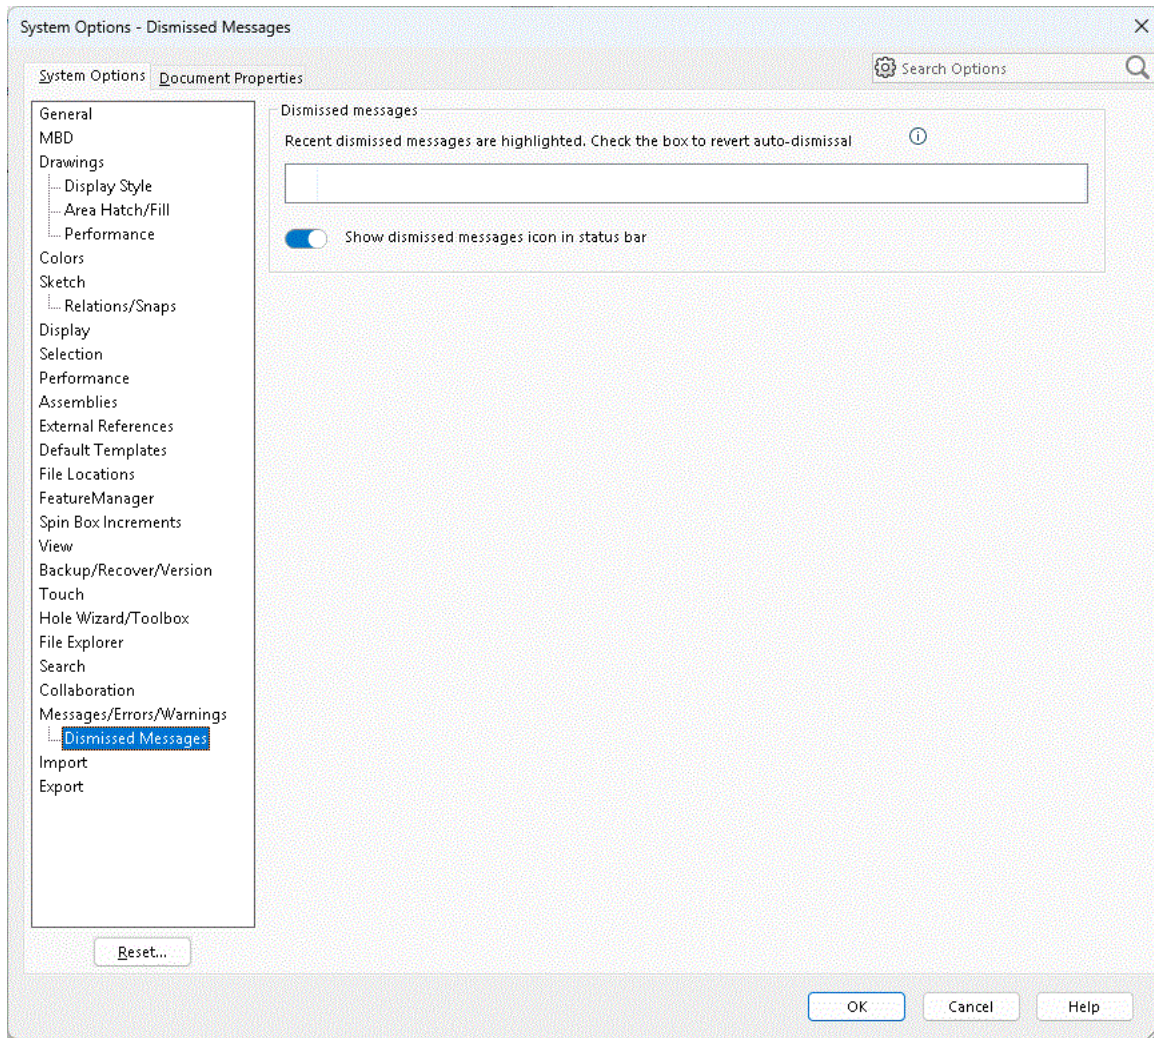

Setting	Get/Set Methods	Return Value or <Value>	
Notifications - Remind me when a document has not been saved for	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveReminderEnable) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveReminderEnable, <OnFlag>)	Boolean value	Spe doc
Notifications - Remind me when a document has not been saved for - <n>	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSaveReminderInterval) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSaveReminderInterval, <Value>)	Integer value: 1 - 60	Spe sen if sv
Notifications - Automatically dismiss notifications after	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveReminderAutoDismissEnable) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSaveReminderAutoDismissEnable, <OnFlag>)	Boolean value	Spe sav
Notifications - Automatically dismiss notifications after - <n>	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSaveReminderAutoDismissInterval) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSaveReminderAutoDismissInterval, <Value>)	Integer value: 1 - 60	Spe disr only true
Rebuild errors - When rebuild error occurs:	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRebuildErrorAction) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRebuildErrorAction, swStopContinuePrompt_e.<Value>)	See swStopContinuePrompt_e for valid options	
Rebuild errors - Show What's Wrong for every rebuild	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowErrorsEveryRebuild) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowErrorsEveryRebuild, <Value>)	Boolean value	Spe rebt
Rebuild errors - Warn me when saving documents with rebuild errors	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swWarnSaveUpdateErrors) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swWarnSaveUpdateErrors, <Value>)	Boolean value	Spe savi
Warn starting a sketch in the context of an assembly	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swWarnStartingSketchInContextAssembly) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swWarnStartingSketchInContextAssembly, <Value>)	Boolean value	Spe star
FeatureManager tree - Display FeatureManager tree warnings	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerDisplayWarnings) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerDisplayWarnings, swFeatureManagerDisplayWarnings_e.<Value>)	See swFeatureManagerDisplayWarnings_e for valid options	Spe des

FeatureManager tree - Treat missing mate references as errors	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowMateReferenceErrors) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowMateReferenceErrors, <Value>)	Boolean value	Spe refer
Assemblies - Automatically dismiss reference and update messages after	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swWhileOpeningAssembliesAutoDismissMessages) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swWhileOpeningAssembliesAutoDismissMessages, <Value>)	Boolean value	Spe after swA oper
Assemblies - Automatically dismiss reference and update messages after - seconds	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyOpenMessagesDismissTime) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swAssemblyOpenMessagesDismissTime, <Value>)	Integer value	Spe mes (sw) mus oper
Circular references - Display circular references in equations	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swShowEquationCircularReferencesMessage) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swShowEquationCircularReferencesMessage, swDisplayCircularReferencesInEquations_e.<Value>)	See swDisplayCircularReferencesInEquations_e for valid options	Spe refer
Circular references - Display potential circular references in equations	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swShowEquationPotentialCircularReferencesMessage) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swShowEquationPotentialCircularReferencesMessage, swDisplayPotentialCircularReferencesInEquations_e.<Value>)	See swDisplayPotentialCircularReferencesInEquations_e for valid options	Spe circi
System Notifications - Hide graphics card/driver notifications	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSystemNotificationHideGraphicsNotification) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSystemNotificationHideGraphicsNotification, <Value>)	Boolean value	
Dismissed messages - "One or more features in this part are based on other documents..."	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swOneOrMoreFeaturesInThisPartBasedOnOtherDoc) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swOneOrMoreFeaturesInThisPartBasedOnOtherDoc, <Value>)	Boolean value	If tr
Dismissed messages - "_____ needs updating. It has not been rebuilt successfully since the last..."	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swNeedsUpdatingItHasNotBeenRebuiltSuccessfully) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swNeedsUpdatingItHasNotBeenRebuiltSuccessfully, <Value>)	Boolean value	If tr
Dismissed messages - Show dismissed messages icon in status bar	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowDismissedMessagesIconInStatusBar) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowDismissedMessagesIconInStatusBar, <Value>)	Boolean value	