

SOLIDWORKS Enumerations (swconst) — Examples (8/8): SO_Miscellaneous-ViewUserInterface

SOLIDWORKS API Documentation (converted from CHM)

System Options > Miscellaneous

Some system-level enumerators exist in the SOLIDWORKS API that do not correspond to any of the options shown on the SOLIDWORKS **Tools > Options > System Options** dialogs. Click the links to jump to the tables in this topic containing these miscellaneous system-level enumerators.

NOTE: Unlinked text does not have any miscellaneous system-level enumerators. Unlinked text is shown to help you more easily map these miscellaneous system-level enumerators with the system options shown on the **Tools > Options > System Options** tab.

See [System Options and Document Properties](#) for details about system options and document properties.

Miscellaneous System-level Enumerators	
Related to categories on System Options tab	Not related to categories on System Options tab
General Drawings - Display Style - Area Hatch/Fill - Performance Colors Sketch - Relations/Snaps Display Selection Performance Assemblies External References Default Templates File Locations FeatureManager Spin Box Increments View Backup/Recover Hole Wizard/Toolbox File Explorer Search Collaboration Messages/Errors/Warnings Import Export	Bill of Materials Detailing Display States Large Assembly Mode PropertyManager Quick Tips Reference Triad Shaded Sketch Contours Viewpoint Mv.SOLIDWORKS

General

Enumerator	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
swEditDesignTableInSeparateWindow	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEditDesignTableInSeparateWindow) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEditDesignTableInSeparateWindow, <OnFlag>)	Boolean value	Specifies whether to open Excel worksheet in Excel window or in SOLIDWORKS graphics view
swNotifySNLNotObtainedForEDrawingsSave	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swNotifySNLNotObtainedForEDrawingsSave) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swNotifySNLNotObtainedForEDrawingsSave, <OnFlag>)	Boolean value	Specifies whether to display message box each time eDrawings file saved
swUndoStepsMaximum	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swUndoStepsMaximum) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swUndoStepsMaximum, <Value>)	Integer value	Specifies the maximum number of Undo steps allowed; the higher the number, the more memory used

[Back to top](#)

Drawings

Enumerator	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
swAutomaticDrawingViewUpdateForceOff	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticDrawingViewUpdateForceOff) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticDrawingViewUpdateForceOff, <OnFlag>)	Boolean value	Specifies whether to automatically update drawing views
swDrawingAutomaticModelDimPlacement	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingAutomaticModelDimPlacement) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingAutomaticModelDimPlacement, <OnFlag>)	Boolean value	Specifies whether inserted dimensions are automatically placed at appropriate distance

			from geometry in view
swDrawingDefaultSheetScaleDenominator	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDrawingDefaultSheetScaleDenominator) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDrawingDefaultSheetScaleDenominator, <Value>)	Double value	Specifies denominator for default drawing sheet scale
swDrawingDefaultSheetScaleNumerator	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDrawingDefaultSheetScaleNumerator) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDrawingDefaultSheetScaleNumerator, <Value>)	Double value	Specifies numerator for default drawing sheet scale
swDrawingDisplayViewBorders	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplayViewBorders) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingDisplayViewBorders, <OnFlag>)	Boolean value	Specifies whether borders are displayed around individual drawing views
swDynamicDrawingViewActivation	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDynamicDrawingViewActivation) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDynamicDrawingViewActivation, <OnFlag>)	Boolean value	Specifies whether the view closest to pointer is automatically activated
swDrawingPrintCrosshatchOutOfDateViews	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawingPrintCrosshatchOutOfDateViews) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDrawingPrintCrosshatchOutOfDateViews, swPromptAlwaysNever_e.<Value>)	See swPromptAlwaysNever_e for valid options	Specifies what happens when a drawing with out-of-date views is printed or print-previewed
swDrawingViewSmoothDynamicMotion	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingViewSmoothDynamicMotion) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDrawingViewSmoothDynamicMotion, <OnFlag>)	Boolean value	Specifies whether dynamic operations, such as panning and zooming, display smoothly

[Back to top](#)

Colors

NOTE: The input or output value is the corresponding [IColorTable](#) value unless otherwise specified.

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swSystemColorsActiveSelectionListBox	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsActiveSelectionListBox) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsActiveSelectionListBox, <Value>)	Integer value	RGB value
swSystemColorsCrossHair	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsCrossHair) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsCrossHair, <Value>)	Integer value	RGB value
swSystemColorsDrawingsLockedFocus	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsDrawingsLockedFocus) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsDrawingsLockedFocus, <Value>)	Integer value	Border color; RGB value
swSystemColorsDrawingsSheetBorder	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsDrawingsSheetBorder) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsDrawingsSheetBorder, <Value>)	Integer value	Drawing sheet border color; RGB value
swSystemColorsDrawingsViewBorder	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsDrawingsViewBorder) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsDrawingsViewBorder, <Value>)	Integer value	View border color; RGB value
swSystemColorsNoteEditHandle	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsNoteEditHandle) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsNoteEditHandle, <Value>)	Integer value	RGB value
swSystemColorsNoteHandle	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsNoteHandle) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsNoteHandle, <Value>)	Integer value	RGB value
swSystemColorsTemporarySketchDragging	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsTemporarySketchDragging) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsTemporarySketchDragging, <Value>)	Integer value	RGB value
swSystemColorsTreeViewBackground	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsTreeViewBackground)	Integer value	Read-only RGB value
swSystemColorsWeldPathSelection	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsWeldPathSelection) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSystemColorsWeldPathSelection, <Value>)	Integer value	RGB value

[Back to top](#)

Sketch

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
Display virtual sharps	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayVirtualSharps) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayVirtualSharps, <OnFlag>)	Boolean value	Specifies whether to create sketch point at the virtual intersection point of two sketch entities

[Back to top](#)

Display

Enumerator	Get/Set Methods	Return Value or	Comment
------------	-----------------	-----------------	---------

		<OnFlag>	
swDisplayMissingRefsWhenEditFeature	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayMissingRefsWhenEditFeature) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayMissingRefsWhenEditFeature, <OnFlag>)	Boolean value	Specifies whether to display missing references when editing features
swEdgesShadedEdgesDifferentColor	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesShadedEdgesDifferentColor) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesShadedEdgesDifferentColor, <OnFlag>)	Boolean value	Specifies whether to apply specified color to model edges when model is in Shaded With Edges mode

[Back to top](#)

Performance

Enumerator	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
swPerformanceDynamicUpdateOnMove	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPerformanceDynamicUpdateOnMove) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPerformanceDynamicUpdateOnMove, <OnFlag>)	Boolean value	Specifies whether to display feature preview while dragging entities of sketch
swPerformanceWin95ZoomClipping	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPerformanceWin95ZoomClipping) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPerformanceWin95ZoomClipping, <OnFlag>)	Boolean value	Valid for Windows ME only; specifies whether selected portion of model can be zoomed in on
swPerformanceViewsToDraftQuality	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPerformanceViewsToDraftQuality) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPerformanceViewsToDraftQuality, <Value>)	0 = Prompt 1 = Always 2 = Never	Specifies whether to automatically convert drawing views to draft quality when unloading components
swRebuildOnActivation	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRebuildOnActivation) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swRebuildOnActivation, swRebuildOnActivation_e.<Value>)	See swRebuildOnActivation_e for valid options.	

[Back to top](#)

Assemblies

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swClearanceShowIgnored	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceShowIgnored) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceShowIgnored, <OnFlag>)	Boolean value	Specifies whether to show ignored clearances
swClearanceIgnoreEqual	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceIgnoreEqual) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceIgnoreEqual, <OnFlag>)	Boolean value	Specifies whether to ignore clearance equal to specified value
swClearanceSubAssyAsComp	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceSubAssyAsComp) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceSubAssyAsComp, <OnFlag>)	Boolean value	Specifies whether to treat subassemblies as components
swClearanceFasteners	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceFasteners) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceFasteners, <OnFlag>)	Boolean value	Specifies whether to create fasteners folder
swClearanceDisplayOption	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceDisplayOption) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swClearanceDisplayOption, <OnFlag>)	Boolean value	Specifies whether to make parts under study transparent
swIncontextFeatureHolderVisibility	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIncontextFeatureHolderVisibility) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIncontextFeatureHolderVisibility, <OnFlag>)	Boolean value	Specifies whether to hide or show all of the in-context icons

[Back to top](#)

External References

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swWarnSavingReferencedDoc	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swWarnSavingReferencedDoc) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swWarnSavingReferencedDoc, <OnFlag>)	Boolean value	Specifies whether to display a warning when saving an assembly that references models that have been modified

[Back to top](#)

File Locations

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swFileLocationsRouteCableLibrary	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsRouteCableLibrary) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsRouteCableLibrary, <Value>)	String value	
swFileLocationsRouteComponentLibrary	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsRouteComponentLibrary) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsRouteComponentLibrary, <Value>)	String value	
swFileLocationsRouteCoveringLibrary	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsRouteCoveringLibrary) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swFileLocationsRouteCoveringLibrary, <Value>)	String value	

[Back to top](#)

FeatureManager

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swFeatureManagerConfigTableFolderVisibility	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerConfigTableFolderVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerConfigTableFolderVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	
swFeatureManagerLightVisibility	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerLightVisibility) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swFeatureManagerLightFolderVisibility, swAutoHideShowResponse_e.<Value>)	See swAutoHideShowResponse_e for valid options	

[Back to top](#)

View

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swInsertViewForNewDrawing	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swInsertViewForNewDrawing) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swInsertViewForNewDrawing, <OnFlag>)	Boolean value	Controls whether the Model View PropertyManager is automatically displayed when the user opens a new drawing
swViewShowAnnotationLinkErrors	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swViewShowAnnotationLinkErrors) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swViewShowAnnotationLinkErrors, <OnFlag>)	Boolean value	Specifies whether to show annotation link errors
swViewShowAnnotationLinkVariables	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swViewShowAnnotationLinkVariables) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swViewShowAnnotationLinkVariables, <OnFlag>)	Boolean value	Specifies whether to show annotation link variables

[Back to top](#)

File Explorer

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swLockRecentDocumentsList	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLockRecentDocumentsList) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLockRecentDocumentsList, <OnFlag>)	Boolean value	Specifies whether to lock the recent documents list to prevent opened documents from being added to it

[Back to top](#)

Collaboration

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swCollabTopDocsNoPromptOrSave	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabTopDocsNoPromptOrSave) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCollabTopDocsNoPromptOrSave, <OnFlag>)	Boolean value	Specifies to not prompt to save read-only referenced documents

[Back to top](#)

Bill of Materials

Enumerator	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
swBomConfigurationAlignBottom	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomConfigurationAlignBottom) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomConfigurationAlignBottom, <OnFlag>)	Boolean value	For Excel-based items to BOM by
swBOMConfigurationAnchorType	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBOMConfigurationAnchorType) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBOMConfigurationAnchorType, swBOMConfigurationAnchorType_e.<Value>)	See swBOMConfigurationAnchorType_e for valid options	
swBomConfigurationUseDocumentFont	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomConfigurationUseDocumentFont) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomConfigurationUseDocumentFont, <OnFlag>)	Boolean value	For Excel-based document's note
swBomConfigurationUseSummaryInfo	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomConfigurationUseSummaryInfo) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomConfigurationUseSummaryInfo, <OnFlag>)	Boolean value	For Excel-based identifier number part number in t
swBOMConfigurationWhatToShow	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBOMConfigurationWhatToShow) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBOMConfigurationWhatToShow, swBOMConfigurationWhatToShow_e.<Value>)	See swBOMConfigurationWhatToShow_e for valid options for valid options	
swBOMContentsDisplayAtTop	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBOMContentsDisplayAtTop) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBOMContentsDisplayAtTop, <OnFlag>)	Boolean value	For Excel-based column headers
swBOMControlIDFromAssembly	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBOMControlIDFromAssembly) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBOMControlIDFromAssembly, <OnFlag>)	Boolean value	For Excel-based follow assembly
swBOMControlMissingRowDisplay	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBOMControlMissingRowDisplay) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBOMControlMissingRowDisplay, swBOMControlMissingRowDisplay_e.<Value>)	See swBOMControlMissingRowDisplay_e for valid options	
swBOMControlMissingRows	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBOMControlMissingRows) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBOMControlMissingRows, <OnFlag>)	Boolean value	For Excel-based removed compo
swBOMControlSplitDirection	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBOMControlSplitDirection) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swBOMControlSplitDirection, swBOMControlSplitDirection_e.<Value>)	See swBOMControlSplitDirection_e for valid options	
swBOMControlSplitHeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swBOMControlSplitHeight) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swBOMControlSplitHeight, <Value>)	Double value	Specifies BOM t based BOM tabl
swBOMControlSplitTable	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBOMControlMissingRows)	Boolean value	For Excel-based be split as indic

	ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBOMControlMissingRows, <OnFlag>)		swUserPreferen and swUserPreferen
--	---	--	---

[Back to top](#)

Detailing

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swDetailingDimFontHeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swDetailingDimFontHeight)	Double value in meters	Read-only; specifies height of dimensions
swDetailingNoteFontHeight	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.wDetailingNoteFontHeight)	Double value in meters	Read-only; specifies height of notes

[Back to top](#)

Display States

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swDisplayStateCreationChoice	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDisplayStateCreationChoice) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swDisplayStateCreationChoice, swDisplayStateCreationChoices_e.<Value>)	See swDisplayStateCreationChoices_e for valid options	Specifies which display states to preserve for documents that: - have both SOLIDWORKS colors and PhotoWorks material display states - were saved in SOLIDWORKS 2009 or earlier

[Back to top](#)

Large Assembly Mode

Enumerator	Get/Set Methods	Return Value or <Value> or <OnFlag>	
swLargeAsmModeAlwaysGenerateCurvature	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAlwaysGenerateCurvature) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAlwaysGenerateCurvature, <OnFlag>)	Boolean value	Specifies:
swLargeAsmModeAntiAliasEdgesFastMode	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAntiAliasEdgesFastMode) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAntiAliasEdgesFastMode, <OnFlag>)	Boolean value	Specifies:
swLargeAsmModeAutoActivate	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeAutoActivate) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeAutoActivate, <Value>)	0 = Prompt 1 = Always 2 = Never	In SOLIDWORKS
swLargeAsmModeAutoHideCompsDrawViewCreation	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAutoHideCompsDrawViewCreation) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeAutoHideCompsDrawViewCreation, <Value>)	Boolean value	Specifies:
swLargeAsmModeAutoRecoverCount	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeAutoRecoverCount) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeAutoRecoverCount, <Value>)	Integer value	
swLargeAsmModeCheckOutOfDateLightweight	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeCheckOutOfDateLightweight) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeCheckOutOfDateLightweight, <Value>)	0 = Do not check 1 = Indicate 2 = Always resolve	
swLargeAsmModeDisplayModeForNewDrawViews	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeDisplayModeForNewDrawViews) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swLargeAsmModeDisplayModeForNewDrawViews, <Value>)	0 = Wireframe 1 = Hidden Lines Visible 2 = Hidden Lines Removed 3 = Shaded	To set the display mode, set swUserPreferenceIntegerValue_e.swLargeAsmModeDisplayModeForNewDrawViews to the desired mode, such as 1 for Hidden Lines Visible.
swLargeAsmModeDrawingAutoLoadModels	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDrawingAutoLoadModels) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDrawingAutoLoadModels, <Value>)	Boolean value	Specifies:
swLargeAsmModeDrawingHLREdgesWhenShaded	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDrawingHLREdgesWhenShaded) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDrawingHLREdgesWhenShaded, <Value>)	Boolean value	Specifies: NOTE: If the mode is set to 1, the edges are shaded. If the mode is set to 0, the edges are not shaded.
swLargeAsmModeDynHighlightFeatureMgr	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDynHighlightFeatureMgr) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDynHighlightFeatureMgr, <Value>)	Boolean value	Specifies: them in the feature tree
swLargeAsmModeDynHighlightGraphicsView	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDynHighlightGraphicsView) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeDynHighlightGraphicsView, <Value>)	Boolean value	Specifies: them in the graphics view
swLargeAsmModePreviewInsertComponents	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModePreviewInsertComponents) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModePreviewInsertComponents, <Value>)	Boolean value	Specifies:
swLargeAsmModeRemoveDetail	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeRemoveDetail) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeRemoveDetail, <Value>)	Boolean value	Specifies:

swLargeAsmModeShadowsShadedMode	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeShadowsShadedMode) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeShadowsShadedMode, <Value>)	Boolean value	Specifies:
swLargeAsmModeShowContentsDragDrawView	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeShowContentsDragDrawView) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeShowContentsDragDrawView, <Value>)	Boolean value	Specifies:
swLargeAsmModeSmoothDynamicMotionDrawView	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeSmoothDynamicMotionDrawView) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeSmoothDynamicMotionDrawView, <Value>)	Boolean value	Specifies:
swLargeAsmModeTransparencyDynamicViewMode	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeTransparencyDynamicViewMode) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeTransparencyDynamicViewMode, <Value>)	Boolean value	Specifies:
swLargeAsmModeTransparencyNormalViewMode	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeTransparencyNormalViewMode) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeTransparencyNormalViewMode, <Value>)	Boolean value	Specifies:
swLargeAsmModeUpdateMassPropsOnSave	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeUpdateMassPropsOnSave) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swLargeAsmModeUpdateMassPropsOnSave, <Value>)	Boolean value	Specifies:

[Back to top](#)

PropertyManager

Enumerator	Get/Set Methods	Return Value or <Value>	Comment
swPropertyManagerColorActiveClosedDivider	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorActiveClosedDivider)	Read-only integer value for RGB color in use	
swPropertyManagerColorBackground	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorBackground)	Read-only integer value for RGB color in use	
swPropertyManagerColor_Divider	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColor_Divider)	Read-only integer value for RGB color in use	
swPropertyManagerColorEditBox	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorEditBox)	Read-only integer value for RGB color in use	
swPropertyManagerColor_EditText	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColor_EditText)	Read-only integer value for RGB color in use	
swPropertyManagerColorImportantMessage	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorImportantMessage)	Read-only integer value for RGB color in use	
swPropertyManagerColorInnerBorder	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorInnerBorder)	Read-only integer value for RGB color in use	
swPropertyManagerColorLabelAndIcon	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorLabelAndIcon)	Read-only integer value for RGB color in use	
swPropertyManagerColorTitle	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorTitle)	Read-only integer value for RGB color in use	
swPropertyManagerColorOuterBorder	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorOuterBorder)	Read-only integer value for RGB color in use	
swPropertyManagerColorTopBorder	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorTopBorder)	Read-only integer value for RGB color in use	
swPropertyManagerColorDivider	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyManagerColorDivider)	Read-only integer value for RGB color in use	
swPropertyMgrDockingState	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceInteger_e.swPropertyMgrDockingState)	See swPMContainer_e for valid options	

[Back to top](#)

Quick Tips

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swQuickTipsAssembly	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickTipsAssembly) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickTipsAssembly, <OnFlag>)	Boolean value	Specifies whether to enable or disable Quick Tips in assembly documents
swQuickTipsDrawing	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickTipsDrawing) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickTipsDrawing, <OnFlag>)	Boolean value	Specifies whether to enable or disable Quick Tips in drawing documents
swQuickTipsPart	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickTipsPart) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickTipsPart, <OnFlag>)	Boolean value	Specifies whether to enable or disable Quick Tips in part documents

[Back to top](#)

Reference Triad

Enumerator	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
swReferenceTriadUseAlternateLabel	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swReferenceTriadUseAlternateLabel) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swReferenceTriadUseAlternateLabel, <OnFlag>)	Boolean value	Indicates whether alternate text should replace the reference triad's standard text of X, Y, and Z; whenever you change this value, you must redraw the window to see the new text; use ISldWorks::SetUserPreferenceStringValue swUserPreferenceStringValue_e.swReferenceTriadXlal

			swUserPreferenceStringValue_e.swReferenceTriadYLabel and swUserPreferenceStringValue_e.swReferenceTriadZLabel to specify the alternate text
swReferenceTriadXLabel	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swReferenceTriadXLabel) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swReferenceTriadXLabel, <Value>)	String value	Alternate text for the reference triad's standard text of X
swReferenceTriadYLabel	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swReferenceTriadYLabel) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swReferenceTriadYLabel, <Value>)	String value	Alternate text for the reference triad's standard text of Y
swReferenceTriadZLabel	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swReferenceTriadZLabel) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swReferenceTriadZLabel, <Value>)	String value	Alternate text for the reference triad's standard text of Z

NOTE: Use [ISldWorks::SetUserPreferenceToggle](#)(swUserPreferenceToggle_e.swReferenceTriadUseAlternateLabels, <OnFlag>) to indicate whether alternate text should replace the reference triad's standard text of X, Y, or Z. If swUserPreferenceToggle_e.swReferenceTriadUseAlternateLabels is true and swReferenceTriadXLabel, swReferenceTriadYLabel, or swReferenceTriadZLabel is blank, then the corresponding default text of X, Y, or Z is displayed.

[Back to top](#)

Shaded Sketch Contours

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swShadedSketchContours	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swShadedSketchContours) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swShadedSketchContours, <OnFlag>)	Boolean value	True to shade closed sketch contour areas, false to not

[Back to top](#)

Viewpoint

Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swViewpointPreserveNormals	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swViewpointPreserveNormals) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swViewpointPreserveNormals, <OnFlag>)	Boolean value	Specifies whether to preserve normals when saving document as Viewpoint file

[Back to top](#)

My SolidWorks


Enumerator	Get/Set Methods	Return Value or <OnFlag>	Comment
swMySldSettings	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swMySldSettings) ISldWorks::SetUserPreferenceStringValue (swUserPreferenceStringValue_e.swMySldSettings, <Value>)	String value	

[Back to top](#)

System Options - Performance

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

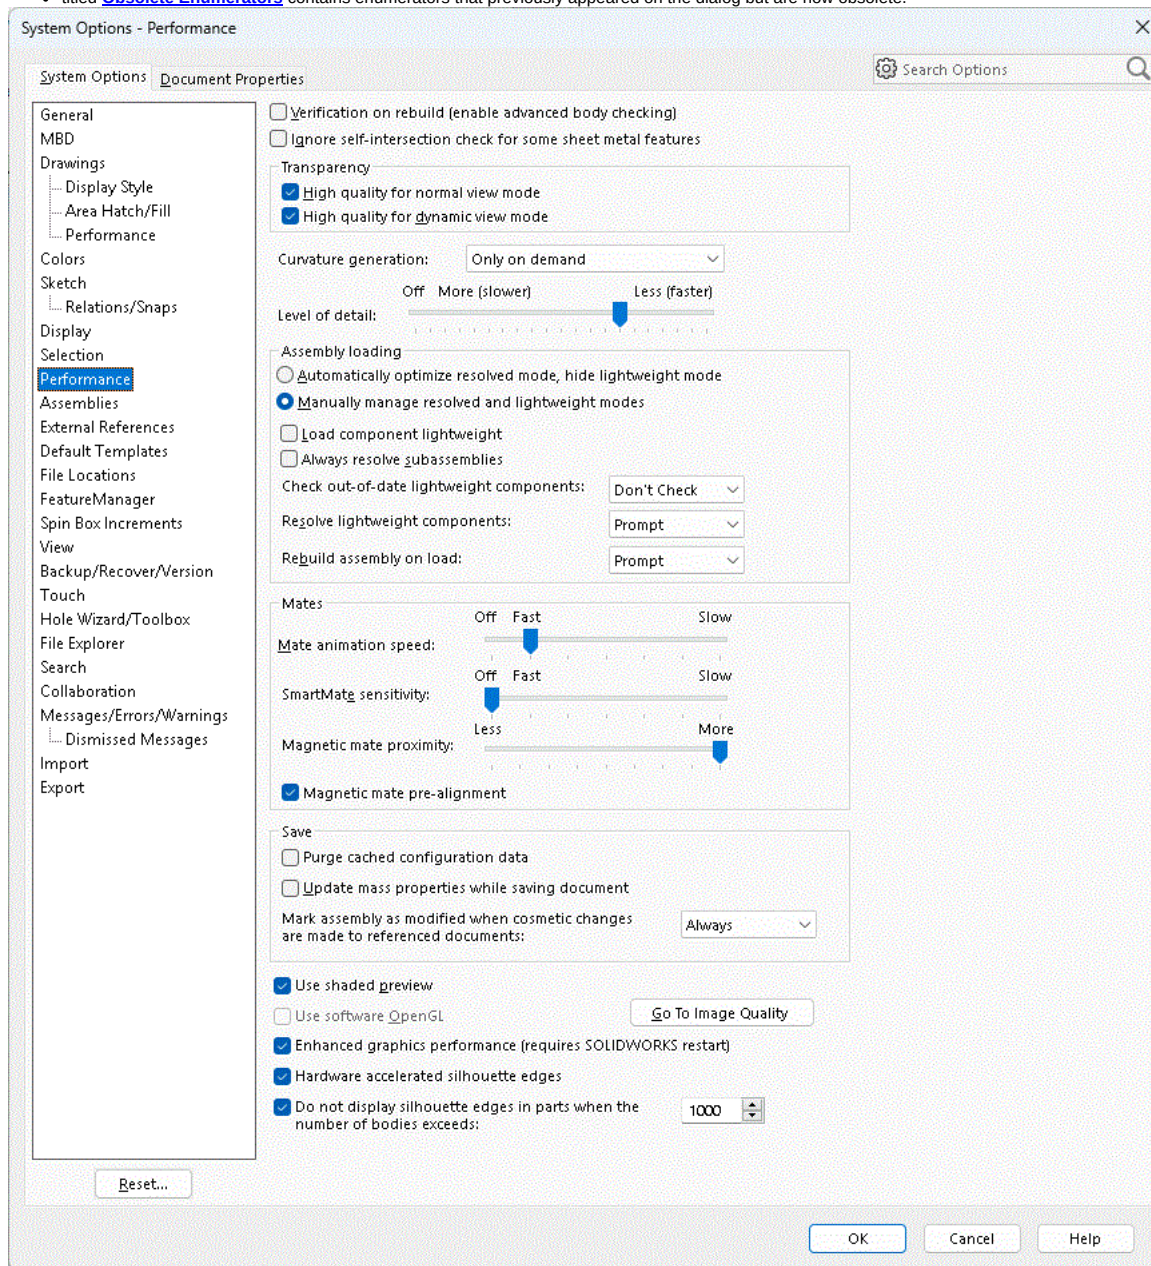

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Verification on rebuild	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPerformanceVerifyOnRebuild) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPerformanceVerifyOnRebuild, <OnFlag>)	Boolean value	Controls the level of error checking when you create or modify features. For most applications, the default setting (cleared) is adequate and results in a faster rebuild of the model

Ignores self-intersection check for some sheet metal features	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swPerformanceSheetMetalIgnoreSelfIntersect) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swPerformanceSheetMetalIgnoreSelfIntersect, <OnFlag>)	Boolean value	Specifies whether to suppress warning messages for certain sheet metal parts; for example, when flanges share a common edge and the part flattens correctly but displays a warning message
Transparency - High quality for normal view mode	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swUseAlphaTransparency) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swUseAlphaTransparency, <OnFlag>)	Boolean value	Specifies whether to change transparency quality from high to low when part or assembly is moving
Transparency - High quality for dynamic view mode	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swTransparencyHighQualityDynamic) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swTransparencyHighQualityDynamic, <OnFlag>)	Boolean value	Specifies whether high-quality transparency is retained while moving or rotating model with pan or rotate tools
Curvature generation	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swPerformanceAlwaysGenerateCurvature) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swPerformanceAlwaysGenerateCurvature, <OnFlag>)	Boolean value: • True = Always (for every shaded model) • False = Only on demand	Specifies whether to always display curvature for shaded models
Level of detail	ISldWorks::GetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swLevelOfDetail) ISldWorks::SetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swLevelOfDetail, <Value>)	Integer value ranging from 0 to 20	Target frame rates ranging from 0 (off) to 20 (maximum level of detail removed); for example, if set at 20, then try and get 20FPS on spin dynamics by dropping detail until rate is achieved
Assembly loading - Automatically load component data on demand - or - Manually manage resolved and lightweight modes	ISldWorks::GetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swAssemblyLoadComponents) ISldWorks::SetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swAssemblyLoadComponents, swAssemblyLoadComponents_e.<Value>)	See swAssemblyLoadComponents_e for options	
Assembly loading - Auto resolve sub-assemblies upon expansion in tree	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swAutoResolveSubAssembliesUponExpansionInTree) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swAutoResolveSubAssembliesUponExpansionInTree, <OnFlag>)	Boolean value	Valid only if Assembly loading - Manually manage resolved and lightweight modes is selected
Assembly loading - Load component lightweight	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swAutoLoadPartsLightweight) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swAutoLoadPartsLightweight, <OnFlag>)	Boolean value	Valid only if Assembly loading - Manually manage resolved and lightweight modes is selected
Assembly loading - Always resolve subassemblies	ISldWorks::GetUserPreferenceToggle(swUserPreferenceToggle_e.swPerformanceAlwaysResolveSubassemblies) ISldWorks::SetUserPreferenceToggle(swUserPreferenceToggle_e.swPerformanceAlwaysResolveSubassemblies, <OnFlag>)	Boolean value	Specifies whether to always resolve subassemblies when an assembly opens lightweight; Valid only if Assembly loading - Manually manage resolved and lightweight modes is selected
Assembly loading - Check out-of-date lightweight components	ISldWorks::GetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swCheckForOutOfDateLightweightComponents) ISldWorks::SetUserPreferenceIntegerValue(swUserPreferenceIntegerValue_e.swCheckForOutOfDateLightweightComponents, swCheckOutOfDate_e.<Value>)	See swCheckOutOfDate_e for valid options	Valid only if Assembly loading - Manually manage resolved and lightweight modes is selected

Assembly loading - Resolve lightweight components	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swResolveLightweight) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swResolveLightweight, swPromptAlwaysNever_e.<Value>)	Integer value: 0 = Prompt 1 = Always	Valid only if Assembly loading - Manually manage resolved and lightweight modes is selected
Assembly loading - Rebuild assembly on load:	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPerformanceAssemRebuildOnLoad) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPerformanceAssemRebuildOnLoad, swPromptAlwaysNever_e.<Value>)	See swPromptAlwaysNever_e for valid options	Valid only if Assembly loading - Manually manage resolved and lightweight modes is selected
Mates - Mate animation speed	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swMateAnimationSpeed) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swMateAnimationSpeed, <Value>)	Double value: 0 = off >0 = animation speed in seconds	Specifies speed of animation for mates
Mates - SmartMate Sensitivity	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSmartMateSensitivity) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSmartMateSensitivity, <Value>)	Double value: 0 = off >0 = animation speed in seconds	Specifies the speed at which SmartMates are applied
Mates - Magnetic mate pre-alignment	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swMagMatePreAlign) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swMagMatePreAlign, <OnFlag>)	Boolean value	Specifies whether to enable magnetic mates pre-alignment
Save - Purge cached configuration data	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPurgeAllBodiesForNonActiveConfigurations) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPurgeAllBodiesForNonActiveConfigurations, <OnFlag>)	Boolean value	Specifies whether to purge cached configuration data to reduce file size and save time
Save - Update mass properties while saving document	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUpdateMassPropsDuringSave) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUpdateMassPropsDuringSave, <OnFlag>)	Boolean value	Specifies whether to update mass properties information when saving document
Save - Mark assembly as modified when cosmetic changes are made to referenced documents	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swMarkAssyAsModifiedWhenCosmeticChangesToRefDocs) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swMarkAssyAsModifiedWhenCosmeticChangesToRefDocs, swPromptAlwaysNever_e.<Value>)	See swPromptAlwaysNever_e for valid options	
Use shaded preview	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseShadedPreview) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseShadedPreview, <OnFlag>)	Boolean value	Specifies whether to use shaded preview
Use software OpenGL	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseSimpleOpenGL)	Read-only Boolean value	Specifies whether graphics adapter hardware acceleration is disabled and graphics rendering using only software is enabled
Enhanced graphics performance (requires SOLIDWORKS restart)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEnablePerformancePipeline) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEnablePerformancePipeline, <OnFlag>)	Boolean value	
Hardware accelerated silhouette edges	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swHardwareAccSilhouetteEdges) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swHardwareAccSilhouetteEdges, <OnFlag>)	Boolean value	

Obsolete Enumerators


Enumerator	Comment
swPerformanceRemoveDetailDuringZoomPanRotate	Obsolete ; specified whether to remove small components and faces (both interior and exterior) from graphics area when zooming, panning, or rotating model to improve system performance
swPerformanceSave	Obsolete
swPerformancePreviewDuringOpen	Obsolete; specified whether to preview the model while opening it

System Options > Search

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

The Search dialog is not available in SOLIDWORKS Design connected to the 3DEXPERIENCE platform.

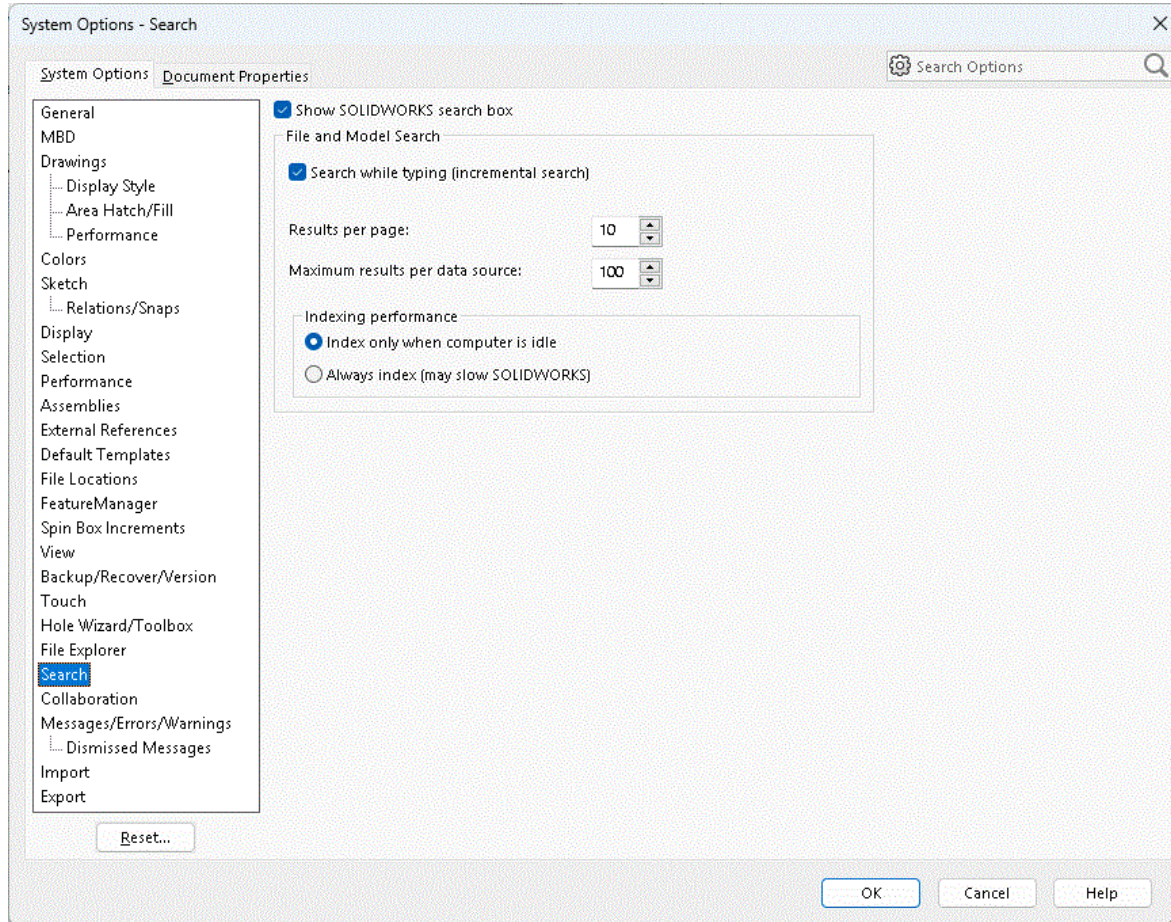


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Show SOLIDWORKS search box	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSearchShowSOLIDWORKSSearchBar) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSearchShowSOLIDWORKSSearchBar, <OnFlag>)	Boolean value	Specifies whether to show the SOLIDWORKS search box
File and Model Search - Search while typing (incremental search)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSearchWhileTyping) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSearchWhileTyping, <OnFlag>)	Boolean value	Specifies whether to start the search while typing the search string
File and Model Search - Results per page	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSearchResultsPerPage) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSearchResultsPerPage, <Value>)	Integer value	Specifies number of search results to show per page
File and Model Search - Maximum results per data source	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSearchMaxResultsPerDataSource) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSearchMaxResultsPerDataSource, <Value>)	Integer value	Specifies maximum number of results per data source
File and Model Search - Indexing Performance	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSearchIndexingPerformance) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSearchIndexingPerformance, swSearchIndexingPerformance_e.<Value>)	See swSearchIndexingPerformance_e for valid options	Specifies when to perform search indexing

Obsolete Enumerators

Enumerator	Comment
swSearchDissectionScheduleDaily	Obsolete
swSearchDissectionDailyStartTime	Obsolete
swSearchDissectionDailyStopTime	Obsolete

swSearchDissectionLocation	Obsolete
swSearchIncludeContentCentral	Obsolete

System Options > Selection

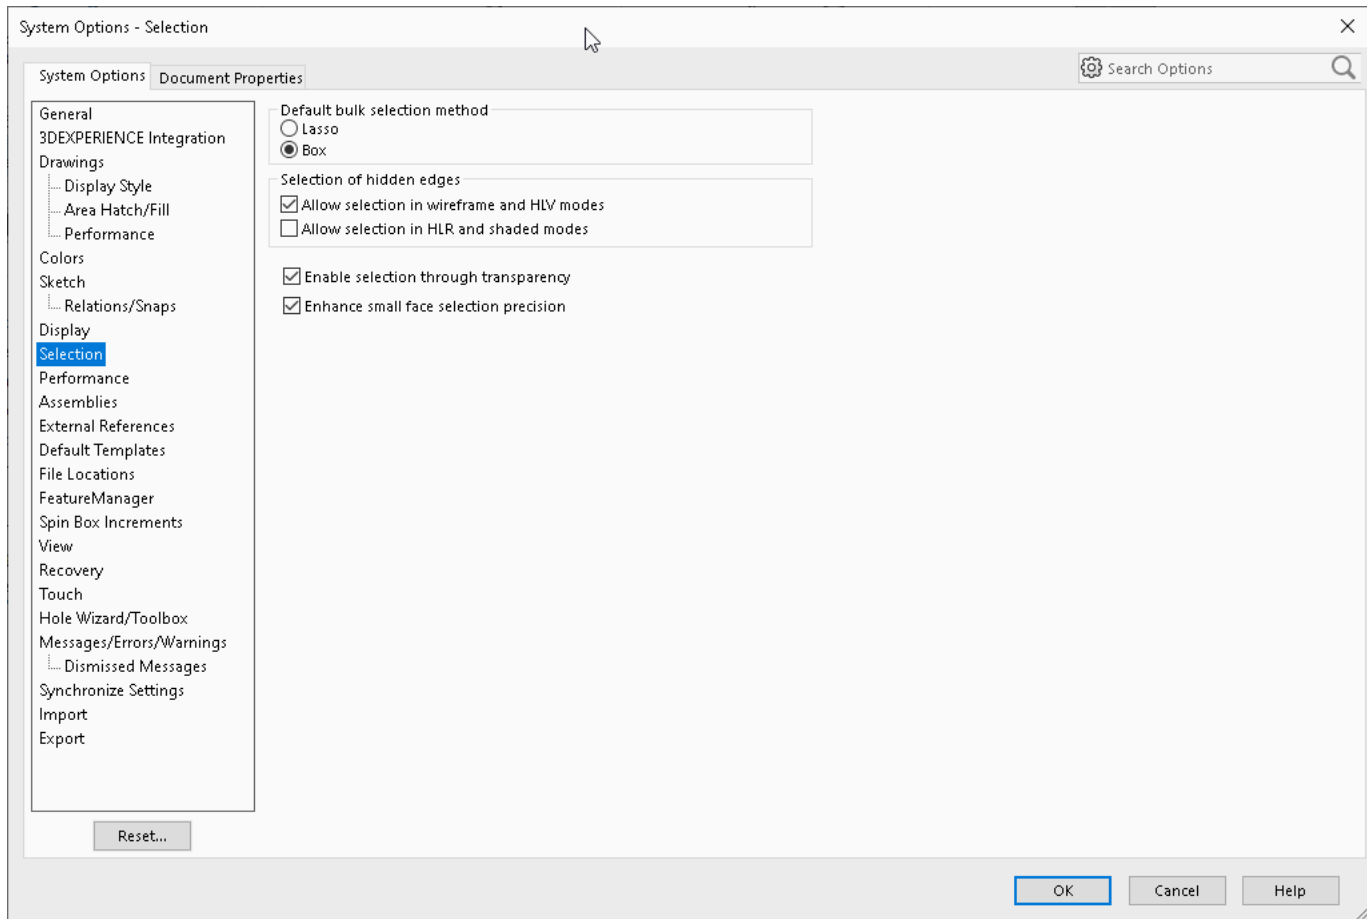



Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Default bulk selection method - Lasso or Box	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesDefaultBulkSelection2) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesDefaultBulkSelection2, <OnFlag>)	Boolean value	True to use a lasso for bulk selection, false to use a box
Selection of hidden edges - Allow selection in wireframe and HLV modes	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesHiddenEdgeSelectionInWireframe) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesHiddenEdgeSelectionInWireframe, <OnFlag>)	Boolean value	Specifies whether to allow selection of hidden edges or vertices in Wireframe and Hidden Lines Visible modes
Selection of hidden edges - Allow selection in HLR and shaded modes	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesHiddenEdgeSelectionInHLR) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEdgesHiddenEdgeSelectionInHLR, <OnFlag>)	Boolean value	Specifies whether to allow selection of hidden edges or vertices in Wireframe and Hidden Lines Visible modes
Enable selection through transparency	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayEnableSelectionThroughTransparency) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayEnableSelectionThroughTransparency, <OnFlag>)	Boolean value	Specifies whether to enable selection of opaque objects behind transparent objects in graphics area or selection of nearest object regardless of transparency
Enhance small face selection precision	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEnhanceSmallFaceSelectionPrecision) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEnhanceSmallFaceSelectionPrecision, <OnFlag>)	Boolean value	Specifies whether to enable selecting small entities more easily

System Options > Sketch

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

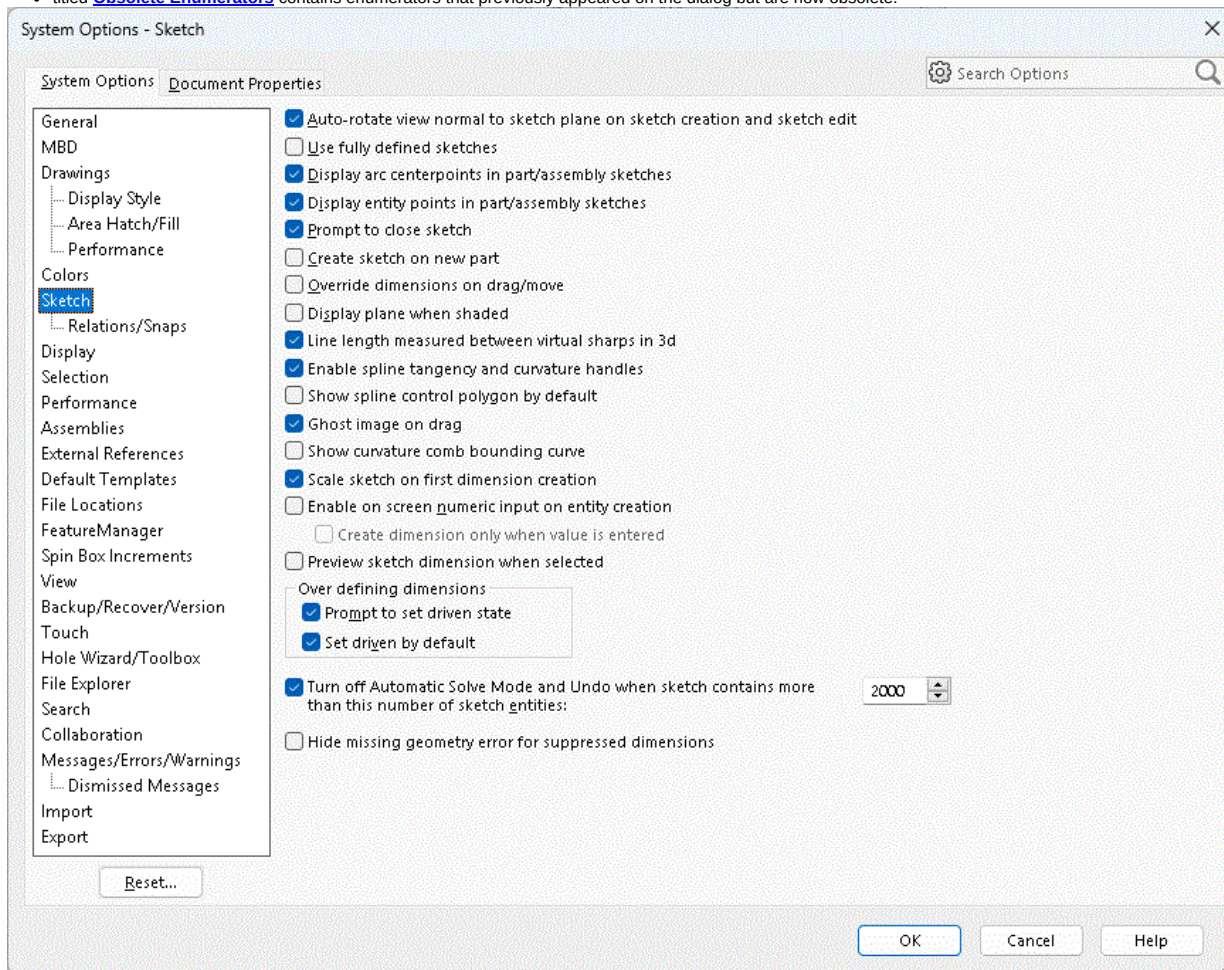

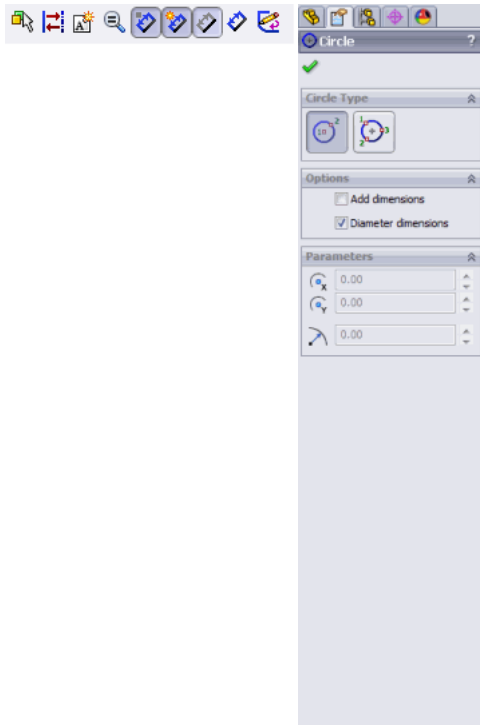

Setting	Get/Set Methods	Return Value or <OnFlag>	Comment
Auto-rotate view normal to sketch plane on sketch creation and sketch edit	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoNormalToSketchMode) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoNormalToSketchMode, <OnFlag>)	Boolean value	Specifies whether to automatically rotate the view normal to the sketch plane when creating subsequent sketches; the very first sketch is always rotated normal to the sketch plane, even if this setting is set to false
Use fully defined sketches	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFullyConstrainedSketchMode) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFullyConstrainedSketchMode, <OnFlag>)	Boolean value	Specifies whether sketches must be fully defined to create features
Display arc centerpoints in part/assembly sketches	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayArcCenterPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayArcCenterPoints, <OnFlag>)	Boolean value	Specifies whether to display arc center points in part and assembly sketches
Display entity points in part/assembly sketches	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayEntityPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayEntityPoints, <OnFlag>)	Boolean value	Specifies whether to display endpoints of sketch entities as filled circles in part and assembly sketches
Prompt to close sketch	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchPromptToCloseSketch) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchPromptToCloseSketch, <OnFlag>)	Boolean value	Specifies whether to display a dialog when creating open-profile sketch and extruding sketch to create boss feature
Create sketch on new part	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchCreateSketchOnNewPart) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchCreateSketchOnNewPart, <OnFlag>)	Boolean value	Specifies whether to open new part with active sketch on the Front Plane
Override dimensions on drag/move	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchOverrideDimensionsOnDrag) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchOverrideDimensionsOnDrag, <OnFlag>)	Boolean value	Specifies whether to override dimensions when dragging or moving sketch entities
Display plane when shaded	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchDisplayPlaneWhenShaded) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchDisplayPlaneWhenShaded, <OnFlag>)	Boolean value	Specifies whether to display plane when editing sketch in Shaded With Edges or Shaded mode
Line length measured between virtual sharps in 3d	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchLineLengthVirtualSharp3d) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchLineLengthVirtualSharp3d, <OnFlag>)	Boolean value	Specifies whether to measure line length between virtual sharps in 3D
Enable spline tangency and curvature handles	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAllSplineHandles) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAllSplineHandles, <OnFlag>)	Boolean value	Specifies whether to display spline handles
Show spline control polygon by default	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchShowSplineControlPolygon) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchShowSplineControlPolygon, <OnFlag>)	Boolean value	Specifies whether to show spline control polygon by default
Ghost image on drag	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchShadowDrag) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchShadowDrag, <OnFlag>)	Boolean value	Specifies whether to enable ghost image on drag
Show curvature comb bounding curve	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchShowSplineOuterComb) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchShowSplineOuterComb, <OnFlag>)	Boolean value	Specifies whether to show the outer spline comb
Scale sketch on first dimension creation	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swScaleSketchOnFirstDimension) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swScaleSketchOnFirstDimension, <OnFlag>)	Boolean value	Specifies whether to enable the automatic scaling that occurs when you specify the first dimension in a sketch
Enable on screen numeric input on entity creation	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchAcceptNumericInput) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchAcceptNumericInput, <OnFlag>)	Boolean value	Specifies whether to enable on-screen numeric input when creating a sketch entity; adds the Add dimensions check box to the PropertyManager page of the sketch entity

Create dimension only when value is entered	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchCreateDimensionOnlyWhenEntered) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchCreateDimensionOnlyWhenEntered, <OnFlag>)	Boolean value	Specifies whether to create dimensions only when values are entered; valid only if Enable on screen numeric input on entity creation is true
Corresponds to the Sketch Numeric Input button on the shortcut menu while sketching an entity	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToSketchEntity) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToSketchEntity, <OnFlag>)	Boolean value	Specifies whether to enable on-screen numeric input while sketching an entity; adds Add dimensions check box to the PropertyManager page of the sketch entity
Corresponds to the Add Dimension button on the shortcut menu while sketching an entity and toggles the Add dimensions check box on that entity's PropertyManager page	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToLineEntity) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToLineEntity, <OnFlag>) ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToRectangleEntity) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToRectangleEntity, <OnFlag>) ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToArcEntity) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToArcEntity, <OnFlag>) ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToCircleEntity) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToCircleEntity, <OnFlag>) ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToSlotEntity) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDimensionsToSlotEntity, <OnFlag>)	Boolean value	swAddDimensionsToSketchEntity must be set to true for these enumerators to have an effect
Corresponds to the Sketch Dimension Driven button on the shortcut menu while sketching an entity	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAddDrivenDimensions) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.AddDrivenDimensions, <OnFlag>)	Boolean value	swAddDimensionsToSketchEntity must be set to true for this enumerator to have an effect
Preview sketch dimension when selected	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchPreviewDimensionOnSelect) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchPreviewDimensionOnSelect, <OnFlag>)	Boolean value	
Over defining dimensions - Prompt to set driven state	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchOverdefiningDimsPromptToSetState) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchOverdefiningDimsPromptToSetState, <OnFlag>)	Boolean value	Specifies whether to display dialog when adding over-defining dimension to sketch
Over defining dimensions - Set driven by default	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchOverdefiningDimsSetDrivenByDefault) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchOverdefiningDimsSetDrivenByDefault, <OnFlag>)	Boolean value	Specifies whether to set dimension to be driven by default when adding an over-defining dimension to sketch
Turn off Automatic Solve Mode and Undo when sketch contains more than...	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchTurnOffAutomaticSolveModeAndUndo) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchTurnOffAutomaticSolveModeAndUndo, <OnFlag>)	Boolean value	Specifies whether to turn off Automatic Solve Mode and Undo when sketch contains more than the specified number of sketch entities
this number of sketch entities	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSketch_Auto_Solve_Threshold) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swSketch_Auto_Solve_Threshold, <Value>)	Integer value	The specified number of sketch entities mentioned in the previous comment
Hide missing geometry error for suppressed dimensions	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSuppressedDimProfileErrorOption) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSuppressedDimProfileErrorOption, <OnFlag>)	Boolean value	


Obsolete Enumerators

Enumerator	Comment
swSketchAlternateSplineCreation	Obsolete

System Options > Sketch > Relations/Snaps

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog, but are now obsolete and replaced by the specified system-level snap-related enumerator.

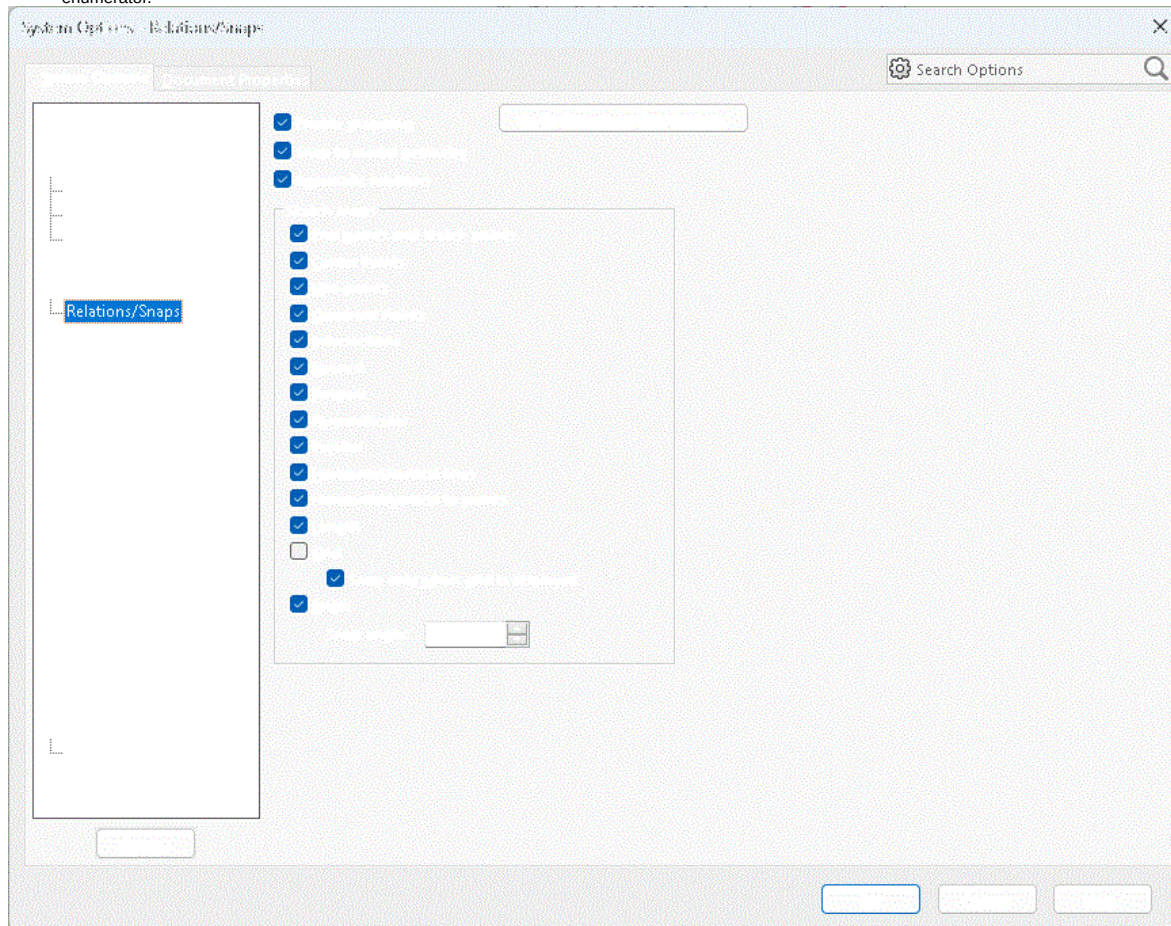


Setting	Get/Set Methods	Return Value or <OnFlag>	Comment
Enable snapping	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchInference) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchInference, <OnFlag>)	Boolean value	Specifies whether to enable snapping
Snap to model geometry	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchInferFromModel) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchInferFromModel, <OnFlag>)	Boolean value	Specifies whether to display inferencing lines that relate to lines and vertices of underlying model when sketching on face of extruded part
Automatic relations	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchAutomaticRelations) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchAutomaticRelations, <OnFlag>)	Boolean value	Specifies whether to automatically create geometric relations when adding sketch entities
Sketch Snaps - End points and sketch points	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsPoints, <OnFlag>)	Boolean value	Specifies whether to snap to the end of the following sketch entities: lines, polygons, rectangles, parallelograms, fillets, arcs, parabolas, partial ellipses, splines, points, chamfers, and centerlines
Sketch Snaps - Center Points	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsCenterPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsCenterPoints, <OnFlag>)	Boolean value	Specifies whether to snap to the center of the following sketch entities: circles, arcs, fillets, parabolas, and partial ellipses
Sketch Snaps - Mid-points	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsMidPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsMidPoints, <OnFlag>)	Boolean value	Specifies whether to snap to the midpoints of lines, polygons, rectangles, parallelograms, fillets, arcs, parabolas, partial ellipses, splines, points, chamfers, and centerlines
Sketch Snaps - Quadrant Points	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsQuadrantPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsQuadrantPoints, <OnFlag>)	Boolean value	Specifies whether to snap to the quadrants of circles, arcs, fillets, parabolas, ellipses, and partial ellipses
Sketch Snaps - Intersections	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsIntersections)	Boolean value	Specifies whether to snap to the intersections of entities that meet or

	ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsIntersections, <OnFlag>)		entities that intersect
Sketch Snaps - Nearest	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsNearest) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsNearest, <OnFlag>)	Boolean value	Specifies whether to support all entities; turn on to enable all snaps; your pointer does not need to be in the immediate vicinity of another sketch entity to show inference or snap to that point; turn off to enable snaps only when the pointer is in the vicinity of the snap point
Sketch Snaps - Tangent	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsTangent) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsTangent, <OnFlag>)	Boolean value	Specifies whether to snap to tangents on circles, arcs, fillets, parabolas, ellipses, partial ellipses, and splines
Sketch Snaps - Perpendicular	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsPerpendicular) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsPerpendicular, <OnFlag>)	Boolean value	Specifies whether to snap a line to another line
Sketch Snaps - Parallel	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsParallel) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsParallel, <OnFlag>)	Boolean value	Specifies whether to create a parallel entity to lines
Sketch Snaps - Horizontal/vertical lines	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsHVLines) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsHVLines, <OnFlag>)	Boolean value	Specifies whether to snap a line vertically to an existing horizontal sketch line, and horizontally to an existing vertical sketch line
Sketch Snaps - Horizontal/vertical to points	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsHVPoints) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsHVPoints, <OnFlag>)	Boolean value	Specifies whether to snap a line vertically or horizontally to an existing sketch point
Sketch Snaps - Length	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsLength) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsLength, <OnFlag>)	Boolean value	Specifies whether to snap to lines to the increments that are set by the grid, without requiring display of the grid
Sketch Snaps - Grid	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsGrid) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsGrid, <OnFlag>)	Boolean value	Specifies whether to snap sketch entities to the grid's vertical and horizontal divisions; this is the only sketch snap that is not active by default; replaces the now obsolete document-level Boolean enumerator swSnapToPoints
Sketch Snaps - Snap only when grid is displayed	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapToGridIfDisplayed) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapToGridIfDisplayed, <OnFlag>)	Boolean value	Specifies whether to only snap to the grid when it is displayed; replaces the now obsolete document-level Boolean enumerator swSnapOnlyIfGridDisplayed
Sketch Snaps - Angle	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsAngle) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSketchSnapsAngle, <OnFlag>)	Boolean value	Specifies whether to snap to angles; replaces the now obsolete document-level Boolean enumerator swSnapToAngle
Sketch Snaps - Snap angle	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSketchSnapsAngleValue) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSketchSnapsAngleValue, <Value>)	Double value	Specifies angle to which to snap; replaces the now obsolete document-level double enumerator swSnapToAngleValue

Obsolete Enumerators


Enumerator	Comment
swSnapOnlyIfGridDisplayed	Obsolete ; formerly a document-level Boolean enumerator that specified to snap to grid if swGridDisplay was turned on; replaced by the system-level Boolean swSketchSnapToGridIfDisplayed
swSnapToAngle	Obsolete ; formerly a document-level Boolean enumerator that specified whether sketched lines snap to predefined angle; replaced by the system-level Boolean swSketchSnapsAngle
swSnapToAngleValue	Obsolete ; formerly a document-level double enumerator that specified angle to which sketched lines should snap; double value; replaced by the system-level double enumerator swSketchSnapsAngleValue
swSnapToPoints	Obsolete ; formerly a document-level Boolean enumerator that specified whether points snap to grid; replaced by the system-level Boolean enumerator swSketchSnapsGrid

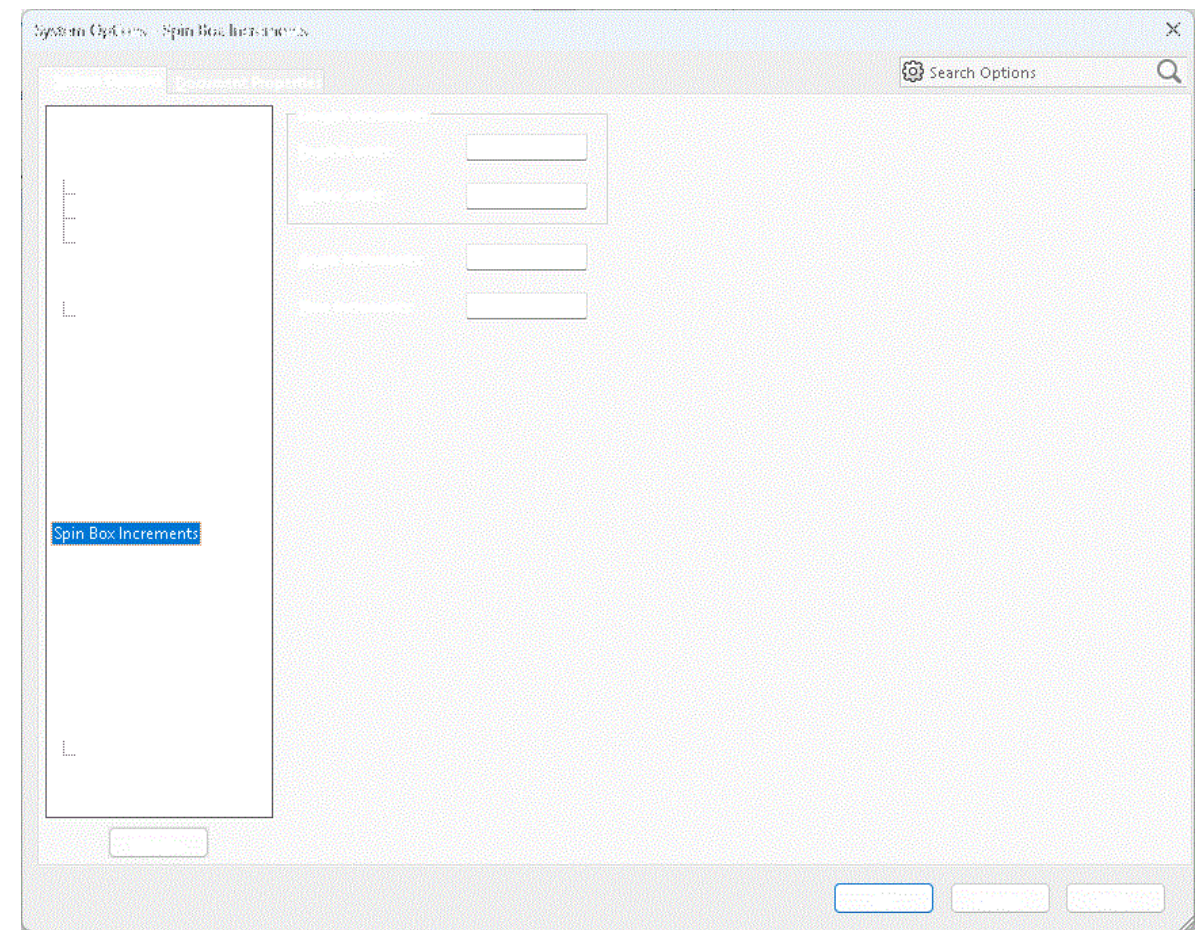

Setting	Get/Set Methods	Return Value or <Value>	Comment
Length increments - English units	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSpinBoxEnglishLengthIncrement) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSpinBoxEnglishLengthIncrement, <Value>)	Double value in inches	Specifies number of inches added or subtracted when spin box arrow is clicked to change a linear dimension value; see Units to learn how to set length units using the SOLIDWORKS API
Length increments - Metric units	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSpinBoxMetricLengthIncrement) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSpinBoxMetricLengthIncrement, <Value>)	Double value in metric units	Specifies number of units added or subtracted when a spin box arrow is clicked to change a linear dimension value; see Units to learn how to set length units using the SOLIDWORKS API
Angle increments	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSpinBoxAngleIncrement) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSpinBoxAngleIncrement, <Value>)	Double value in angular units	Specifies number of angular units added or subtracted when a spin box arrow is clicked to change an angular dimension value; see Units to learn how to set angular units using the SOLIDWORKS API
Time increments	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSpinBoxTimeIncrement) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSpinBoxTimeIncrement, <Value>)	Double value in time units	Specifies number of units added or subtracted when a spin box arrow is clicked to change a time value; see Units to learn how to set time units using the SOLIDWORKS API


System Options > Synchronize Settings

This dialog is only available in SOLIDWORKS Design connected to the 3DEXPERIENCE platform.

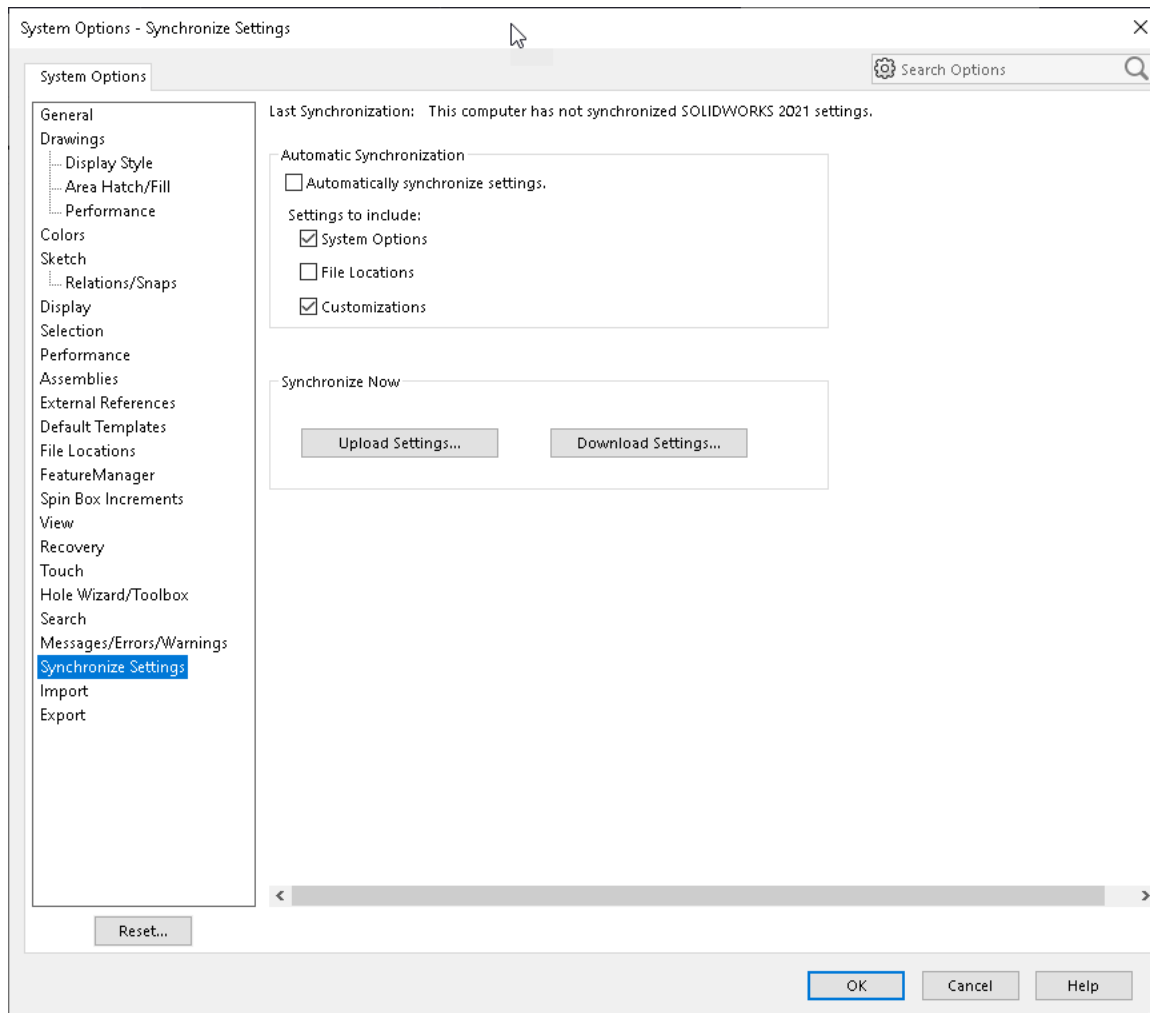


Setting	Get/Set Methods	Return value or <Value> or <OnFlag>	Comment
Last Synchronization	ISldWorks::GetUserPreferenceStringValue (swUserPreferenceStringValue_e.swLastSynchronizationTimeStamp)	String value	
Automatic Synchronization - Automatically synchronize settings	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticSyncSettings) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticSyncSettings, <OnFlag>)	Boolean value	When set to true, specified settings to include are automatically synchronized when logging in and out of SOLIDWORKS Design connected to the 3DEXPERIENCE platform
Automatic Synchronization - Settings to include - System Options	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSyncSettingsToInclude_SystemOptions) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSyncSettingsToInclude_SystemOptions, <OnFlag>)	Boolean value	Valid only if swUserPreferenceToggle_e.swAutomaticSyncSettings is set to true
Automatic Synchronization - Settings to include - File Locations	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSyncSettingsToInclude_FileLocations) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSyncSettingsToInclude_FileLocations, <OnFlag>)	Boolean value	Valid only if swUserPreferenceToggle_e.swAutomaticSyncSettings is set to true
Automatic Synchronization - Settings to include - Customizations	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSyncSettingsToInclude_Customizations) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoSyncSettingsToInclude_Customizations, <OnFlag>)	Boolean value	Valid only if swUserPreferenceToggle_e.swAutomaticSyncSettings is set to true

Synchronize Now - Upload Settings...	/SolidWorks::UploadToMySolidWorksSettings	Integer value	
Synchronize Now - Download Settings...	/SolidWorks::DownloadFromMySolidWorksSettings	Integer value	

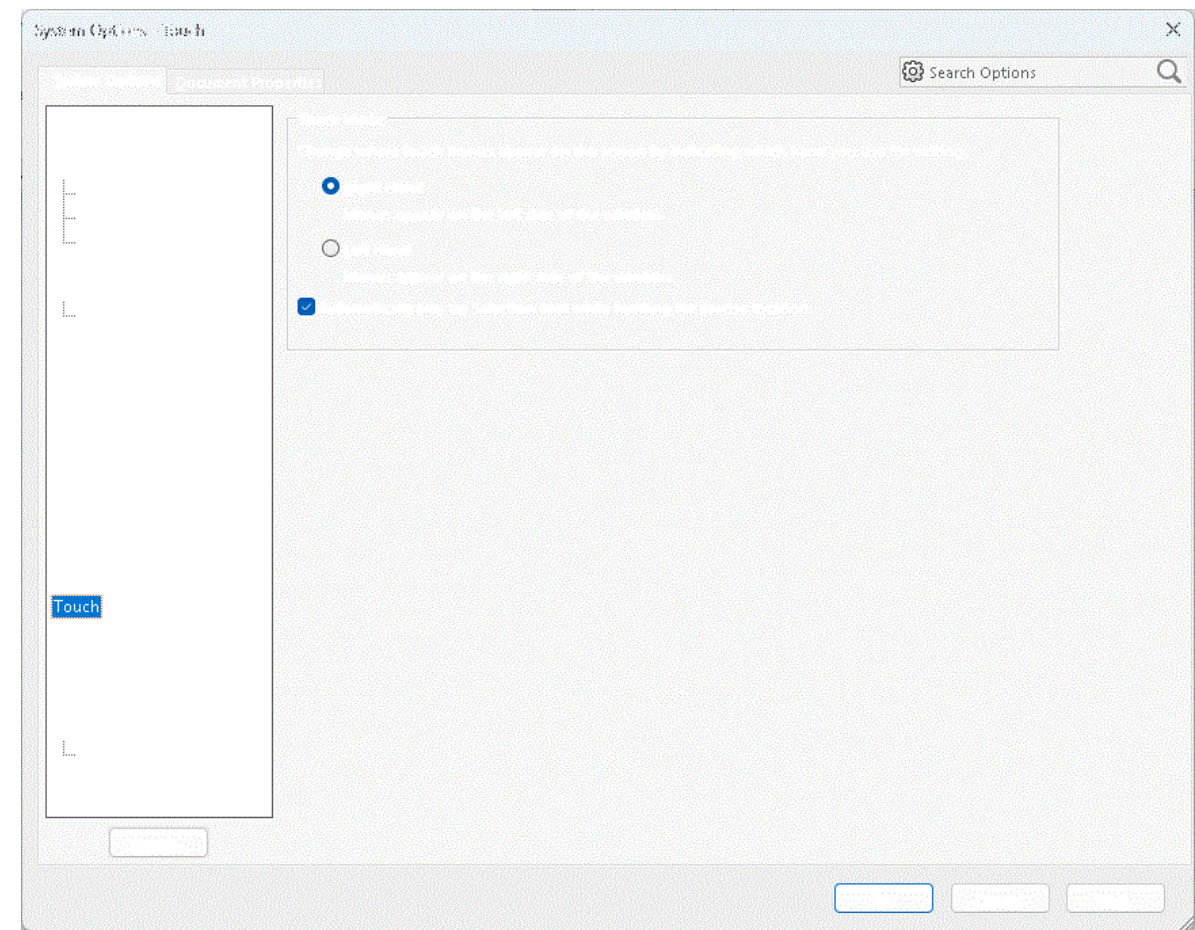

Setting	Get/Set Methods	Return Value or <Value>	Comment										
Rotate and Pan - Rotate width	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSystemTouchRotateWidth) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSystemTouchRotateWidth, <Value>)	Double value: 0 = Interpret the two-finger gesture as a Pan >0 = Interpret this maximum initial two-finger distance as a Rotate											
Rotate and Pan - Rotate versus pan threshold	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSystemTouchRotateVersusPanThreshold) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swSystemTouchRotateVersusPanThreshold, <Value>)	Double value: 0 = Interpret any two-finger distance greater than the Rotate width as a Pan >0 (see Comment)	<table><tr><td colspan="2">The sum of the non-zero threshold value and the Rotate width determines how SOLIDWORKS interprets two-finger gestures:</td></tr><tr><td>When the two-finger distance is...</td><td>SOLIDWORKS...</td></tr><tr><td>Less than the sum and greater than the Rotate width</td><td>Does not interpret the gesture</td></tr><tr><td>Greater than the sum</td><td>Interprets the gesture as a Pan</td></tr><tr><td>Less than the Rotate width</td><td>Interprets the gesture as a Rotate</td></tr></table>	The sum of the non-zero threshold value and the Rotate width determines how SOLIDWORKS interprets two-finger gestures:		When the two-finger distance is...	SOLIDWORKS...	Less than the sum and greater than the Rotate width	Does not interpret the gesture	Greater than the sum	Interprets the gesture as a Pan	Less than the Rotate width	Interprets the gesture as a Rotate
The sum of the non-zero threshold value and the Rotate width determines how SOLIDWORKS interprets two-finger gestures:													
When the two-finger distance is...	SOLIDWORKS...												
Less than the sum and greater than the Rotate width	Does not interpret the gesture												
Greater than the sum	Interprets the gesture as a Pan												
Less than the Rotate width	Interprets the gesture as a Rotate												
Automatically pop up Selection tool while hunting for precise location	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticallyPopupSelectionToolForPreciseLocation) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutomaticallyPopupSelectionToolForPreciseLocation, <OnFlag>)	Boolean value											

System Options > View

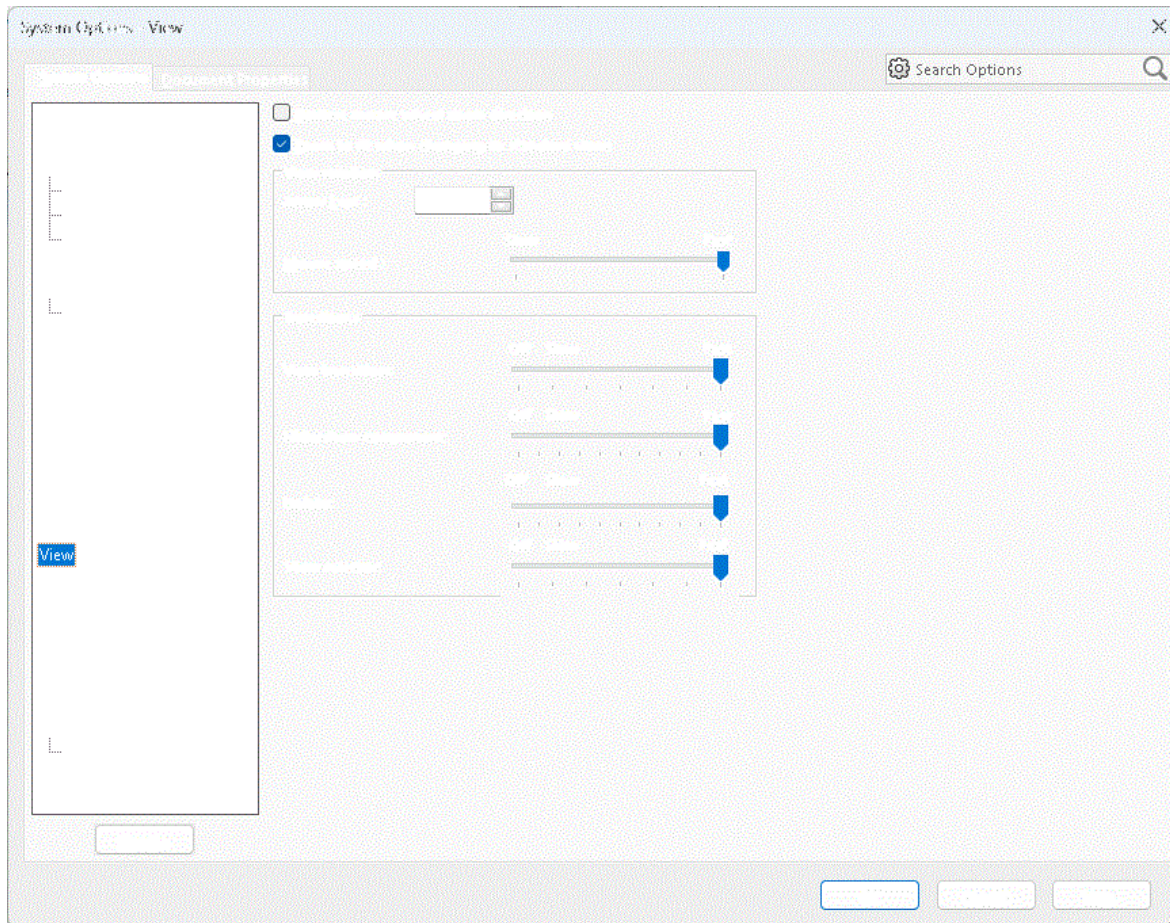


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Reverse mouse wheel zoom direction	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swViewReverseWheelZoomDirection) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swViewReverseWheelZoomDirection, <OnFlag>)	Boolean value	Specifies whether to reverse a mouse's wheel zoom direction
Zoom to fit when changing to standard views	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swViewZoomFitAndCenter) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swViewZoomFitAndCenter, <OnFlag>)	Boolean value	Specifies whether to zoom-to-fit view when changing to standard views
View rotation - Arrow keys	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewRotationArrowKeys) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewRotationArrowKeys, <Value>)	Double value in radians	Specifies angle increment for view rotation when arrow keys are used to rotate model
View rotation - Mouse speed	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swViewRotationMouseSpeed) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swViewRotationMouseSpeed, <Value>)	Integer value from 1 to 100	Specifies the speed of rotation when you use the mouse to rotate the model or assembly component
Transitions - View transition	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewAnimationSpeed) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewAnimationSpeed, <Value>)	Double value: • 0 = off • >0 - 3 seconds	Specifies animation-like speed when changing views
Transitions - Hide/show component	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewTransitionHideShowComponent) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewTransitionHideShowComponent, <Value>)	Double value	Specifies the animation-like speed at which to transition the view when hiding or showing components
Transitions - Isolate	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewTransitionIsolate) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewTransitionIsolate, <Value>)	Double value	Specifies the animation-like speed at which to transition the view when isolating a component in assemblies and multi-body parts
Transitions - View selector	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewSelectorSpeed) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swViewSelectorSpeed, <Value>)	Double value	Specifies the speed of the View selector animation; 0 indicates no animation and the current model is shown in the background; 3.0 is the maximum value

SolidWorks.Interop.swconst (Topic)

SOLIDWORKS API Enumerations		Send comments on this topic.
SolidWorks.Interop.swconst Assembly		
SOLIDWORKS API enumerations		
Namespaces		
Namespace	Description	
SolidWorks.Interop.swconst	SOLIDWORKS API enumerations	

Visible only on Windows 10:

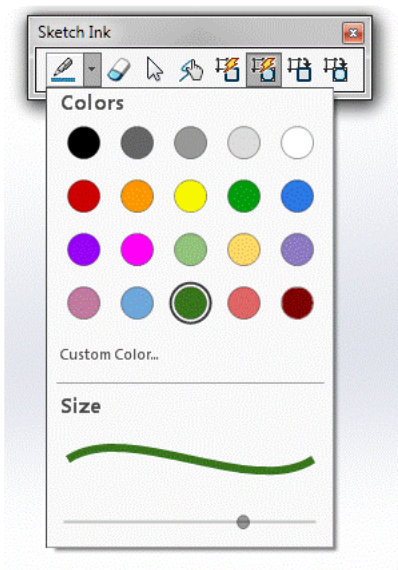

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Pen > Colors	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPenSketchStrokeColor) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPenSketchStrokeColor, <Value>)	COLORREF value	COLORREF values in SOLIDWORKS IColorTable ; use function RGB to convert R,G, and B values to COLORREF values; the following colors are displayed in the graphic from left to right and top to bottom: RGB(0,0,0) RGB(102,102,102) RGB(153,153,153) RGB(221,221,221) RGB(255,255,255) RGB(204,0,0) RGB(255,153,0) RGB(255,255,0) RGB(0,158,15) RGB(153,0,255) RGB(255,0,255) RGB(147,196,125) RGB(255,217,102) RGB(142,124,195) RGB(194,123,160) RGB(111,168,220) RGB(56,118,29) RGB(224,102,102) RGB(97,61,48)
Pen > Size	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPenSketchStrokeThickness) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swPenSketchStrokeThickness, <Value>)	Valid options as defined in swLineWeights_e : swLW_THIN swLW_NORMAL swLW_THICK swLW_THICK2 swLW_THICK3 swLW_THICK4 swLW_THICK5	Thickness of pen stroke; if you set an invalid value (<0 or >6) then the pen size is automatically set to swLW_THIN = 0

Select Identical Compone... ?

X


Message ^

Select a component and all other instances of this component with the same configuration will be selected.

Options ^

☒ Match configuration names


Setting	Get/Set Methods	Return Value or <OnFlag>	Comments
Options - Match configuration names	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swMatchConfigurationNames) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swMatchConfigurationNames, <OnFlag>)	Boolean value	Specifies whether to match configuration names; valid only for assemblies

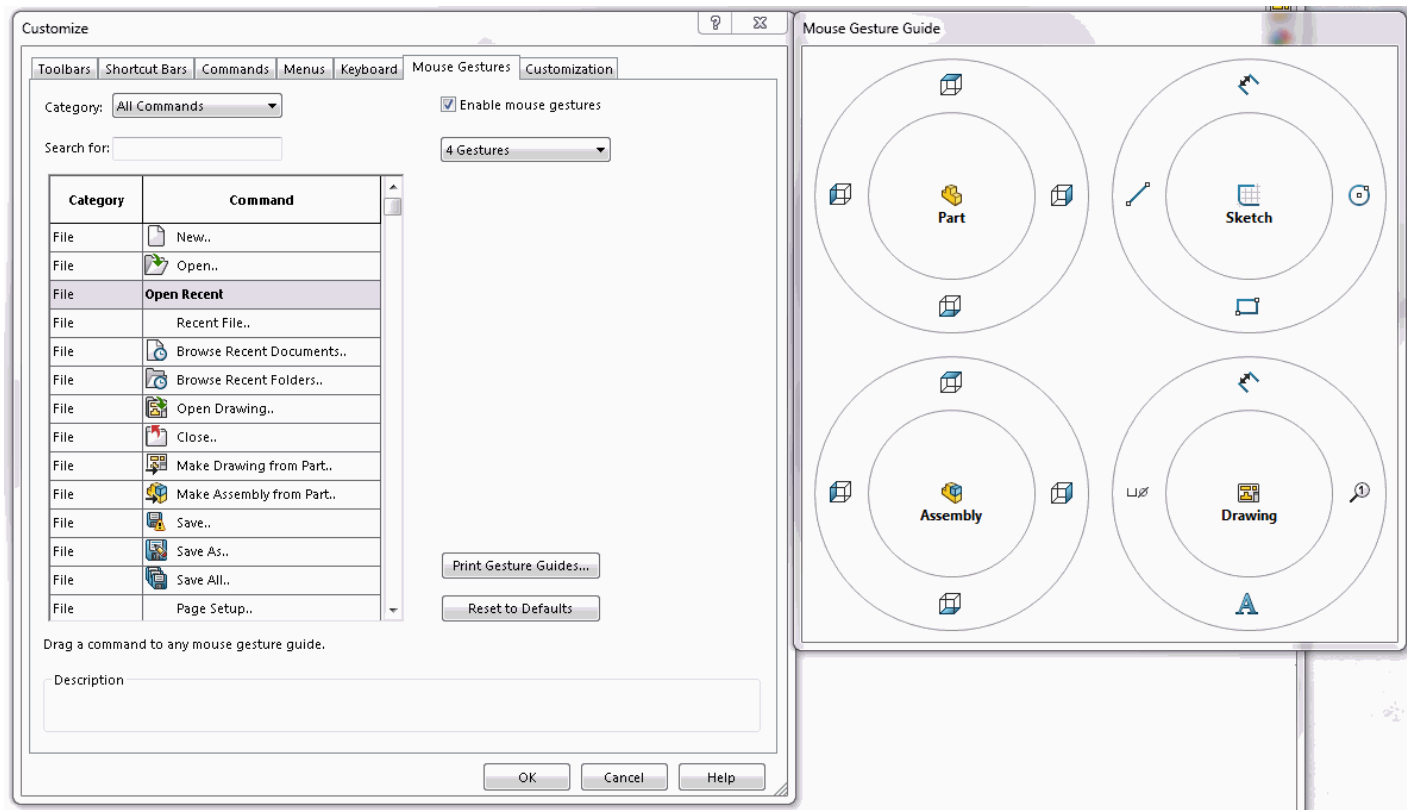

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Enable mouse gestures	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableMouseGestures) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swEnableMouseGestures, <OnFlag>)	Boolean value	

Tools > Customize > Toolbars


- This topic contains two tables. The information in the table:
- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
 - titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

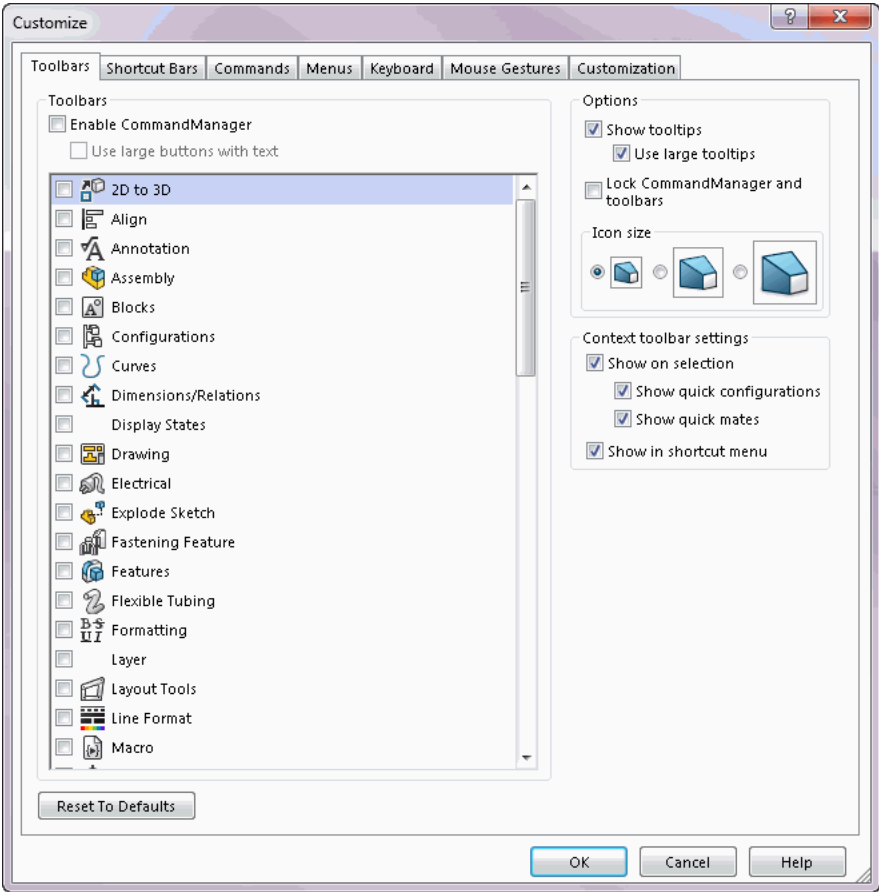


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Options - Icon size	ISldWorks::GetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swButtonSize) ISldWorks::SetUserPreferenceIntegerValue (swUserPreferenceIntegerValue_e.swButtonSize, swButtonSize_e.<Value>)	See swButtonSize_e for valid options	

Obsolete Enumerators

Enumerator	Comment
swTextSizeUseOperatingSystemScale	Obsolete ; specified whether to use operating system scale
swTextSize	Obsolete ; specified the text size

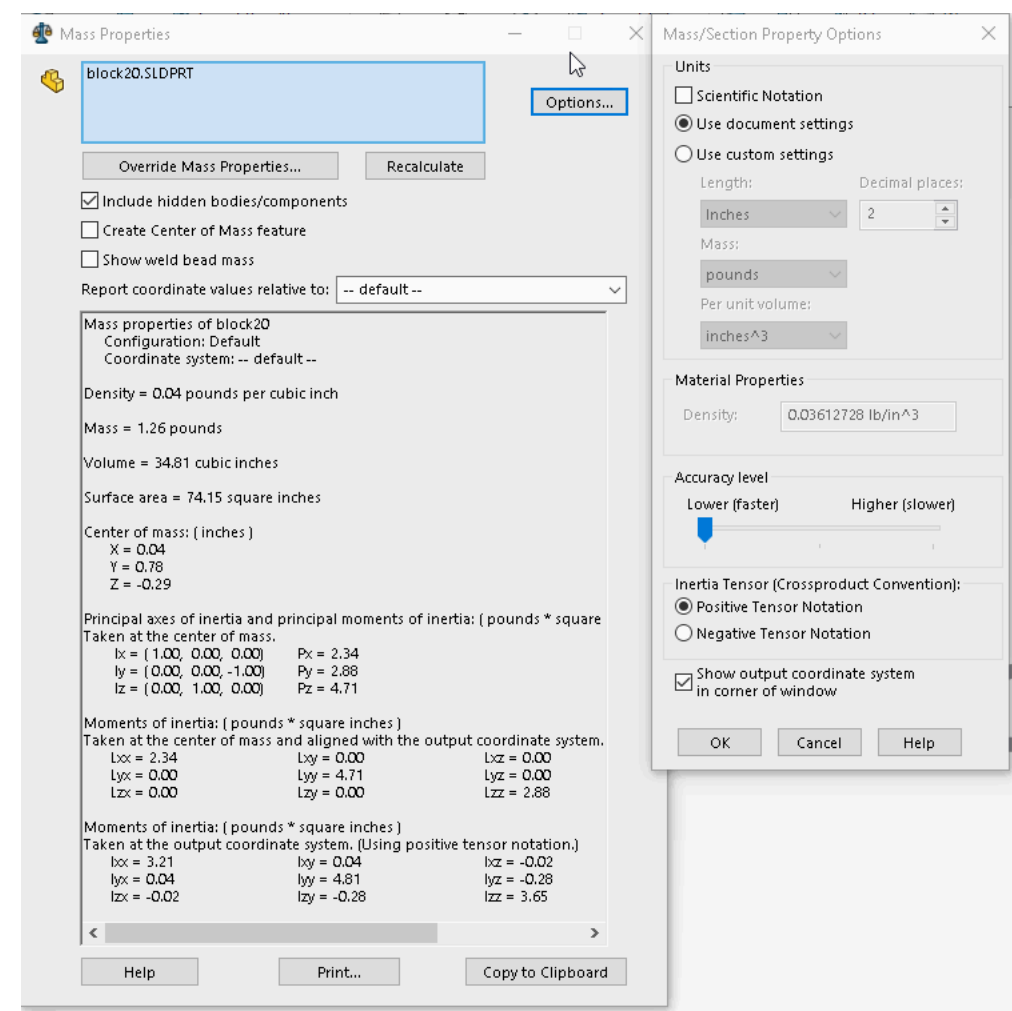

Setting	Get/Set Methods	Return Value or <OnFlag>	Comments
Options - Inertia Tensor (Crossproduct Convention)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUsePositiveInertiaTensorNotation) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUsePositiveInertiaTensorNotation, <OnFlag>)	Boolean value	True for Positive Tensor Notation; false for Negative Tensor Notation

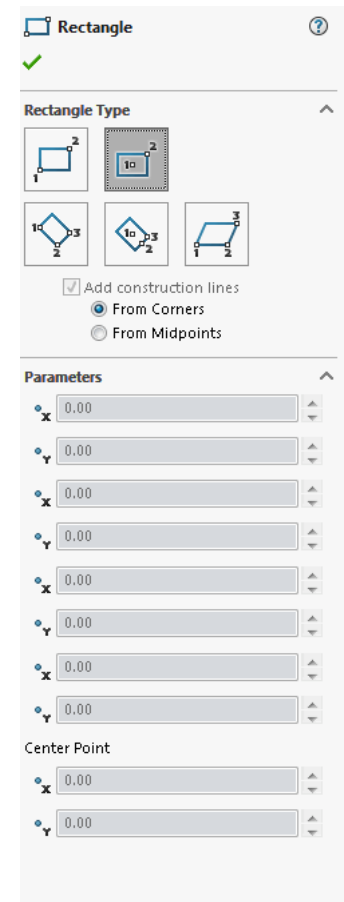

Setting	Get/Set Methods	Return Value or <OnFlag>	Comments
Rectangle Type - Add construction lines - From Corner	IModelDocExtension::GetUserPreferenceToggle(swUserPreferenceToggle_e.swSketchAddConstLineDiagonalType) IModelDocExtension::SetUserPreferenceToggle(swUserPreferenceToggle_e.swSketchAddConstLineDiagonalType, <OnFlag>)	Boolean value	Specifies whether to add construction lines from the corners
Rectangle Type - Add construction lines - From Midpoint	IModelDocExtension::GetUserPreferenceToggle(swUserPreferenceToggle_e.swSketchAddConstToRectEntity) IModelDocExtension::SetUserPreferenceToggle(swUserPreferenceToggle_e.swSketchAddConstToRectEntity, <OnFlag>)	Boolean value	Specifies whether to add construction lines from the midpoint

 Trim  



Message

To trim entities, hold down and drag your cursor across the entities, or pick on an entity and then pick on a bounding entity or anywhere on the screen. To extend entities, hold down the shift key and drag your cursor across the entities.

Options

 Power trim

 Corner

 Trim away inside

 Trim away outside

 Trim to closest

☐ Keep trimmed entities as construction geometry

☐ Ignore trimming of construction geometry

Setting	Get/Set Methods	Return Value or <OnFlag>	Comments
Keep trimmed entities as construction geometry	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swMakeTrimEntityConstruction) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swMakeTrimEntityConstruction, <OnFlag>)	Boolean value	
Ignore trimming of construction geometry	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIgnoreConstructionEntity) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIgnoreConstructionEntity, <OnFlag>)	Boolean value	

View > Display

 Wireframe

 Hidden Lines Visible

 Hidden Lines Removed

 Shaded With Edges

 Shaded

 Draft Quality HLR/HLV

 Shadows In Shaded Mode

 Ambient Occlusion

☒ Use Component Color In HLR/HLV

 Perspective

 Section View

 Take Snapshot Alt+SpaceBar

 Camera View

 Curvature

 Zebra Stripes

 Surface Curvature Combs

 Draft Analysis

 Undercut Analysis

 Parting Line Analysis

 RealView Graphics

 Cartoon

 Simulation Display

Optimize Zoom/Pan/Rotate

Tangent Edges Visible

Tangent Edges As Phantom

Tangent Edges Removed

Isolate


Isolate including suppressed

☒ Display SpeedPak Graphics Circle Alt+S

Customize Menu

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Shadows in Shaded Mode	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayShadowsInShadedMode) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayShadowsInShadedMode, <OnFlag>)	Boolean value	Specifies whether to display a shadow under the model
Ambient Occlusion	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAmbientOcclusionShadows) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAmbientOcclusionShadows, <OnFlag>)	Boolean value	Specifies whether to use global lighting that adds realism to models by controlling the attenuation of ambient light due to occluded areas; available in all scenes when you use RealView graphics
RealView Graphics	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayRealViewGraphics) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayRealViewGraphics, <OnFlag>)	Boolean value	Specifies whether to display a model with hardware accelerated shaders
Cartoon	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayCartoon) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayCartoon, <OnFlag>)	Boolean value	Specifies whether to apply a cartoon effect to model edges and faces


View > Hide / Show

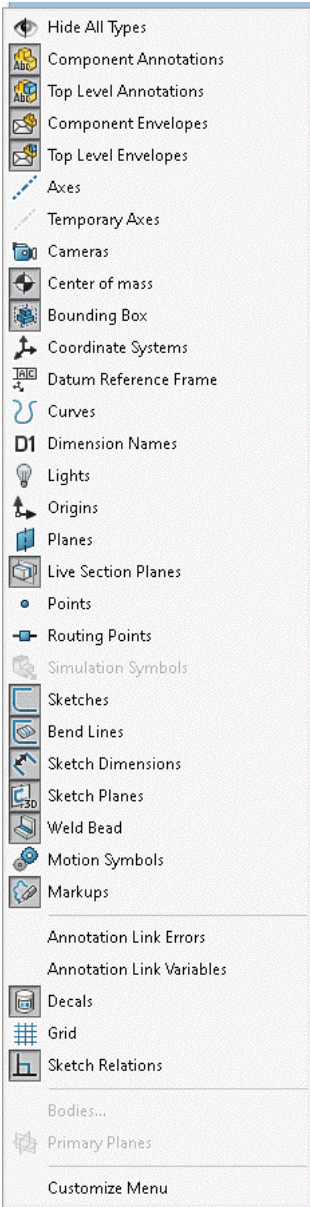

Setting	Get/Set Methods	Return Value or <Value>	Comment
All Annotations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAllAnnotations, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAllAnnotations, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display all annotations; for assemblies only
Component Envelopes	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayComponentEnvelopes, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayComponentEnvelopes, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For assemblies only
Top Level Envelopes	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayTopLevelEnvelopes, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayTopLevelEnvelopes, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For assemblies only

[illegible]

Weld Bead	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayWeldBead, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayWeldBead, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display weld beads
Motion Symbols	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayMotionSymbol, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayMotionSymbol, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For assemblies only
Markups	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayMarkups, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayMarkups, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	
Decals	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDecals, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDecals, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display decals
Grid	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swGridDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swGridDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display a grid
Sketch Relations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swViewSketchRelations, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swViewSketchRelations, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display sketch relation symbols

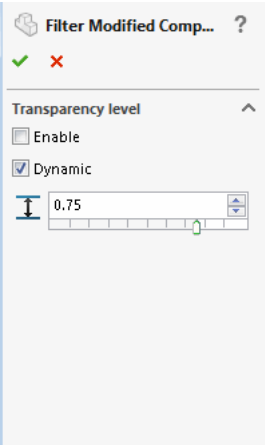

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Transparency level - Enable	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickViewTransparencyEnabled) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickViewTransparencyEnabled, <OnFlag>)	Boolean value	Specifies whether to activate the transparency for unmodified components of assemblies opened in Large Design Review
Transparency level - Dynamic	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickViewTransparencyDynamic) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swQuickViewTransparencyDynamic, <OnFlag>)	Boolean value	Specifies whether to update the transparency level in the graphics area when the slider is moved in the Transparency Level PropertyManager page
Transparency level - Level ranges from 0 to 1	ISldWorks::GetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swQuickViewTransparencyLevel) ISldWorks::SetUserPreferenceDoubleValue (swUserPreferenceDoubleValue_e.swQuickViewTransparencyLevel, <Value>)	Double value	Specifies the value to which to adjust the transparency for unmodified components in assemblies opened in Large Design Review



Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comment
Dynamic Reference Visualization (Parent)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDynamicReferenceVisualization_Parent) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDynamicReferenceVisualization_Parent, <OnFlag>)	Boolean value	Specifies whether to display parent relationships
Dynamic Reference Visualization (Child)	ISldWorks::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDynamicReferenceVisualization_Child) ISldWorks::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDynamicReferenceVisualization_Child, <OnFlag>)	Boolean value	Specifies whether to display child relationships