

Maintenance and Service Guide

Disconnect power and wait five minutes before service. Work on a soft mat.

Access order


- Electronics: remove official top/lock ring as documented by FutureProofHomes, disconnect JST-XH, remove F01, then F02 and the shroud.
- Driver/radiators: remove anti-slip ring, F09, outer shell, then the relevant F04/F05 clamp ring. Replace the opened G02/G03 gasket.
- Divider/cable gland: remove the upper stack and shroud, then F03. Replace G01 whenever the divider is lifted.
- Ballast: remove anti-slip ring and F08 bottom plate; withdraw cartridge. Remove F06 lid screws while the cartridge is supported.

Never cut a wire for service; unplug or release its terminal. Never reuse a torn, permanently flattened, or contaminated gasket. Never lever a clamp ring against a cone.

After service, repeat polarity, gross leak, low-level sweep, buttons, LEDs, microphones, Wi-Fi, and thermal spot checks. Store spare G01-G04 seals flat, dark, and clean. Vacuum shell slots with a soft brush; do not use solvents on ASA.

Bottom-up service access

Remove anti-slip ring, F09 shell screws, F08 plate, F06 lid, then lift ballast safely.

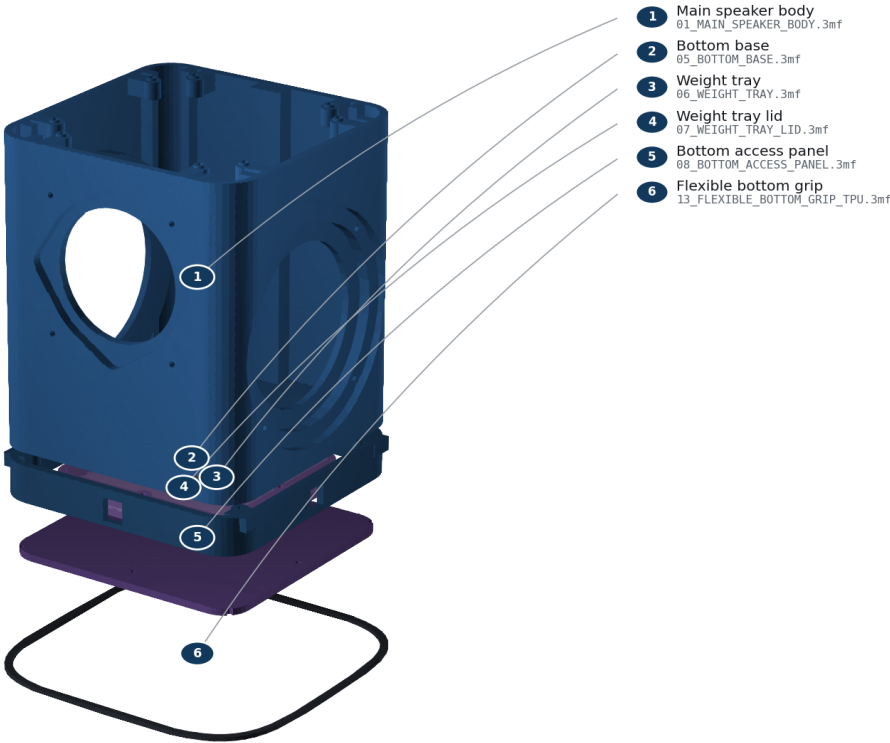

FRONT = -Y | TOP = +Z | units: mm | generated from the release B-rep

Service disassembly direction

Source commit 170b95d5d8bd. No physical validation has been performed.