
Jackery

Model: JE-600A

V2

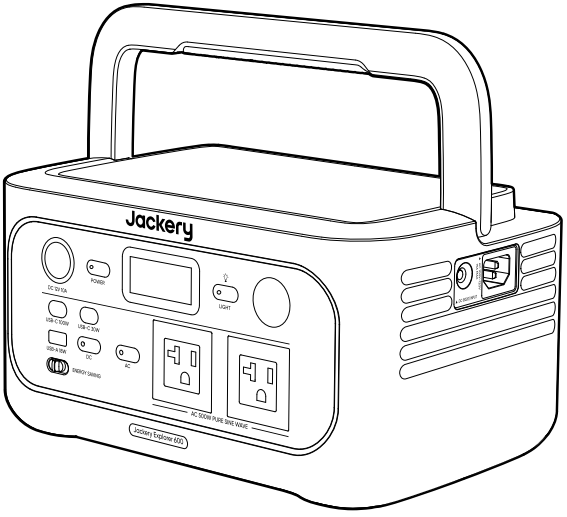

USER MANUAL

Jackery Explorer 600

CONTACT US:

1-888-502-2236 (US)

hello@jackery.com

www.jackery.com

US IMPORTANT

Congratulations on your new Jackery Explorer 600. Please read this manual carefully before using the product, particularly the relevant precautions to ensure proper use. Keep this manual in an accessible place for frequent reference.

In compliance with laws and regulations, the right of final interpretation of this document and all related documents of this product resides with the Company.

Please kindly notice that no further notifications will be given in case of any update, revision or termination.

TABLE OF CONTENTS

US English **01–14**

IMPORTANT SAFETY INFORMATION 01
MEANING OF SYMBOLS 02
WHAT'S IN THE BOX 03
PRODUCT OVERVIEW 03
LCD DISPLAY 04
OPERATIONS 06
UNINTERRUPTIBLE POWER SUPPLY (UPS) 09
CHARGING 10
STOCKAGE 12
TROUBLESHOOTING 12
SPECIFICATIONS 13
WARRANTY 14

IMPORTANT SAFETY INFORMATION

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

WARNING

Always follow these basic precautions when using this product.

- Read all the instructions before using the product.
- Do not allow children to play on the product. Close supervision of children is necessary when the product is used near children.
- Avoid placing hands or fingers inside the product.
- Stop using the product immediately if it has been physically damaged or modified. Improper use of the product may cause unpredictable behavior, leading to fire, explosion, or injury.
- If any of the following are observed, including but not limited to overheats, emits unusual odors or smoking, leaks, or burns, stop using the product immediately and contact the dealer or our Customer Support.
- Never attempt to open, repair, or modify the product. Any tampering, reassembly, or modification of the product can result in electric shock, fire, or battery damage.
- Be aware that liquid ejected from the product may cause irritation or burns. Inappropriate or abusive use may lead to battery leakage. Avoid direct contact with leaking liquid. If the liquid contacts your eyes, seek medical help immediately. If it contacts other body parts, flush with running water and consult a medical professional without delay.
- Do not expose the product to fire or excessive temperatures. Doing so may result in an explosion if the temperature exceeds 130°C (265°F).
- Any use of unrecommended or non-supplied materials or parts with the product may result in a risk of fire, electric shock, or personal injury.
- Do not leave the battery charging unattended for long periods. Always monitor the charging process to ensure safe operation.
- To reduce the risk of electric shock, unplug the product from any power source before attempting any technical service or troubleshooting.

OPERATING INSTRUCTIONS

SAVE THESE INSTRUCTIONS

- Make sure to review your local battery recycling guidelines and find a certified recycling center or collection point near you for defective battery disposal. Never dispose of batteries in regular household waste, as they may leak hazardous chemicals or cause fires.
- Stop using the product immediately if it shows signs of damage. Discontinue use and contact customer support for assistance.
- Do not charge the battery in extremely hot or cold environments and strictly adhere to the product's specified operating temperature ranges:
  -Charging temperature: −4°F to 113°F / -20°C to 45°C;
  -Discharging temperature: −4°F to 113°F / -20°C to 45°C.
- To ensure proper air circulation, keep the product vents uncovered. The area where the product is used must have adequate airflow in a cool, dry environment to prevent overheating.
  -Charging in damp or poorly ventilated spaces may cause safety hazards.
  -Water can cause short circuits or damage to the charger, leading to safety risks.
- Unplug the power cord from a power outlet during a storm.
- Immediately turn off the product by pressing the power button if it has fallen, been dropped, or exposed to vibrations.
- Ensure the device(s) are powered off before connecting it to the product.
- Do not charge the product using a damaged or broken charging cord or plug.
- Do not use the product to charge any device with a damaged or broken cable or plug.
- Always unplug the charging cord by pulling the plug, not the cord, to reduce the risk of damage.
- Ensure the product is properly secured when transporting it in a moving vehicle.
- DO NOT place the unit upside down or on its side during use or storage.
- DO NOT place the product on the floor or at a height less than 18 inches (457 mm) above the floor during operation in a workshop or repair facility.
- DO NOT use the product's accessories with other devices or equipment.
- Solar charge time depends on weather conditions, place your solar panel where it will get as much direct sunlight as possible.

DANGER

This device is intended for indoor use only (Please place this device in a similar indoor environment when using it outdoors，e.g. Home RVs, tents, cabins, etc.).
※ This device is not waterproof or dustproof. Keep away from rain and humid environments during use.

USER MAINTENANCE INSTRUCTIONS

During the lifecycle of energy storage products, a certain degree of capacity and energy degradation is expected. As the number of charge and discharge cycles increases and storage time extends, this degradation will gradually intensify, which is a normal phenomenon consistent with the natural aging of battery cells.

MEANING OF SYMBOLS

Symbol	Meaning
⚠ WARNING	Hazardous practices that may result in severe injury, death, and/or property damage.
⚠ CAUTION	Hazardous practices that may result in personal injury and/or property damage.
NOTE	Hazardous practices that may result in equipment damage, data loss, performance deterioration, or unanticipated results.
TIP	Supplements the important information or operation tips in the text.


Symbol	Meaning
	Warning and Caution Symbols. Must read to alert individuals to potential hazards or risks.
	Read the user manual before operation.
	Do not dismantle the product.
	Keep the product away from fire.
	Keep away from children.

Symbol	Meaning
	This symbol indicates that a lithium-ion (Liion) battery is inside the product and should be disposed of or recycled properly.
	This symbol indicates that the product shall not be disposed of as household waste, and should be delivered to a designated collection facility for recycling. Proper disposal and recycling can help protect the environment. For more information about the disposal and recycling of this product, contact your local community, disposal service, or dealer.

FC NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.


WHAT'S IN THE BOX

1

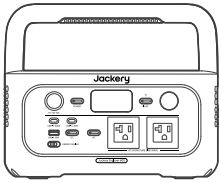

Jackery Explorer 600

2



AC Charging Cable

3



User Manual

TIP

The car charging cable is not included but is available for purchase separately on our website. For assistance, please contact Jackery customer service.

PRODUCT OVERVIEW

FRONT VIEW


Cigarette Lighter Port
12V⎓10A Max

USB-C1 Output
100W Max, 5V⎓3A, 9V⎓3A, 12V⎓3A, 15V⎓3A, 20V⎓5A

USB-C2 Output
30W Max, 5V⎓3A, 9V⎓3A, 12V⎓2.5A, 15V⎓2A, 20V⎓1.5A

USB-A Output
18W Max, 5-6V⎓3A, 6-9V⎓2A, 9-12V⎓1.5A

Energy Saving Mode Switch

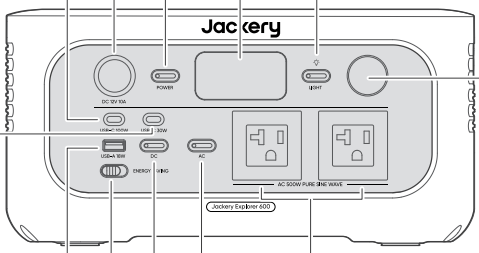

Main Power Button

LCD

LED Light Button

LED Light

AC Output
120V~60Hz, 4.2A

AC Power Button


DC Power Button

RIGHT SIDE VIEW


Handle

DC Input (8020)
1×DC8020 Port: 11V-16V⎓8A Max
16V-60V⎓10.5A 200W Max

AC Input
100-120V~60Hz, 15A Max

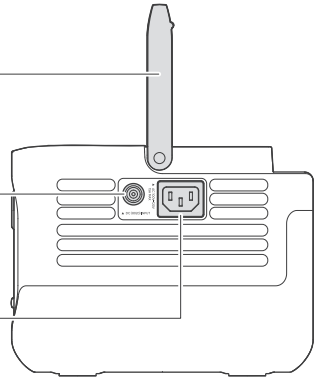

LCD DISPLAY

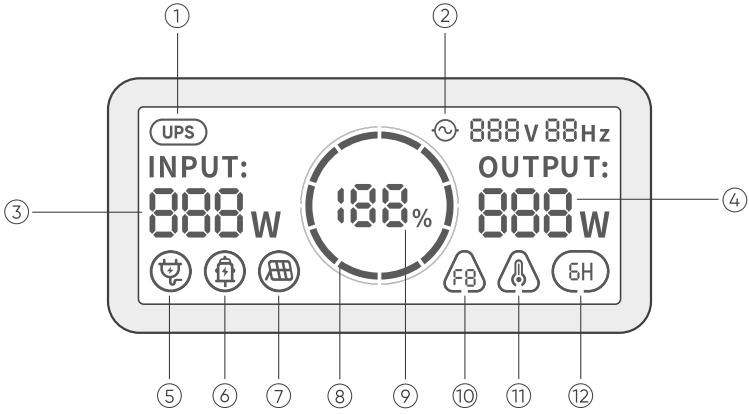


①	UPS	**UPS**	On: The product is in bypass mode, and the switchover time from grid power to the internal battery is 10 ms. Off: The product is not in bypass mode.
②		**AC Power Indicator**	The AC output (pure sine wave) is on.

③	INPUT: 888 W	**Input Power**	Displays the input power in watts.
④	OUTPUT: 888 W	**Output Power**	Displays the output power in watts.
⑤		**AC Wall Charging Indicator**	The product is charged via the AC Input using grid power.
⑥		**Car Charging Indicator**	The product is charged via the DC Input (8020) using DC 12V (car charging).
⑦		**Solar Charging Indicator**	The product is charged via the DC Input (8020) using solar panel(s).
⑧		**Battery Power Indicator**	When the product is being charged, the orange circle around the battery percentage will light up in sequence. When charging other devices, the orange circle will stay on.
⑨	188%	**Remaining Battery Percentage**	Displays the remaining battery percentage.
⑩		**Fault Code**	A product error has occurred. Please refer to the Troubleshooting section for details.
⑪		 **High Temperature Indicator**	High temperature protection is triggered. The product may stop functioning until its temperature returns to the normal operating range.
		 **Low Temperature Indicator**	Low temperature protection is triggered. The product may stop functioning until its temperature returns to the normal operating range.
⑫		**Energy Saving Mode**	On: Energy Saving Mode is enabled. Off: Energy Saving Mode is disabled.

OPERATIONS

POWER ON/OFF

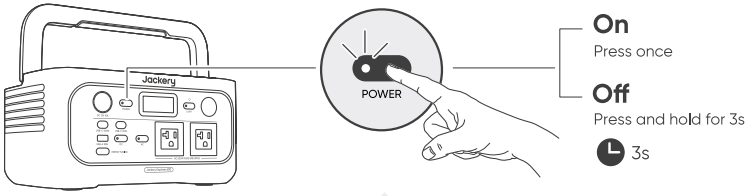


Default standby time: 2 hours
If the AC power button, DC power button, and LED light button are all turned off and there is no charging input, the product will automatically shut down after 2 hours.

* When Energy Saving Mode is enabled and either the AC or DC power button is turned on, the system will automatically turn off all outputs and shut down if there is no charging or discharging activity, or if the power consumption of connected devices remains below the defined thresholds for 6 hours (25W or less on the AC output, and 2W or less on the USB ports and cigarette lighter port).


AC OUTPUT ON/OFF

Prerequisite: Ensure the Main Power Button is on.

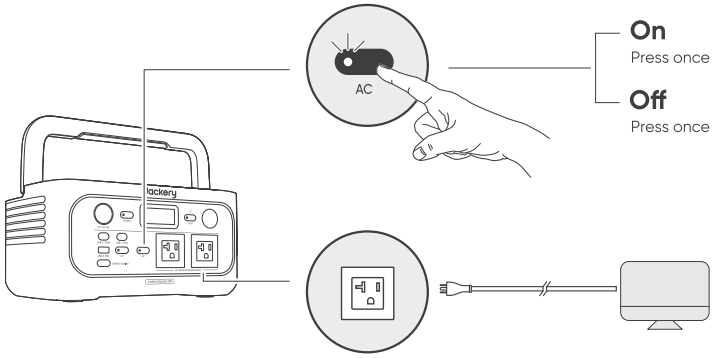

DC/USB OUTPUT ON/OFF

Prerequisite: Ensure the Main Power Button is on.

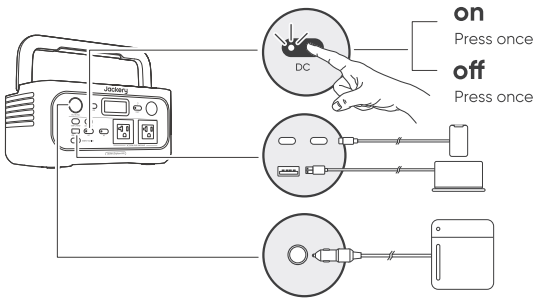


* The product can charge your car battery using the Jackery 12V automobile battery charging cable, which is sold separately and available on our website.

CAUTION

- The cigarette lighter port is only compatible with 12V car batteries and not suitable for 24V systems.
- Do not start the car while the product is charging the car battery through the 12V DC output port (cigarette lighter port), as this may damage the product.
- This feature is intended for emergency use only and cannot charge a dead or damaged car battery.

ENERGY SAVING MODE

To prevent unnecessary battery consumption due to forgetting to turn off the output, please manually enable Energy Saving Mode. Once enabled, if the connected device's power consumption is below a certain threshold (AC output ≤ 25W; USB output + cigarette lighter port ≤ 2W), the device will automatically turn off all outputs after 6 hours.

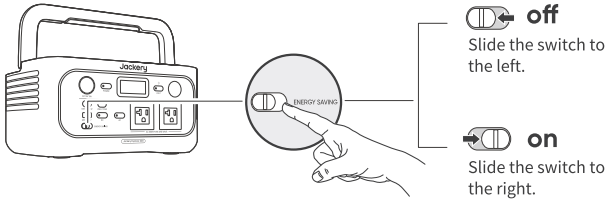


WARNING

When Energy Saving Mode is enabled, the product automatically turns off the AC output if the connected device's power consumption remains low for the configured period. When powering devices that require continuous power, such as refrigerators, routers, security cameras, or aquarium air pumps, we recommend turning off Energy Saving Mode to prevent unexpected power loss from interrupting their operation.

LED LIGHT ON/OFF

The LED light has two modes: Light mode and SOS mode.

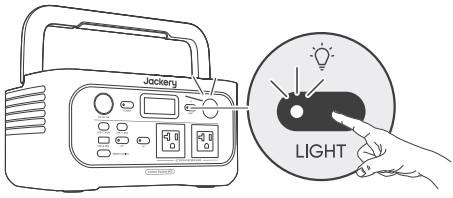

1. Press the LED Light button once to turn on the light.
2. SOS Press it again to switch to SOS mode.
3. Press it a third time to turn off the light.

* The default setting is Light mode.
* In any mode, press and hold the LED light button to turn off the light.


LCD SCREEN ON/OFF

LCD Screen	Turn on	Press the Main Power Button or when the product is charging.
	Turn off	Press the Main Power Button.
	Auto-off	The LCD turns off automatically and enters sleep mode after 2 minutes of inactivity.
Always-on Display Mode (under charging or discharging state)	Turn on	Double-click the Main Power Button when the LCD screen is ON.
	Turn off	Press the Main Power Button.
	Auto-off	The Always-on Display Mode turns off automatically after 2 hours of inactivity.

UNINTERRUPTIBLE POWER SUPPLY (UPS)

An uninterruptible power supply (UPS) is a type of continual power system that provides automated backup electric power to a load when the mains grid power fails.

In the event of a sudden loss of grid power, the Explorer 600 will automatically switch to stored power within 10 ms to keep your appliances running.

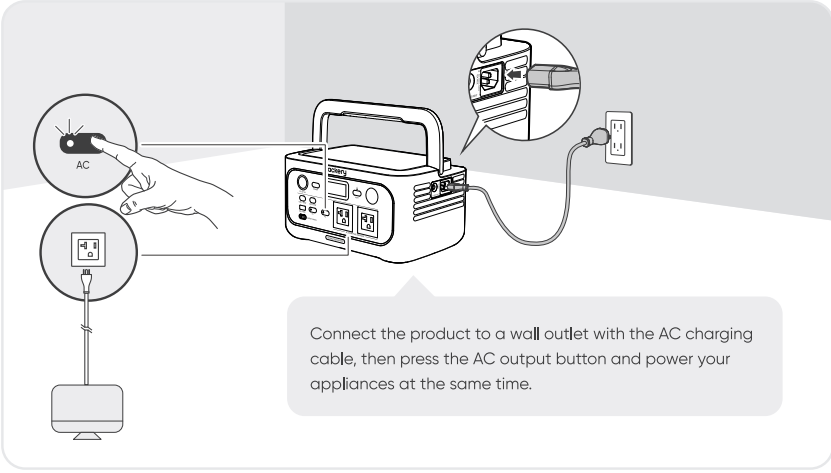

Connect the product to a wall outlet with the AC charging cable, then press the AC output button and power your appliances at the same time.

WARNING

Do not use this product for applications such as data servers or medical devices, where a malfunction could endanger life or cause significant property damage. For the following equipment, a loss of power supply during use could cause serious harm to personal safety or property:

- Medical devices and other equipment closely related to life safety.
- Critical equipment such as social infrastructure and public services.
- Business-critical enterprise equipment, etc.

Individuals who wear a cardiac pacemaker (pacemaker implant recipients) must not use this product.

CAUTION

- This product does not support 0 ms switching. Do not connect it to equipment that requires a 0 ms switching power supply, such as data servers or workstations.
- Before use, please test compatibility with your device multiple times.
- It is recommended to connect one device at a time. Do not use multiple devices simultaneously, as this may trigger overload protection.
- The UPS function works only when a single unit is connected directly to a wall outlet.Do not connect multiple portable power stations in series (cascade connection). In a cascaded setup, the UPS function will not operate: the unit may fail to switch over during a power outage, causing connected devices to shut down.

CHARGING


Green energy first: We advocate to use the green energy first. This product supports two modes of charging at the same time: solar charging and AC wall charging.
When AC wall charging and solar charging are turned on at the same time, the product will give priority to solar charging and both methods will be used to charge the battery at the maximum permissible power.

Fully charge the product before its first use.

Note

1. The recommended charging temperature for the product ranges from –4°F to 113°F / -20°C to 45°C, and the discharging temperature ranges from –4°F to 113°F / -20°C to 45°C. Operating the product outside this temperature range may restrict its charging and discharging capabilities, prevent it from charging or discharging.
2. The charging power and battery capacity of the product may vary due to temperature fluctuations.

CHARGING VIA AC WALL OUTLET

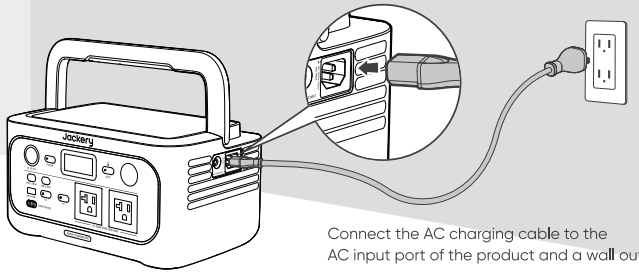



Connect the AC charging cable to the AC input port of the product and a wall outlet.

* Make sure the AC charging cable is fully and securely plugged into the AC input port. An incomplete connection may cause unstable current, overheating, poor contact, or device malfunction.

CHARGING WITH SOLAR PANELS

The Jackery Explorer 600 has one DC8020 input port, which supports direct connection of either one 100W or one 200W solar panel. If you need to connect two 100W solar panels simultaneously to a DC8020 input port, please use a solar panel connector (sold separately, not included). Please refer to the diagram below for connection details.

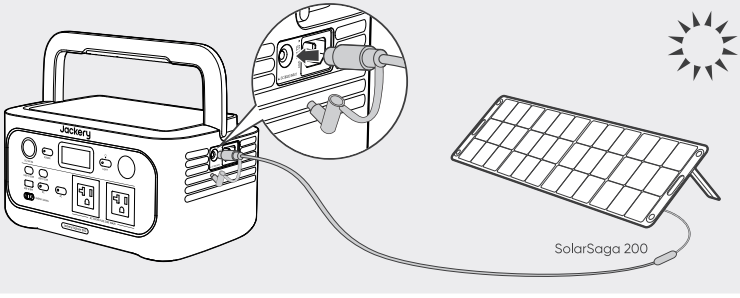

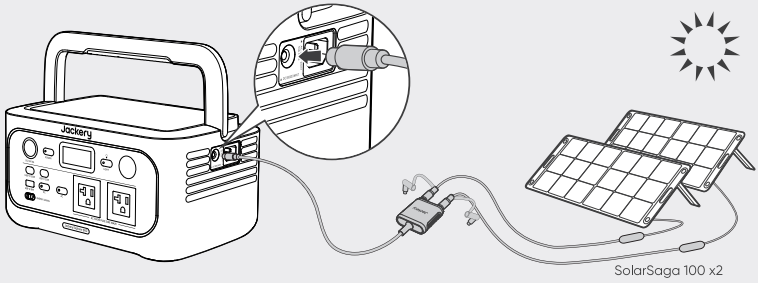


CAUTION

It is recommended to use the Jackery solar panel to charge the Jackery Explorer 600. Ensure that the open-circuit voltage (V_{OC}) of the solar panel falls within the Jackery Explorer 600's DC input voltage range (16V–60V). Jackery is not responsible for any damage or loss resulting from the use of third-party solar panels.

CHARGING WITH A CAR CHARGER

This product can be charged using a 12V car charger. Ensure that the car charger and the car cigarette lighter provide a good connection.

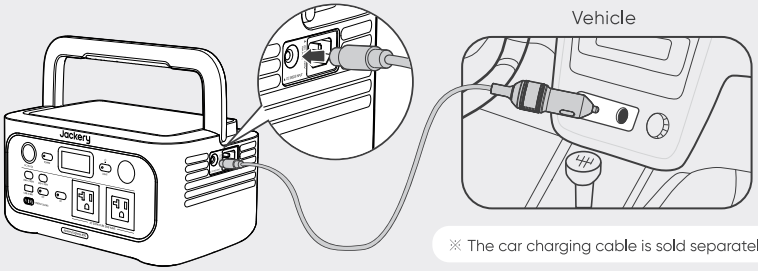

※ The car charging cable is sold separately.

CAUTION

1. Please start the vehicle before charging your product.
2. If the vehicle is running on bumpy roads, it is forbidden to use the car charger in case it burns due to a poor connection. The Company will not be responsible for any loss caused by non-standard operation.
3. Vehicle charging is only applicable to vehicles with 12V DC, not 24V DC. Please do not charge this product in 24V vehicle to avoid personal injury and property loss.
4. It is recommended to use the Jackery Solar Panel to charge the Explorer 600. Jackery is not responsible for any losses caused by using solar panels from other brands.

STORAGE

Store the product in a dry clean place with proper ventilation. Storage temperature and humidity:

- 1 month: -4°F to 113°F / -20°C to 45°C (0-60%RH)
- 3 months: 32°F to 113°F / 0°C to 45°C (0-60%RH)
- 12 months: 32°F to 77°F / 0°C to 25°C (0-60%RH)

If this product is stored for a long period of time (3 months - 6 months) with the power depleted, it may become unchargeable. To prevent this and maintain battery health, it is recommended to check and recharge the product every three months and perform a full charge and discharge cycle at least once every 6 to 12 months.

TROUBLESHOOTING

Error Code	Name	Description (For Internal Fault Maintenance Only)
F0	BMS Data Communication Error	Data communication failure between the BMS and mainboard
F1	Inverter Data Communication Error	Data communication failure between the inverter and mainboard
F2	DC Input Data Communication Error	Data communication failure between the DC charging module and BMS
F3	BMS or Battery Failure	BMS or battery failuare
F4	Battery Overvoltage	Battery overvoltage
F5	Battery Undervoltage	Battery undervoltage
F6	Inverter Failure	AC output overcurrent / overload / short circuit protection triggered Grid input over-voltage / undervoltage / overfrequency / underfrequency protection triggered Inverter over-temperature protection triggered Insulation detection failure
F7	DC Charging Module (PV) Failure	PV input overvoltage; DC charging module overtemperature protection on/triggered; Output overcurrent protection of the DC charging module on/triggered
F8	Battery Charging / Discharging Overcurrent / Short Circuit	BMS overcurrent / short circuit protection triggered
F9	DC Output Overcurrent / Short Circuit	USB short circuit protection triggered

SPECIFICATIONS

● GENERAL INFO

Product Name	Jackery Explorer 600
Model No.	JE-600A
Capacity	20Ah/32V DC(640Wh)
Cell Chemistry	$LiFePO_4$
Weight	About 14.11 lbs / 6.4kg
Dimensions	12.2×8.1×6.2in / 31.1×20.5×15.7 cm
Cycle Life	6000 cycles to 70%+ capacity

● INPUT PORTS

Charge Mode AC Input	100V-120V~ 60Hz, 15A Max
1×DC8020 Port	11V-16V⎓8A Max
	16V-60V⎓10.5A, 200W Max

● OUTPUT PORTS

2 × AC Output	120V~ 60Hz, 4.2A
Bypass Mode AC Output	100V-120V~ 60Hz, 500W
AC Total Output	500W Rated, 1000W Surge Peak
USB-C1 Output	100W Max, 5V⎓3A, 9V⎓3A, 12V⎓3A, 15V⎓3A, 20V⎓5A
USB-C2 Output	30W Max, 5V⎓3A, 9V⎓3A, 12V⎓2.5A, 15V⎓2A, 20V⎓1.5A
USB-A Output	18W Max, 5-6V⎓3A, 6-9V⎓2A, 9-12V⎓1.5A
Cigarette Lighter Port	12V⎓10A Max

● ENVIRONMENTAL OPERATING TEMPERATURE

Charge Temperature	-4°F to 113°F / -20°C to 45°C
Discharge Temperature	-4°F to 113°F / -20°C to 45°C

※ USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

WARRANTY

We only provide our warranty to customers who purchase from the official Jackery website, Jackery-branded third-party platforms, or local authorized dealers.

*Warranty period and details may vary according to local laws, regulations, and authorized dealers.

Limited Warranty

Jackery Inc. warrants to the original consumer purchaser that the Jackery product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in the 'Warranty Period' section below, subject to the exclusions set forth below.

This warranty statement sets forth Jackery's total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sale of our products.

Warranty Period

3 YEARS
Standard Warranty

The standard warranty period for Jackery Explorer 600 is 36 months. In each case, the warranty period is measured starting on the date of purchase by the original consumer purchaser. The sales receipt from the first consumer purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

2 YEARS
Extended Warranty

To activate the Warranty Extension, you must register your product online or contact our customer service team at hello@jackery.com to extend the standard warranty runtime.

Repair or replacement

Jackery will repair or replace (at Jackery's expense) any Jackery product that fails to operate during the applicable warranty period due to a defect in workmanship or material. The repaired/replaced product assumes the remaining warranty of the original date of purchase.

Limited to Original Consumer Buyer

The warranty on Jackery's product is limited to the original consumer purchaser and is not transferable to any subsequent owner.

Exclusions

Jackery's warranty does not apply to:

Misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in Jackery's current product literature.

Attempted repair by anyone other than an authorized facility.

Any product purchased through an online auction house.

Jackery's warranty does not apply to the battery cell unless the battery cell is fully charged by you within seven days after you purchase the product and at least once every 6 months thereafter.

Interpretation Rights

Jackery reserves the right to final interpretation of the above customers' after-sales policy.

JACKERY INC.
5310 Bunche Dr., Fremont, CA 94538-8301
1-888-502-2236 (US)
hello@jackery.com
www.jackery.com