
Jackery

Model: JS-40A

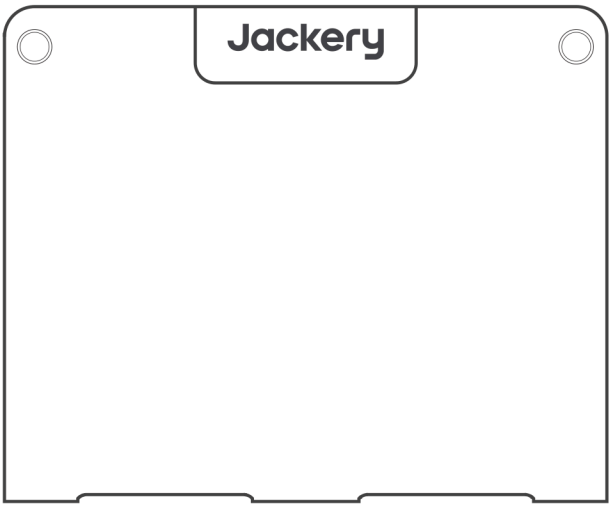

The image is for reference only

USER MANUAL

Jackery SolarSaga 40 Mini


Contact us:
hello@jackery.com
1-888-502-2236(US)

Version: JAK-UM-V2.0

GB SOLAR PANEL QUICK START GUIDE


1

• Release the magnetic buckle.

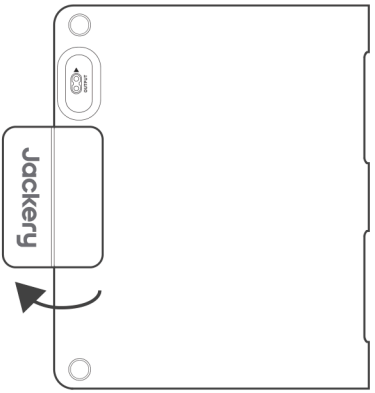


2

- Extend both sides of the panel.

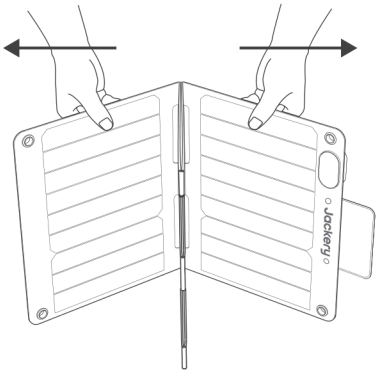


3

- Pull the concealed latch from the center to release it.

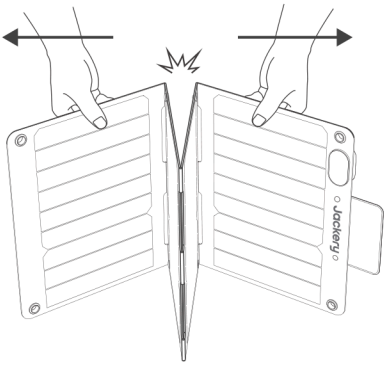


4

- Unfold the panel completely.

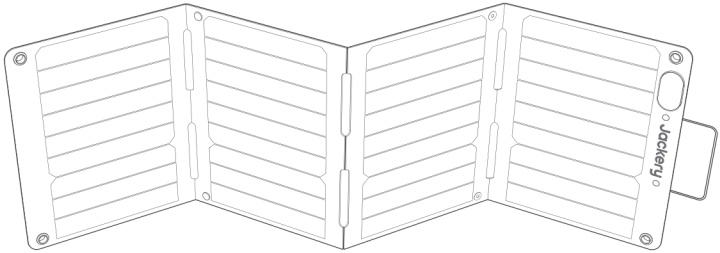

5

- Position it towards the sun and connect it to a portable power station.

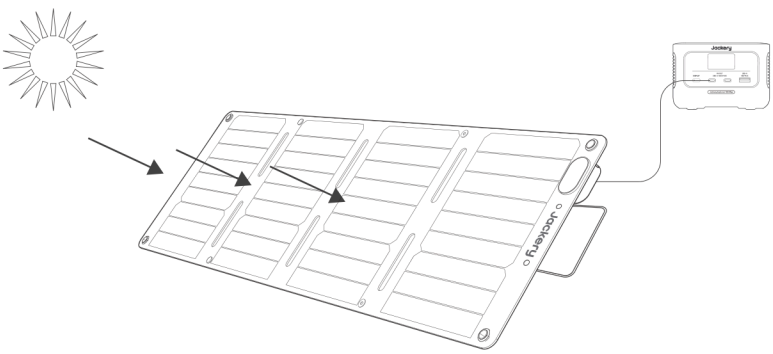

CONTENTS

US English 05-07

TECHNICAL SPECIFICATIONS

SolarSaga 40 Mini

Product Name	SolarSaga 40 Mini
Model	JS-40A
Maximum Power (Pmax)	40W±5%
Unfolded Size	Around 1020×300×18.5mm
Folded Size	Around 252×300×30mm
Weight	Around 2.6 lbs / 1.2 kg
Open circuit voltage (Voc)	25V±5%
Short circuit current (Isc)	2.07A±5%
Optimum Operating Voltage (Vmp)	20.9V±5%
Optimum Operating Current (Imp)	1.91A±5%
Operating Temperature Range	-4°F~149°F （-20°C~65°C）
Maximum System Voltage	30V
Maximum Reverse Current	6A
Protection Class Against Electric Shock	Class III
Waterproof Level	IP68
Voltage Temperature Coefficient	-0.3%/°C
Power Temperature Coefficient	-0.39%/°C
Maximum Number of Series Connections	1
Maximum Number of Parallel Connections	3
Consumer Goods Category	IEC TS 63163 Consumer Product Category 1


STC (1000W/㎡, 25°C, AM 1.5).

Multifunctional Adapter

USB-A Output	5V⎓2.4A
USB-C Output	5V⎓3A

US

POWER YOUR DEVICE

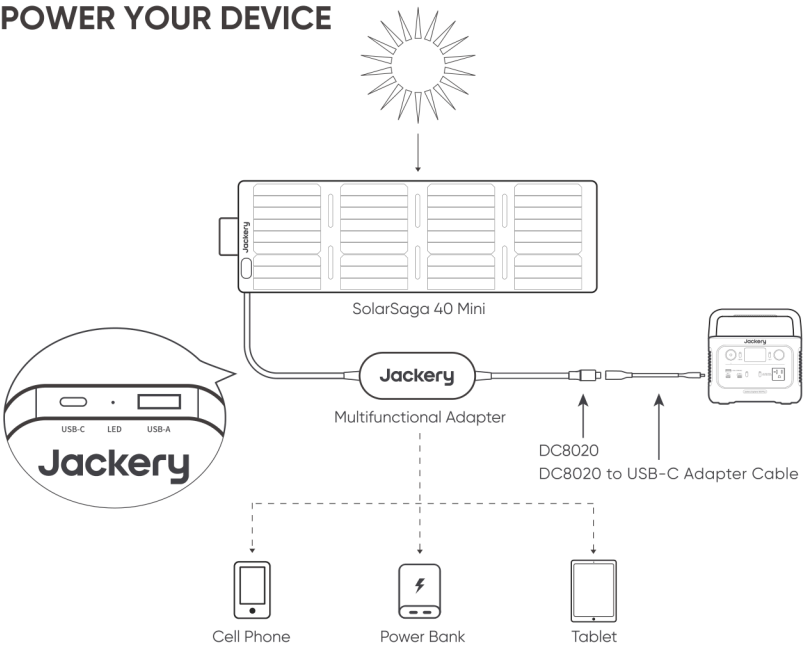

*Note: The DC8020 to USB-C adapter is only for charging Jackery power station; please do not use it for charging other devices.

PACKAGE LIST

① SolarSaga 40 Mini

② Multifunctional Solar Charging Cable

③ DC8020 to DC7909 Adapter

④ DC8020 to USB-C Adapter Cable

⑤ Accessories Bag

⑥ User Manual

⑦ Carabiner X2

*This multifunctional solar charging cable is only suitable for charging the Jackery SolarSaga 40 Mini and should not be used with other solar panels.

*As the maximum current of the DC8020 to USB-C Adapter Cable is 5A, please do not use it together with the Jackery SolarSaga 200.

*The DC8020 to DC7909 adapter is required if you need to recharge the devices listed below with SolarSaga 40 Mini.

Jackery Explorer 160/240/290/300/400/500/550/600/700/708/880/1000

SAFETY PRECAUTIONS WHEN USING

Solar Panel Safety Tips

* Do not flex or bend the folding solar panels.
* Do not place folding solar panels in shading places, while tree shades, buildings, and any other obstructions should be minimized.
* Do not soak the solar panels in water or other liquid.
* Do not clean the solar panel with water, please gently wipe it with a damp cloth.
* Do not use or store solar panels near open flames or flammable materials.
* Do not scratch the surface of solar panels with sharp objects.
* Prevent corrosive substances to damage solar panels.
* Do not step on or place heavy objects on the solar panels.
* Do not disassemble the solar panels.
* The output circuit of the solar panels must be correctly connected to the equipment. Please do not short-circuit the positive and negative poles. Ensure that there is nogap between the connector and the insulated connector. If there is a gap, sparks or electrical shocks will occur.
* Check the connection status of each component, including cables, wires and plugs.

WARRANTY

The product is covered by a limited warranty from Jackery for the original purchaser that covers the product from defects in workmanship and materials for 36 months from the date of purchase (damages from normal wear and tear, alteration, misuse, neglect, accident, service by anyone other than authorized service center, or act of God are not included).

During the warranty period and upon verification of defects, this product will be replaced when returned with proper proof of purchase.

2 Years Extended Warranty: To activate the Warranty Extension, you must register your product online or contact our customer service team at hello@jackery.com to extend the standard warranty runtime.

CUSTOMER SERVICE

36-month limited warranty
Lifetime technical support
hello@jackery.com

CONTACT US

For any inquiries or comments concerning our products, please send an email to hello@jackery.com, and we will respond to you as soon as possible. If there is any quality-related issue with the product, you may request a replacement or refund by submitting a request form at www.jackery.com.

JACKERY INC.

5310 Bunche Dr, Fremont, CA 94538

Tel:1-888-502-2236(US) E-mail:hello@jackery.com Website:www.jackery.com