


Jackery

Model: JHP-2000A

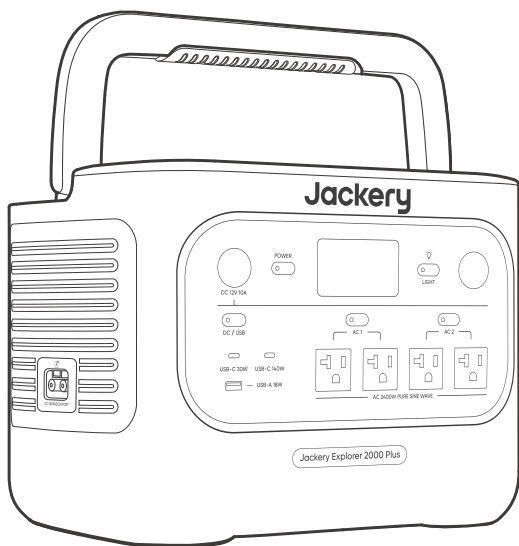

USER MANUAL

Jackery HomePower 2000 Plus v2

CONTACT US:



1-888-502-2236 (US)

hello@jackery.com

www.jackery.com

IMPORTANT SAFETY INFORMATION



WARNING

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

Always follow these basic precautions when using this product.

- Read all the instructions before using the product.
- Do not allow children to play on the product. Close supervision of children is necessary when the product is used near children.
- Avoid placing hands or fingers inside the product.
- Stop using the product immediately if it has been physically damaged or modified. Improper use may cause unpredictable behavior, leading to fire, explosion, or injury.
- If the product overheats, emits unusual odors or smoke, leaks, or burns, stop using it immediately and contact customer support.
- Never attempt to open, repair, or modify the product. Any tampering may result in electric shock, fire,

or battery damage.

- Be aware that liquid ejected from the product may cause irritation or burns. Avoid contact with leaking liquid and seek medical help if it contacts your eyes.
- Do not expose the product to fire or excessive temperatures. Doing so may result in an explosion if the temperature exceeds the rated limit.
- Any use of unrecommended or non-supplied materials or parts may result in a risk of fire, electric shock, or personal injury.
- Do not leave the battery charging unattended for long periods. Always monitor the charging process to ensure safe operation.
- To reduce the risk of electric shock, unplug the product from any power source before attempting any technical service or troubleshooting.

OPERATING INSTRUCTIONS

SAVE THESE INSTRUCTIONS

- Stop using the product immediately if it shows signs of damage. Discontinue use and contact customer support for assistance.
- Do not charge the battery in extremely hot or cold environments and strictly adhere to the specified operating temperature ranges.
- Charging temperature: -4°F to 113°F (-20°C to 45°C).
- Discharging temperature: -4°F to 113°F (-20°C to 45°C).
- To ensure proper air circulation, keep the product vents uncovered.
- Charging in damp or poorly ventilated spaces may cause safety hazards.
- Water can cause short circuits or damage to the charger, leading to safety risks.
- Unplug the power cord from a power outlet during a storm.
- Immediately turn off the product if it has fallen, been dropped, or exposed to vibrations.

- Ensure the device(s) are powered off before connecting them to the product.
- Do not charge the product using a damaged or broken charging cord or plug.
- Do not use the product to charge any device with a damaged or broken cable or plug.
- Always unplug the charging cord by pulling the plug, not the cord, to reduce the risk of damage.
- Ensure the product is properly secured when transporting it in a moving vehicle.
- DO NOT place the unit upside down or on its side during use or storage.
- DO NOT place the product on the floor or at a height less than 18 inches (457 mm) above the floor during operation in a workshop or repair facility.
- DO NOT use the product's accessories with other devices or equipment.
- Solar charge time depends on weather conditions. Place your solar panel where it will get as much direct sunlight as possible.

DANGER

- This device is intended for indoor use only (please place this device in a similar indoor environment when using it outdoors, e.g., home RVs, tents, cabins, etc.).
- This device is not waterproof or dustproof. Keep away from rain and humid environments during use.

USER MAINTENANCE INSTRUCTIONS

During the lifecycle of energy storage products, a certain degree of capacity and energy degradation is expected. As the number of charge and discharge cycles increases and storage time extends, this degradation will gradually intensify, which is a normal phenomenon consistent with the natural aging of battery cells.

SIGNAL WORDS

Symbol	Meaning
 WARNING	Hazardous practices that may result in severe injury, death, and/or property damage.
 CAUTION	Hazardous practices that may result in personal injury and/or property damage.
 NOTE	Hazardous practices that may result in equipment damage, data loss, performance deterioration, or unanticipated results.
 TIP	Supplements the important information or operation tips in the text.

SYMBOLS

Sym- bol	Meaning	Sym- bol	Meaning
	Warning and Caution Symbols: Must read to alert individuals to potential hazards or risks.		Do not dismantle the product.
	Read the user manual before operation.		Keep the product away from fire.
	Risk of electric shock.		Keep away from children.
	Battery charging.		This symbol indicates that a lithium-ion (Li-ion) battery is inside the product and should be disposed of or recycled properly.
	Explosive material.		This symbol indicates that the product shall not be disposed of as household waste, and should be delivered to a designated collection facility for recycling. Proper disposal and recycling can help protect the environment. For more information about the disposal and recycling of this product, contact your local community, disposal service, or dealer.
	Heavy object.		

Note

Replace `docs/_static/manual_en/01_meaning_of_symbols/fig.png` with the real design export, and keep the same filename to display it directly in the build output.

WHAT'S IN THE BOX

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to communications. However, there is no guarantee that radio interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

INCLUDED ITEMS

			Warranty Card
Jackery Home-	AC	Charging	
Power 2000 Plus	Cable	User Manual	

TIPS The car charging cable is not included but is available for purchase separately on our website. For assistance, please contact Jackery customer service.

 **Note**

Replace the placeholder images on this page with design-exported assets while keeping each file path stable.

PRODUCT OVERVIEW

FRONT VIEW



Item	Description
Main POWER Button	Main power control.
Handle	Carry handle for moving the unit.
DC 12V Port	12V, 10A max output.
LCD	Displays status, power flow, and settings.
DC/USB Power Button	Turns DC and USB outputs on or off.
LED Light Button	Controls LED light mode.
USB-C 30W Output	30W max: 5V/3A, 9V/3A, 12V/2.5A, 15V/2A, 20V/1.5A.
LED Light	Built-in light for illumination and SOS mode.
USB-C 100W Output	100W max: 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/5A.
AC Power Button	Turns AC output on or off.
USB-A 18W Output	18W max: 5-6V/3A, 6-9V/2A, 9-12V/1.5A.
AC Output	120V~ 60Hz, 18.3A max, 2200W rated.
Total Output	2200W rated, 4400W surge peak.

RIGHT SIDE VIEW



Item	Description
Handle	Side carry handle.
AC Input	100V-120V~ 60Hz, 15A max.
DC Input (2 x DC8020 Ports)	PV: 16V-60V, 12A max, up to 21A / 400W max combined; Car: 11V-16V, 8A max.

 **Note**

Replace both overview placeholders with design-exported diagrams, while keeping the image path stable.



ID	Indicator		Description
1	Wi-Fi		On: connected. Blink: ready to connect. Off: disconnected.
2	Bluetooth		On: connected. Blink: ready to connect. Off: disconnected.
3	Quiet Mode	Charging	Reduces charging noise and charging speed. App configurable. Setting is retained after power-off.
4	Battery Mode	Saving	Limits usable battery capacity to extend life. App configurable. Setting is retained after power-off.
5	Charging Plan / Self-powered / TOU Mode		App-controlled smart charging strategies for electricity cost optimization.
6	UPS		On: bypass mode enabled, switchover time is 10 ms. Off: bypass mode disabled.
7	AC Power Indicator		AC output is enabled (pure sine wave output).
8	Output Voltage and Frequency		Displays AC output voltage and frequency.
9	Input Power		Displays input power in watts.
10	Remaining Charge Time		Displays remaining charging time.
11	AC Wall Charging Indicator		Charging via AC input from grid power.
12	Car Charging Indicator		Charging via DC input from vehicle source.
13	Solar Charging Indicator		Charging via DC input from solar panel(s).
14	Charging Power Limit		Indicates whether charging power limit is enabled in the App.
16	Battery Power Indicator		Ring animation while charging; ring stays on during discharge.
17	Low Battery Indicator		On: below 20%. Blink: below 5%. Off: normal or charging.
18	Remaining Battery Percentage		Displays remaining battery SOC percentage.
20	Fault Code		Indicates product fault. Refer to Troubleshooting.
21	Temperature		High/low temperature protection is ac-

Note

Replace the LCD placeholder with the final UI icon diagram and keep numbering aligned with this table.

OPERATIONS

POWER ON/OFF

- On: press once.
- Off: press and hold for 3 seconds.

Default standby time is 2 hours. The product automatically shuts down after 2 hours of inactivity when there is no charging or discharging. The standby time can be configured in the Jackery App.

When Energy Saving Mode is enabled, the product will auto shut down after 12 hours if AC or DC/USB output is on but the unit is neither charging nor discharging.

AC OUTPUT ON/OFF

Prerequisite: product is powered on.

- On: press once.
- Off: press once.

DC 12V/USB OUTPUT ON/OFF

Prerequisite: product is powered on.

- On: press once.
- Off: press once.

CAUTION

- USB-C 100W is a high-power output port. Ensure connected devices and accessories satisfy safety requirements.
- Only connect devices/accessories compliant with IEC/EN/UL 62368-1 clause requirements (or equivalent standards).
- For maximum 100W output, use an official 5A USB-C cable.

The product can charge a car battery through the Jackery 12V automobile battery charging cable (sold separately).

CAUTION

- The DC 12V port supports 12V car batteries only, not 24V systems.
- Do not start the car while charging the battery through the product's 12V port.
- This function is for emergency use and cannot charge a dead or damaged car battery.

ENERGY SAVING MODE

Energy Saving Mode is enabled by default to avoid unnecessary battery drain. If no device is connected, or if connected load stays below threshold (AC $\leq$ 25W or DC/USB $\leq$ 2W) for 12 hours, outputs turn off automatically.

To disable Energy Saving Mode, press and hold AC power button + main POWER button for more than 3 seconds. When disabled, the mode icon disappears and AC/DC outputs no longer auto shut down by this rule.



NOTE

Energy Saving Mode resumes its previous state after power-on. Manual switching is required if you want to change mode.

LED LIGHT ON/OFF

The LED light has two modes: Light mode and SOS mode. In any mode, press and hold the LED light button to turn off the light.

- Press once: Light mode.
- Press again: SOS mode.
- Press third time: light off.

LCD SCREEN

Shortly On

- Turn on: press the main POWER button, or when the product is charging.
- Turn off: press the main POWER button.
- Auto-off: screen turns off after 2 minutes of inactivity and enters sleep mode.

Steady On (charging/discharging state)

- Turn on: press the main POWER button twice when the product is on.
- Turn off: press the main POWER button.
- Auto-off: screen turns off after 2 hours of inactivity.

You can also set display behavior in the Jackery App.

KEY COMBINATION

Buttons	Operation	Function
Main POWER button + AC power button	Press and hold for 3s	Turn on/off Energy Saving Mode.
Main POWER button + DC/USB power button	Press and hold for 3s	Reset Wi-Fi and Bluetooth.
DC/USB power button + AC power button	Press and hold for 1s	Turn on/off Wi-Fi and Bluetooth.



UNINTERRUPTIBLE POWER SUPPLY (UPS)

Connect the product to a wall outlet with the AC charging cable, then press the AC power button and power your appliances at the same time.

An uninterruptible power supply (UPS) is a continual power system that provides automated backup electric power to a load when the mains grid power fails. In the event of a sudden loss of grid power, the Explorer 2000 switches to stored power within 10 ms to keep appliances running. In UPS mode, the unit peak output reaches 12A (1440W) before power outages. As simultaneous charging and discharging is enabled in Bypass Mode, the actual output power is lower than rated output power in this mode, but returns to rated output power during outages.



CAUTION

- This product does not support 0 ms switching. Do not connect it to equipment that requires a 0 ms switching power supply, such as data servers or workstations.
- Before use, test compatibility with your device multiple times.
- Do not connect loads exceeding the maximum output power of the product. Otherwise, overload protection will be triggered.

CHARGING

Green energy first: this product supports solar charging and AC wall charging at the same time. When AC wall charging and solar charging are enabled together, the product prioritizes solar charging, and both methods are used to charge the battery at the maximum permissible power.

Fully charge the product before its first use.

NOTE

- Recommended charging temperature: -4 F to 113 F (-20 C to 45 C).
- Recommended discharging temperature: -4 F to 113 F (-20 C to 45 C).

- Operating outside this range may restrict charging and discharging capability, or prevent charging/discharging.
- Charging power and battery capacity may vary due to temperature fluctuations.

CHARGING VIA AC WALL OUTLET

Connect the AC charging cable to the AC input port of the product and a wall outlet.



CAUTION

Make sure the AC charging cable is fully and securely plugged into the AC input port. An incomplete connection may cause unstable current, overheating, poor contact, or device malfunction.

Emergency Charging Mode

In this mode, the power station can be rapidly charged through AC charging. This function can be enabled or disabled in the Jackery App. When emergency charging mode is active, the circular SOC light blinks faster.

To maximize battery life, charge at normal speed whenever possible. Use emergency charging mode only when necessary; it is not recommended for long-term frequent use.

CHARGING VIA SOLAR PANELS (SOLD SEPARATELY)

Jackery Explorer 2000 has two DC8020 input ports and is compatible with Jackery solar panels. If one DC8020 input port needs to connect two solar panels simultaneously, use a solar panel connector (sold separately, not included as standard).



CAUTION

- One DC8020 input port can be connected to at most two solar panels.
- Ensure the input voltage for both DC input ports is the same. Different voltages may damage the product.
- Use the same model and the same number of solar panels when connecting both DC8020 input ports.
- Do not charge the product using both a car charger and a solar panel at the same time. Doing so may blow the car fuse or cause charging failure.

It is recommended to use Jackery solar panels. Ensure the open-circuit voltage (Voc) of the solar panel is within the DC input range (16V-60V) of the Explorer 2000. Jackery is not responsible for damage or loss caused by third-party solar panels.

CHARGING VIA A CAR CHARGER (SOLD SEPARATELY)

This product can be charged using a 12V car charger. Ensure the car charger and the 12V car power outlet provide a stable connection.



The car charging cable is sold separately.

CAUTION

- Start the vehicle before charging the power station.
- If the vehicle is on bumpy roads, do not use the car charger.
- Vehicle charging is only for 12V DC vehicles, not 24V DC vehicles.

STORAGE

Store the product in a dry, clean place with proper ventilation.

Storage temperature and humidity:

- 1 month: -4 F to 113 F / -20 C to 45 C (0-60%RH)
- 3 months: 32 F to 113 F / 0 C to 45 C (0-60%RH)
- 12 months: 32 F to 77 F / 0 C to 25 C (0-60%RH)

If the product is stored for a long period (3 to 6 months) with power depleted, it may become unchargeable. To maintain battery health, check and recharge the product every three months, and perform a

full charge and discharge cycle at least once every 6 to 12 months.

TROUBLESHOOTING

If any of the following fault codes appear, follow the corrective actions below. If the fault persists, contact Jackery Customer Support.

Error Code	Corrective Measures
F0	Restart the product.
F1	Restart the product.
F2	Restart the product.
F3	Restart the product.
F4	Connect the product to loads to discharge its battery until the fault disappears.
F5	Charge the product via solar panels or an AC wall outlet until the fault disappears.
F6	Wait for the grid to normalize before charging via AC wall outlet; check whether intake/exhaust vents are blocked and keep at least 0.66 ft (20 cm) clearance on both sides; keep the product away from direct sunlight and high ambient temperature; disconnect all loads and let the product idle until the fault disappears; then restart.
F7	Remove all DC inputs; check the solar panel open-circuit voltage (Voc) (maximum allowed DC input is 60V); restart and keep the product idle until the fault disappears.
F8	Contact Jackery Customer Support.
F9	Remove the load connected to the USB ports and wait until the fault disappears.
FE	Contact Jackery Customer Support.

SPECIFICATIONS

● GENERAL INFO

Product Name	Jackery HomePower 2000 Plus v2
Model No.	JHP-2000A
Capacity	2048 Wh (40Ah/51.2V DC)
Cell Chemistry	LiFePO ₄
Weight	About 40.56 lbs / 18.4 kg
Dimensions	14.4 × 10.0 × 10.8 in / 36.5 × 25.5 × 27.5 cm
Cycle Life	6000 cycles to 70%+ capacity

● INPUT PORTS

1 × AC Input	Charge Mode: 100V~120V~60Hz, 15A Max, 1750W Max Bypass Mode ¹ : 100V~120V~60Hz, 12A Max, 1440W
2 × DC8020 Ports	16V~60V ² : 12A Max, Double to 21A / 800W Max 11V~16V ² : 8A Max
1 × DC Expansion Port	36.8V~57.6V ² 75A Max

● OUTPUT PORTS

4 × AC Output	120V~60Hz, 20A Max, 2400W Rated, 4800W Surge Peak
AC Total Output	2400W Rated, 4800W Surge peak
AC Output in Bypass Mode ¹	100V~120V~60Hz, 12A Max, 1440W Max
1 × USB-A Output	18W Max, 5V ² 3A, 6V ² 2A, 9V ² 2A, 9~12V ² 1.5A
2 × USB-C Output	30W Max, 5V ² 3A, 9V ² 3A, 12V ² 2.5A, 15V ² 2A, 20V ² 1.5A 140W Max, 5V ² 3A, 9V ² 3A, 12V ² 3A, 15V ² 3A, 20V ² 5A, 28V ² 5A
1 × DC 12V Port	12V ² 10A Max
1 × DC Expansion Port	36.8V~57.6V ² 75A Max

● ENVIRONMENTAL OPERATING TEMPERATURE

Charge Temperature	-4°F to 113°F / -20°C to 45°C
Discharge Temperature	-4°F to 113°F / -20°C to 45°C

¹ USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

¹The product can charge the battery from the AC wall outlet while delivering power through the AC output ports.

²Indicates that two or more AC output ports work together.

WARRANTY

We only provide our warranty to customers who purchase from the official Jackery website, Jackery-branded third-party platforms, or local authorized dealers.

Warranty period and details may vary according to local laws, regulations, and authorized dealers.

Limited Warranty

Jackery Inc. warrants to the original consumer purchaser that the Jackery product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in this “Warranty Period” section below, subject to the exclusions set forth below.

This warranty statement sets forth Jackery’s total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sale of our products.

Warranty Period

3 YEARS

Standard Warranty

The standard warranty period for Jackery Explorer 2000 is 36 months. In each case, the warranty period is measured starting on the date of purchase by the original consumer purchaser. The sales receipt from the first consumer purchaser, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

2 YEARS

Extended Warranty

To activate the Warranty Extension, you must register your product online or contact our customer service team at hello@jackery.com to extend the standard warranty runtime.

Repair or Replacement

Jackery will repair or replace (at Jackery’s expense) any Jackery product that fails to operate during the applicable warranty period due to a defect in workmanship or material. The repaired or replaced

product assumes the remaining warranty of the original date of purchase.

Limited to Original Consumer Buyer

The warranty on Jackery's product is limited to the original consumer purchaser and is not transferable to any subsequent owner.

Exclusions

Jackery's warranty does not apply to:

- Misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in Jackery's current product literature.
- Attempted repair by anyone other than an authorized facility.
- Any product purchased through an online auction house.
- Jackery's warranty does not apply to the battery cell unless the battery cell is fully charged by you within seven days after you purchase the product and at least once every 6 months thereafter.

Interpretation Rights

Jackery reserves the right to final interpretation of the above customer after-sales policy.

APP SETUP

1. Download the App and Log In

Search for "Jackery" in Google Play or the App Store to install the App, then register and log in. You can also scan the product QR code to download and install the App.

2. Add Device

2.1 Click the add-device button in the App.

2.2 Press the POWER button on the device to turn it on. When the Wi-Fi and Bluetooth icons flash, the device is in network configuration mode. Tap "Icon Flashed", allow nearby-device access, and enable Bluetooth permission.



2.3 After tapping the searched device icon, the App connects the device through Bluetooth automatically.

NOTE

If “the device has been bound” appears:

- Ask the device owner to share the device through the App, or
- Press and hold POWER + DC/USB power button for 3 seconds to reset Wi-Fi and Bluetooth, then bind again.

2.4 After successful Bluetooth connection, enter the Wi-Fi password and tap OK.

NOTE

- Use a 2.4 GHz Wi-Fi network. 5 GHz Wi-Fi is not supported.
- After successful device addition, the Wi-Fi icon stays on.

The screenshots in the official manual are for reference only.

CAUTION

The Jackery App can connect to only one power station over Bluetooth at a time. Returning to the device list disconnects Bluetooth automatically. Tap the power station again to reconnect.

3. Unbind Device

Open device Settings from the top-right corner of the device page, then tap Unbind at the bottom of the settings page.

4. Wi-Fi and Bluetooth Shortcuts

4.1 Turn on Wi-Fi and Bluetooth

- They turn on automatically after device startup.

- Or hold DC/USB power button + AC power button until both icons light up.

4.2 Turn off Wi-Fi and Bluetooth

- Hold DC/USB power button + AC power button until both icons are off.

4.3 Reset Wi-Fi and Bluetooth

- Hold POWER button + DC/USB power button for 3 seconds.
- The connected App account will be unbound after reset.

