


Jackery

Model: JHP-2000A

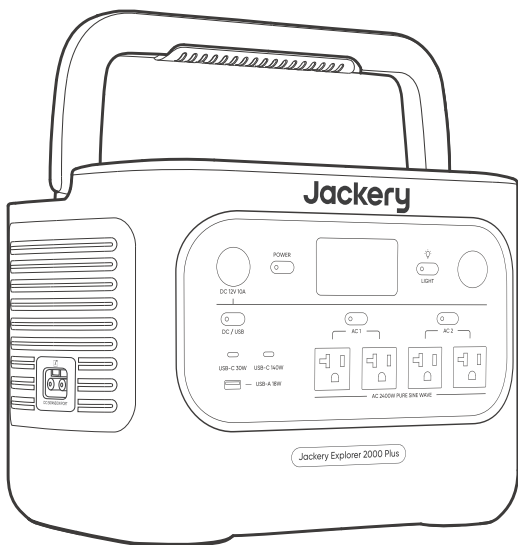

USER MANUAL

Jackery HomePower 2000 Plus v2

CONTACT US:



1-888-502-2236 (US)

hello@jackery.com

www.jackery.com

IMPORTANT SAFETY INFORMATION



WARNING

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

Always follow these basic precautions when using this product.

- Read all the instructions before using the product.
- Do not allow children to play on the product. Close supervision of children is necessary when the product is used near children.
- Avoid placing hands or fingers inside the product.
- Stop using the product immediately if it has been physically damaged or modified. Improper use may cause unpredictable behavior, leading to fire, explosion, or injury.
- If the product overheats, emits unusual odors or smoke, leaks, or burns, stop using it immediately and contact customer support.
- Never attempt to open, repair, or modify the product. Any tampering may result in electric shock, fire,

or battery damage.

- Be aware that liquid ejected from the product may cause irritation or burns. Avoid contact with leaking liquid and seek medical help if it contacts your eyes.
- Do not expose the product to fire or excessive temperatures. Doing so may result in an explosion if the temperature exceeds the rated limit.
- Any use of unrecommended or non-supplied materials or parts may result in a risk of fire, electric shock, or personal injury.
- Do not leave the battery charging unattended for long periods. Always monitor the charging process to ensure safe operation.
- To reduce the risk of electric shock, unplug the product from any power source before attempting any technical service or troubleshooting.

OPERATING INSTRUCTIONS

SAVE THESE INSTRUCTIONS

- Stop using the product immediately if it shows signs of damage. Discontinue use and contact customer support for assistance.
- Do not charge the battery in extremely hot or cold environments and strictly adhere to the specified operating temperature ranges.
- Charging temperature: -4°F to 113°F (-20°C to 45°C).
- Discharging temperature: -4°F to 113°F (-20°C to 45°C).
- To ensure proper air circulation, keep the product vents uncovered.
- Charging in damp or poorly ventilated spaces may cause safety hazards.
- Water can cause short circuits or damage to the charger, leading to safety risks.
- Unplug the power cord from a power outlet during a storm.
- Immediately turn off the product if it has fallen, been dropped, or exposed to vibrations.

- Ensure the device(s) are powered off before connecting them to the product.
- Do not charge the product using a damaged or broken charging cord or plug.
- Do not use the product to charge any device with a damaged or broken cable or plug.
- Always unplug the charging cord by pulling the plug, not the cord, to reduce the risk of damage.
- Ensure the product is properly secured when transporting it in a moving vehicle.
- DO NOT place the unit upside down or on its side during use or storage.
- DO NOT place the product on the floor or at a height less than 18 inches (457 mm) above the floor during operation in a workshop or repair facility.
- DO NOT use the product's accessories with other devices or equipment.
- Solar charge time depends on weather conditions. Place your solar panel where it will get as much direct sunlight as possible.

DANGER

- This device is intended for indoor use only (please place this device in a similar indoor environment when using it outdoors, e.g., home RVs, tents, cabins, etc.).
- This device is not waterproof or dustproof. Keep away from rain and humid environments during use.

USER MAINTENANCE INSTRUCTIONS

During the lifecycle of energy storage products, a certain degree of capacity and energy degradation is expected. As the number of charge and discharge cycles increases and storage time extends, this degradation will gradually intensify, which is a normal phenomenon consistent with the natural aging of battery cells.

SIGNAL WORDS

Symbol	Meaning
 WARNING	Hazardous practices that may result in severe injury, death, and/or property damage.
 CAUTION	Hazardous practices that may result in personal injury and/or property damage.
 NOTE	Hazardous practices that may result in equipment damage, data loss, performance deterioration, or unanticipated results.
 TIP	Supplements the important information or operation tips in the text.

SYMBOLS

Sym- bol	Meaning	Sym- bol	Meaning
	Warning and Caution Symbols: Must read to alert individuals to potential hazards or risks.		Do not dismantle the product.
	Read the user manual before operation.		Keep the product away from fire.
	Risk of electric shock.		Keep away from children.
	Battery charging.		This symbol indicates that a lithium-ion (Li-ion) battery is inside the product and should be disposed of or recycled properly.
	Explosive material.		This symbol indicates that the product shall not be disposed of as household waste, and should be delivered to a designated collection facility for recycling. Proper disposal and recycling can help protect the environment. For more information about the disposal and recycling of this product, contact your local community, disposal service, or dealer.
	Heavy object.		

Note

Replace `docs/_static/manual_en/01_meaning_of_symbols/fig.png` with the real design export, and keep the same filename to display it directly in the build output.

WHAT'S IN THE BOX

Included Items

- Jackery HomePower 2000 Plus v2
- AC charging cable
- User manual

Tip

The car charging cable is not included but is available for purchase separately on the website. For assistance, please contact customer service.

FCC Compliance (Part 15)

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency

PRODUCT OVERVIEW

Note

This page contains a visual diagram of the product interface including:

- AC Output
- DC Output
- USB Ports
- LCD Display
- Power Button
- Input Ports

The detailed interface layout is provided as a visual diagram in the official manual.

For the draft version of the documentation, this page is reserved as a placeholder. A full visual diagram will be inserted in the final publication stage.

Note

TODO: Insert design-provided overview image or PDF page.

LCD DISPLAY

The LCD display shows the current working status of the Jackery HomePower 2000 Plus v2.

Displayed information typically includes:

- Battery level
- Input power
- Output power
- Charging status
- Error indicators

- UPS mode indicator

Note

The detailed LCD icon explanations are presented with a numbered diagram in the official manual.

Note

TODO: Insert LCD indicator diagram provided by the design team.

OPERATING INSTRUCTIONS

This section describes the basic operation procedures of the Jackery HomePower 2000 Plus v2.

Power On / Off

1. Press the power button to turn on the unit.
2. The LCD screen will light up and display system status.
3. Press the power button again to turn off the system.

AC Output

1. Press the AC button to enable AC output.
2. The AC indicator will appear on the display.
3. Connect your device to the AC output ports.

USB Output

USB ports provide direct DC output for compatible devices such as smartphones, tablets and cameras.

DC Output

The DC output ports can be used for powering compatible 12V devices.

Note

Detailed interface diagrams and operating illustrations are provided in the visual pages of the final manual.

UPS MODE

Jackery HomePower 2000 Plus v2 supports Uninterruptible Power Supply (UPS) functionality.

When the unit is connected to an AC power source, it can supply power to connected devices while simultaneously charging its internal battery.

In the event of a power outage:

- The system automatically switches to battery power.
- Connected devices continue to receive power without interruption.

Typical Use Cases

UPS mode is suitable for powering devices that require continuous power supply, such as:

- Desktop computers
- Network routers
- Security systems
- Home office equipment

Caution

Ensure the total load does not exceed the rated output power of the unit.

BATTERY PACK EXPANSION

Jackery HomePower 2000 Plus v2 supports expansion with compatible external battery packs.

Connecting Battery Packs

1. Ensure the power station is turned off.
2. Connect the battery expansion cable to the expansion port.
3. Secure the connection properly.

Benefits

Adding expansion battery packs can provide:

- Increased energy storage capacity
- Extended operating time
- Improved flexibility for different power demands

Note

Refer to the compatible battery pack models for supported configurations.

CHARGING THE POWER STATION

Jackery HomePower 2000 Plus v2 supports multiple charging methods.

AC Charging

Connect the AC charging cable to a wall outlet and plug the other end into the AC input port of the power station.

Solar Charging

The power station can be charged using compatible solar panels.

Note

Ensure the solar panel voltage and current are within the supported range.

Car Charging

The power station can also be charged through a vehicle's 12V car outlet.

Tip

Car charging may take longer compared with AC charging.

STORAGE AND MAINTENANCE

Proper storage and maintenance can help prolong the lifespan of Jackery HomePower 2000 Plus v2.

Storage Guidelines

- Store the product in a dry and cool environment.
- Avoid exposure to direct sunlight.
- Keep the device away from water and high humidity.

Battery Maintenance

If the power station will not be used for an extended period:

- Charge the battery to approximately 60–80%.
- Recharge the battery every 3–6 months.



Caution

Failure to maintain battery charge may result in battery degradation.

TROUBLESHOOTING

If the power station does not operate as expected, refer to the following guidelines.

Device Not Powering On

Possible causes:

- Battery is completely discharged
- Power button not pressed properly

Solution:

- Recharge the device
- Press the power button again

No Output Power

Possible causes:

- Output port disabled
- Overload protection activated

Solution:

- Check the output settings
- Remove excessive loads

Charging Issues

Possible causes:

- Incorrect charging cable
- Power source unavailable

Solution:

- Verify cable connections
- Check power supply source

Note

If the issue persists, contact customer support.

SPECIFICATIONS

• GENERAL INFO

Product Name	Jackery HomePower 2000 Plus v2
Model No.	JHP-2000A
Capacity	2048 Wh (40Ah/51.2V DC)
Cell Chemistry	LiFePO ₄
Weight	About 40.56 lbs / 18.4 kg
Dimensions	14.4 × 10.0 × 10.8 in / 36.5 × 25.5 × 27.5 cm
Cycle Life	6000 cycles to 70%+ capacity

• INPUT PORTS

1 × AC Input	Charge Mode: 100V~120V~60Hz, 15A Max, 1750W Max Bypass Mode: 100V~120V~60Hz, 12A Max, 1440W
2 × DC8020 Ports	16V~60V: 12A Max, Double to 21A / 800W Max 11V~16V: 8A Max
1 × DC Expansion Port	36.8V~57.6V 75A Max

• OUTPUT PORTS

4 × AC Output	120V~60Hz, 20A Max, 2400W Rated, 4800W Surge Peak
AC Total Output	2400W Rated, 4800W Surge peak
AC Output in Bypass Mode	100V~120V~60Hz, 12A Max, 1440W Max
1 × USB-A Output	18W Max, 5V 3A, 6V 2A, 9V 2A, 9~12V 1.5A
2 × USB-C Output	30W Max, 5V 3A, 9V 3A, 12V 2.5A, 15V 2A, 20V 1.5A 140W Max, 5V 3A, 9V 3A, 12V 3A, 15V 3A, 20V 5A, 28V 5A
1 × DC 12V Port	12V 10A Max
1 × DC Expansion Port	36.8V~57.6V 75A Max

• ENVIRONMENTAL OPERATING TEMPERATURE

Charge Temperature	-4°F to 113°F / -20°C to 45°C
Discharge Temperature	-4°F to 113°F / -20°C to 45°C

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

¹The product can charge the battery from the AC wall outlet while delivering power through the AC output ports.

WARRANTY

Jackery HomePower 2000 Plus v2 is covered by a limited warranty provided by the manufacturer.

Warranty Coverage

The warranty covers defects in materials and workmanship under normal use.

Warranty Period

The warranty period begins on the date of purchase.

Exclusions

The warranty does not cover:

- Damage caused by misuse
- Unauthorized modifications
- Accidental damage
- Improper storage conditions

Customer Support

For warranty service or technical support, contact the official support channel.

APP SETUP

Jackery HomePower 2000 Plus v2 can be monitored and controlled using the official mobile application.

Basic Features

- Real-time power monitoring
- Input and output status display
- Battery level monitoring
- Firmware updates

Note

The official manual provides detailed step-by-step screenshots for connecting the device to the mobile application.

Note

TODO: Insert app connection screenshots and pairing instructions.