


Jackery

Model: JHP-2000A

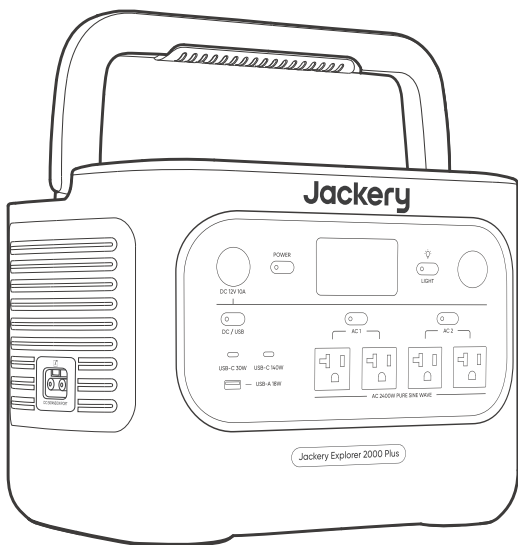

USER MANUAL

Jackery HomePower 2000 Plus v2

CONTACT US:



1-888-502-2236 (US)

hello@jackery.com

www.jackery.com

IMPORTANT SAFETY INFORMATION



WARNING

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

Always follow these basic precautions when using this product.

- Read all the instructions before using the product.
- Do not allow children to play on the product. Close supervision of children is necessary when the product is used near children.
- Avoid placing hands or fingers inside the product.
- Stop using the product immediately if it has been physically damaged or modified. Improper use may cause unpredictable behavior, leading to fire, explosion, or injury.
- If the product overheats, emits unusual odors or smoke, leaks, or burns, stop using it immediately and contact customer support.
- Never attempt to open, repair, or modify the product. Any tampering may result in electric shock, fire,

or battery damage.

- Be aware that liquid ejected from the product may cause irritation or burns. Avoid contact with leaking liquid and seek medical help if it contacts your eyes.
- Do not expose the product to fire or excessive temperatures. Doing so may result in an explosion if the temperature exceeds the rated limit.
- Any use of unrecommended or non-supplied materials or parts may result in a risk of fire, electric shock, or personal injury.
- Do not leave the battery charging unattended for long periods. Always monitor the charging process to ensure safe operation.
- To reduce the risk of electric shock, unplug the product from any power source before attempting any technical service or troubleshooting.

OPERATING INSTRUCTIONS

SAVE THESE INSTRUCTIONS

- Stop using the product immediately if it shows signs of damage. Discontinue use and contact customer support for assistance.
- Do not charge the battery in extremely hot or cold environments and strictly adhere to the specified operating temperature ranges.
- Charging temperature: -4°F to 113°F (-20°C to 45°C).
- Discharging temperature: -4°F to 113°F (-20°C to 45°C).
- To ensure proper air circulation, keep the product vents uncovered.
- Charging in damp or poorly ventilated spaces may cause safety hazards.
- Water can cause short circuits or damage to the charger, leading to safety risks.
- Unplug the power cord from a power outlet during a storm.
- Immediately turn off the product if it has fallen, been dropped, or exposed to vibrations.

- Ensure the device(s) are powered off before connecting them to the product.
- Do not charge the product using a damaged or broken charging cord or plug.
- Do not use the product to charge any device with a damaged or broken cable or plug.
- Always unplug the charging cord by pulling the plug, not the cord, to reduce the risk of damage.
- Ensure the product is properly secured when transporting it in a moving vehicle.
- DO NOT place the unit upside down or on its side during use or storage.
- DO NOT place the product on the floor or at a height less than 18 inches (457 mm) above the floor during operation in a workshop or repair facility.
- DO NOT use the product's accessories with other devices or equipment.
- Solar charge time depends on weather conditions. Place your solar panel where it will get as much direct sunlight as possible.

INFORMATIONS DE SÉCURITÉ IMPORTANTES



WARNING

INSTRUCTIONS CONCERNANT LES RISQUES D'INCENDIE, DE CHOC ÉLECTRIQUE OU DE BLESSURES

Respectez toujours les précautions de base lors de l'utilisation de ce produit.

- Lisez toutes les instructions avant d'utiliser le produit.
- Ne laissez pas les enfants jouer avec le produit. Surveillez-les étroitement lorsque le produit est utilisé à proximité d'enfants.
- Évitez de placer les mains ou les doigts à l'intérieur du produit.
- Arrêtez immédiatement d'utiliser le produit s'il a été endommagé physiquement ou modifié. Une mauvaise utilisation peut entraîner un comportement imprévisible, une explosion ou des blessures.
- Si vous constatez une surchauffe, une odeur inhabituelle, de la fumée, des fuites ou des brûlures, cessez immédiatement l'utilisation et contactez le revendeur ou notre service client.
- Ne tentez jamais d'ouvrir, de réparer ou de modifier le produit. Toute altération, réassemblage ou modification peut entraîner un choc électrique, un incendie ou

des dommages à la batterie.

- Soyez conscient que le liquide éjecté du produit peut provoquer des brûlures. Une mauvaise utilisation peut provoquer des fuites. Évitez tout contact direct. En cas de contact avec les yeux, consultez immédiatement un médecin. En cas de contact avec la peau, rincez abondamment à l'eau claire et consultez un professionnel sans tarder.
- N'exposez pas le produit au feu ni à des températures excessives. Une température supérieure à 130°C (265°F) peut entraîner une explosion.
- L'utilisation de matériaux ou de pièces non recommandés ou non fournis peut entraîner un risque d'incendie, de choc électrique ou de blessures.
- Ne laissez jamais la batterie en charge sans surveillance pendant de longues périodes. Surveillez toujours la charge pour assurer une utilisation sûre.
- Pour réduire le risque de choc électrique, débranchez le produit de toute source d'alimentation avant d'effectuer un entretien technique ou un dépannage.

INSTRUCTIONS D'UTILISATION

CONSERVEZ CES INSTRUCTIONS

- Cessez immédiatement d'utiliser le produit s'il présente des signes de dommage. Arrêtez l'utilisation et contactez l'assistance clientèle pour obtenir de l'aide.
- Ne rechargez pas la batterie dans un environnement extrêmement chaud ou froid, et respectez strictement les plages de températures spécifiées.
- Température de charge : -4°F à 113°F (-20°C à 45°C)
- Température de décharge : -4°F à 113°F (-20°C à 45°C)
- Pour garantir une circulation de l'air adéquate, laissez les orifices de ventilation du produit dégagés. Utilisez-le dans un endroit bien aéré, frais et sec pour éviter toute surchauffe.
- La charge dans un environnement humide ou mal ventilé peut présenter des risques pour la sécurité.
- L'eau peut provoquer des courts-circuits ou endommager le chargeur, entraînant des risques pour la sécurité.
- Débranchez le cordon d'alimentation de la prise secteur pendant un orage.
- Éteignez immédiatement le produit à l'aide du bouton d'alimentation s'il est tombé, a subi un choc ou a

été exposé à des vibrations.

- Assurez-vous que les appareil(s) sont éteints avant de les connecter au produit.
- Ne rechargez pas le produit avec un câble ou une fiche endommagé(e).
- N'utilisez pas le produit pour charger un appareil équipé d'un câble ou d'une fiche endommagé(e).
- Débranchez toujours le cordon de charge en tirant sur la fiche, jamais sur le câble, afin de réduire le risque de dommage.
- Veillez à ce que le produit soit correctement fixé lors du transport dans un véhicule en mouvement.
- NE placez PAS l'appareil à l'envers ou sur le côté pendant l'utilisation ou le stockage.
- NE placez PAS le produit sur le sol ou à une hauteur inférieure à 18 pouces (457 mm) au-dessus du sol pendant son utilisation dans un atelier ou un centre de réparation.
- N'utilisez PAS les accessoires du produit avec d'autres appareils ou équipements.
- Le temps de charge solaire dépend des conditions météorologiques. Placez votre panneau solaire à un endroit exposé au soleil direct autant que possible.

! DANGER

This device is intended for indoor use only (Please place this device in a similar indoor environment when using it outdoors, e.g. Home RVs, tents, cabins, etc.).

! This device is not waterproof or dustproof. Keep away from rain and humid environments during use.

USER MAINTENANCE INSTRUCTIONS

During the lifecycle of energy storage products, a certain degree of capacity and energy degradation is expected. As the number of charge and discharge cycles increases and storage time extends, this degradation will gradually intensify, which is a normal phenomenon consistent with the natural aging of battery cells.

MEANING OF SYMBOLS

Symbol	Meaning
! WARNING	Hazardous practices that may result in severe injury, death, and/or property damage.
! CAUTION	Hazardous practices that may result in personal injury and/or property damage.
! NOTE	Hazardous practices that may result in equipment damage, data loss, performance deterioration, or unanticipated results.
! TIP	Supplements the important information or operation tips in the text.

Symbol	Meaning
!	Warning and Caution Symbols. Must read to alert individuals to potential hazards or risks.
!	Read the user manual before operation.
!	Risk of electric shock
!	Battery charging
!	Explosive material
!	Heavy object

Symbol	Meaning
!	Do not dismantle the product.
!	Keep the product away from fire.
!	Keep away from children.
!	This symbol indicates that a lithium-ion (Li-ion) battery is inside the product and should be disposed of or recycled properly.
!	This symbol indicates that the product shall not be disposed of as household waste, and should be delivered to a designated collection facility for recycling. Proper disposal and recycling can help protect the environment. For more information about the disposal and recycling of this product, contact your local community, disposal service, or dealer.

! DANGER

This device is intended for indoor use only (Please place this device in a similar indoor environment when using it outdoors, e.g. Home RVs, tents, cabins, etc.).

! This device is not waterproof or dustproof. Keep away from rain and humid environments during use.

USER MAINTENANCE INSTRUCTIONS

During the lifecycle of energy storage products, a certain degree of capacity and energy degradation is expected. As the number of charge and discharge cycles increases and storage time extends, this degradation will gradually intensify, which is a normal phenomenon consistent with the natural aging of battery cells.

MEANING OF SYMBOLS

Symbol	Meaning
! WARNING	Hazardous practices that may result in severe injury, death, and/or property damage.
! CAUTION	Hazardous practices that may result in personal injury and/or property damage.
! NOTE	Hazardous practices that may result in equipment damage, data loss, performance deterioration, or unanticipated results.
! TIP	Supplements the important information or operation tips in the text.

Symbol	Meaning
!	Warning and Caution Symbols. Must read to alert individuals to potential hazards or risks.
!	Read the user manual before operation.
!	Risk of electric shock
!	Battery charging
!	Explosive material
!	Heavy object

Symbol	Meaning
!	Do not dismantle the product.
!	Keep the product away from fire.
!	Keep away from children.
!	This symbol indicates that a lithium-ion (Li-ion) battery is inside the product and should be disposed of or recycled properly.
!	This symbol indicates that the product shall not be disposed of as household waste, and should be delivered to a designated collection facility for recycling. Proper disposal and recycling can help protect the environment. For more information about the disposal and recycling of this product, contact your local community, disposal service, or dealer.

SPECIFICATIONS

• GENERAL INFO

Product Name	Jackery HomePower 2000 Plus v2
Model No.	JHP-2000A
Capacity	2048 Wh (40Ah/51.2V DC)
Cell Chemistry	LiFePO ₄
Weight	About 40.56 lbs / 18.4 kg
Dimensions	14.4 × 10.0 × 10.8 in / 36.5 × 25.5 × 27.5 cm
Cycle Life	6000 cycles to 70%+ capacity

• INPUT PORTS

1 × AC Input	Charge Mode: 100V~120V~60Hz, 15A Max, 1750W Max Bypass Mode ¹ : 100V~120V~60Hz, 12A Max, 1440W
2 × DC8020 Ports	16V~60V ² : 12A Max, Double to 21A / 800W Max 11V~16V ² : 8A Max
1 × DC Expansion Port	36.8V~57.6V ² 75A Max

• OUTPUT PORTS

4 × AC Output	120V~60Hz, 20A Max, 2400W Rated, 4800W Surge Peak
AC Total Output	2400W Rated, 4800W Surge peak
AC Output in Bypass Mode ¹	100V~120V~60Hz, 12A Max, 1440W Max
1 × USB-A Output	18W Max, 5V ² 3A, 6V ² 2A, 9V ² 2A, 9~12V ² 1.5A
2 × USB-C Output	30W Max, 5V ² 3A, 9V ² 3A, 12V ² 2.5A, 15V ² 2A, 20V ² 1.5A 140W Max, 5V ² 3A, 9V ² 3A, 12V ² 3A, 15V ² 3A, 20V ² 5A, 28V ² 5A
1 × DC 12V Port	12V ² 10A Max
1 × DC Expansion Port	36.8V~57.6V ² 75A Max

• ENVIRONMENTAL OPERATING TEMPERATURE

Charge Temperature	-4°F to 113°F / -20°C to 45°C
Discharge Temperature	-4°F to 113°F / -20°C to 45°C

* USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

¹The product can charge the battery from the AC wall outlet while delivering power through the AC output ports.

²Indicates that two or more AC output ports work together.

SPÉCIFICATIONS

• INFORMATIONS GÉNÉRALES

Nom du produit	Jackery HomePower 2000 Plus v2
N° modèle	JHP-2000A
Capacité	2048 Wh (40 Ah/51,2 V DC)
Cellule Chimique	LiFePO ₄
Poids	Environ 40,56 lbs / 18,4 kg
Dimensions	14,4 × 10,0 × 10,8 in / 36,5 × 25,5 × 27,5 cm
Durée de vie	Capacité de 6000 cycles à 70 % ou plus

• PORTS D'ENTRÉE

1 × Entrée CA	Mode charge: 100-120 V~60 Hz, 15 A max., 1750 W max. Mode dérivation: 100-120 V~60 Hz, 12 A max., 1440 W
2 × Ports DC8020	16 V-60 V: 12 A max., double à 21 A/800 W max. 11 V-16 V: 8 A max.
1 × Port d'extension CC	36,8 V-57,6 V 75 A max.

• PORTS DE SORTIE

4 × Sortie CA	120V~ 60Hz, 20A Max, 2400W Rated, 4800W Surge Peak
Sortie totale CA	2400W Rated, 4800W Surge peak
Sortie CA en mode dérivation	100V-120V~60Hz, 12A Max, 1440W Max
1 × Sortie USB-A	18 W max., 5V 3 A, 6V 2 A, 9V 2 A, 9-12V 1,5 A
2 × Sortie USB-C	30W max., 5V 3 A, 9V 3 A, 12V 2.5 A, 15V 2 A, 20V 1.5 A
	140 W max., 5V 3 A, 9V 3 A, 12V 3 A, 15V 3 A, 20V 5 A, 28V 5 A
1 × Port CC 12V	12V 10A Max
1 × Port d'extension CC	36,8 V-57,6 V 75 A max.

• TEMPÉRATURE DE FONCTIONNEMENT

Température de charge	- 4 °F à 113 °F / - 20 °C à 45 °C
Température de décharge	- 4 °F à 113 °F / - 20 °C à 45 °C

* USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

¹Le produit peut charger la batterie à partir d'une prise murale CA tout en fournissant de l'énergie via les ports de sortie CA.

²Indique que deux ports de sortie CA ou plus fonctionnent ensemble.

PRODUCT OVERVIEW

● FRONT VIEW

Main Power Button

LCD

LED Light Button

DC 12V Port

12V=10A Max

LED Light

DC/USB Power Button

AC1 Power Button

USB-C 30W Output

30W Max, 5V=3A, 9V=3A,
12V=2.5A, 15V=2A, 20V=1.5A

AC2 Power Button

USB-A 18W Output


18W Max, 5-6V=3A, 6-9V=2A,
9-12V=1.5A

AC Output

120V~60Hz, 20A Max,
2400W Rated, 4800W
Surge Peak

USB-C 140W Output

140W Max, 5V=3A, 9V=3A, 12V=3A, 15V=3A,
20V=5A, 28V=5A

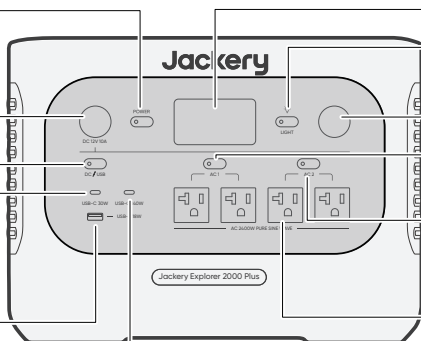


● LEFT SIDE VIEW

Handle

DC Expansion Port

Connect to Battery Pack

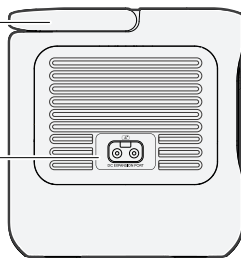


● RIGHT SIDE VIEW

DC Input (2×DC8020 Ports)

16-60V=12A Max, Double to 21A / 800W Max
11-16V=8A Max

AC Input

100V-120V~60 Hz, 15A Max

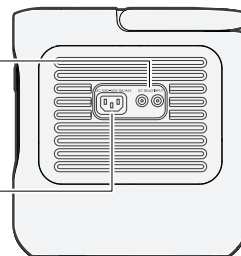

PRODUCT OVERVIEW

● FRONT VIEW

Main Power Button

LCD

LED Light Button

DC 12V Port

12V=10A Max

LED Light

DC/USB Power Button

AC1 Power Button

USB-C 30W Output

30W Max, 5V=3A, 9V=3A,
12V=2.5A, 15V=2A, 20V=1.5A

AC2 Power Button

USB-A 18W Output


18W Max, 5-6V=3A, 6-9V=2A,
9-12V=1.5A

AC Output

120V~60Hz, 20A Max,
2400W Rated, 4800W
Surge Peak

USB-C 140W Output

140W Max, 5V=3A, 9V=3A, 12V=3A, 15V=3A,
20V=5A, 28V=5A

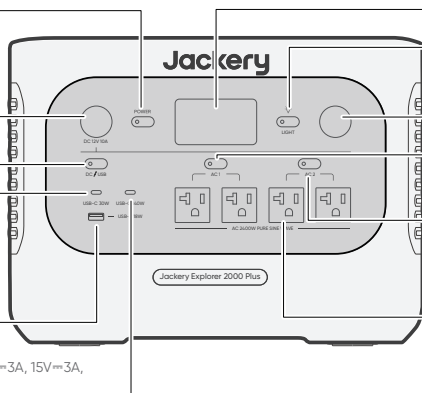


● LEFT SIDE VIEW

Handle

DC Expansion Port

Connect to Battery Pack

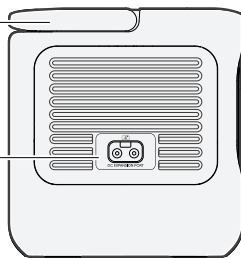

● RIGHT SIDE VIEW

DC Input (2×DC8020 Ports)

16-60V=12A Max, Double to 21A / 800W Max
11-16V=8A Max

AC Input

100V-120V~60 Hz, 15A Max

