
SWAP-CAN VOODOO T5 · PINOUT


swap-parts.es

Rear view of the gauge (connector side). Wire no. 1 of each cable is marked in red; count 2, 3, 4… in order from it. Odd pins are on the bottom row (key-notch side).

Main connector, 24 pins

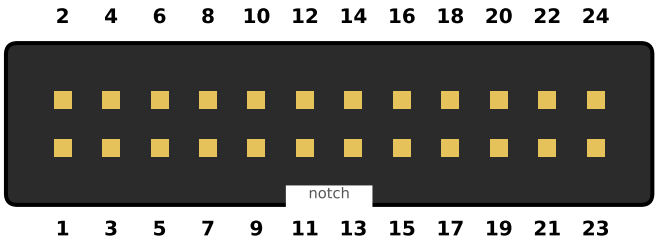

SSR connector, 10 pins

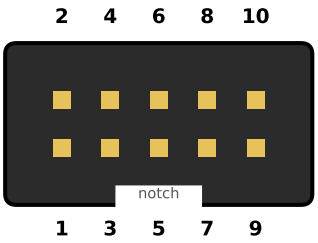

24-pin connector

1	+15 (power supply)
2	+15 (power supply)
3	3.3 V output
4	+15 (power supply)
5	EGT (in development)
6	IO9 (reserved)
7	+58
8	IO3 (reserved)
9	Oil temperature signal
10	Sensor GND
11	Oil pressure signal
12	Sensor GND
13	Fuel pressure signal
14	Sensor GND
15	CAN H
16	CAN H
17	CAN L
18	CAN L
19	5 V sensors
20	5 V sensors
21	5 V sensors
22	GND
23	GND
24	GND

10-pin SSR connector

1	SSR2 to load
2	SSR1 to GND
3	SSR2 to GND
4	SSR1 to load
5	GND
6	GND
7	SSR3 to load
8	SSR4 to GND
9	SSR3 to GND
10	SSR4 to load

Important notes


- Connect ALL +15 lines (pins 1, 2 and 4) and ALL GND lines (22, 23 and 24): the cable wires are 28 AWG.
- Supply: 5–17 V (vehicle 12 V). Never more than 17 V.
- 5 V sensors (19–21): only for the pressure sensors.
- CAN H / CAN L: twisted together up to the ECU.
- Pin 7 (+58): with the lights on, the screen brightness drops to 60 %.
- SSR: max. 400 mA each. For larger loads use a relay. "SSRx to GND" goes to a vehicle ground.
- Do not connect or disconnect the cables while the gauge is powered.

SWAP-CAN VOODOO T5 · CABLES

swap-parts.es

Flat cables with female connector. Wire no. 1 (red) goes to pin 1, marked with ▶ on the connector; the remaining wires follow in order (2, 3, 4…). Approximate length: ±15 cm. 28 AWG wires.

24-wire cable (main connector)

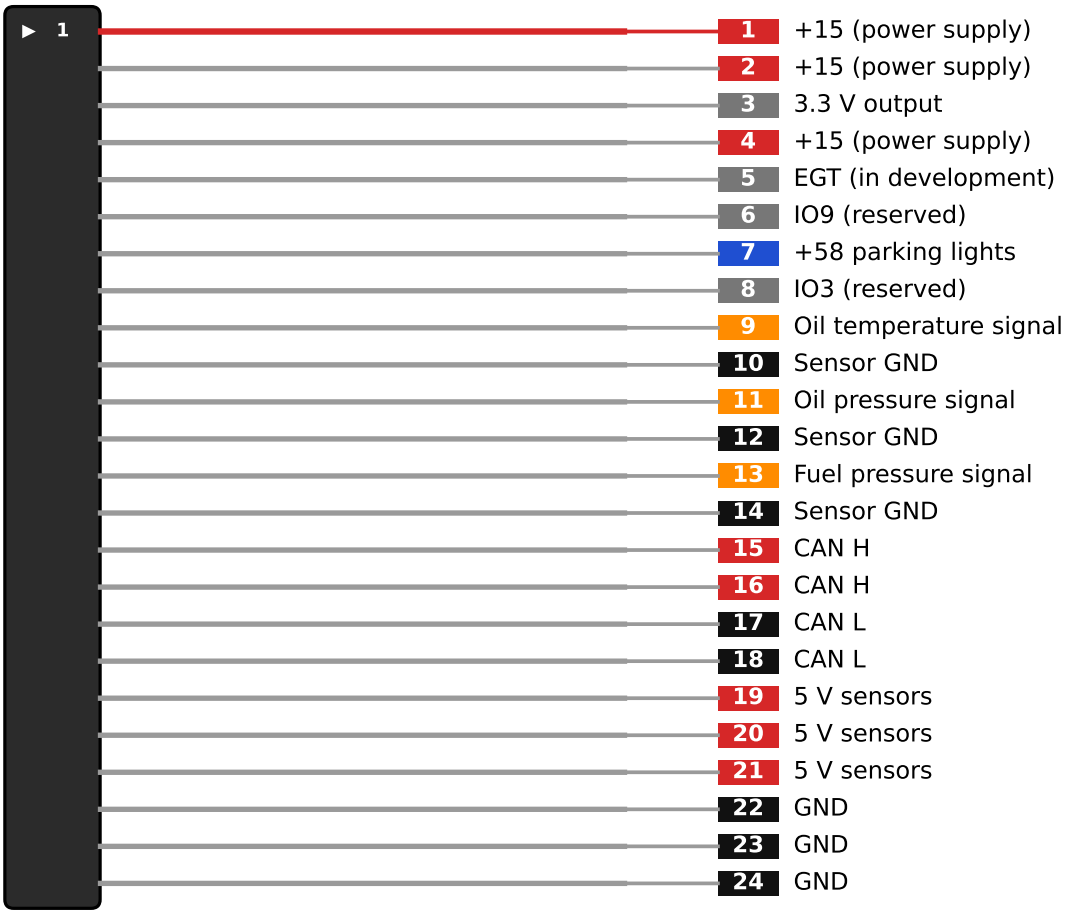

▶ = pin 1

10-wire cable (SSR connector)



▶ = pin 1

Tip: before cutting or splicing, label each wire with its number and function.