

USER MANUAL

zooZ

ON / OFF TOGGLE SWITCH VER. 2.0 ZEN23

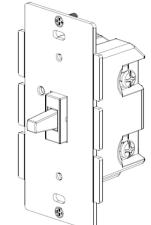

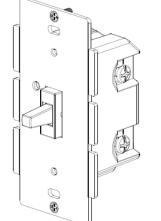





Z-WAVE CONTROL



ADD DEVICE to your hub Initiate inclusion (pairing) in the app (or web interface).

Finalize inclusion at the swith. TOGGLE UP 3 TIMES VERY QUICKLY

A new on/off switch will show up on your hub's device list. Need a step-by-step guide for your hub? Get in touch: ask@getzooz.com

TROUBLESHOOTING

The switch won't add to your system?

- 1. Initiate **EXCLUSION** and toggle the switch down 3 times quickly
- 2. Toggle the switch up **6-7 times** very quickly when adding it
- 3. Bring the gateway controller (hub) **closer** to the switch, it may be out of

FEATURES

- ▶ Manual or remote on/off control from your mobile device or computer (when included to a Z-Wave gateway
- ▶ Direct 3-way Solution works with regular 3-way switches (neutral connection required)
- ▶ 500 chip for faster and safer wireless communication
- ▶ Works with LED, CFL, and incandescent bulbs
- ▶ Remembers and restores on/off status after power failure
- ▶ Supported by most Z-Wave controllers ▶ Can be used in rules and scenes with
- other Z-Wave devices for advanced home automation
- ▶ Classic toggle design ▶ Built-in Z-Wave signal repeater

WIRING: READ IT!

- 1. CHECK THE LOAD: lights only (960W for incandescent, 150W for LED's/CFL's). DON'T CONNECT THIS SWITCH TO FANS.
- 2. POWER OFF: turn the circuit power off in the breaker panel before you start.
- 3. CHECK THE WIRES: mark load (most often black), line (most often black). neutral (most often white), and ground (most often bare). 14AWG wires only! Don't rely exclusively on your multimeter to identify the wires!

Not sure what you're seeing? We'll help: ask@getzooz.com

4. REMOVE THE OLD SWITCH: disconnect the wires and label them.

5. CONNECT THE Z-WAVE SWITCH:

follow all installation steps carefully. Wire the switch EXACTLY like in the diagram.

ASSOCIATION

Z-Wave network, you are able to turn the device on or off remotely from your mobile device, computer, or Z-Wave remote control.

home automation software capabilities, you may be able to associate your Zooz switch in groups with other Z-Wave devices to schedule scenes and create

up to 5 devices for lifeline communication.

This device will send BASIC REPORT to Group 1 when operated manually.

Please refer to your controller's user guide for advanced programming instructions as they are a little different for each software.

ON / OFF SWITCH ZEN23 WIRING DIAGRAM FOR SINGLE POLE INSTALLATION

TURN THE PAGE FOR 3-WAY DIAGRAMS AND INSTRUCTIONS

LOAD (USUALLY BLACK)

If your Z-Wave hub's interface allows for advanced configuration and parameter adjustment, you will be able to change and save the settings below and customize the switch to serve your needs.

Toggle Control

TECH

@getzooz.co

SUPPORT:

Parameter 1: Choose if you want the to turn the light on by clicking the toggle up or down

Values: 0 - Toggle up turns the light on, toggle down turns the light off (default); 1 – Toggle up turns the light off, toggle down turns the light on Size: 1 byte dec.

This device requires the following

COMMAND CLASS VERSION

COMMAND_CLASS_ZWAVEPLUS_INFO

COMMAND CLASS SWITCH ALL of the network. COMMAND CLASS SWITCH BINARY



This is an UL certified device. UL, just like safety standards.


HOW TO INSTALL THE WIRES

1. UNSCREW: carefully turn the screw counter clockwise to make space for the wire. DO NOT unscrew completely.

2.\\



- 2. PRESS DOWN: once it's loose, press the screw down with your finger so it catches the thread.
- B. INSERT WIRE: make sure the wire is perfectly straight, then insert it to the terminal while holding the screw down. DO NOT wrap wires around the terminal screws!



4. TIGHTEN: turn the screw clockwise to tighten the wire.

DO NOT OVERTIGHTEN!

(*) CAUTION!

This is an electrical device please use caution when installing and operating the on/off switch. Remote control of appliances may result in unintentional or automated activation of power.

Do not use this Z-Wave device to control electric heaters or other appliances which produce the risk of fire, burns, or electrical shock when unattended.

COMPLETE INSTALLATION

Secure your Z-Wave switch in the box with mounting screws, handling the wires with care.

For multi-gang-box installation, you may need to break the heatsink tabs off with pliers to fit the switch next to the neighboring switches.

Install the wall plate and restore power to the circuit. TEST THE SWITCH

Toggle the switch up for ON and toggle it down for OFF.

If the test fails, please check that:

- power is fully restored to the circuit
- wiring matches the instructions exactly
- ▶ the type of load is approved and within the specs of this switch

AWARNING

- ▶ This product should be installed indoors upon completion of any building renovations
- ▶ Prior to installation, the device should be stored in a dry, dust-and-moldproof place.
- ▶ Do not install the switch in a place with direct sun exposure, high temperature, or humidity.
- ► Keep away from chemicals, water, and dust.
- ▶ Ensure the device is never close to any heat source or open flame to prevent fire.
- ▶ Ensure the device is connected to an electric power source that does not exceed the maximum load power. No part of the device may be replaced

or repaired by the user.

- ▶ Model Number: ZEN23
 - ▶ Z-Wave Signal Frequency: 908.42 MHz
 - ▶ Power: 120 VAC, 60 Hz ▶ Maximum Load: 960W Incandescent.
 - 1800W (15A) Resistive ▶ Range: Up to 100 feet line of sight
 - ▶ Operating Temperature: 32-104° F (0-

SPECIFICATIONS

- ▶ Installation and Use: Indoor only
 - ask@getzooz.com www.getzooz.com

goods, and only for physical goods, purchased from Zooz (the "Physical Goods").

This Limited Warranty covers any defects in material or workmanship under normal User Manual during the Warranty Period. Warranty coverage applies to purchases made from authorized dealers only. See full list of Zooz distributors here: getzooz.com/buy

During the Warranty Period, Zooz will parts of a product that prove defective because of improper material or workmanship, under normal use and

How long does the coverage last?

The Warranty Period for Physical Goods purchased from Zooz is 12 months from the date you purchased this product.

What does this limited warranty not cover?

This Limited Warranty does not cover any problem that is caused by:

- ▶ conditions, malfunctions or damage not resulting from defects in material or workmanship
- ▶ improper handling or installation of the product

The warranty does not cover purchases from unauthorized dealers or secondhand sources. The warranty does not cover return shipping cost for warranty

What do you have to do?

To obtain warranty service, please contact us to determine the problem and offer a quick solution for you: warranty@getzooz.com

This device complies with Part 15 of the FCC Rules. You may also get in touch with the reseller Operation is subject to the following conditions: of the product directly to return or replace 1. This device may not cause harmful interference, the product within 30 days of purchase or 2. This device must accept any interference received,

PUNITIVE, SPECIAL, OR CONSEQUENTIAL DAMAGES, OR

DAMAGES FOR LOSS OF PROFITS, REVENUE, OR USE

INCURRED BY CUSTOMER OR ANY THIRD PARTY, WHE-THER IN

AN ACTION IN CONTRACT, OR OTHERWISE EVEN IF ADVISED OF

THE POSSIBILITY OF SUCH DA-MAGES. ZOOZ'S LIABILITY AND

CUSTOMER'S EXCLUSIVE REMEDY FOR ANY CAUSE OF ACTION

ARISING IN CON-NECTION WITH THIS AGREEMENT OR THE

SALE OR USE OF THE PRODUCTS, WHETHER BASED ON

NEGLIGENCE, STRICT LIABILITY, BREACH OF WARRANTY

BREACH OF AGREEMENT, OR EQUITABLE PRINCIPLES, IS

EXPRESSLY LIMITED TO, AT ZOOZ'S OPTION, REPLACEMENT

OF, OR REPAYMENT OF THE PURCHASE PRICE FOR THAT POR-

TION OF PRODUCTS WITH RESPECT TO WHICH DA-MAGES ARE

CLAIMED, ALL CLAIMS OF ANY KIND ARISING IN CONNECTION

WITH THIS AGREEMENT OR THE SALE OR USE OF PRODUCTS

SHALL BE DEEMED WAIVED UNLESS MADE IN WRITING WITHIN

THIRTY (30) DAYS FROM ZOOZ'S DELIVERY, OR THE DATE FIXED

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO

OR TV INTERFERENCE CAUSED BY UNAUTHORIZED

MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS

COULD VOID THE USER'S AUTHORITY TO OPERATE THE

EQUIPMENT. STORE INDOORS WHEN NOT IN USE. SUITABLE

FOR DRY LOCATIONS ONLY. DO NOT IMMERSE IN WATER. NOT

FOR DELI-VERY IN THE EVENT OF NONDELIVERY.

FOR USE WHERE DIRECTLY EXPOSED TO WATER.

FCC NOTE

including interference that may cause undesired within applicable reseller's returns period. operation. IN NO EVENT SHALL ZOOZ OR ITS SUBSIDIARIES AND This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to AFFILIATES BE LIABLE FOR ANY INDIRECT. INCIDENTAL.

> part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used according to instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in any given installation.

If this equipment causes harmful interference to radio or television reception, the user may try to correct the interference by taking one or more of the following measures:

- Reorient or relocate receiving antenna
- Increase the separation between equipment and receiver - Connect equipment into a separate outlet or circuit
- Consult the dealer or an experienced radio/TV
- technician for additional assistance

respective holders © Zooz 2017

All brand names displayed are trademarks of their

close to the switch if possible

REMOVE THE SWITCH FROM YOUR HUB

1. Bring your Z-Wave gateway (hub)

- 2. Put the Z-Wave hub into exclusion mode (not sure how to do that? ask@getzooz.com)
 - 3. Toggle the switch down 3 times quickly to finalize the process
 - 4. Your hub will confirm exclusion and the device will disappear from your controller's device list

FACTORY RESET

The switch will be reset to factory defaults only by exclusion using a Z-Wave controller. You may use any certified Z-Wave controller to exclude and reset the switch. This device may not be reset manually when the network's primary controller is missing or otherwise inoperable.

NOTE: All previously recorded activity and custom settings will be erased from the device's memory.

Once this switch is added to your

Depending on your Z-Wave gateway's

This on/off switch supports Group 1 with

ADVANCED SETTINGS

COMMAND CLASSES

1. Insert the ground (bare)

(not shown in the diagram)

terminal and load wire to

▲ Load and line CANNOT

be swapped so make sure

(included in the box) from the

bundle of white wires to the

you identified them

3. Run the white jumper

Neutral terminal

Load terminal

correctly!

wire into the Ground termina

2. Insert the line wire to Line

command classes to be supported and recognized by your Z-Wave controller: COMMAND CLASS ASSOCIATION COMMAND_CLASS_ASSOCIATION_GRP_INFO COMMAND CLASS BASIC COMMAND CLASS CONFIGURATION COMMAND CLASS DEVICE RESET LOCALLY COMMAND_CLASS_MANUFACTURER_SPECIFIC COMMAND_CLASS_POWERLEVEL

MAVE! PLUS

This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability



ETL, is a Nationally Recognized Testing Laboratory. The UL mark is proof of product compliance with North American

WARRANTY

This Limited Warranty applies to physical

What does this limited warranty cover?


use according to instructions from the

repair or replace, at no charge, products or recommended maintenance. Zooz does not assume the cost of return shipping for warranty service.

3-WAY DIAGRAM FOR 2-POINT CONTROL OF ZOOZ SWITCHES: OPTION 1

3-WAY DIAGRAM FOR 2-POINT CONTROL OF ZOOZ SWITCHES: OPTION 2

Please follow the instructions from the Wiring section of the manual when completing the installation. If you're not sure about the wiring at any point, please consult a licensed electrician to get them familiarized with Direct 3-Way wiring for electronic switches.

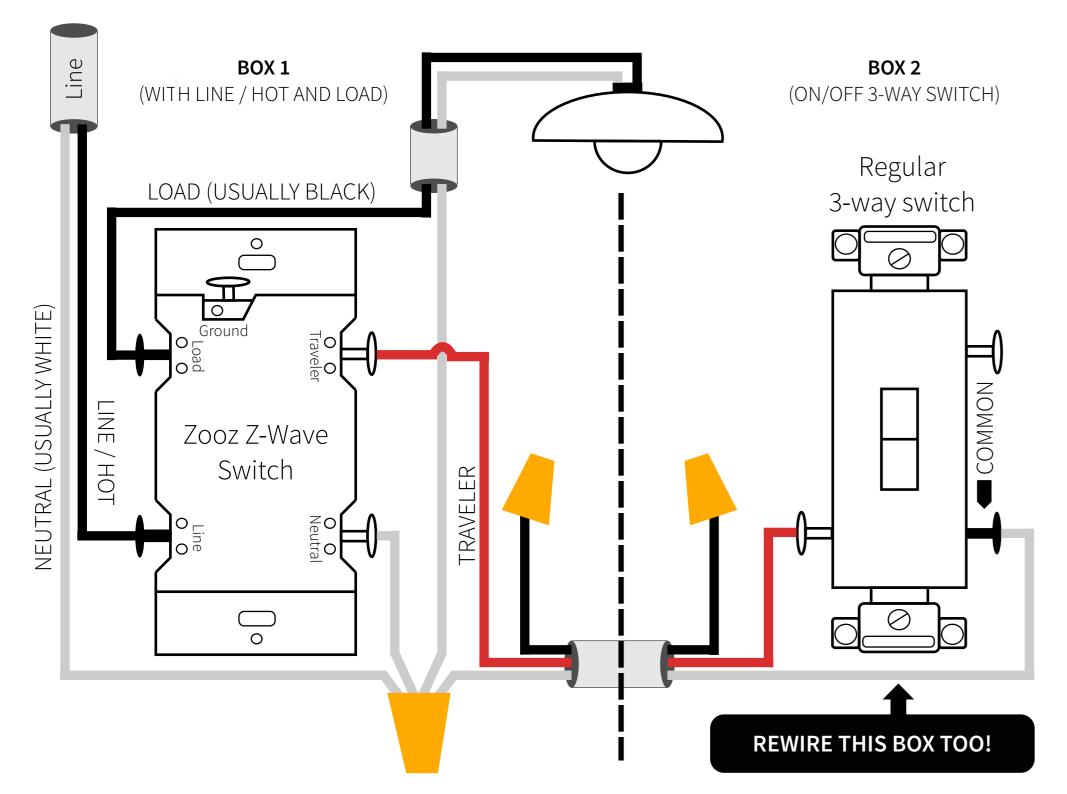

NEED HELP?

If you're having trouble reading the diagrams or don't see your wiring set-up here, get in touch! We have more 3-way diagrams and instructions on how to wire the switches in a **4-way** and other multi-switch configurations.

www.support.getzooz.com ask@getzooz.com



DO NOT connect Zooz Z-Wave switches to a 3-way dimmer. Zooz dimmers and switches can only be wired with mechanical on/off switches in a 3-way setting!

You can also use a simple 2-terminal on/off switch if you don't have a 3-way switch in place. Just connect neutral and traveler to any of the two terminals and it will work fine!

To simplify the diagrams, we did not include connections for the ground wire. Remember that all Zooz switches need to be wired according to the electrical code, with ground wire connected to the ground terminal.

