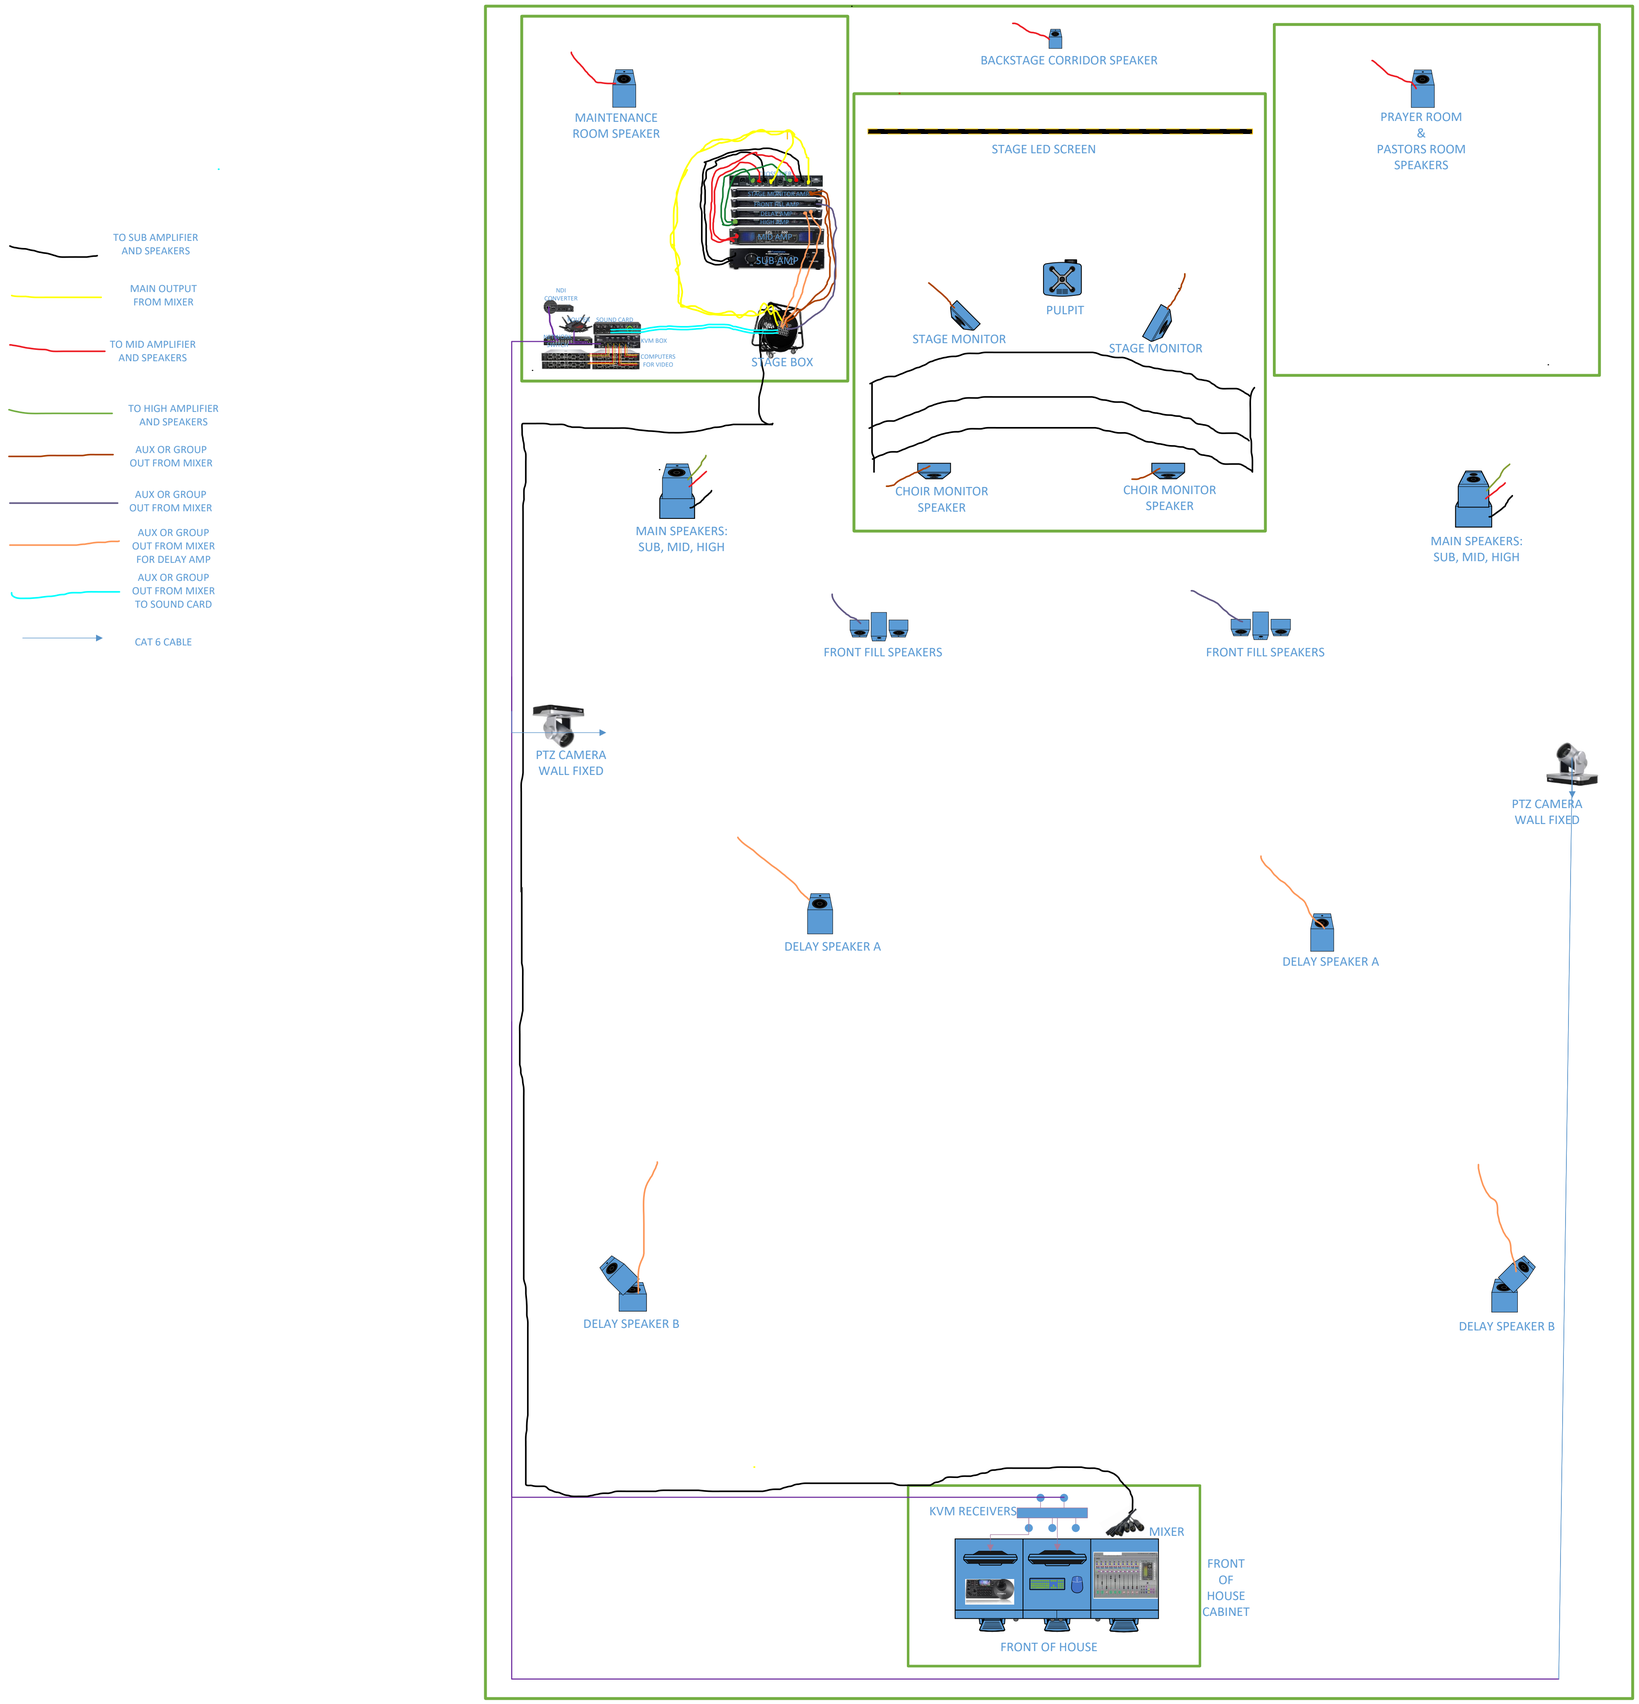
TO SUB AMPLIFIER AND SPEAKERS
MAIN OUTPUT FROM MIXER
TO MID AMPLIFIER AND SPEAKERS
TO HIGH AMPLIFIER AND SPEAKERS
AUX OR GROUP OUT FROM MIXER
AUX OR GROUP OUT FROM MIXER
AUX OR GROUP OUT FROM MIXER FOR DELAY AMP
AUX OR GROUP OUT FROM MIXER TO SOUND CARD
CAT 6 CABLE
MAINTENANCE ROOM SPEAKER
BACKSTAGE CORRIDOR SPEAKER
PRAYER ROOM & PASTORS ROOM SPEAKERS
STAGE LED SCREEN
PULPIT
STAGE MONITOR
STAGE MONITOR
CHOIR MONITOR SPEAKER
CHOIR MONITOR SPEAKER
STAGE BOX
MAIN SPEAKERS: SUB, MID, HIGH
MAIN SPEAKERS: SUB, MID, HIGH
FRONT FILL SPEAKERS
FRONT FILL SPEAKERS
PTZ CAMERA WALL FIXED
PTZ CAMERA WALL FIXED
DELAY SPEAKER A
DELAY SPEAKER A
DELAY SPEAKER B
DELAY SPEAKER B
KVM RECEIVERS
MIXER
FRONT OF HOUSE CABINET
FRONT OF HOUSE