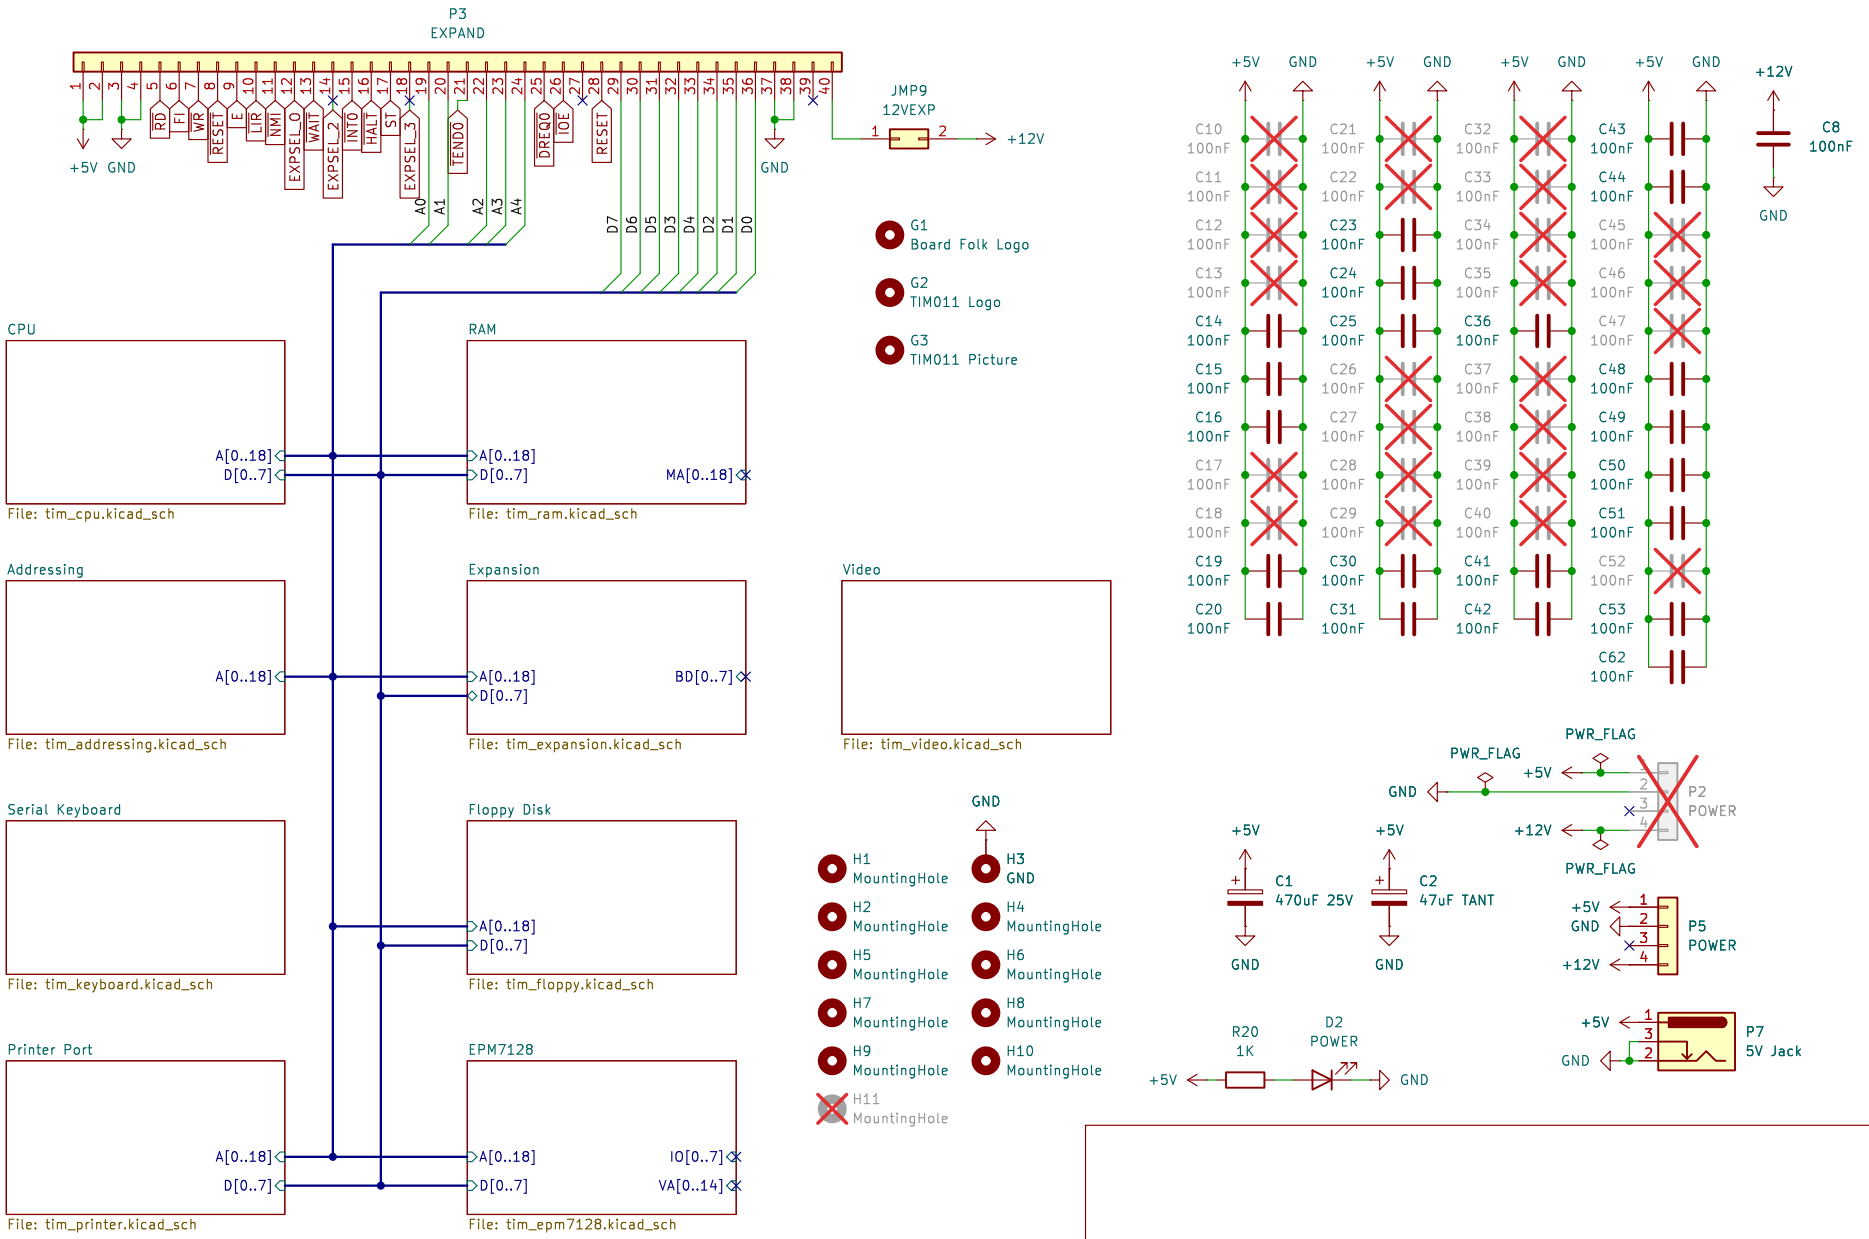

P3
EXPAND
JMP9
12VEXP
+12V
+5V
GND
G1
Board Folk Logo
G2
TIM011 Logo
G3
TIM011 Picture
CPU
File: tim_cpu.kicad_sch
RAM
File: tim_ram.kicad_sch
Addressing
File: tim_addressing.kicad_sch
Expansion
File: tim_expansion.kicad_sch
Video
File: tim_video.kicad_sch
Serial Keyboard
File: tim_keyboard.kicad_sch
Floppy Disk
File: tim_floppy.kicad_sch
Printer Port
File: tim_printer.kicad_sch
EPM7128
File: tim_epm7128.kicad_sch
H1 MountingHole
H2 MountingHole
H3 GND
H4 MountingHole
H5 MountingHole
H6 MountingHole
H7 MountingHole
H8 MountingHole
H9 MountingHole
H10 MountingHole
H11 MountingHole
C1 470uF 25V
C2 47uF TANT
PWR_FLAG
P2 POWER
P5 POWER
P7 5V Jack
R20 1K
D2 POWER
Sheet: /
File: TIM-011B2.kicad_sch
Title:
Size: A4
Date:
Rev:
KiCad E.D.A. 9.0.9
Id: 1/10

RESET

+5V
R8
1M
D1
1N4148
C4
10uF
GND
C3
100nF
GND
GND
RESET
T1
RESET
T2
U14B
74LS240
C7
100nF
GND
U14H
74LS240
U14D
74LS240
RESET
RESET

U14G
74LS240
+5V
R18
470R
CPLDCLK
CLK
+5V
X1
12.288MHz
U44F
74LS240
U44D
74LS240
+5V
R12
470R
CLK
CX3
330pF
GND
GND

+5V
RP2
4K7
WAIT
BUSACK
BUSREQ
RESET
NMI
INT0

U17
HD64180
GND
Vss
XTAL
EXTAL
WAIT
BUSACK
BUSREQ
RESET
NMI
INT0
INT1
INT2
ST
A0
A1
A2
A3
A4
A5
A6
A7
A8
A9
A10
A11
A12
A13
A14
A15
A16
A17
A18/TOUT
Vcc
A[0..18]
Ø
RD
WR
LIR
E
ME
IOE
REF
HALT
TEND1
DREQ1
CKS
RXS/CTS1
TXS
CKA1/TEND0
RXA1
TXA1
CKA0/DREQ0
RXA0
TXA0
DCD0
CTS0
RTS0
D7
D6
D5
D4
D3
D2
D1
D0
Vss
GND
+5V
R4
4K7
DREQ0
D[0..7]

ORIGINAL ROM

+5V
U160
27128
A[0..18]
A0
A1
A2
A3
A4
A5
A6
A7
A8
A9
A10
A11
A12
A13
A18
A15
A14
VCC
GND
ME
D0
D1
D2
D3
D4
D5
D6
D7
D[0..7]
GND
+5V
JMP70
ROMA15
+5V
JMP60
ROMA14


ROM


+5V
U16
39SF040
A[0..18]
VCC
PGM
CE
OE
GND
ME
WR
D[0..7]
GND
+5V
JMP15
ROM WR
+5V
JMP13
ROMA18
GND
+5V
JMP14
ROMA17


+5V
R21
10K
SD_CS
CKS
TXS
RXS/CTS1
P11
MicroSD
+5V
GND


U14I
74LS240
+5V
VCC
GND
GND


Sheet: /CPU/
File: tim_cpu.kicad_sch
Title:
Size: A3
Date:
Rev:
KiCad E.D.A. 9.0.9
Id: 2/10

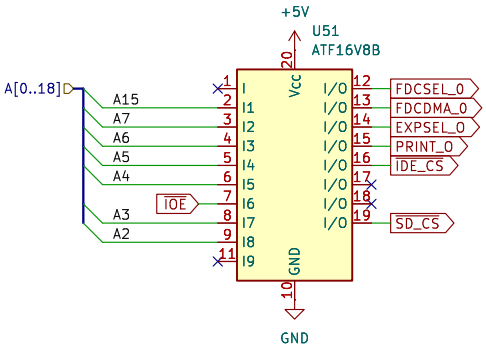

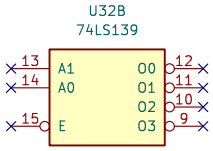


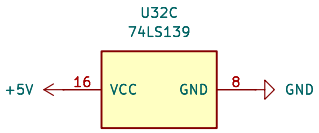


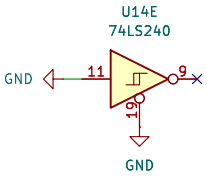





Sheet: /Addressing/	
File: tim_addressing.kicad_sch	
Title:	
Size: A4	Date:
KiCad E.D.A. 9.0.9	Rev: Id: 3/10

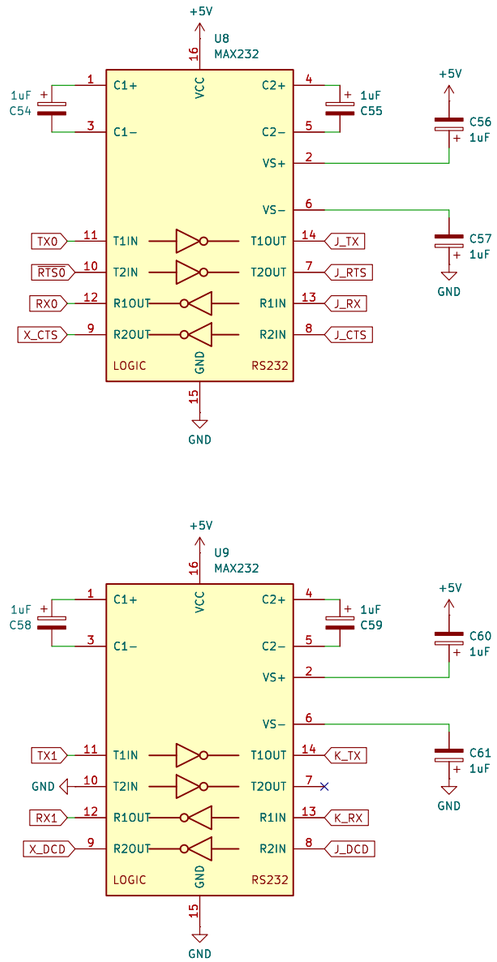


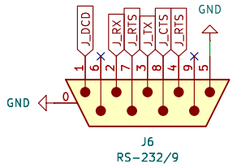


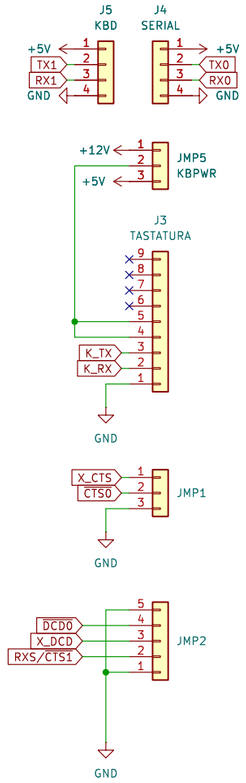



Sheet: /Serial Keyboard/		
File: tim_keyboard.kicad_sch		
Title:		
Size: A3	Date:	**Rev:**
KiCad E.D.A. 9.0.9		Id: 4/10

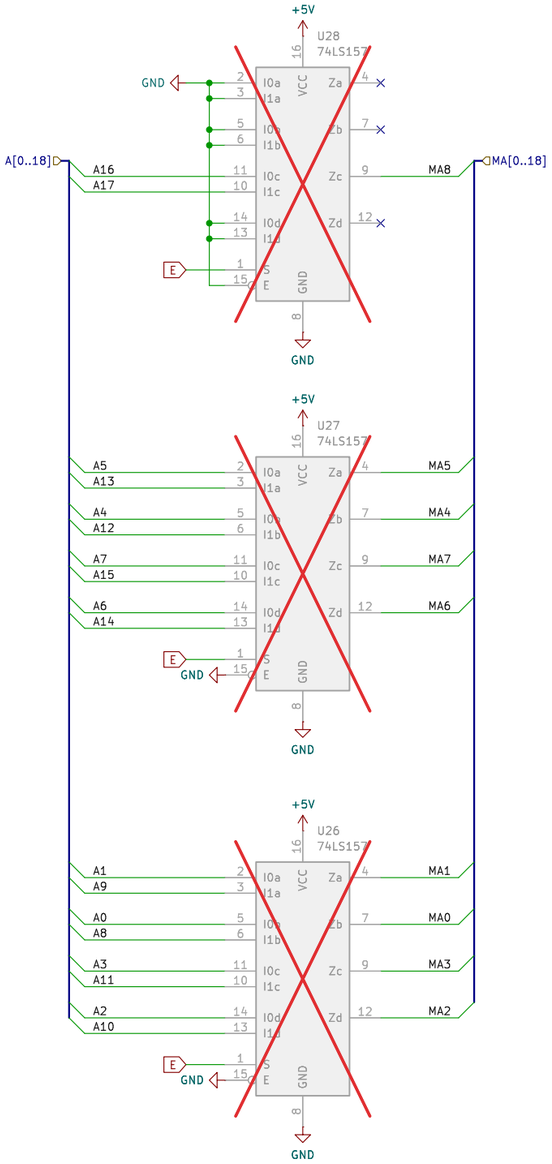


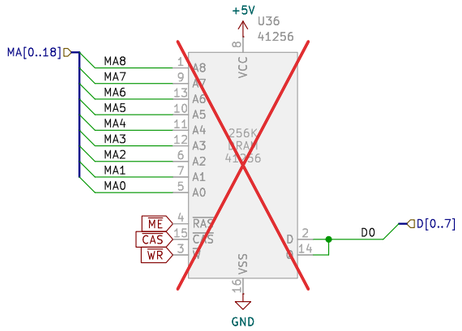


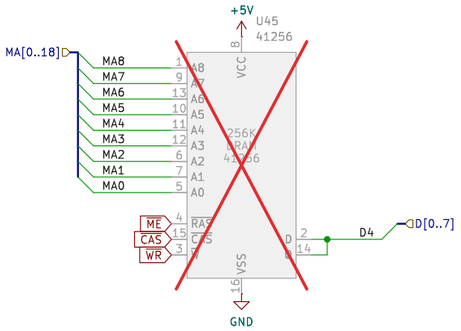


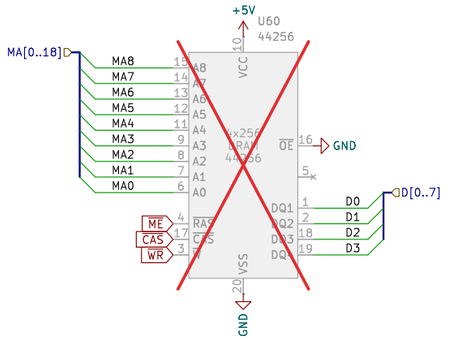


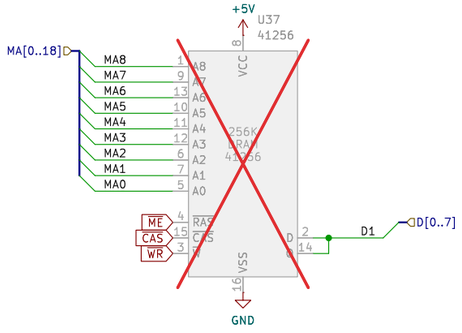


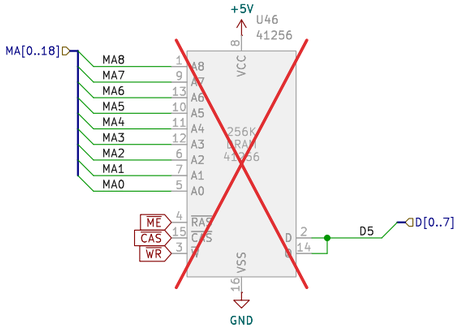


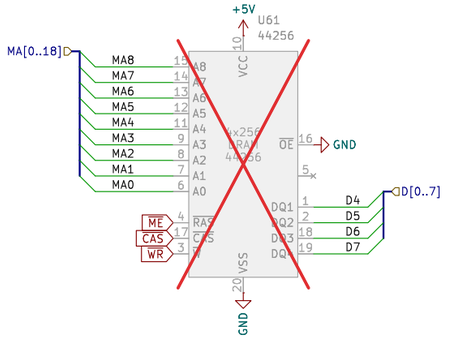

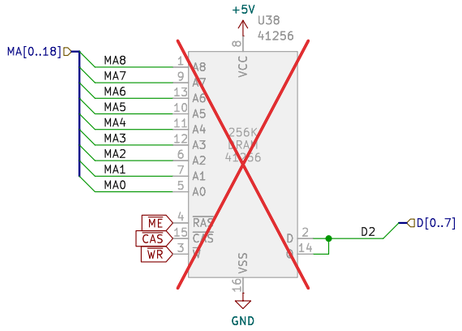

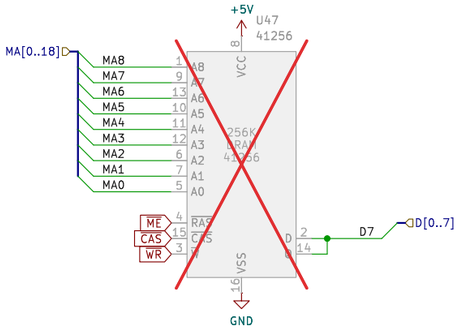

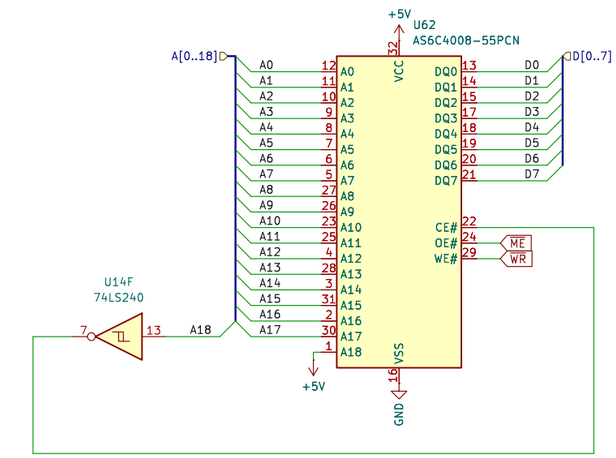




Sheet: /RAM/
File: tim_ram.kicad_sch

Title:


Size: A3	Date:	**Rev:**
KiCad E.D.A. 9.0.9		Id: 5/10

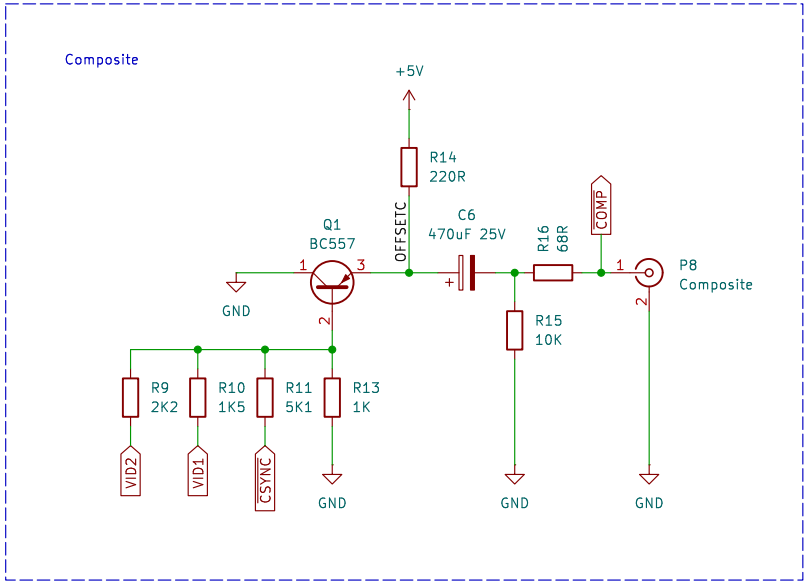



Sheet: /Video/
File: tim_video.kicad_sch

Title:

Size: A4 | Date: | **Rev:**
KiCad E.D.A. 9.0.9 | Id: 6/10

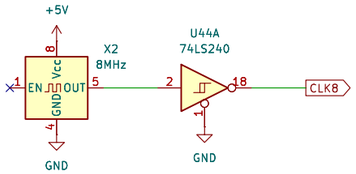

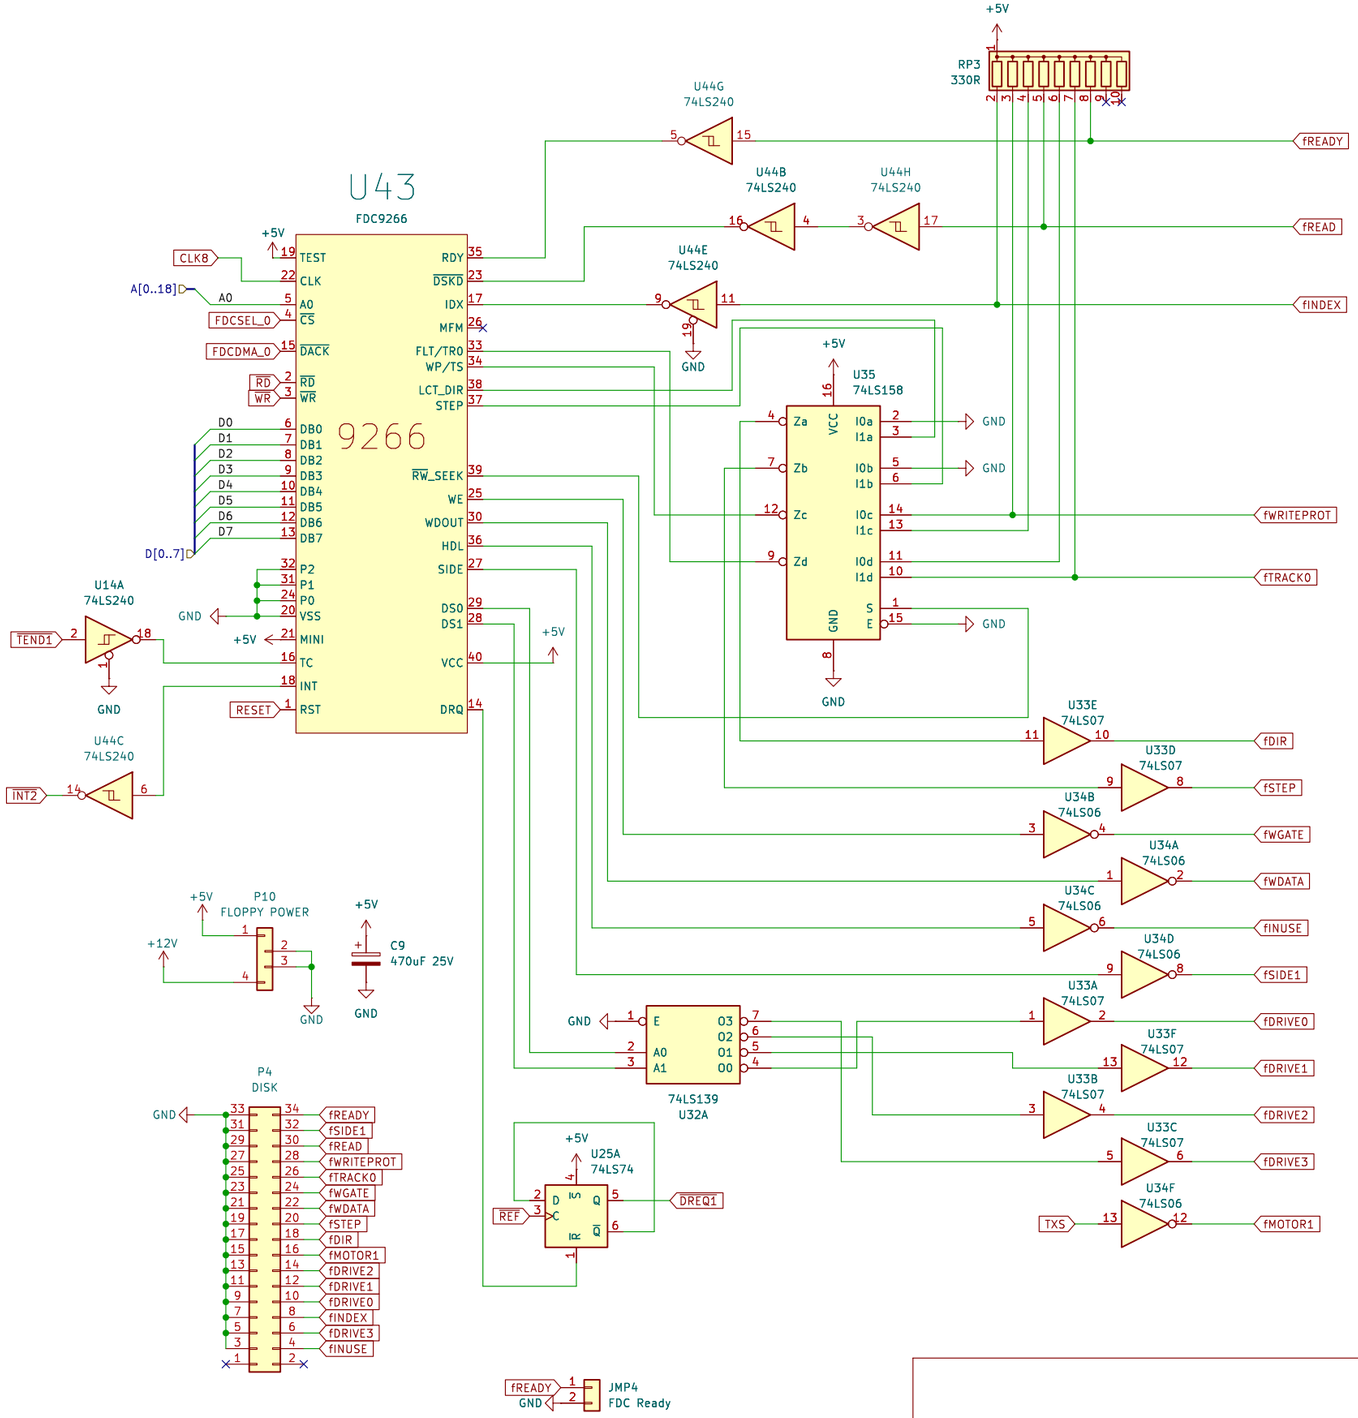





Sheet: /Floppy Disk/
File: tim_floppy.kicad_sch


Title:


Size: A3	Date:	**Rev:**
KiCad E.D.A. 9.0.9		Id: 7/10

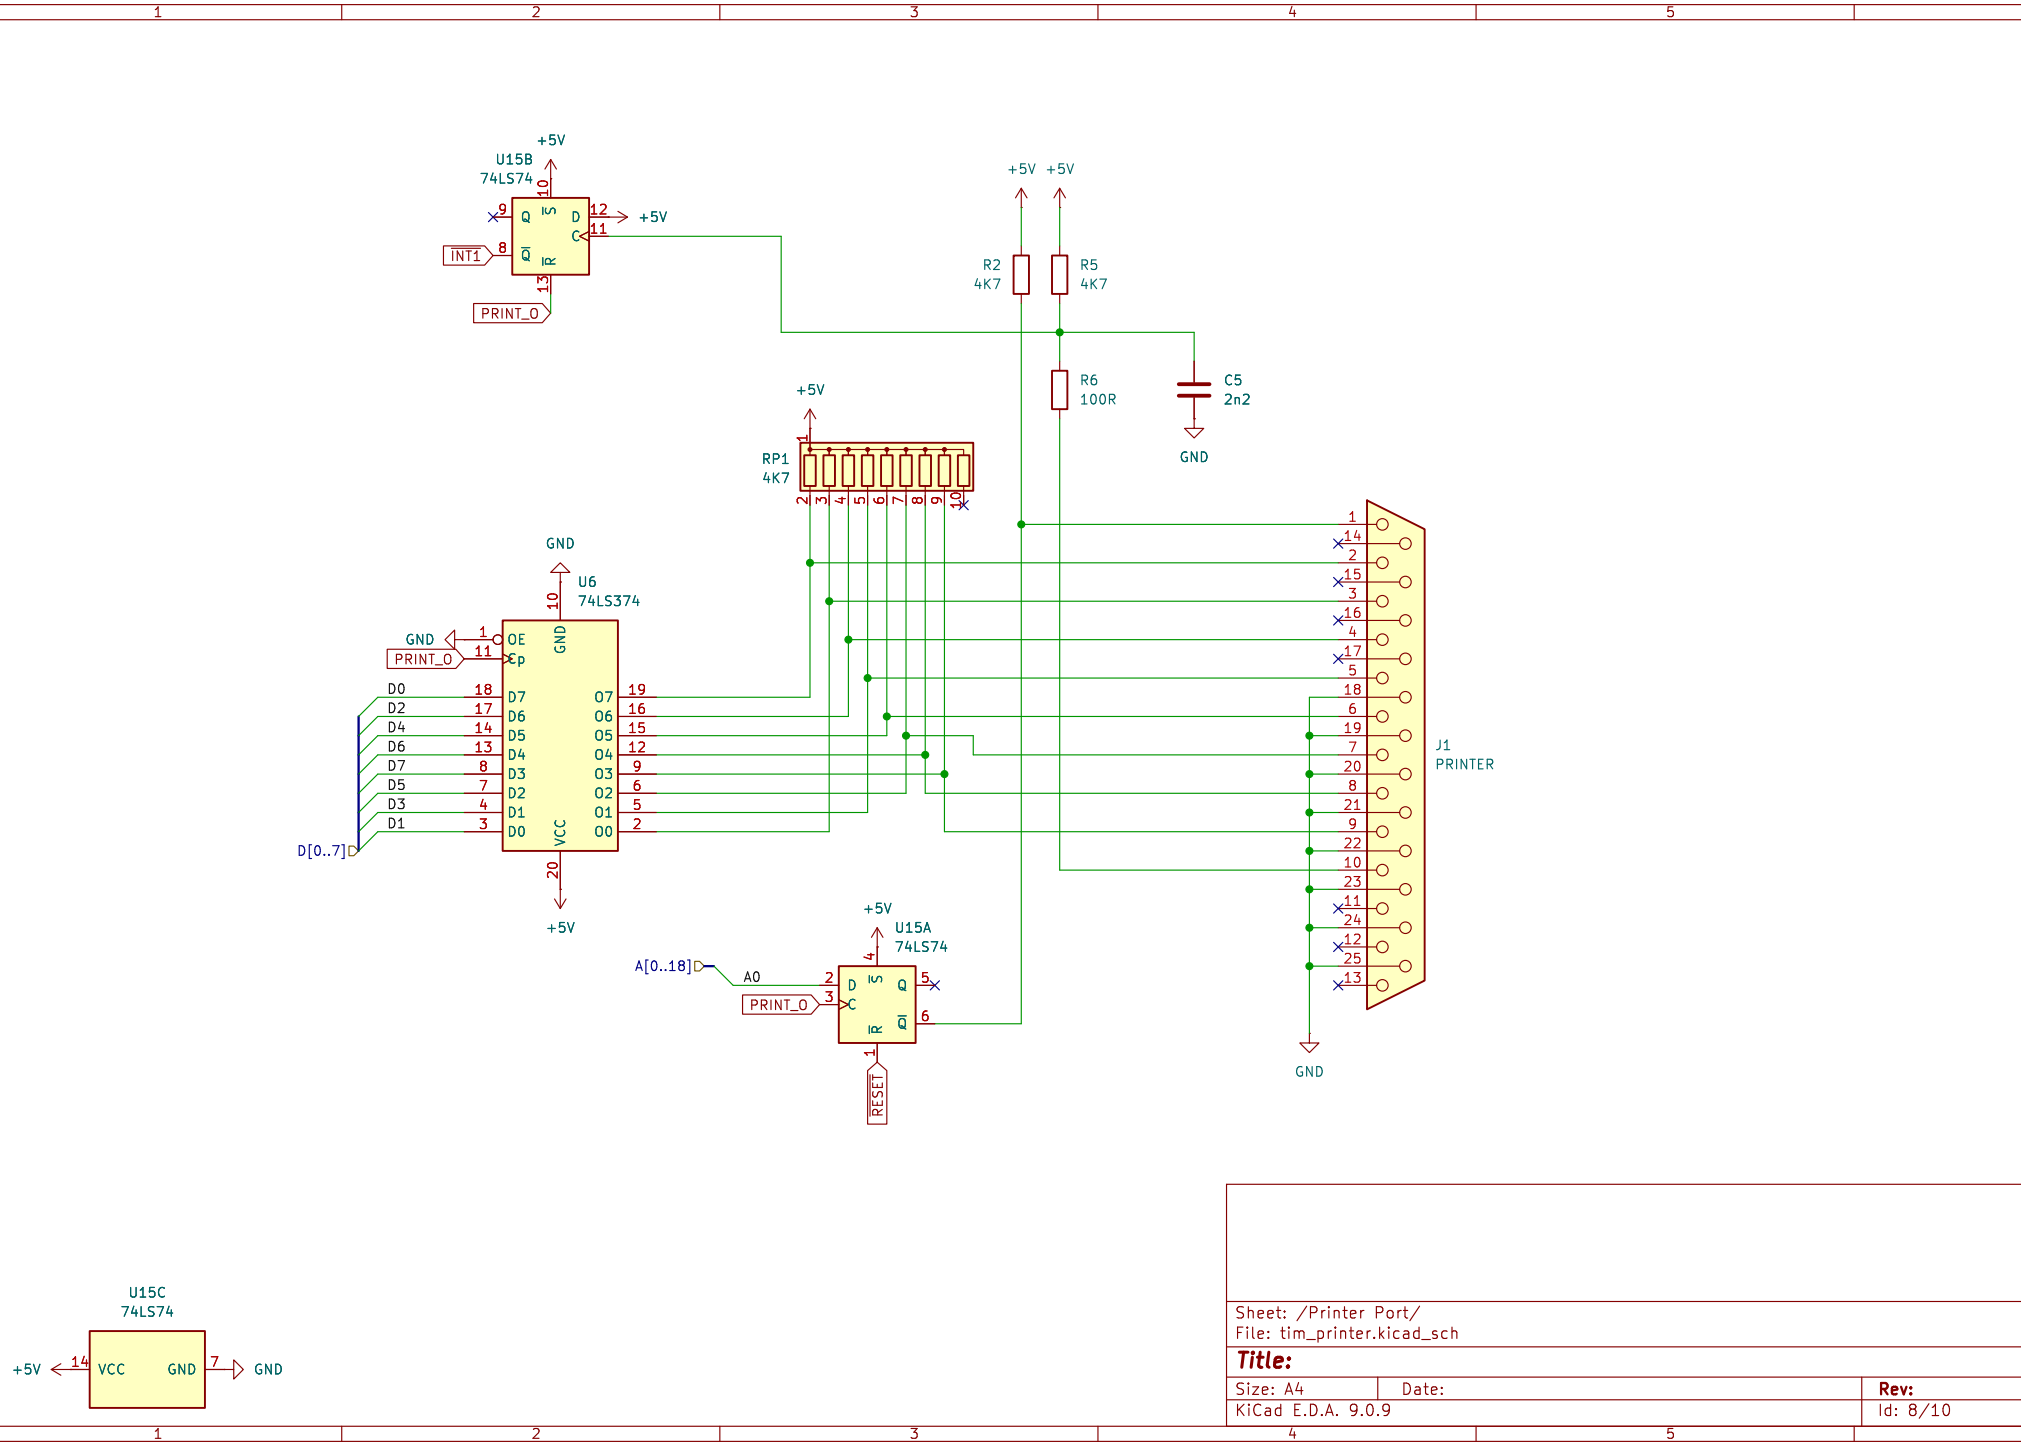

Sheet: /Printer Port/		
File: tim_printer.kicad_sch		
Title:		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 9.0.9		Id: 8/10

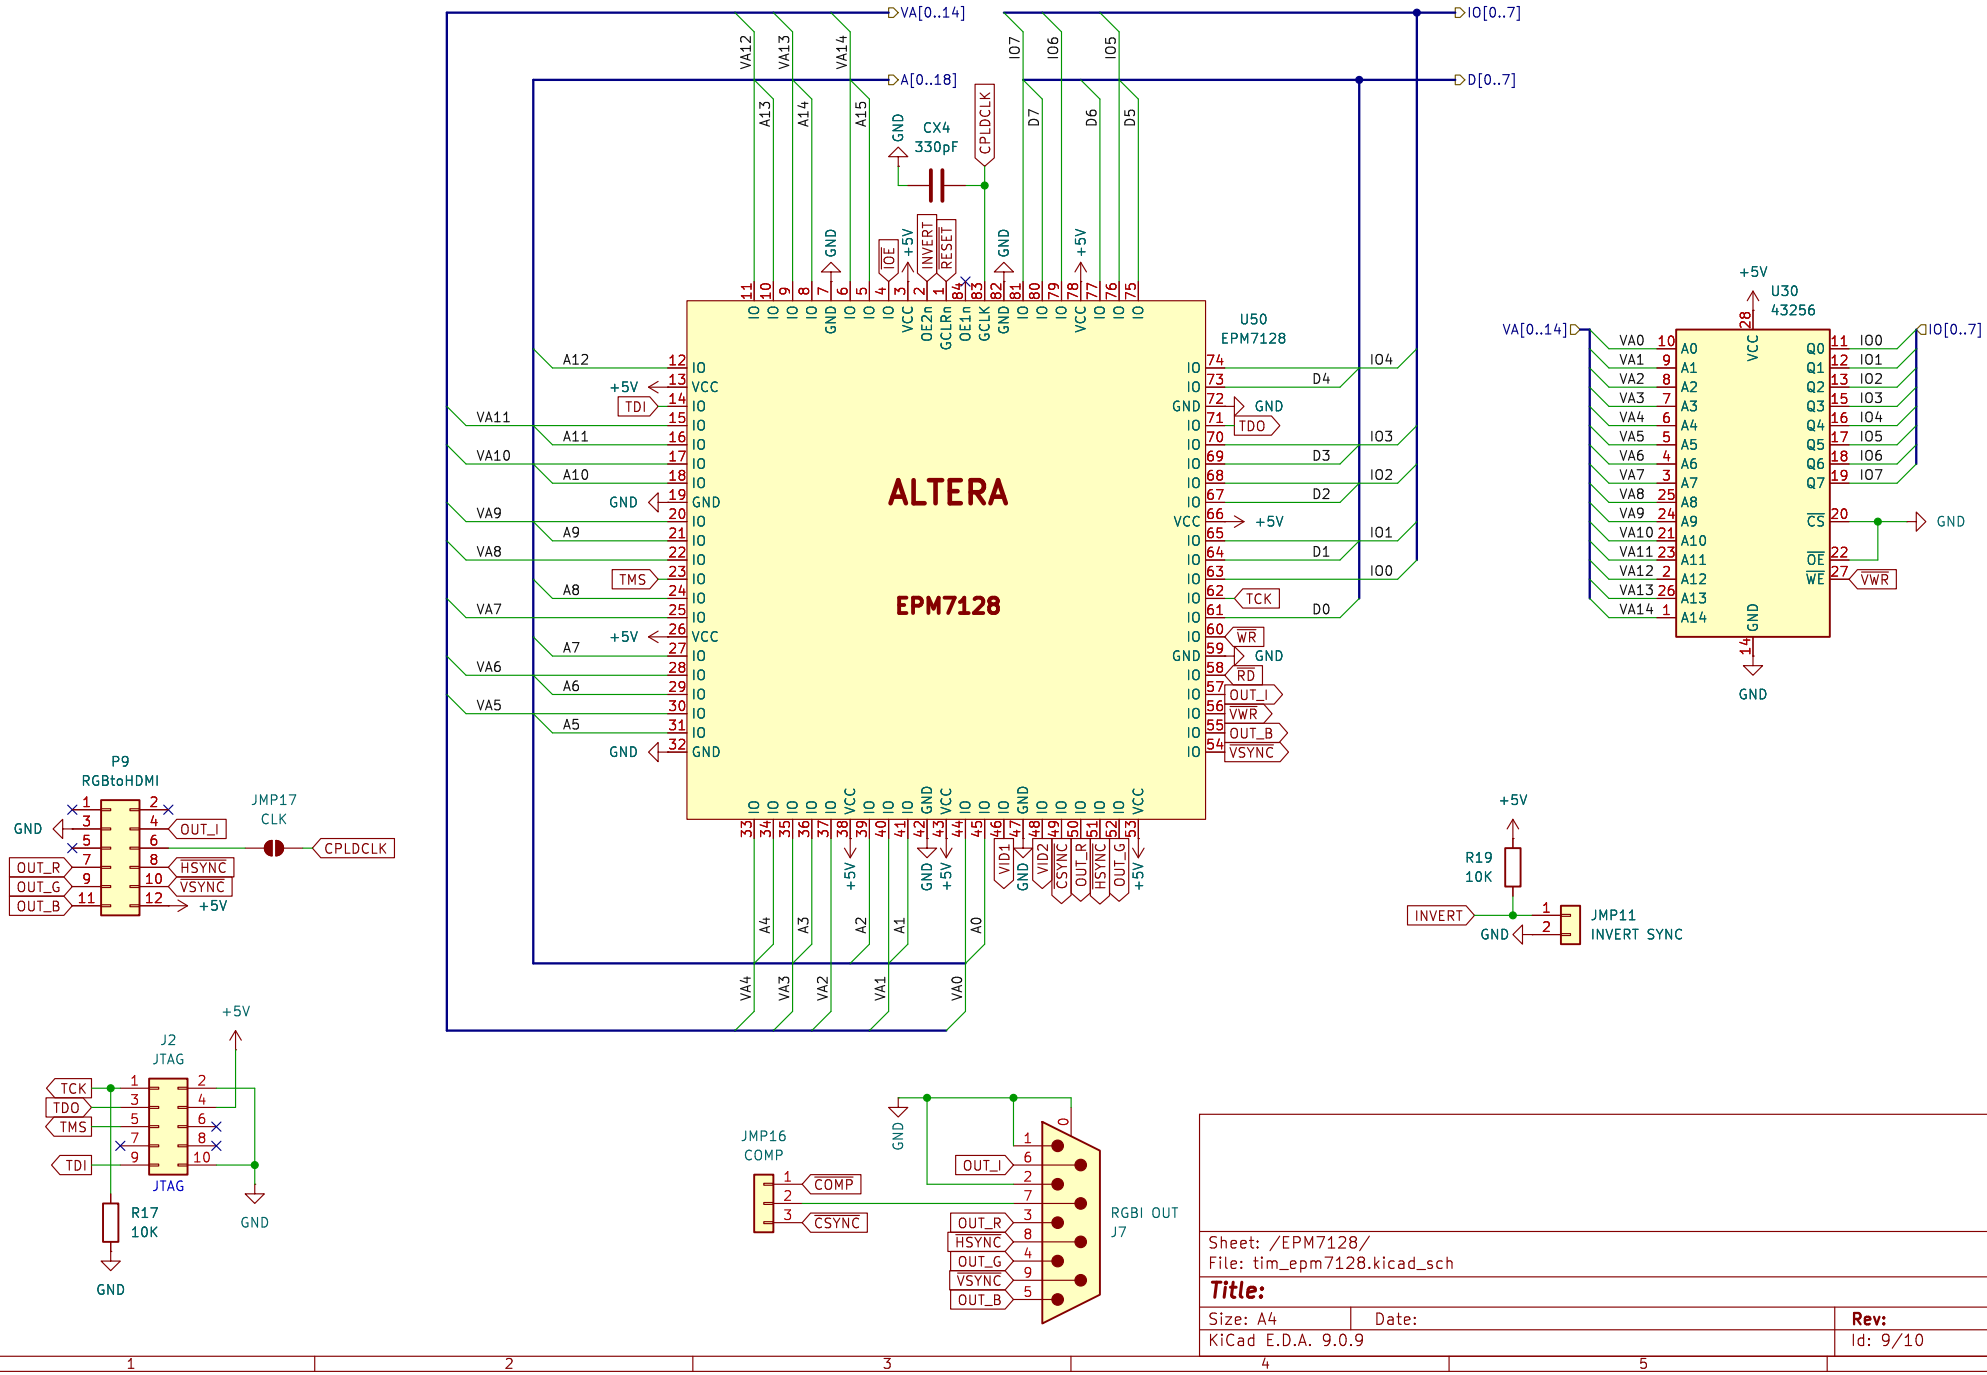
VA[0..14]
A[0..18]
IO[0..7]
D[0..7]
CX4
330pF
CPLDCLK
U50
EPM7128
ALTERA
EPM7128
U30
43256
P9
RGBtoHDMI
JMP17
CLK
J2
JTAG
R17
10K
R19
10K
JMP11
INVERT SYNC
JMP16
COMP
RGBI OUT
J7
Sheet: /EPM7128/
File: tim_epm7128.kicad_sch
Title:
Size: A4
Date:
Rev:
KiCad E.D.A. 9.0.9
Id: 9/10

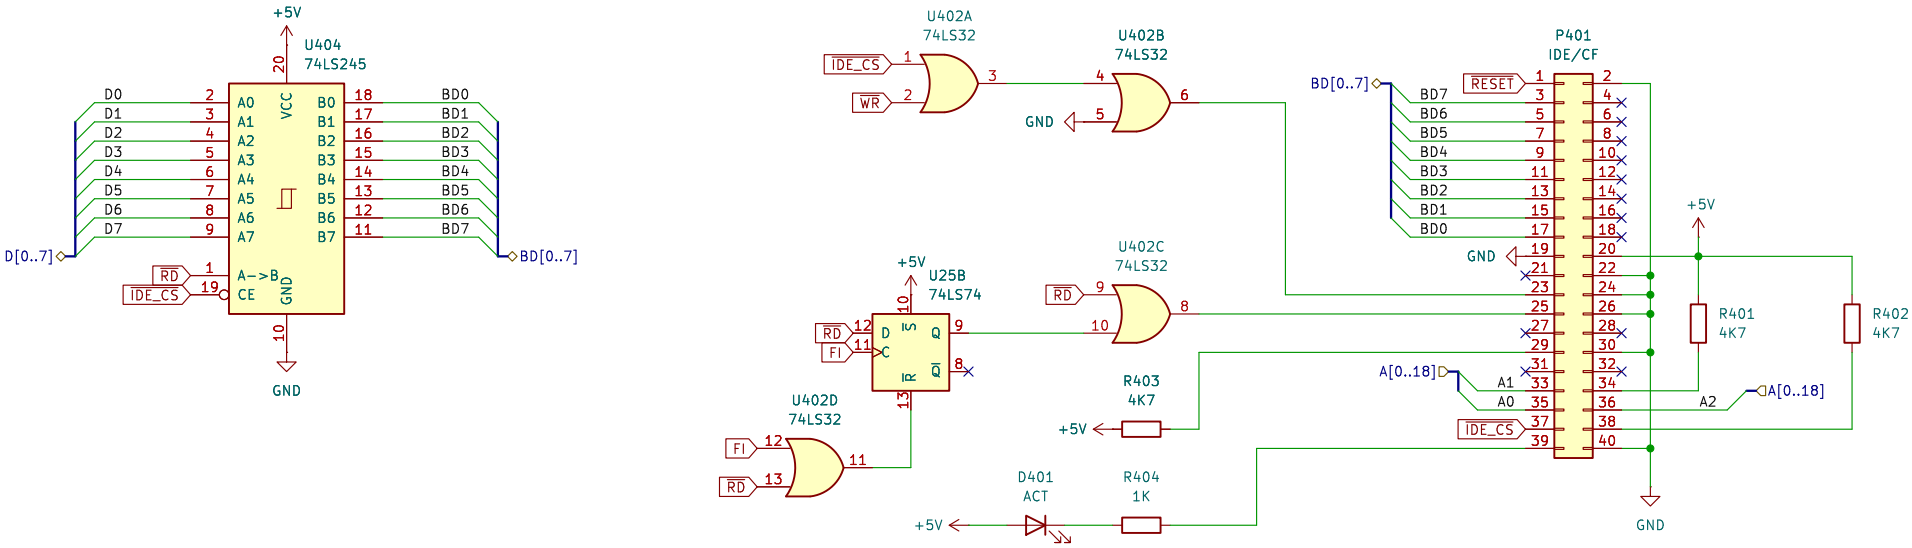

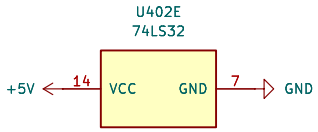

Sheet: /Expansion/
File: tim_expansion.kicad_sch

Title:

Size: A4	Date:	**Rev:**
KiCad E.D.A. 9.0.9		Id: 10/10