
PaperJet control map

Every control on the hand control panel and the machine.
Drawn from the manual, Fig. 64, and the real panel.



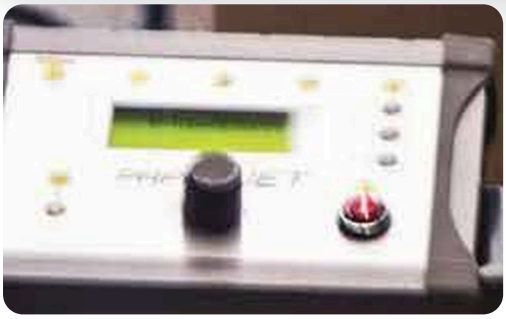

Real panel, Sprick photo.

MODE LIGHTS	Five yellow lights along the top. Turn the knob to move between them.
1 LENGTH	One pad of a set length, every press.
2 REMOVAL	A new pad as soon as the last is taken. Light blinks while on.
3 MANUAL	Paper runs while you hold. Let go to cut.
4 SERIES	Up to three lengths, each with a count, from one press.
5 PRESET	Keys 1, 2, 3 down the right each store a length and count.
6 DISPLAY	Mode, settings and messages. **Service** means a service is due.
7 ESC	Cancel in any mode. Ends Removal and Series.
8 KNOB	Turn and push. Chooses modes, sets values.
9 HAND BUTTON	Starts production. Same as the foot switch.

Setting a value with the knob

1. **Turn** to choose the mode. Its light comes on.
2. **Push** the knob. The value blinks.
3. **Turn**: slow for ones, faster for tens, fast for hundreds.
4. **Push** to confirm. The next value blinks.
5. Last value confirmed: ready to run.

Hold the knob 1 second after a Manual pad to copy its length into Length or Removal mode.

On the machine

ROCKER SWITCH	On and off, next to the power socket.
MANUAL FEED	Slow feed for loading paper. Stops when released.
FOOT SWITCH	Press to start, release to stop. Same as the hand button.
EMERGENCY STOP	Red button. Stops everything. Pull out to reset.

Messages

PAPER BUILD-UP	Clear the paper inside.
REMOVE PAPER	Clear the cutter, confirm with the knob.
POWER FAULT	Off for 10 seconds, back on.

Source: Sprick PaperJet operating manual, version 3.4

Supplied by Cotswold Packaging Group. Jo Lavene, 07930 404517