

BTECH UV-PRO Getting Started

Set up a BTECH UV-PRO for Heights 6 using the phone app, then check that the radio works on its own.

△ CAUTION — PREVENT HARM

Draft for training review. A radio lead must check the equipment authorization, operating settings, and completed setup before duty. This guide programs only Heights 6.

1. PREPARE THE RADIO AND PHONE

- ☐ UV-PRO, correct antenna, battery, and supplied charging equipment
- ☐ Compatible Android phone or iPhone with Bluetooth
- ☐ BTECH UV Programmer app from the manufacturer's official app links
- ☐ Your assigned callsign and the radio lead's current channel plan

- 1 Fit the battery and antenna** following the supplied instructions. Check for damage. Keep your fingers away from the side **PTT** (push-to-talk) button.
- 2 Charge the battery.** The removable battery charges directly by USB-C. Use the supplied equipment and follow its charging instructions.
- 3 Power on.** Turn the top **Power/Volume** knob clockwise past the click. Continue clockwise to increase volume. Turning counterclockwise past the click powers off.
- 4 Install BTECH UV Programmer.** BTECH's manual identifies this app for both Google Play and the Apple App Store. Enable Bluetooth on your phone.

✦ LOCAL INFORMATION — VERIFY BEFORE APPROVAL

Heights 6 — confirmed by the project owner, October 9, 2026.

Field	Enter
Title	Heights 6
RX Freq — listen	462.38750 MHz
TX Freq — transmit	467.38750 MHz
RX CTCSS/DCS	DCS 331N
TX CTCSS/DCS	DCS 331N

SOURCES

Sources: BTECH manual, pp. 4-5, 11-15; product page; owner confirmation. Links: page 6.

BTECH UV-PRO Getting Started — continued

Connect to your own radio, then choose an unused memory. The captures show Android with radio firmware 0.9.3; iPhone and newer layouts may differ.

2. CONNECT AND OPEN THE CHANNEL EDITOR

- 1 Put the radio in pairing mode if needed.** In the radio menu, use **Connections → Pairing**. Keep the radio powered on and near the phone.
- 2 Find the radio in the app.** The manual's connection screen lists **Bindable Device**; select your UV-PRO. If several radios are nearby, confirm which one is yours with the lead.
- 3 Check the connection.** The app should show the radio's operating screen and channel list. If it does not, open **Connection management** in device settings and check the selected device. Do not start editing a disconnected or unidentified radio.
- 4 Open the channel panel.** In the supplied Android layout, tap the **three-line menu at the upper left** of the main map screen. The panel contains a numbered channel grid, volume slider, and TX Power / Work Mode controls.
- 5 Choose an unused tile.** Use the lead's assigned channel group and an empty numbered memory. The example uses tile 1, but do not overwrite it if your radio already uses it.
- 6 Press and hold the tile.** In the menu that appears, tap **Edit channel**. The other choices shown are **Bind network channel** and **Delete**; neither is needed for this setup.

TWO MENUS WITH DIFFERENT JOBS

Where to open it	What it does
Three-line menu	Shows the channel tiles. Press and hold a tile to edit it.
Gear in the channel panel	Opens device settings, including Connection management and Channel & Groups.
Three-dot menu → Device settings	Another device-settings route shown in the captures.
Global settings	Contains phone/app options. It is not the channel-tile editor used here.

△ CAUTION — PREVENT HARM

Caution: preserve existing settings. Do not use factory reset, delete channels, import an unknown list, or update firmware while following this guide. Older manual pictures place the three-line menu at the lower left; use the control's symbol to recognize it.

SOURCES

Sources: BTECH UV-PRO Manual, pp. 11-15 and 22; supplied Android captures 2, 3, 5, and 9. The project owner confirmed press-and-hold opens the channel menu.

BTECH UV-PRO Getting Started — continued

Give the memory a recognizable title, then enter the receive and transmit frequencies separately.

3. ENTER THE NAME AND FREQUENCIES

- 1 **Tap Title.** Enter **Heights 6**. The captured example says **LHH FW**; it is not a different frequency assignment.
- 2 **Tap RX Freq.** Choose **FM** if the frequency dialog asks for a mode. Enter **462.38750 MHz**, then confirm the dialog. RX is the frequency your radio listens to.
- 3 **Tap TX Freq.** Use **FM** and enter **467.38750 MHz**, then confirm. TX is the frequency your radio transmits on. Do not reverse RX and TX.

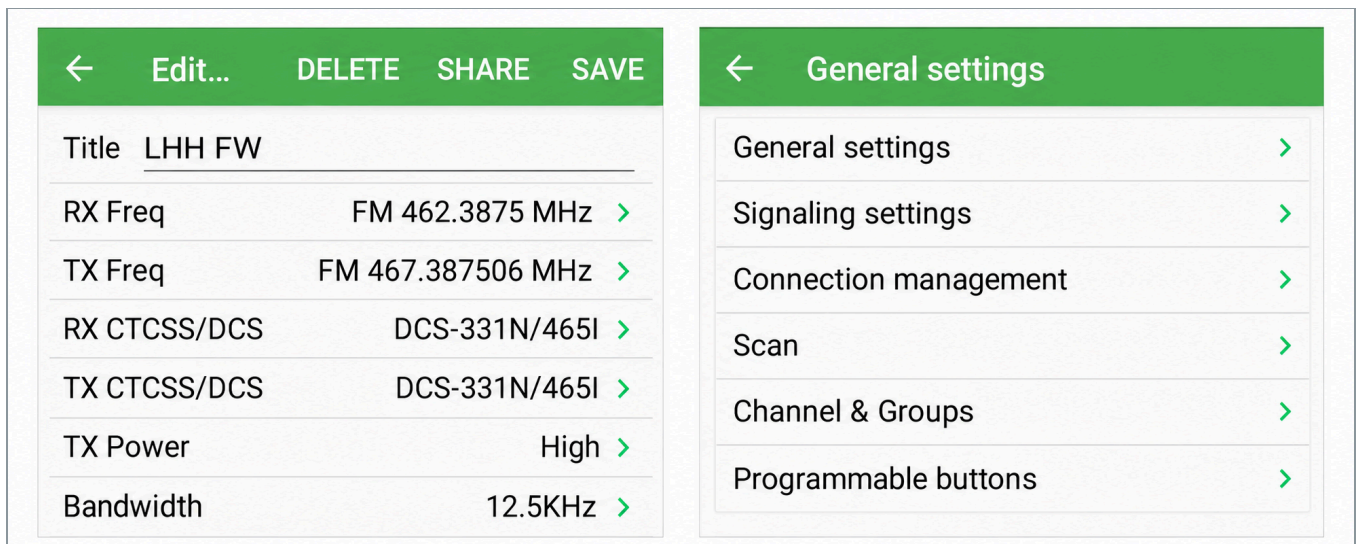


Figure 1. Illustrated screen reference adapted from supplied captures: channel editor on the left, device-settings choices on the right.

Original captures: project owner; illustrated adaptation: OpenAI.

△ CAUTION — PREVENT HARM

Use the channel card, not every example digit. The captured TX field reads **467.387506 MHz**. Enter the confirmed target **467.38750 MHz**. If extra digits return after saving, have the radio lead check the stored value; the captures do not establish why they appear.

Compare: RX starts with **462**, TX with **467**; both have **.38750** and use FM. **462.3875** and **462.38750** are the same frequency. Dropping a final zero is different from adding a nonzero digit.

SOURCES

Sources: project-owner frequency confirmation and supplied channel-edit capture 6. Figure 1 is an illustrated adaptation, not a pixel-identical screenshot crop.

BTECH UV-PRO Getting Started — continued

Set both DCS fields, review the remaining channel options, and save the entry.

4. SET DCS AND SAVE

- 1 **Tap RX CTCSS/DCS.** Choose the DCS entry containing **331N**. Here, **N** means normal polarity. Confirm the selection.
- 2 **Tap TX CTCSS/DCS.** Select the same **331N** entry and confirm. Check it separately; setting RX does not prove TX is correct.
- 3 **Recognize the app label.** The supplied editor displays **DCS-331N/465I** in each field. This is one displayed selection label. Use the entry containing **331N**; do not program an additional code or substitute **331I**.
- 4 **Check bandwidth and power with the lead.** The captured example shows **Bandwidth 12.5KHz** and **TX Power High**. These are captured settings, not independent authorization to use High power. Set the values required by the lead's channel plan.
- 5 **Check the switches below the fields.** Keep **Talk Around** and **Reverse Frequency** off for the RX/TX assignment on page 1. Leave scan, lockout, and other optional settings as directed by the lead.
- 6 **Tap SAVE at the upper right.** Keep the radio connected while saving. Do not tap **SHARE** or **DELETE**. If an error appears or the connection drops, reconnect and verify the entry before proceeding.

△ CAUTION — PREVENT HARM

Caution: Talk Around changes repeater operation. BTECH's manual says Talk Around makes TX and RX the same frequency. Heights 6 uses separate frequencies; do not enable this option for the setup shown here.

IF EDITING IS REFUSED

Device settings → **General settings** includes **Lock channel data**. Ask the lead whether this is preventing edits before changing a lock. Do not solve a locked channel by factory-resetting the radio.

SAVE CHECKPOINT

- ☐ Both DCS fields contain **331N**.
- ☐ Power and bandwidth match the lead's plan.
- ☐ Talk Around and Reverse Frequency are off.
- ☐ SAVE completed without a reported connection or save error.

SOURCES

Sources: supplied captures 6 and 7; BTECH UV-PRO Manual, p. 31 (TX/RX subtone and Talk Around). Frequencies and normal-polarity DCS confirmed by the project owner.

BTECH UV-PRO Getting Started — continued

Reopen the memory, select it on the radio, and verify it without relying on the phone.

5. VERIFY WHAT WAS STORED

- 1 Reopen the saved entry.** Return to the channel grid, press and hold the memory, and choose **Edit channel**. Compare both frequencies and both DCS fields with the card on page 1.
- 2 Select the channel.** Return to the grid and tap its tile. The supplied panel highlights the selected tile and shows its name and frequency at the bottom. Check the radio's display too.
- 3 Use Single CH for this first check.** In the panel's **Work Mode** row, select **Single CH**. Do not use Scan or Dual CH while learning which channel is active. Check Talk Around remains off.
- 4 Check the radio itself.** Disconnect the app, power the radio off and back on, and select the memory again. Hold * to switch between VFO/frequency and memory/channel mode; use **up/down** to select the saved memory.
- 5 Have the lead verify stored settings.** Reopening the phone editor alone does not prove a cached entry was written to the radio. The lead should inspect the radio's channel-list **Edit** view or read its stored configuration after reconnecting.

VERIFY EACH ITEM SEPARATELY

- ☐ Memory name: Heights 6 (or the lead's agreed LHH FW label)
- ☐ RX: **462.38750 MHz**
- ☐ TX: **467.38750 MHz**
- ☐ Receive and transmit DCS: **331N**
- ☐ Power and bandwidth verified against the lead's plan
- ☐ Memory remains available after restarting the radio
- ☐ Other saved channels remain unchanged

LISTEN BEFORE TRANSMITTING

Set an audible volume and arrange a reception check with the lead. A quiet speaker may mean no one is talking; it does not prove programming failed. Keep the app's green microphone control and the radio's PTT button untouched until an authorized check is arranged.

Phone optional: BTECH says normal RF voice operation does not require a phone or internet connection. If dual watch is later enabled, the large-font radio channel is the active main channel; holding **Return** changes main/sub selection.

SOURCES

Sources: supplied channel-panel captures 1-2; BTECH UV-PRO Manual, pp. 4, 7-8; BTECH product page (phone-independent operation).

BTECH UV-PRO Getting Started — continued

Complete a supervised two-way check and keep a record of the result.

6. MAKE AN AUTHORIZED RADIO CHECK

! WARNING — URGENT ACTION

Transmit only when authorized. Have the radio lead confirm the equipment and operating settings are permitted for the channel. Do not test during emergency traffic.

- 1 Arrange the check.** Use a safe location, select Heights 6, and listen first. Follow the lead's timing and COM-002's net procedure.
- 2 Make a short call.** When authorized, press PTT, pause briefly, and say your assigned callsign and "radio check." Release PTT to hear the reply.
- 3 Confirm both directions.** You should hear the other station clearly, and it should confirm that it heard and understood you.
- 4 Record the result.** If either direction fails, ask for help before duty. Do not change frequencies or codes at random.

TROUBLESHOOTING

Problem	Check next
Phone will not connect	Radio power, Bluetooth, required permissions, pairing mode, and selected device.
Channel missing after restart	Correct group and memory mode; repeat SAVE while connected and have the lead read stored settings.
No received speech	Volume, selected memory, RX frequency, receive DCS, and known station activity.
Others cannot hear you	Stop transmitting. Ask the lead to check TX frequency/DCS, Disable TX, power, authorization, and coverage.

COMMISSIONING RECORD

Checked by: _____ Date: _____
Receive check: _____ Authorized two-way check: _____
Bandwidth / power confirmed: _____

Before duty: charge the battery, confirm the channel, know your callsign, and protect PTT. Use **COM-002** for directed-net calls. For immediate danger, call 911 when available.

SOURCES

References (accessed October 9, 2026): [BTECH UV-PRO Manual, Rev. 3](#), pp. 4-8, 11-15, 22, 31; [BTECH UV-PRO product page](#); COM-002; project-owner channel/gesture confirmations and supplied Android captures. Draft requires editor and subject-matter review before publication.