



PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

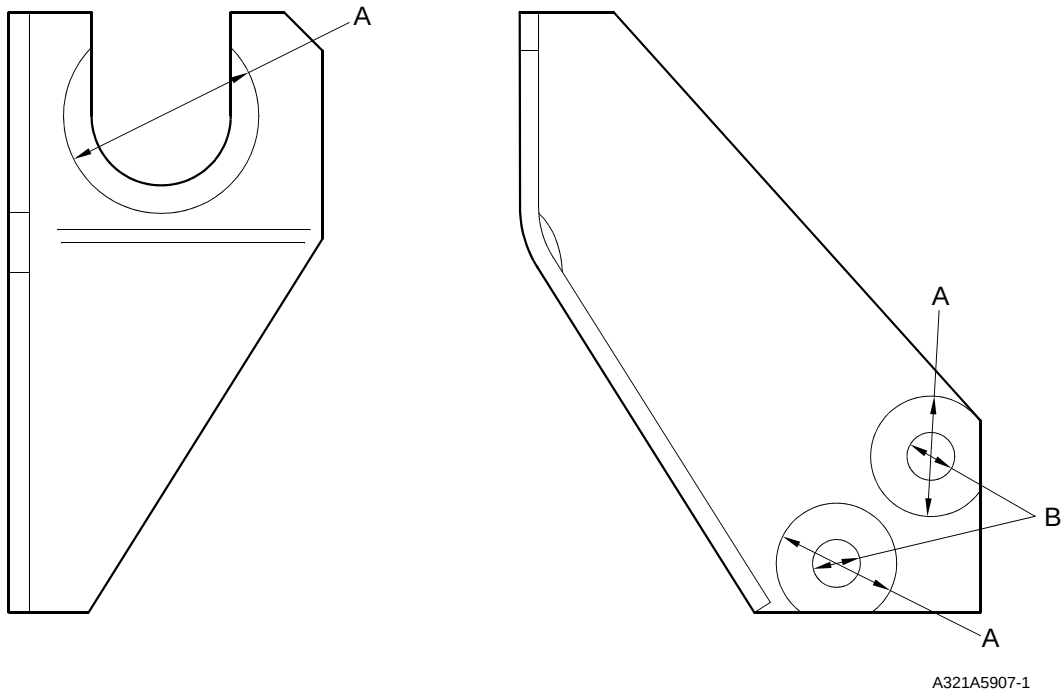


Bracket (2-120 and 2-130) - Protective Treatment
Figure 601

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

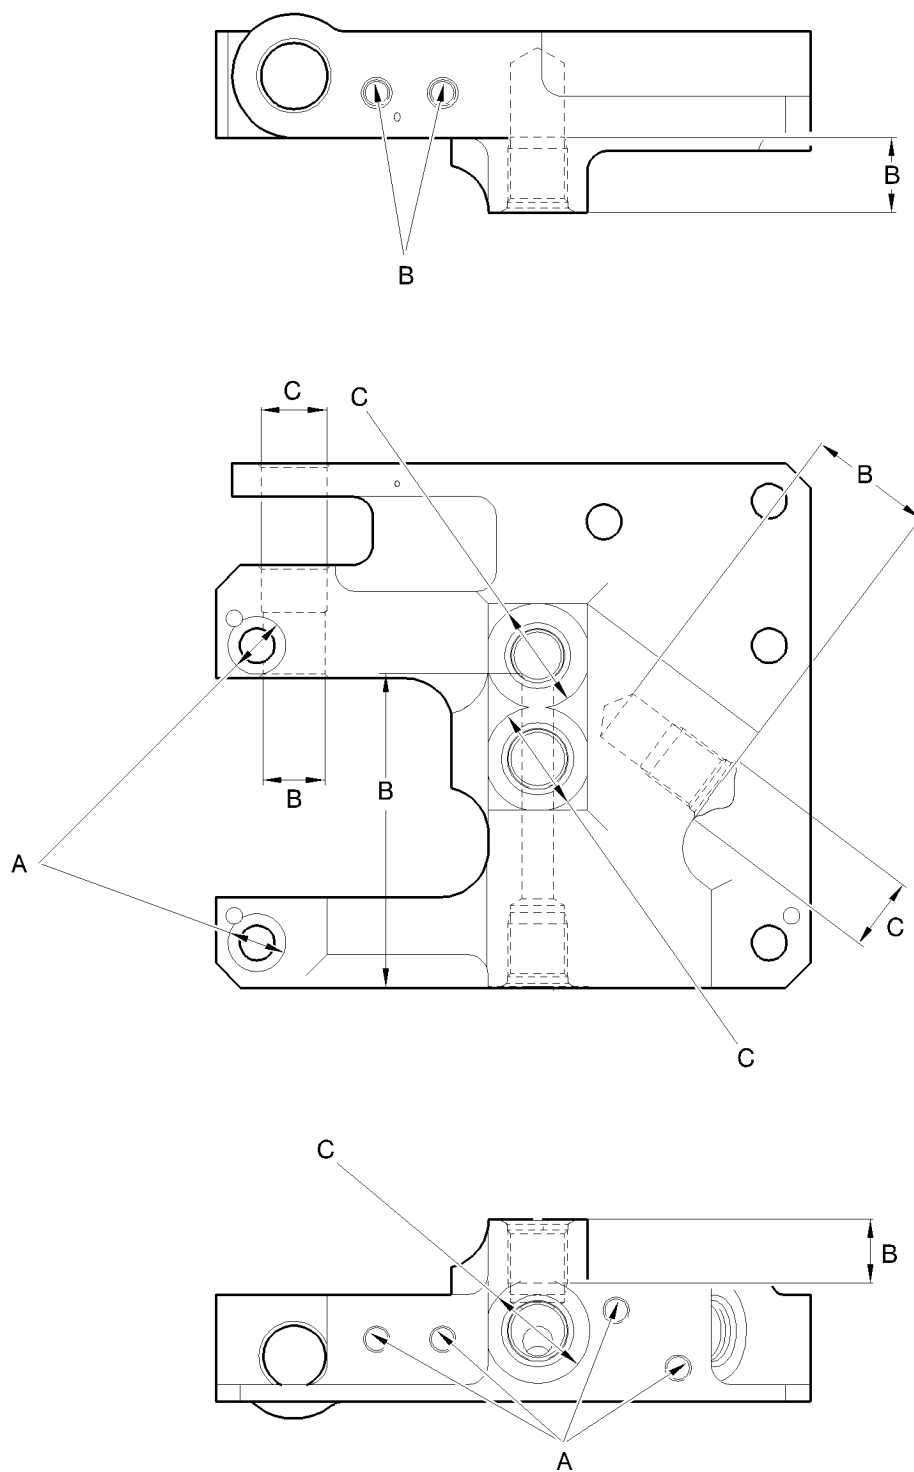

Transfer Block (2-340, 2-340A, 2-350 and 2-350A) - Protective Treatment
Figure 602



**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

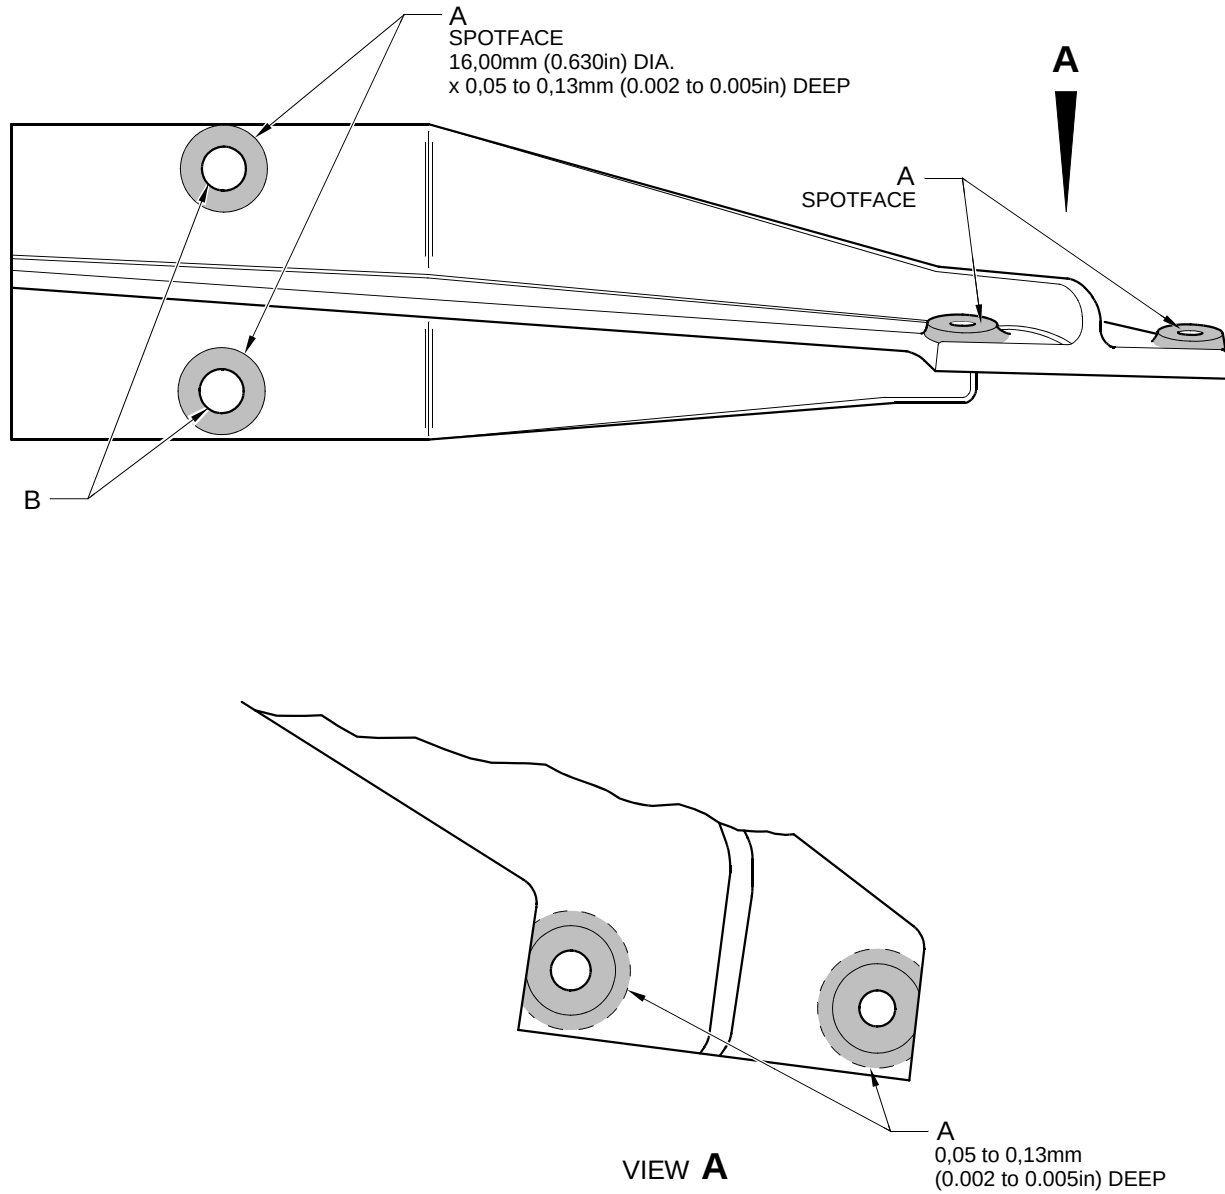

A321-S-32-12-22-096-0

Bracket (4-140 and 4-150) - Protective Treatment
Figure 603

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

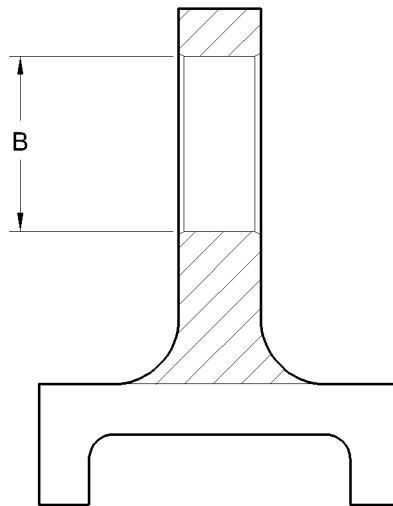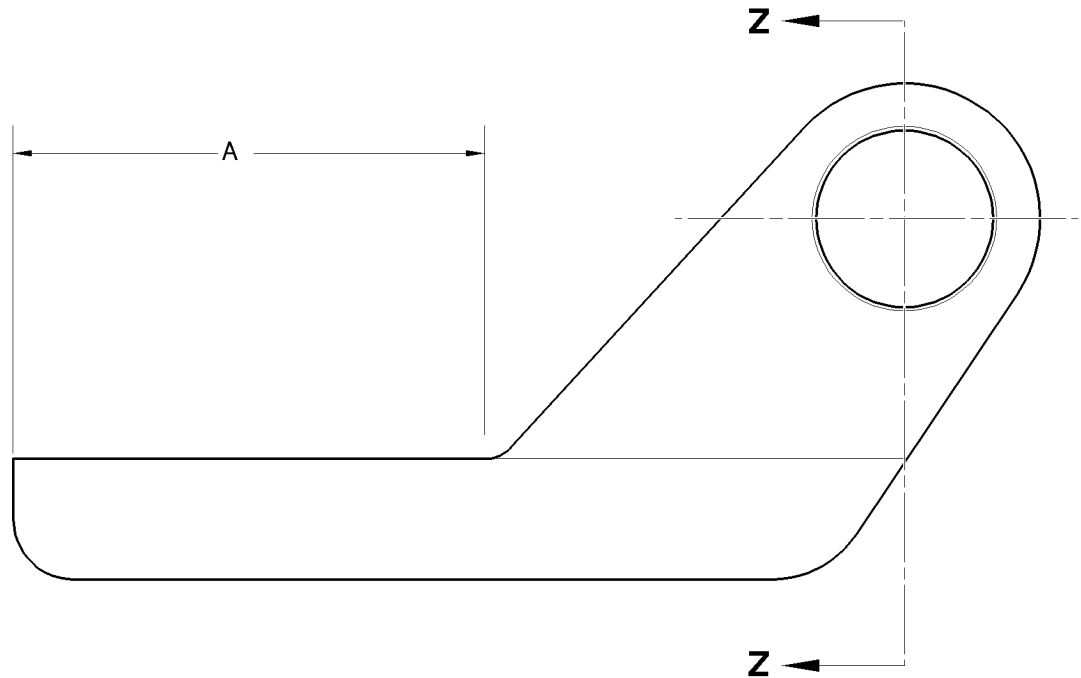


SECTION **Z-Z**

A3219232-1


Bracket (5-160) - Protective Treatment
Figure 604

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

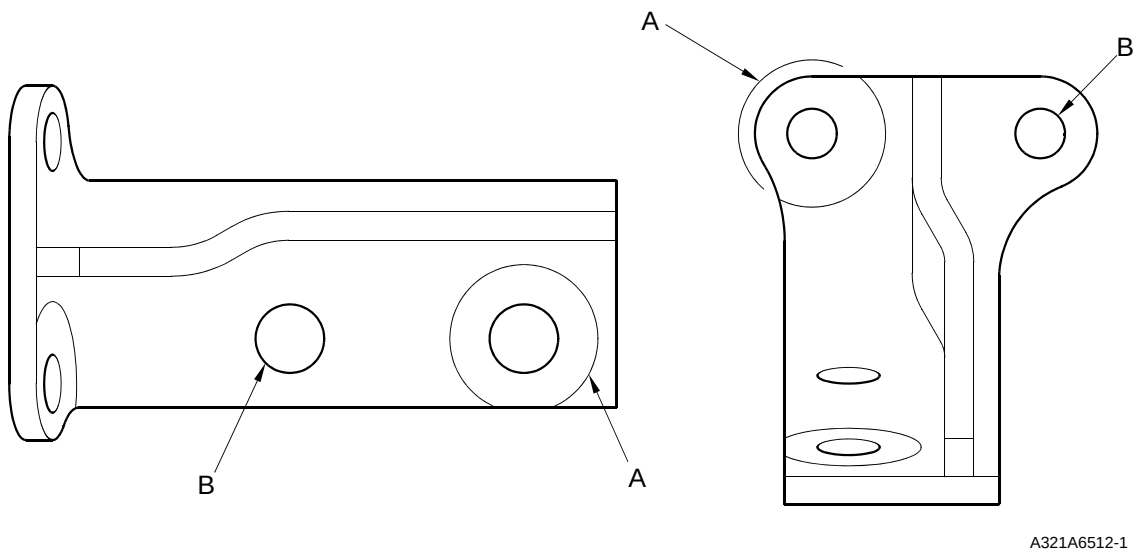


Bracket (6-170 and 6-180) - Protective Treatment
Figure 605

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

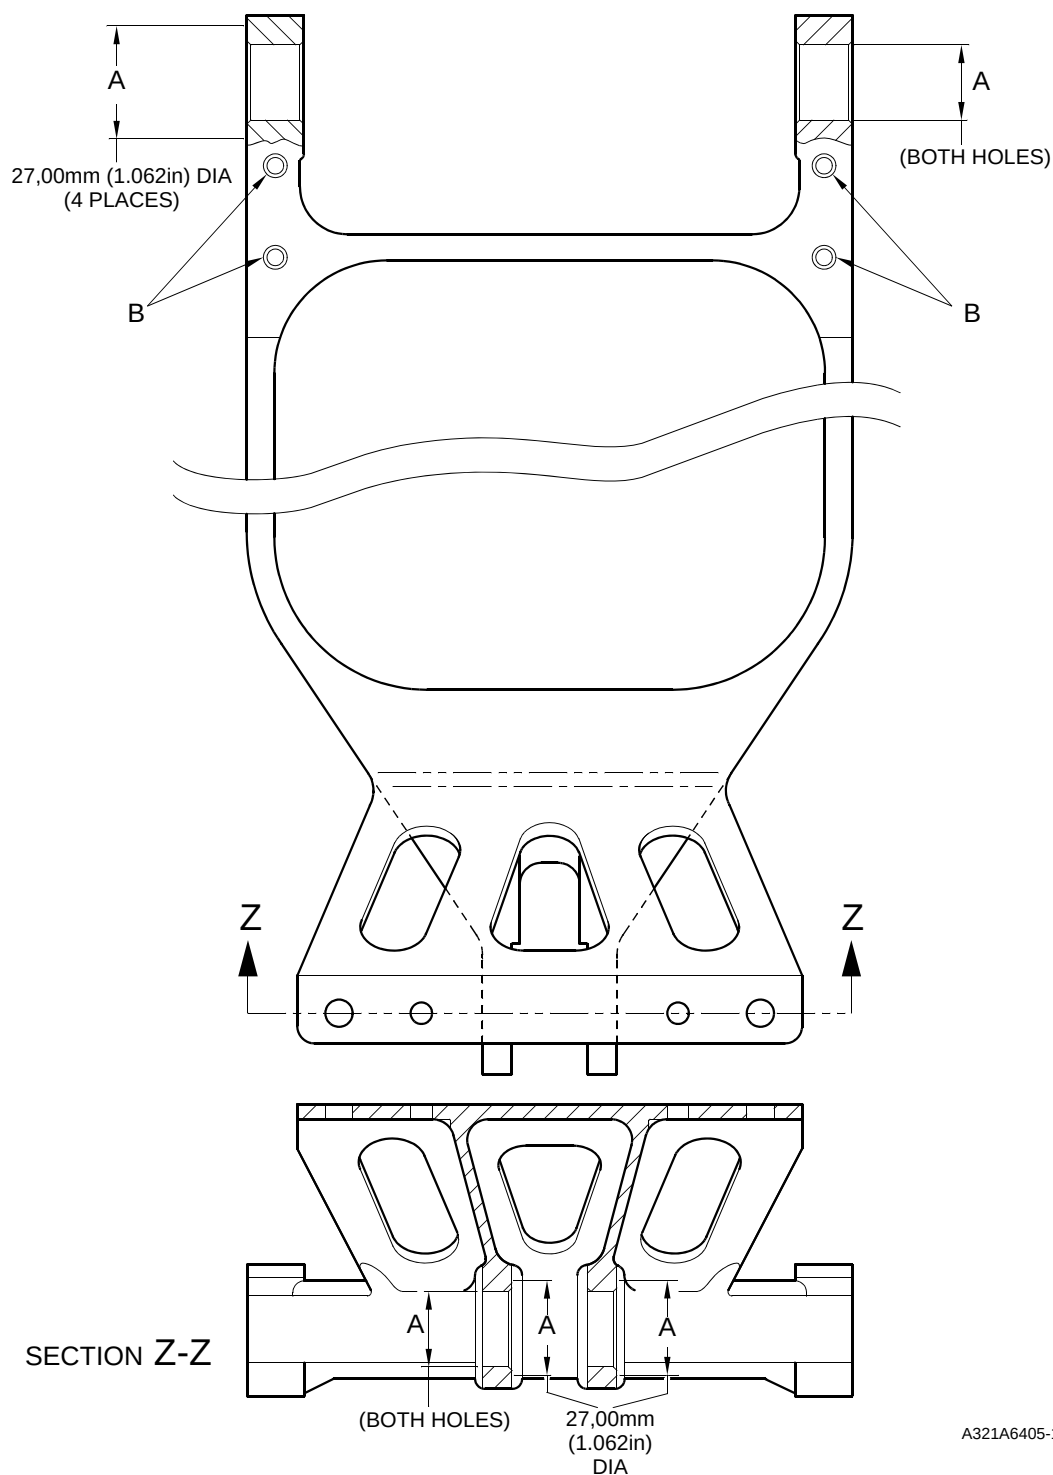


Slave Link (6-230) Only - Protective Treatment
Figure 606

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

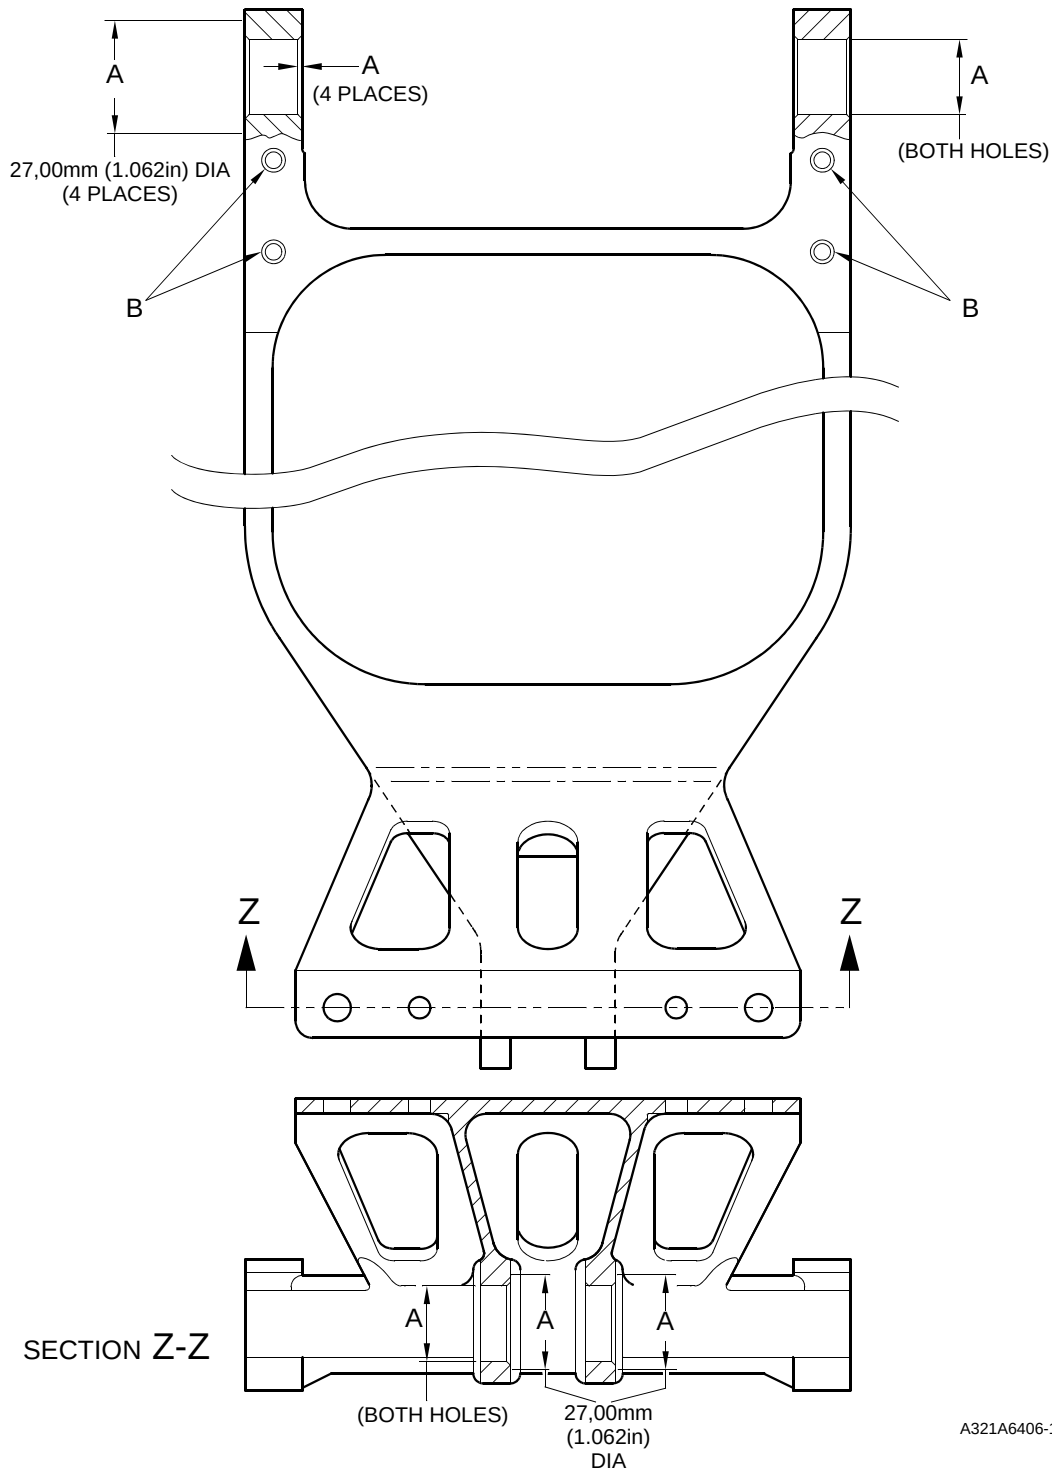

Slave Link (6-230A) - Protective Treatment
Figure 607

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

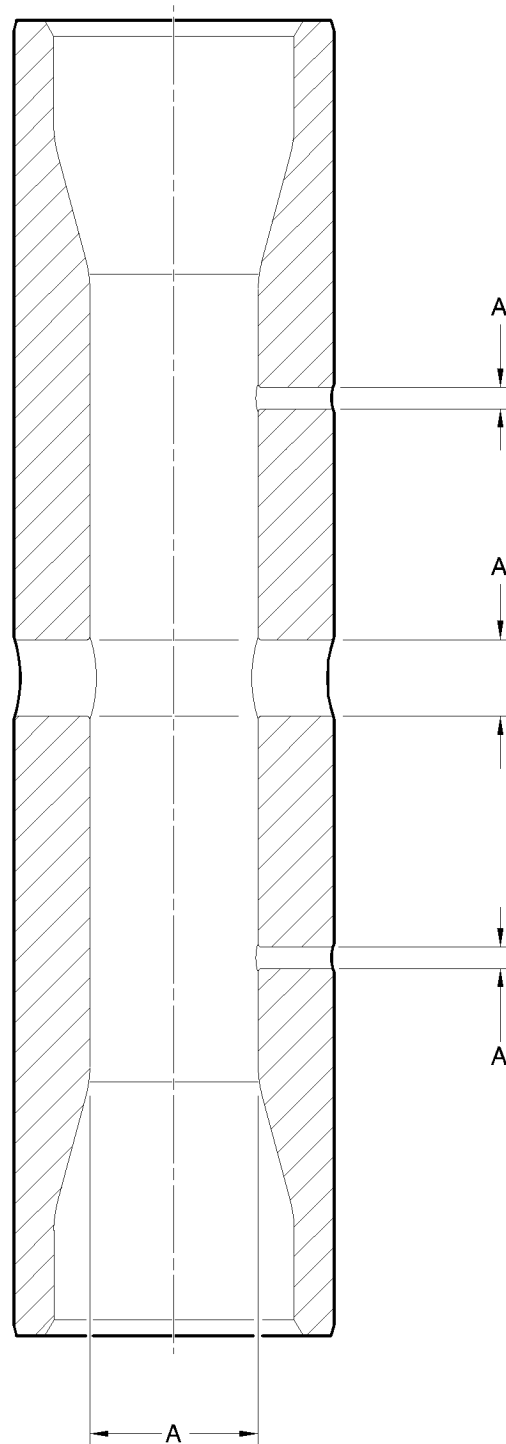

A3219233-1

Pin (10-80) - Protective Treatment
Figure 608


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

Figure Deleted
Figure 609

32-12-22

Page 630
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

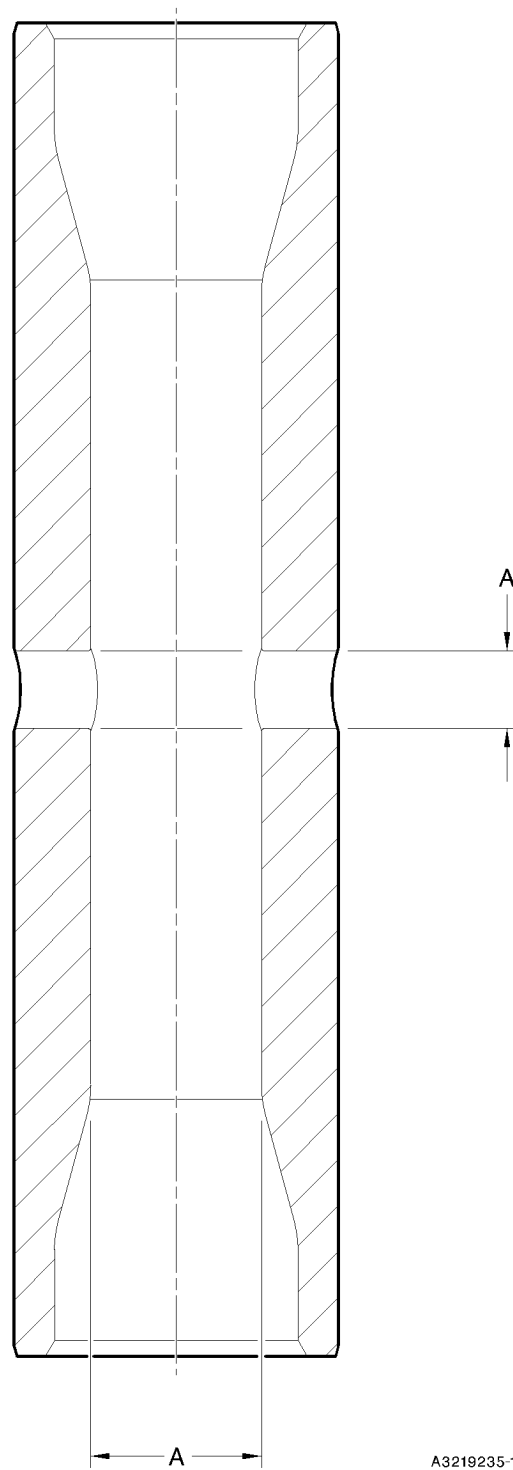

Pin (11-130) - Protective Treatment
Figure 610


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

Figure Deleted
Figure 611

32-12-22


Page 632
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

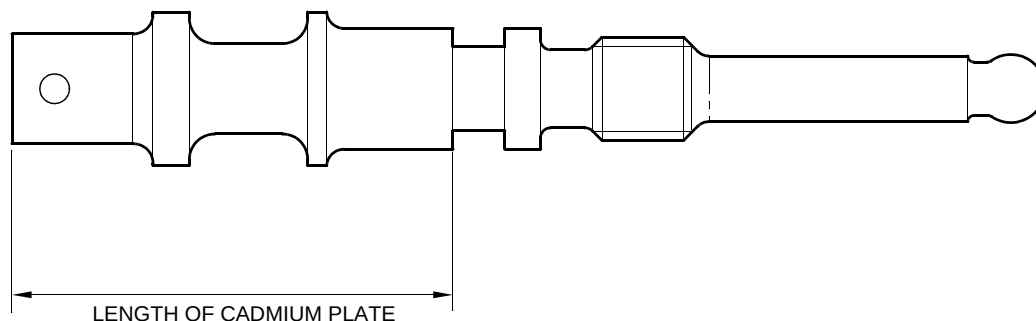

A321A4849-1


Valve Stem (12-90) - Protective Treatment
Figure 612

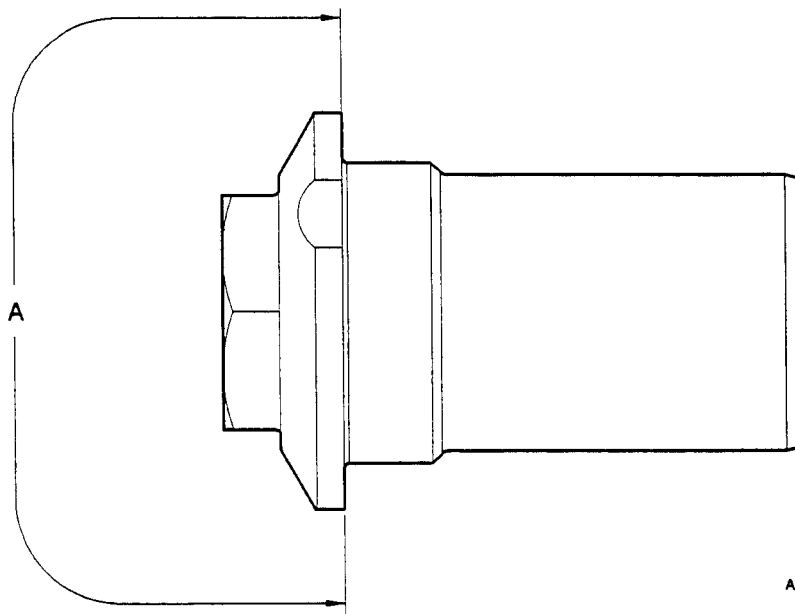

A3219237-1


Retaining Pin (13-10) - Protective Treatment
Figure 613

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

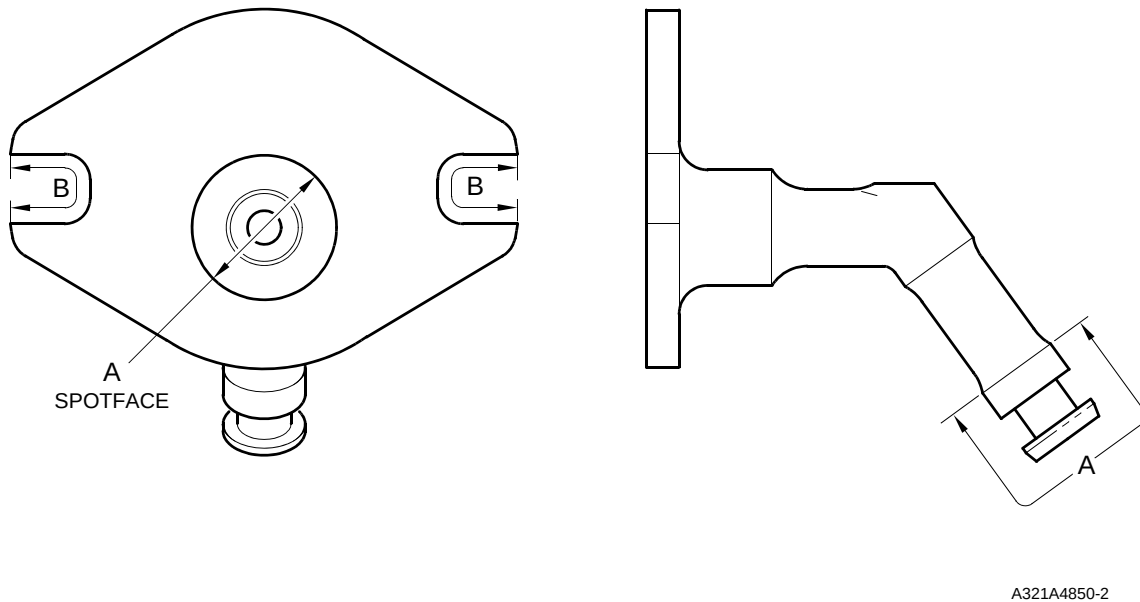


Inflation Valve (13-110 and 13-110A) - Protective Treatment
Figure 614

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

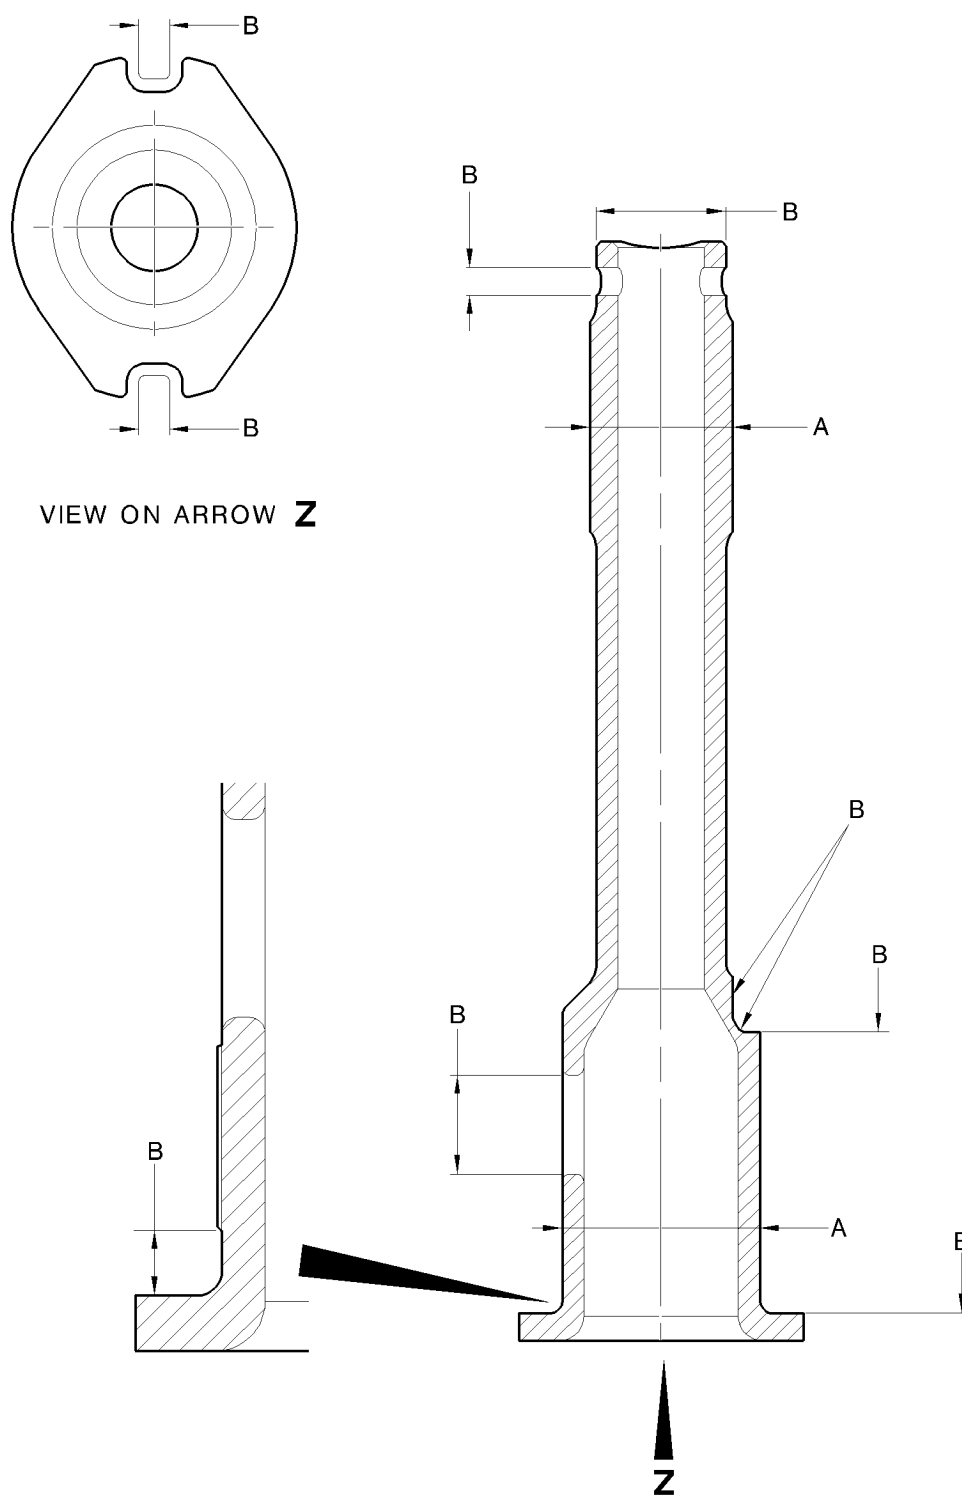

Pin (13-190 and 13-190A) - Protective Treatment
Figure 615


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

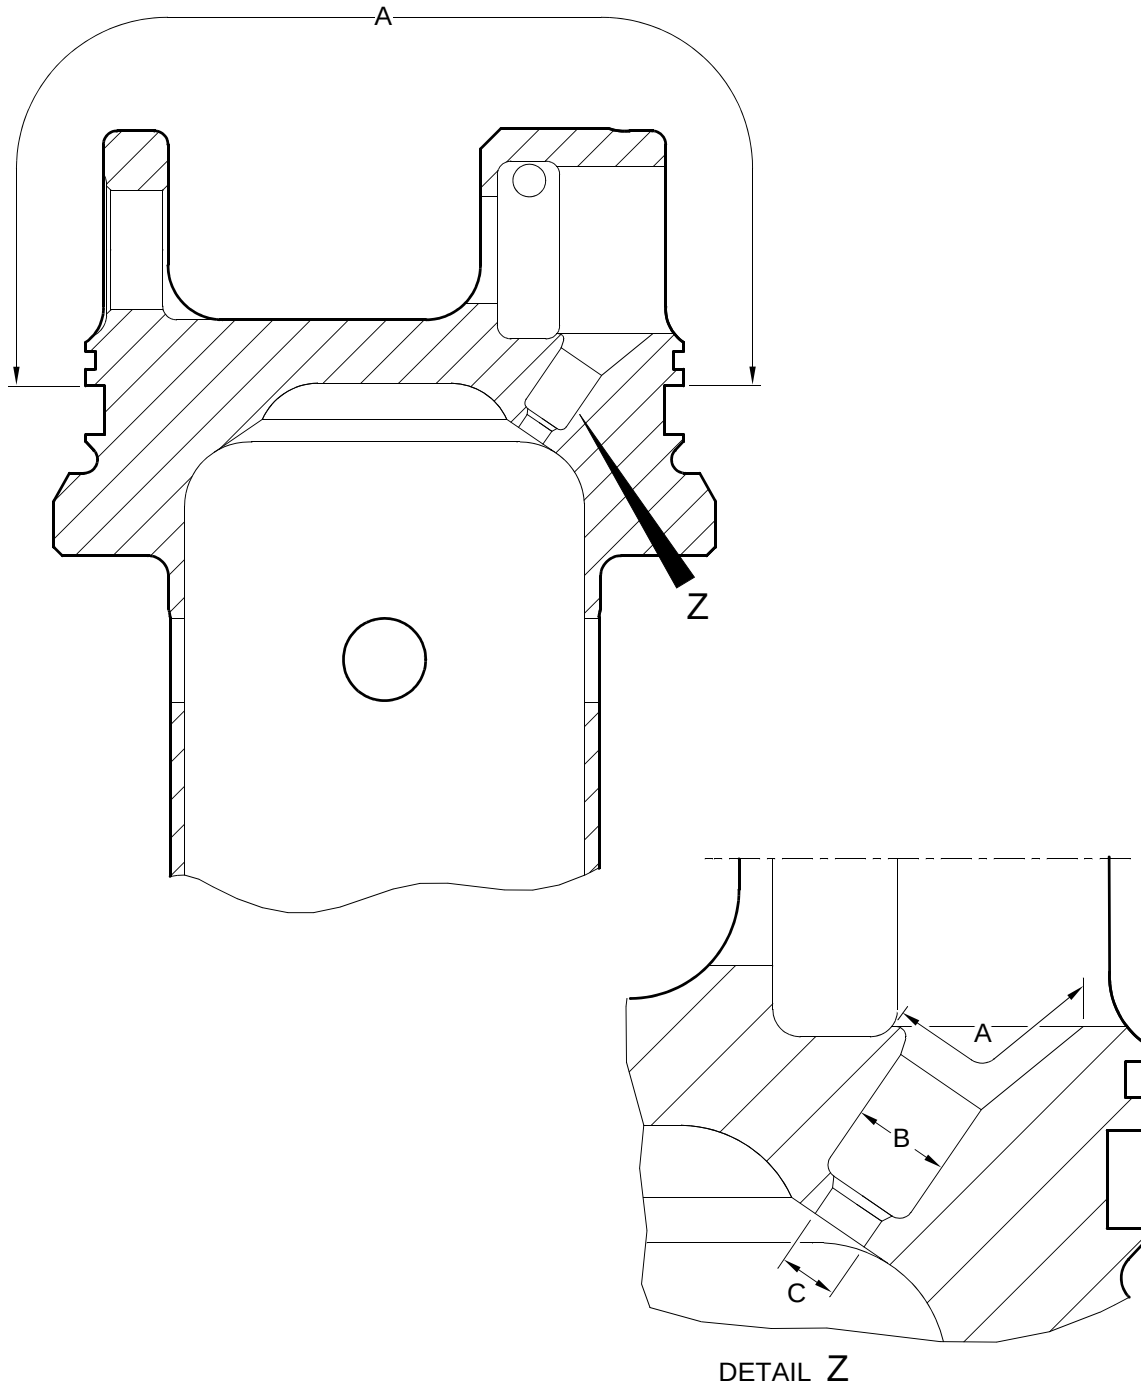

A321A3758-1

Upper Diaphragm Tube (15-390) - Protective Treatment
Figure 616


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

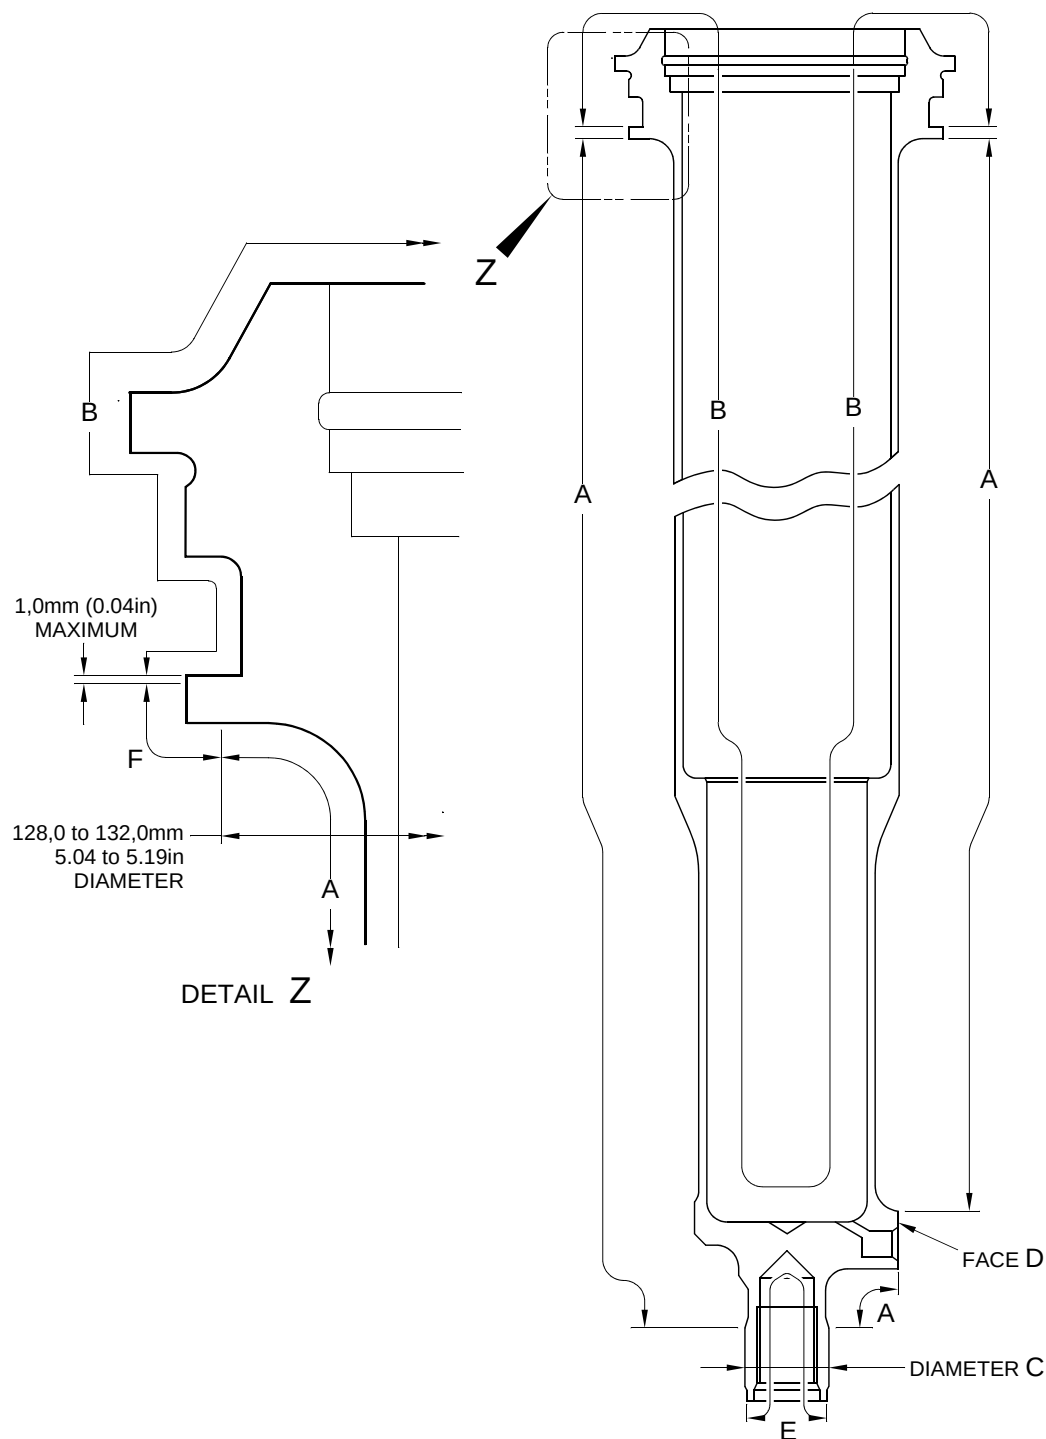

A321A5553-1

Cylinder (17-230) - Protective Treatment
Figure 617


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

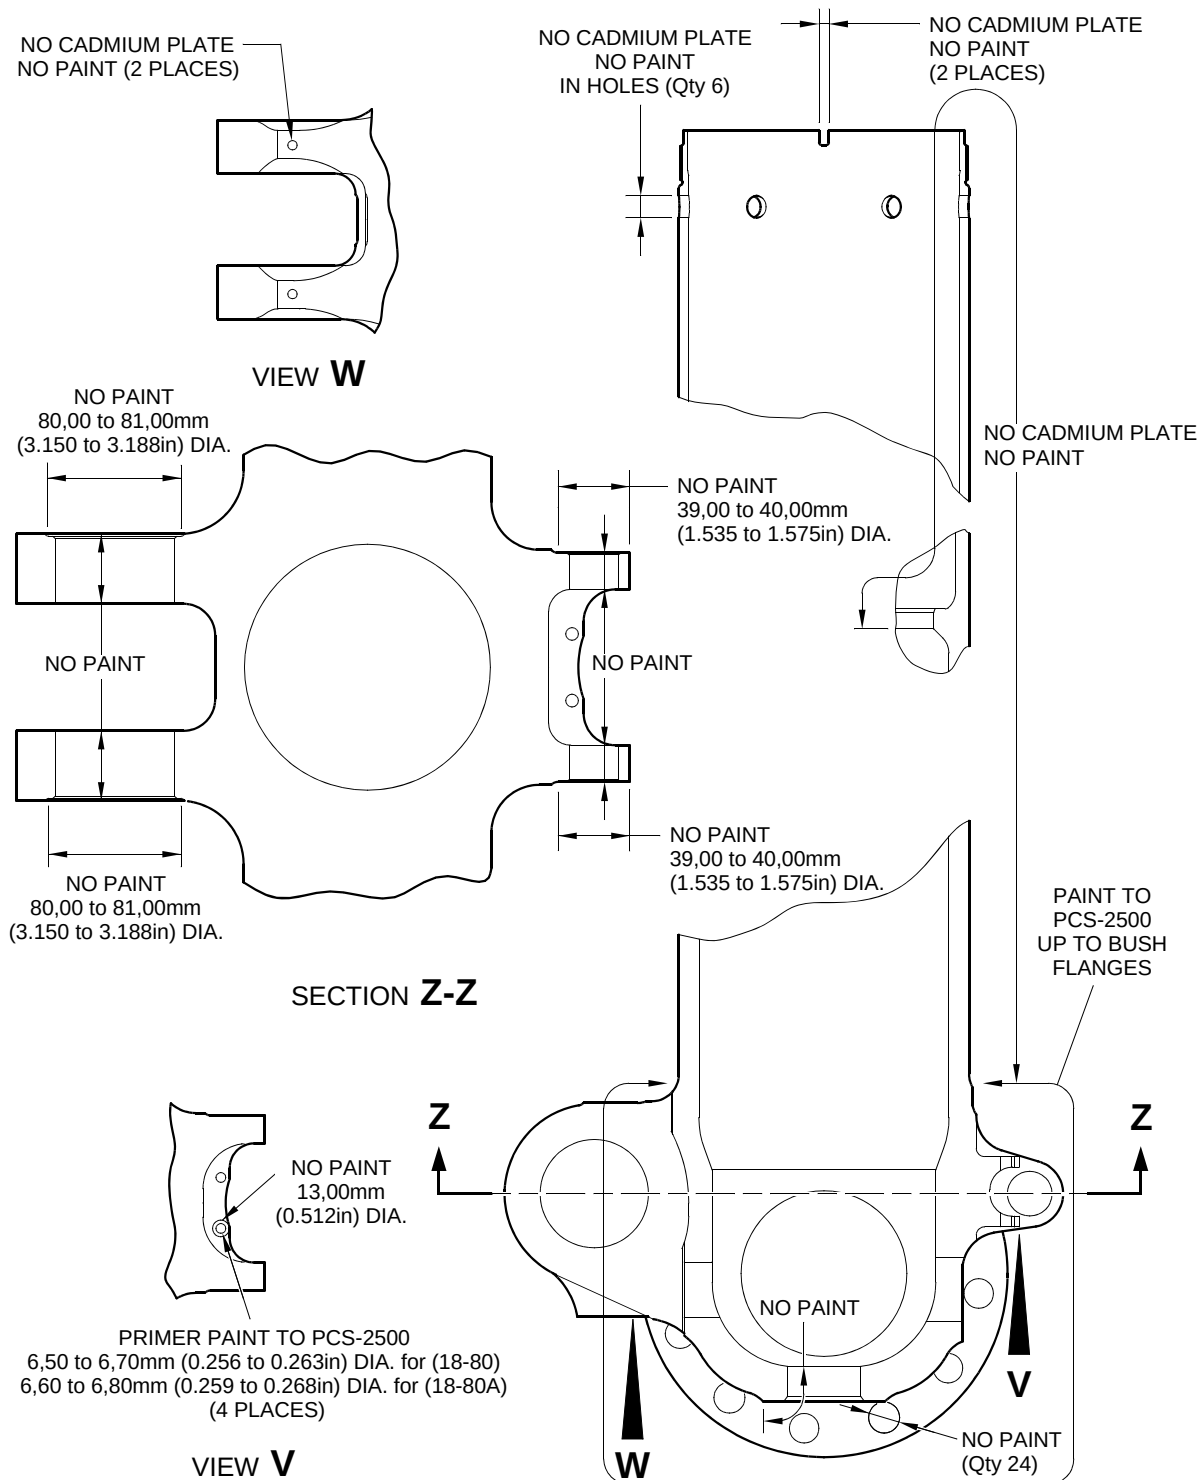

A321-S-32-12-22-088-0

Sliding Tube (18-80) or (18-80A) - Protective Treatment
Figure 618 - Sheet 1


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

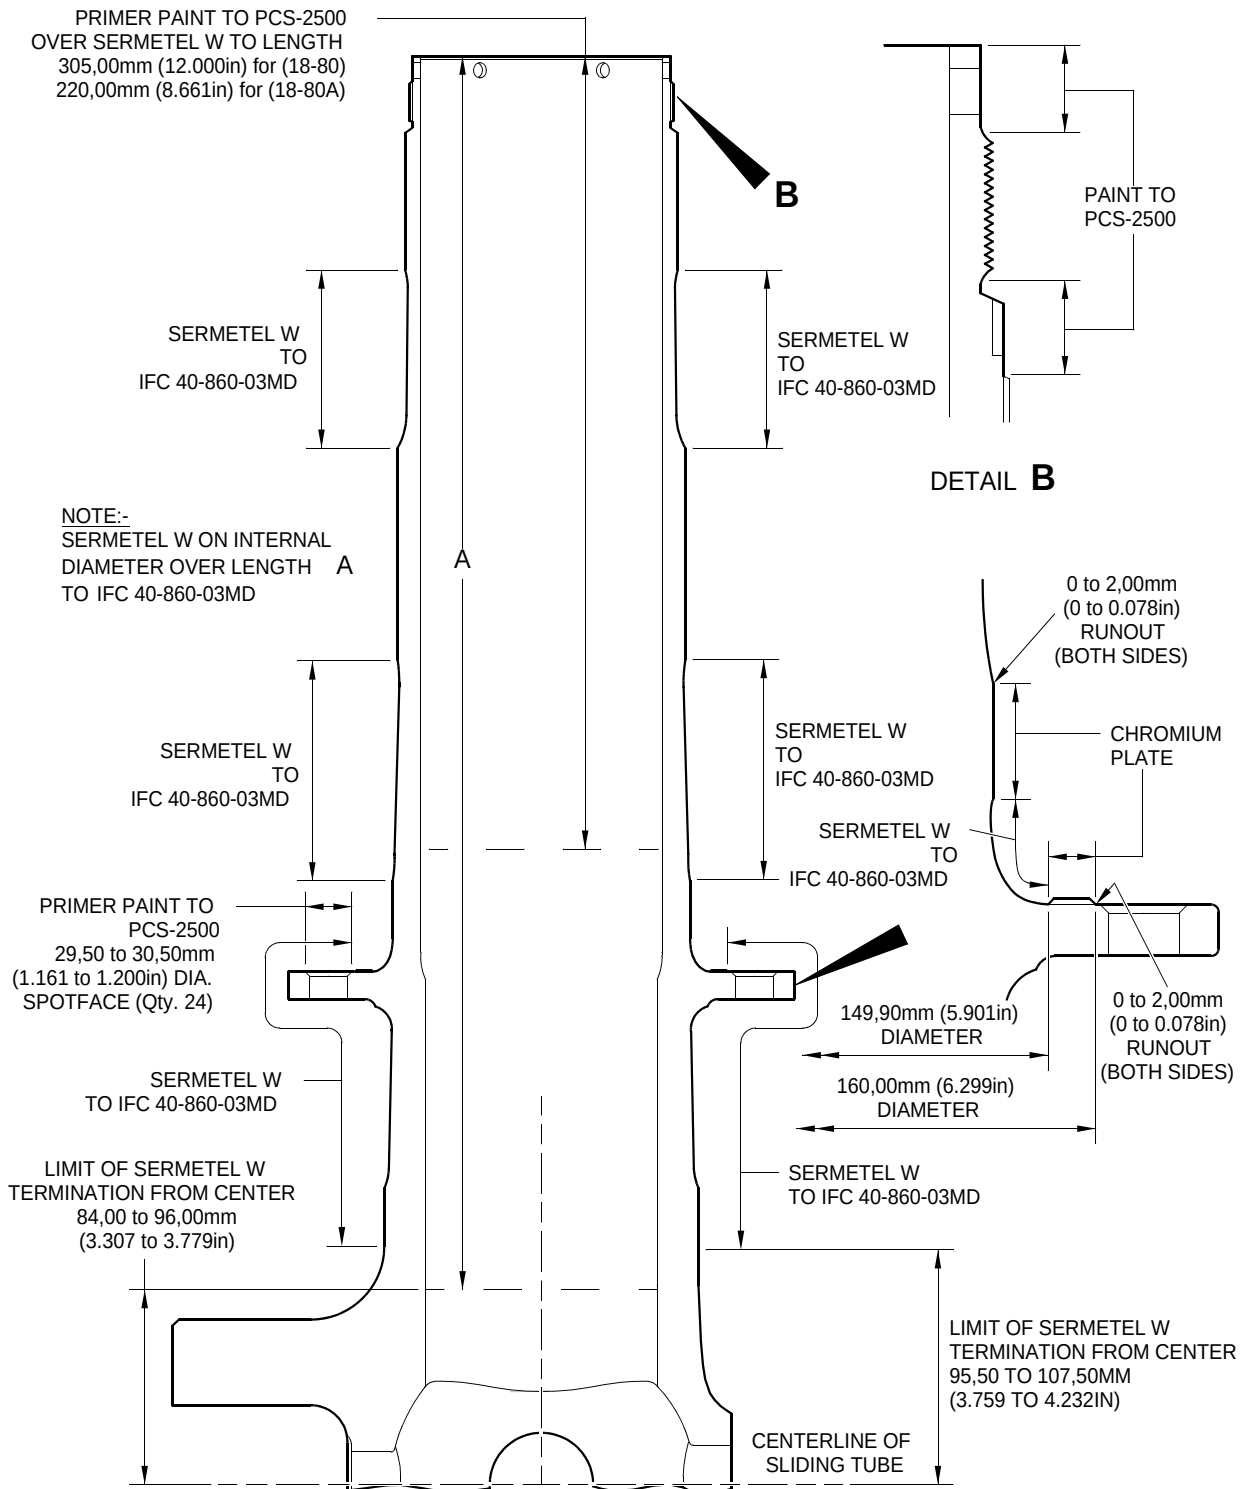

A321-S-32-12-22-089-0

**Sliding Tube (18-80) or (18-80A) - Protective Treatment
Figure 618 - Sheet 2**

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

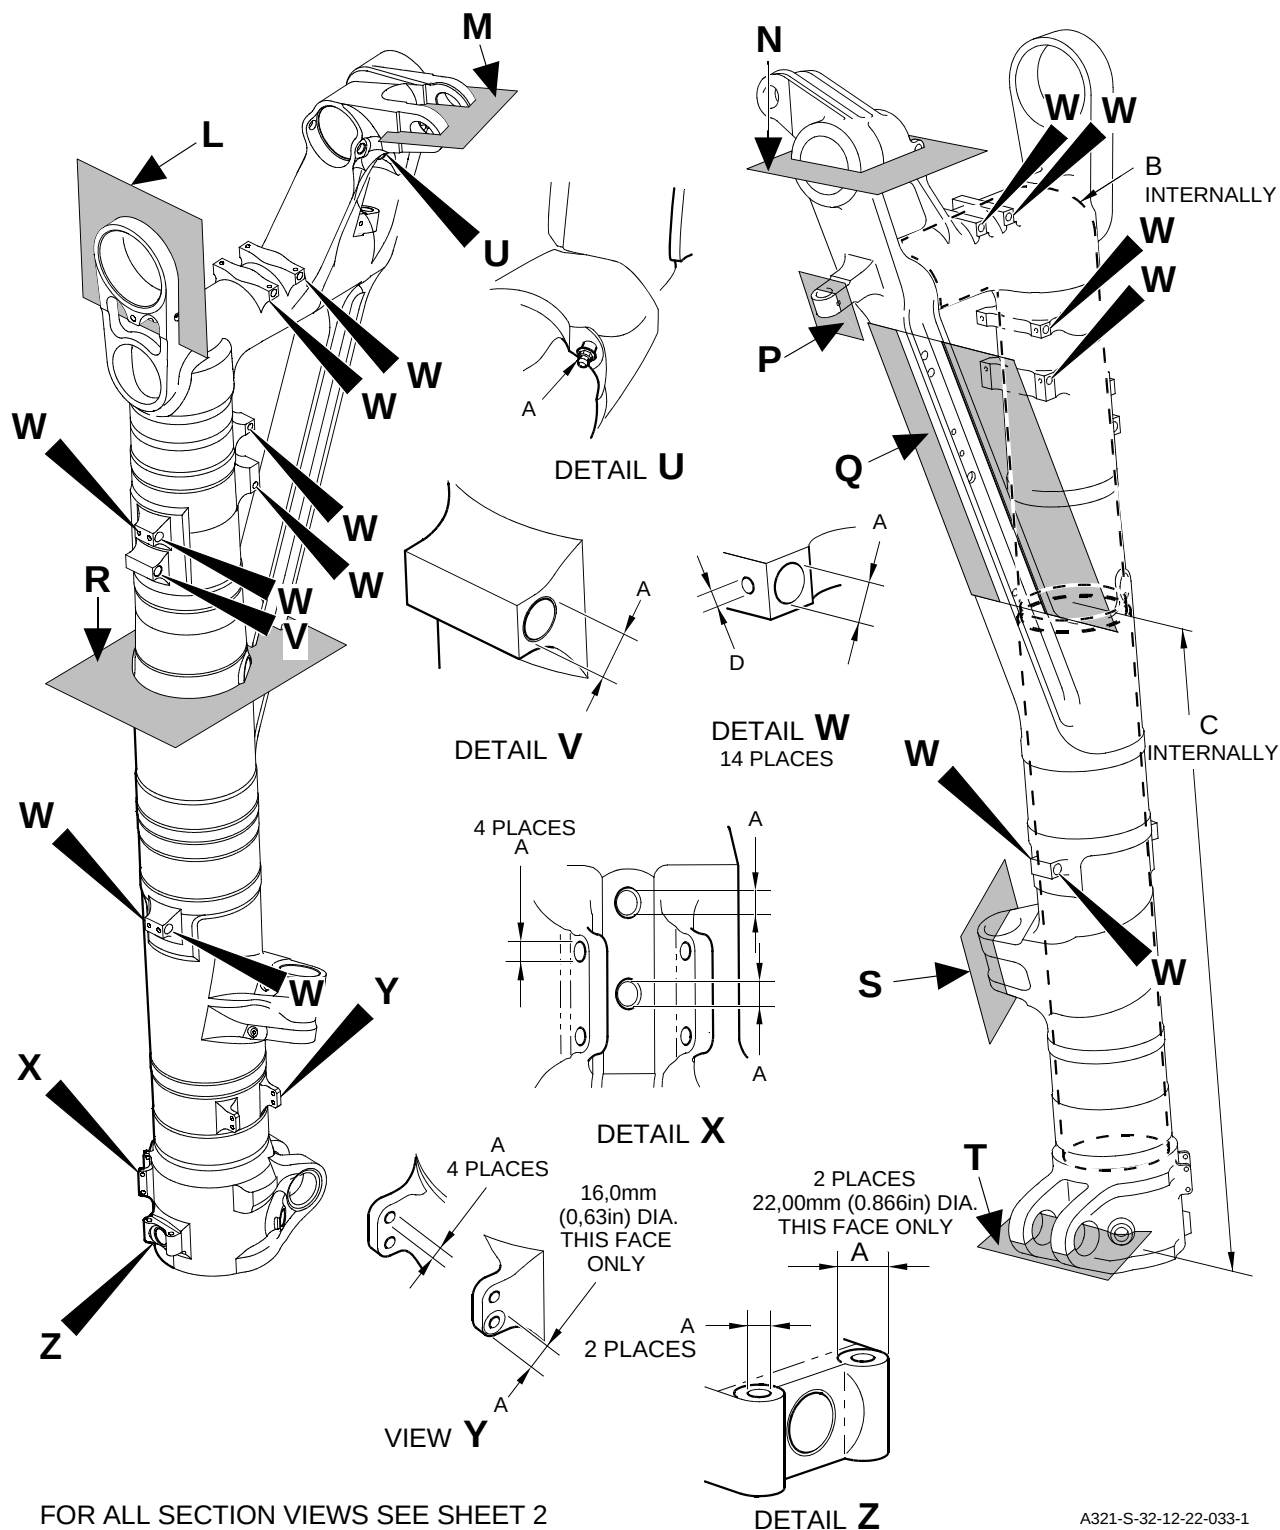


FOR ALL SECTION VIEWS SEE SHEET 2

A321-S-32-12-22-033-1


Main Fitting Subassembly (20-90, 20-90A, 20-100 and 20-100A) - Protective Treatment
Figure 619 - Sheet 1

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

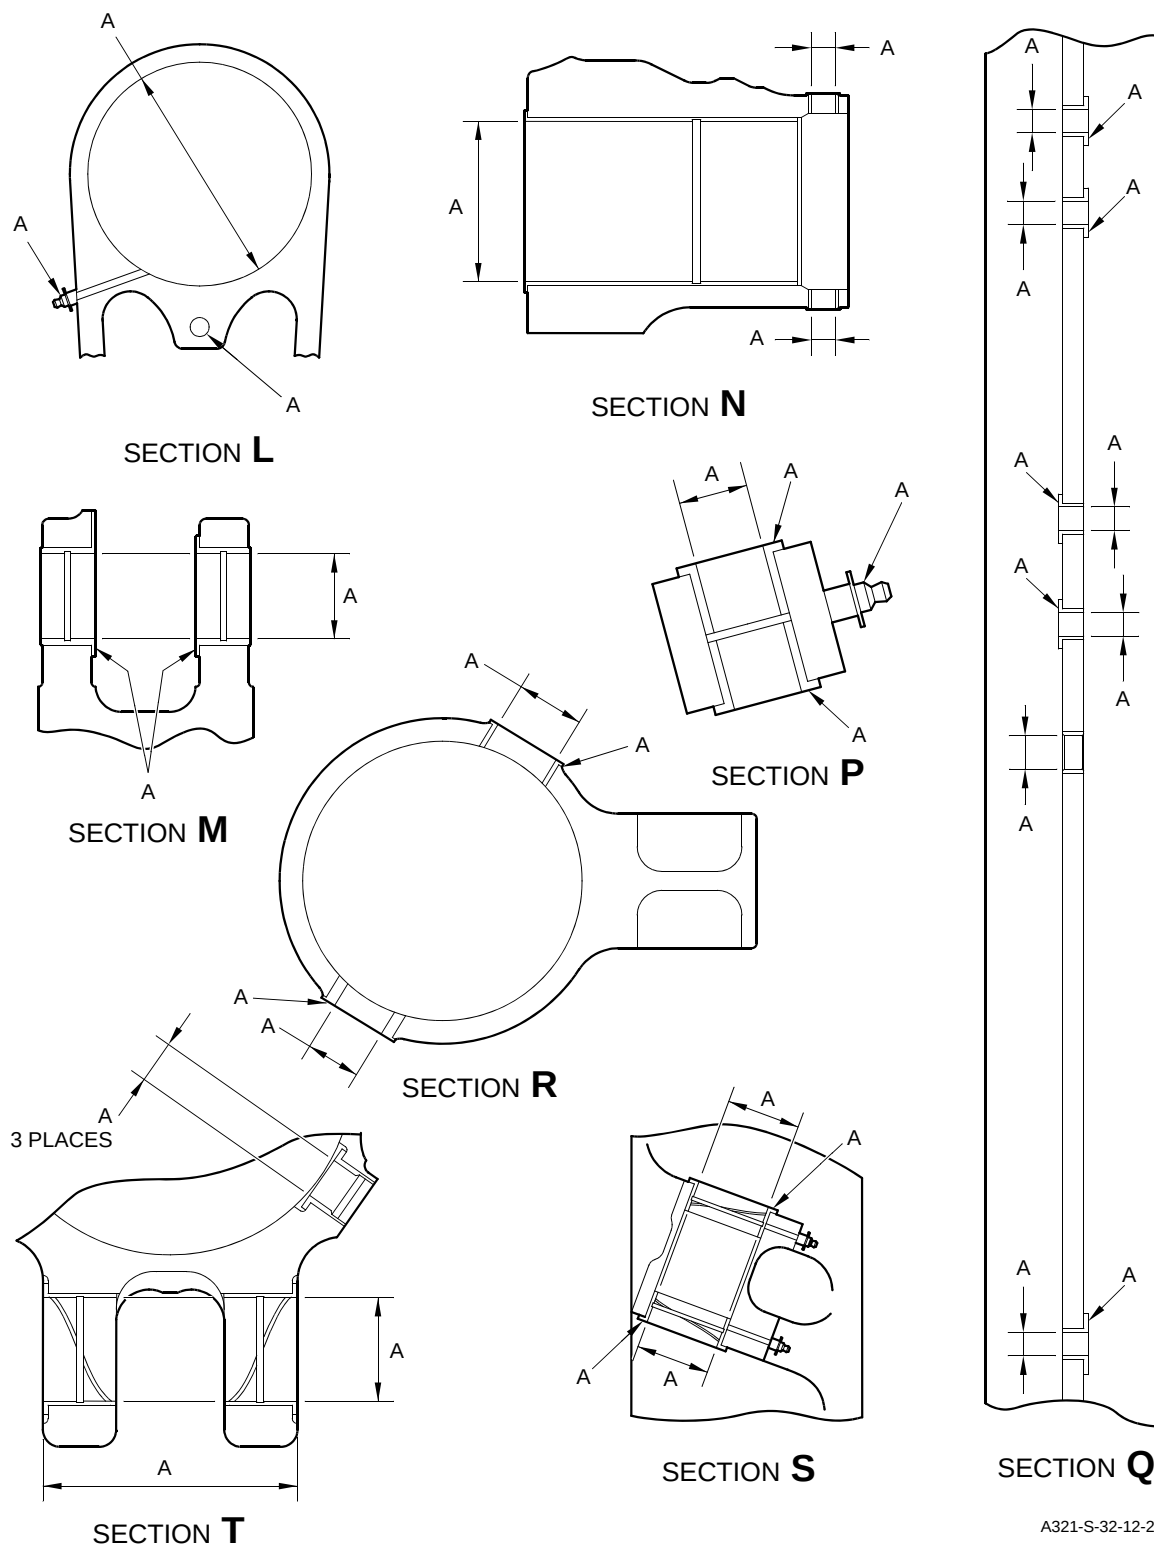

Main Fitting Subassembly (20-90, 20-90A, 20-100 and 20-100A) - Protective Treatment
Figure 619 - Sheet 2


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

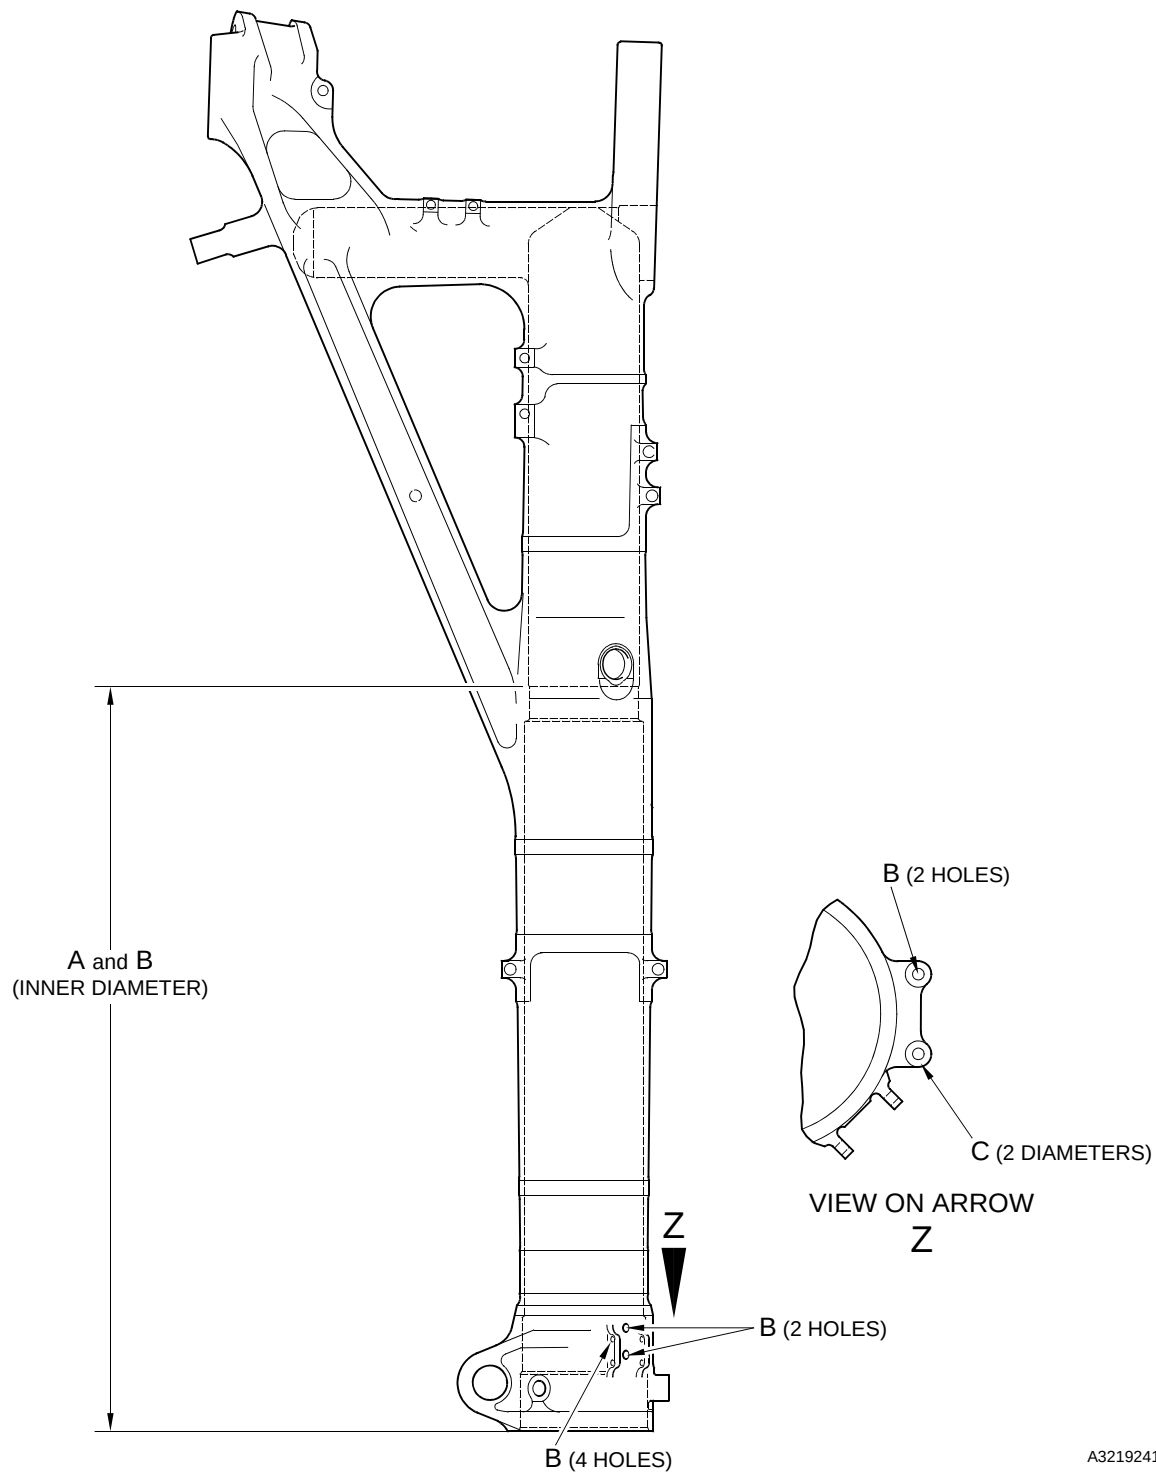

A3219241-4

Main Fitting (20-410) and (20-420) - Protective Treatment
Figure 620


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

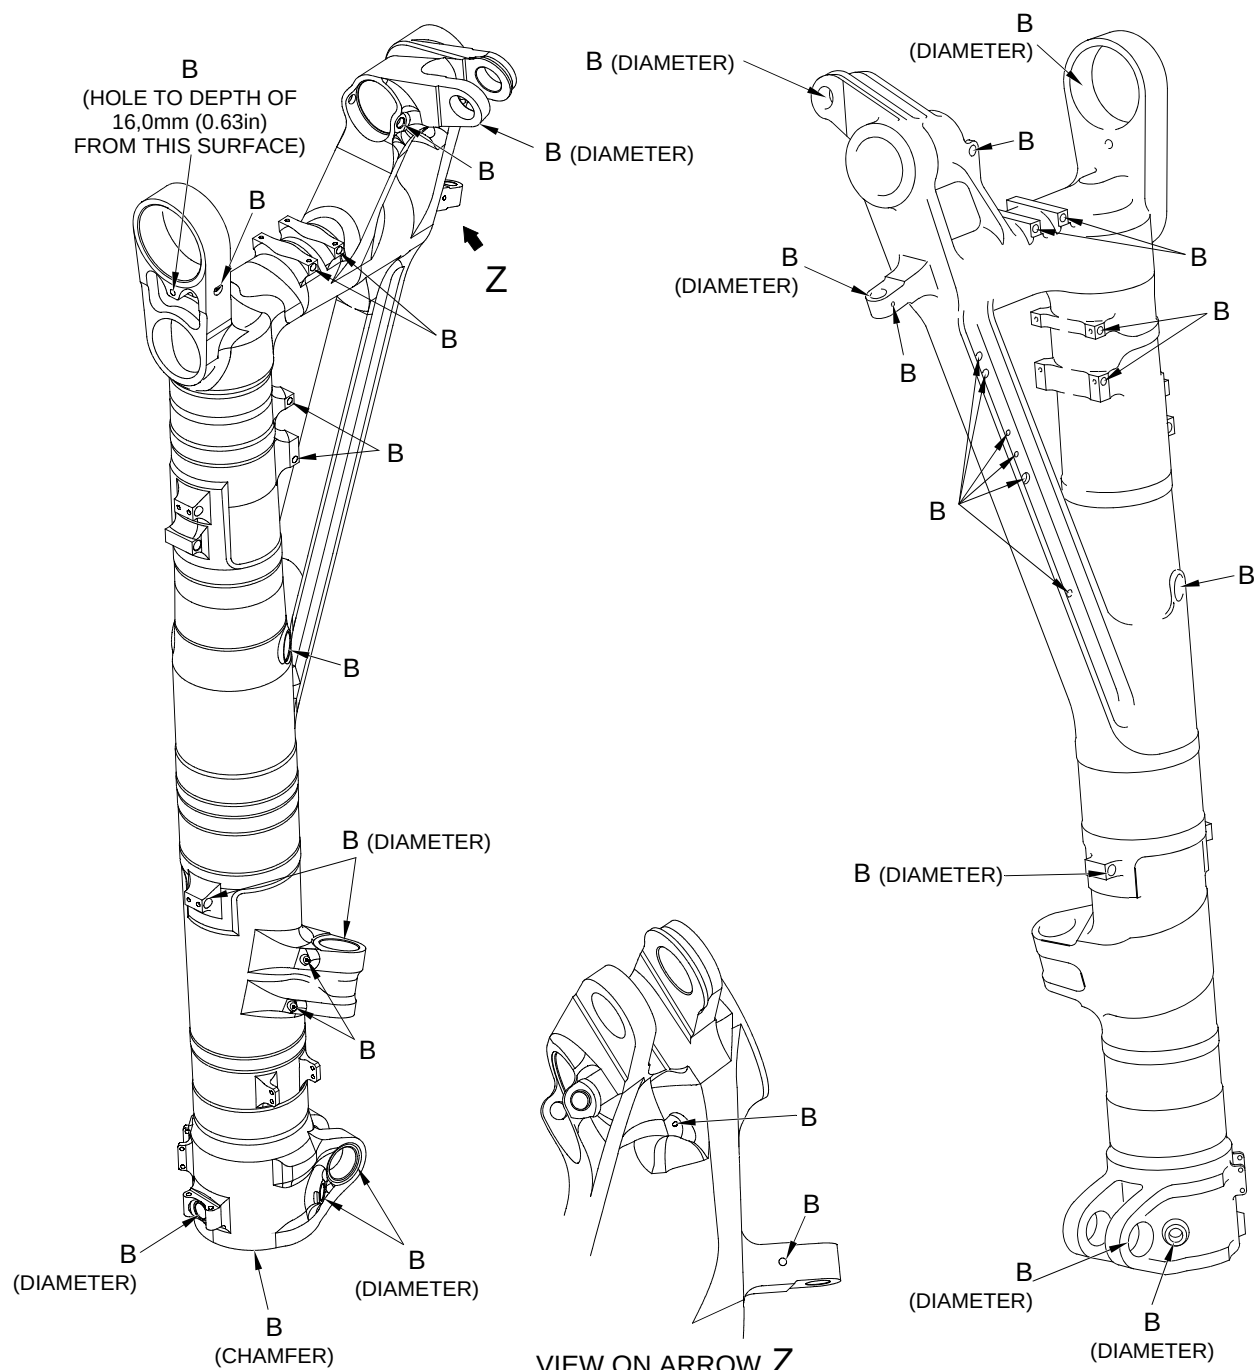

A321A3506-1

**Main Fitting (20-410) and (20-420)- Protective Treatment
Figure 621**


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

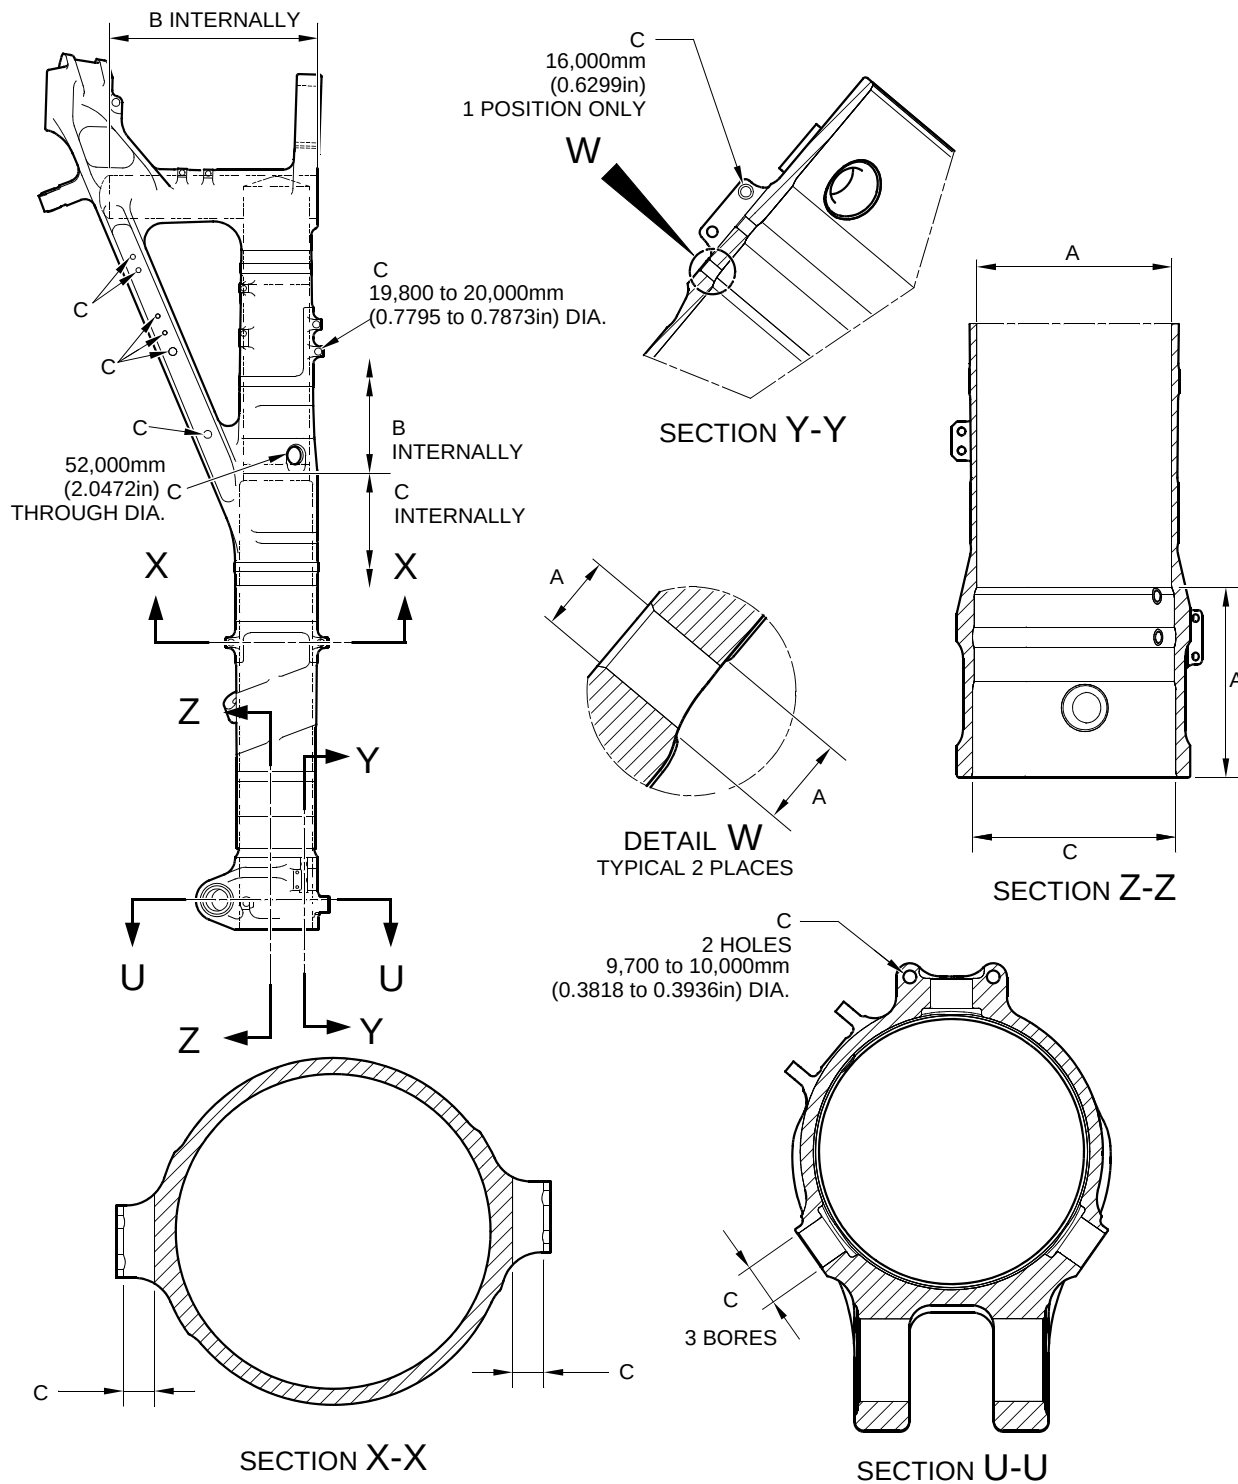

A321-S-32-12-22-085-0




Main Fitting (20-410A) and (20-420A) - Protective Treatment
 Figure 622 - Sheet 1

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

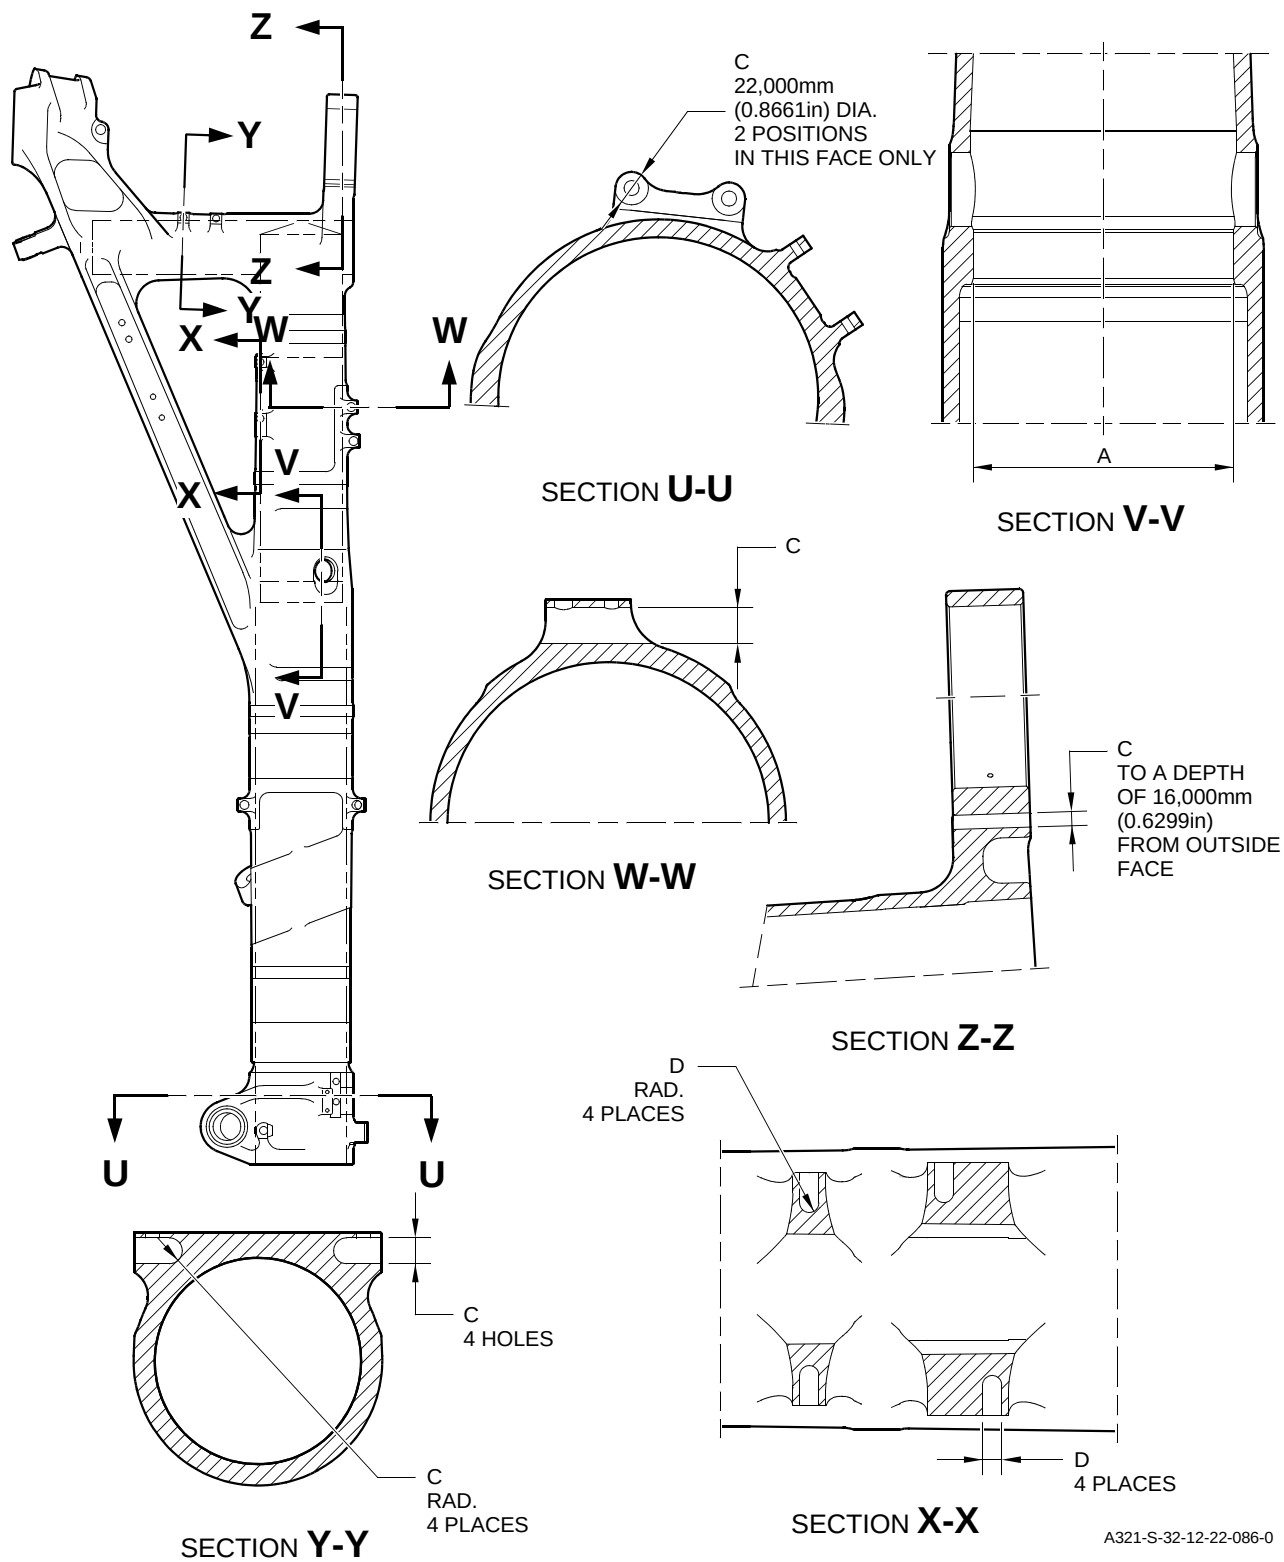

Main Fitting (20-410A) and (20-420A) - Protective Treatment
Figure 622 - Sheet 2

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

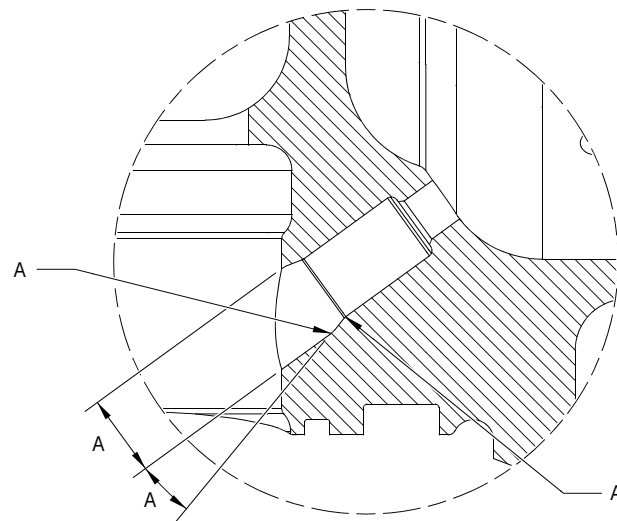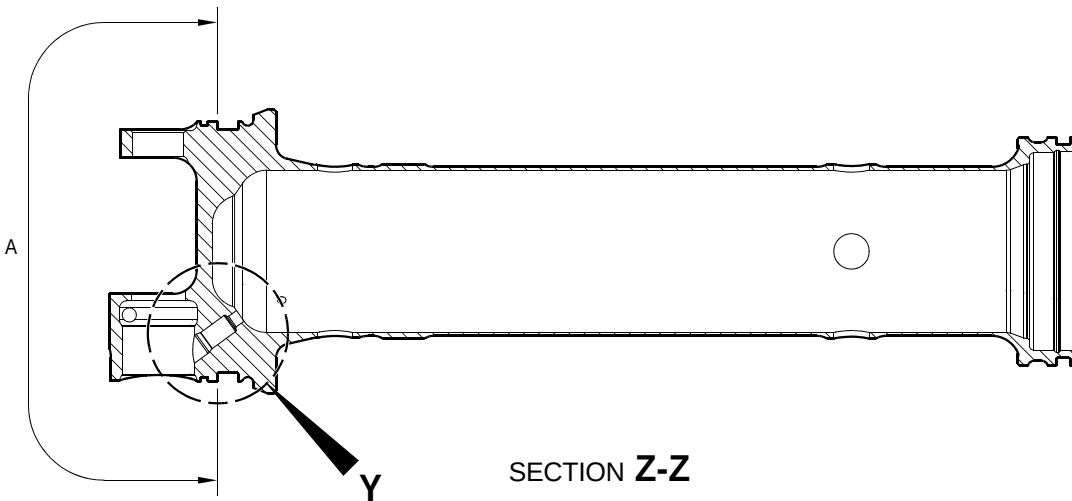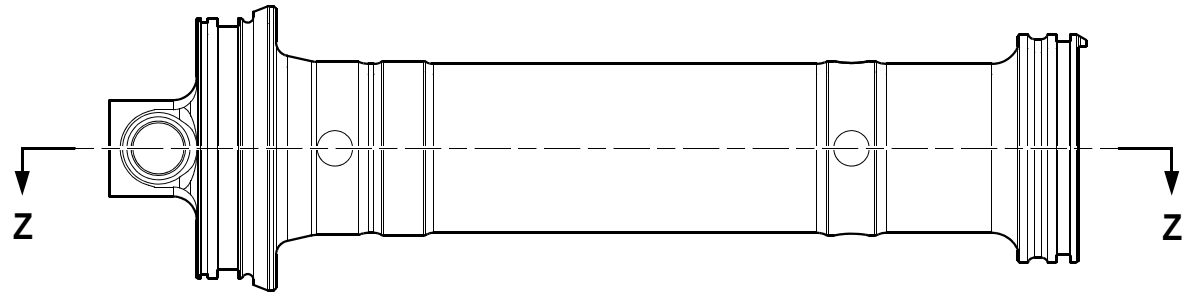


DETAIL Y

A321-T-32-12-22-109-0

Upper Diaphragm Tube (15-390A) - Protective Treatment
Figure 623


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

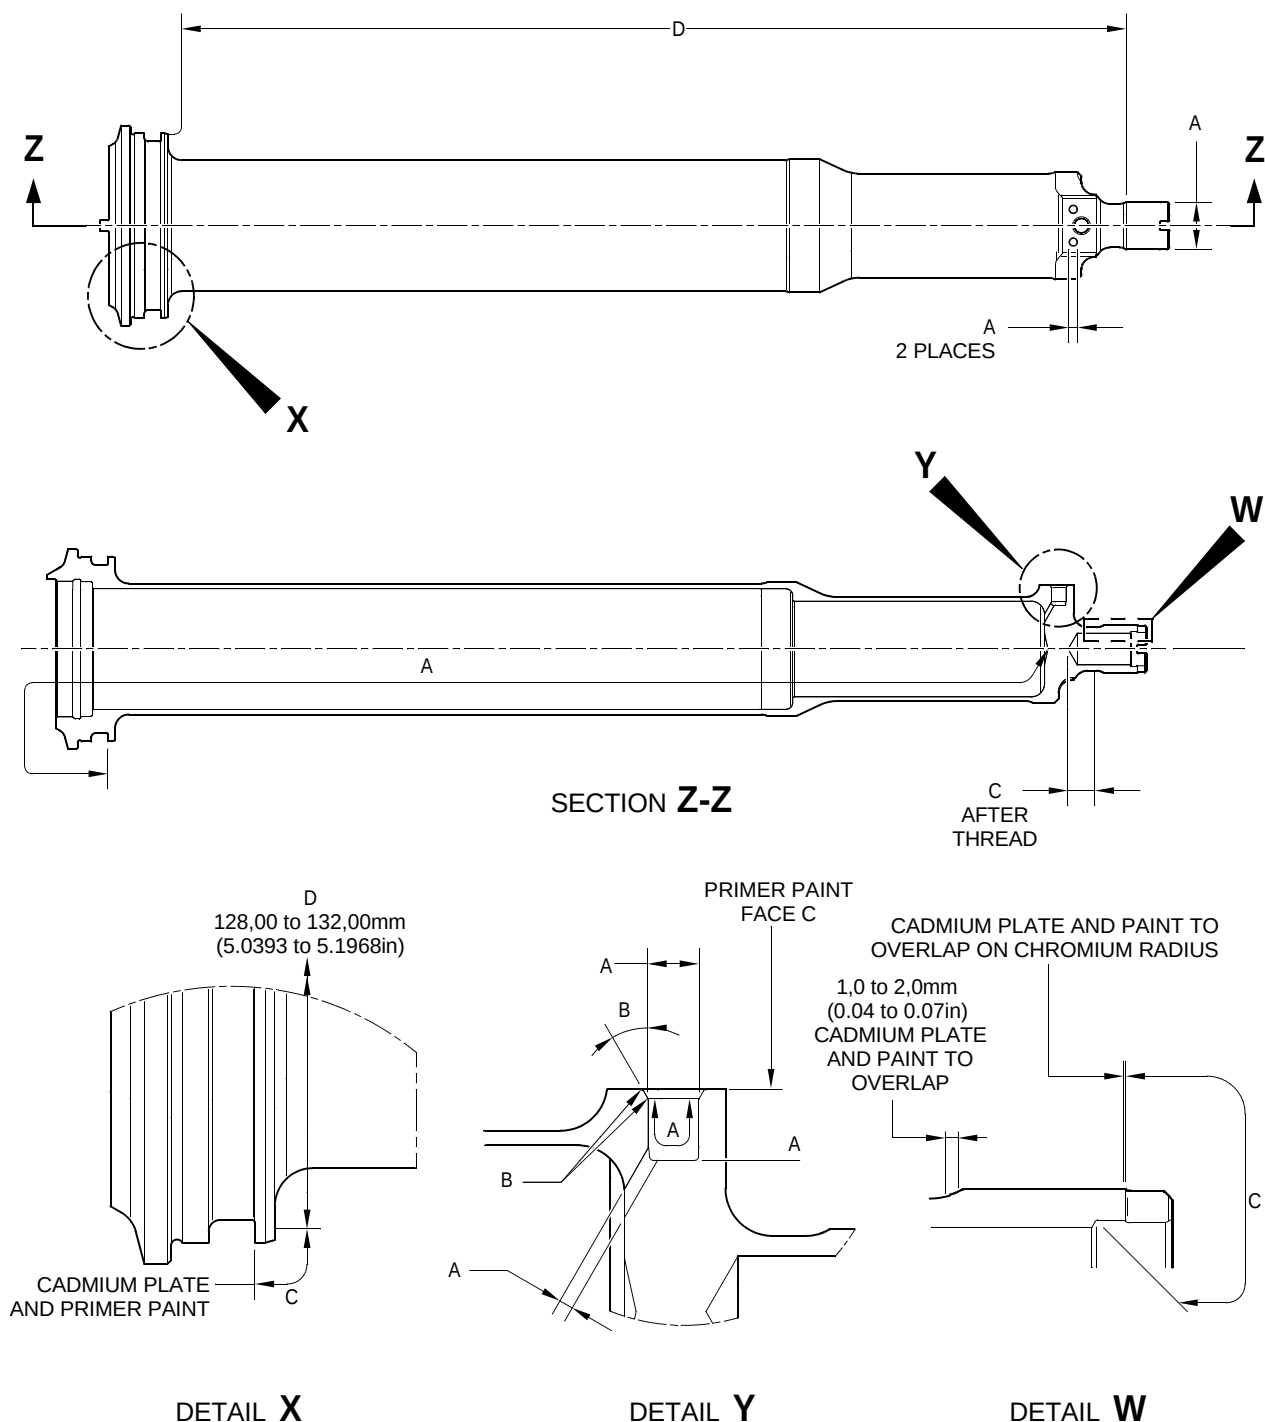

A321-T-32-12-22-110-0

Cylinder (17-230A) - Protective Treatment
Figure 624

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

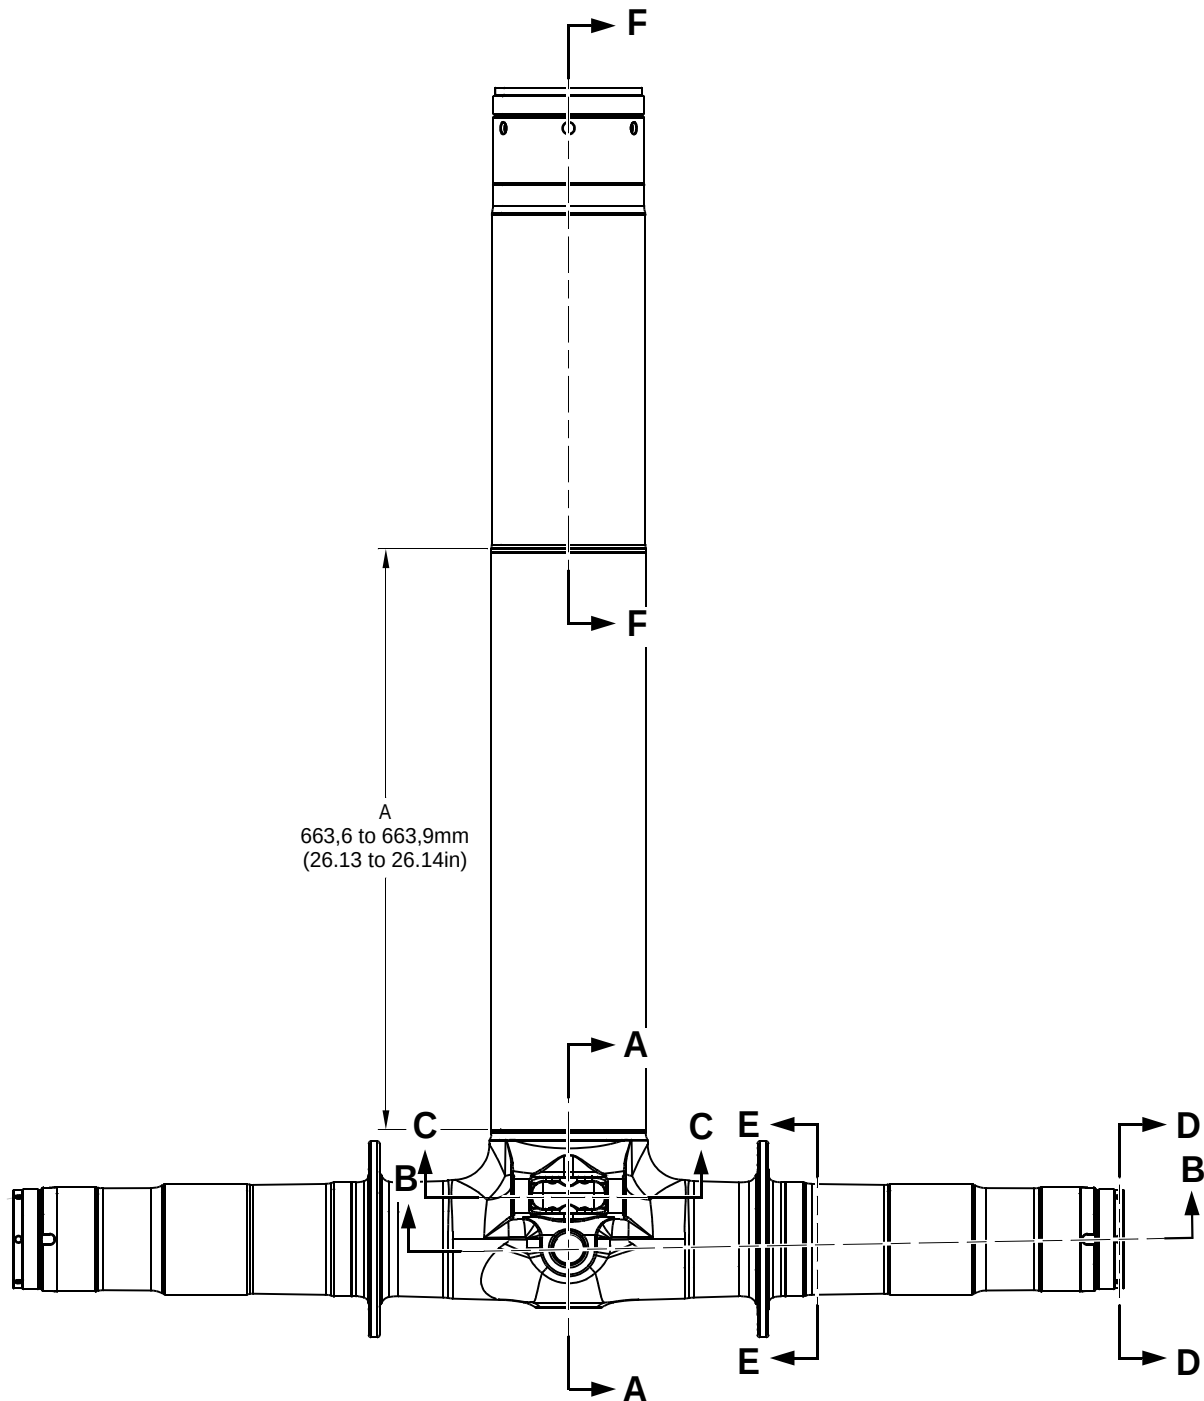

A321-T-32-12-22-125-0


Sliding Tube (18-80B) - Protective Treatment

Figure 625 - Sheet 1

32-12-22

Page 648
Mar 18/2025

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

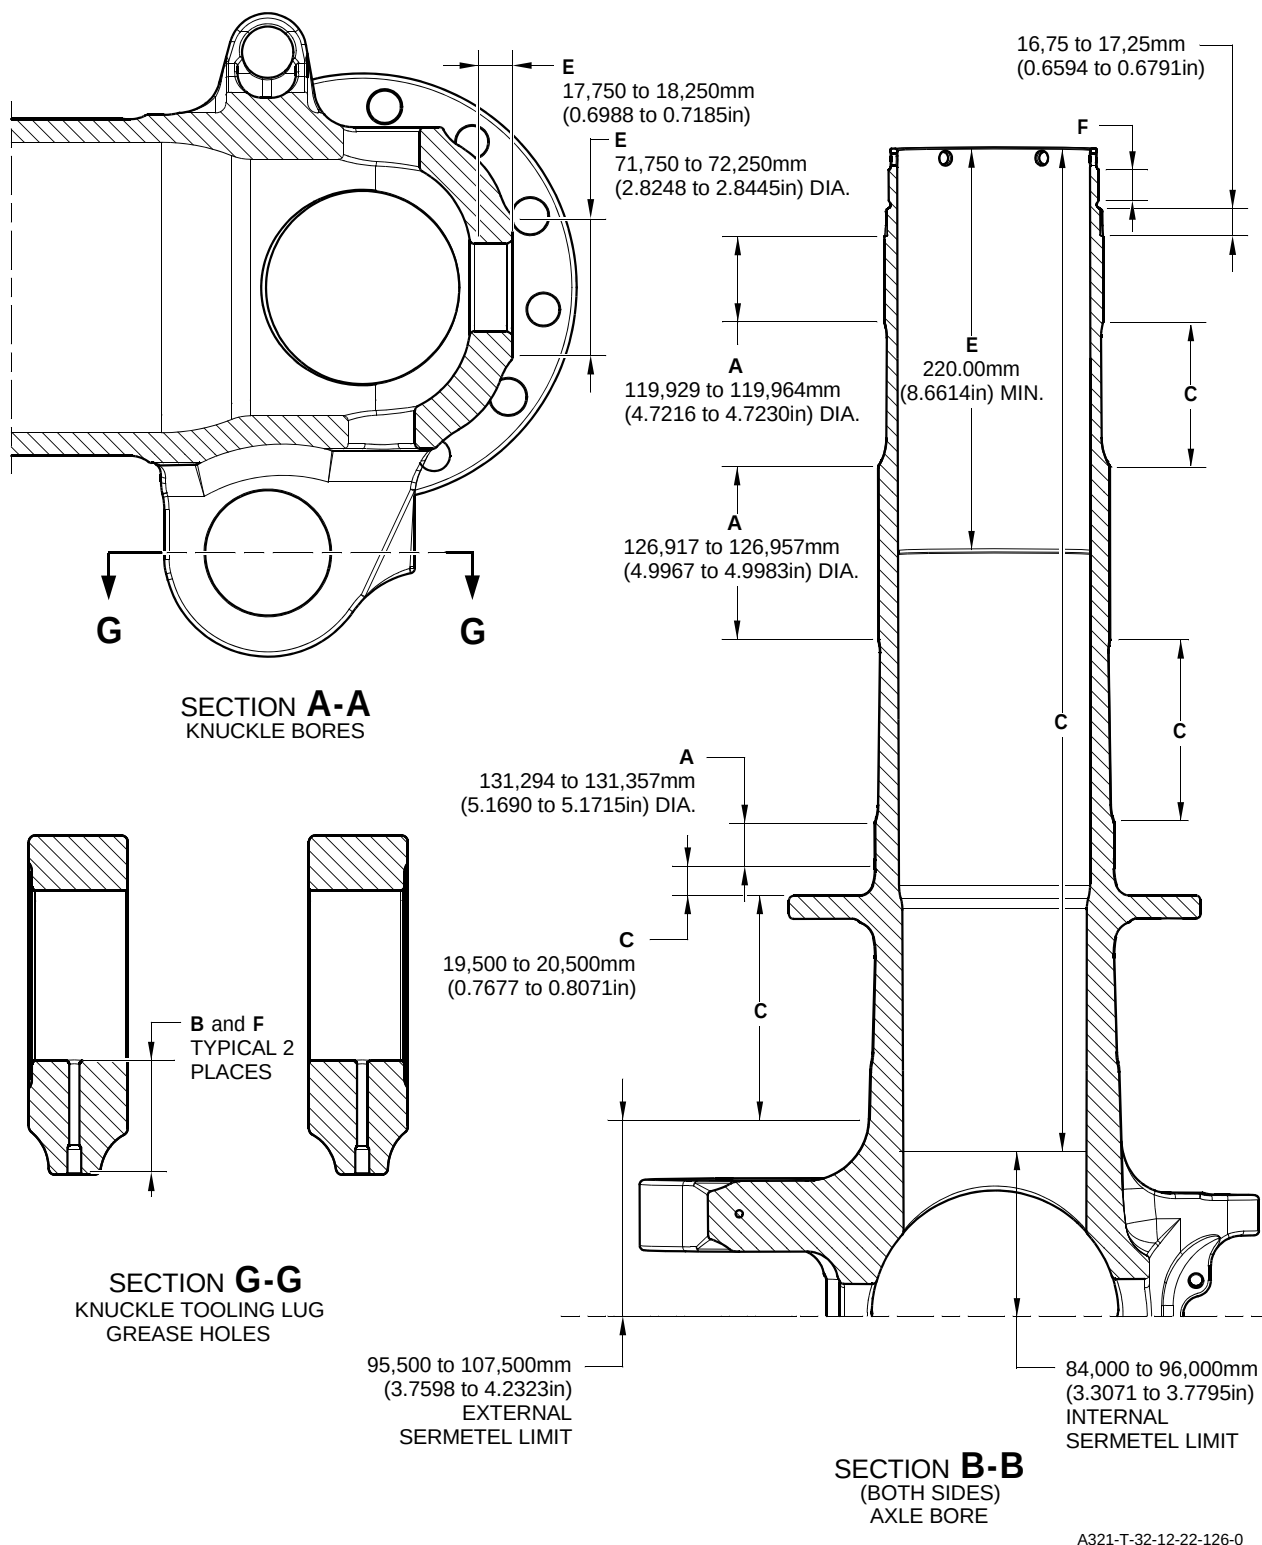


Sliding Tube (18-80B)- Protective Treatment

Figure 625 - Sheet 2

32-12-22

Page 649
Mar 18/2025

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

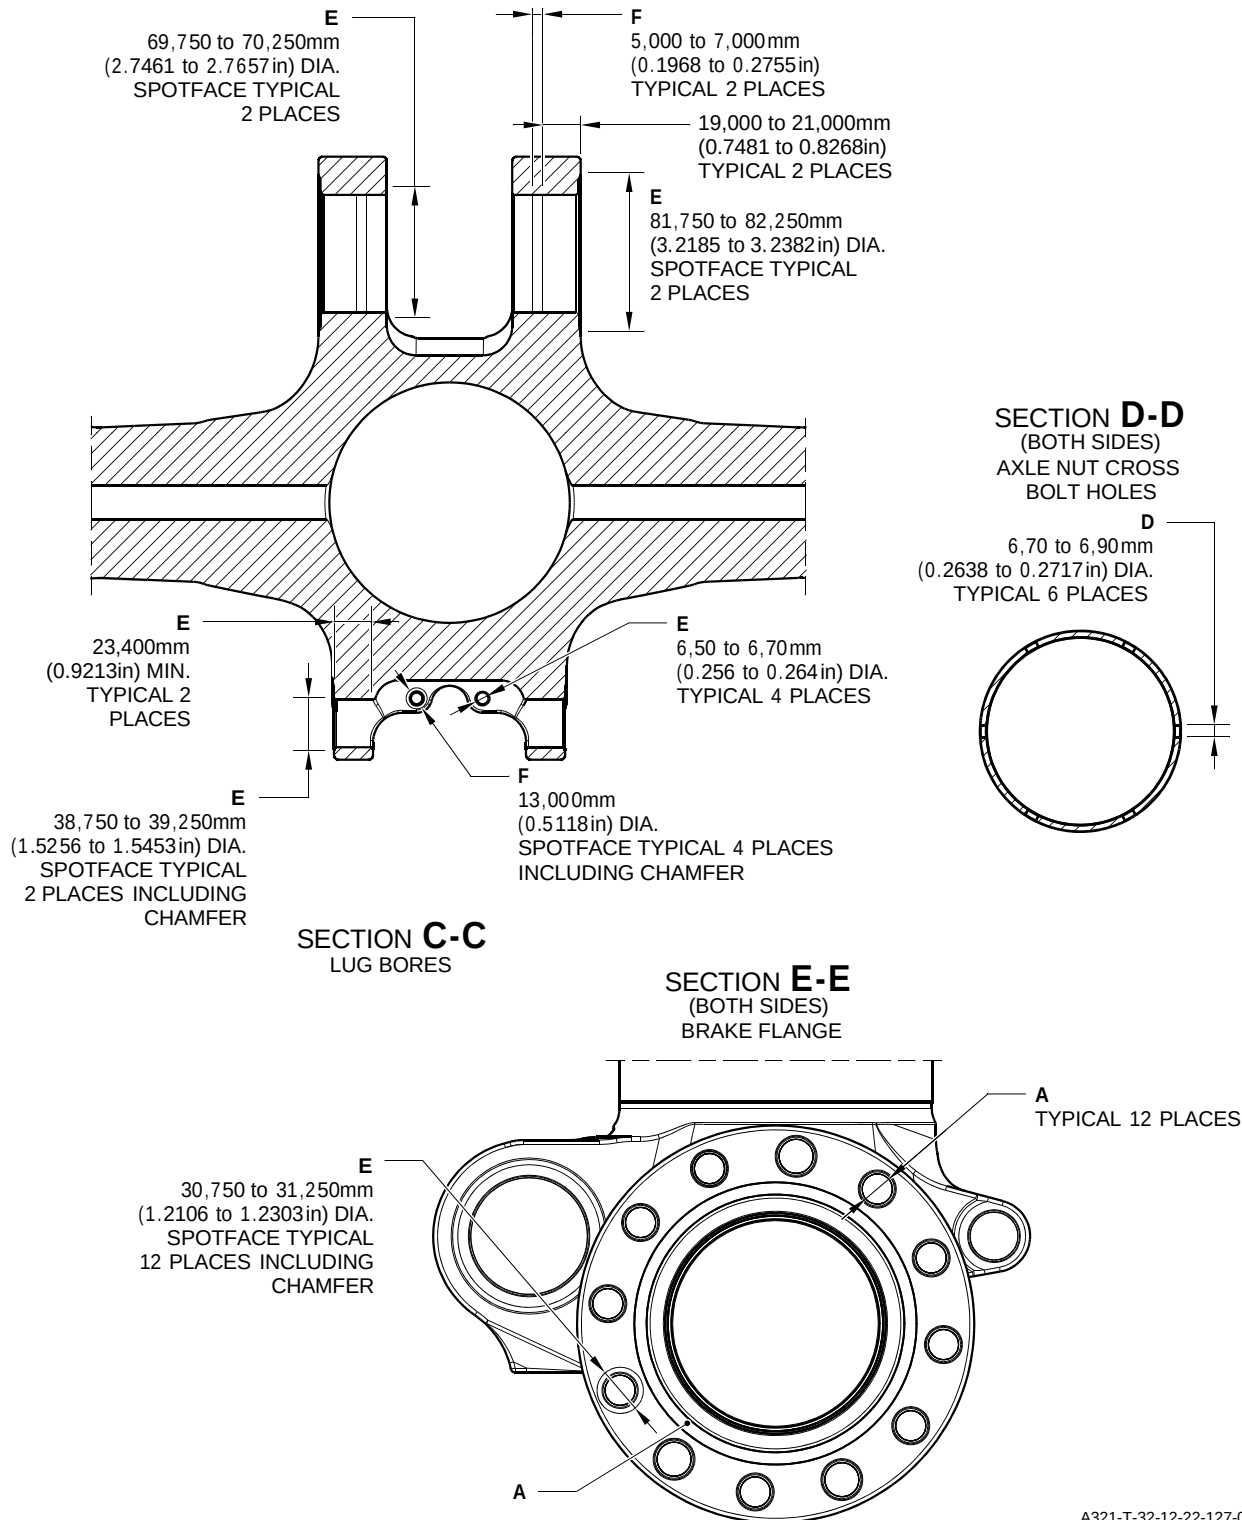



Sliding Tube (18-80B)- Protective Treatment

Figure 625 - Sheet 3

32-12-22

Page 650
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

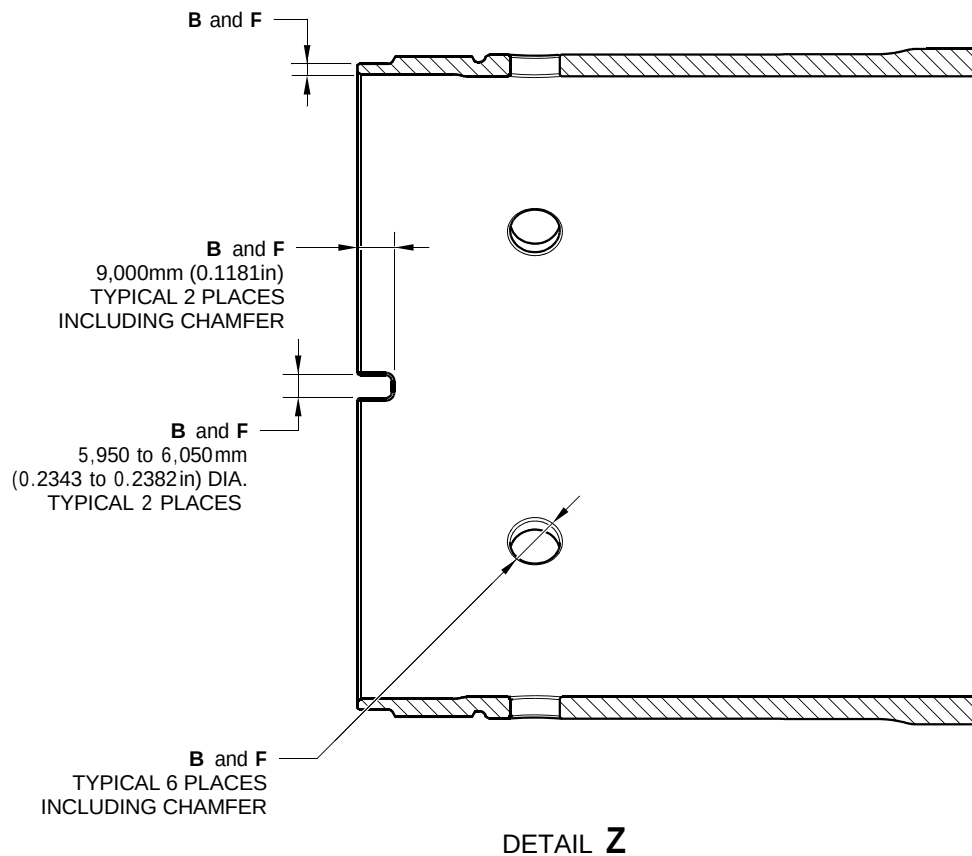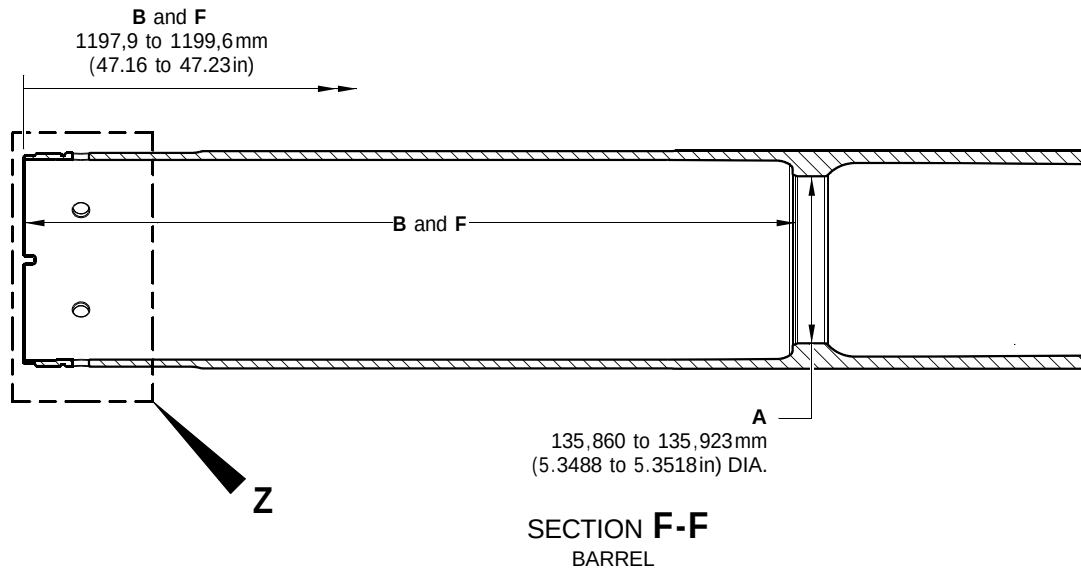

A321-T-32-12-22-128-0



Sliding Tube (18-80B)- Protective Treatment

Figure 625 - Sheet 4

32-12-22

Page 651
Mar 18/2025

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

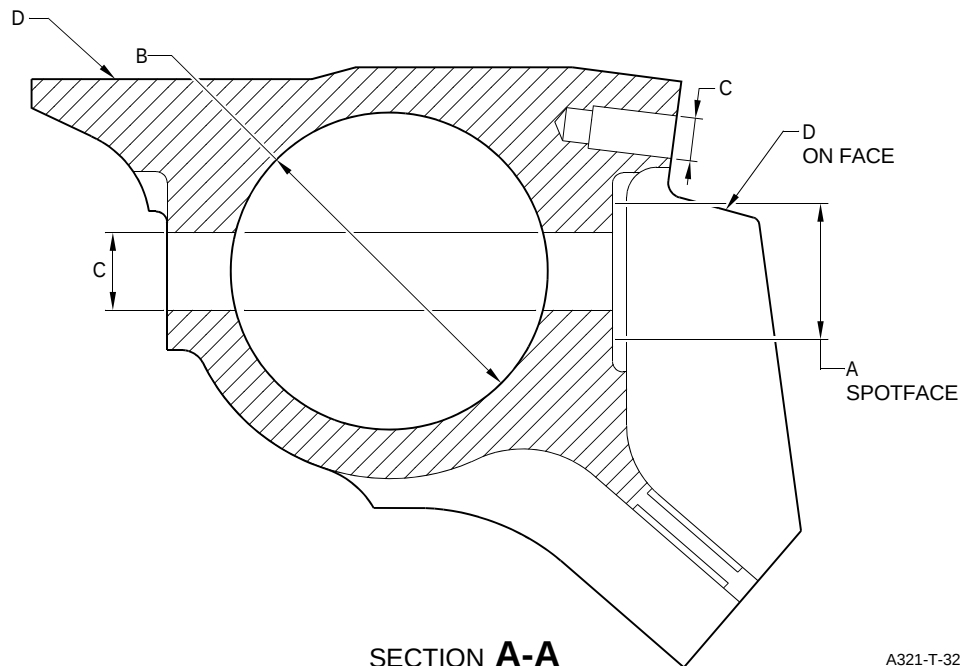
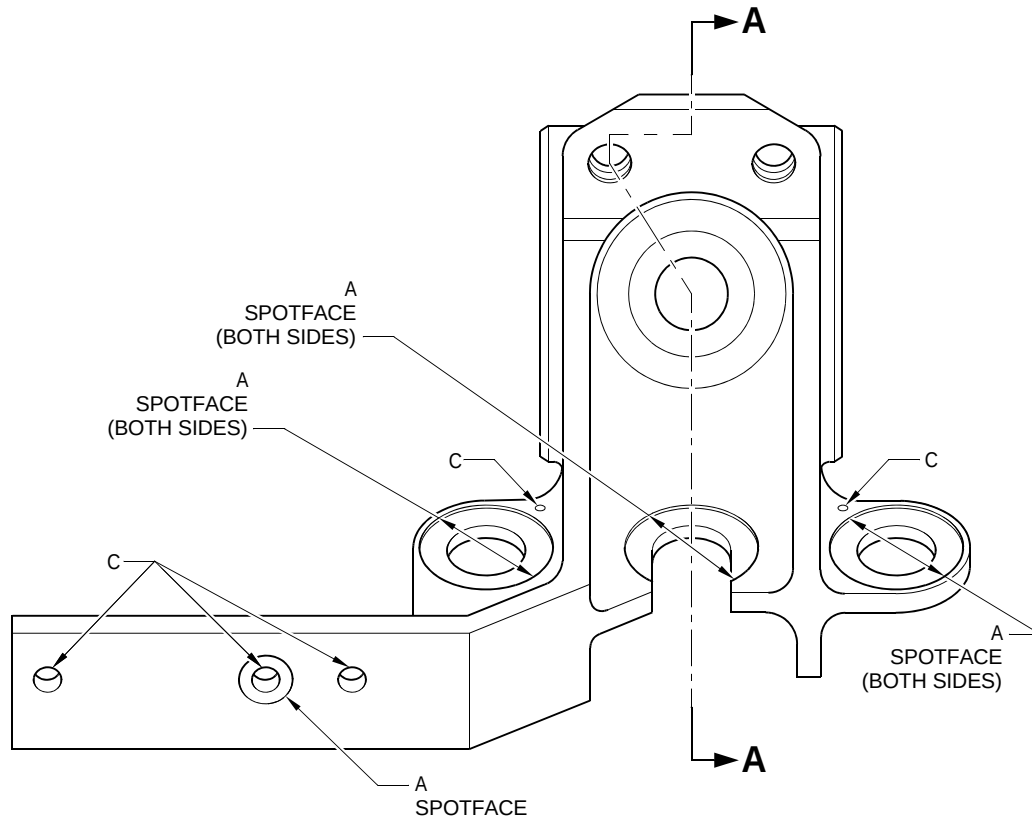


A321-T-321222-0001-01

Upper Pivot Bracket (10-160) Only - Protective Treatment

Figure 626

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

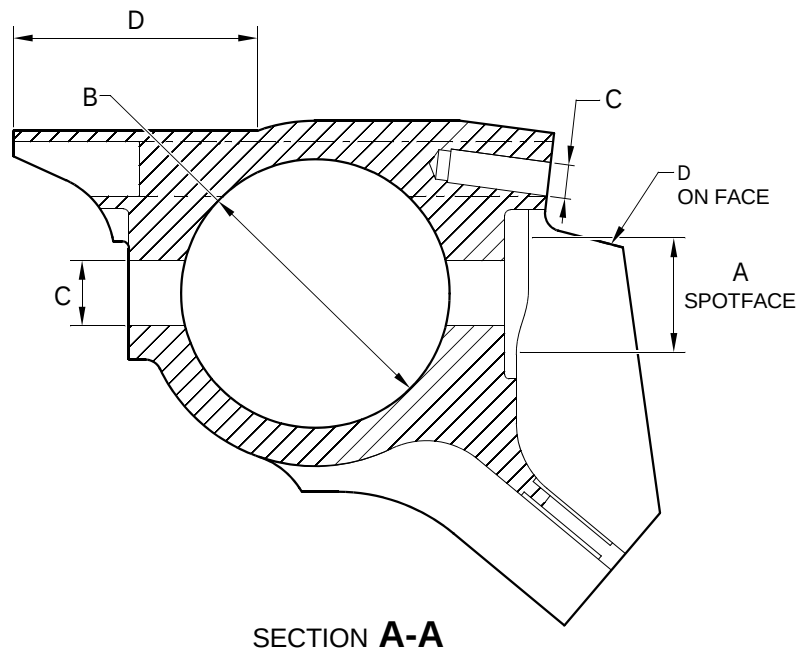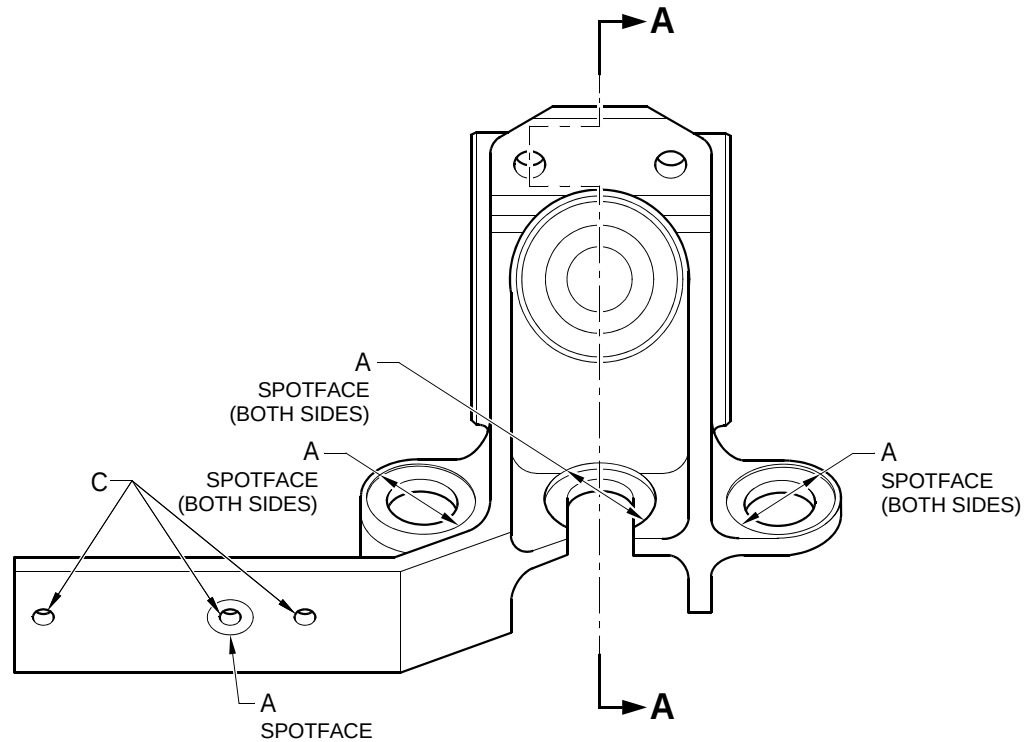

A321-T-321222-0002-01


Upper Pivot Bracket (10-160A) - Protective Treatment

Figure 627

32-12-22

Page 653
Mar 18/2025

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**


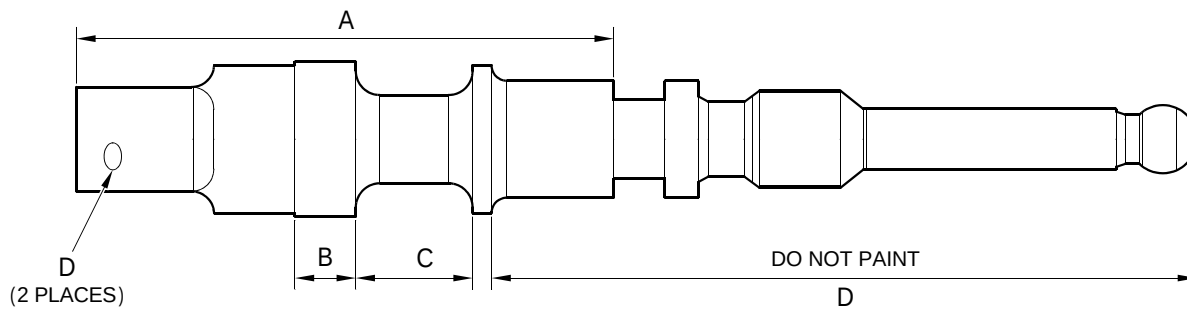


A321-T-321222-0003-00

Valve Stem (12-90A) - Protective Treatment

Figure 628

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

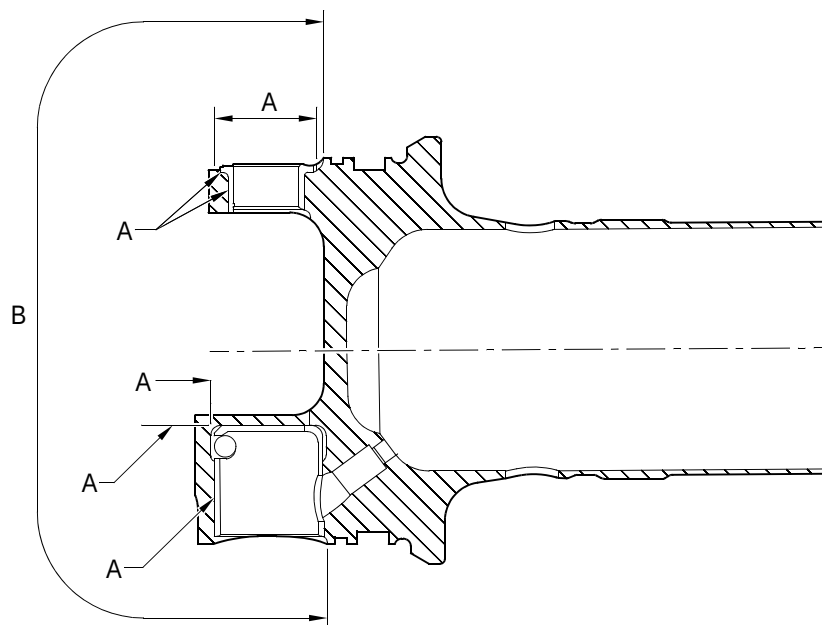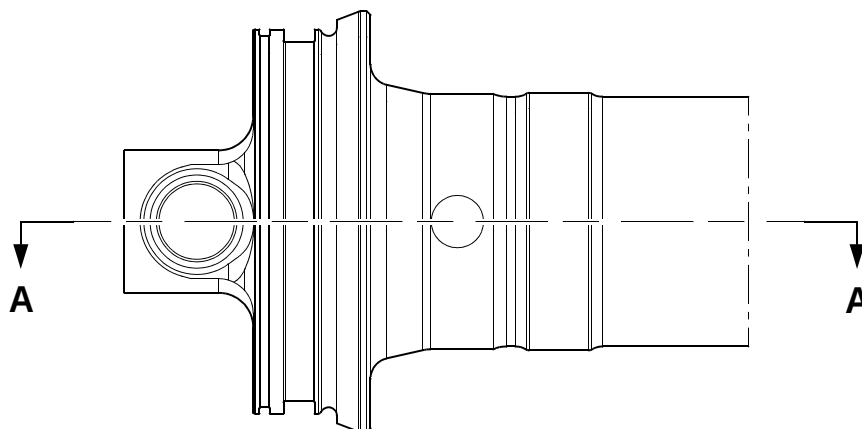


SECTION **A-A**

A321-T-321222-0004-00

Upper Diaphragm Tube Subassembly (15-360) - Protective Treatment

Figure 629

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG


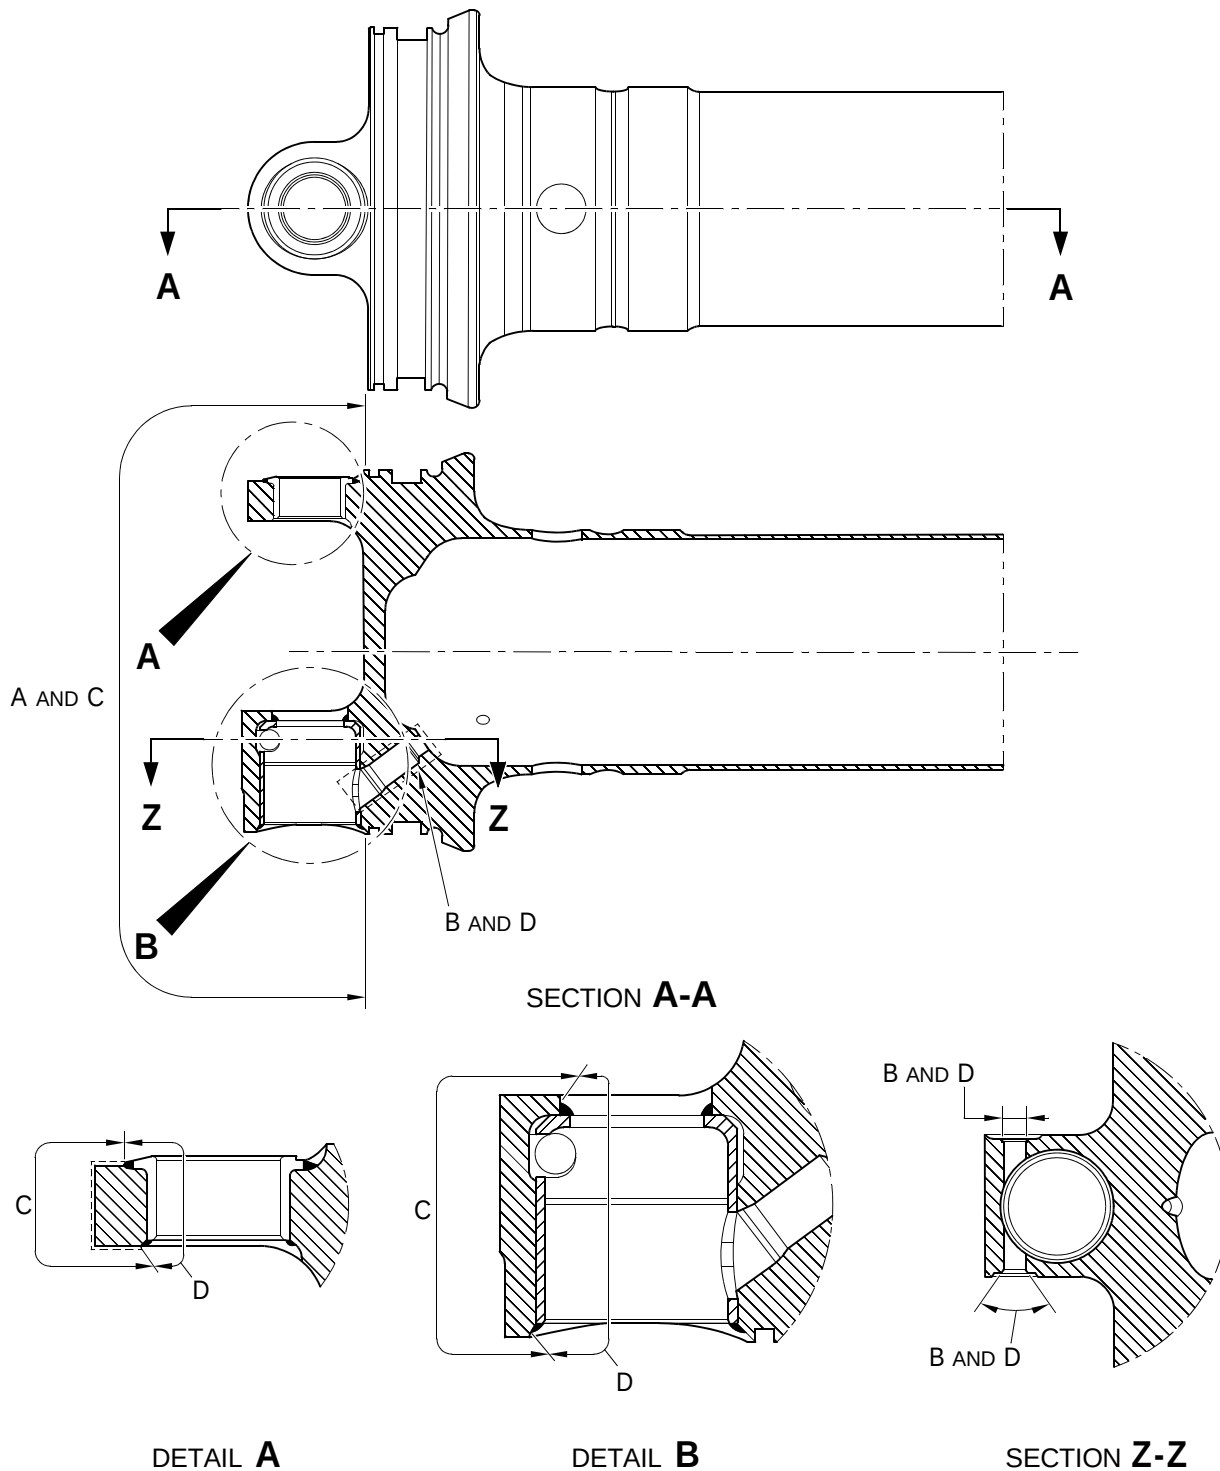


A321-T-321222-0005-00

Upper Diaphragm Tube Subassembly (15-360A) - Protective Treatment

Figure 630

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

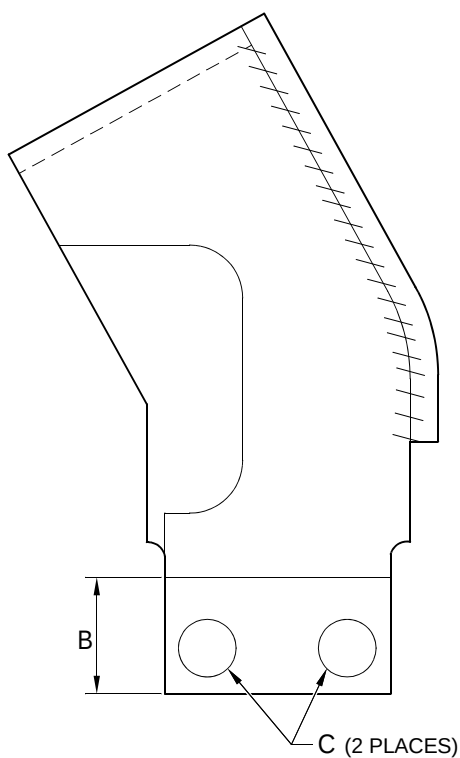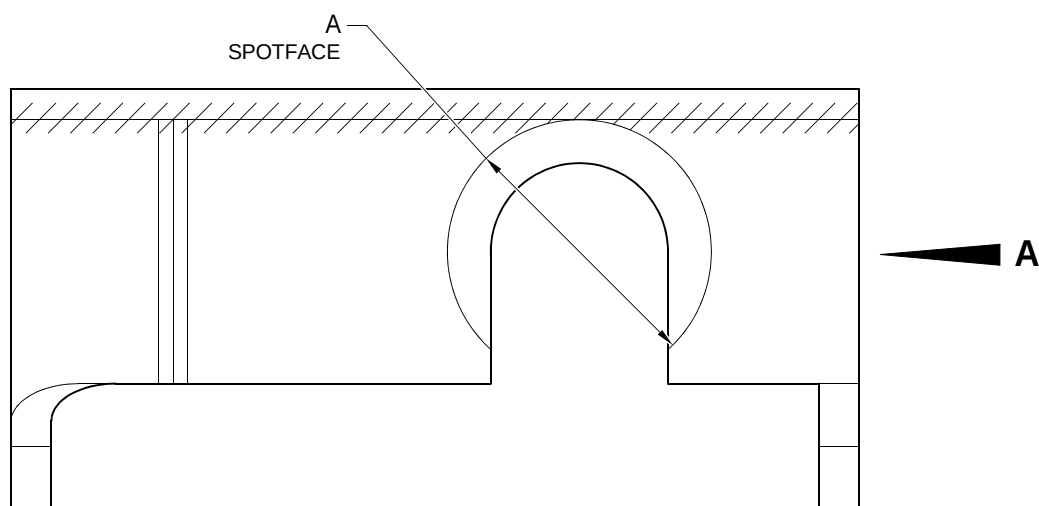


VIEW A

A321-T-321222-0006-00

Bracket (2-80 and 2-90) - Protective Treatment

Figure 631

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

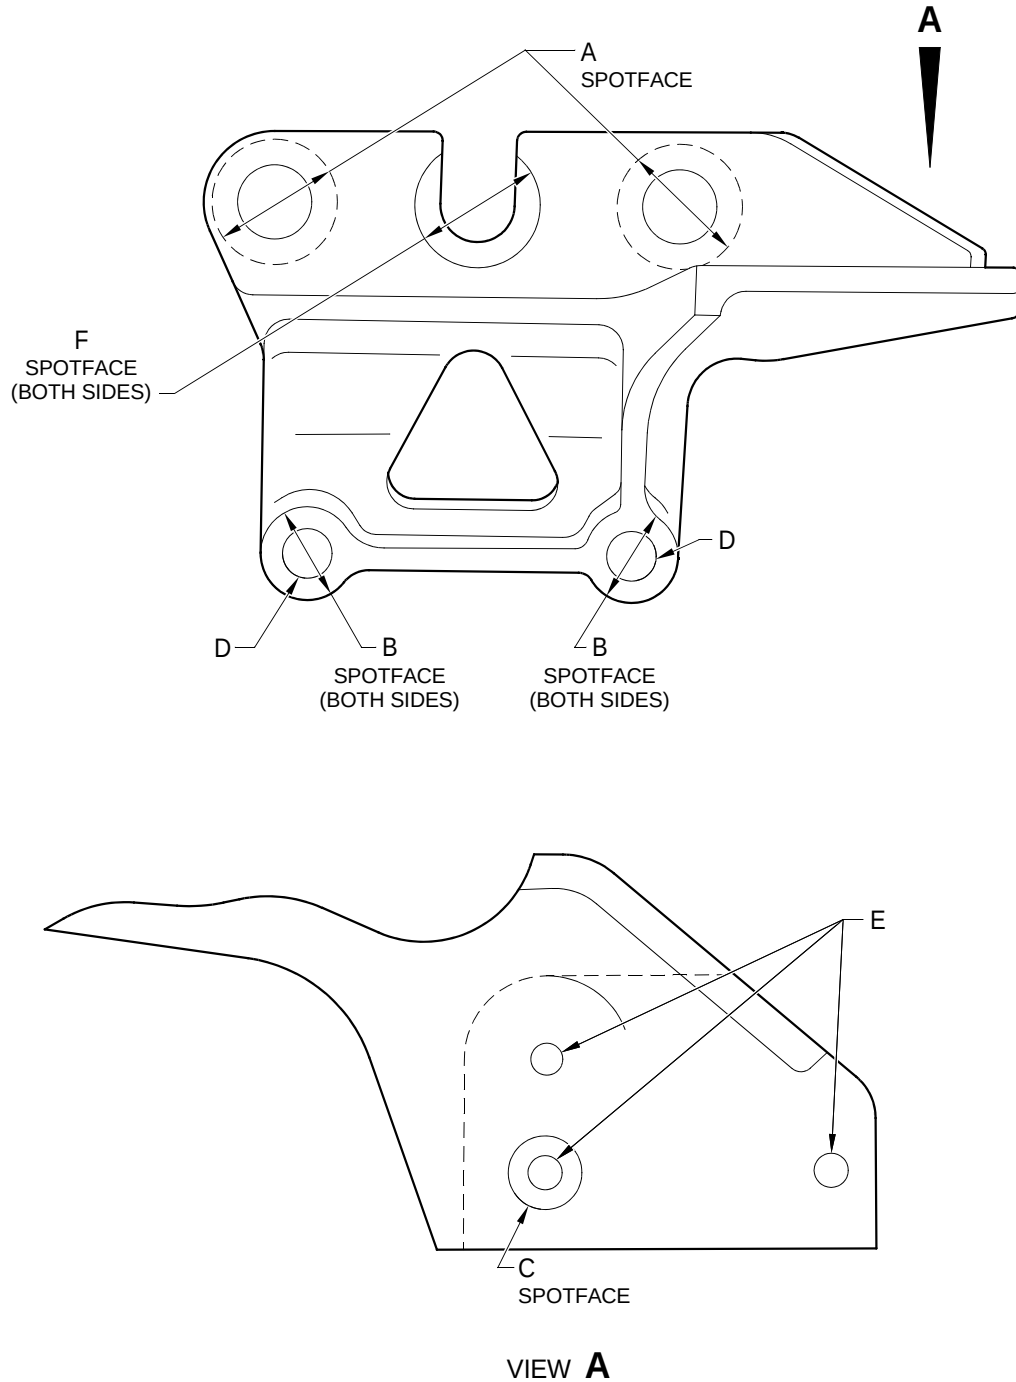


A321-T-321222-0007-00

Harness Support Bracket (7-100, 7-100A, 7-110 and 7-110A) - Protective Treatment

Figure 632

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

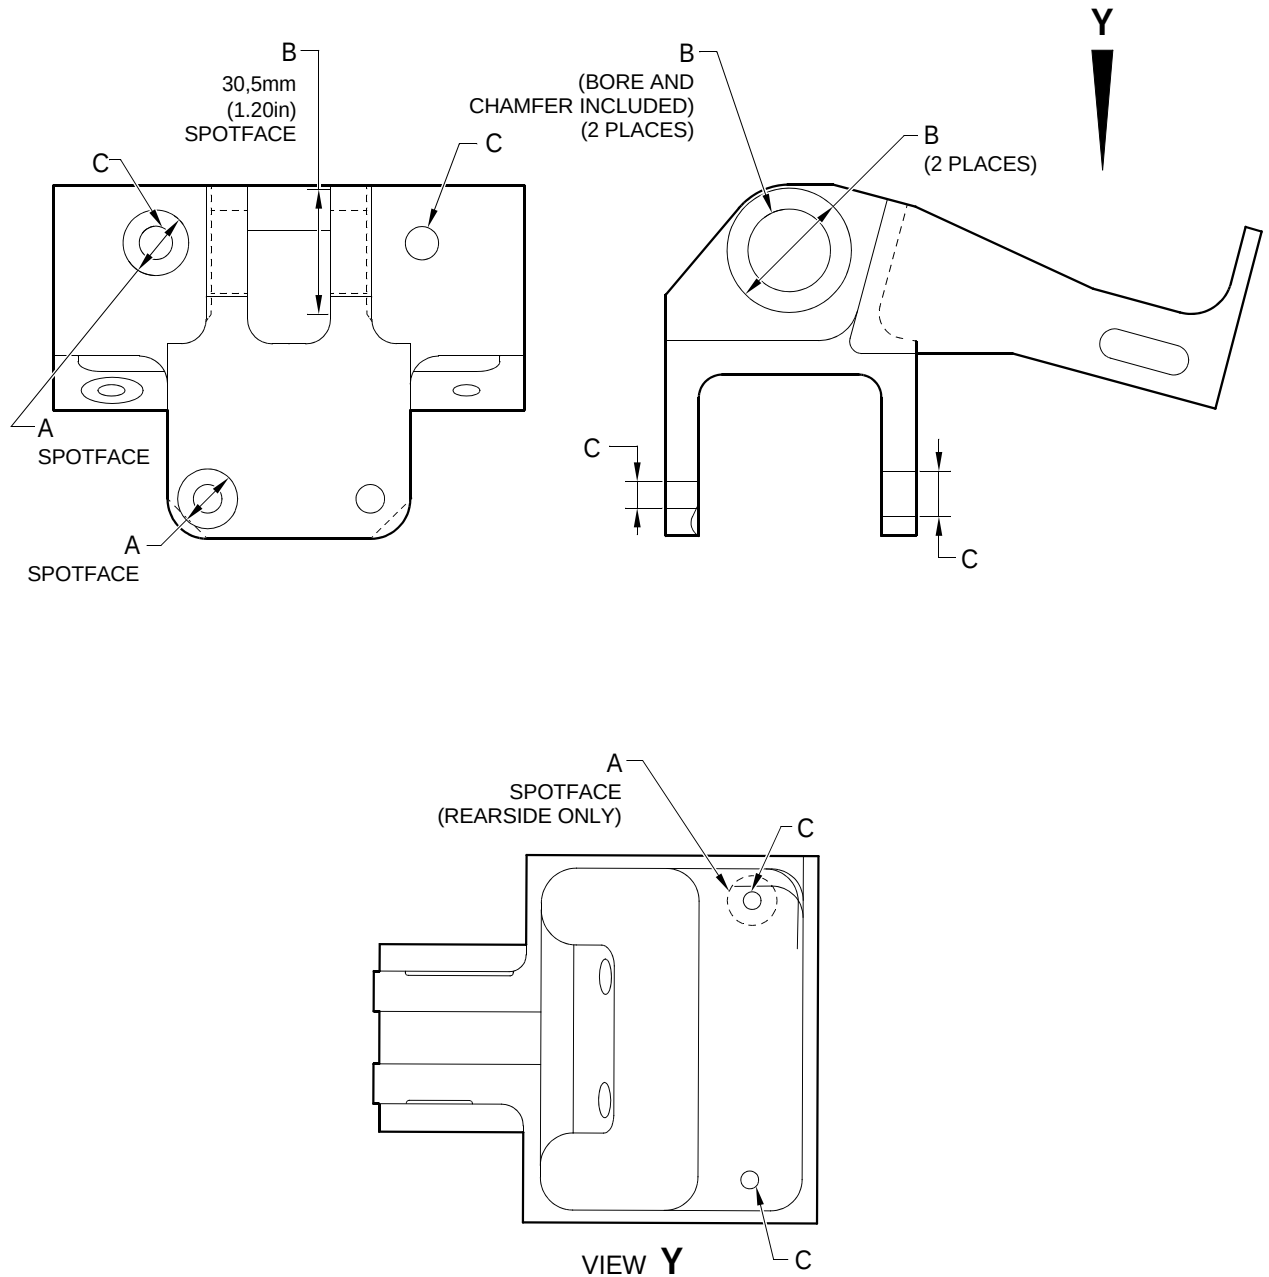


A321-T-321222-0009-00

Bracket (8-170) - Protective Treatment

Figure 633

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

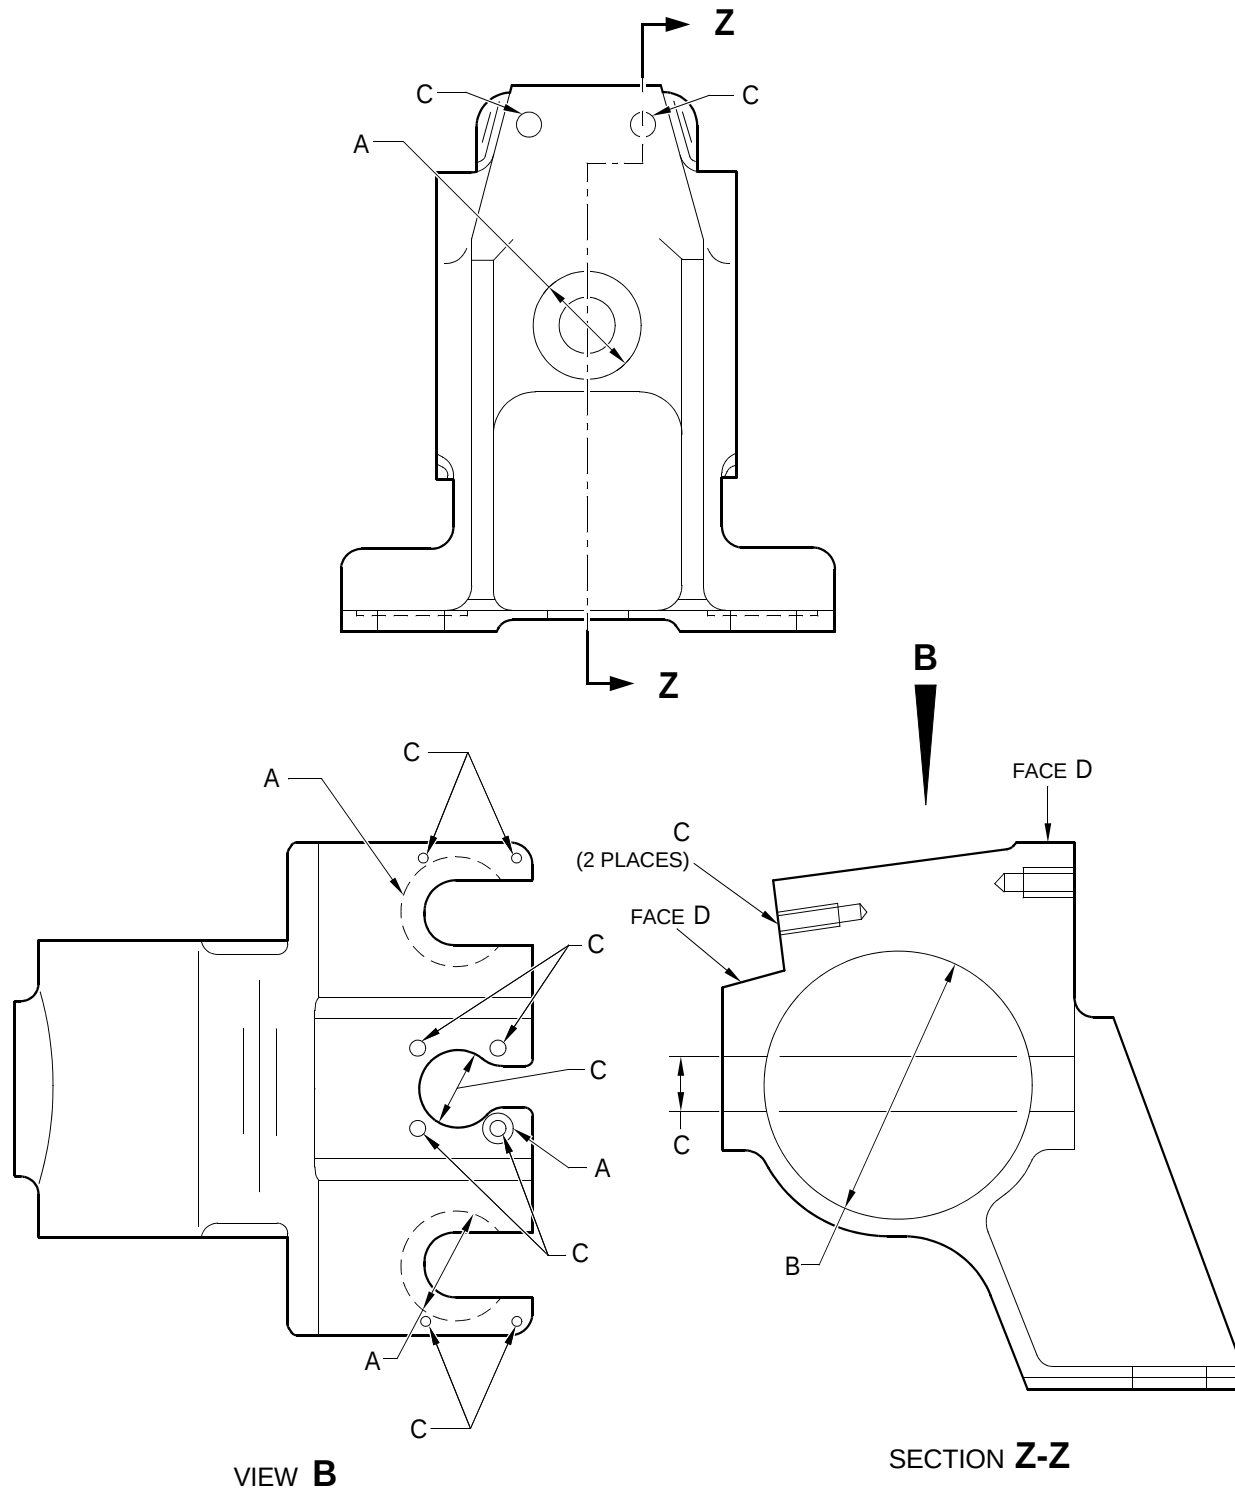


A321-T-321222-0010-00

Harness Support Bracket (11-140) - Protective Treatment

Figure 634

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

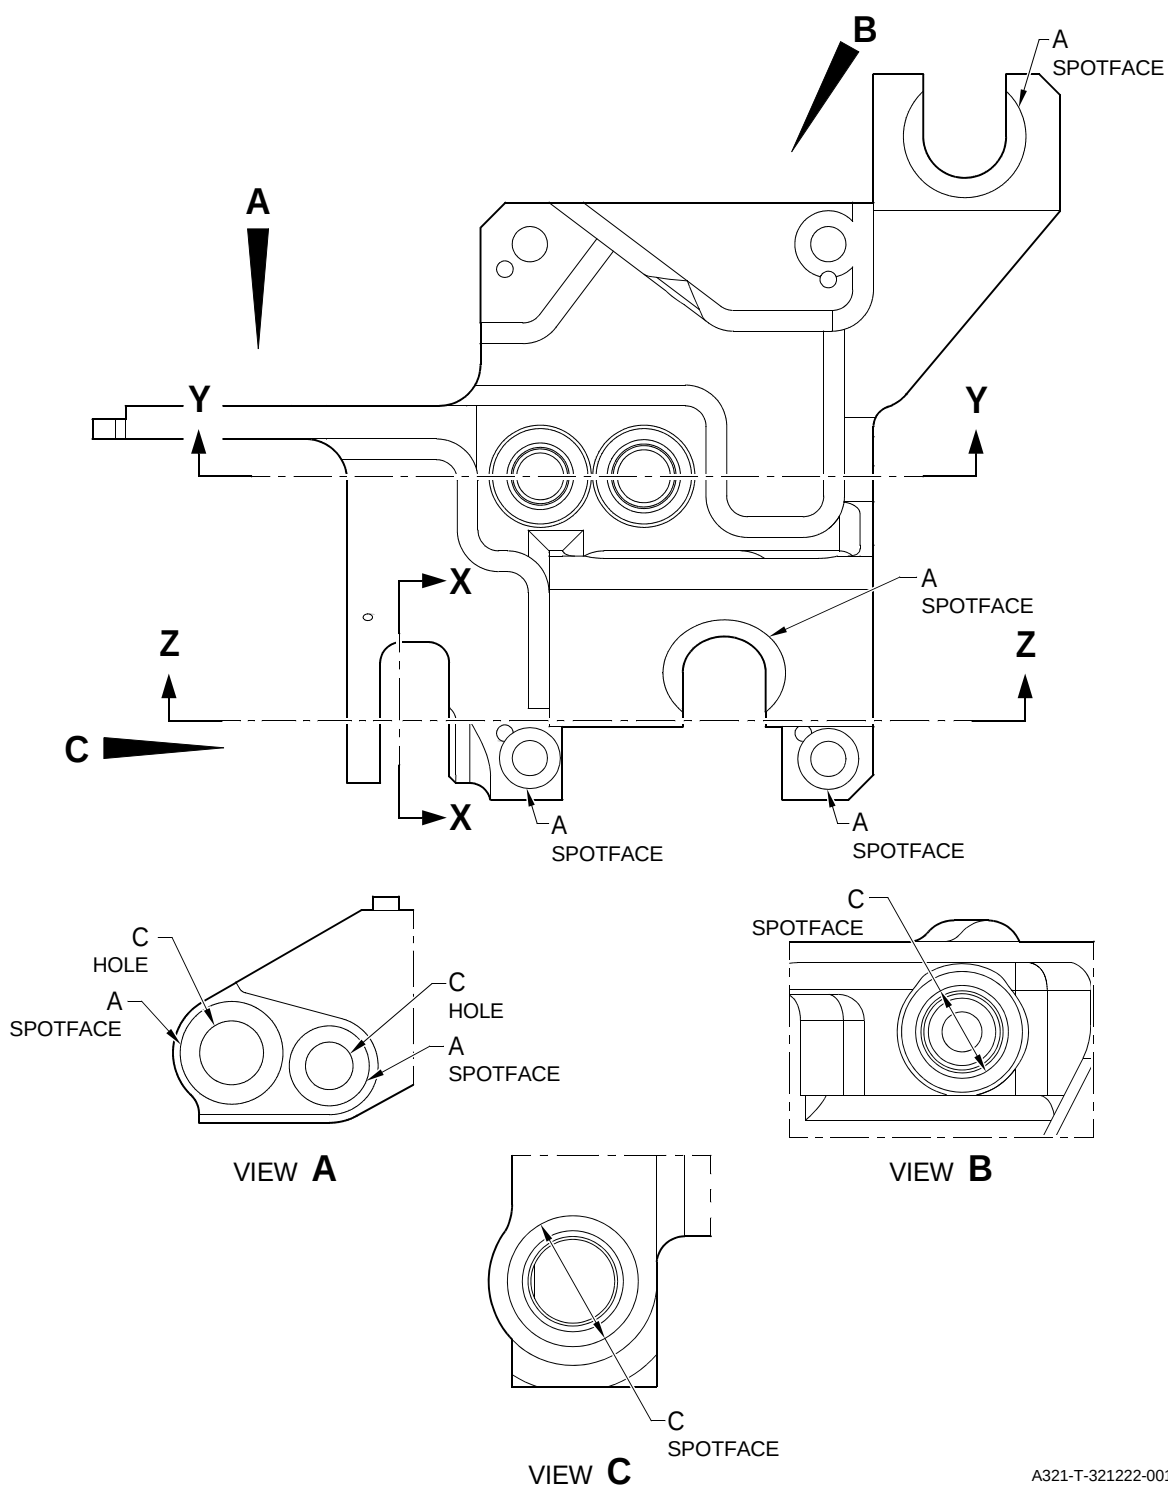

A321-T-321222-0012-00


Transfer Block (2-340B and 2-350B) - Protective Treatment

Figure 635 - Sheet 1

32-12-22

Page 661
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

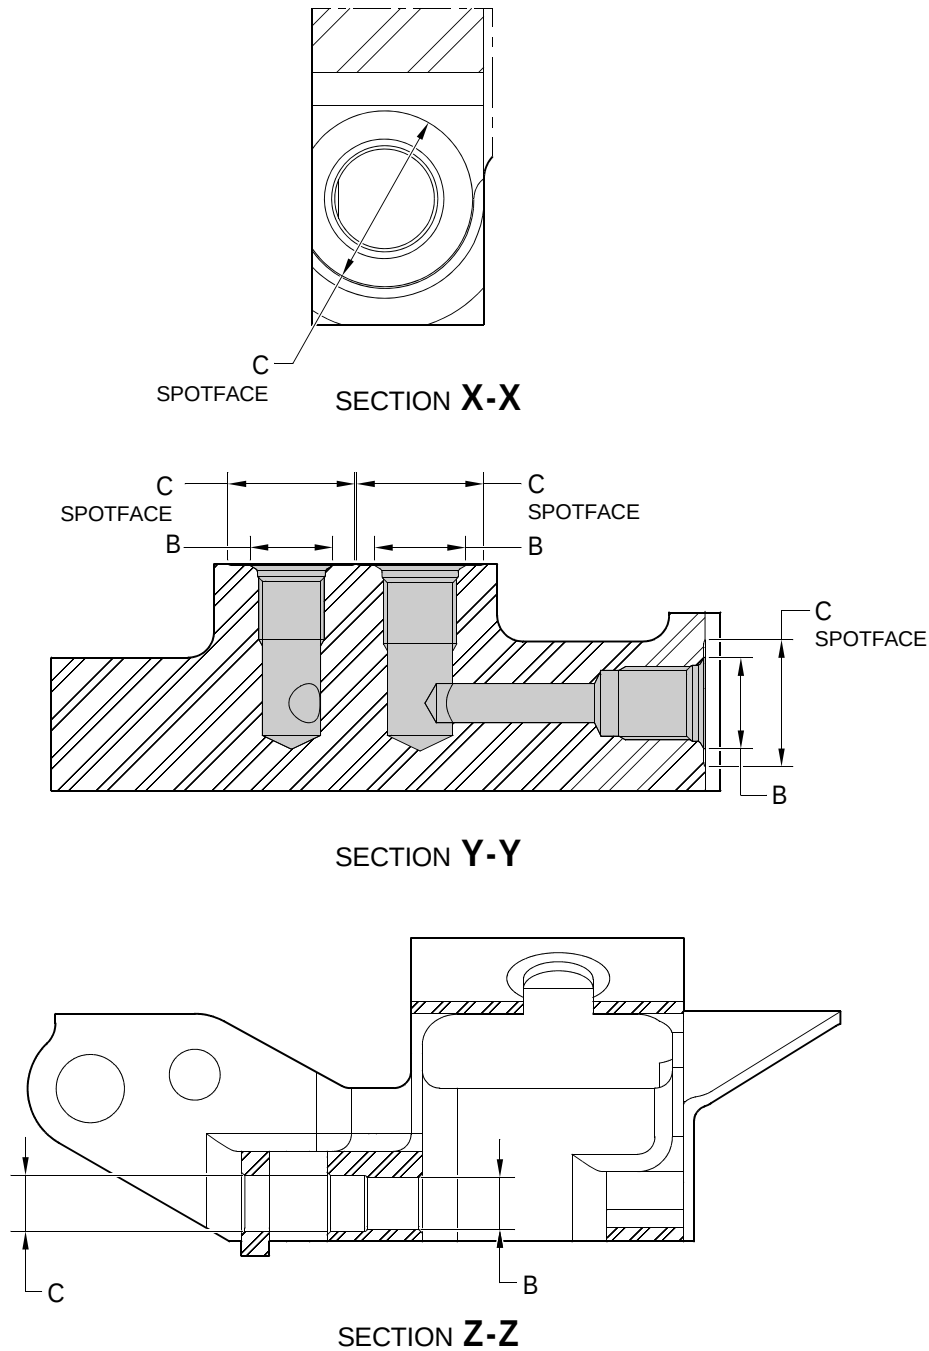

A321-T-321222-0008-00


Transfer Block (2-340B and 2-350B) - Protective Treatment

Figure 635 - Sheet 2

32-12-22

Page 662
Mar 18/2025


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

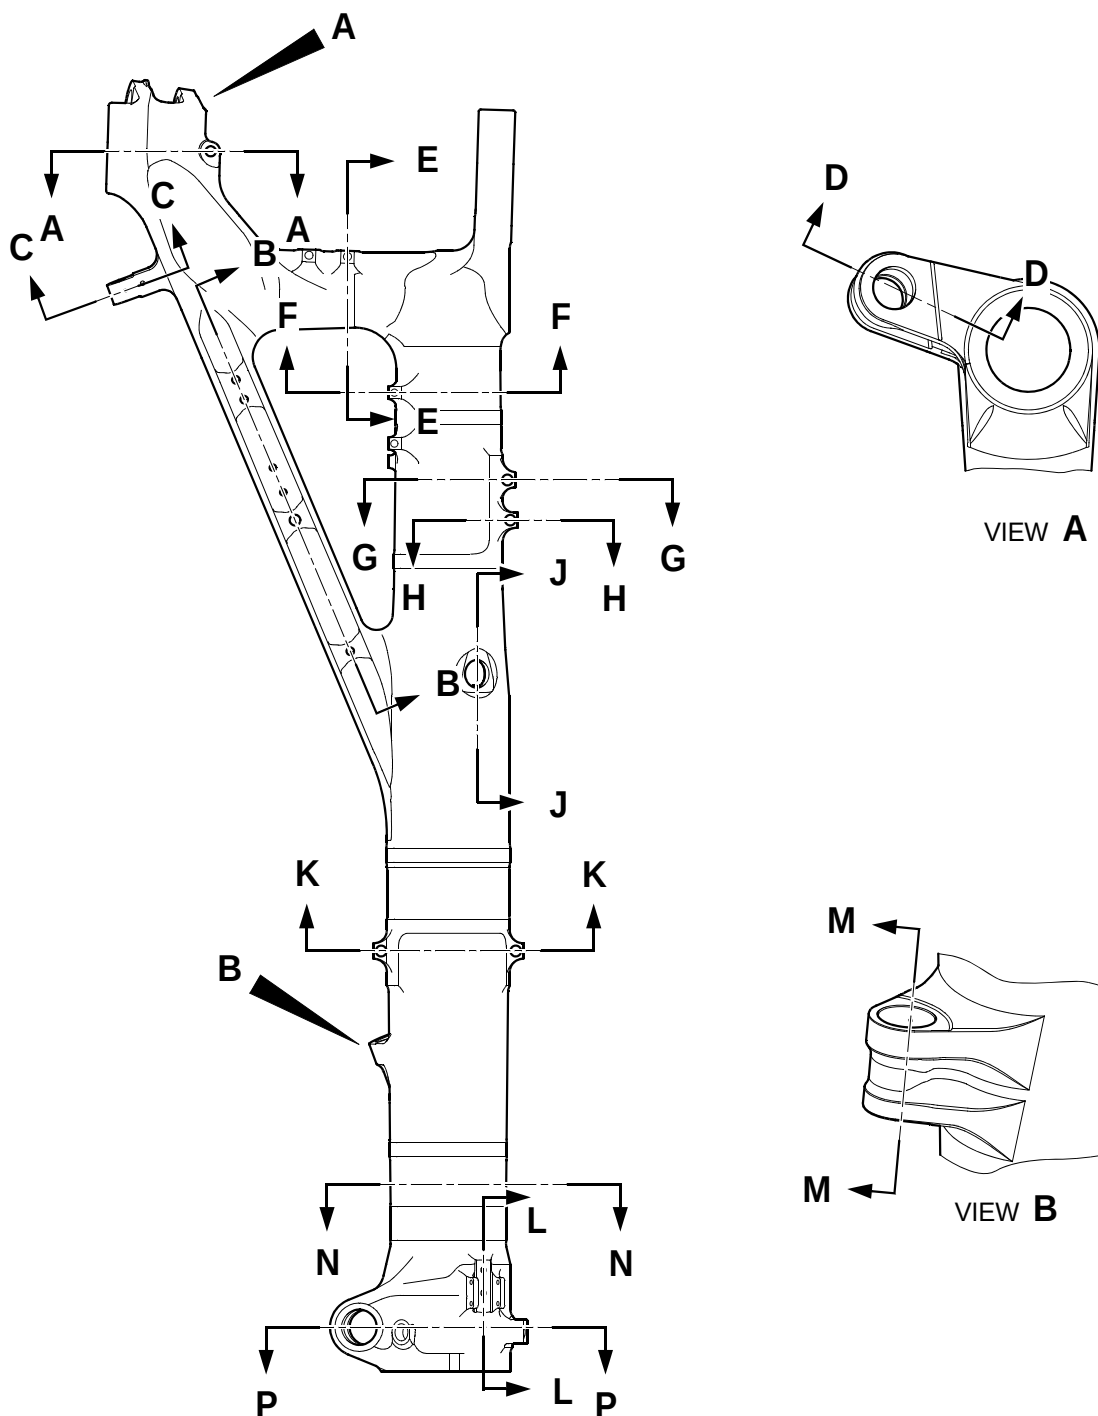

A321-T-321222-0020-00


Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment
Figure 636 - Sheet 1

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

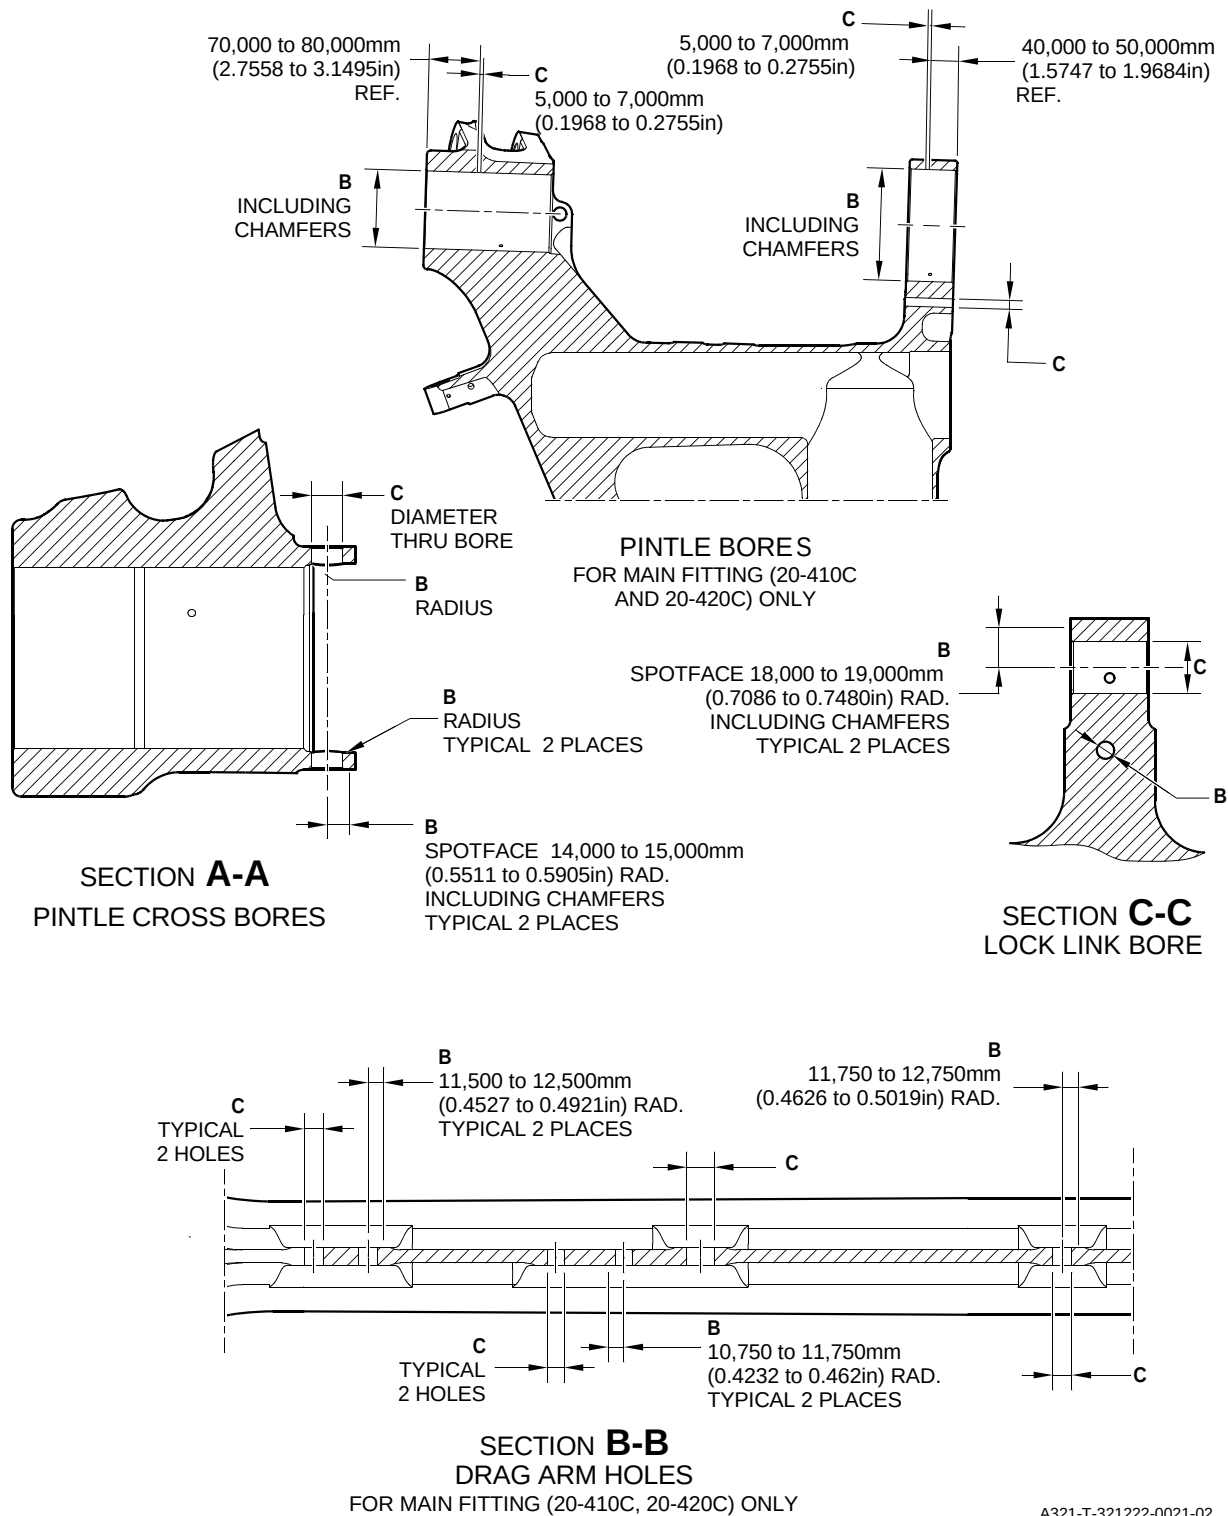

Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment
Figure 636 - Sheet 2


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

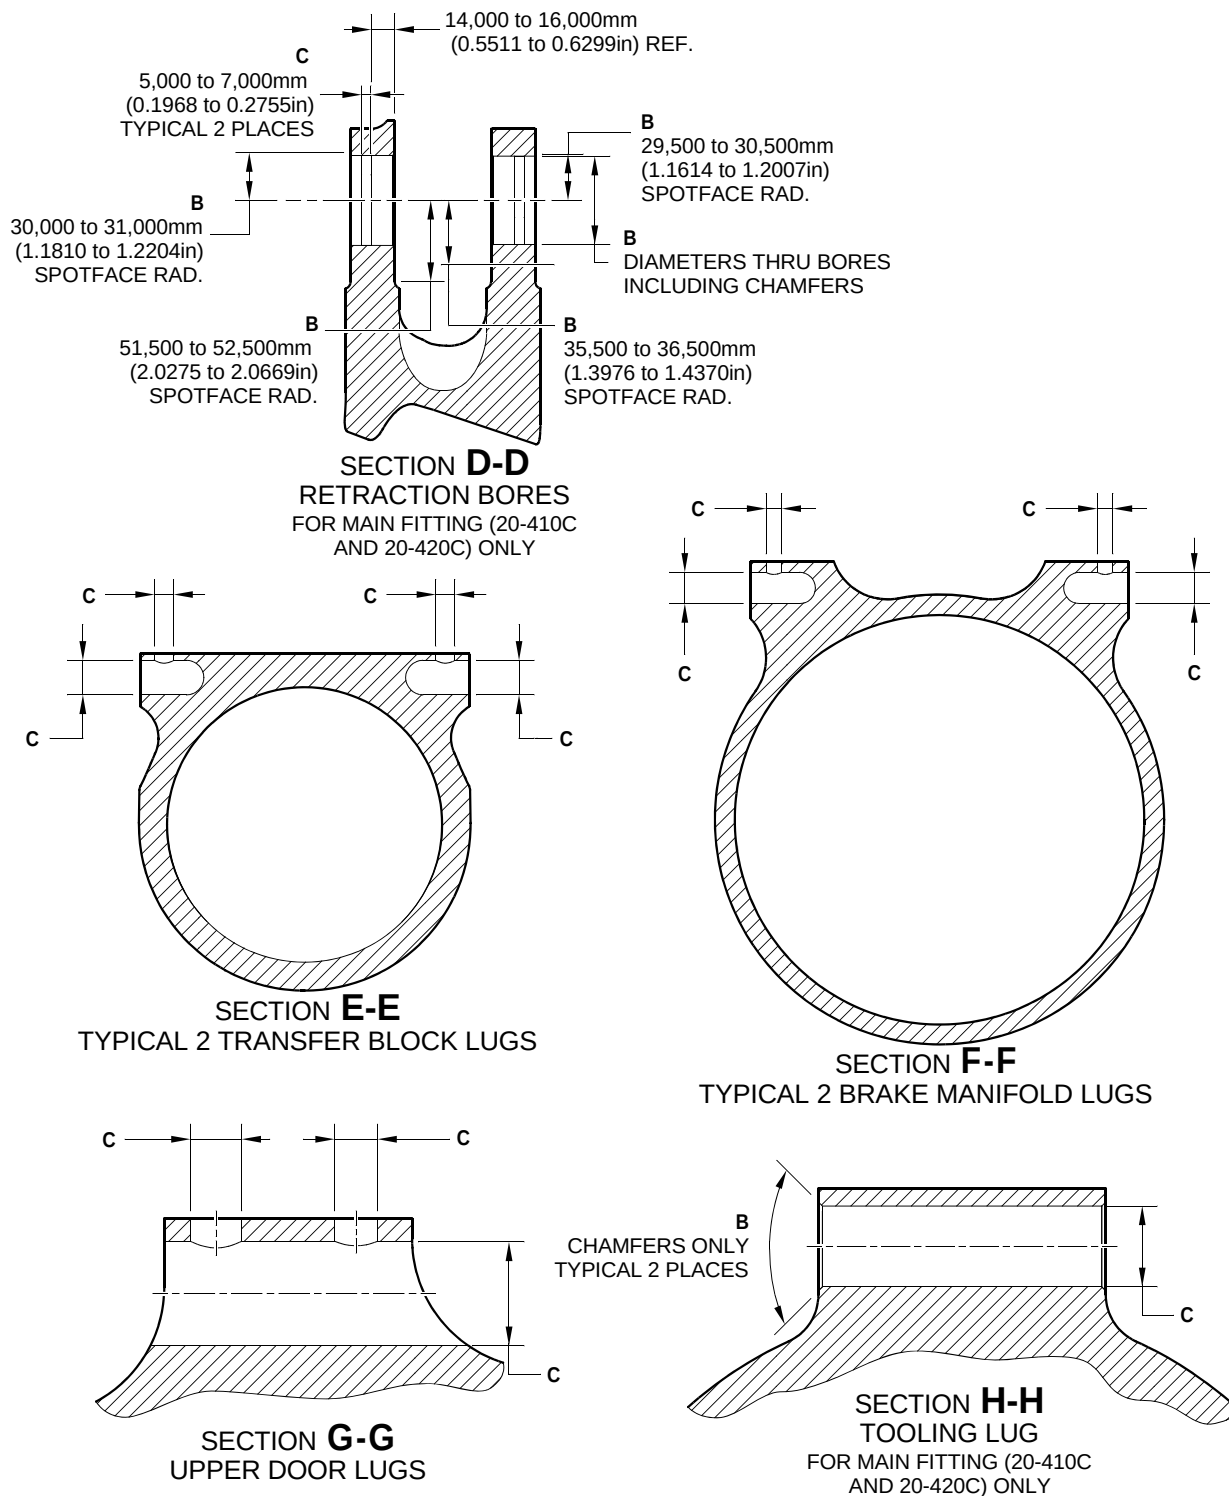

A321-T-321222-0022-01

Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment
Figure 636 - Sheet 3


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

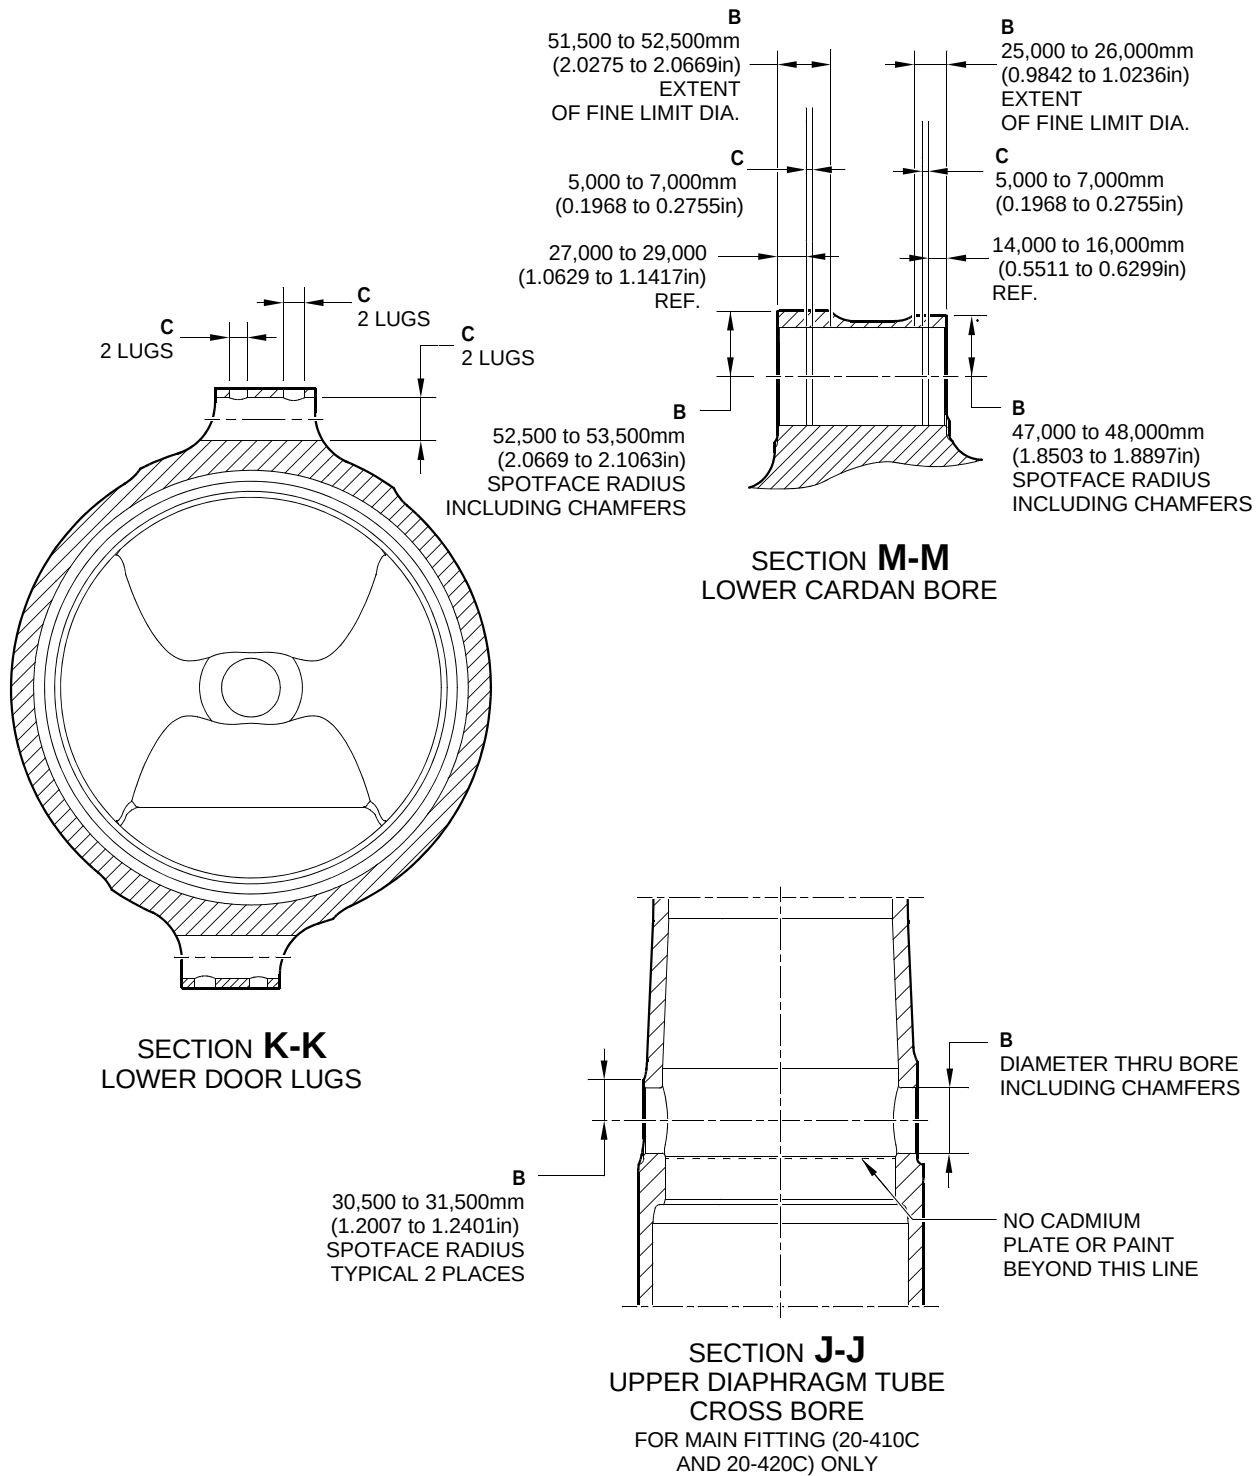

A321-T-321222-0023-01

Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment
Figure 636 - Sheet 4


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

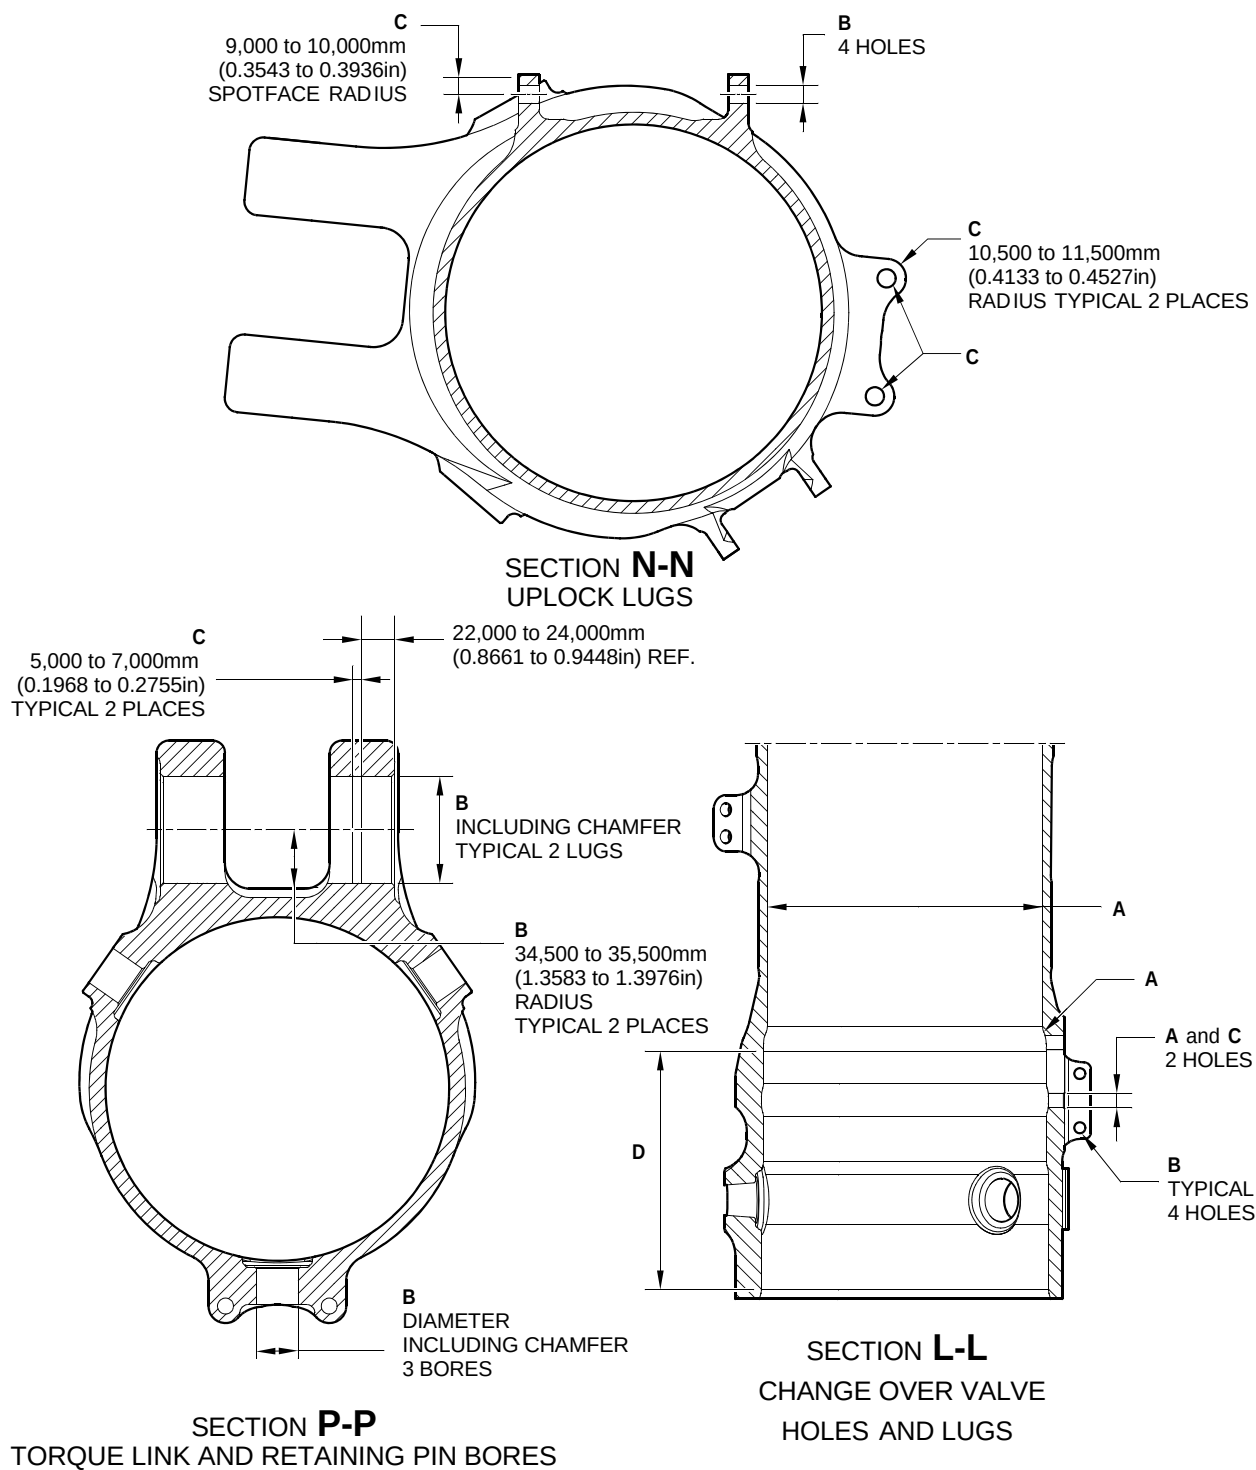

A321-T-321222-0024-01

Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment
Figure 636 - Sheet 5


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

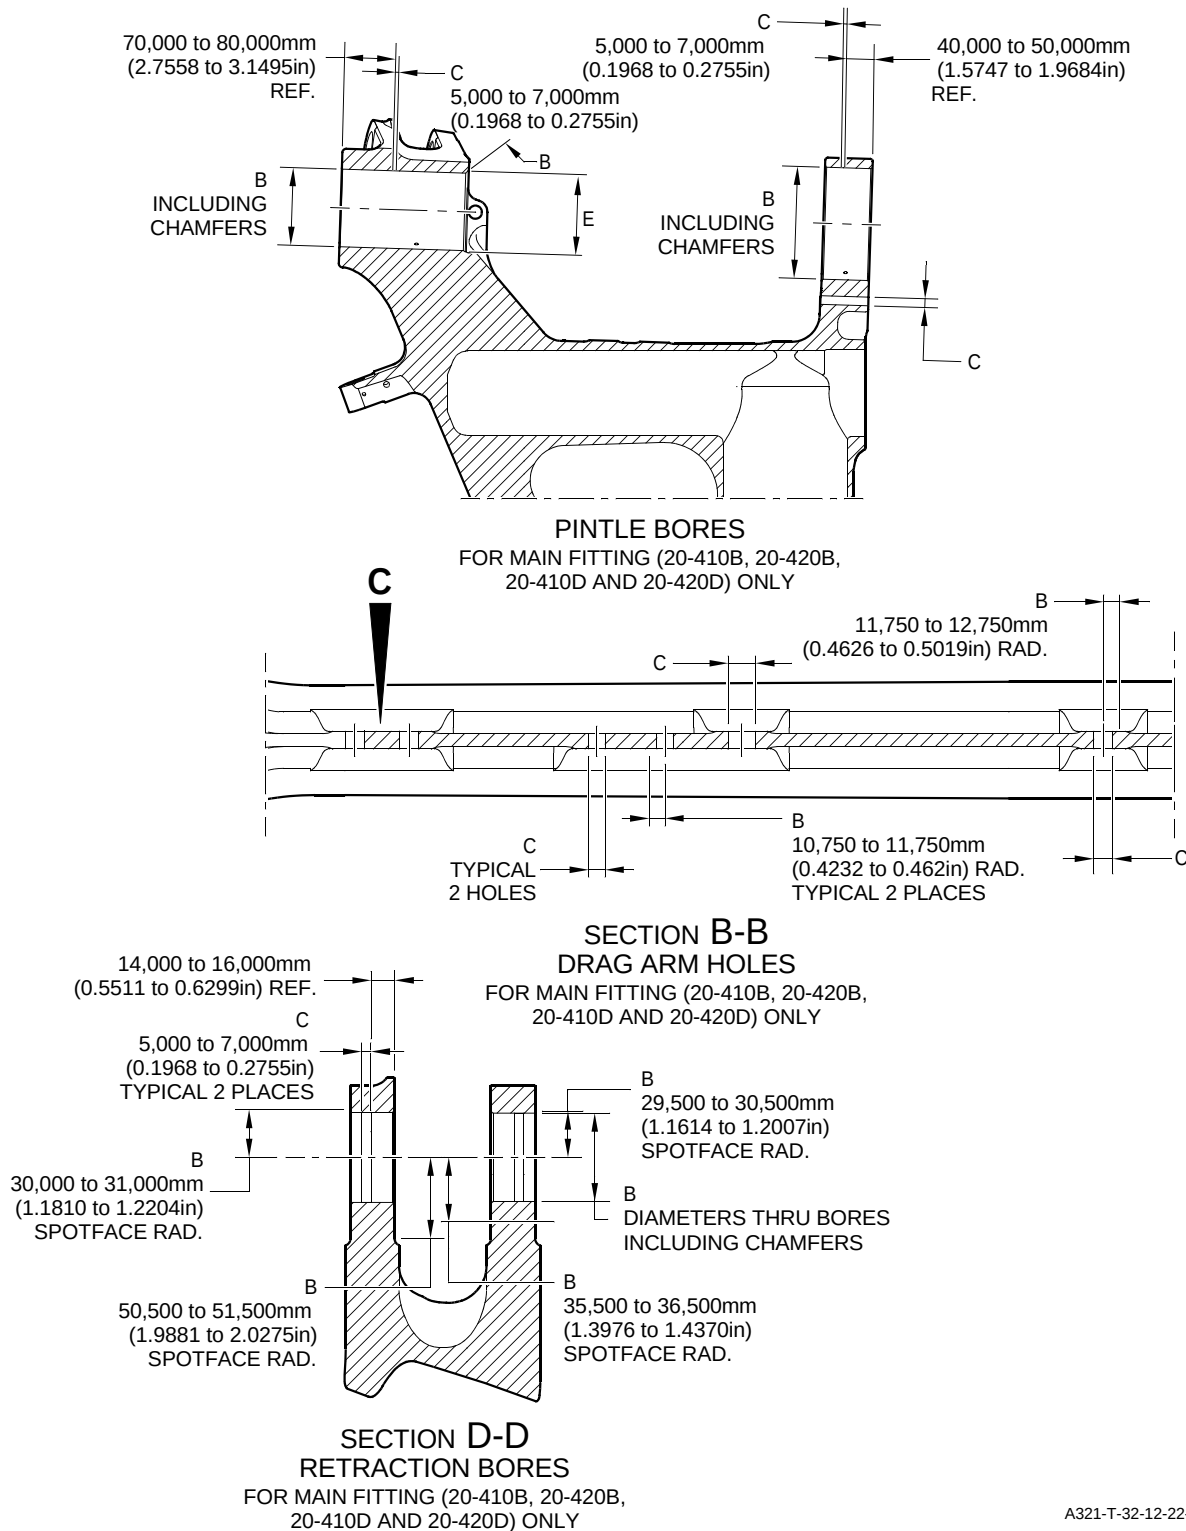

A321-T-32-12-22-125-1

Main Fitting (20-410B, 20-420B, 20-410D and 20-420D) - Protective Treatment
Figure 636 - Sheet 6



PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

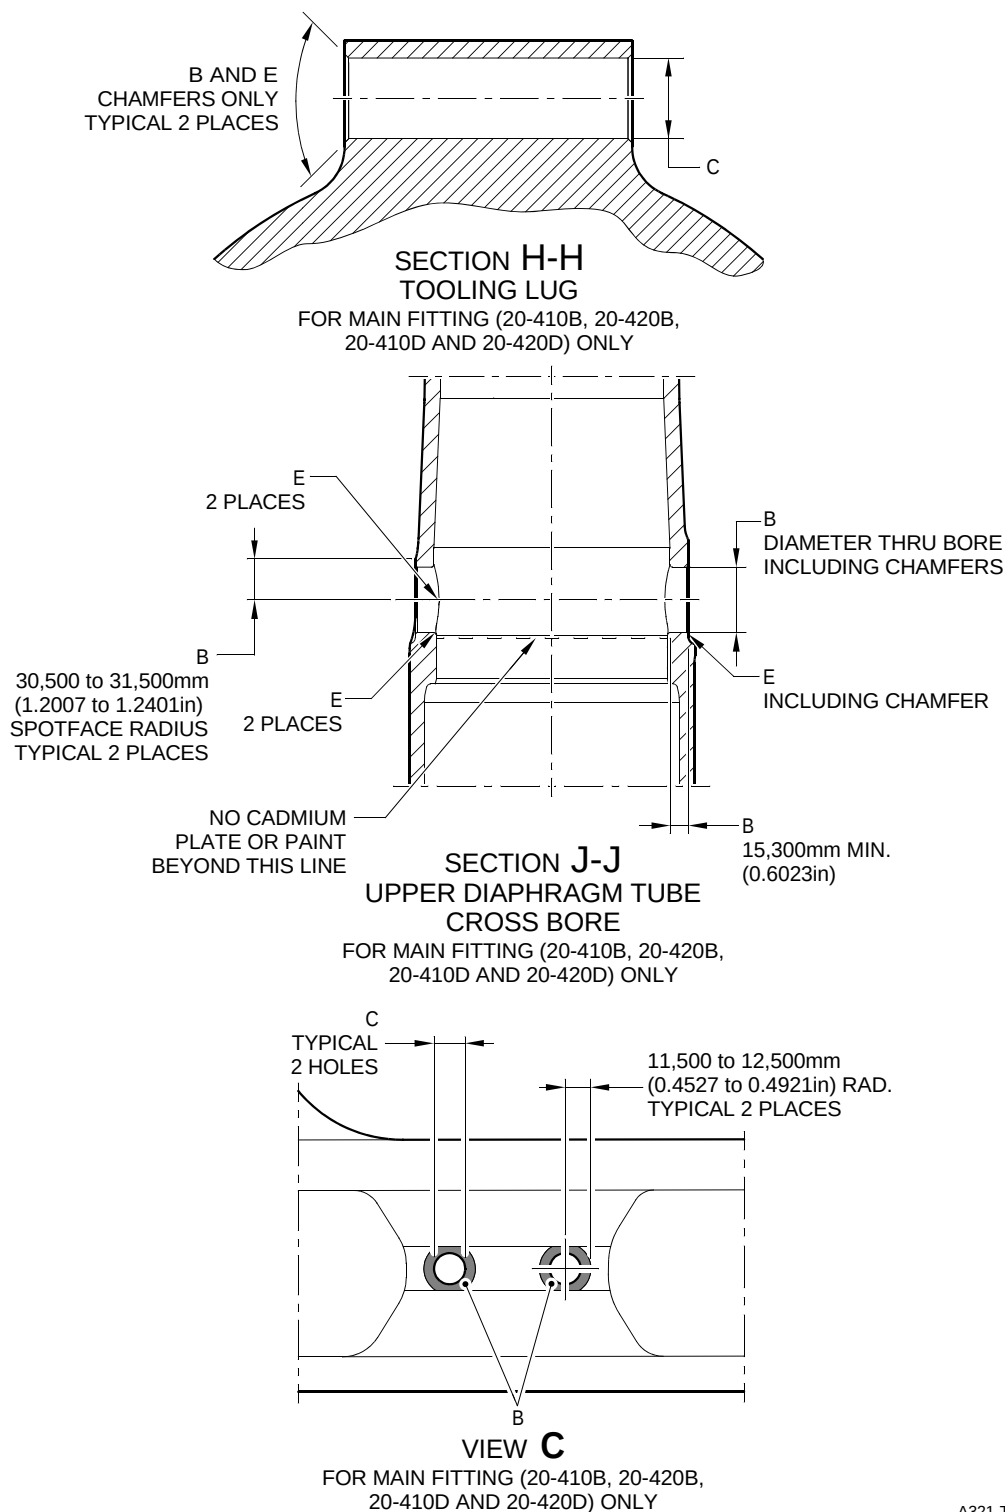


A321-T-32-12-22-126-1

Main Fitting (20-410B, 20-420B, 20-410D and 20-420D) - Protective Treatment
Figure 636 - Sheet 7

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

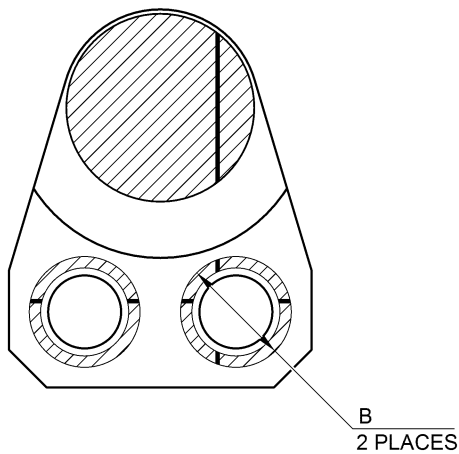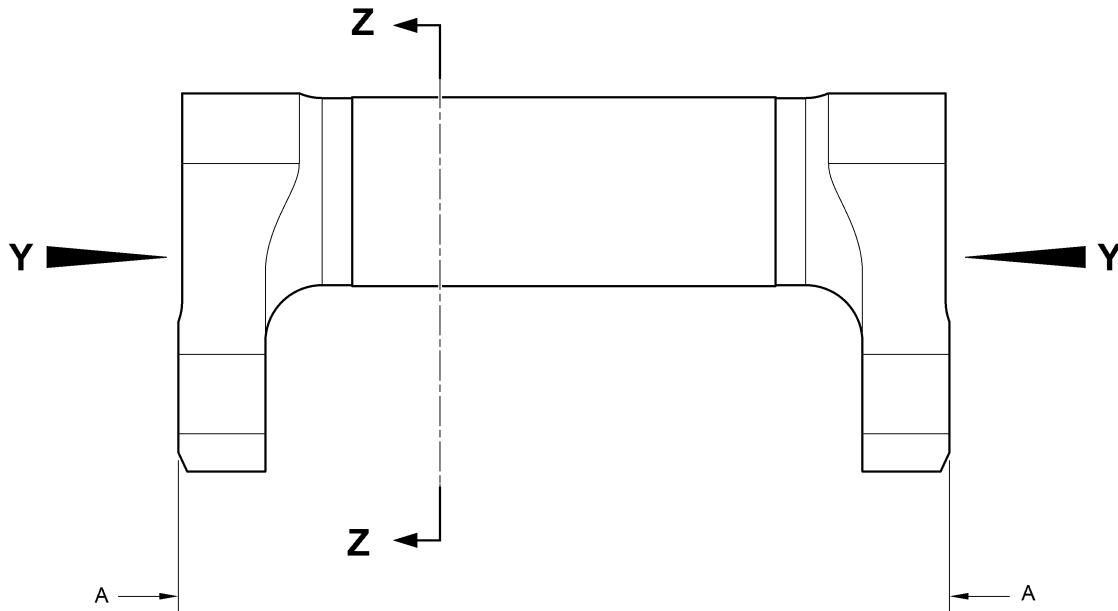

SECTION **Z-Z**

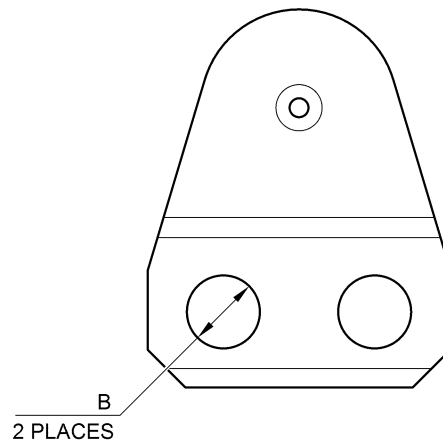


VIEW **Y**

A321-T-321222-0026-00

Uplock Pin (5-400A) - Protective Treatment
Figure 637

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

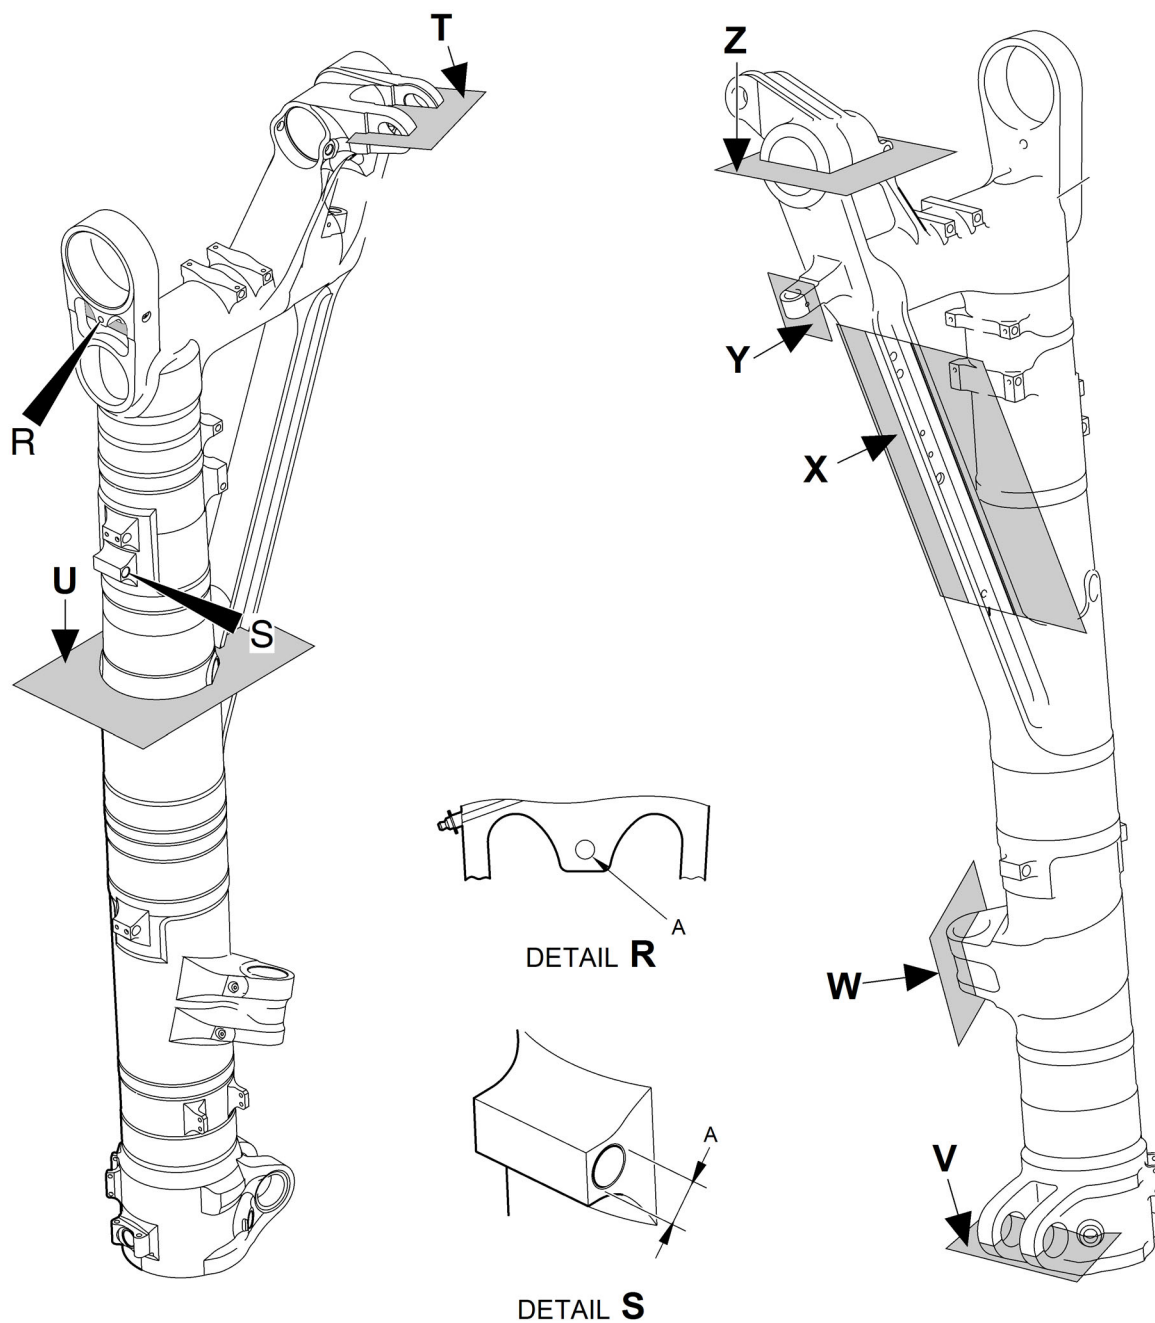

FOR ALL SECTION VIEWS SEE SHEET 2


A320-T-321222-0027

Main Fitting Subassembly (20-90B and 20-100B) - Protective Treatment
Figure 638 - Sheet 1

32-12-22


Page 671
Mar 18/2025

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

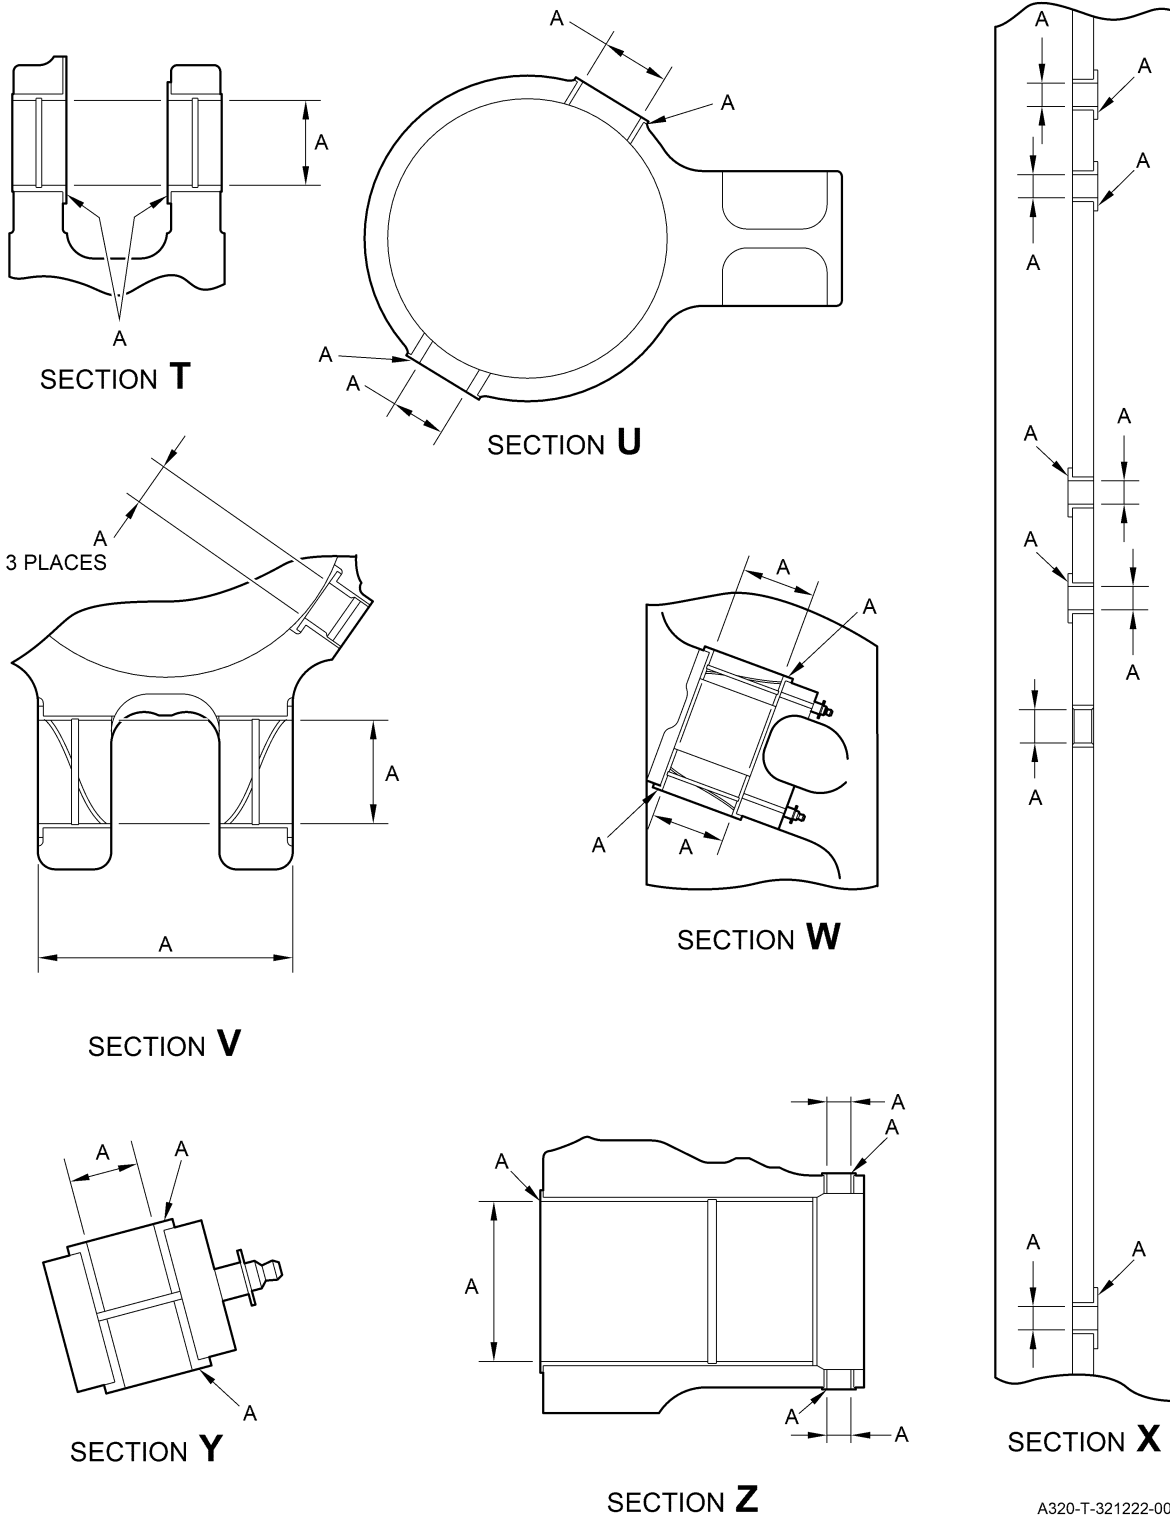

**Main Fitting Subassembly (20-90B and 20-100B) - Protective Treatment
Figure 638 - Sheet 2**


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

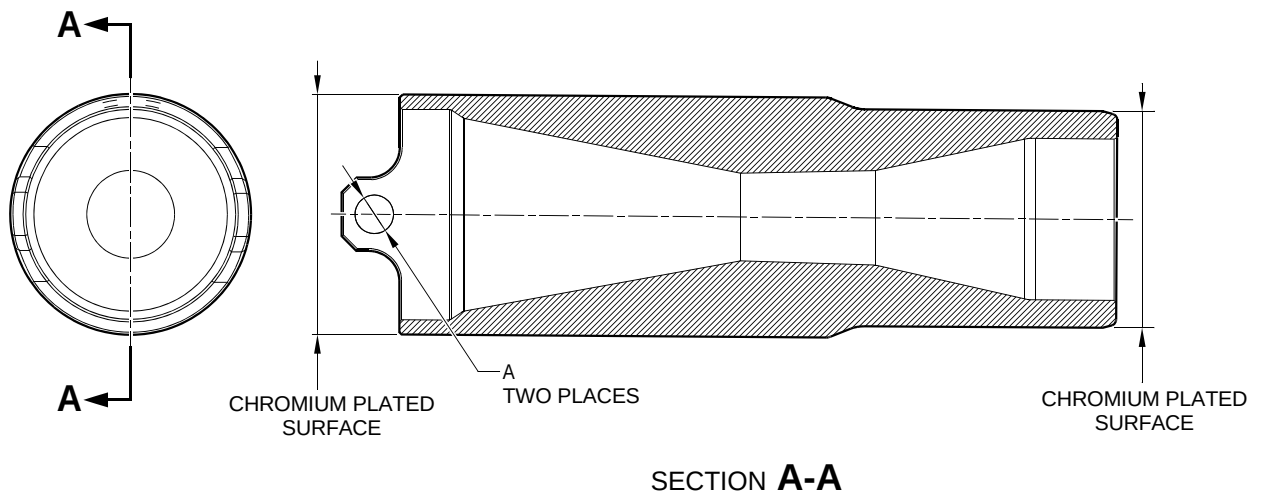

A321-T-32-12-22-124-0


Forward Pintle Pin (1-60A) - Protective Treatment
Figure 639

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

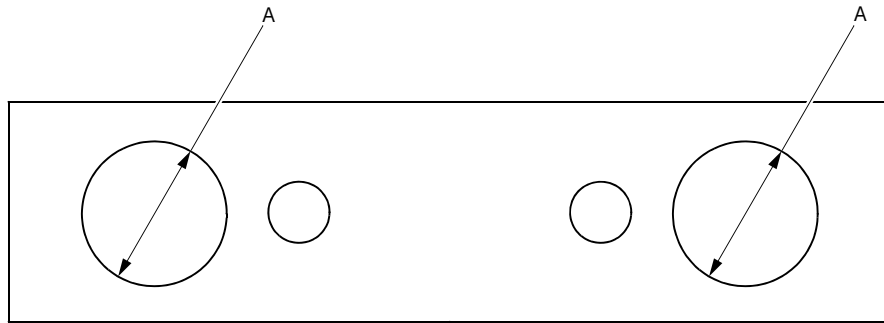

A321-T-32-12-22-131-00


**Spacer (4-180) Only - Protective Treatment
Figure 640**

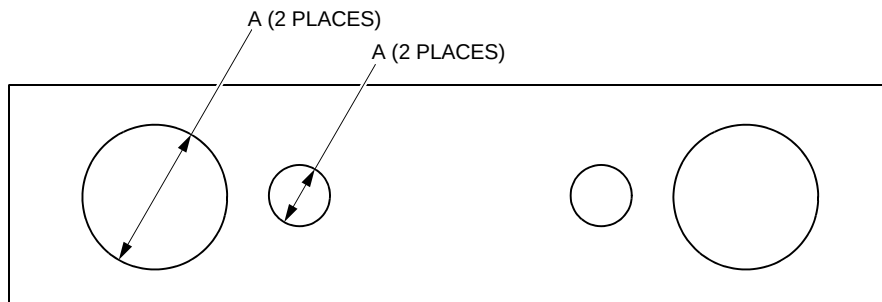


A321-T-32-12-22-132-00

**Drag-arm Spacer (4-180A) - Protective Treatment
Figure 641**

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

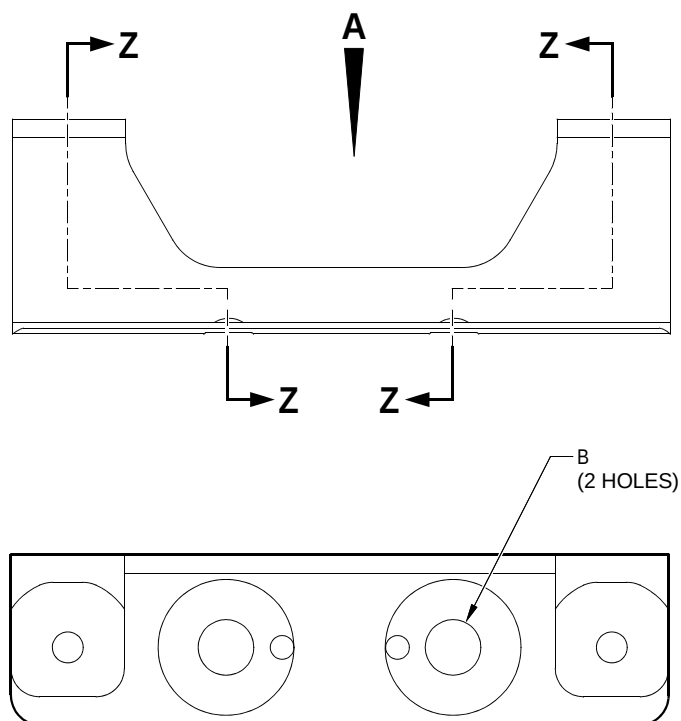

VIEW A


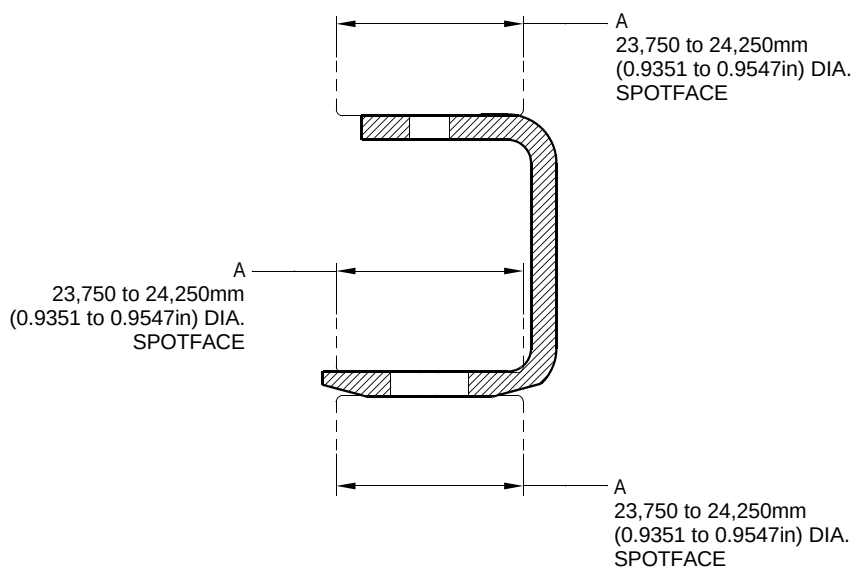


SECTION Z-Z
TYPICAL

A321-T-32-12-22-106-0

Bracket (4-210) - Protective Treatment
Figure 642

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

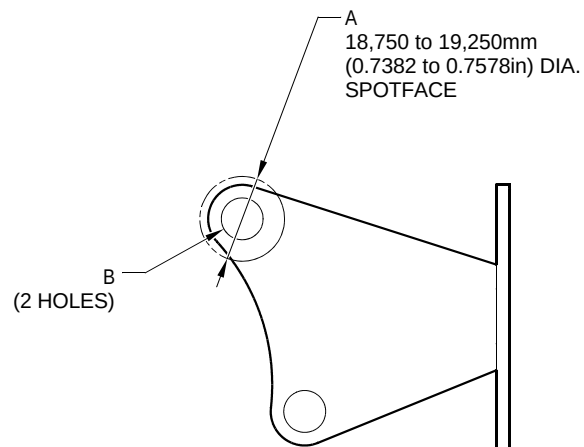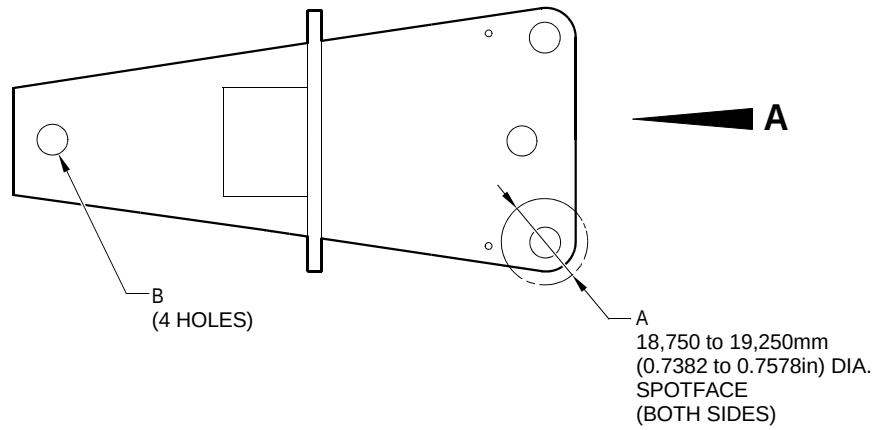


VIEW A

A321-T-32-12-22-103-0

Bracket (9-150) Only - Protective Treatment
Figure 643


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

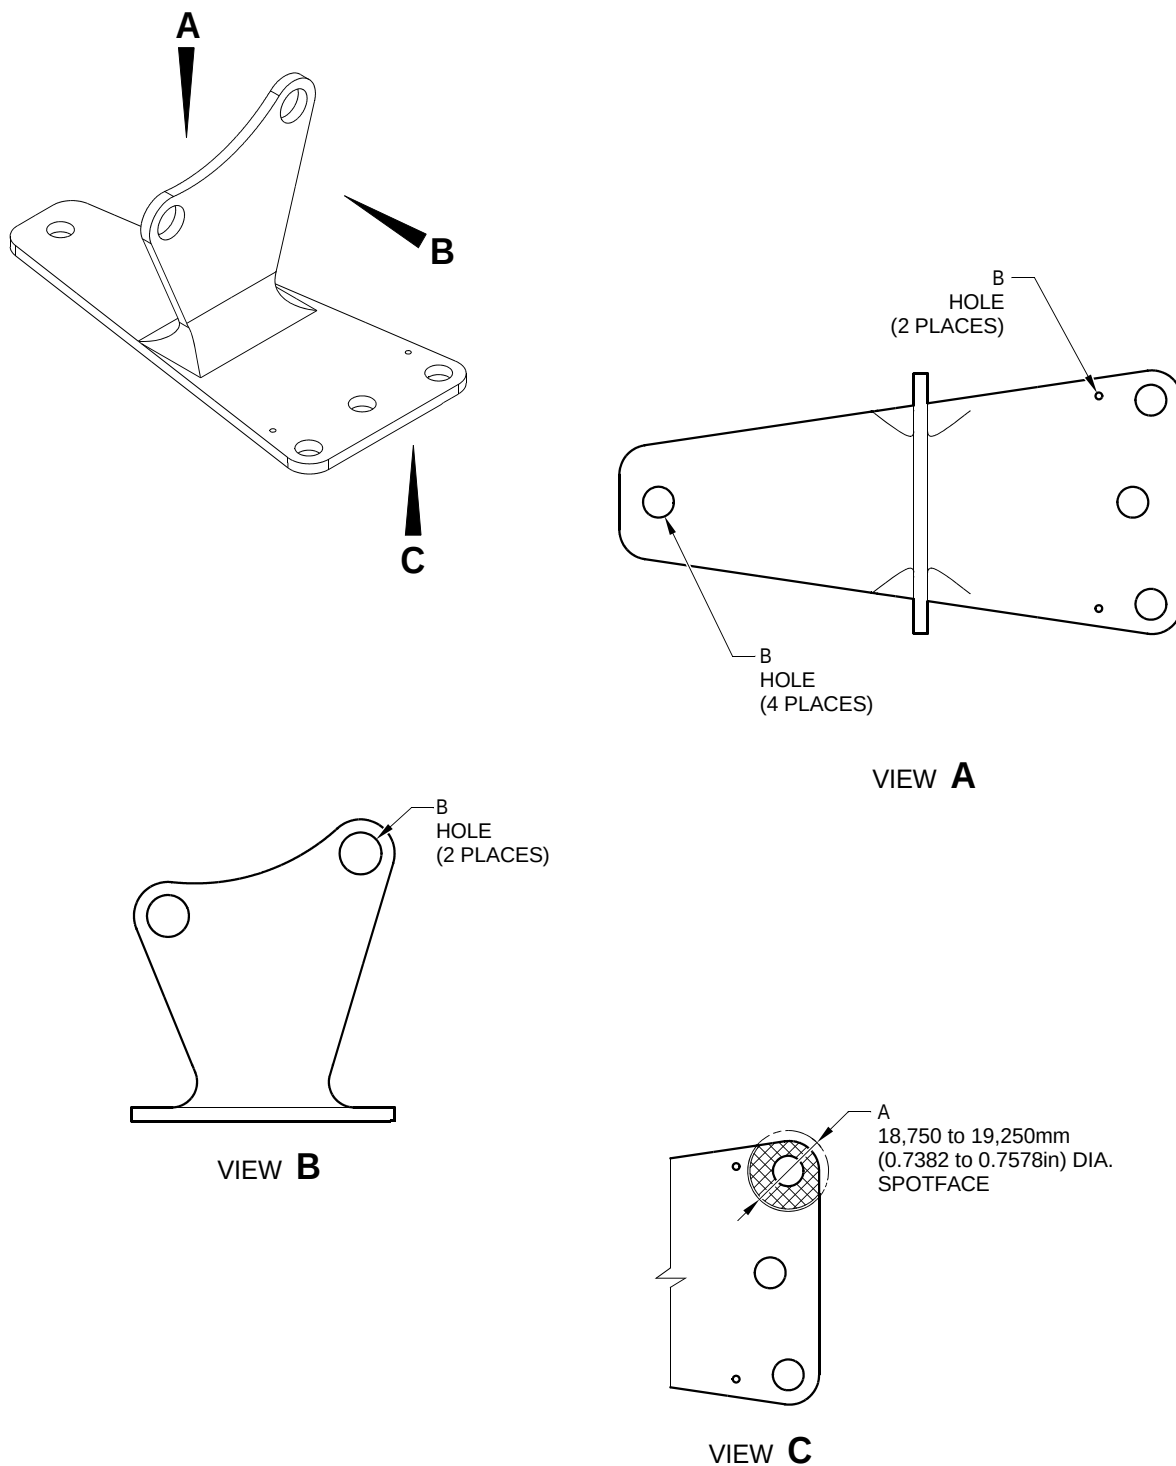


A321-T-32-12-22-105-0

Bracket (9-150A) - Protective Treatment
Figure 644

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

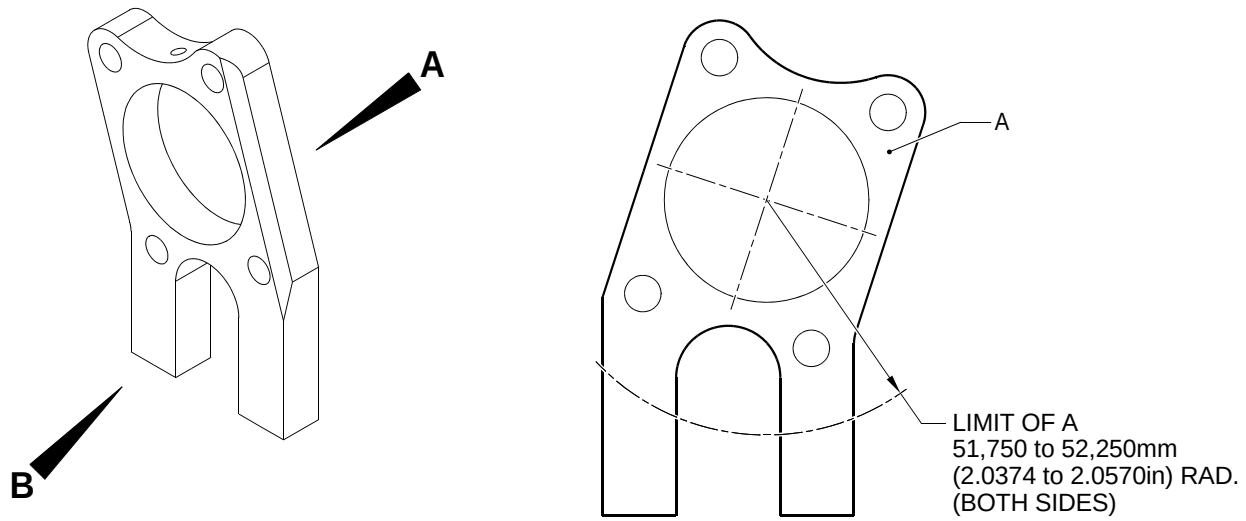

VIEW A


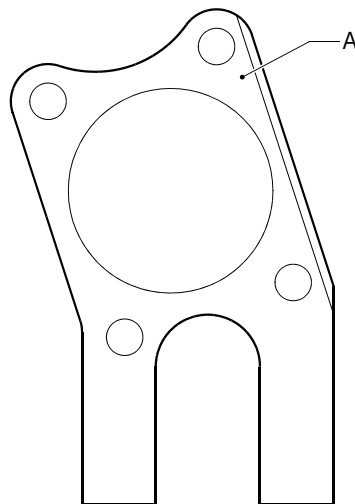


VIEW B


A321-T-32-12-22-102-0

Spacer (9-190) Only - Protective Treatment
Figure 645


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

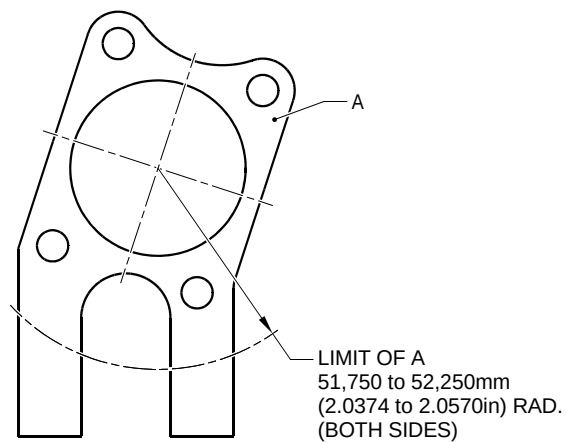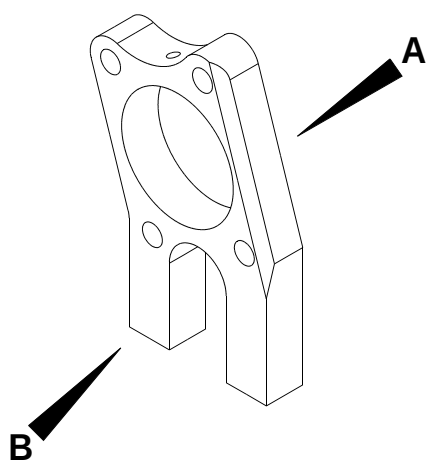

VIEW A

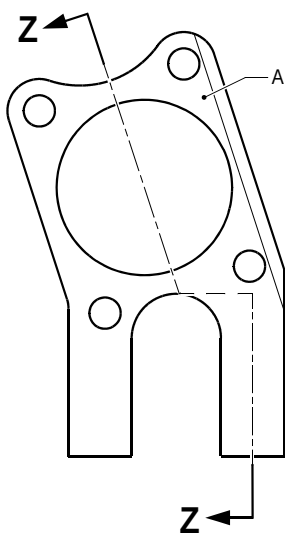

VIEW B

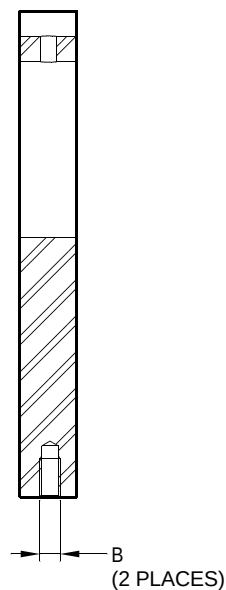


SECTION Z-Z


A321-T-32-12-22-104-0

Spacer (9-190A) - Protective Treatment
Figure 646

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

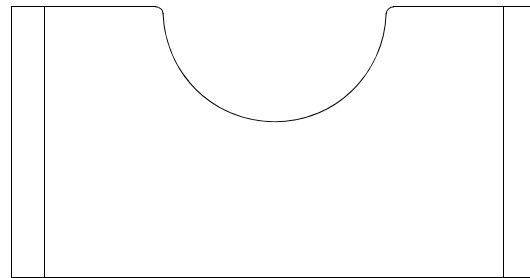


A

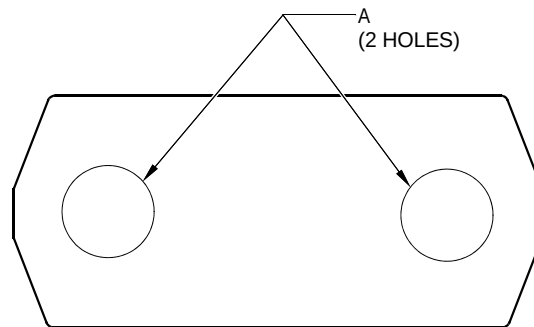


VIEW A

A321-T-32-12-22-101-0

Spacer ([11-30](#)) - Protective Treatment
Figure 647


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

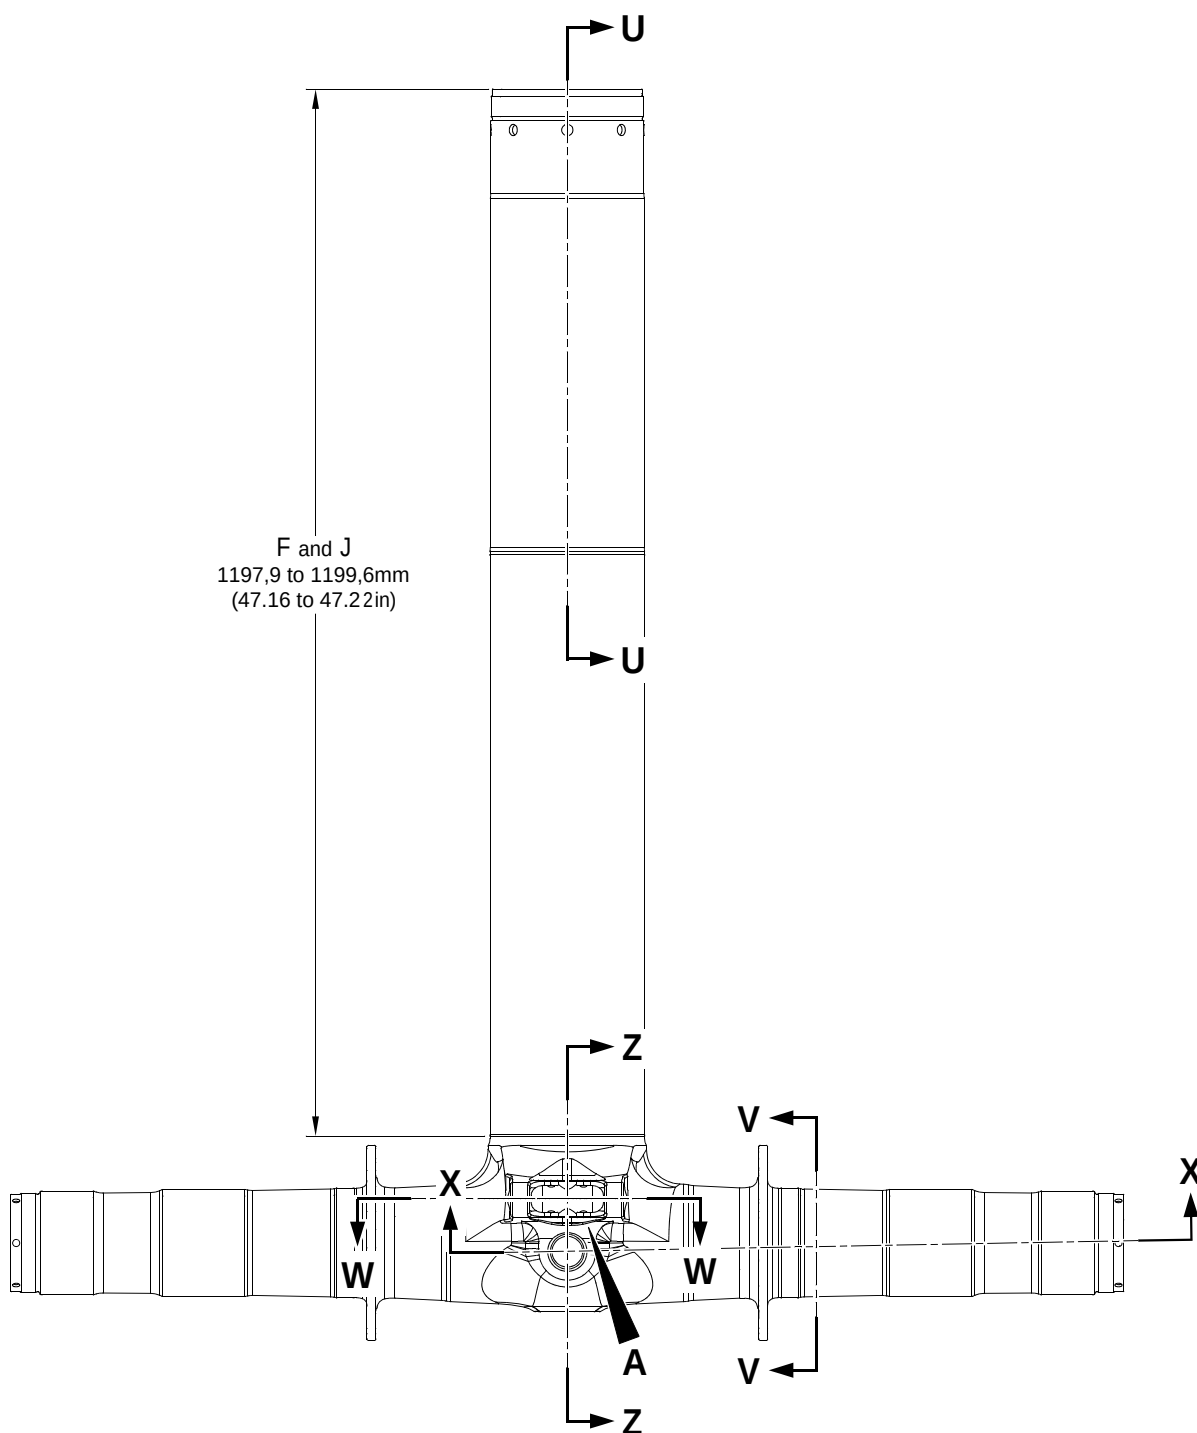

A321-T-32-12-22-153-0


Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) - Protective Treatment
Figure 648 - Sheet 1

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

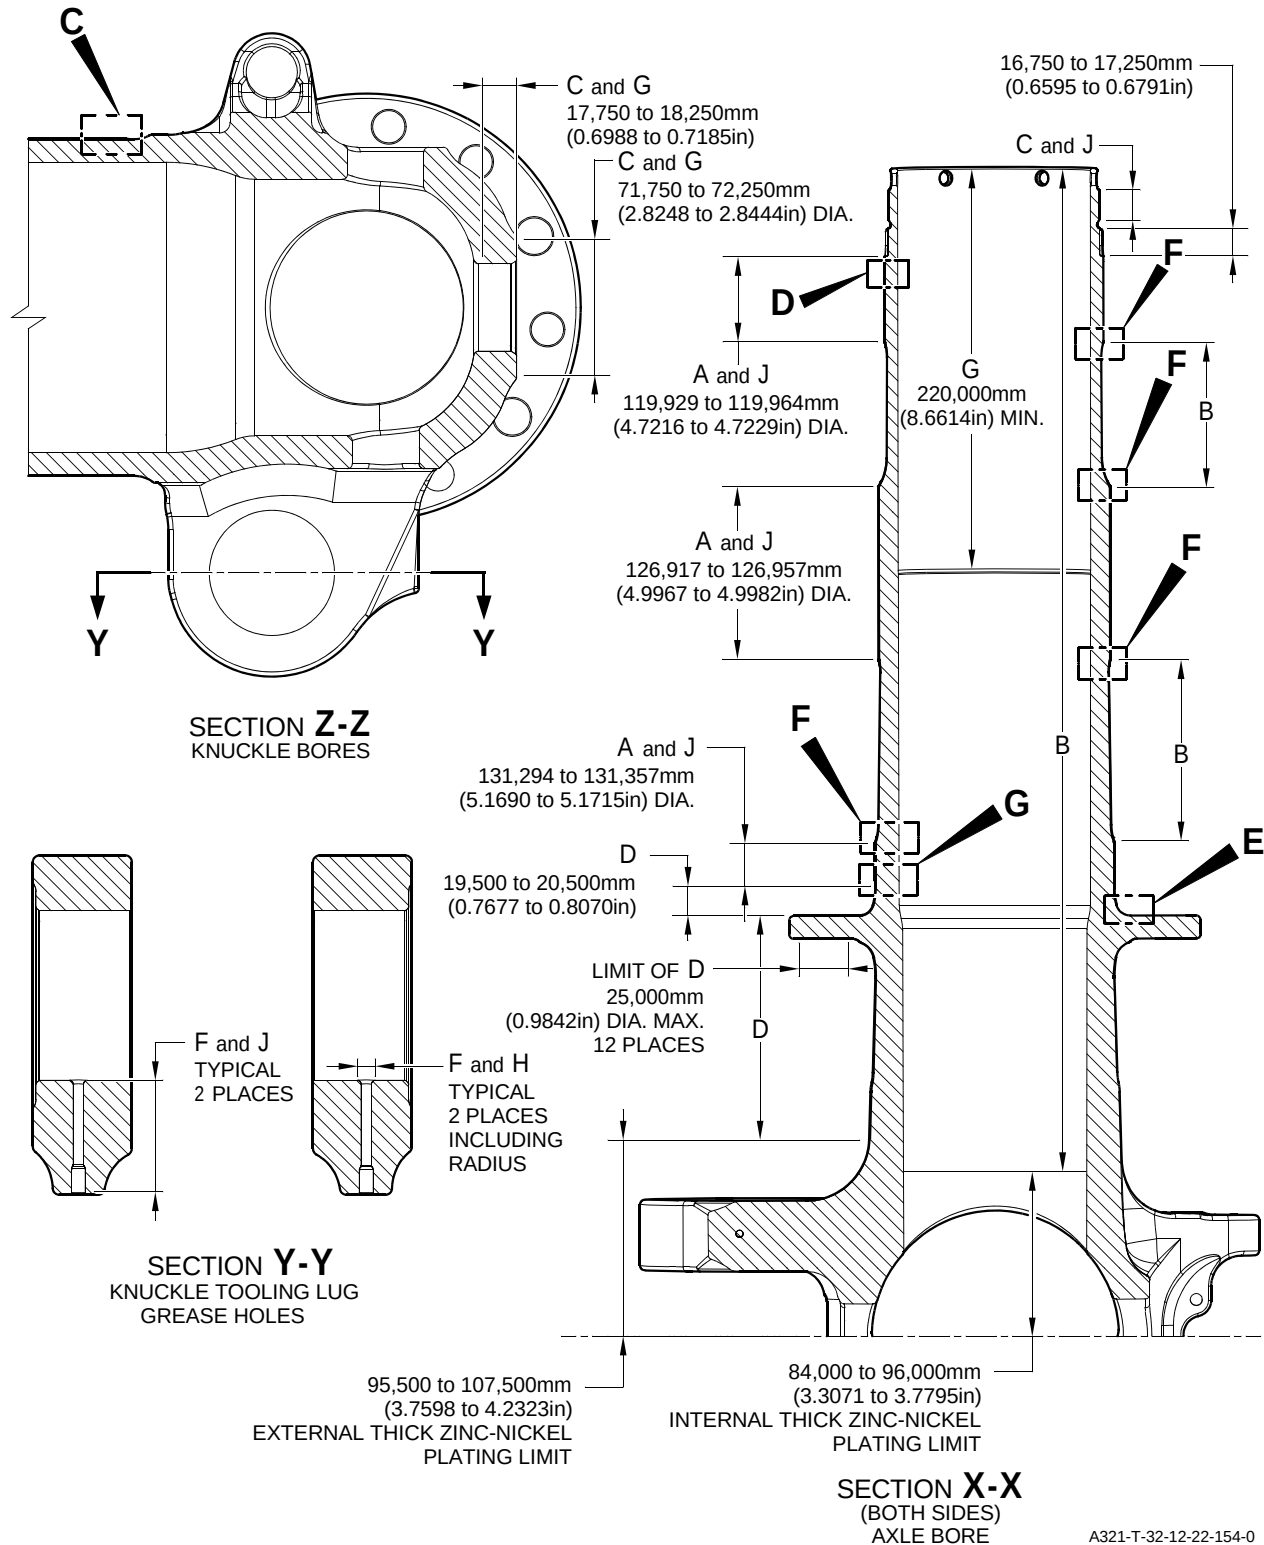


Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) - Protective Treatment
Figure 648 - Sheet 2

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

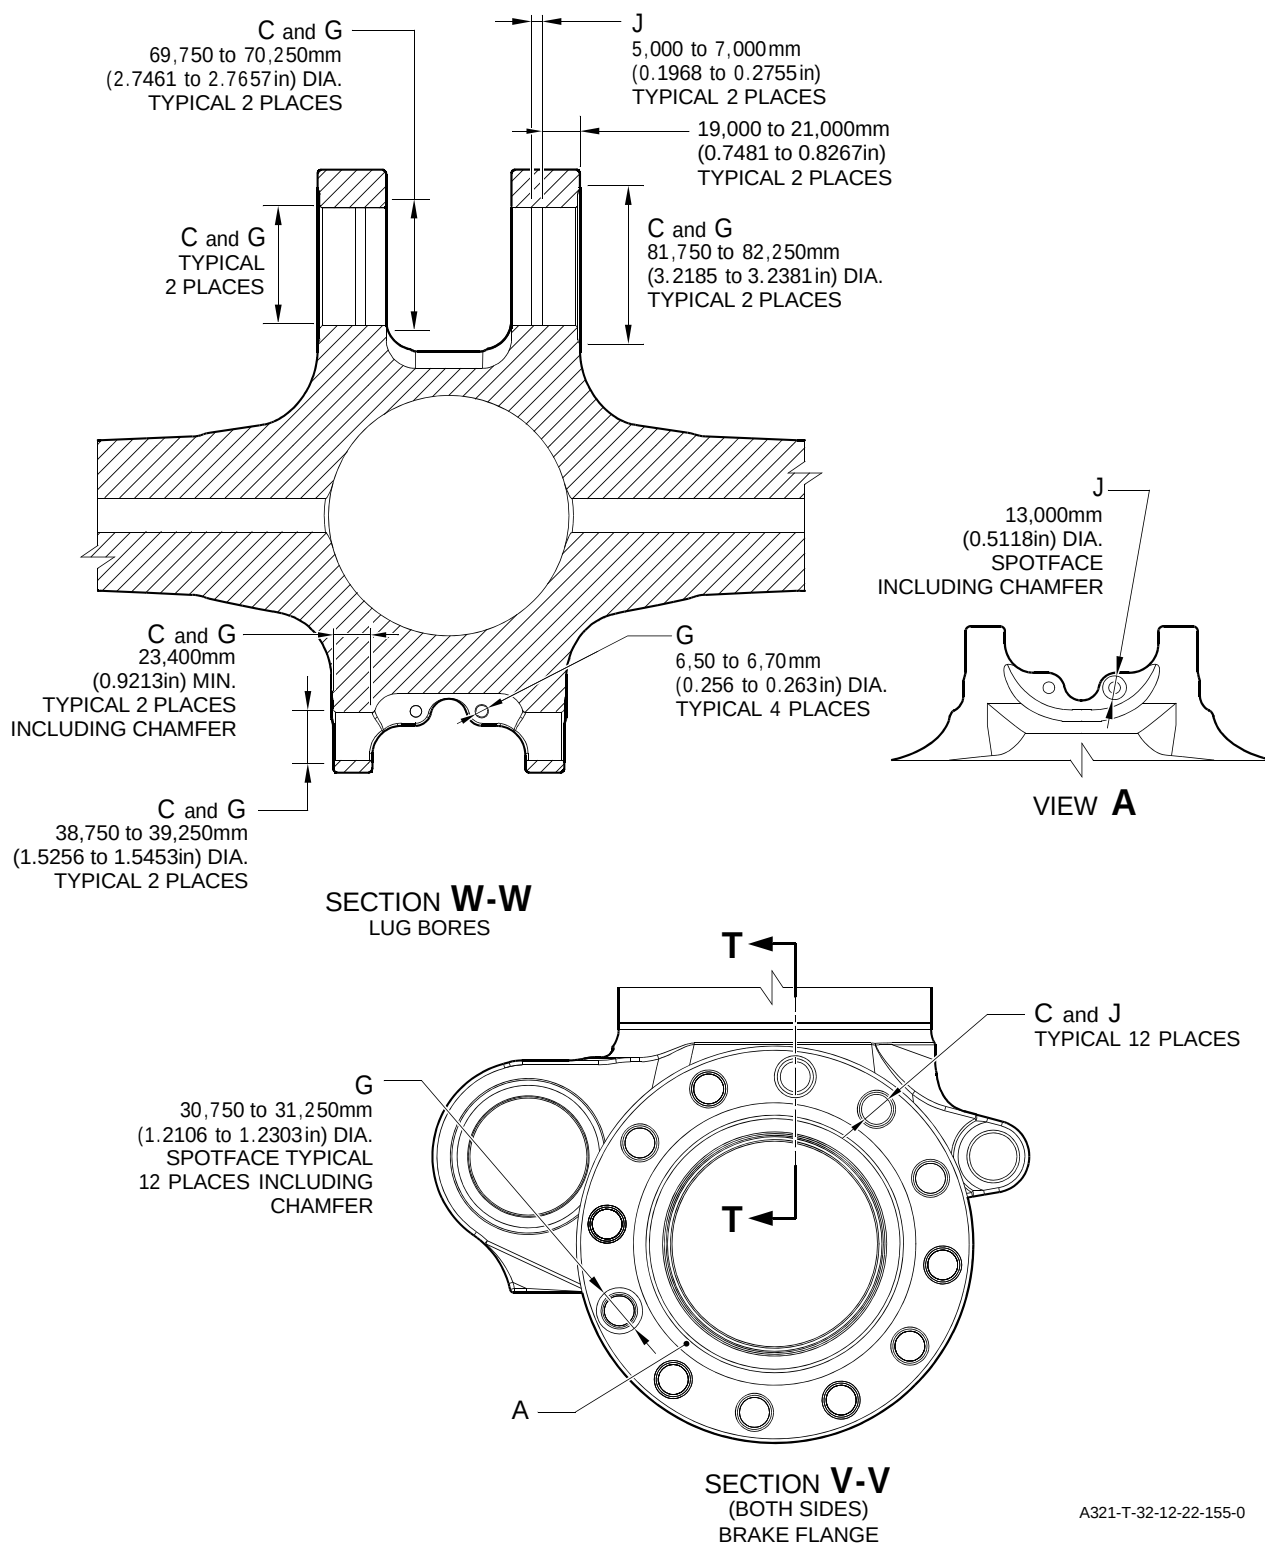

Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) - Protective Treatment
Figure 648 - Sheet 3


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

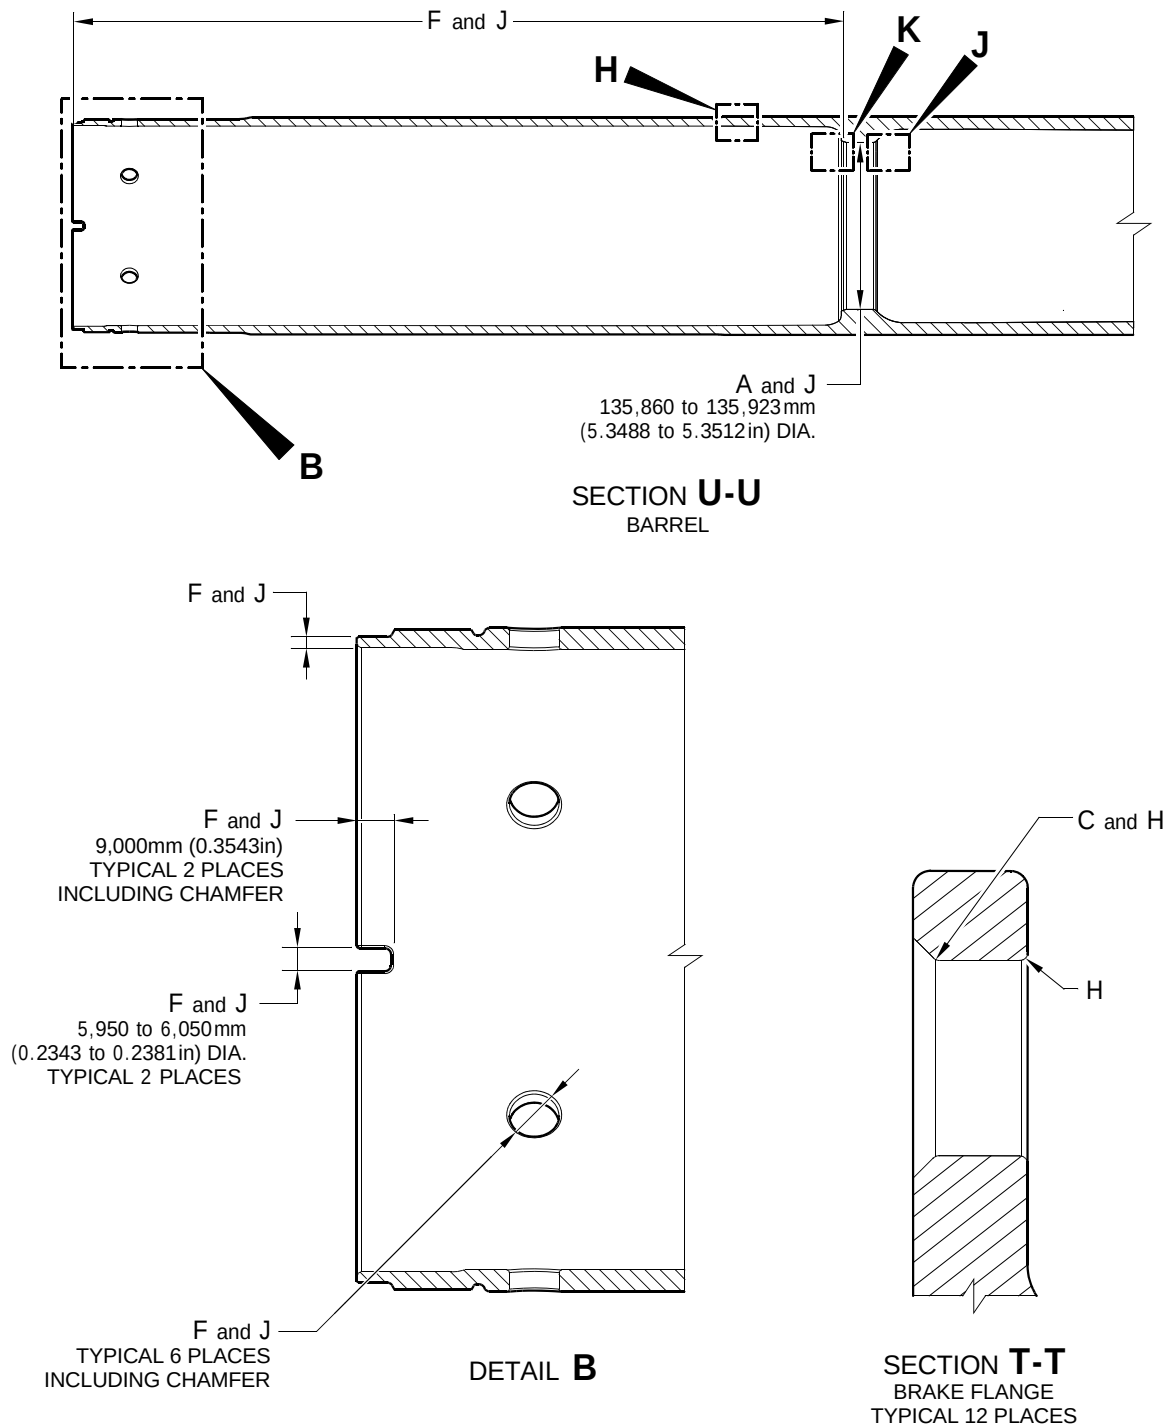


A321-T-32-12-22-156-0

Sliding tube (**18-80D**, **18-80E**, **18-80F** and **18-80G**) - Protective Treatment
Figure 648 - Sheet 4

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

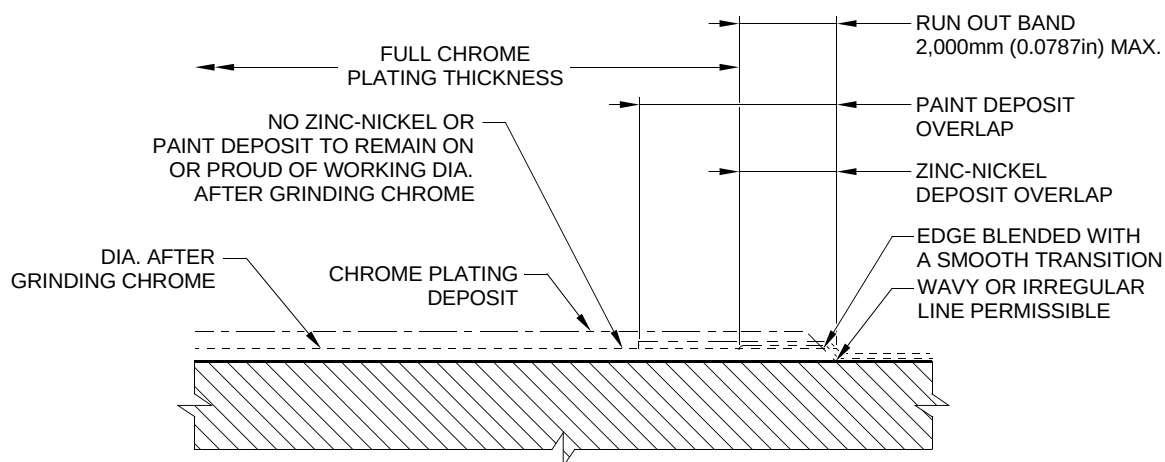

DETAIL C
BARREL OUTER DIA. LOWER CHROME TERMINATION

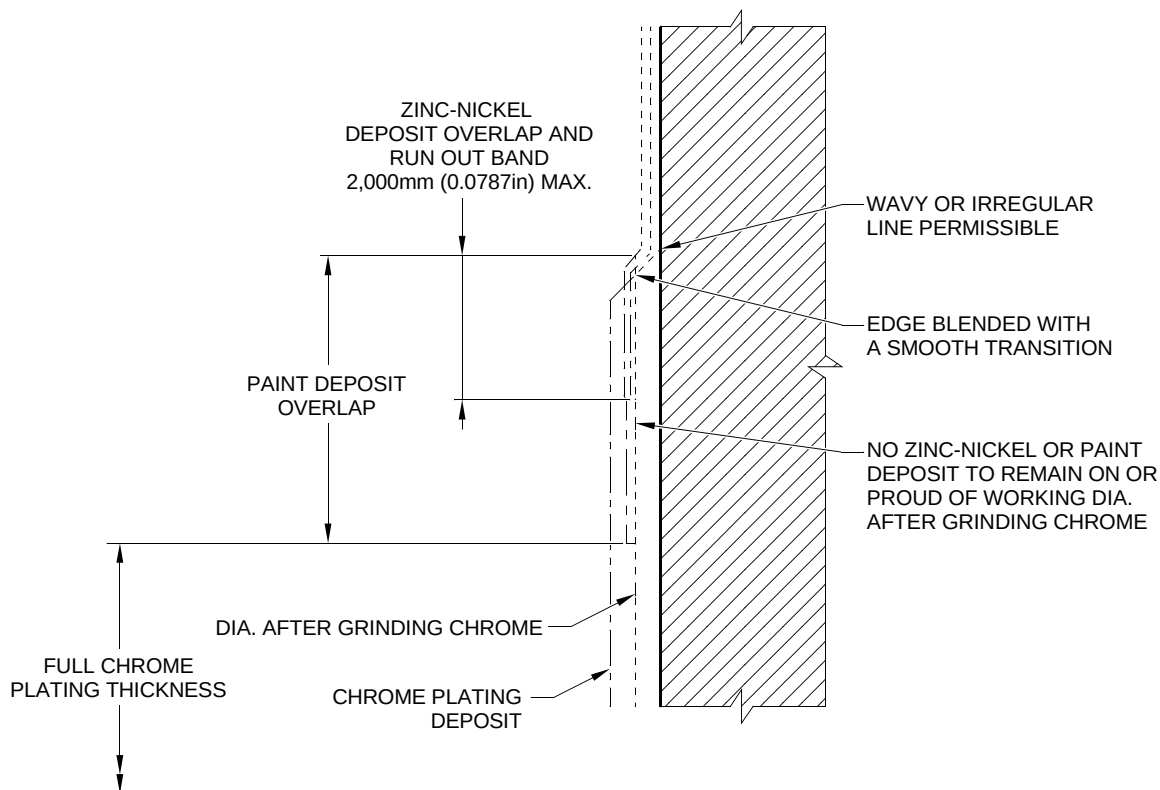


DETAIL D
JOURNAL A OUTER CHROME TERMINATION (TYPICAL)


A321-T-32-12-22-157-0

Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) - Protective Treatment
Figure 648 - Sheet 5

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

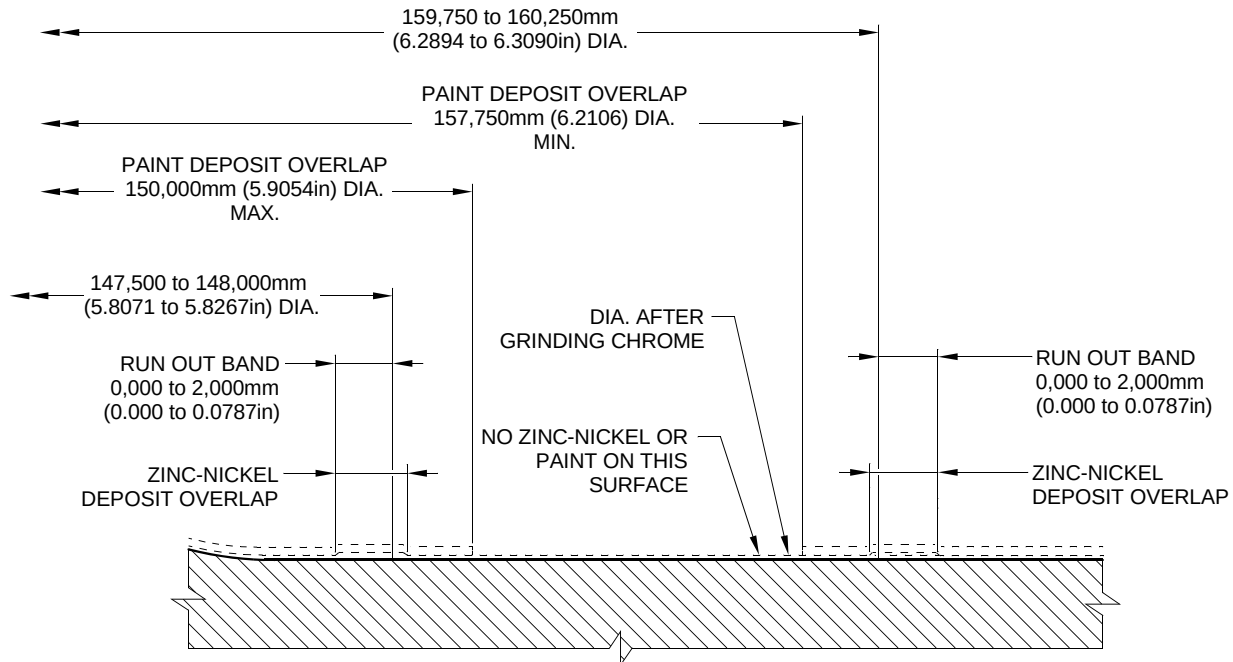

DETAIL E
BREAK FLANGE FACE CHROME TERMINATION
(TYPICAL)

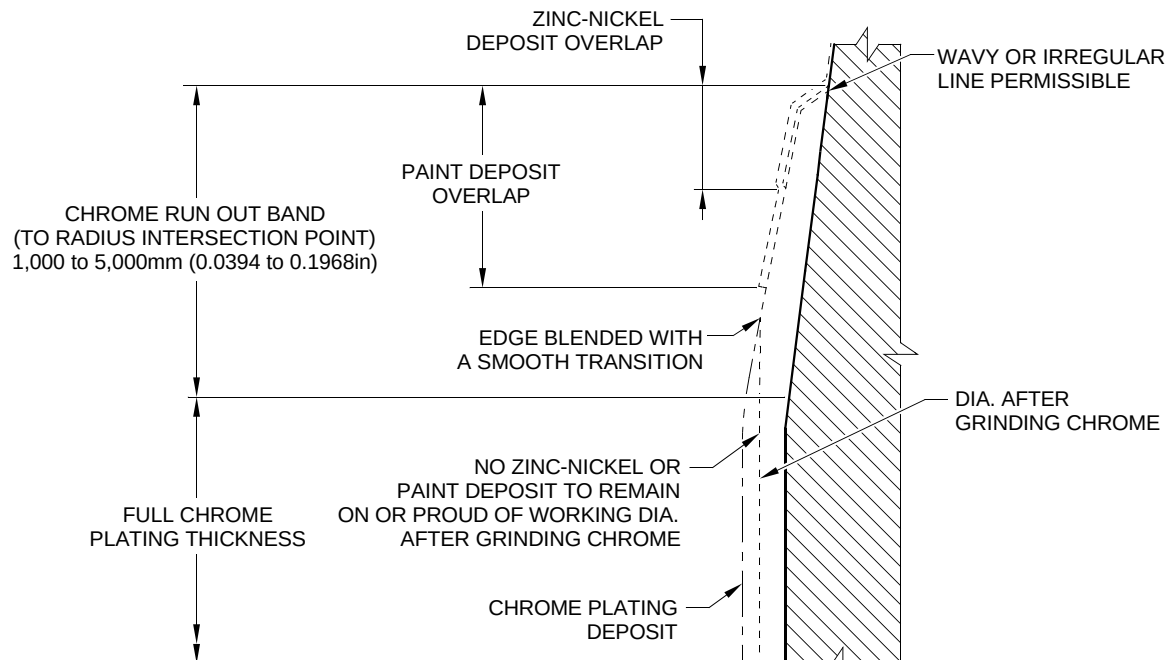


DETAIL F
JOURNAL A,B,C CHROME TERMINATION
(TYPICAL)


A321-T-32-12-22-158-0

Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) - Protective Treatment
Figure 648 - Sheet 6

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

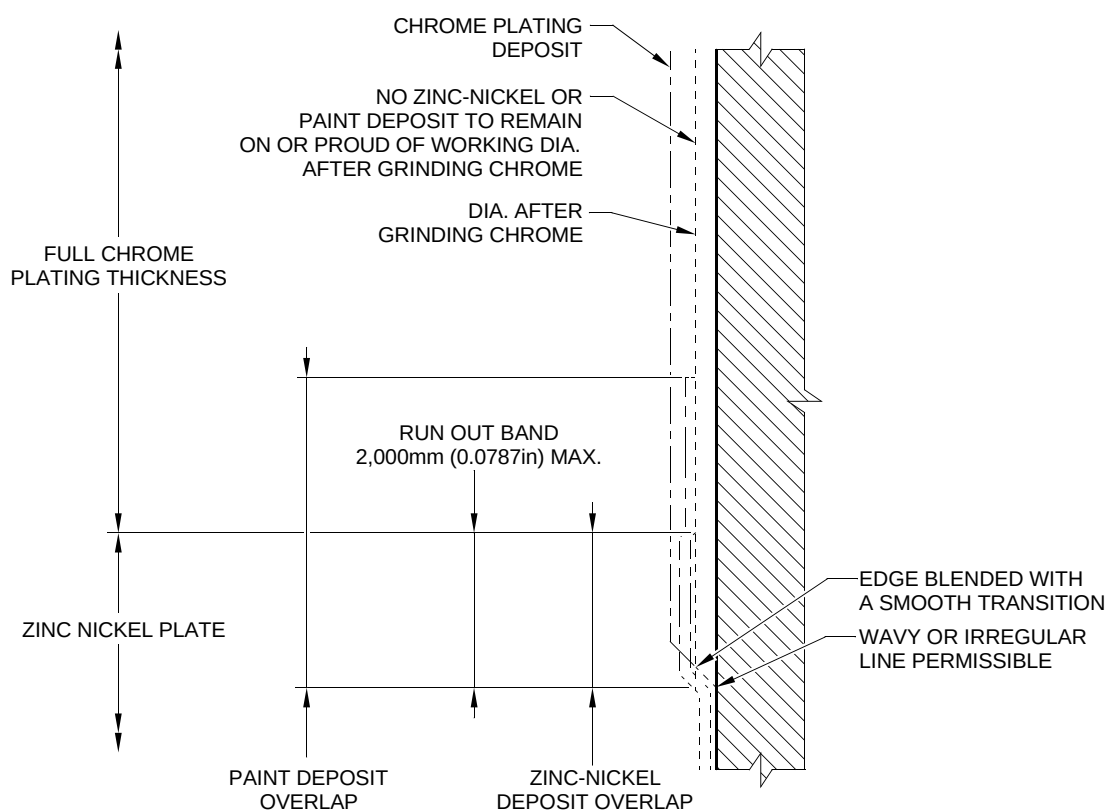

DETAIL G
JOURNAL C INNER CHROME TERMINATION
(TYPICAL)


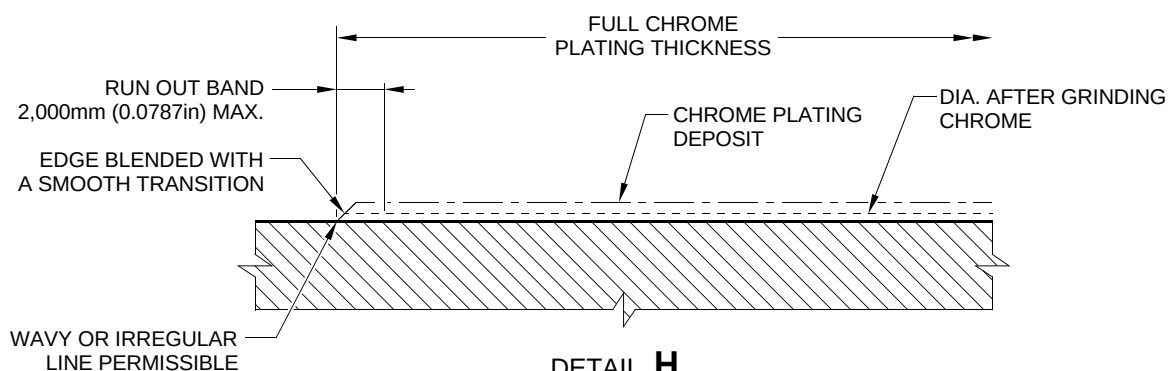


DETAIL H
BARREL OUTER DIA. UPPER
CHROME TERMINATION

A321-T-32-12-22-159-0

Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) - Protective Treatment
Figure 648 - Sheet 7


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

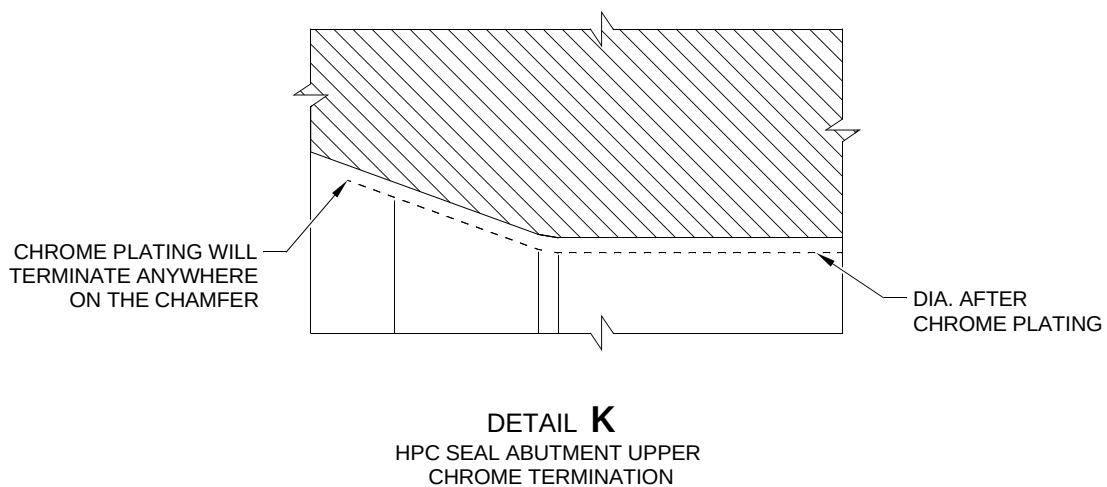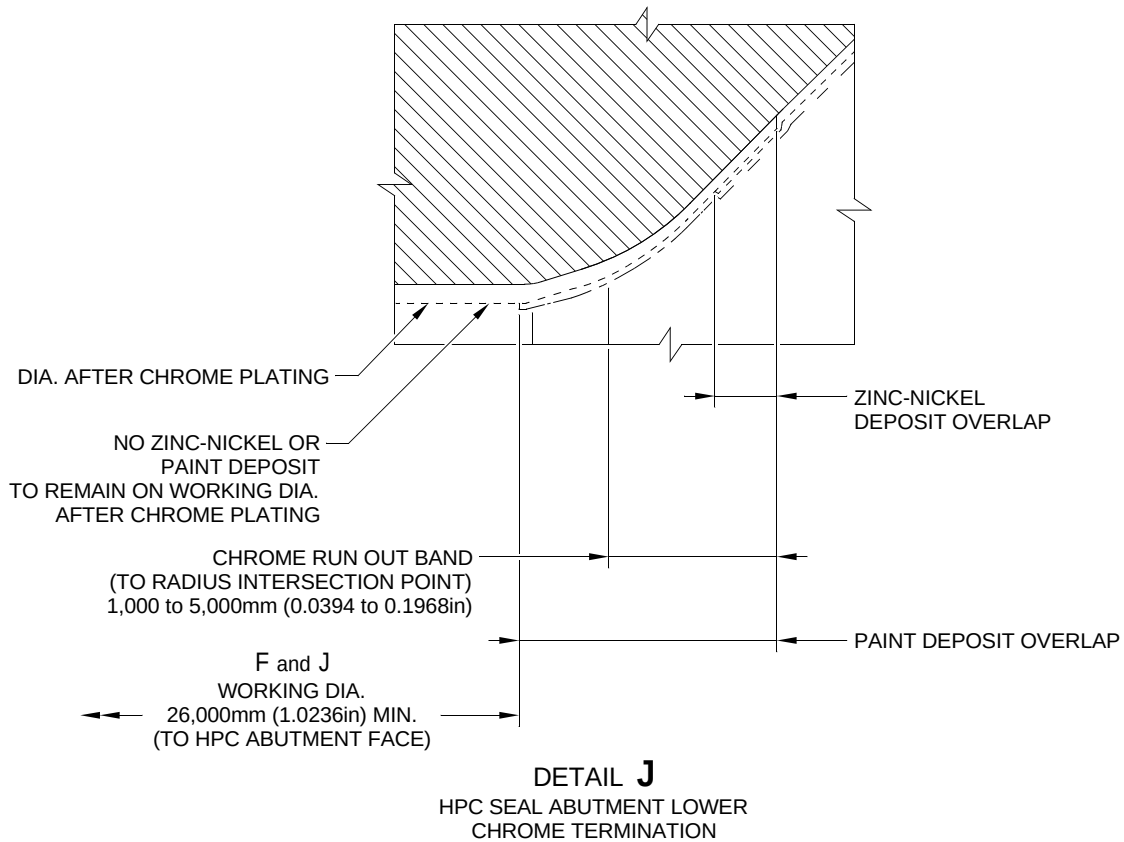

A321-T-32-12-22-160-0

Sliding tube (**18-80D**, **18-80E**, **18-80F** and **18-80G**) - Protective Treatment
Figure 648 - Sheet 8


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

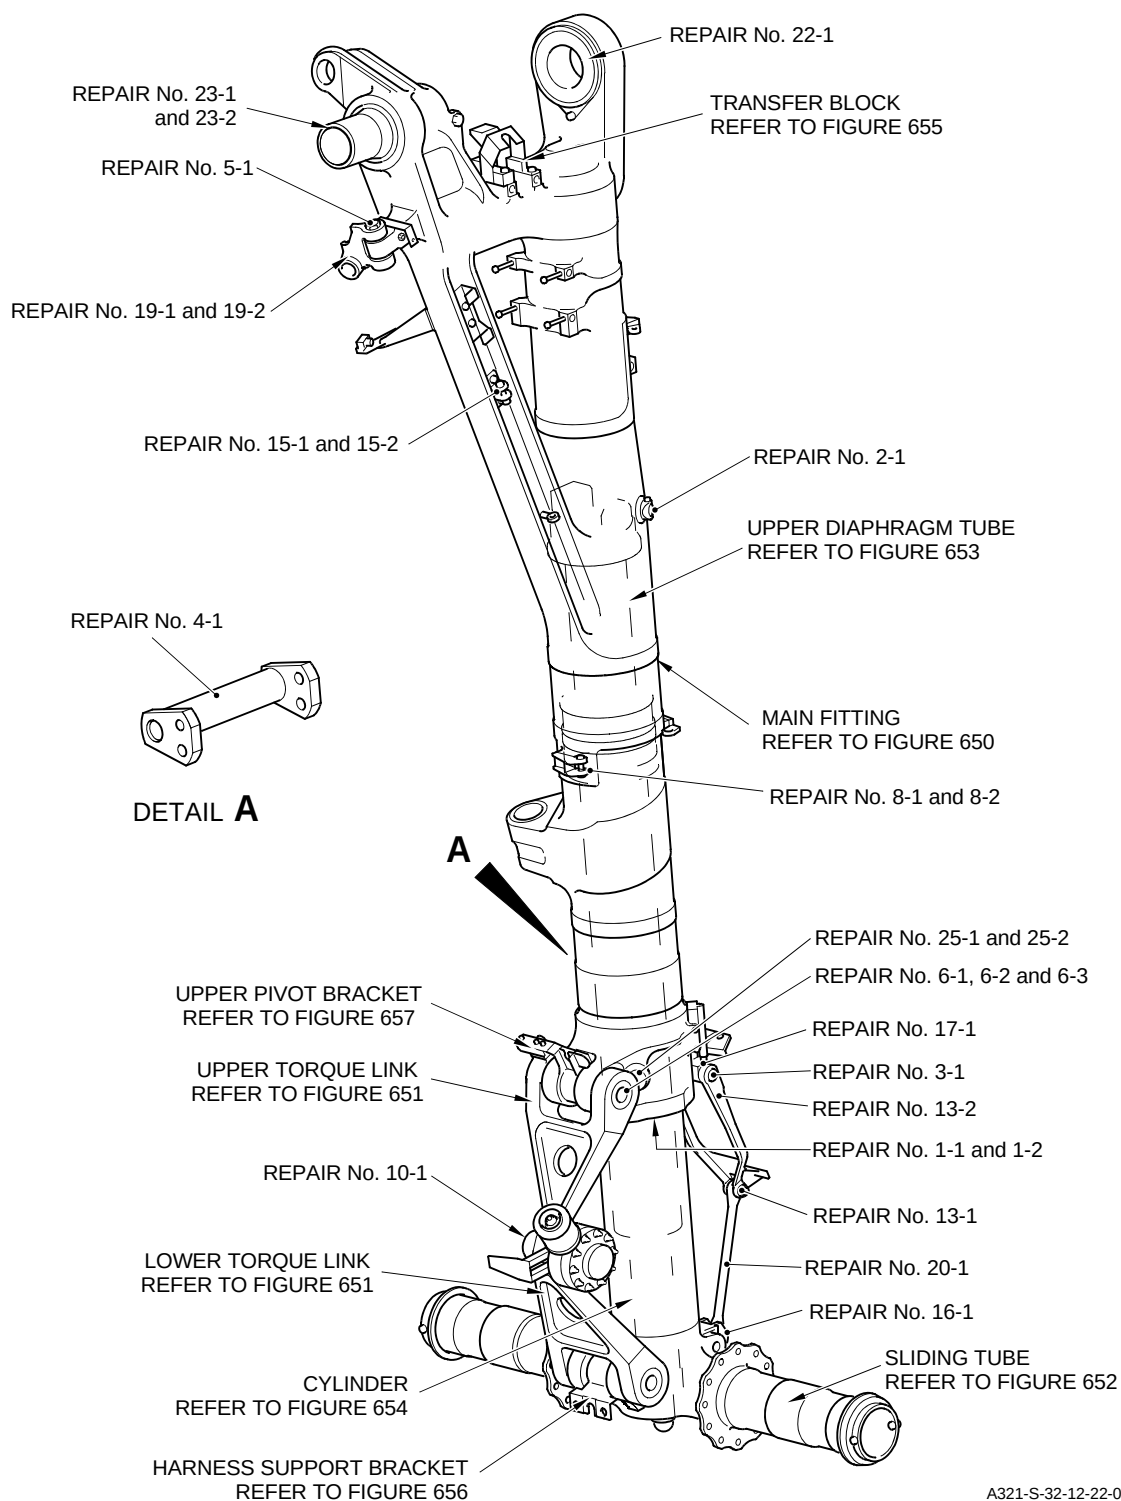

A321-S-32-12-22-008-8

**Approved Repairs - Key Diagram
Figure 649**


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

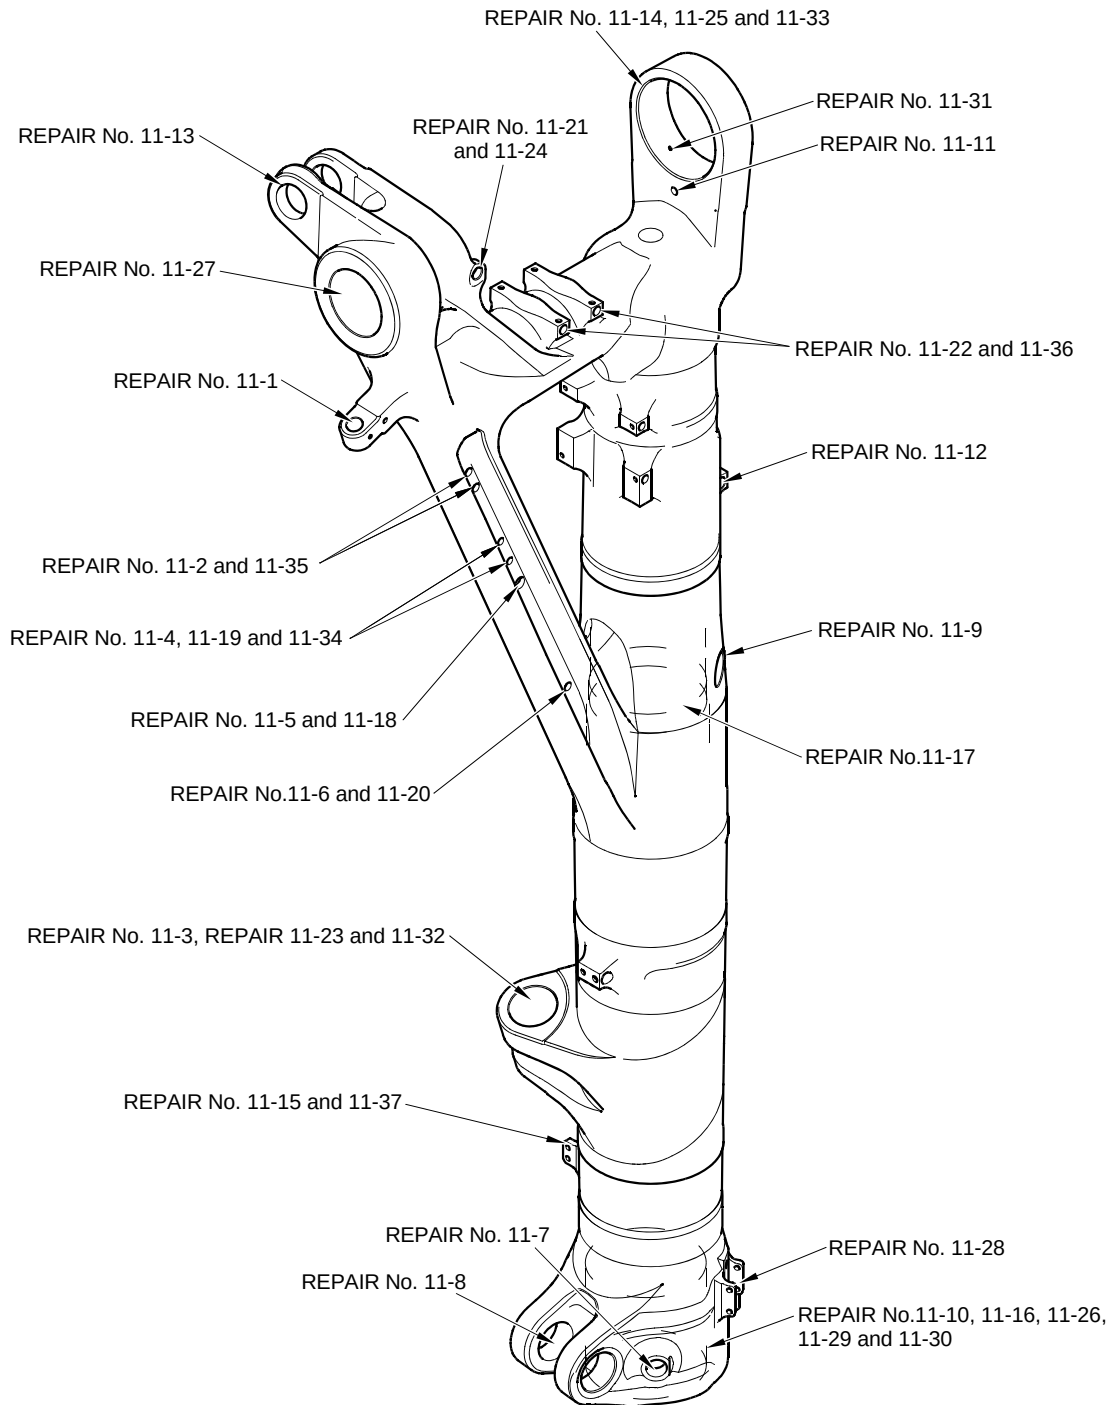

A321-S-32-12-22-063-2

**Main Fitting Repairs - Key Diagram
Figure 650**


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

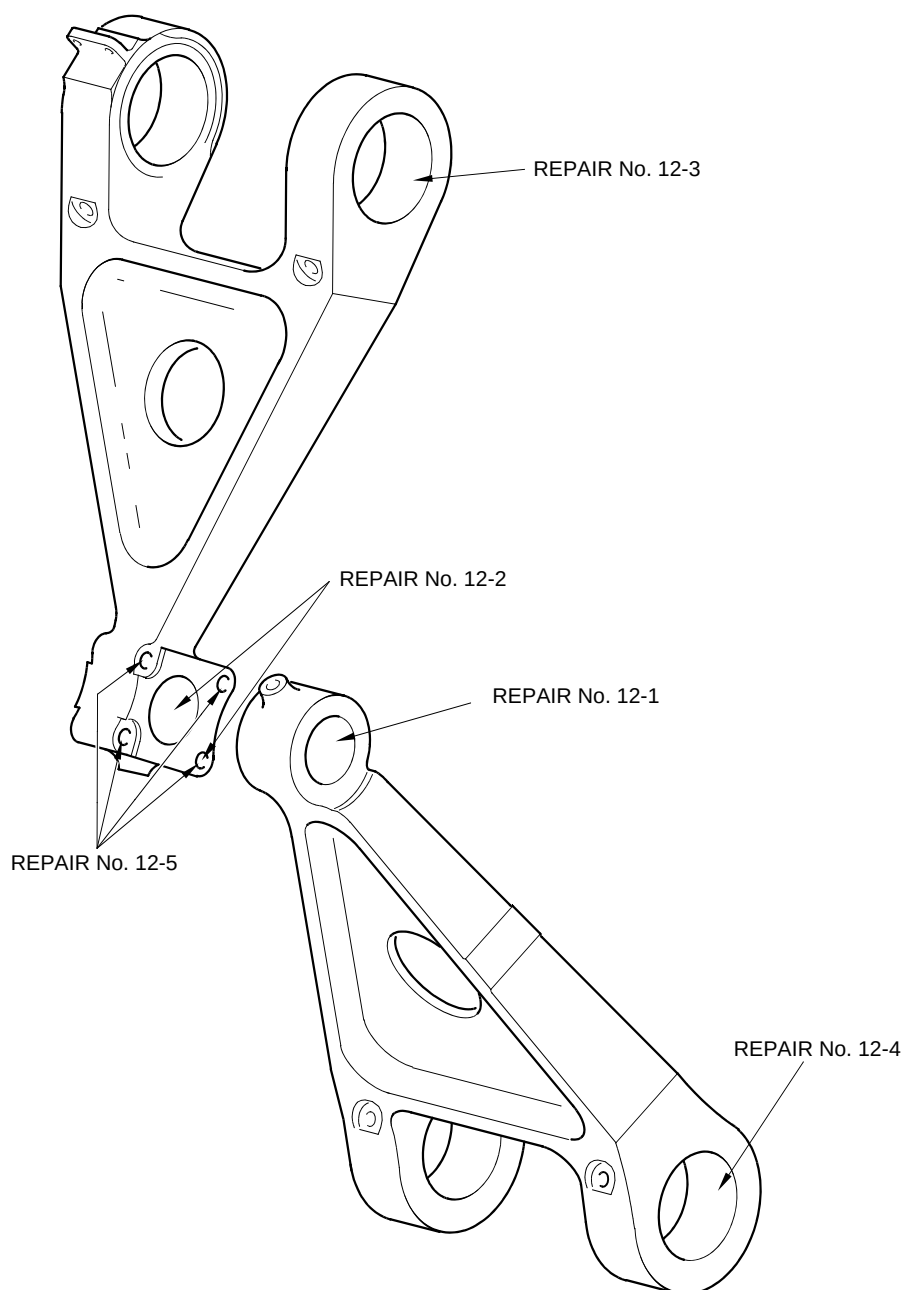

A321-S-32-12-22-029-1

Torque Link Repairs - Key Diagram
Figure 651


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

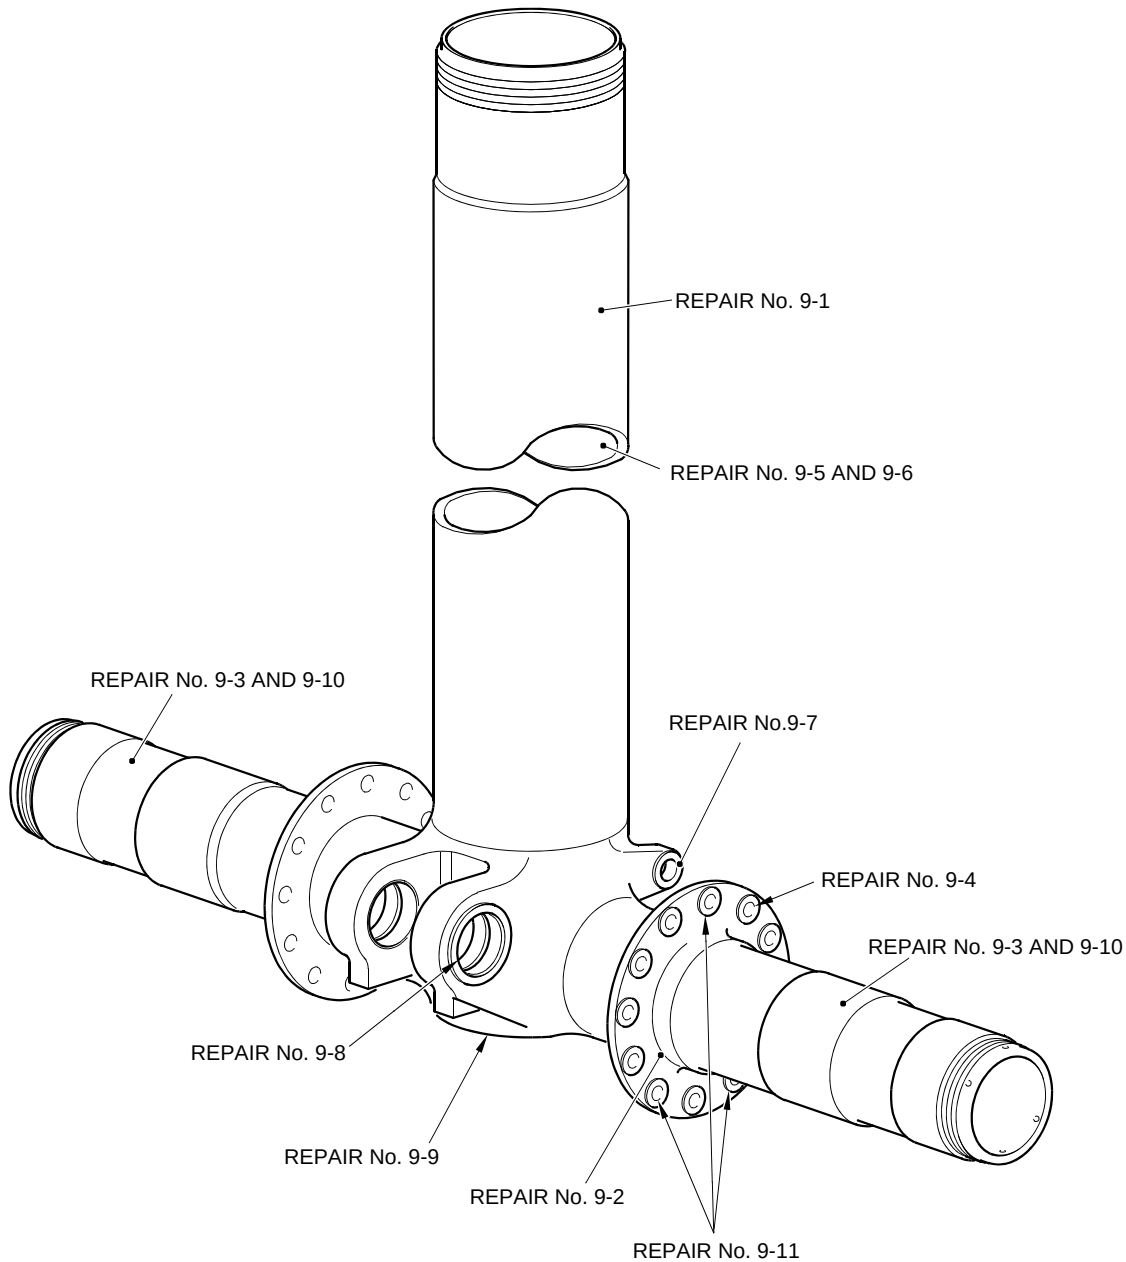

A321-S-32-12-22-055-1

**Sliding Tube Repairs - Key Diagram
Figure 652**


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

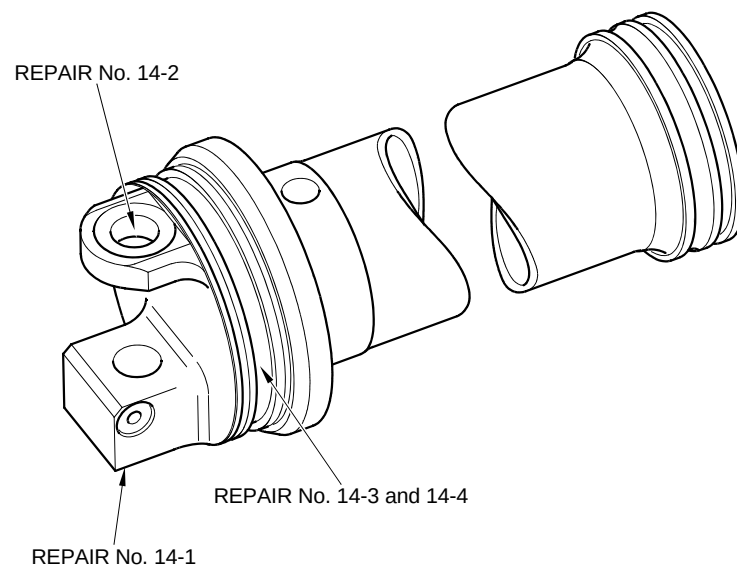

A321A5909-3

Upper Diaphragm Tube Repairs - Key Diagram
Figure 653


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

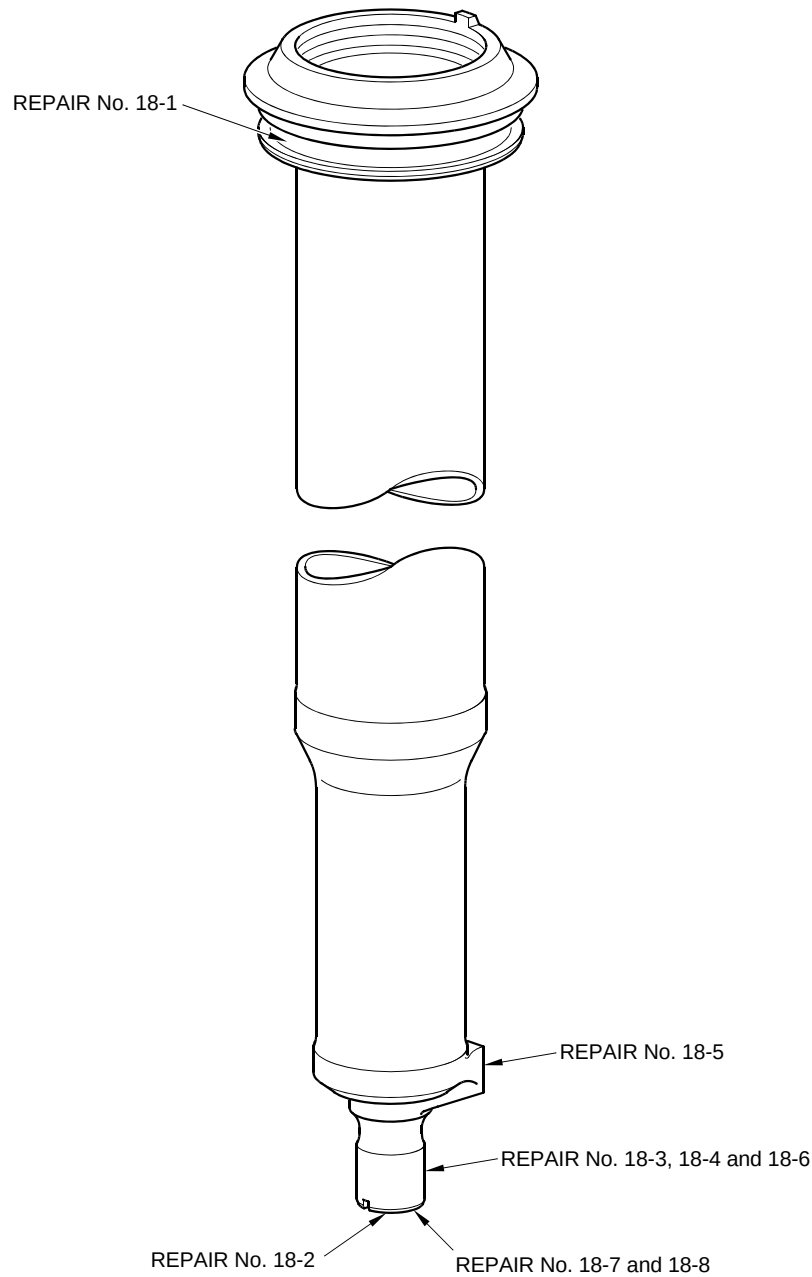

A321-S-32-12-22-043-2

Cylinder Repairs - Key Diagram
Figure 654

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

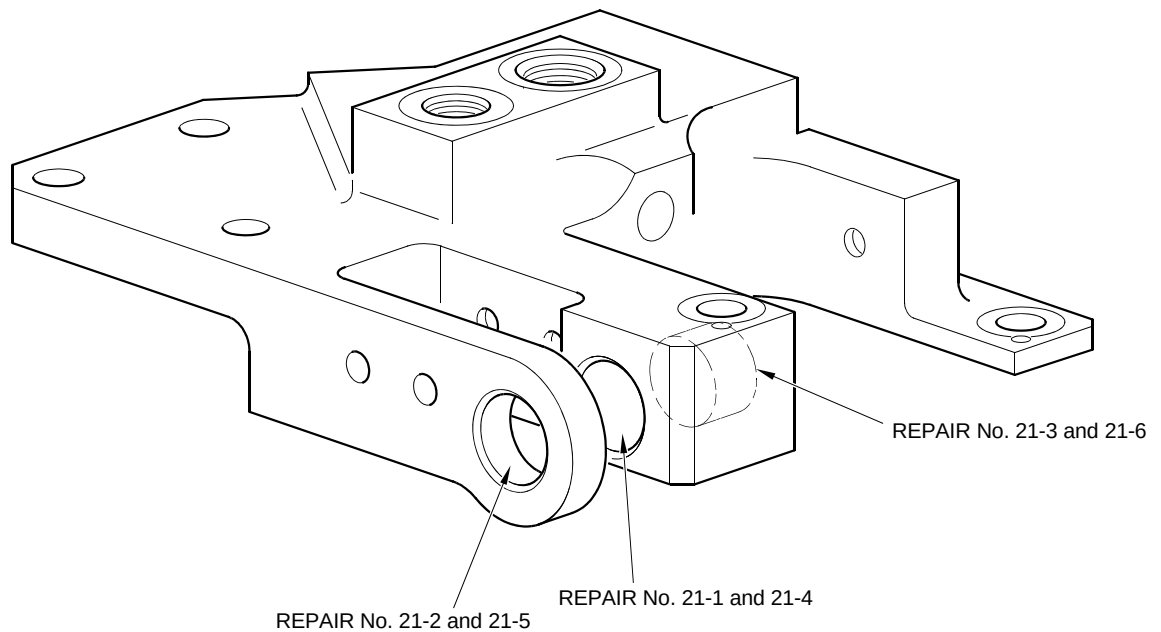


A321-S-32-12-22-014-1

Transfer Block Repairs - Key Diagram
Figure 655


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

REPAIR No. 24-1

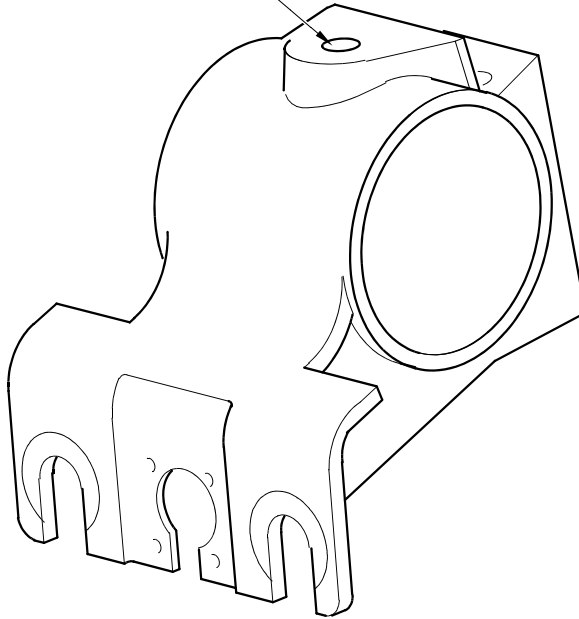

A321-S-32-12-22-007-0

**Harness Support Bracket Repairs - Key Diagram
Figure 656**



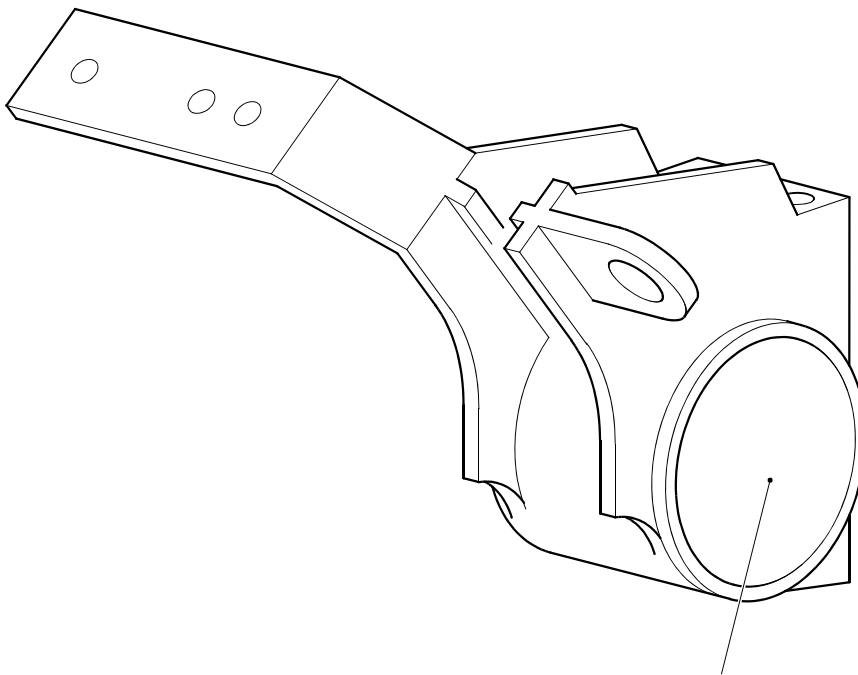


REPAIR No. 26-1

A321-S-32-12-22-057-0

**Upper Pivot Bracket Repairs - Key Diagram
Figure 657**


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

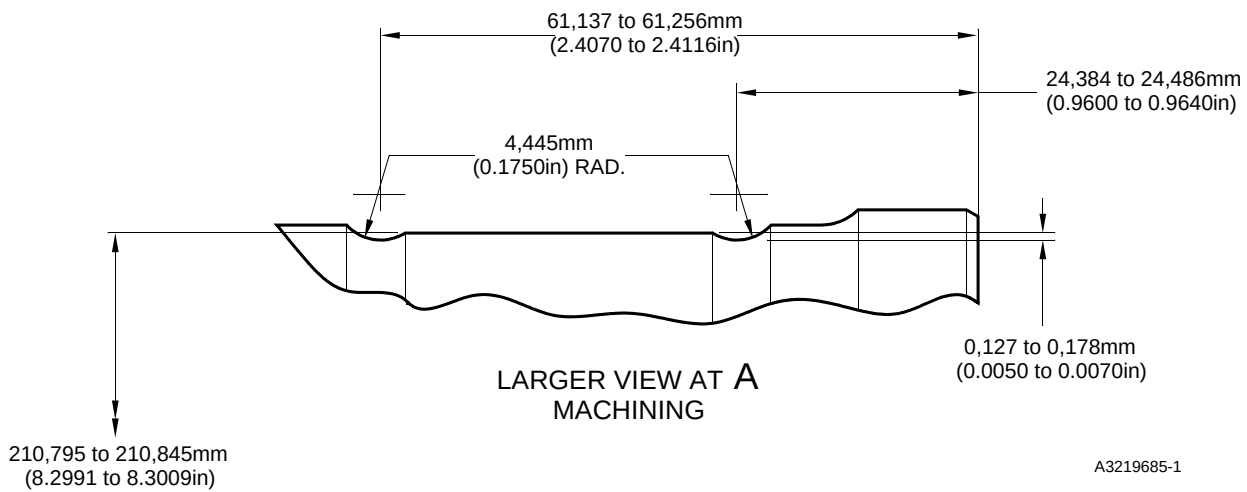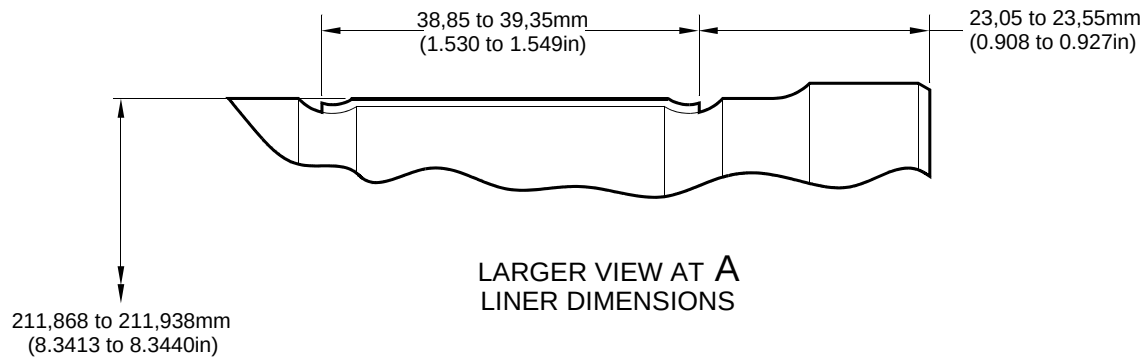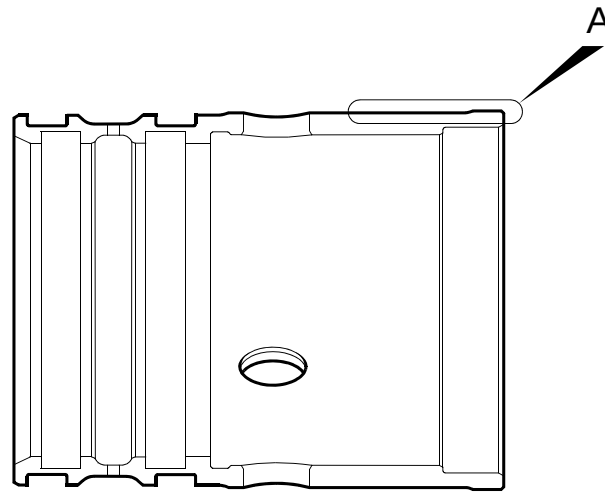

A3219685-1

**Repair to Lower Bearing Subassembly
Figure 601**


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

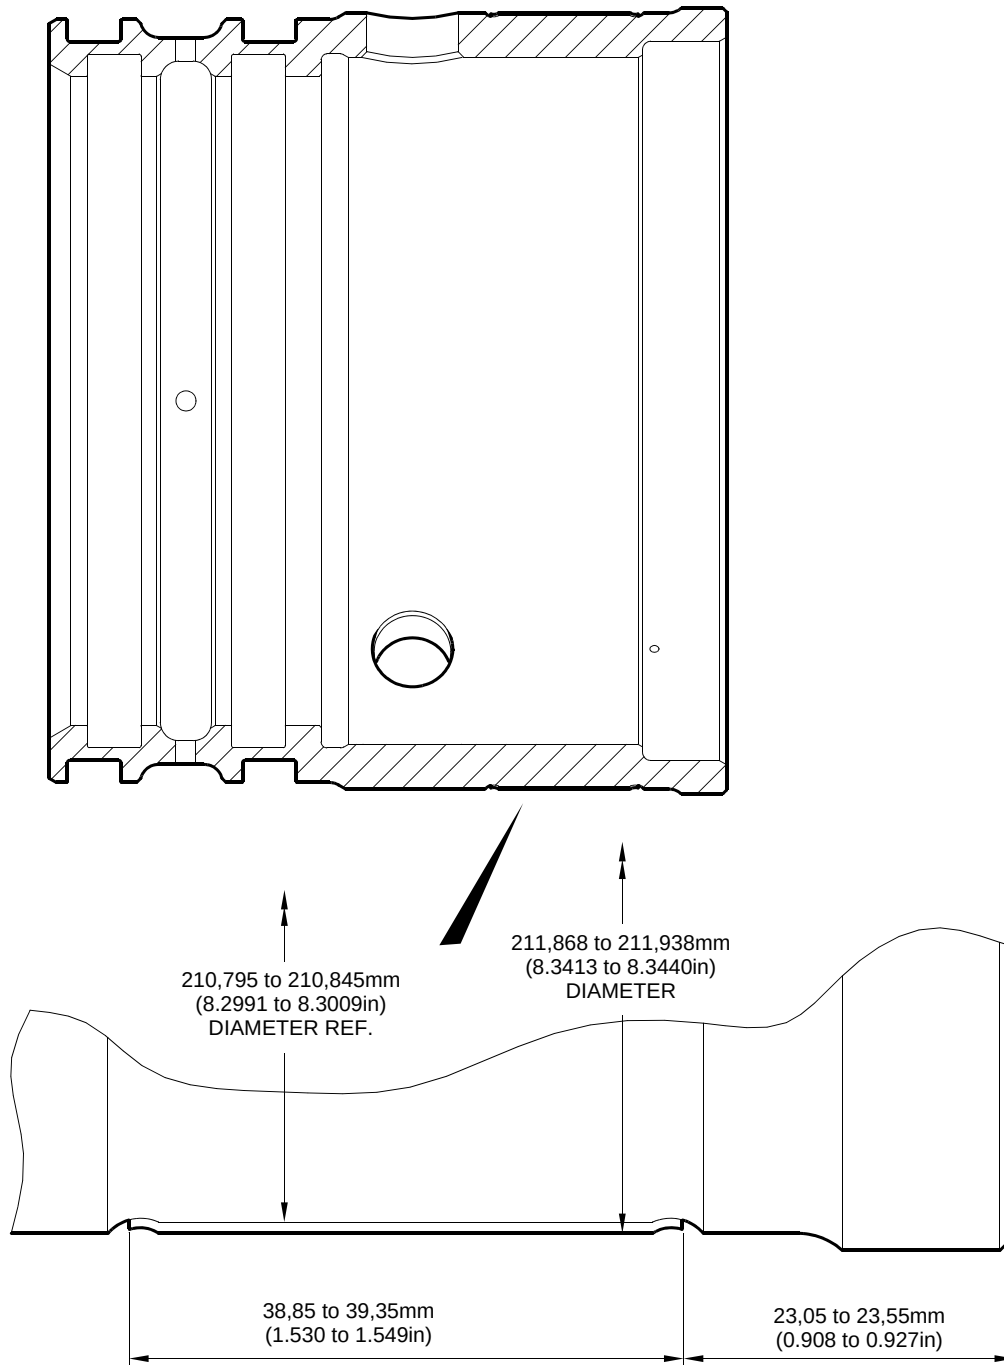

A321A2275-1


**Repair to Lower Bearing Subassembly
Figure 601**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

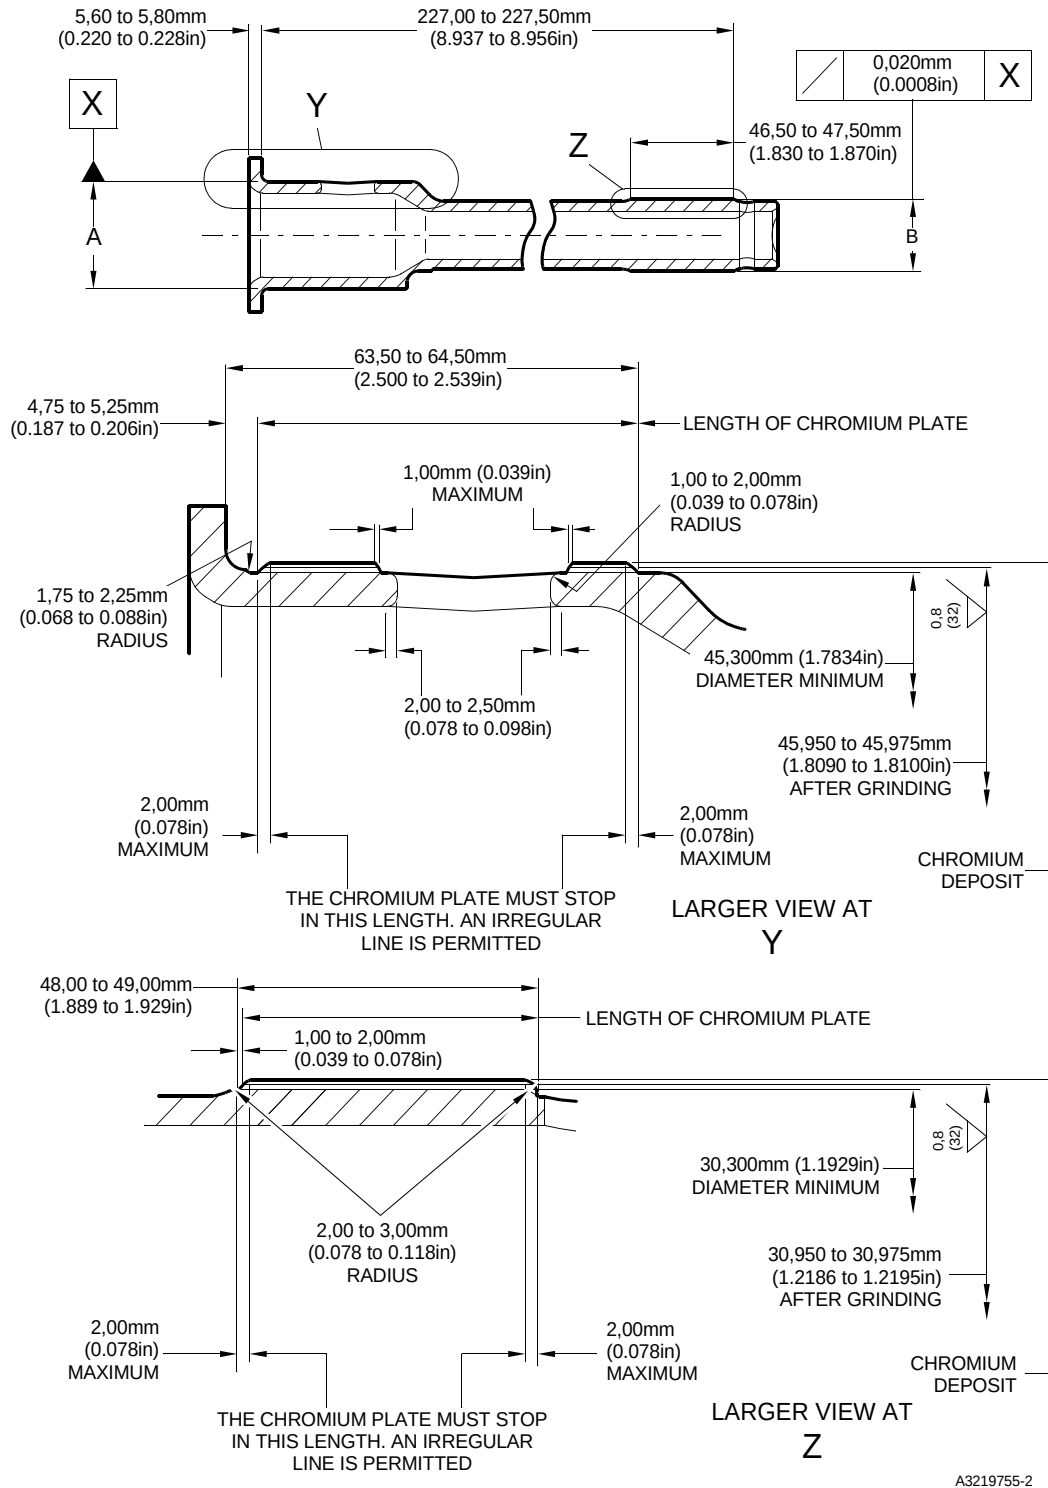


Repair to Pin
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

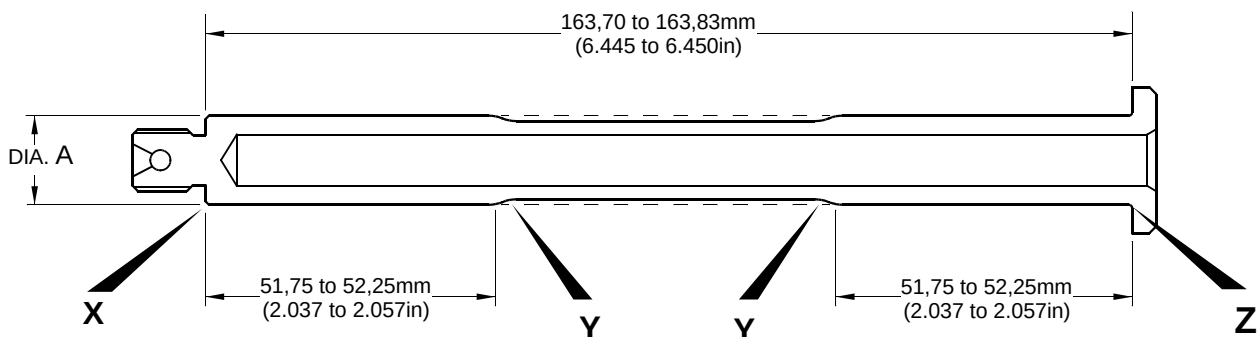


CHROMIUM PLATE CAN STOP
ANYWHERE ON THE CHAMFER.
IT CAN BE FINISHED BY GRINDING

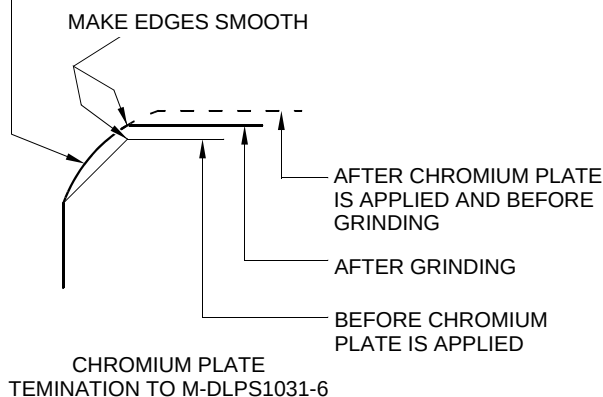

DETAIL X

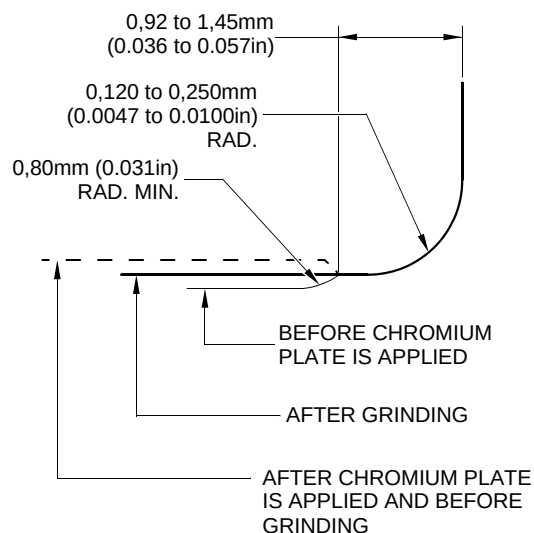

DETAIL Z

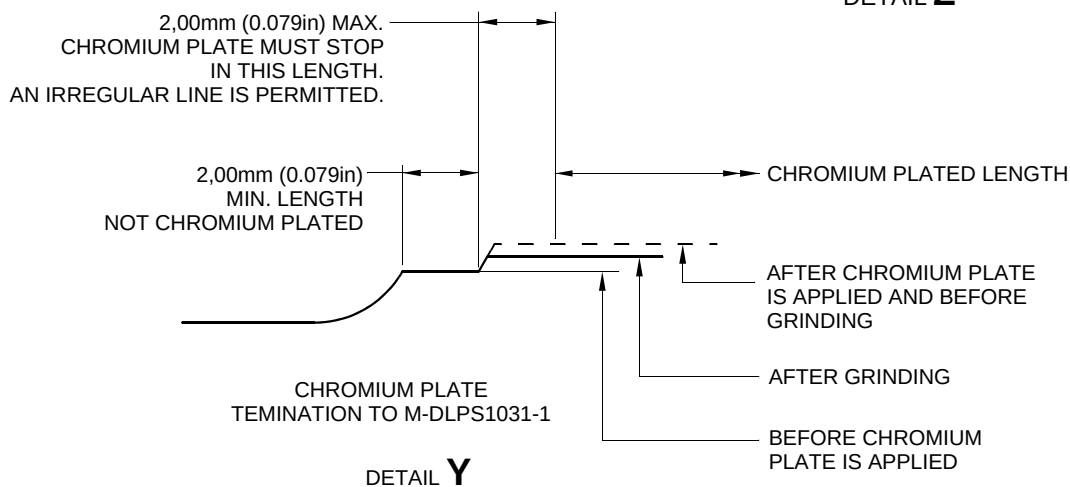


DETAIL Y

A321-S-32-12-22-099-0


Repair to Pivot Pin
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

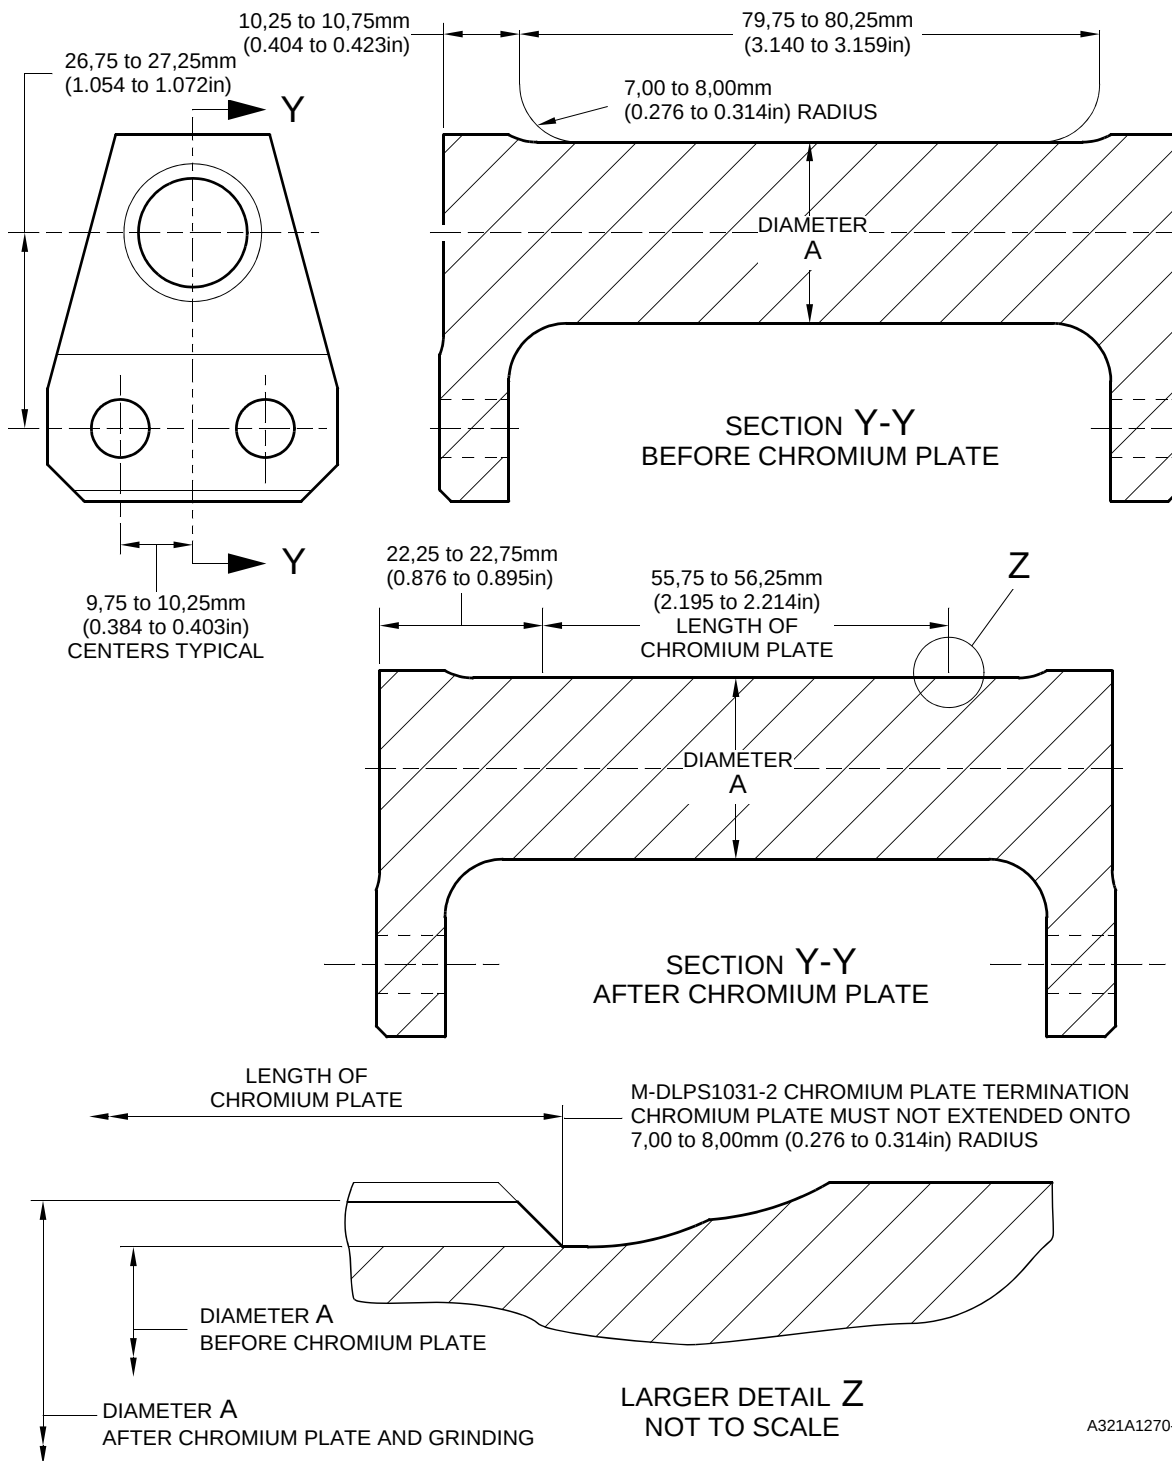

**Repair to Uplock Pin
Figure 601**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

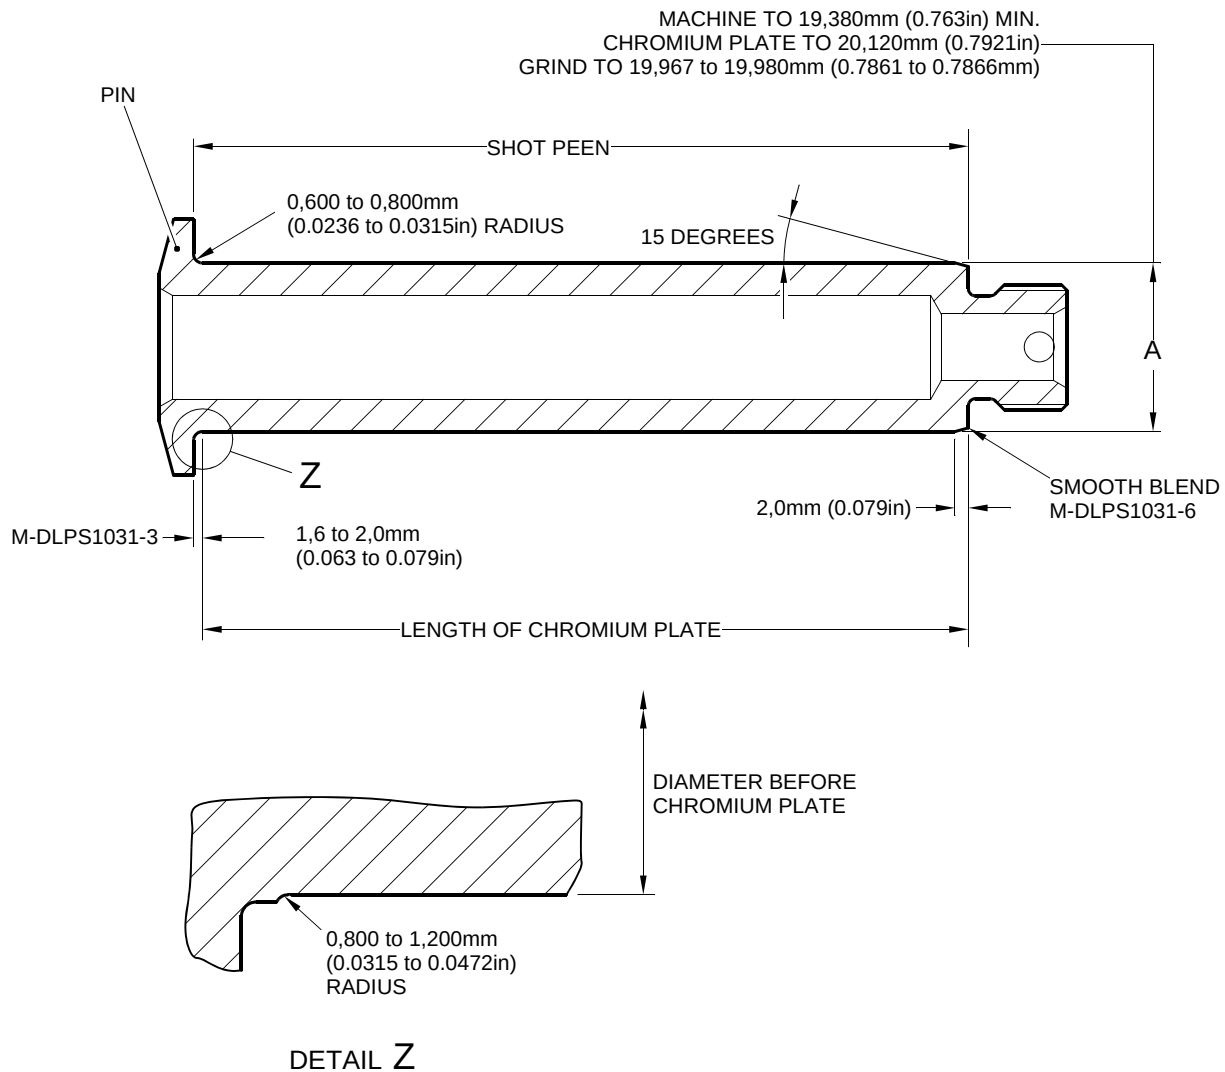


A321A2276-1

Repair to Pin
Figure 601

32-12-22

Repair No. 5-1
Page 602
Dec 9/2016


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

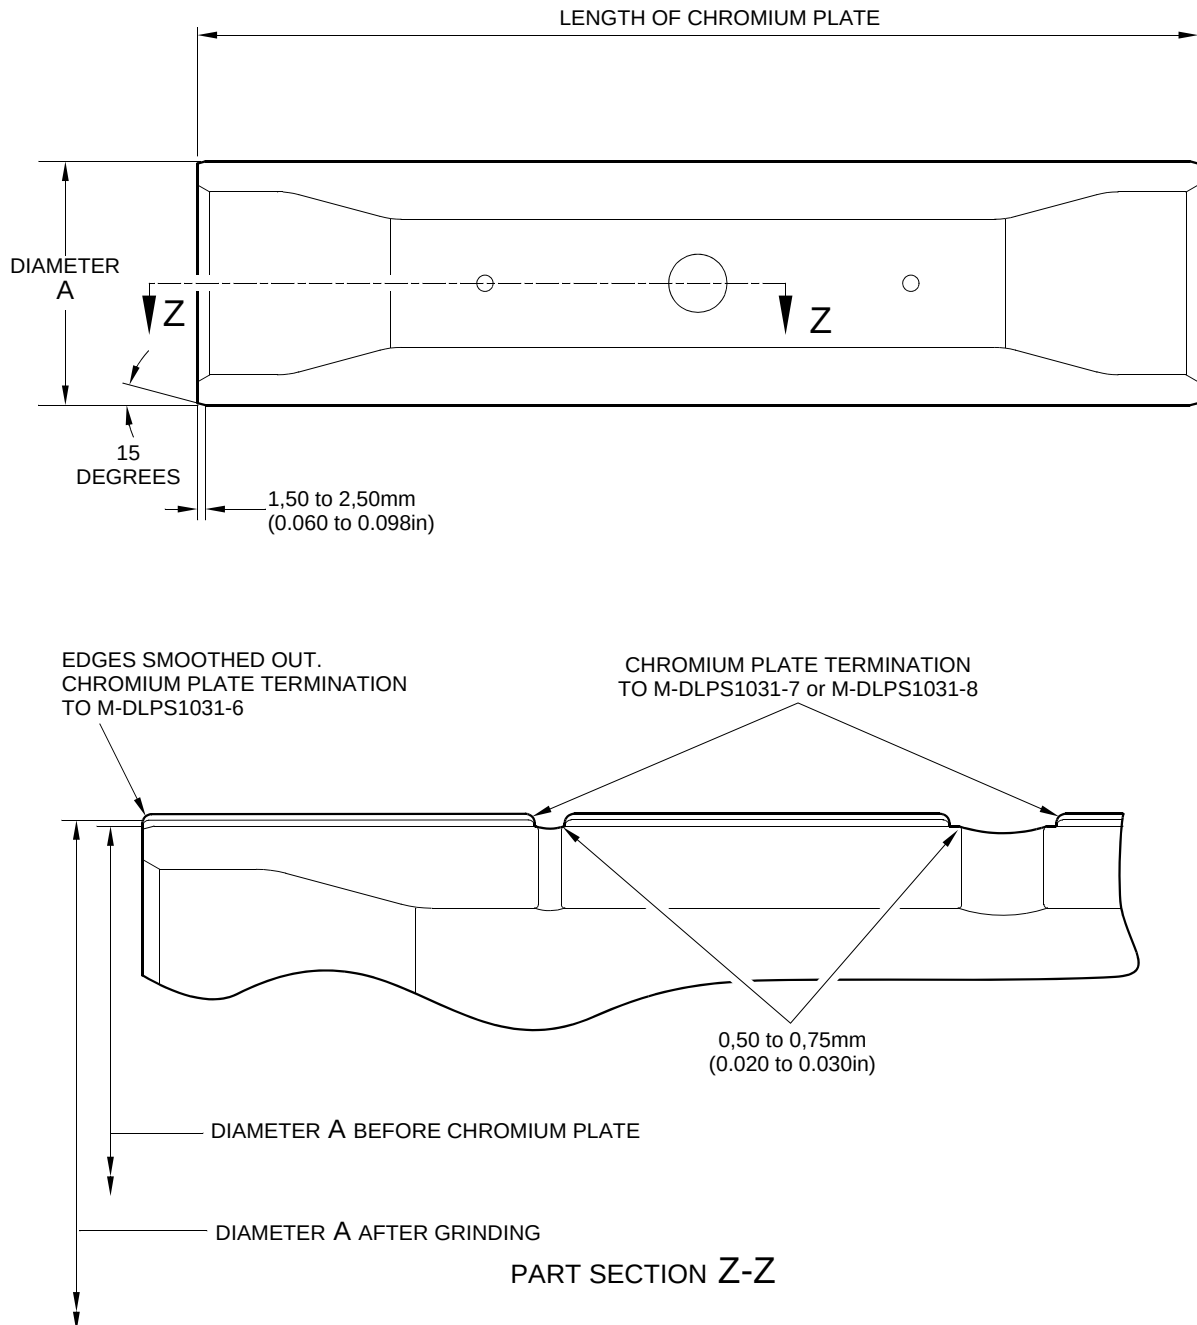

A321A2936-1


Repair to Pin
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

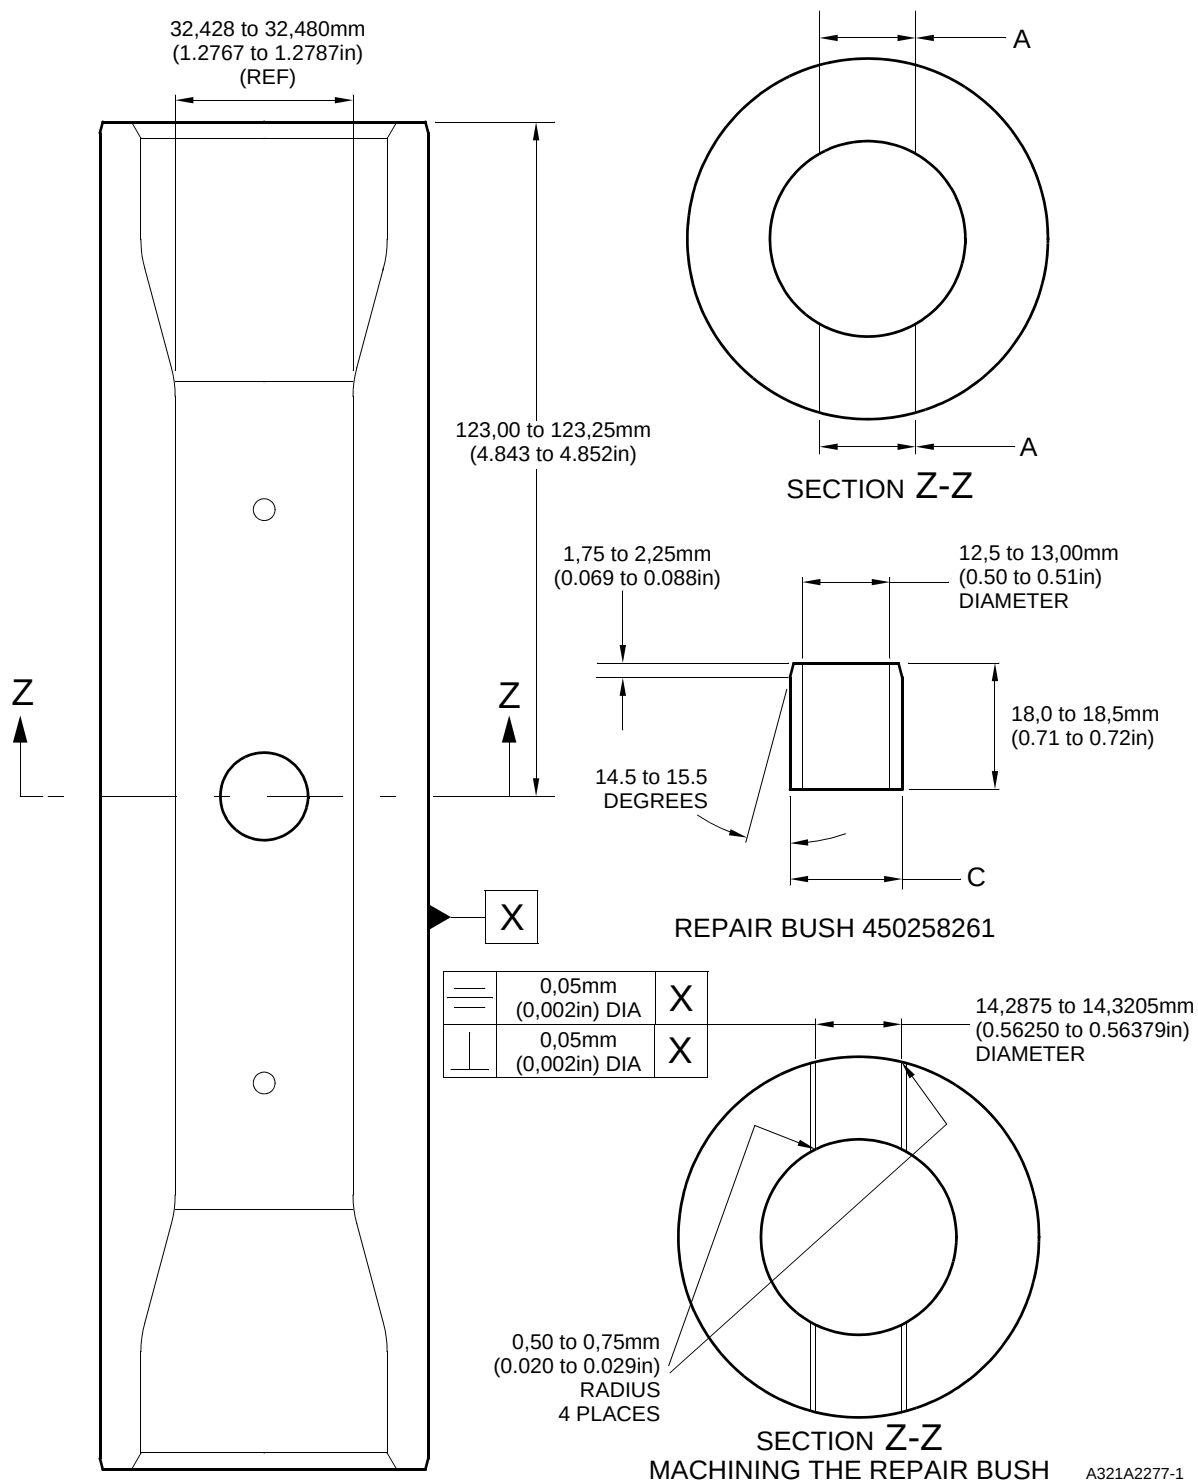

Repair to Pin
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

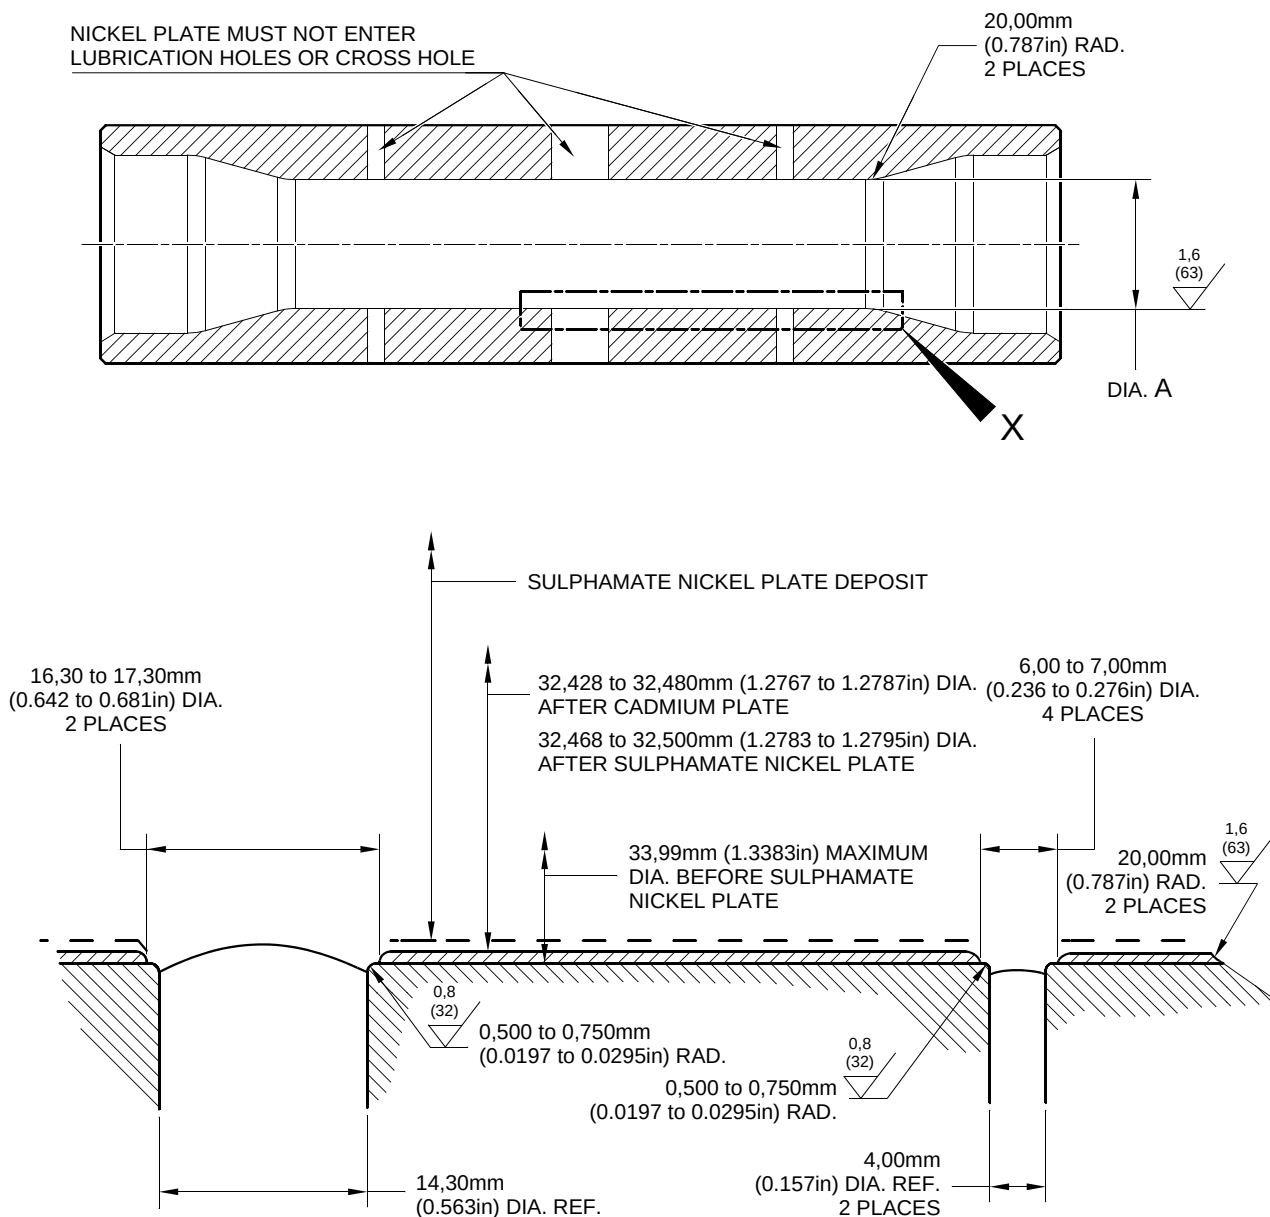

DETAIL X


A321-S-32-12-22-001-0

Repair to Pin
Figure 601

32-12-22

Repair No. 6-3
Page 603
Dec 6/2019


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

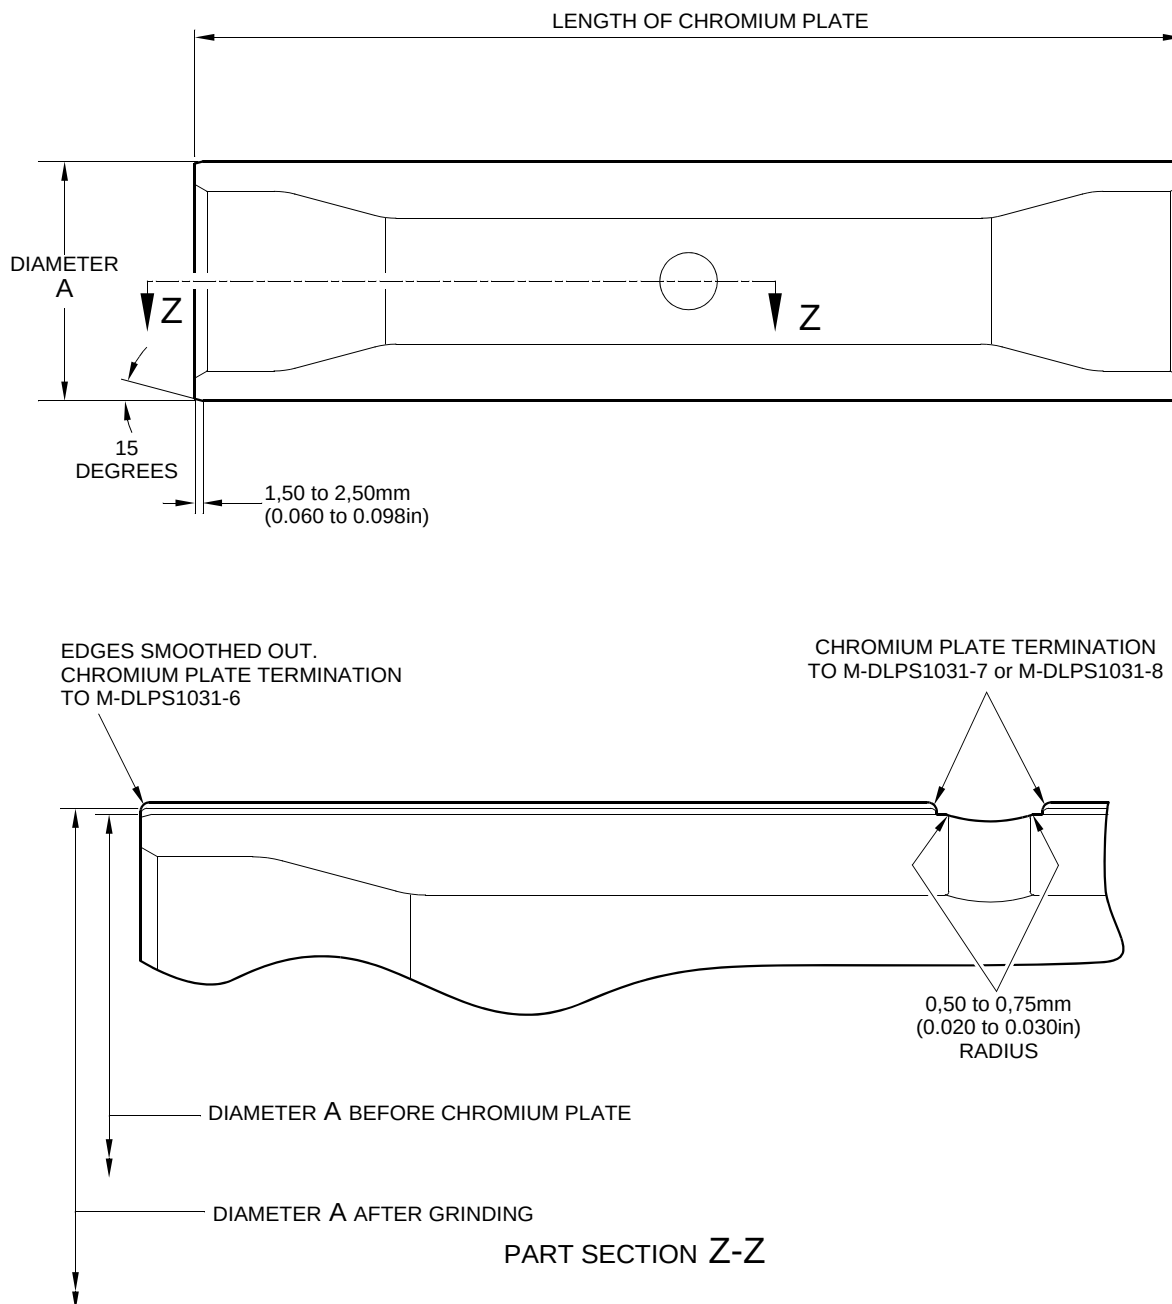

A321A2937-1

Repair to Pin
Figure 601


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

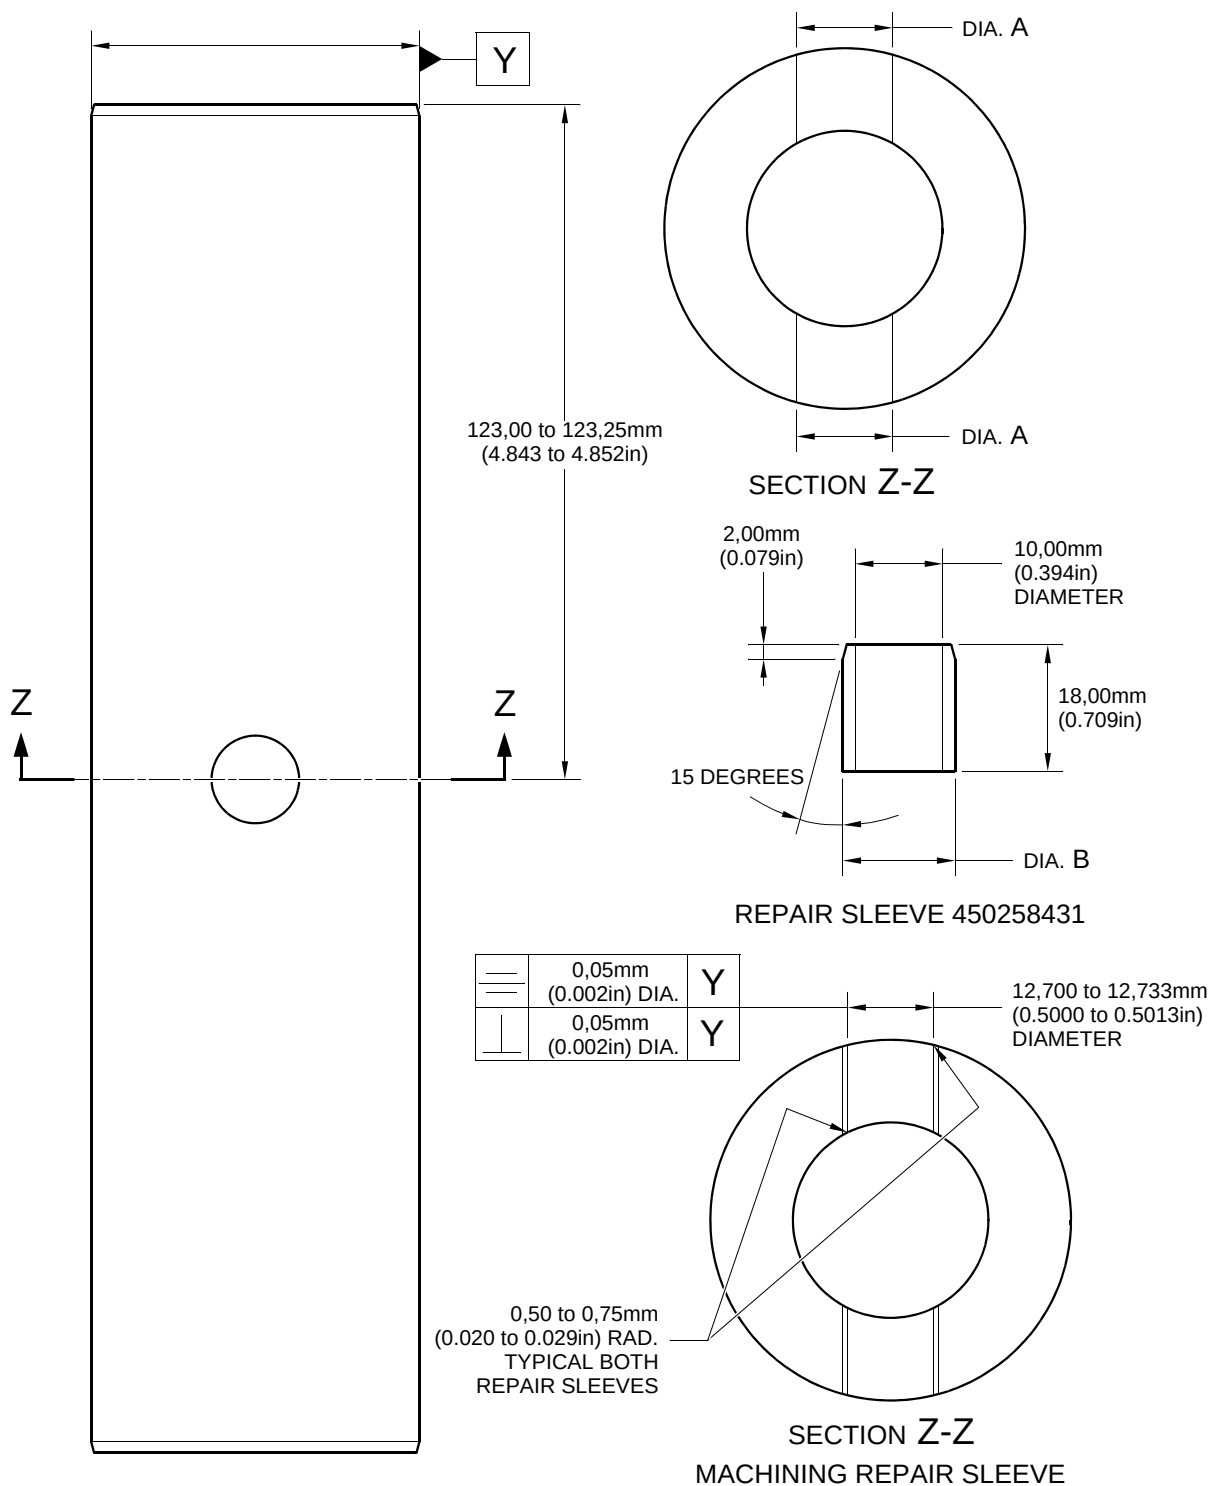

A321-S-32-12-22-071-0

Repair to Pin
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

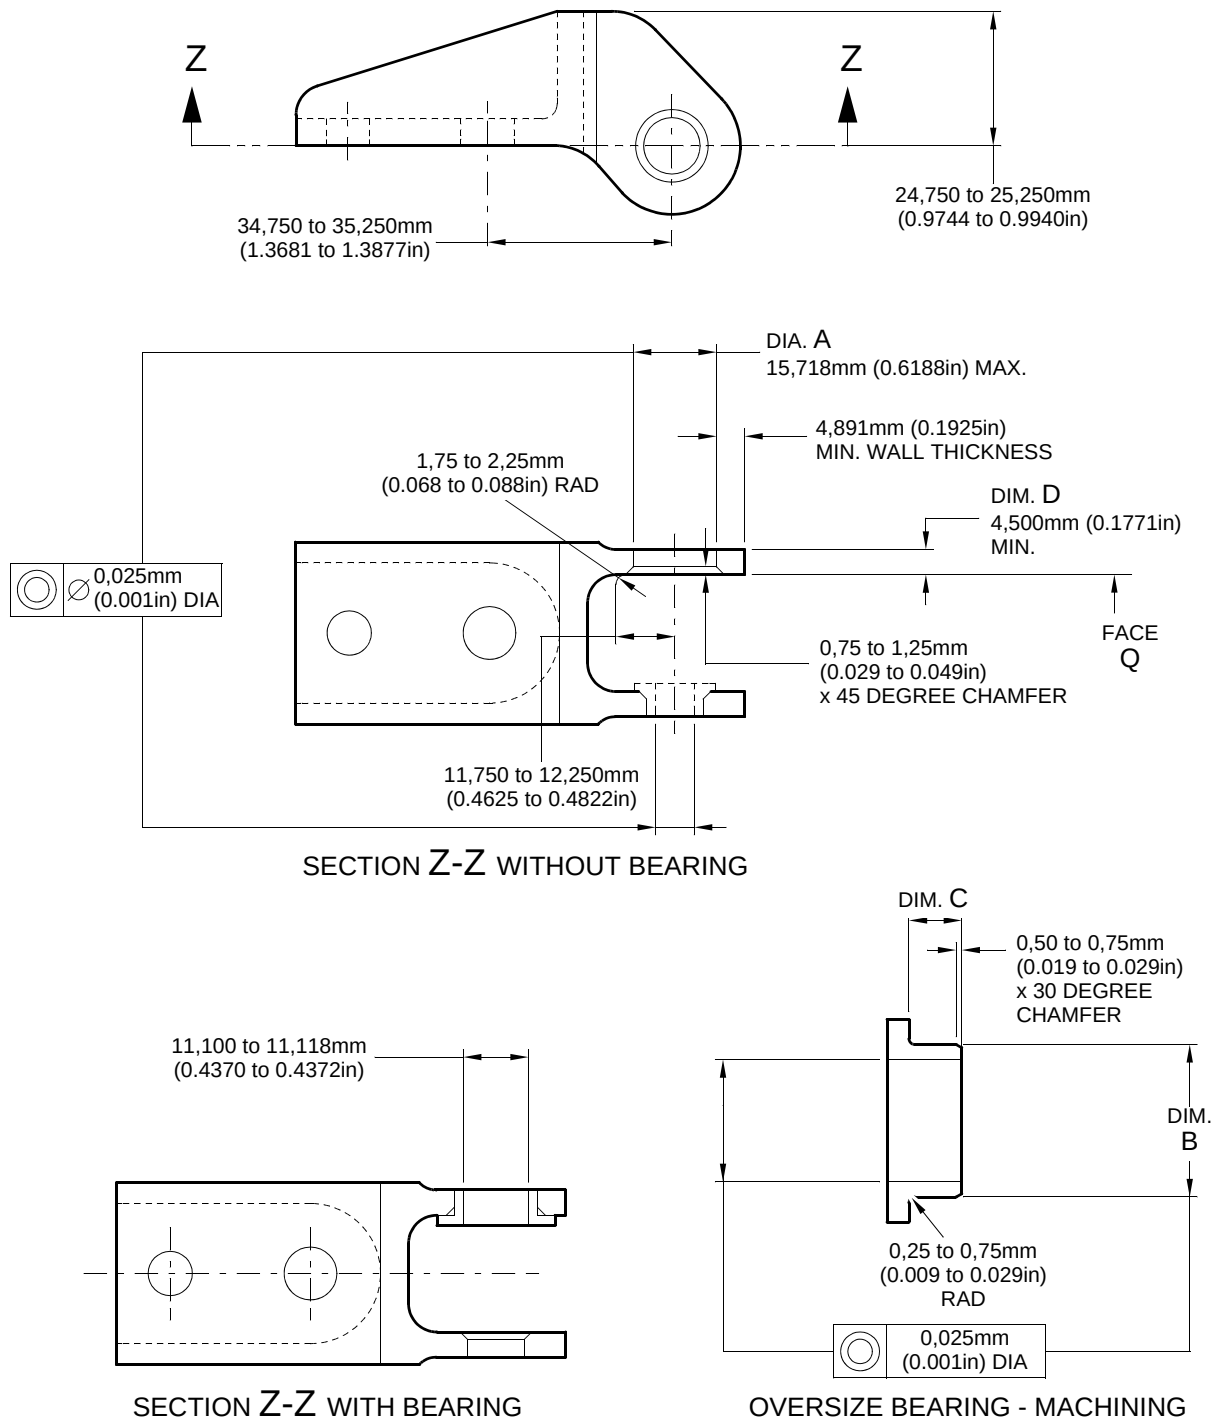


A321A3510-1

Repair to Bracket
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

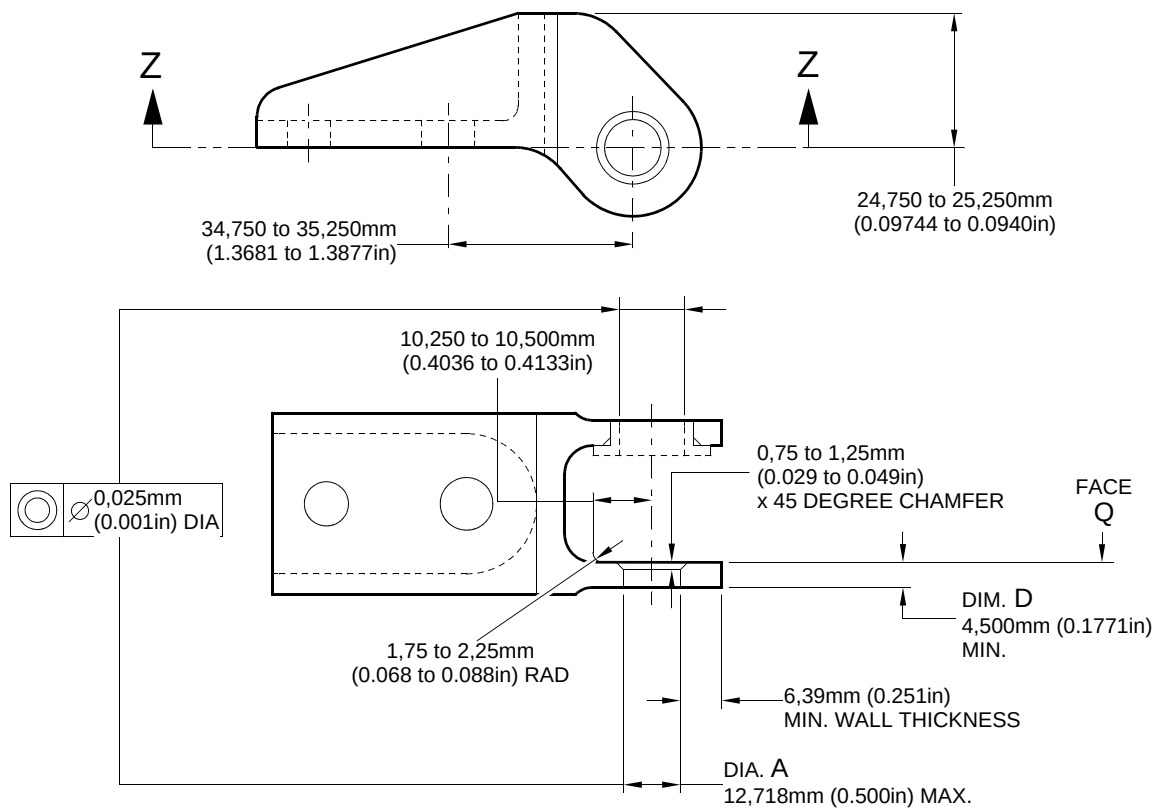

SECTION Z-Z WITHOUT BEARING

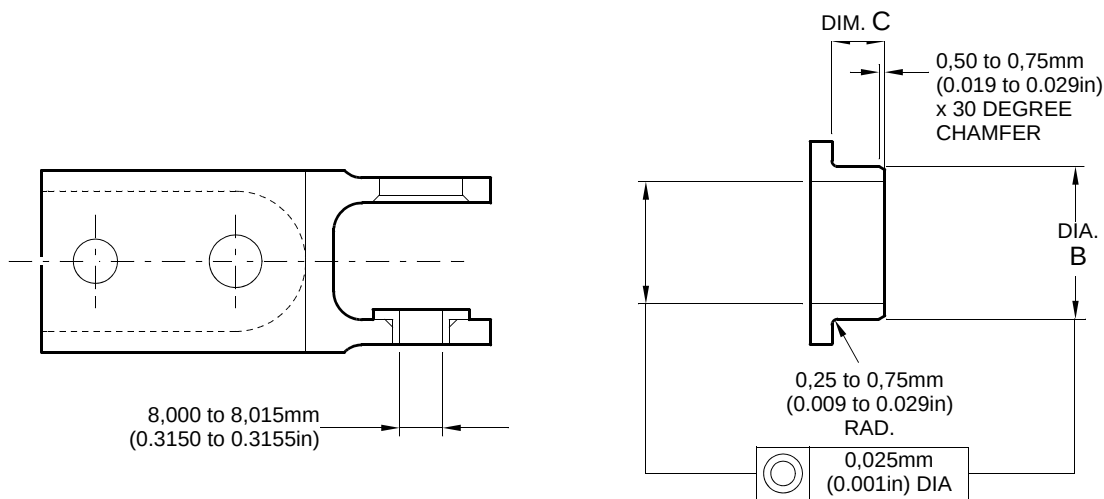

SECTION Z-Z WITH BEARING

OVERSIZE BEARING - MACHINING


A321A3511-1

Repair to Bracket
Figure 601

32-12-22

Repair No. 8-2
Page 603
Dec 6/2019


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

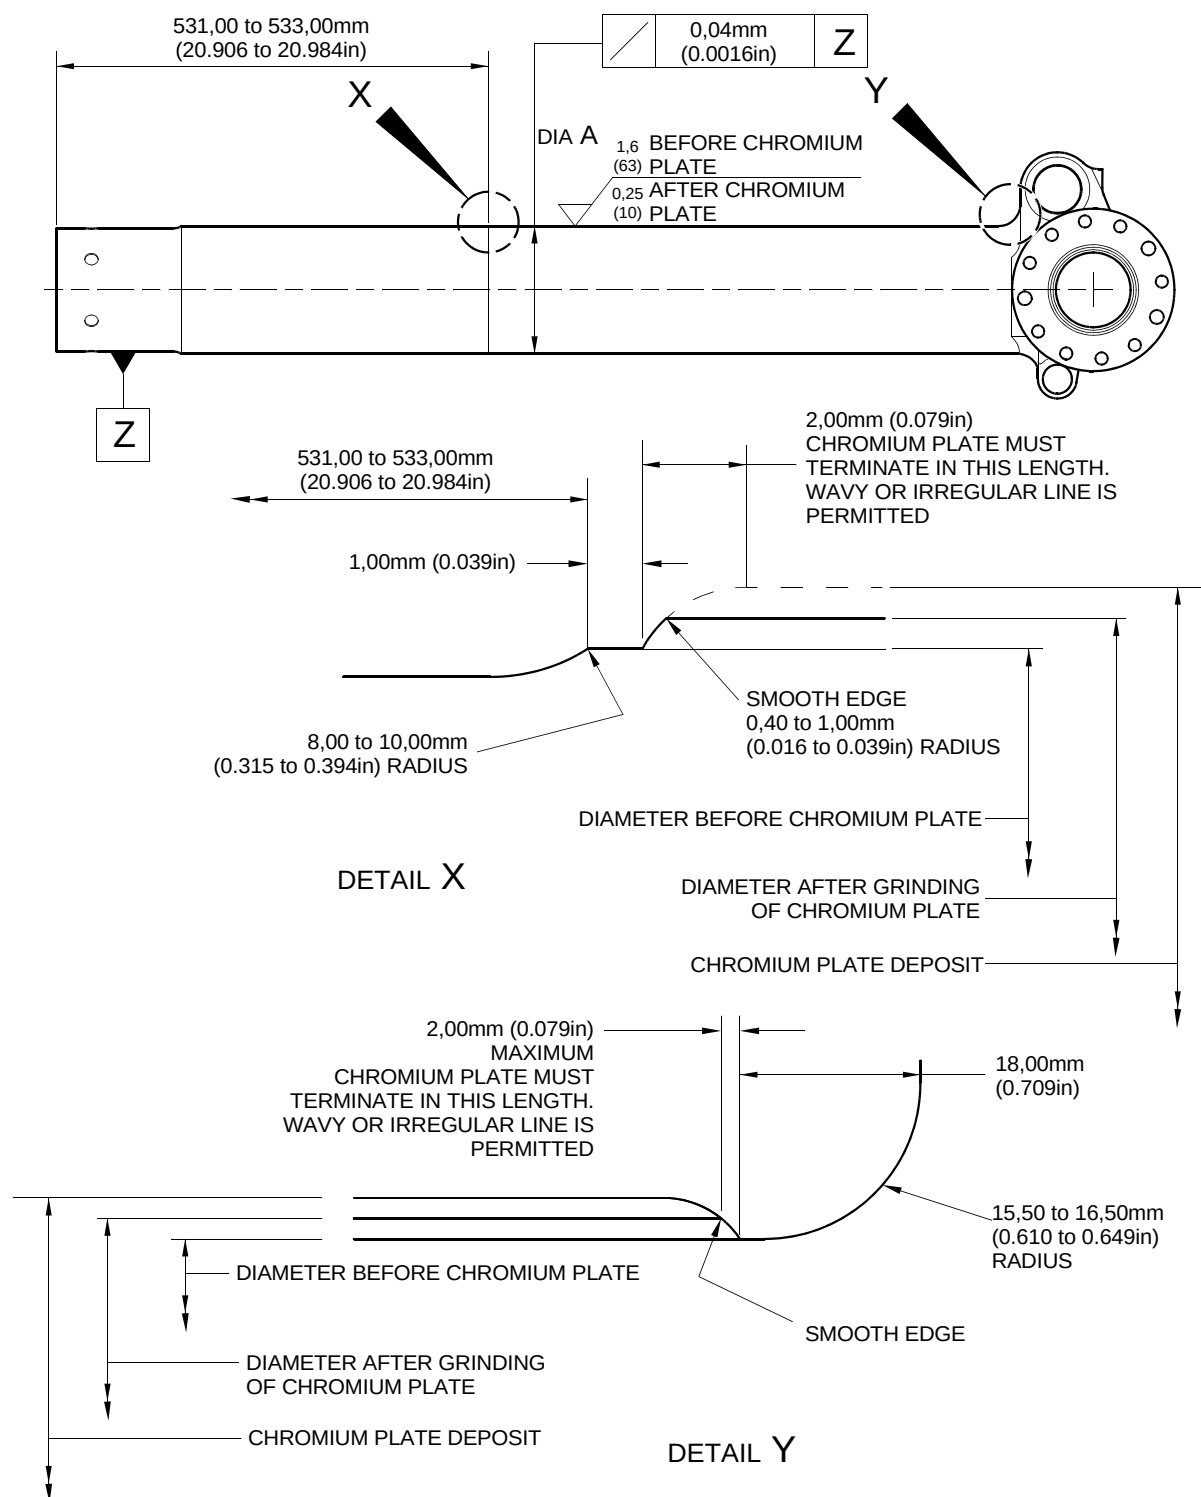

A321-S-32-12-22-025-0

**Repair to Sliding Tube
Figure 601**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

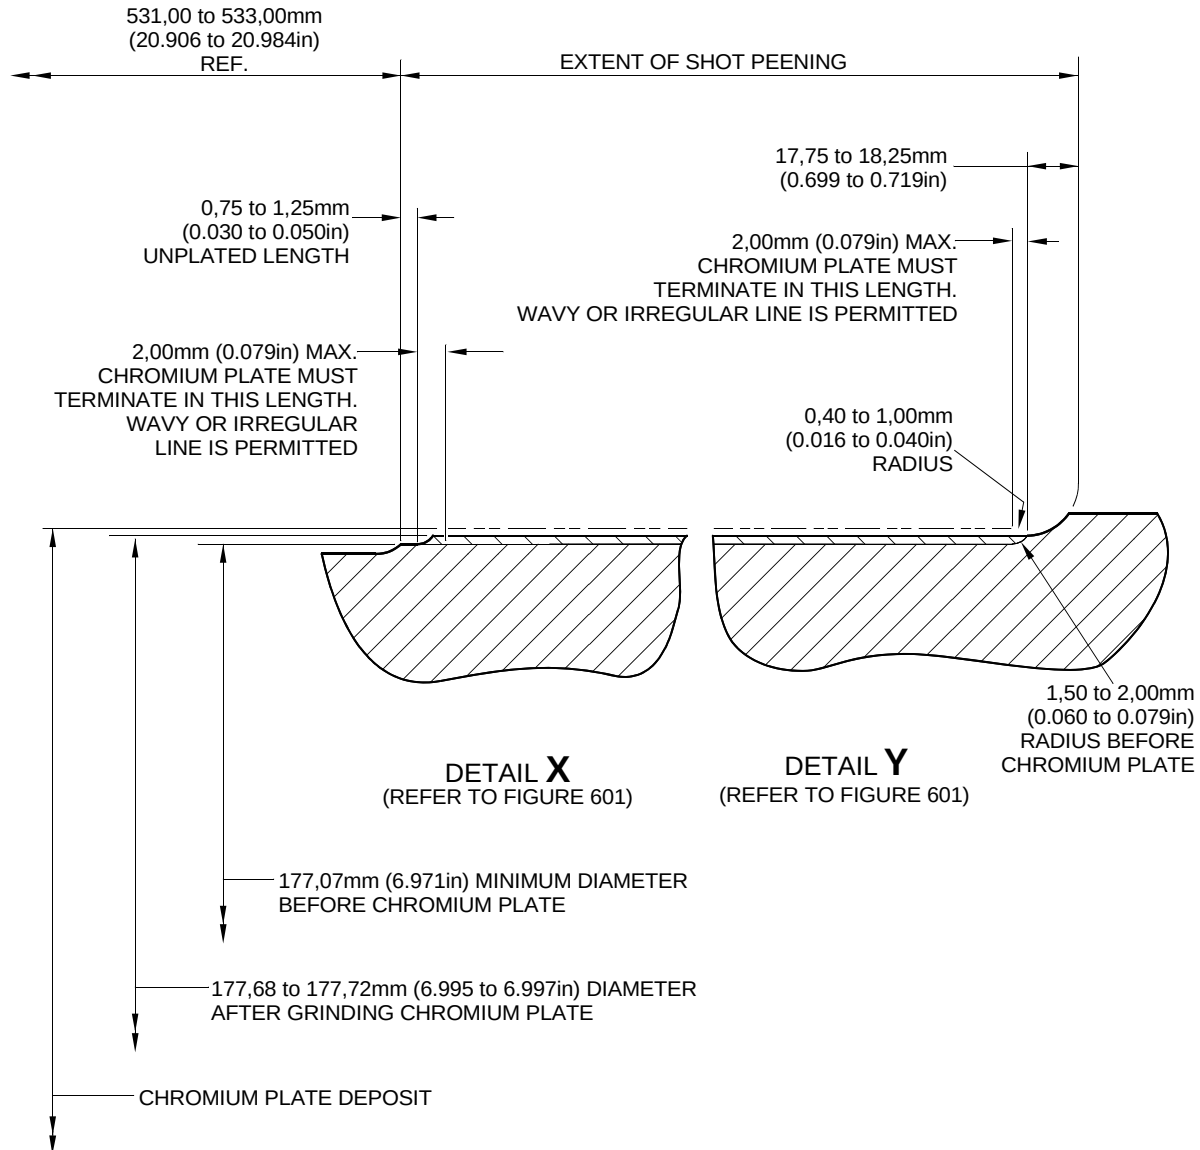


A321-S-32-12-22-026-0

Repair to Sliding Tube
Figure 602

32-12-22

Repair No. 9-1
Page 604
Dec 6/2019

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

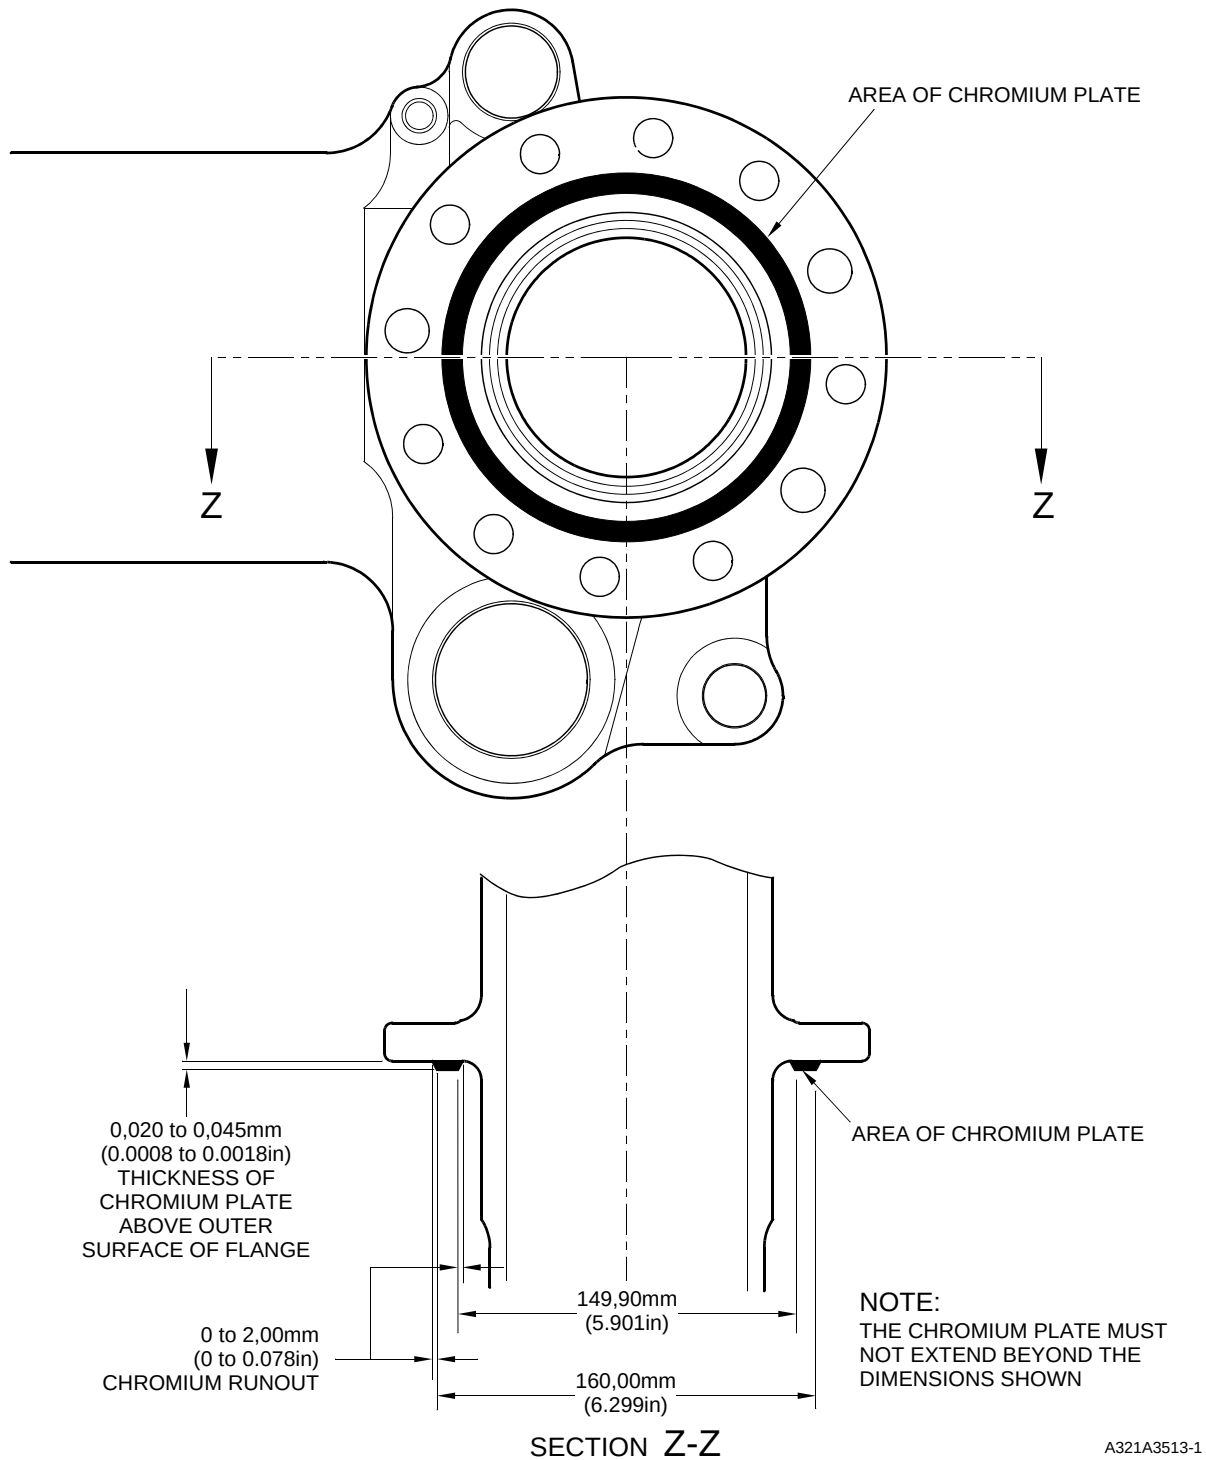


Repair to Sliding Tube
Figure 601

32-12-22

Repair No. 9-2
Page 604
Dec 9/2016

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**


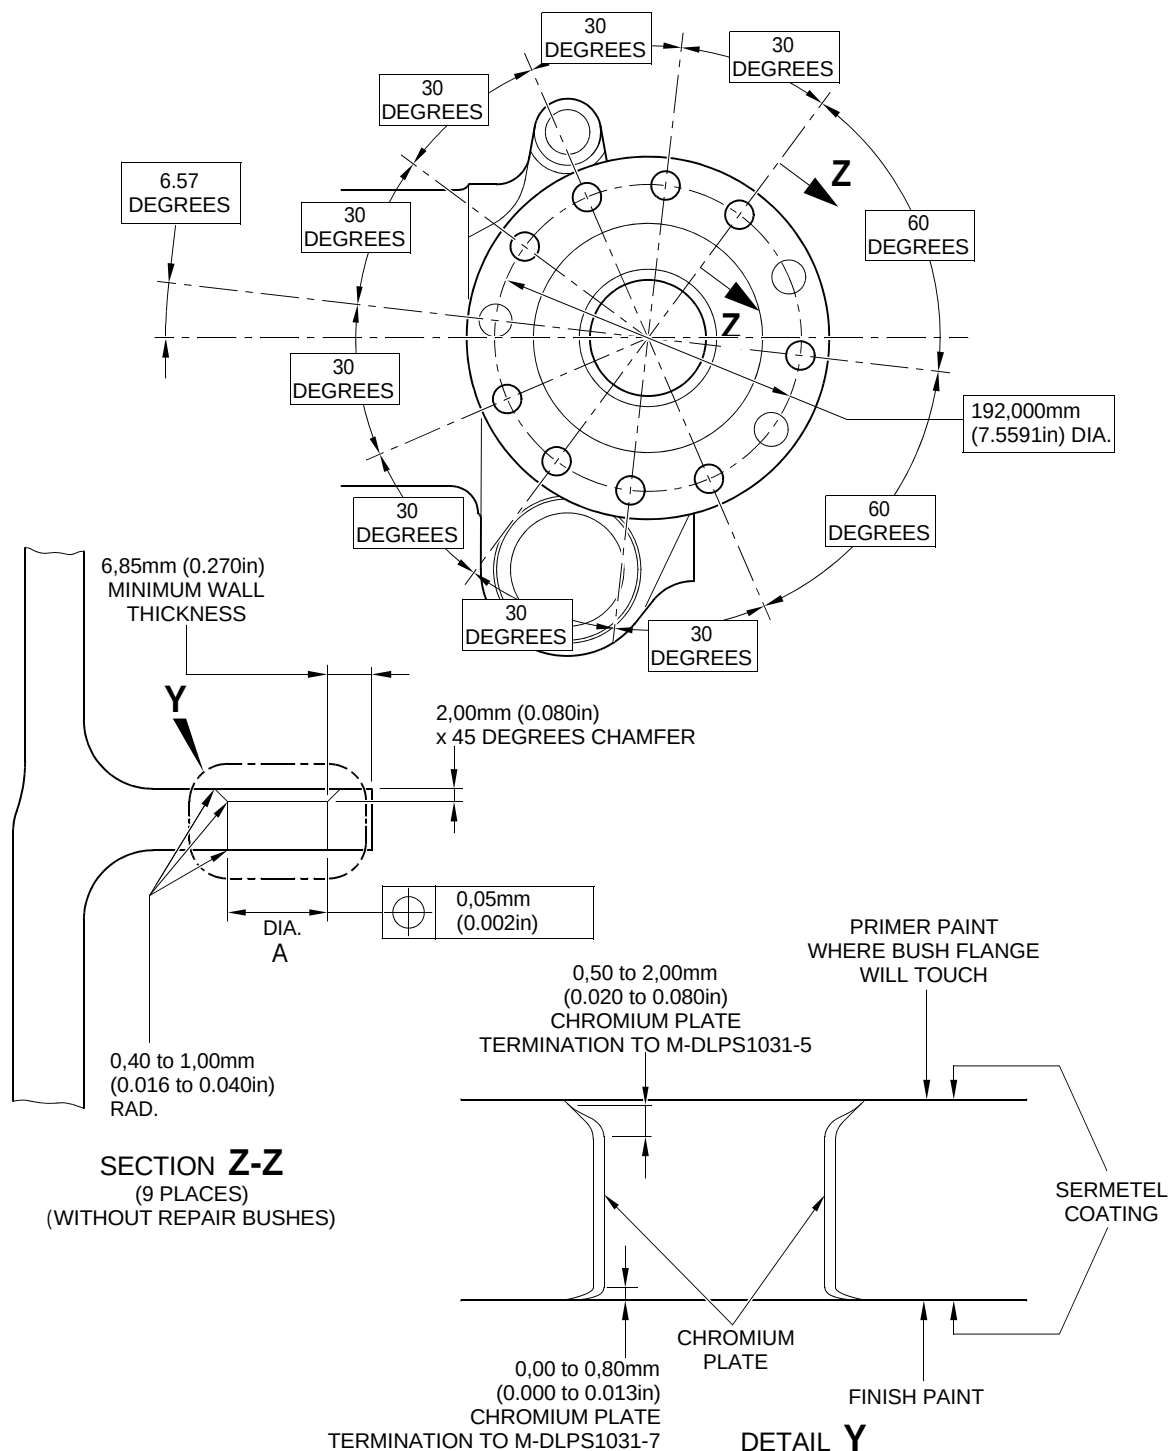


A321A5544-2

**Repair to Sliding Tube - Machining
Figure 601**

32-12-22


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

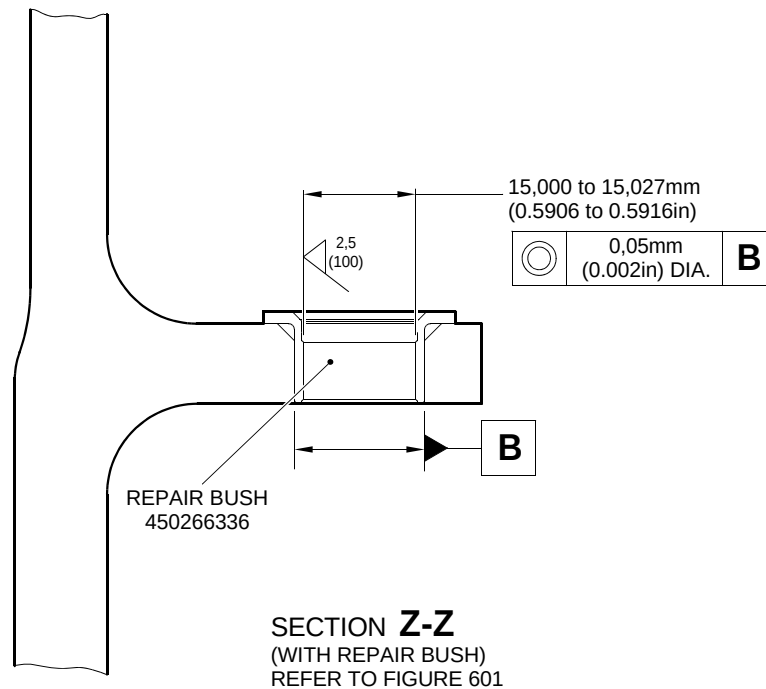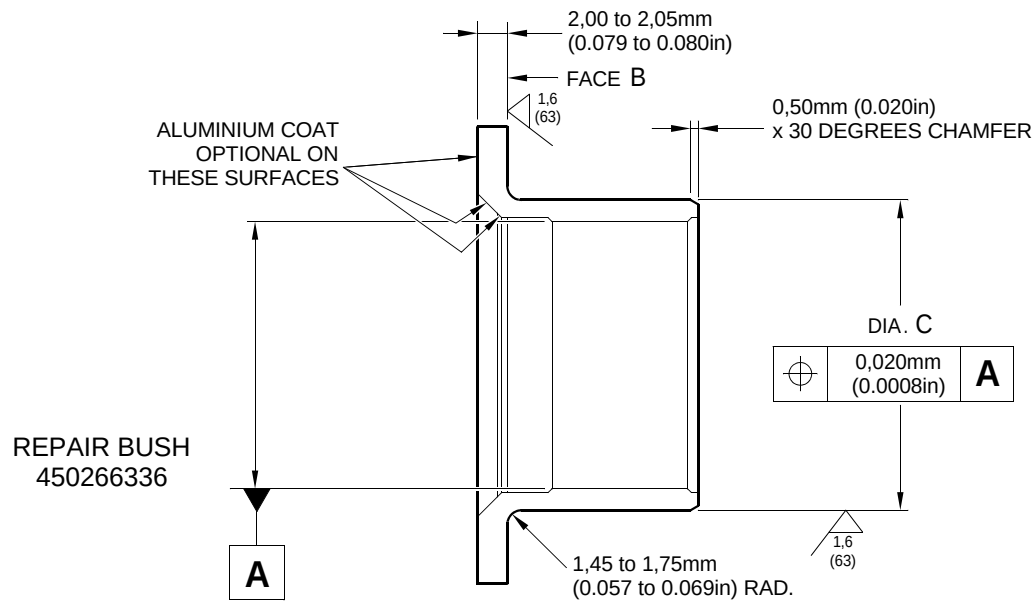

A321A5545-2

**Repair Bush - Machining and Installation
Figure 602**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

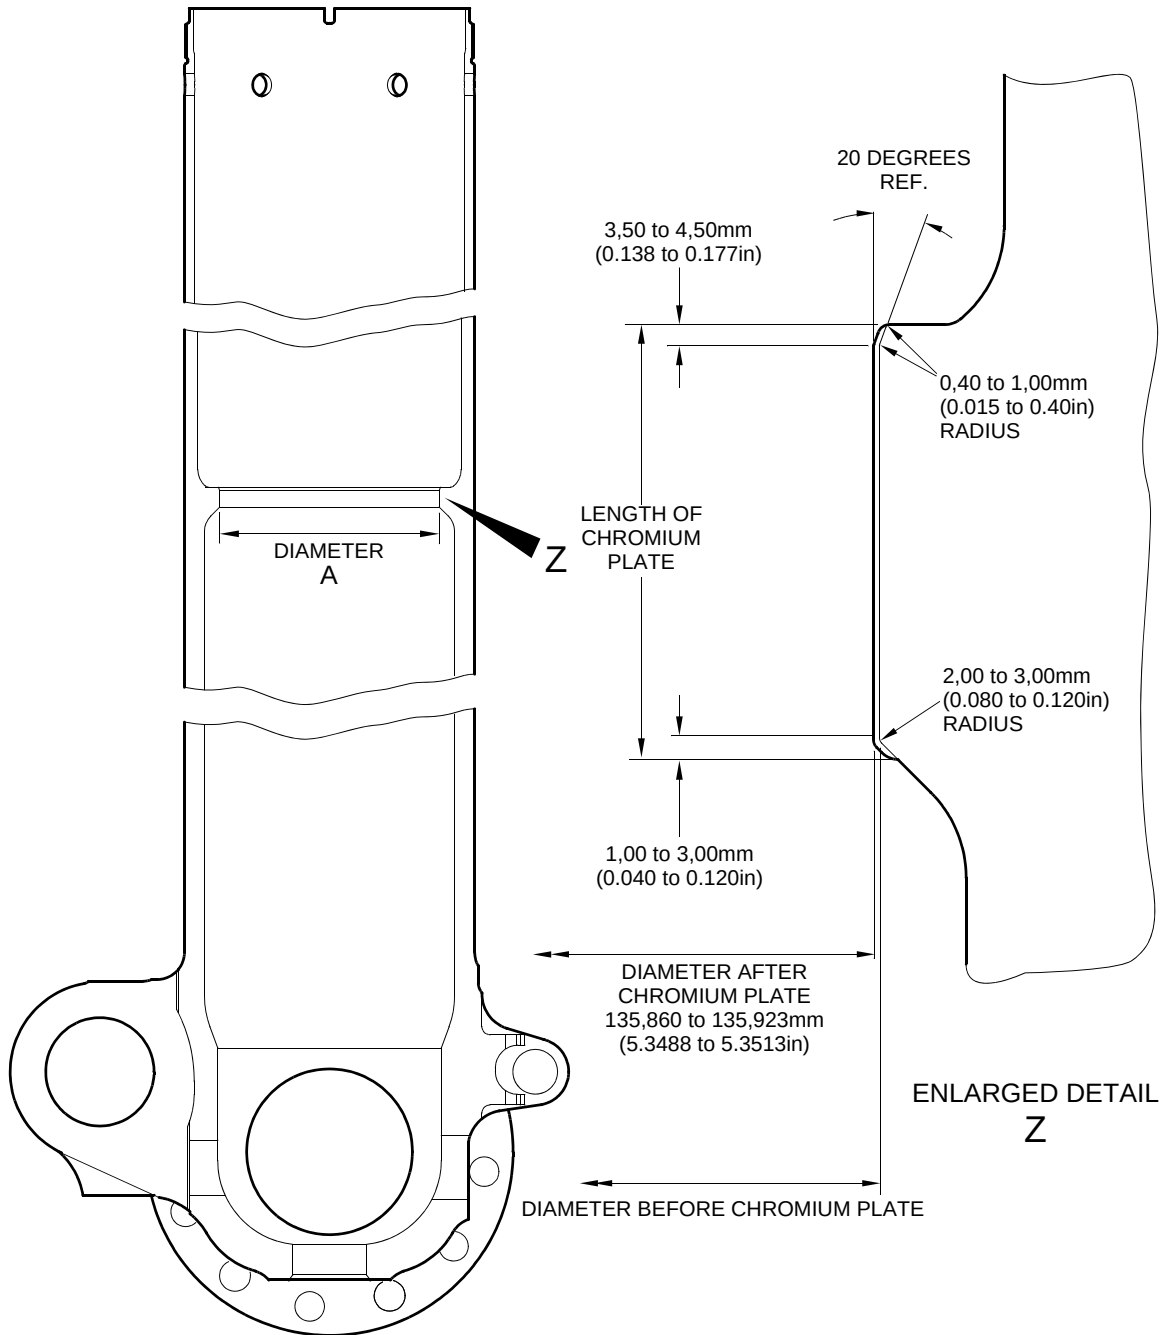


A321A5714-1

**Repair to Sliding Tube
Figure 601**

32-12-22


Repair No. 9-5
Page 602
Dec 6/2019

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

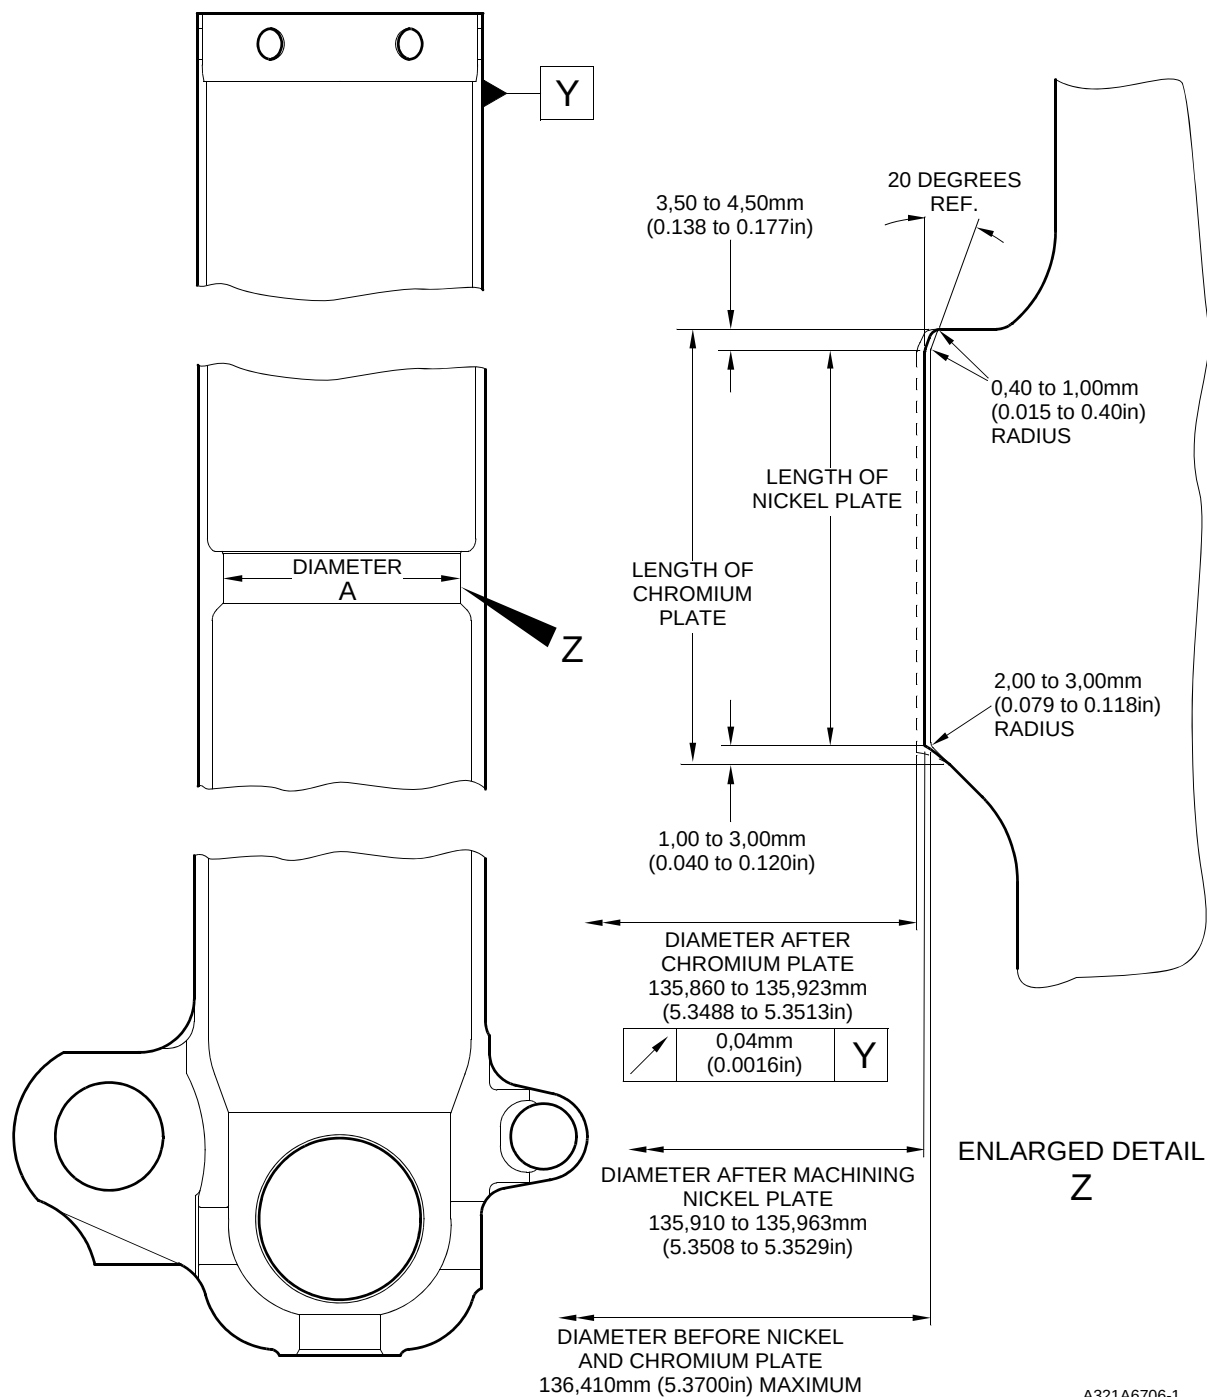

Repair to Sliding Tube
Figure 601

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

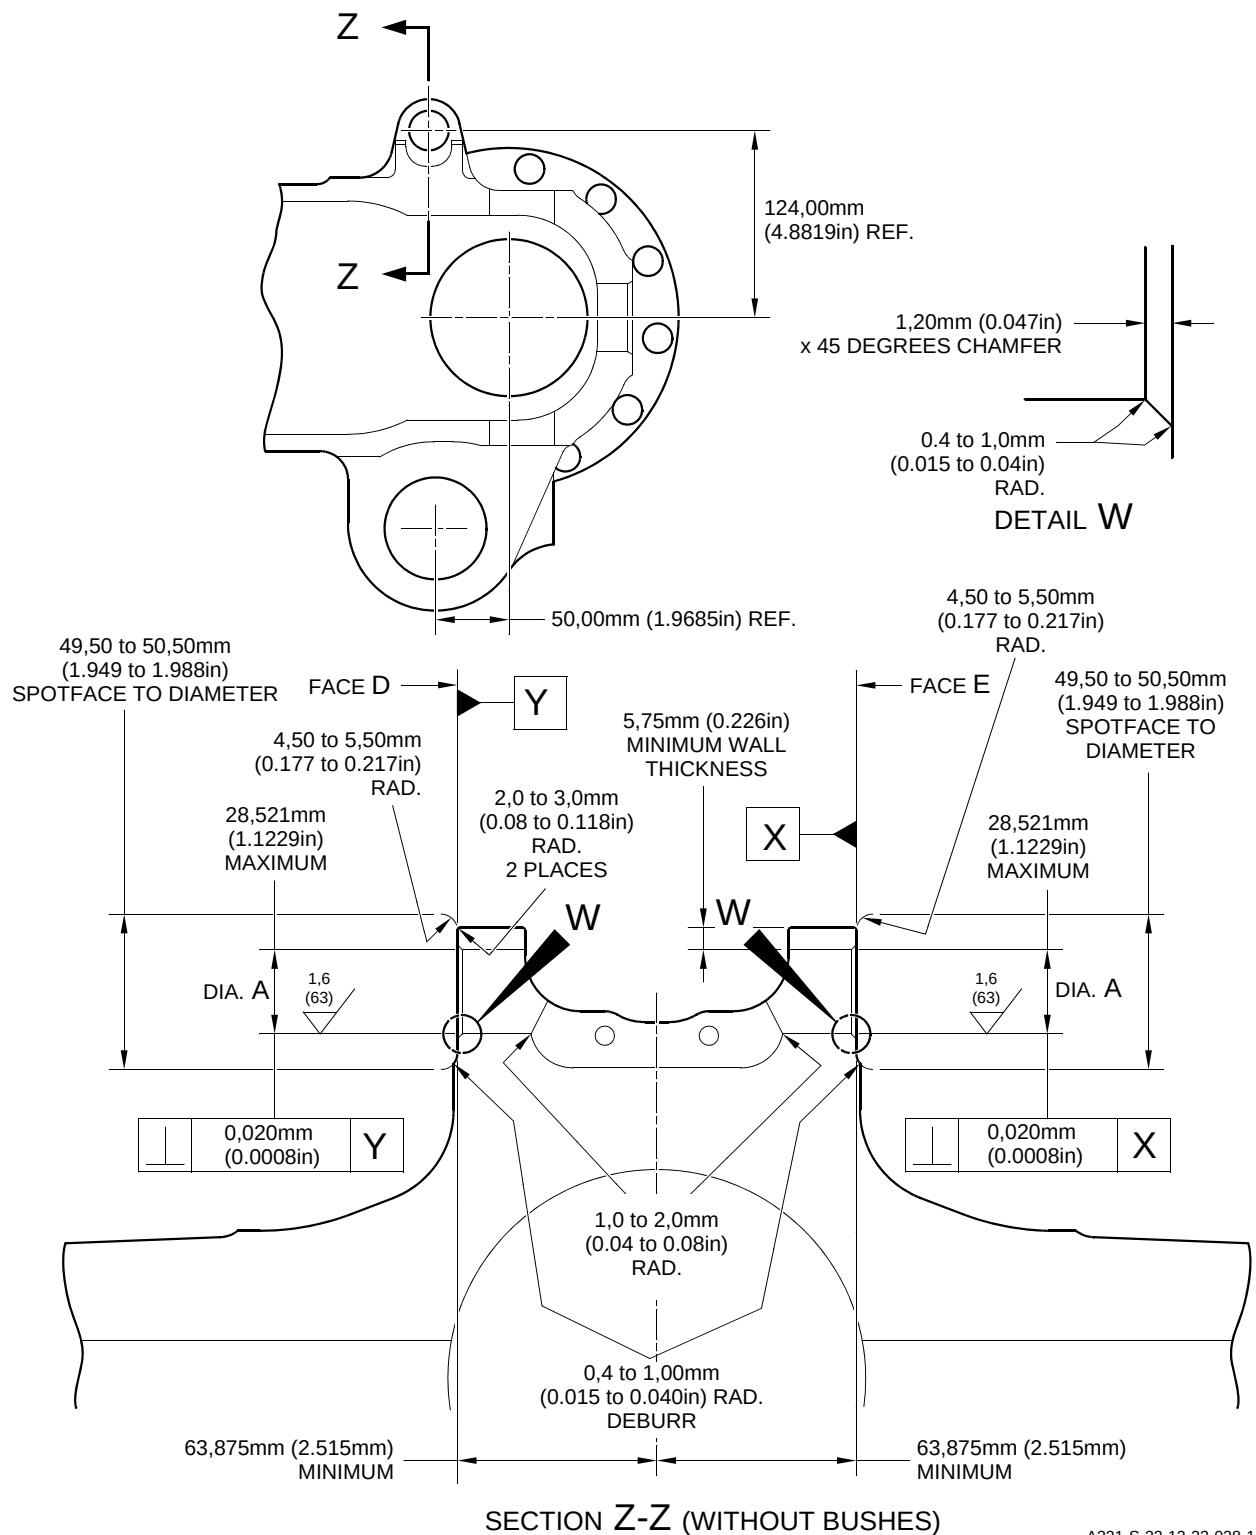

A321-S-32-12-22-038-1


Repair to Sliding Tube - Machining

Figure 601


32-12-22

Repair No. 9-7
Page 603
Dec 6/2019

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

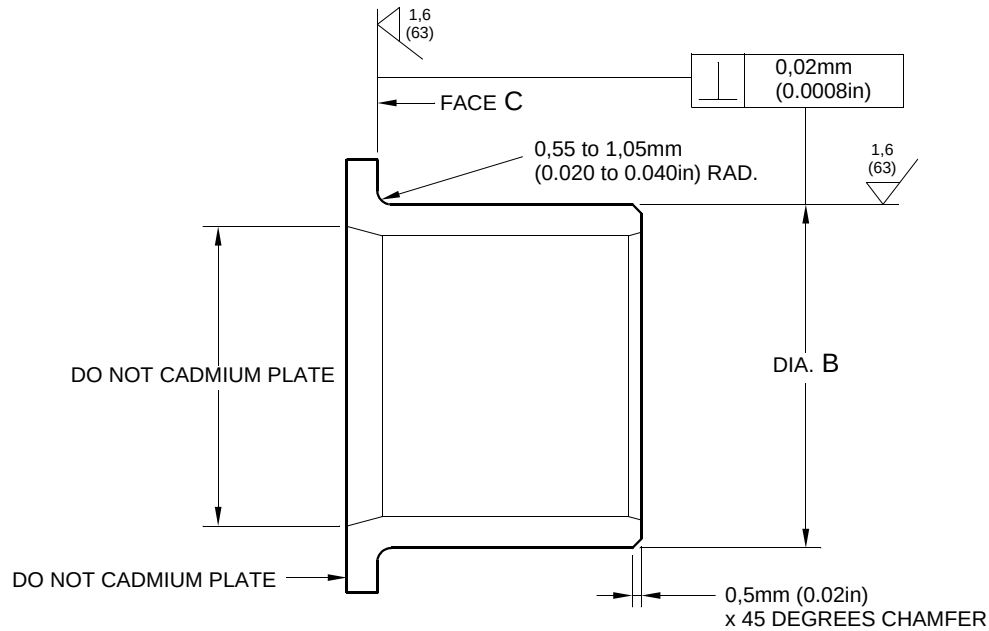

REPAIR BUSH 450258028

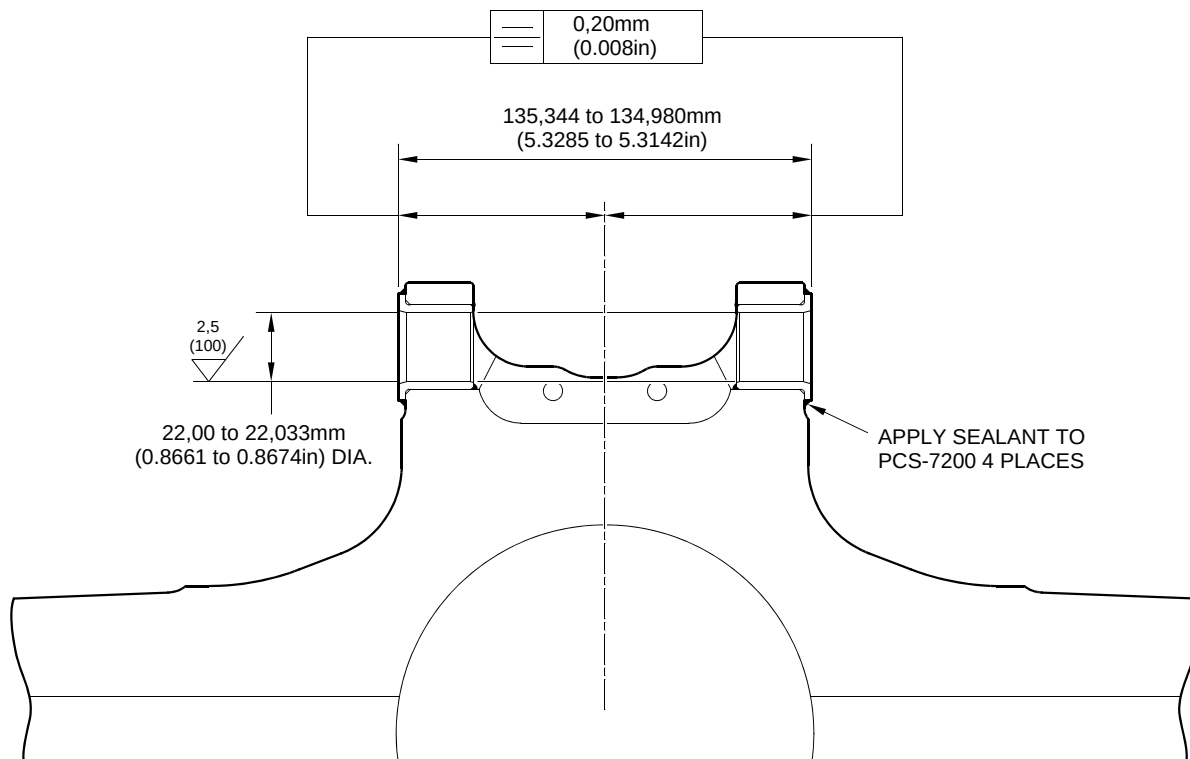

**SECTION Z-Z
(WITH BUSHES)**


A321-S-32-12-22-039-1

**Repair Bushes - Machining and Installation
Figure 602**

32-12-22


Repair No. 9-7
Page 604
Dec 6/2019

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

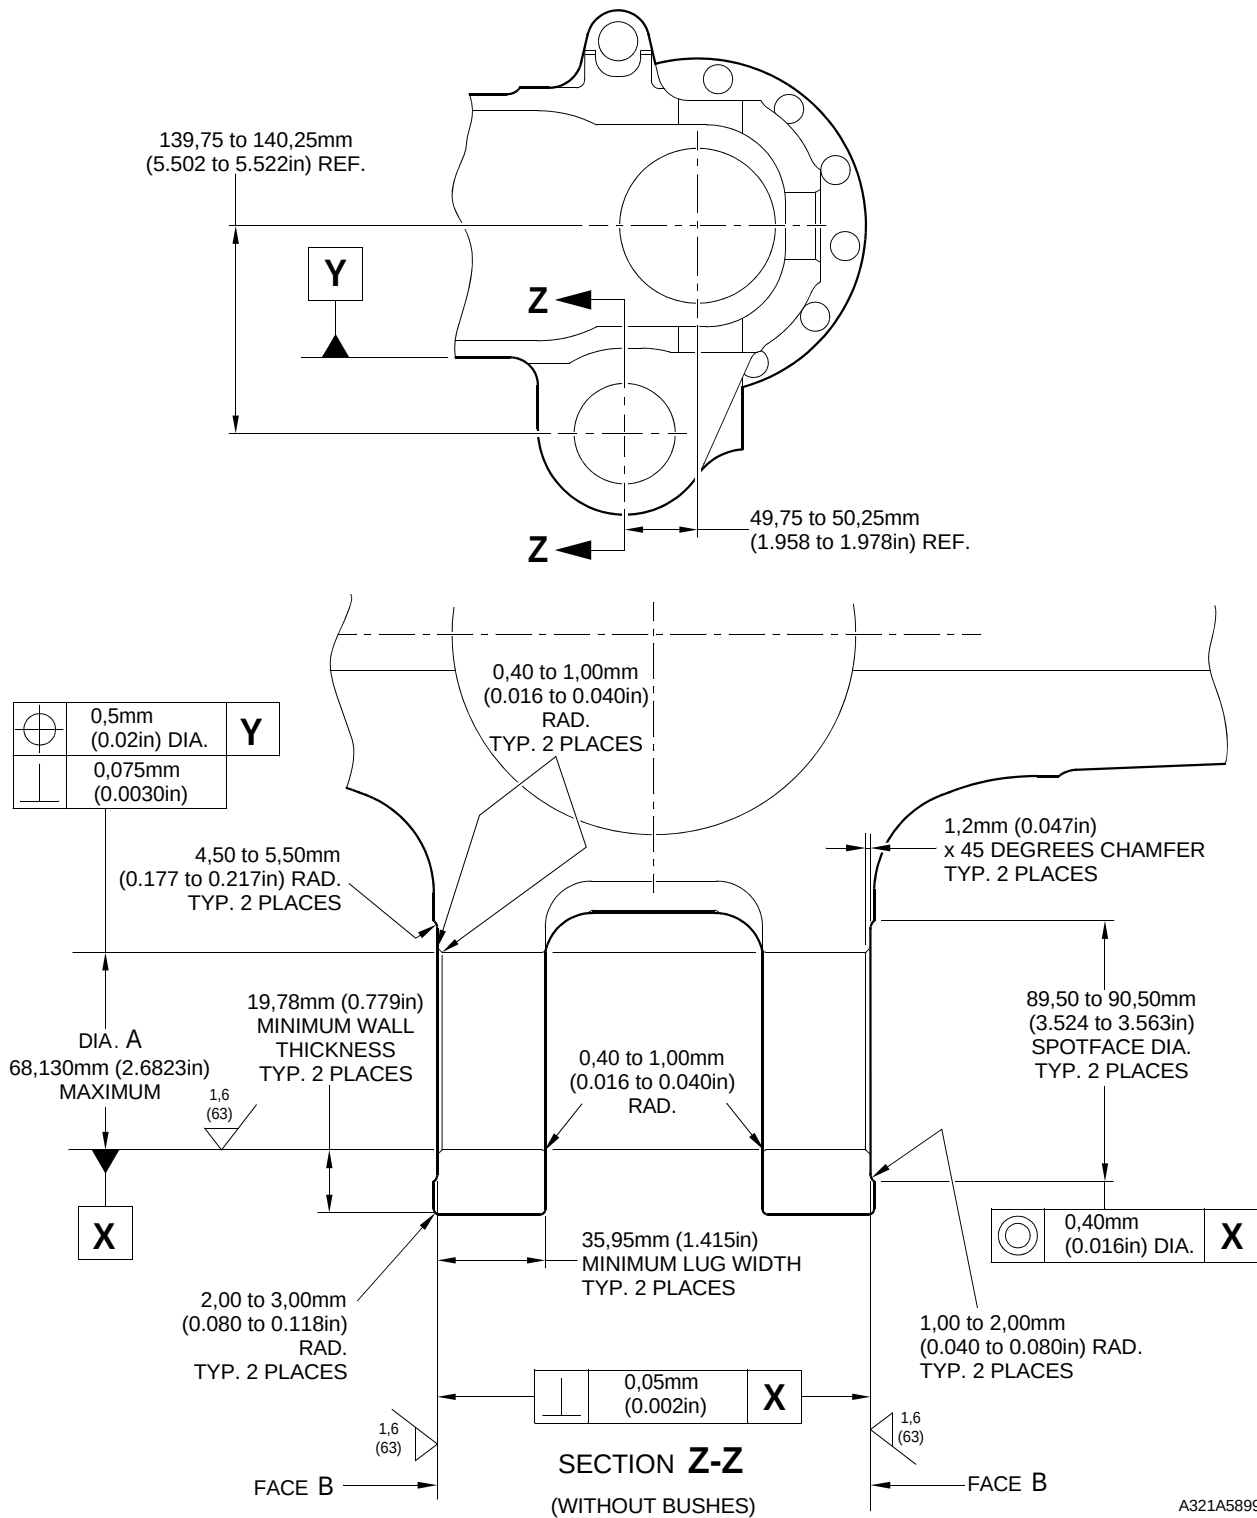


Repair to Sliding Tube - Machining
Figure 601

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

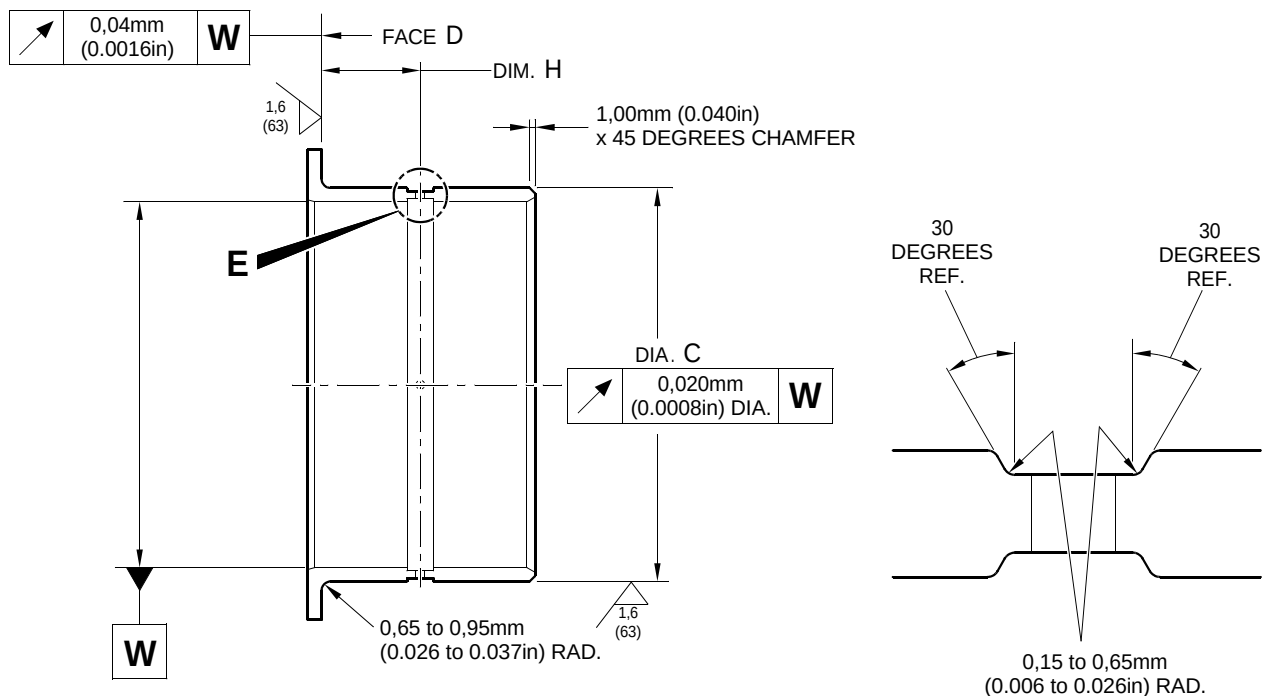


REPAIR BUSH
450217855

DETAIL E
TYP. 4 PLACES

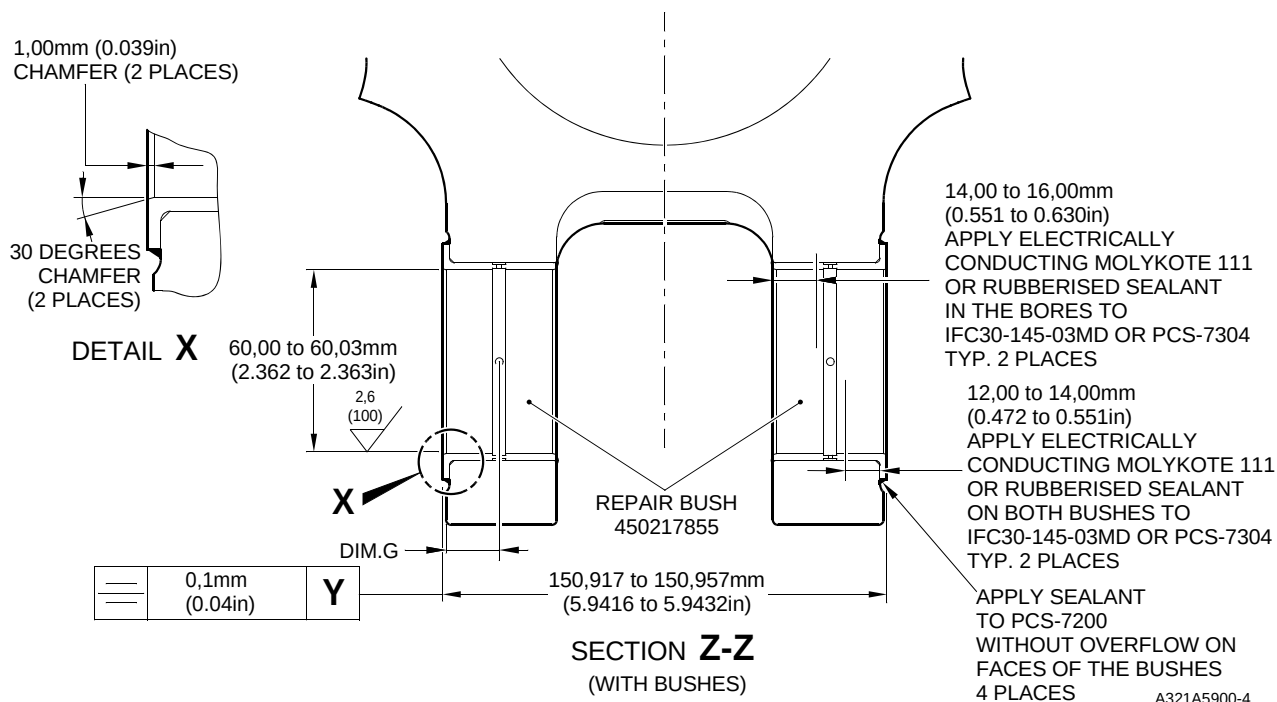

Repair Bushes - Machining and Installation
Figure 602

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

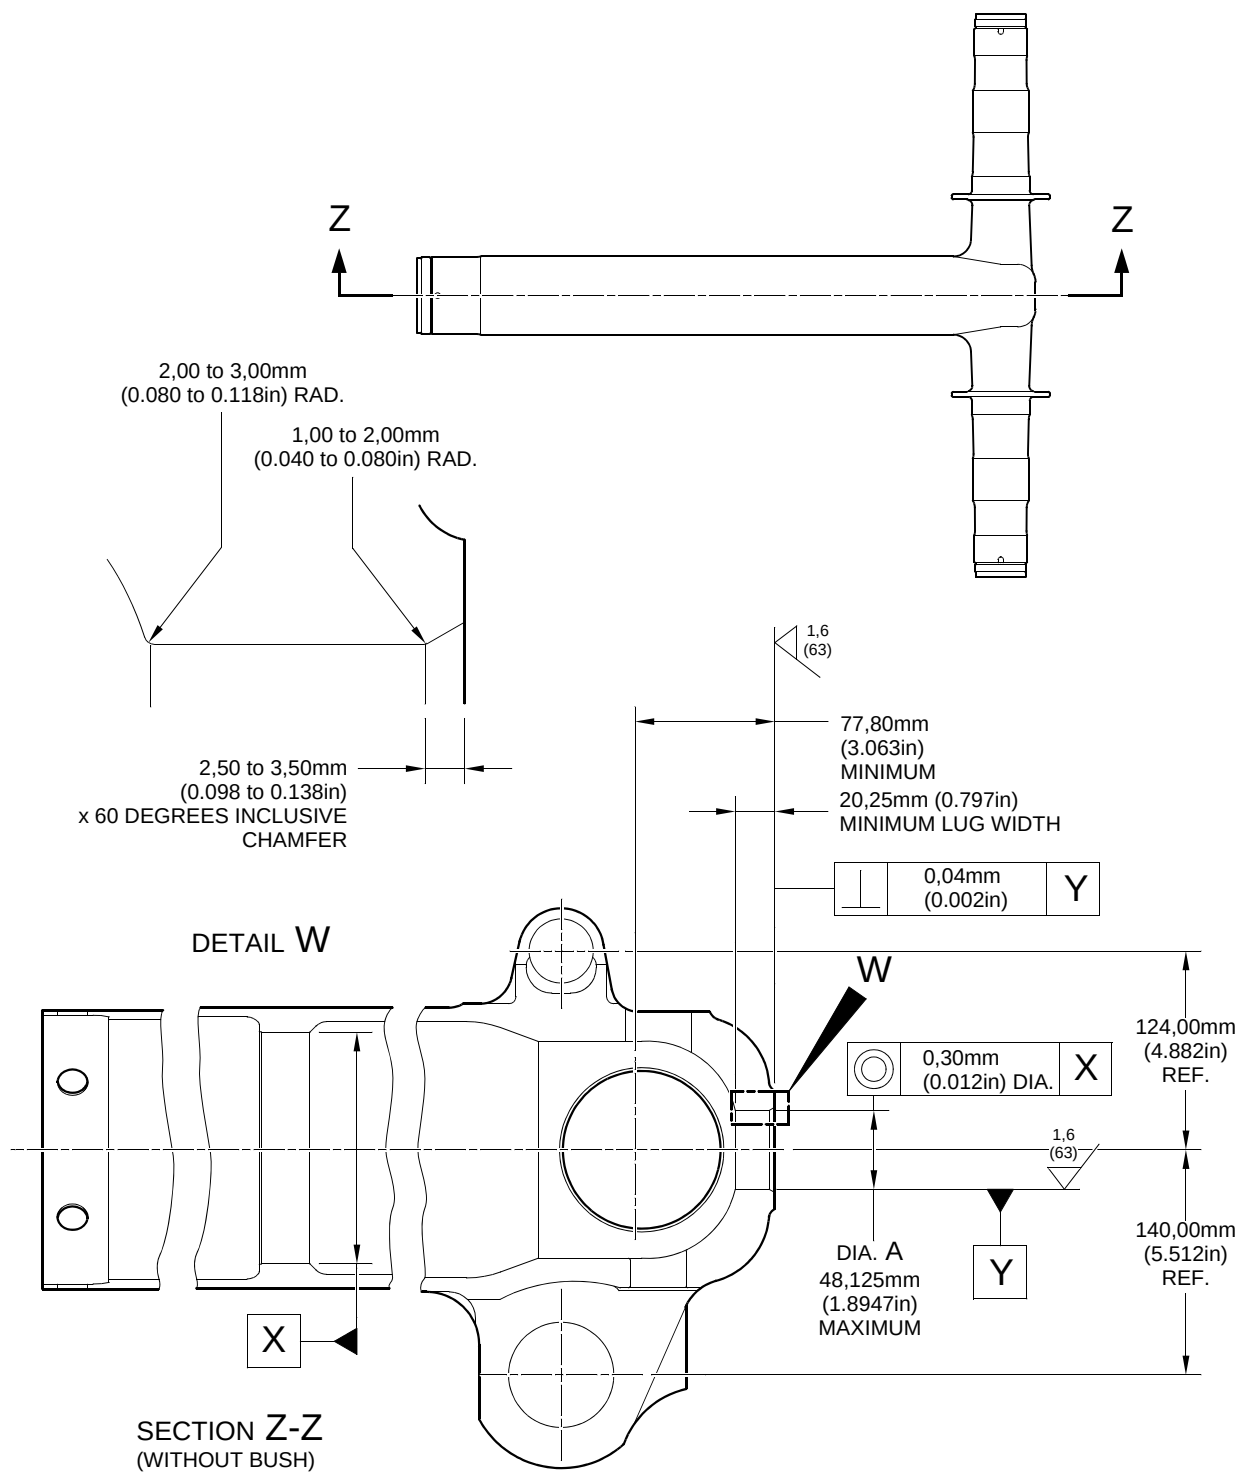


A321-S-32-12-22-040-1

Repair to Sliding Tube - Machining
Figure 601

32-12-22

Repair No. 9-9
Page 603
Dec 6/2019

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

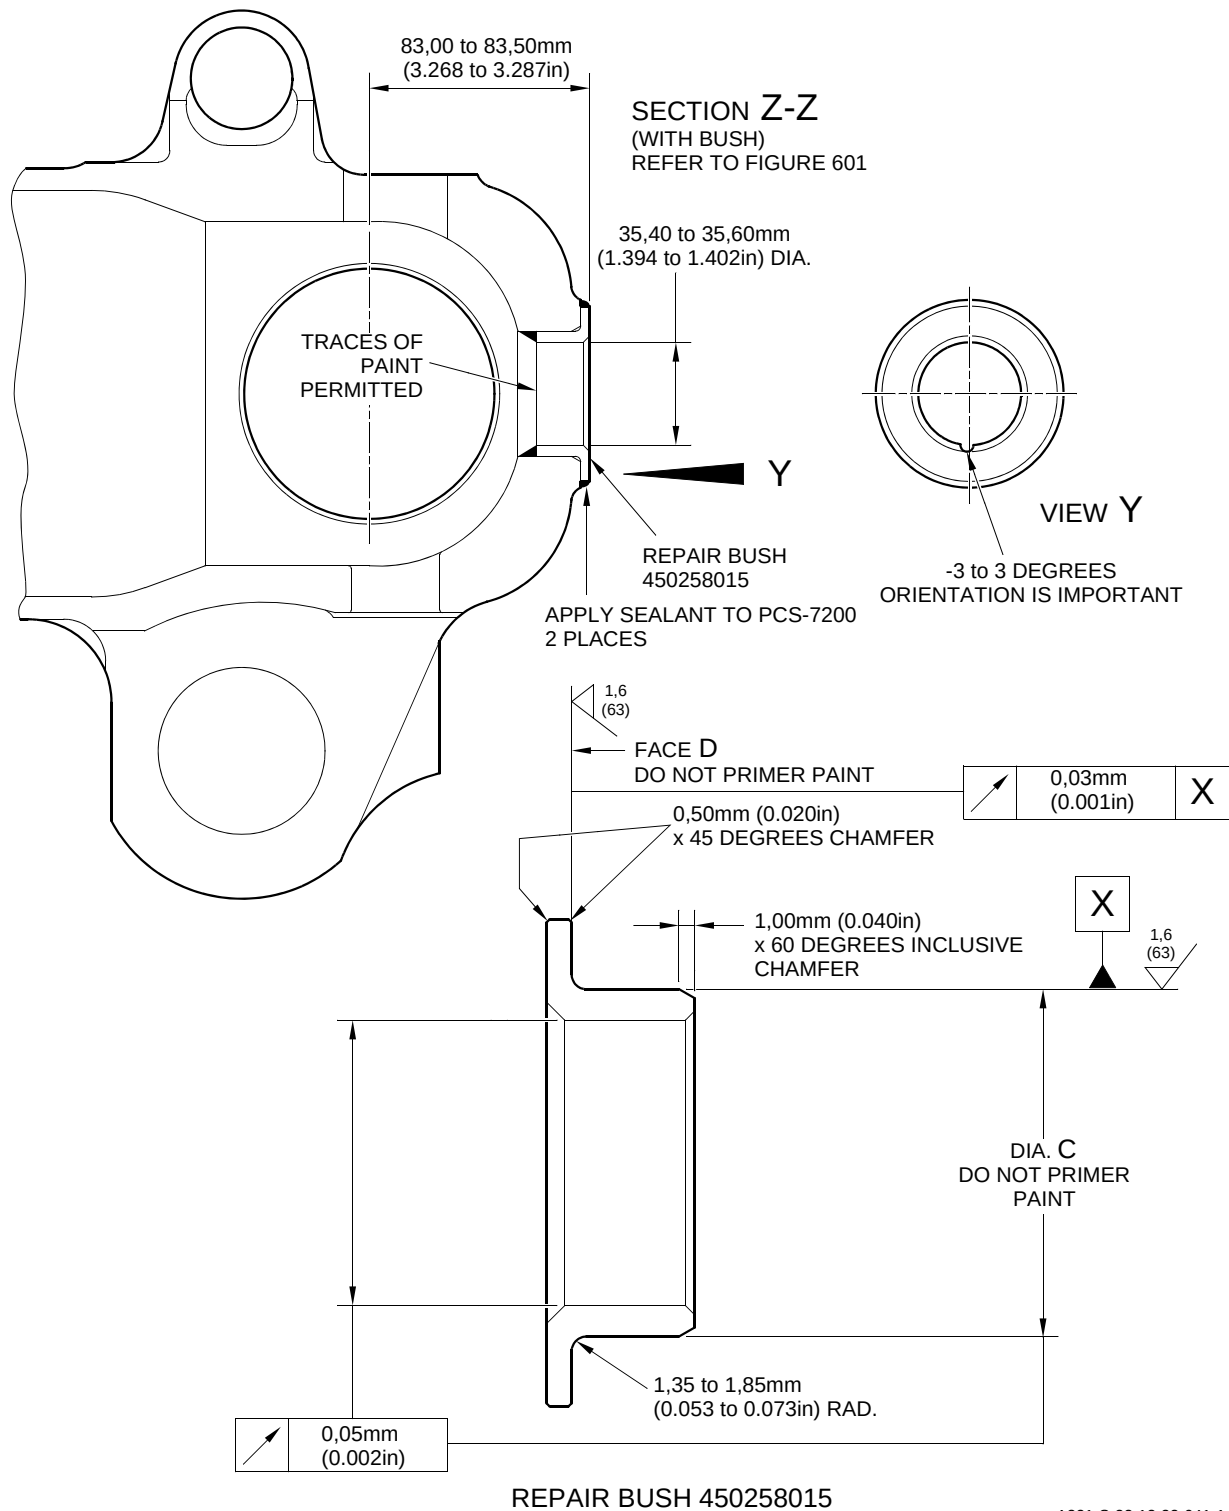


A321-S-32-12-22-041-1

Repair Bush - Machining and Installation
Figure 602

32-12-22

Repair No. 9-9
Page 604
Dec 6/2019

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

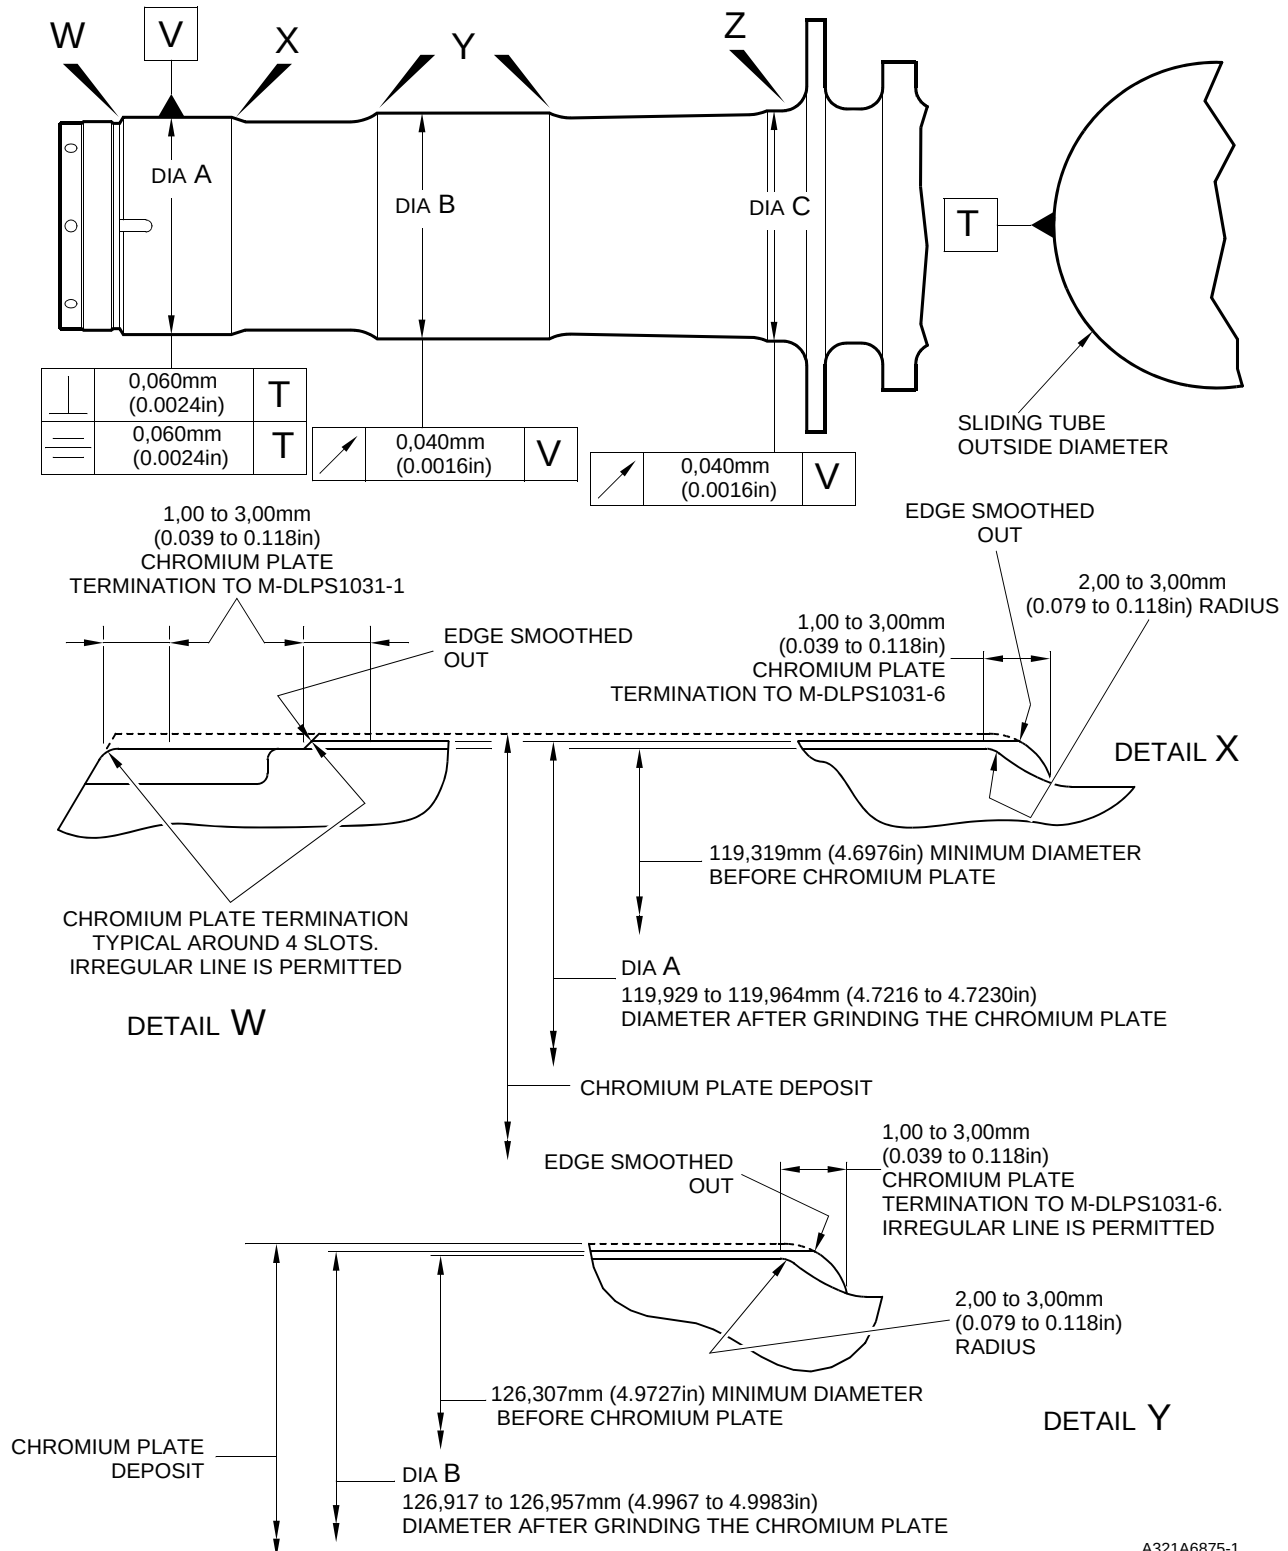


A321A6875-1

**Repair to Sliding Tube
Figure 601**

32-12-22


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

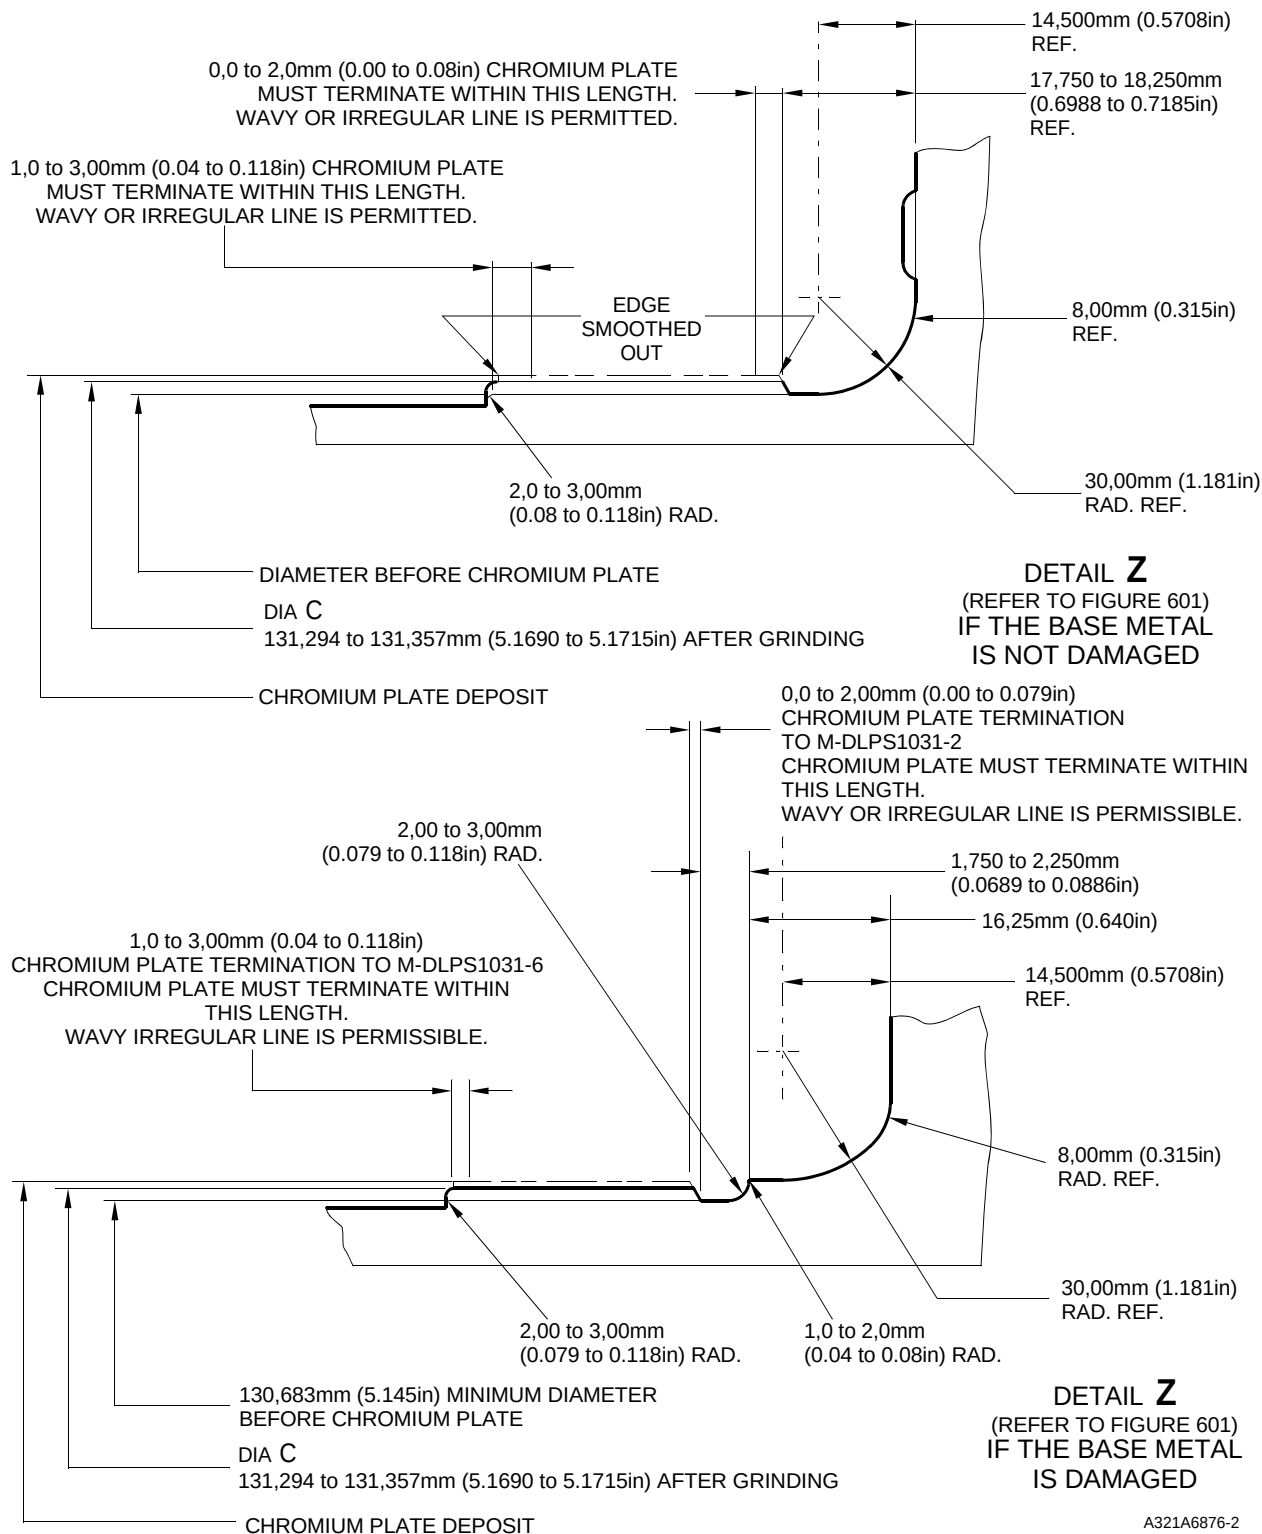

A321A6876-2



**Repair to Sliding Tube
Figure 602**

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

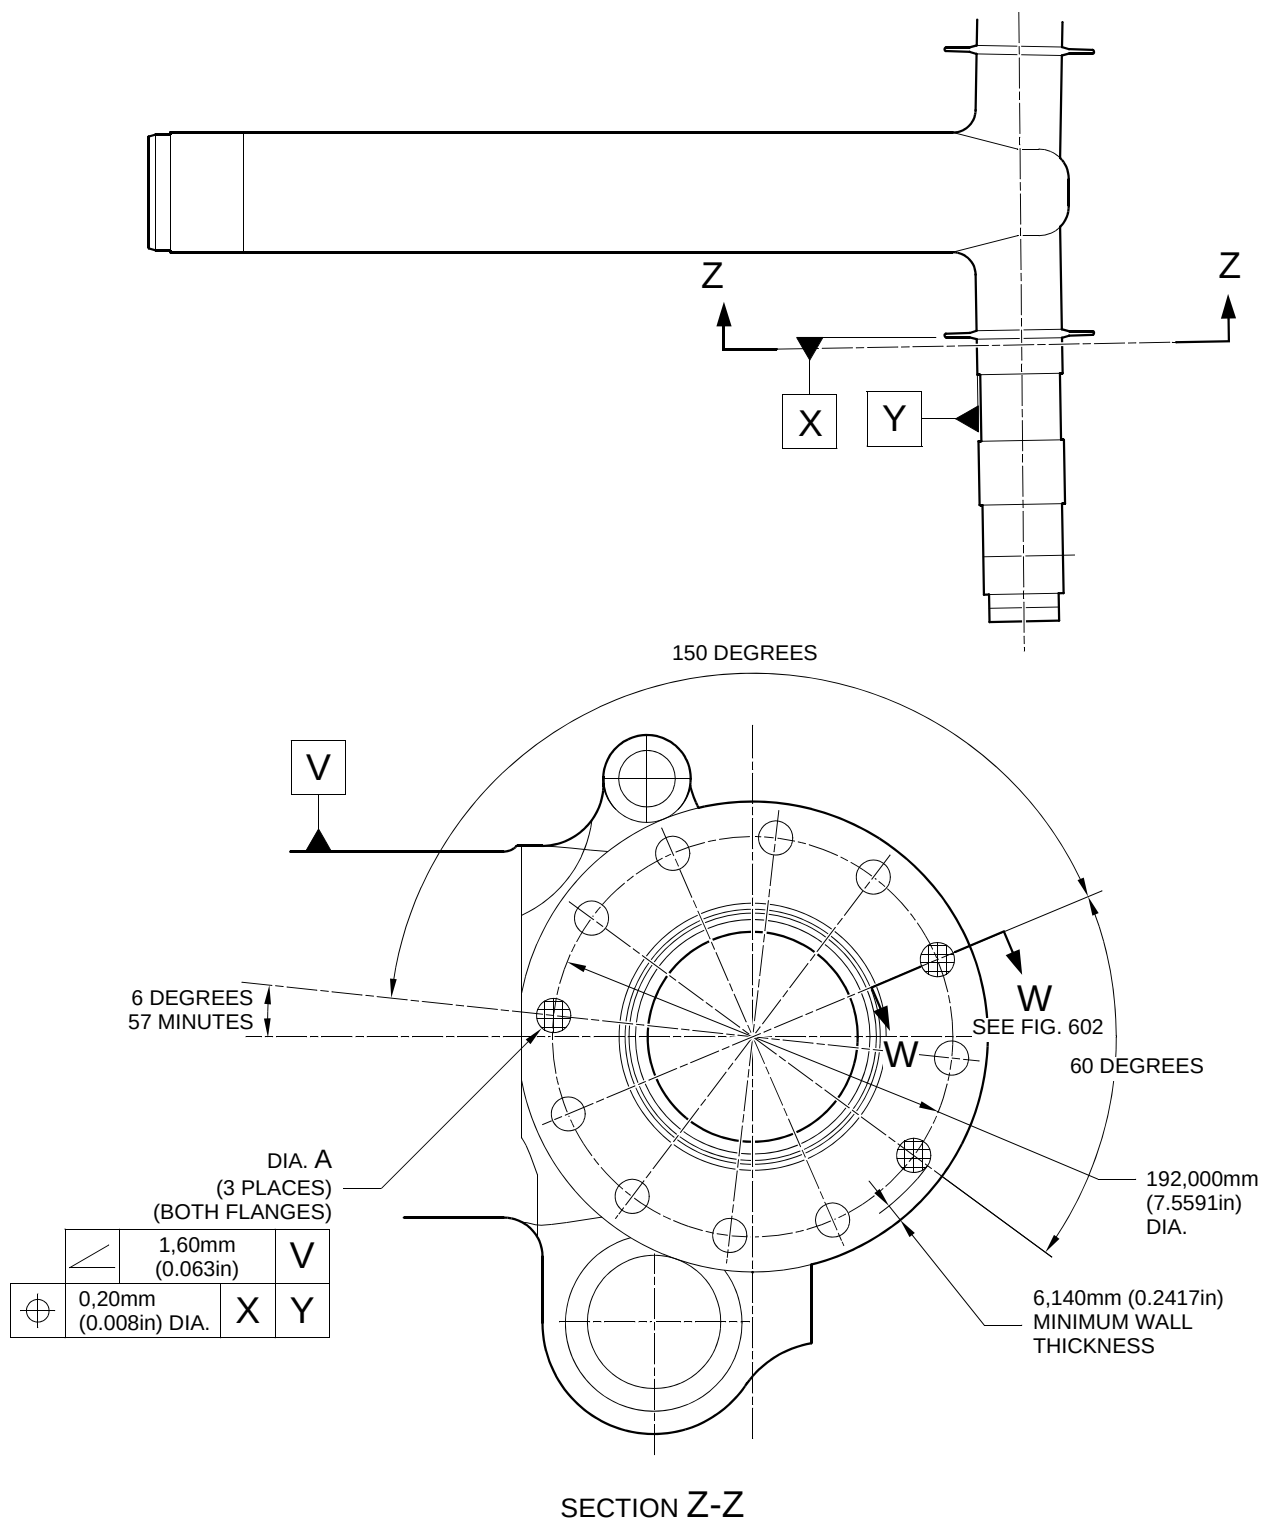

Repair to Sliding Tube
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

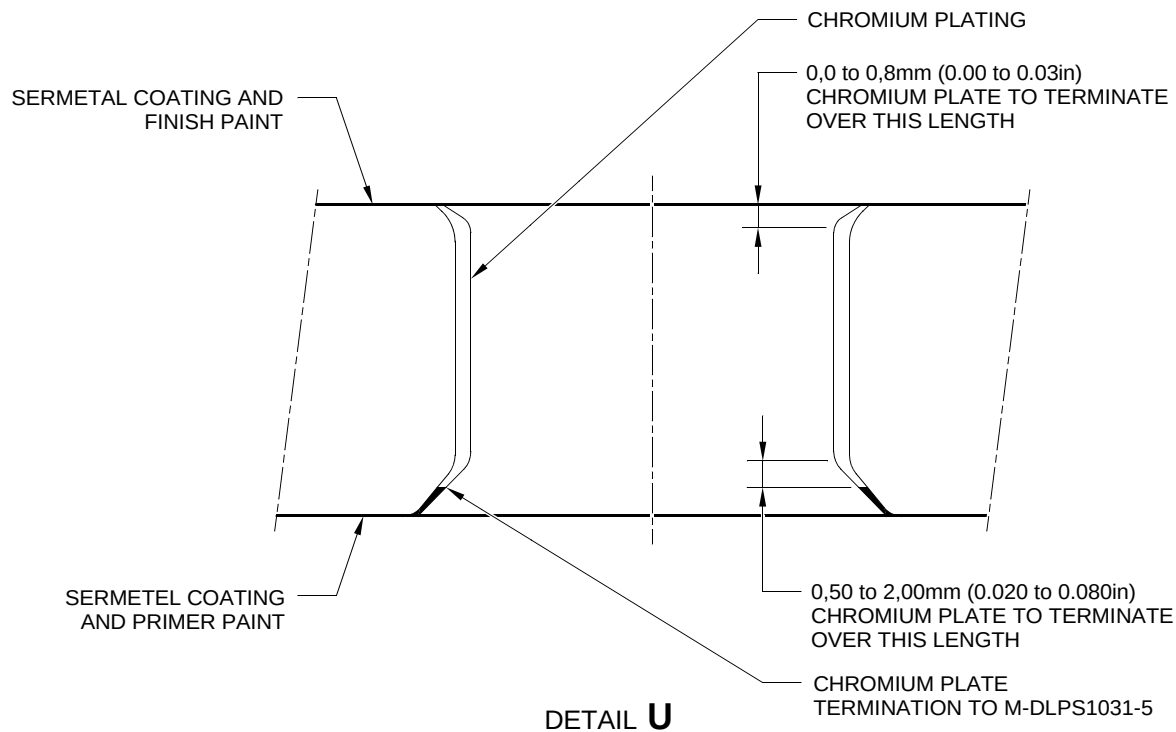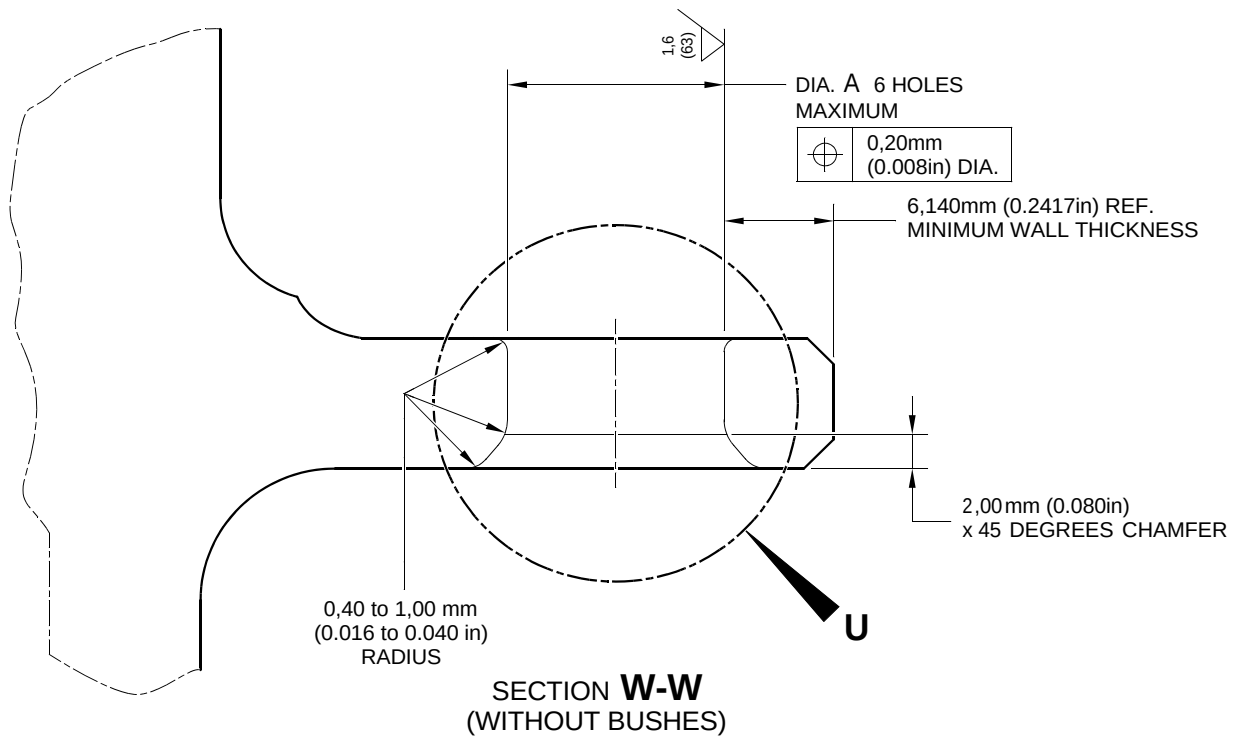

A321-S-32-12-22-053-1

Repair to Sliding Tube - Machining
Figure 602

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

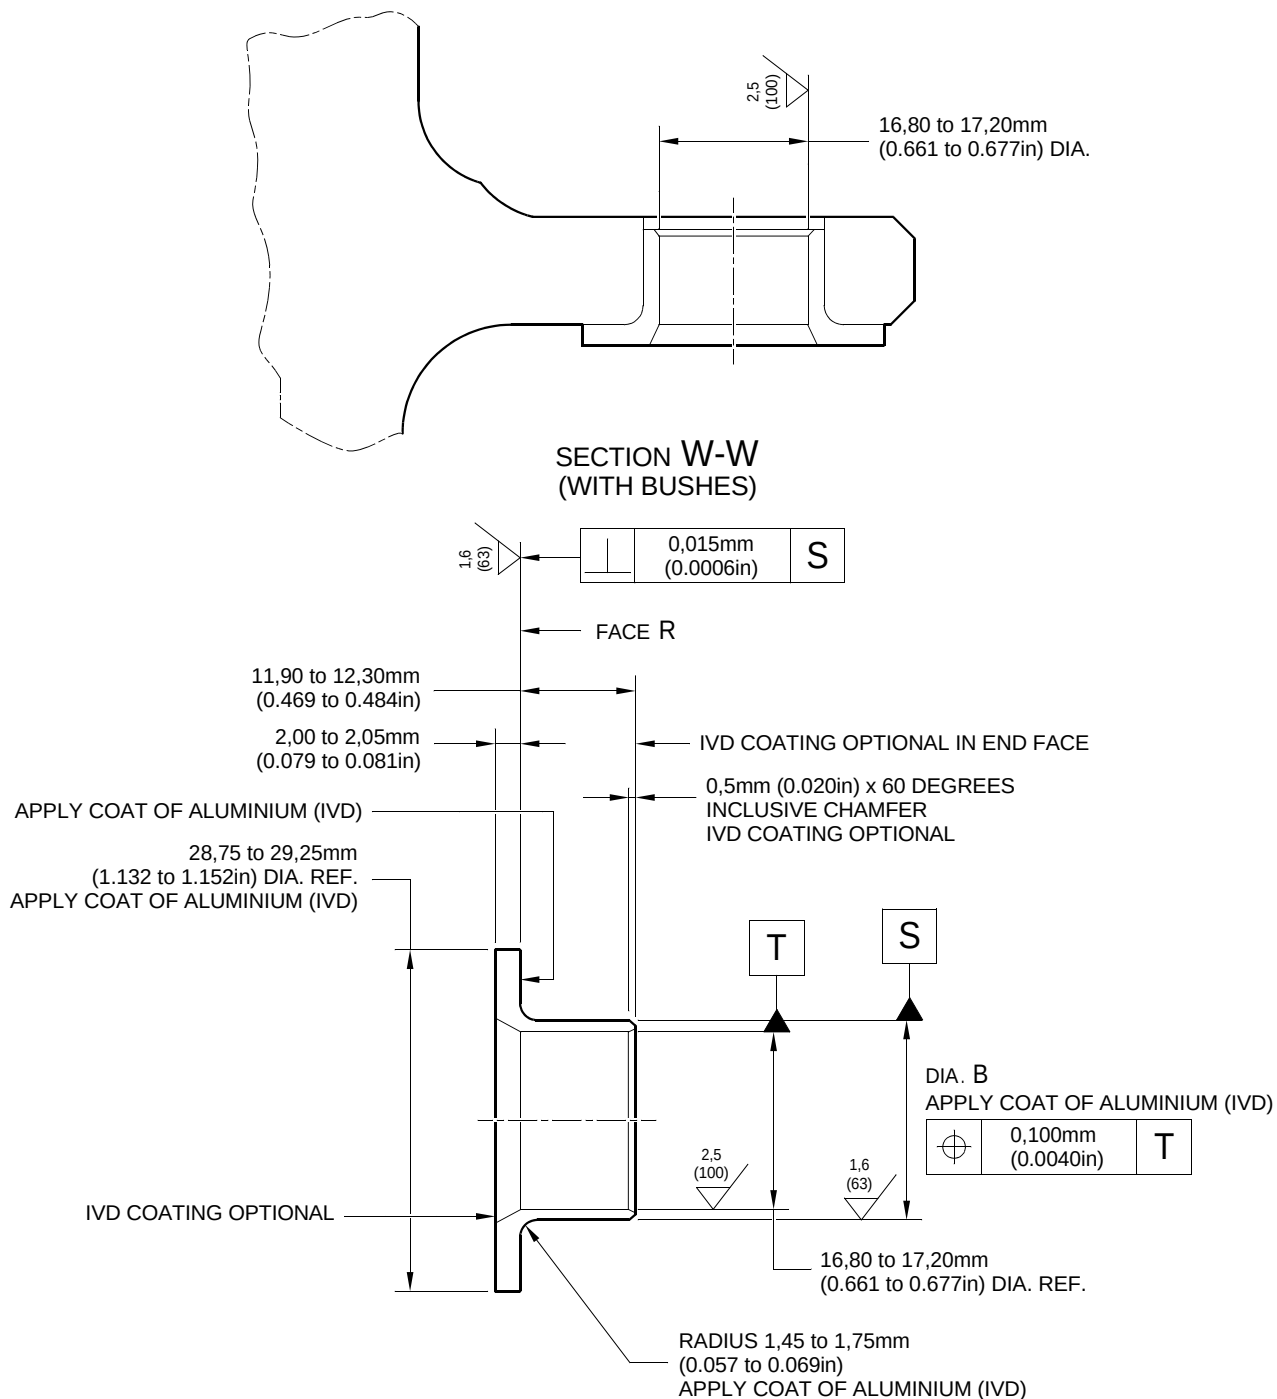


REPAIR BUSH 450266800

A321-S-32-12-22-054-1

Repair Bushes - Machining and Installation
Figure 603

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

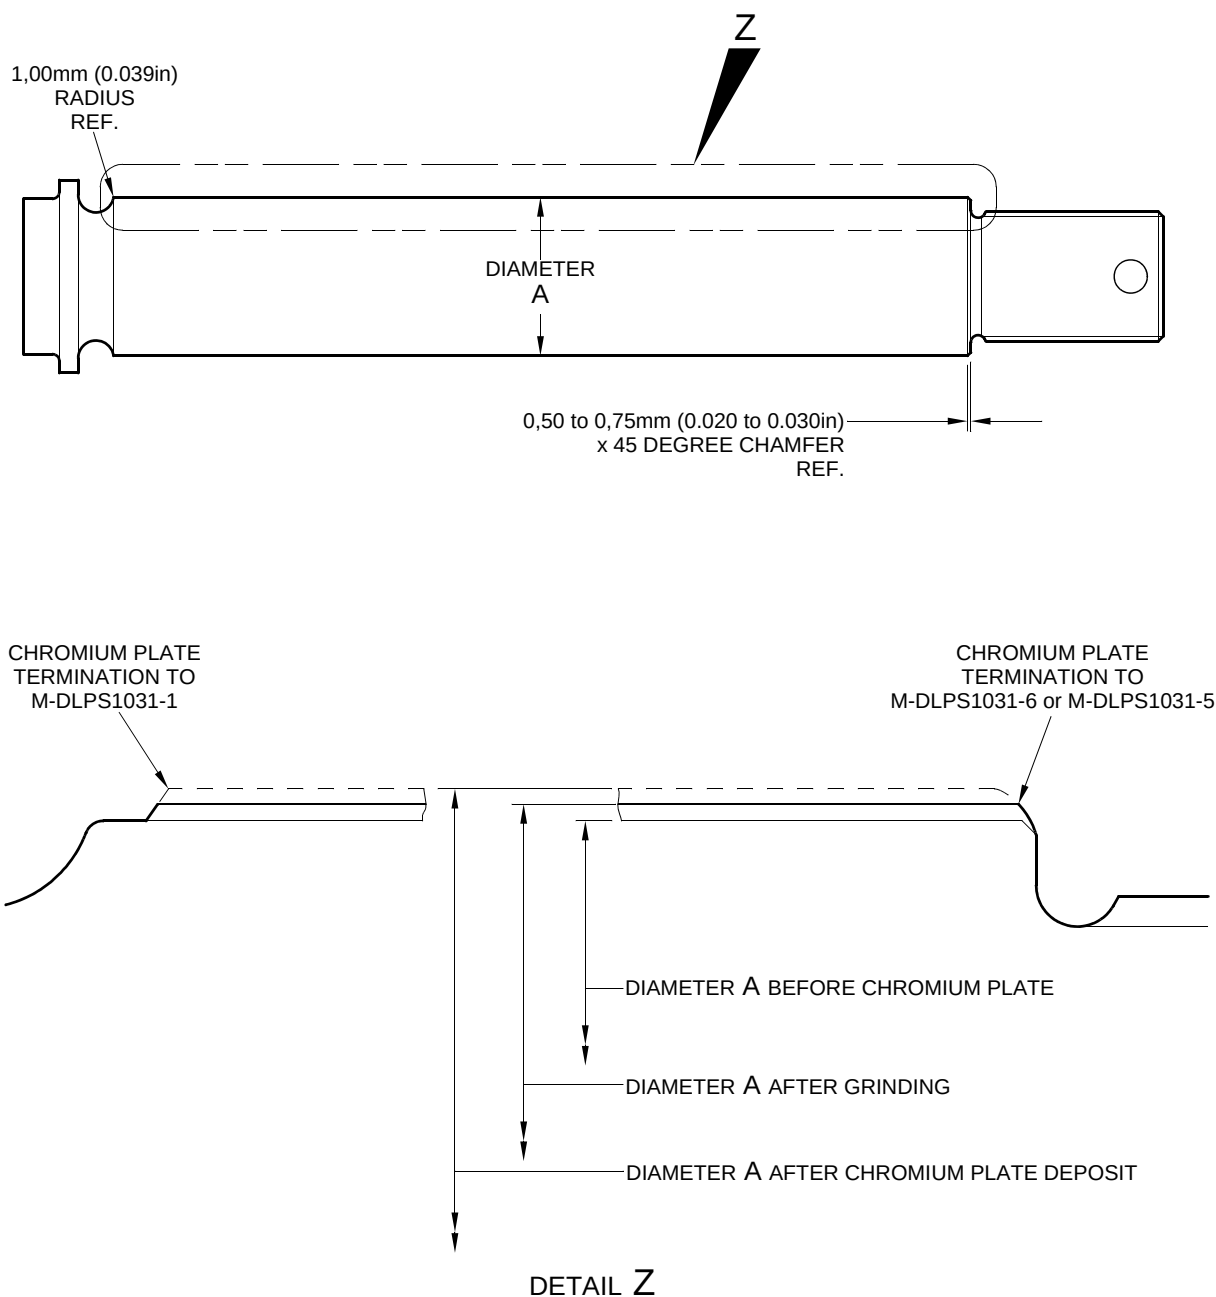


A321A3760-1

Repair to Pin
Figure 601

Repair No. 10-1
Page 603
Dec 6/2019

32-12-22


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

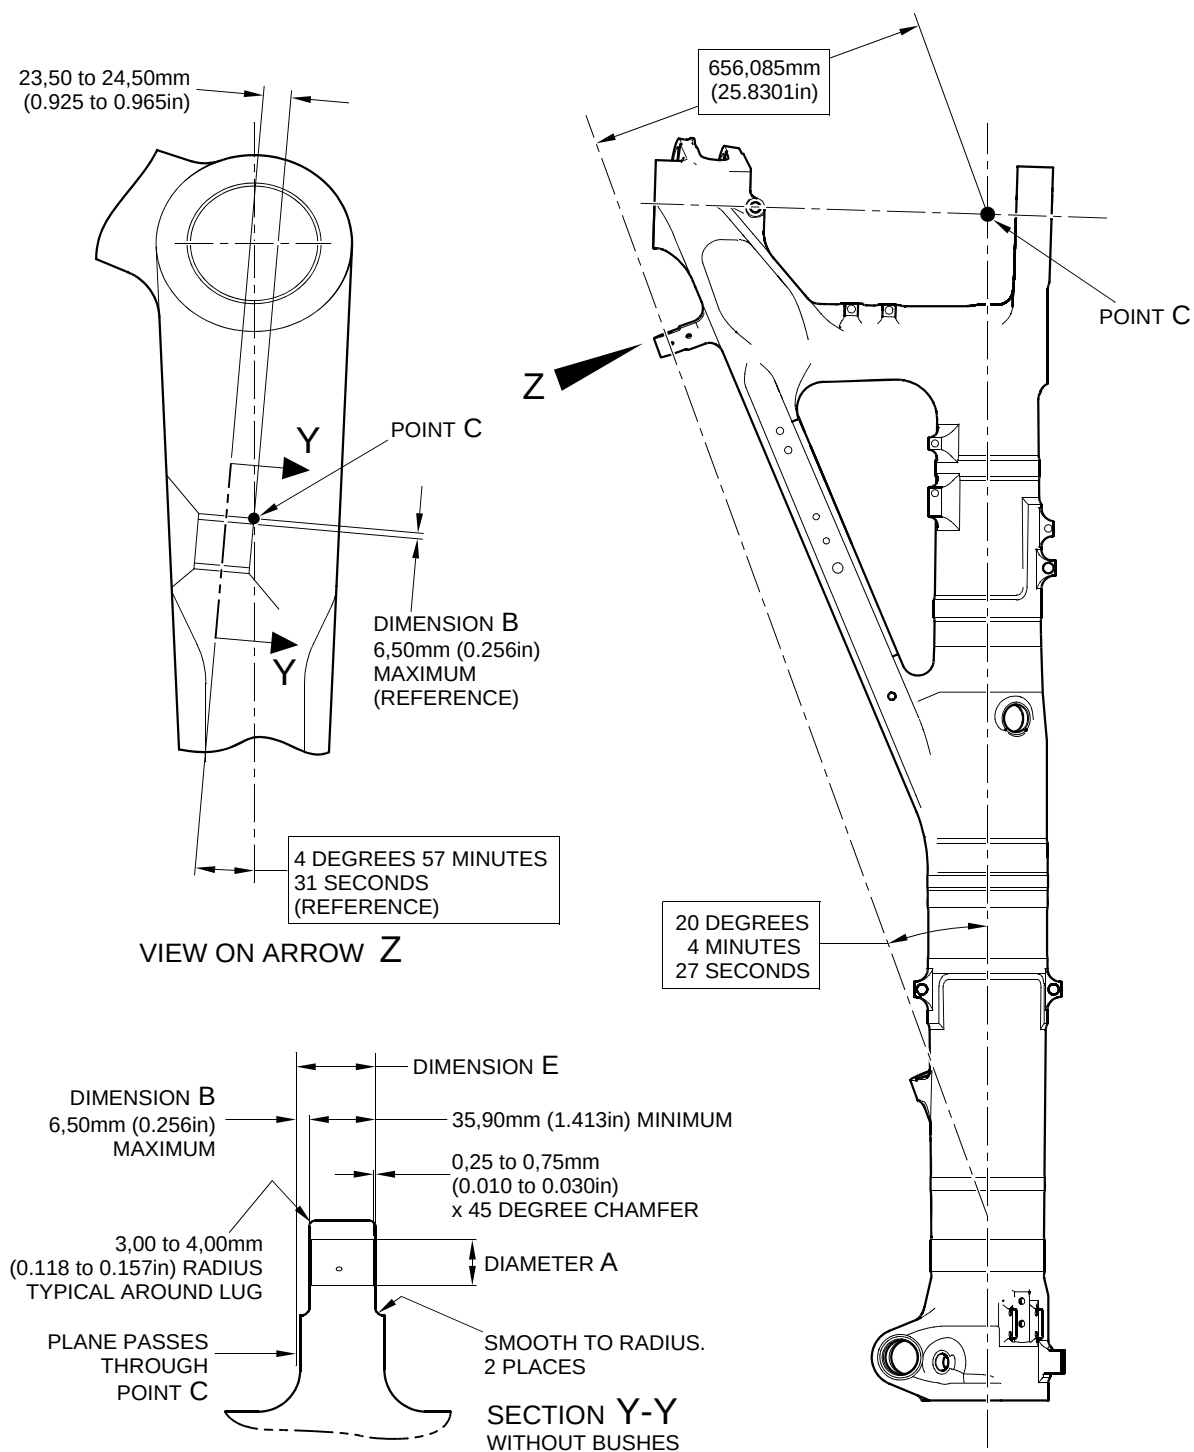

A321A4812-1


Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

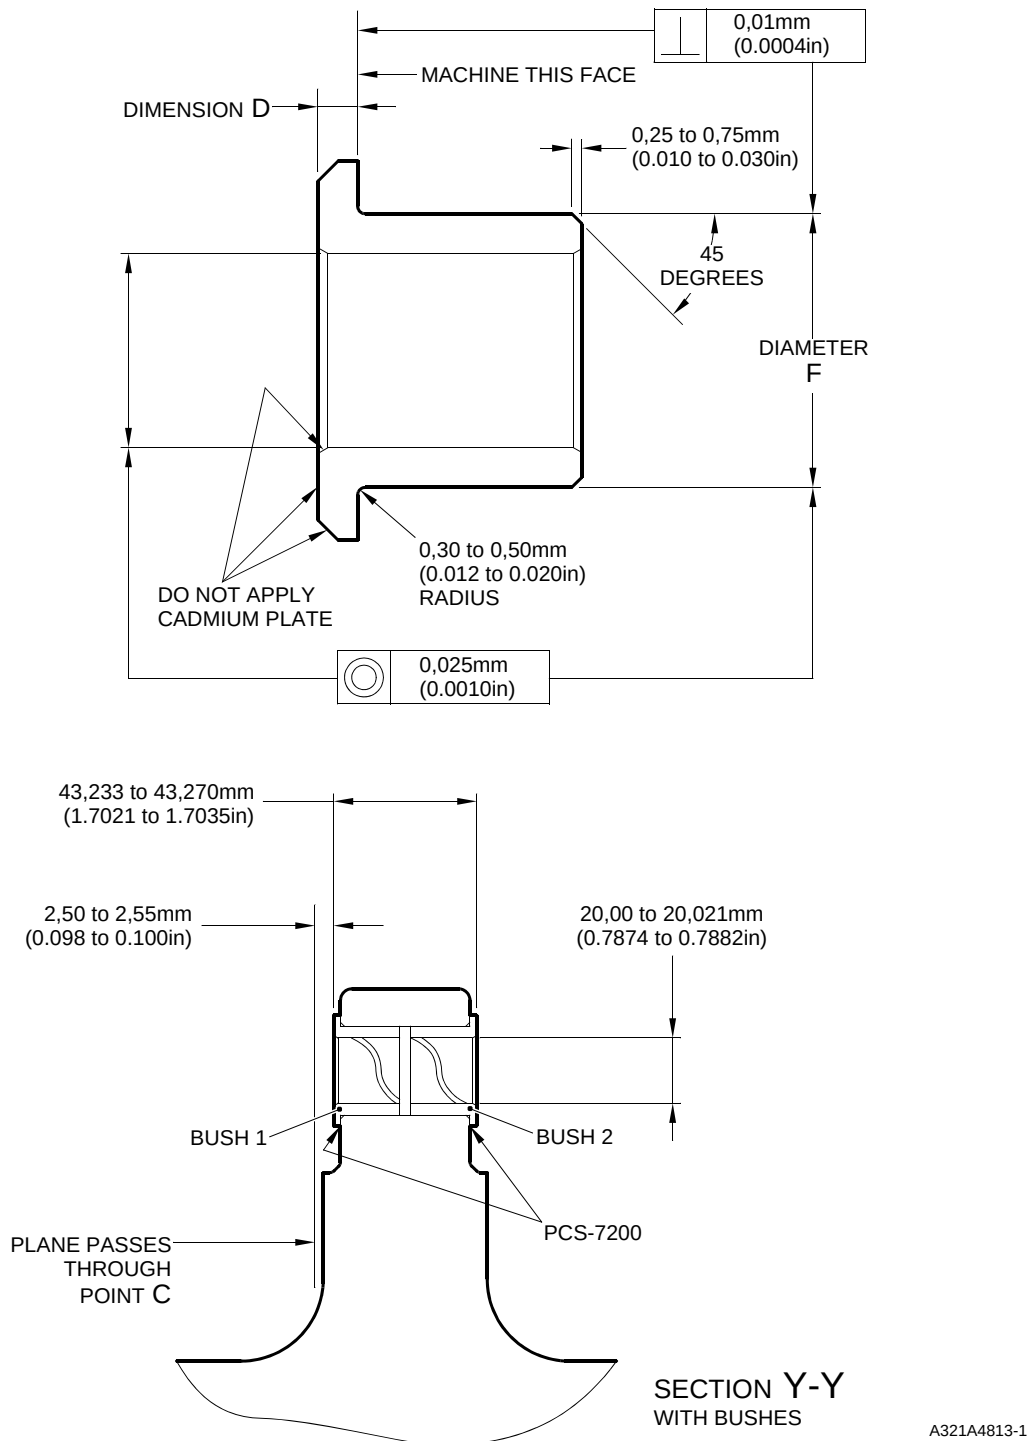

**Oversize Bushes - Machining and Installation
Figure 602**


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

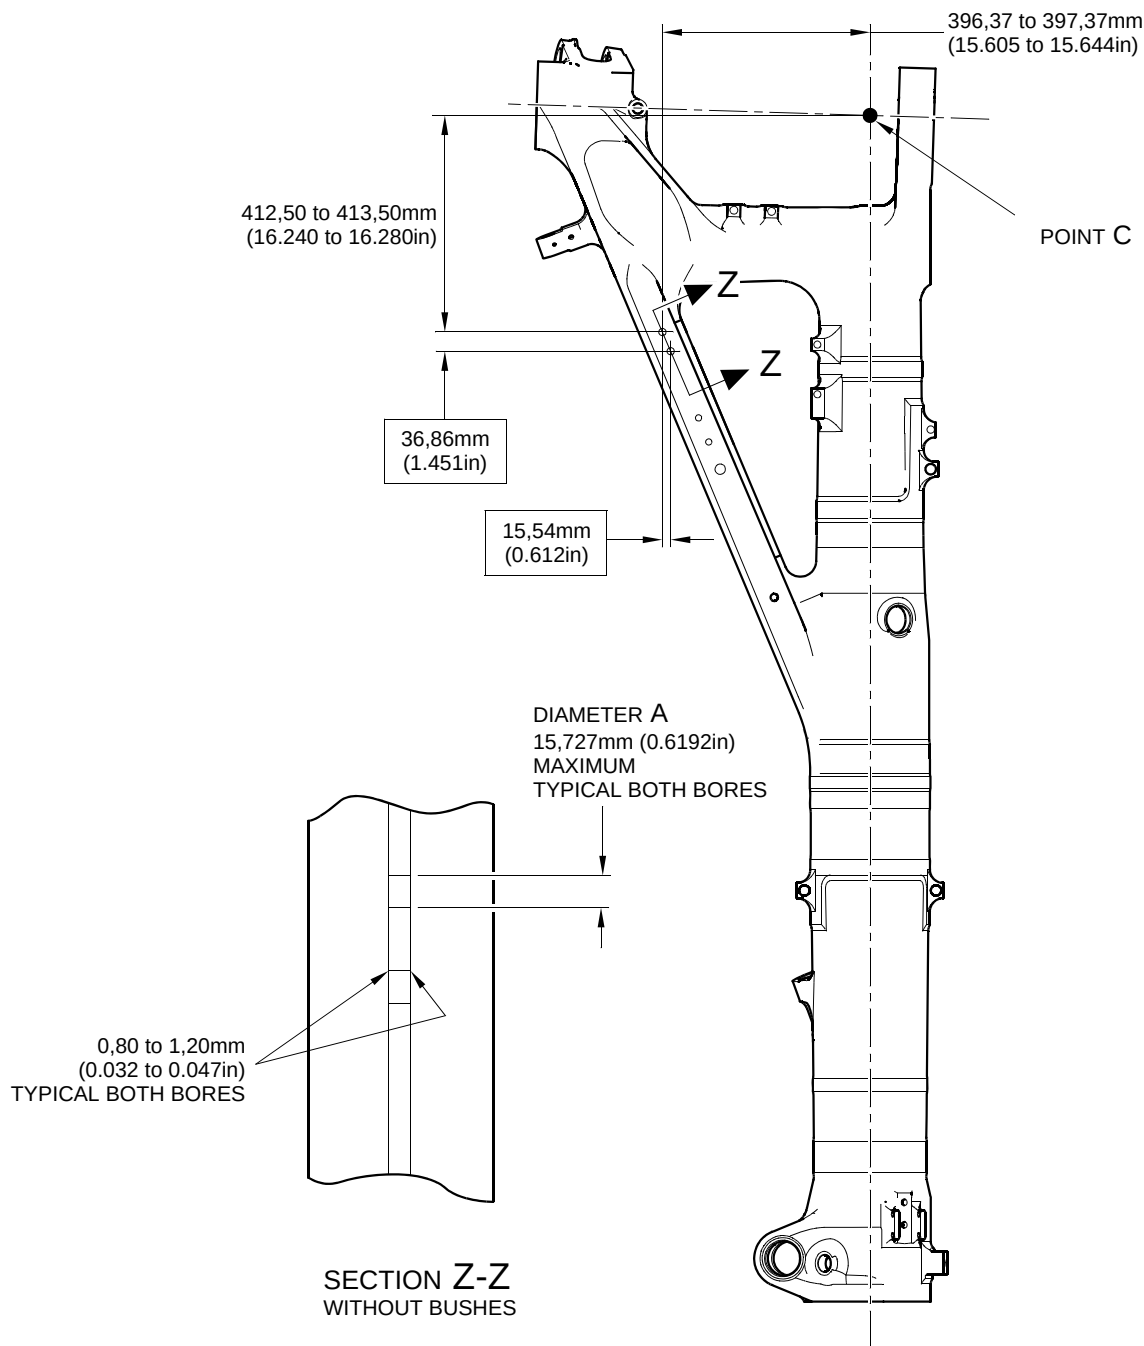


A321A4810-1

Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

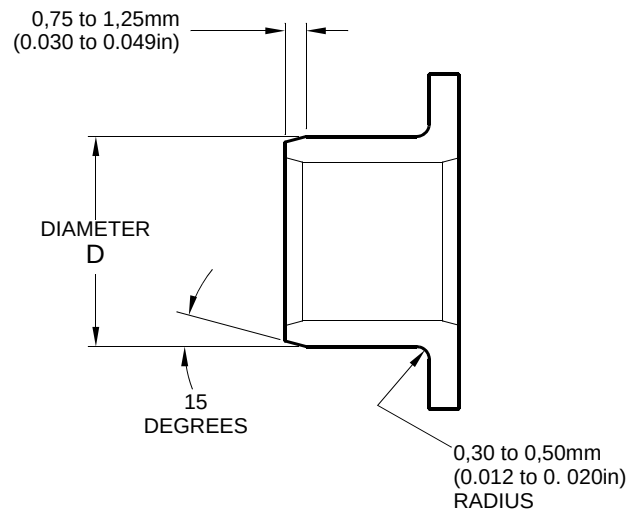

REPAIR BUSH 450258808

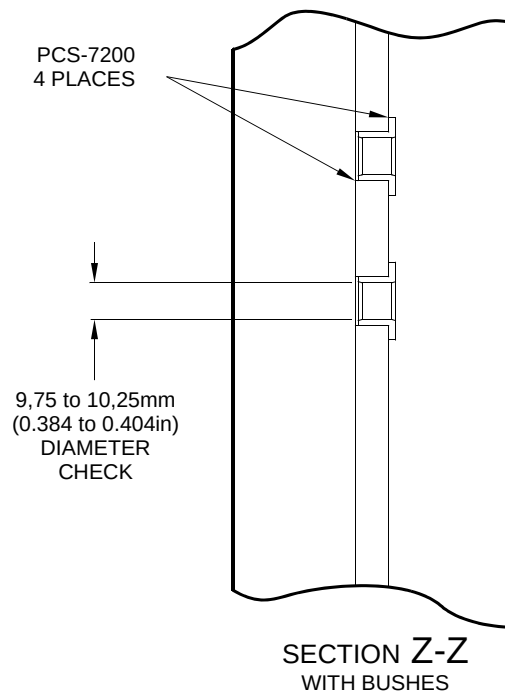


A321A4811-1

**Oversize Bush(es) - Machining and Installation
Figure 602**

32-12-22


Repair No. 11-2
Page 604
Dec 6/2019

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

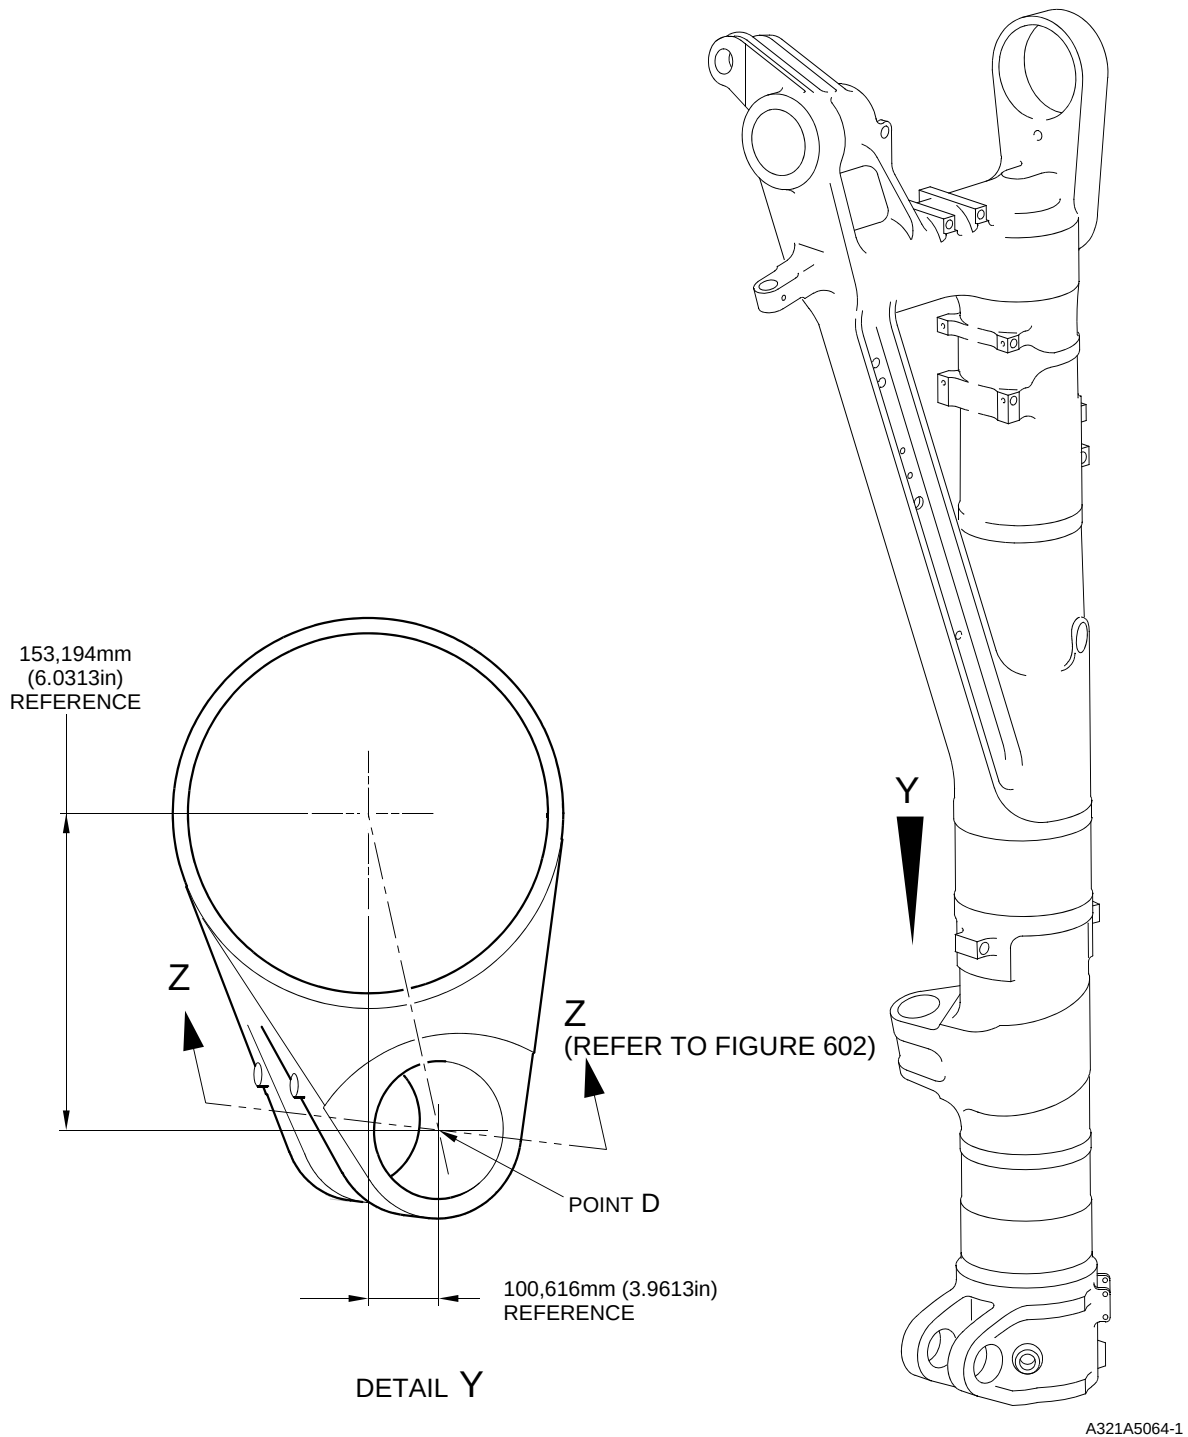

Repair to Main Fitting
Figure 601



**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

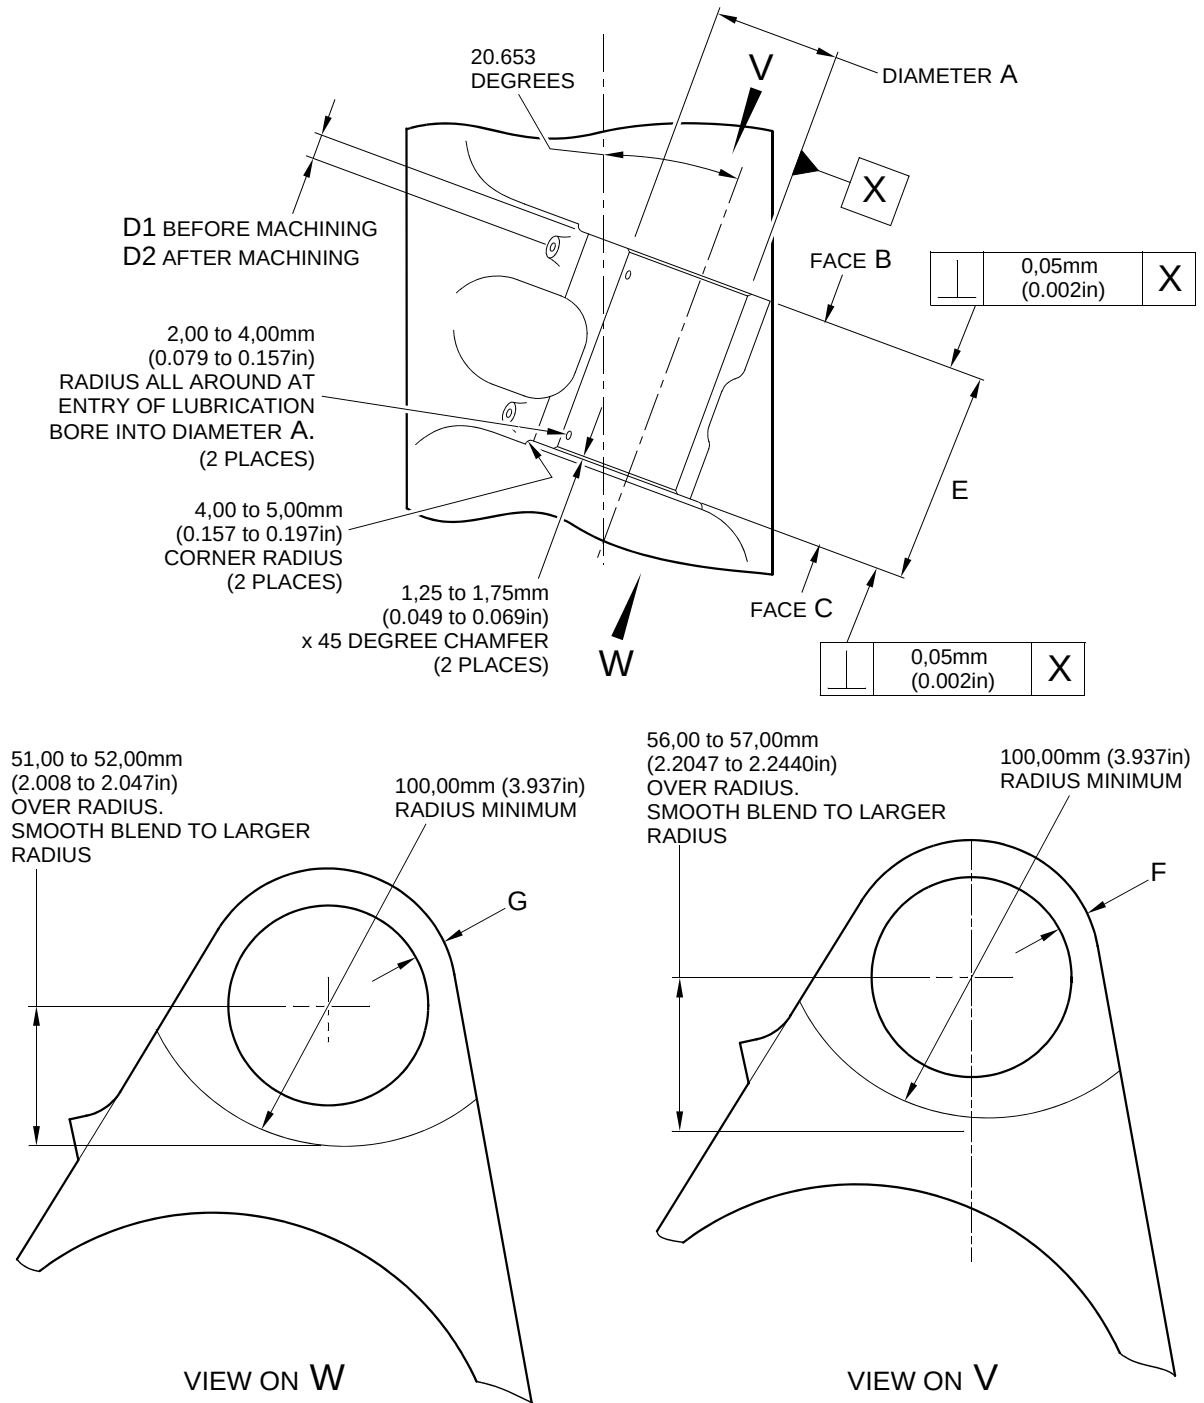

A321A5065-1

**Repair to Main Fitting
Figure 602**


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

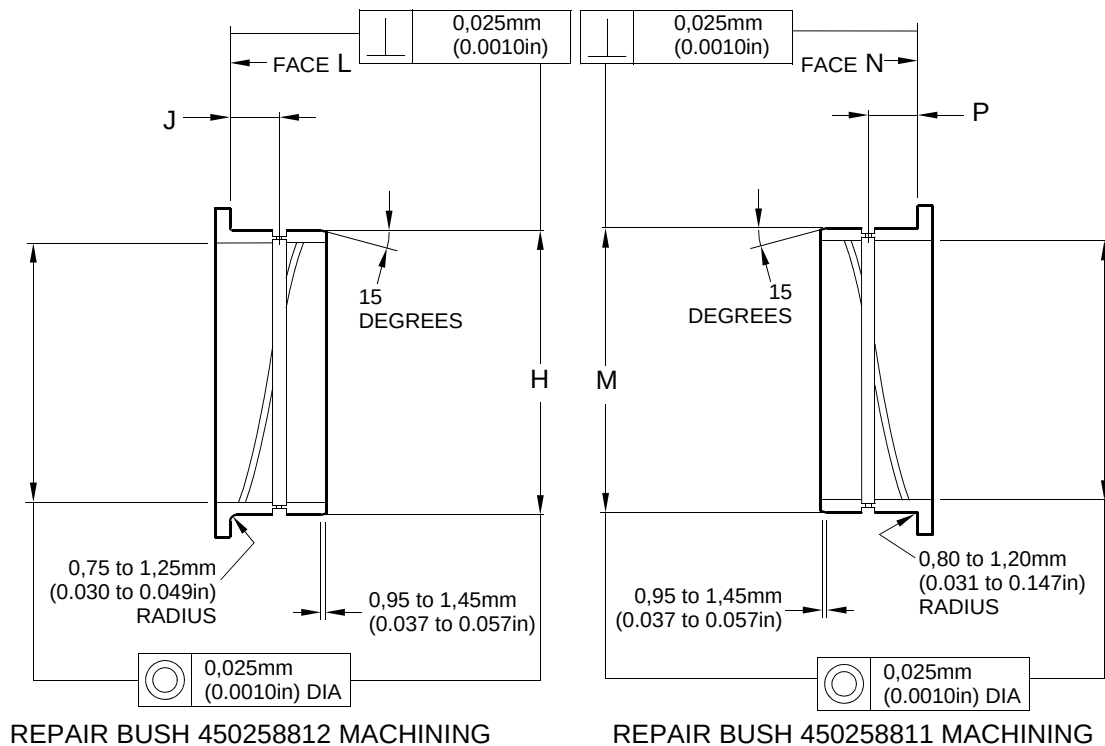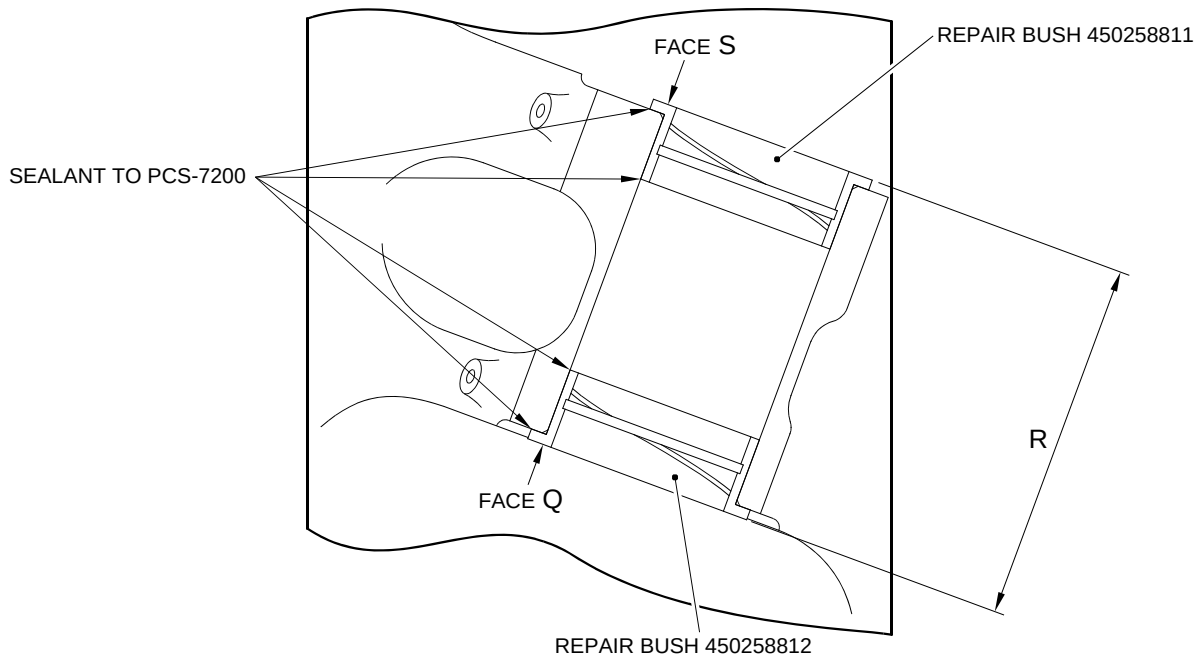

A321A5066-1

**Repair to Main Fitting - Repair Bush Machining and Installation
Figure 603**


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

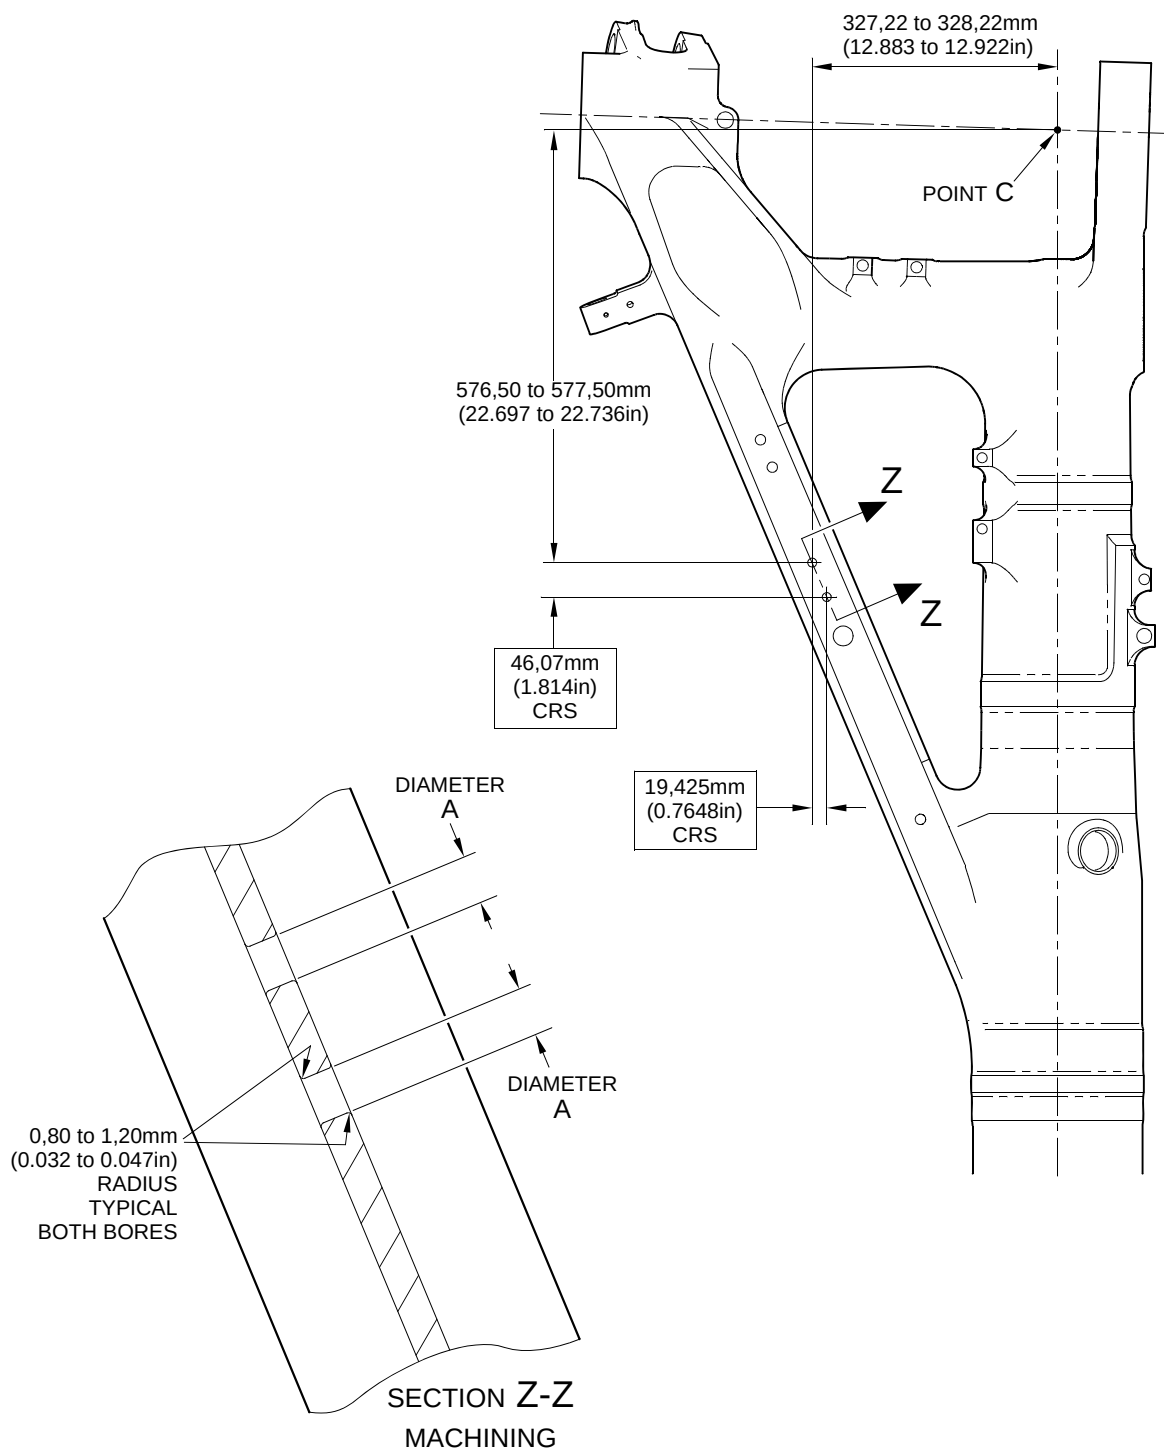


A321A5058-1

Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

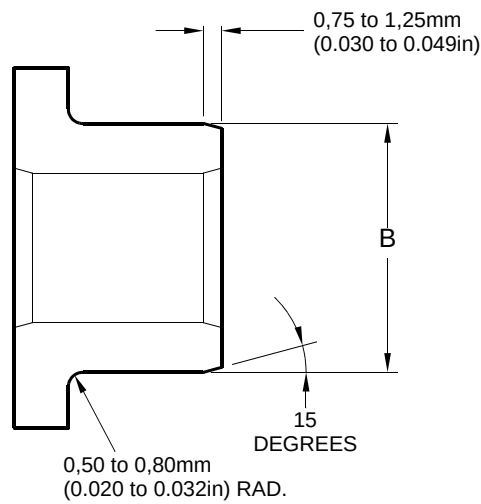

REPAIR BUSH 450237819

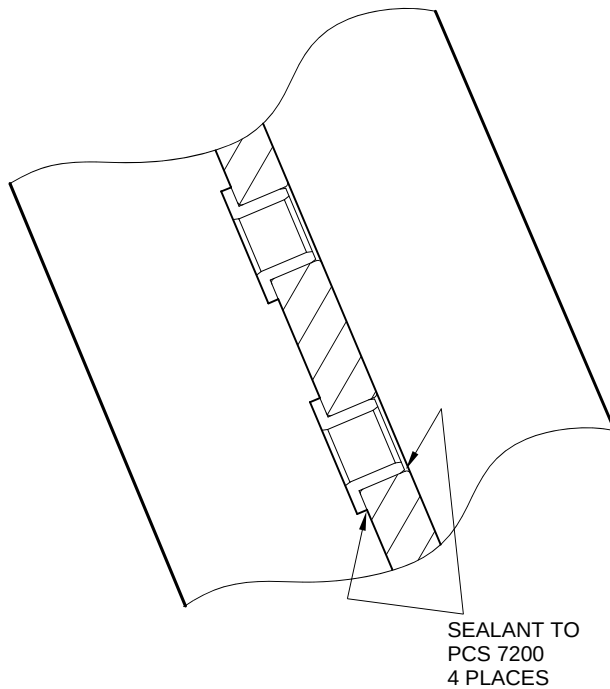


**PART SECTION Z-Z
WITH REPAIR BUSHES**

A321A5059-1

**Repair Bush - Machining and Installation
Figure 602**



**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

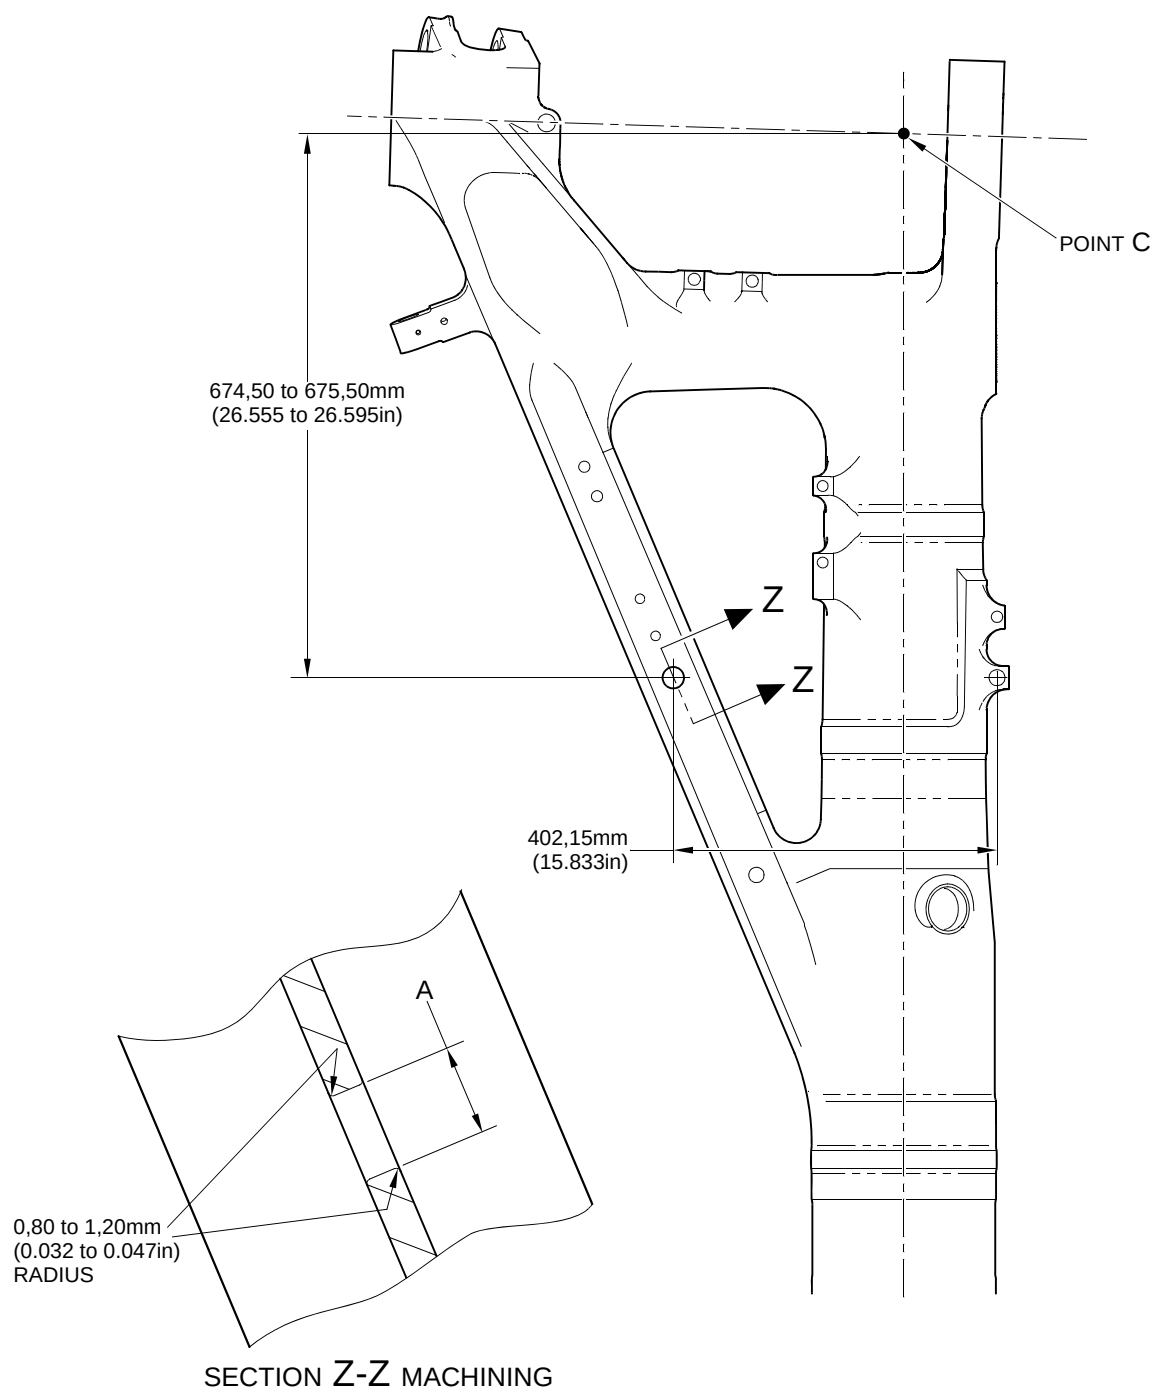

A321A5060-1

Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

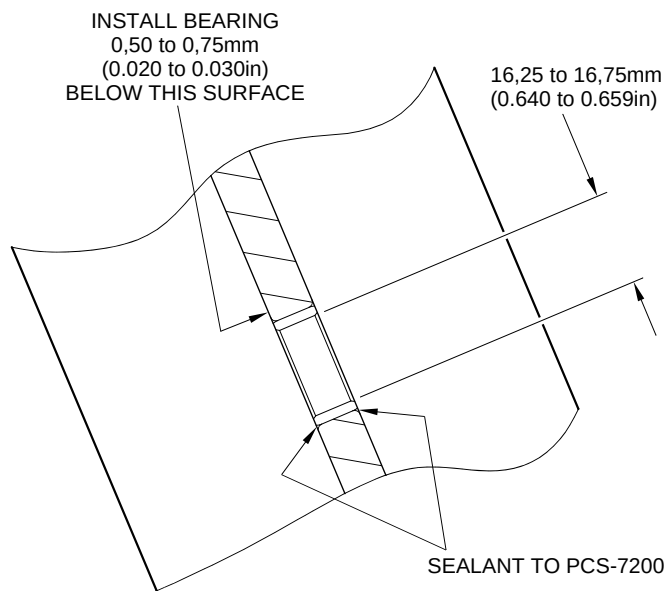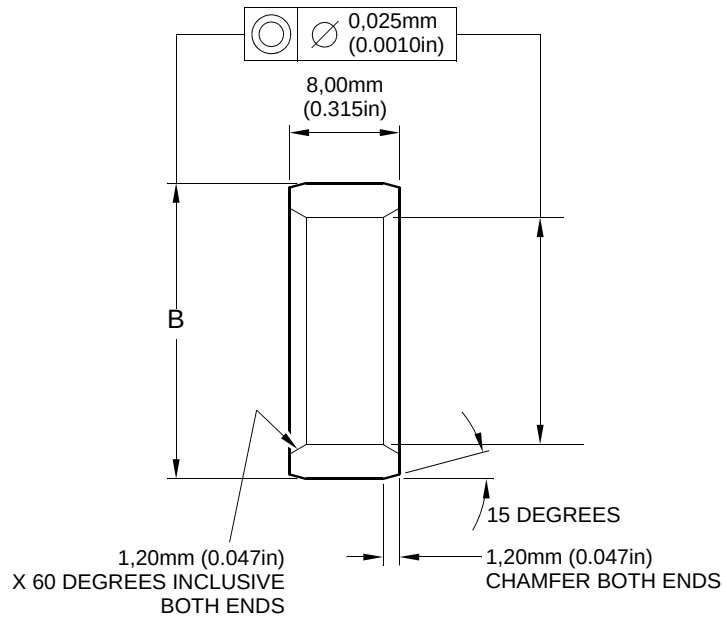


**PART SECTION Z-Z
WITH BEARING**

A321A5061-1

**Repair Bush - Machining and Installation
Figure 602**



**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

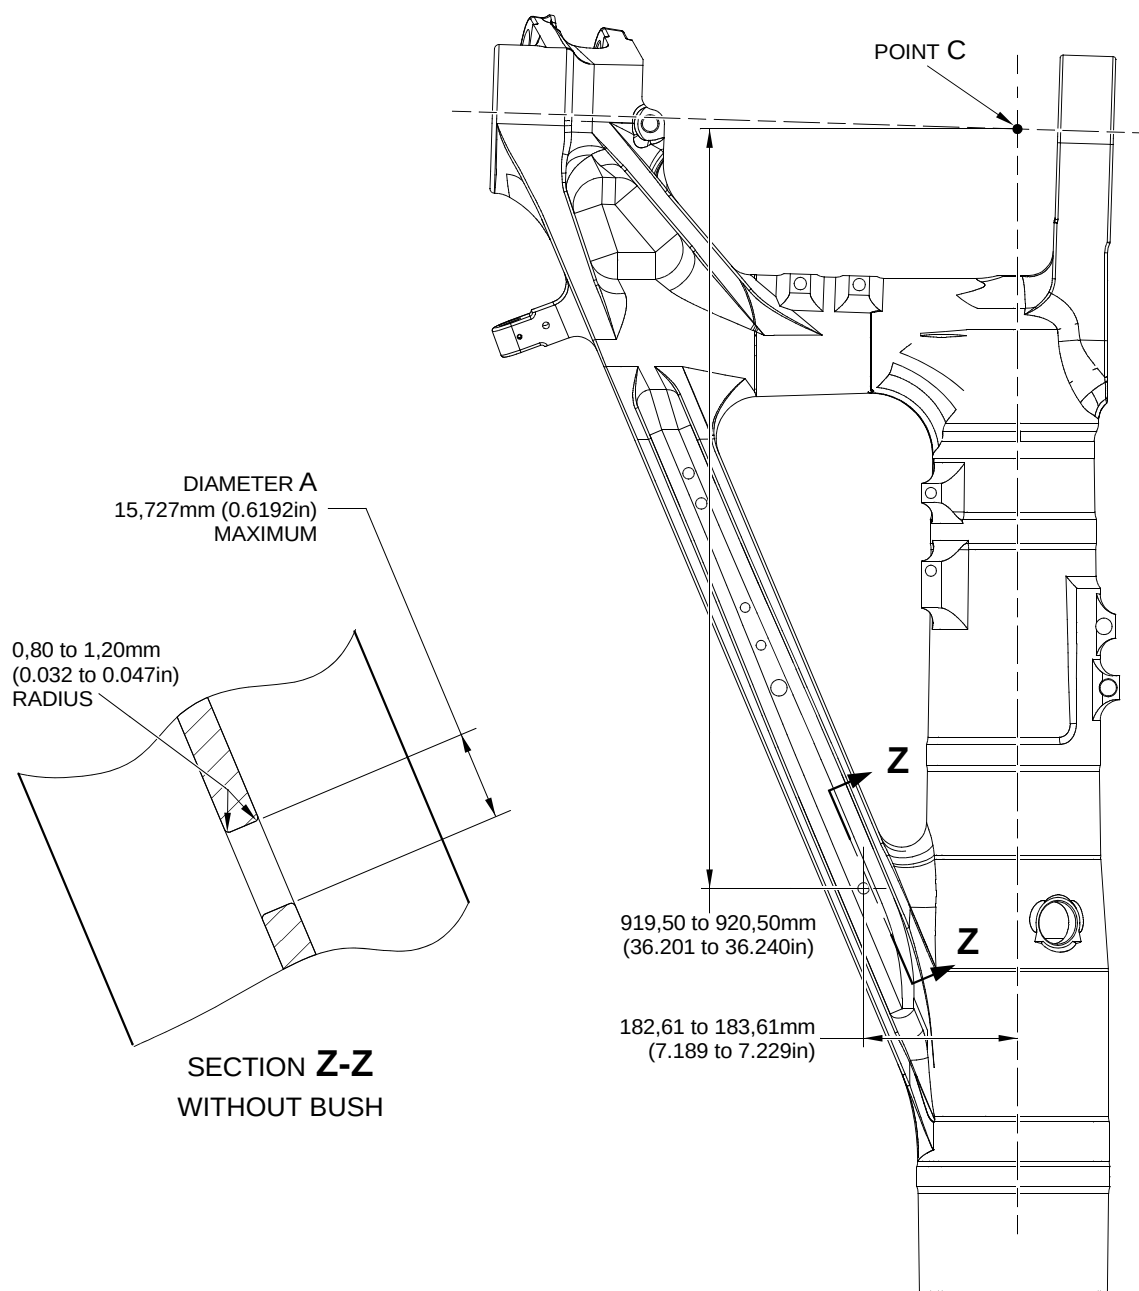

A321-S-32-12-22-022-0

Repair to Main Fitting
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

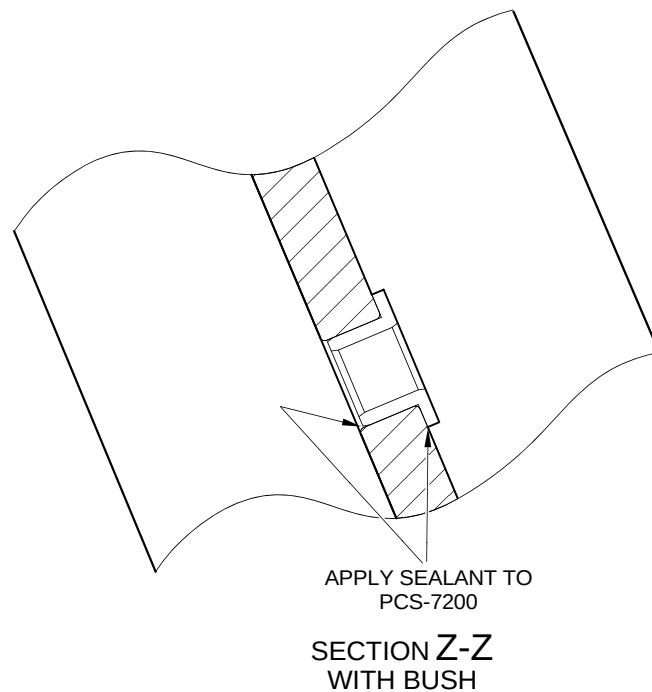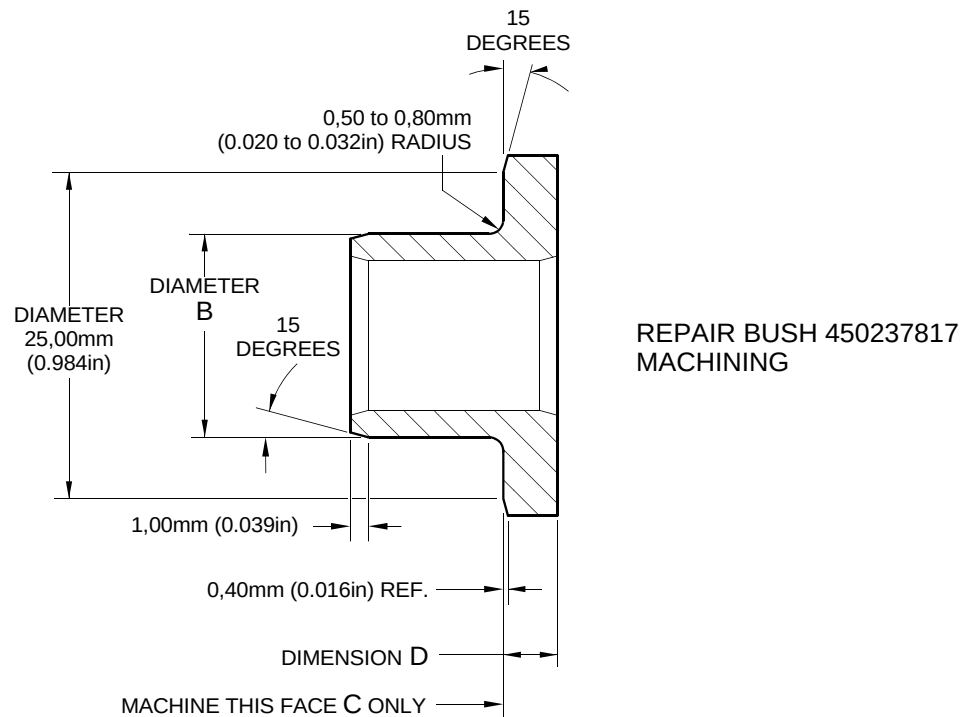

A321-S-32-12-22-023-0


**Repair Bush - Machining and Installation
Figure 602**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

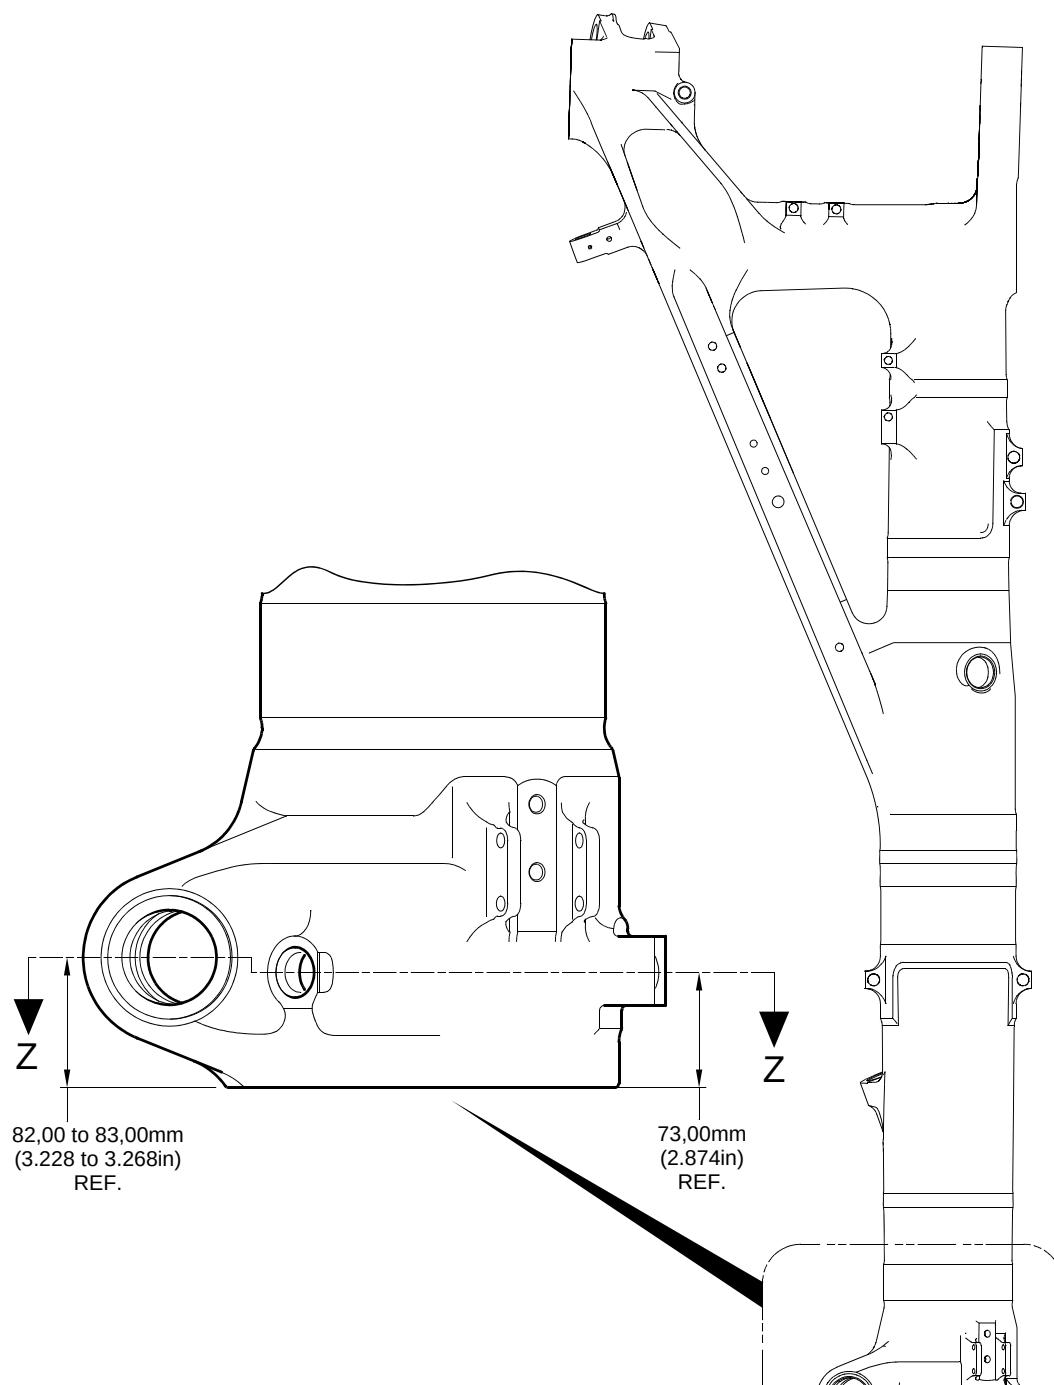


Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

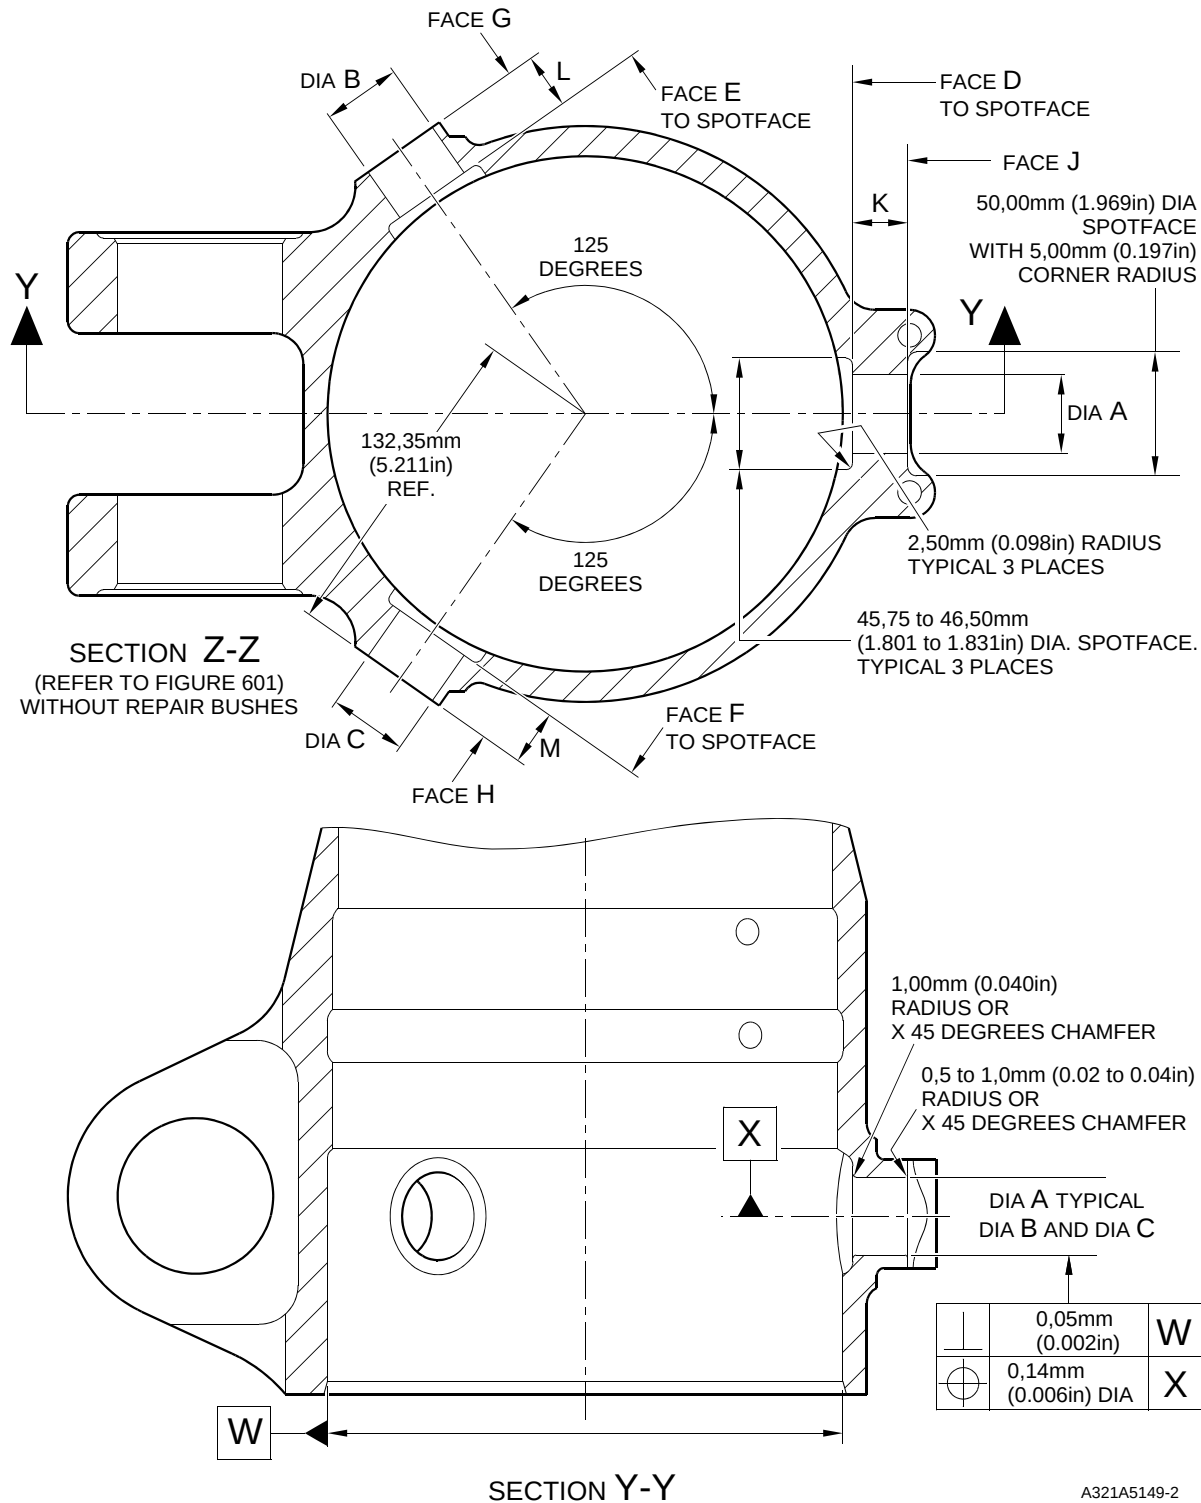


Repair to Main Fitting
Figure 602

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

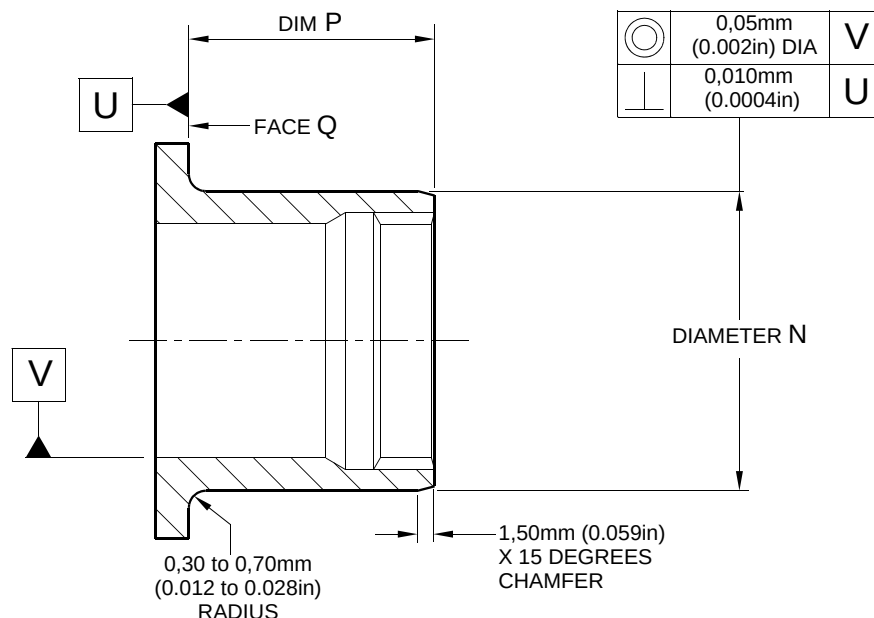


REPAIR BUSH 450258800

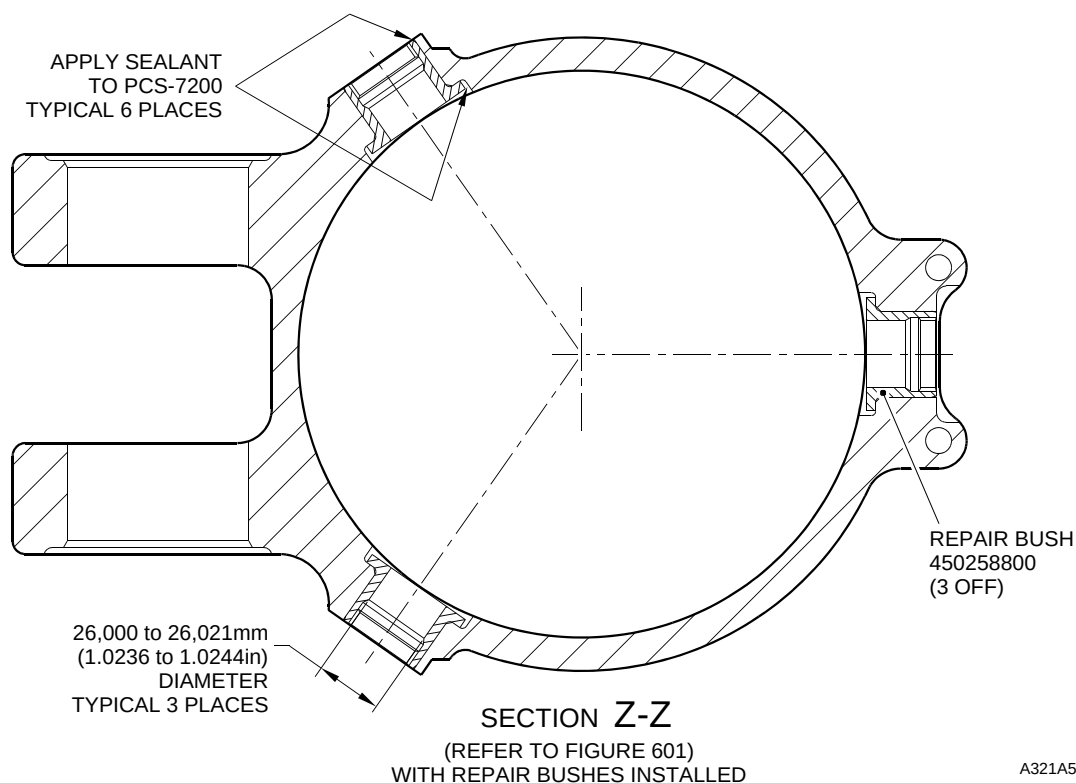

A321A5150-2

Repair to Main Fitting - Repair Bush Machining and Installation
Figure 603


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

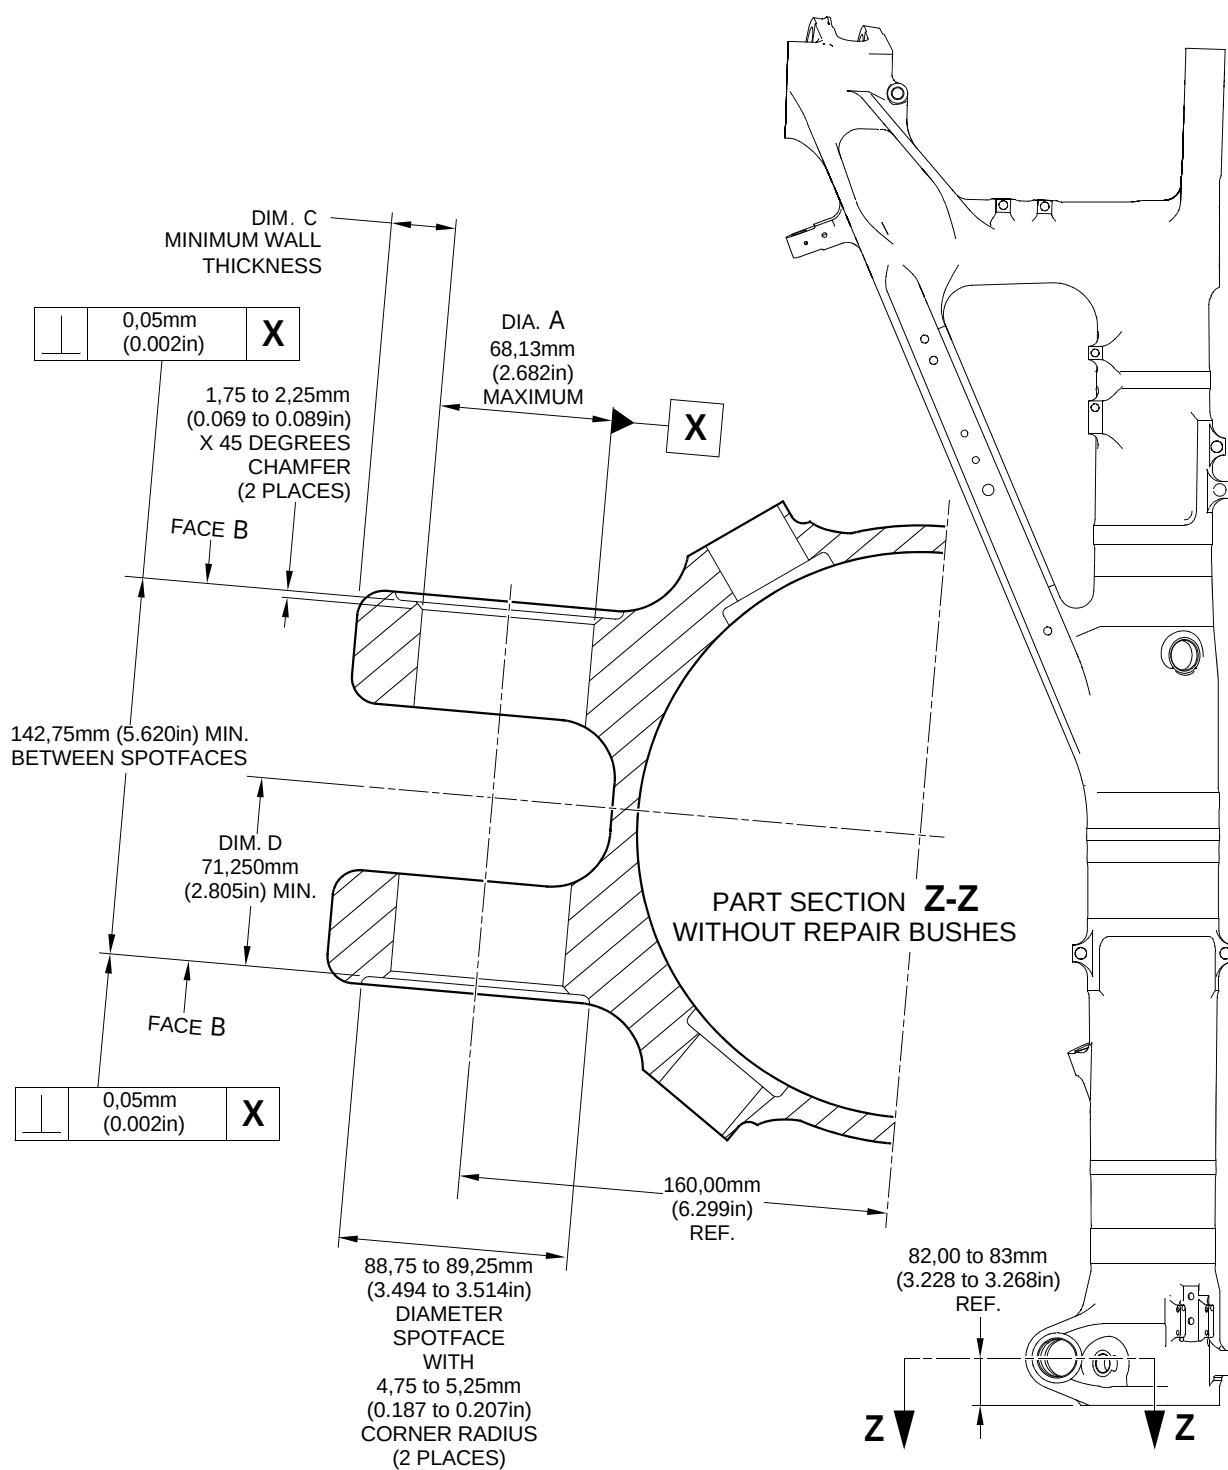


A321-S-32-12-22-080-1

Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

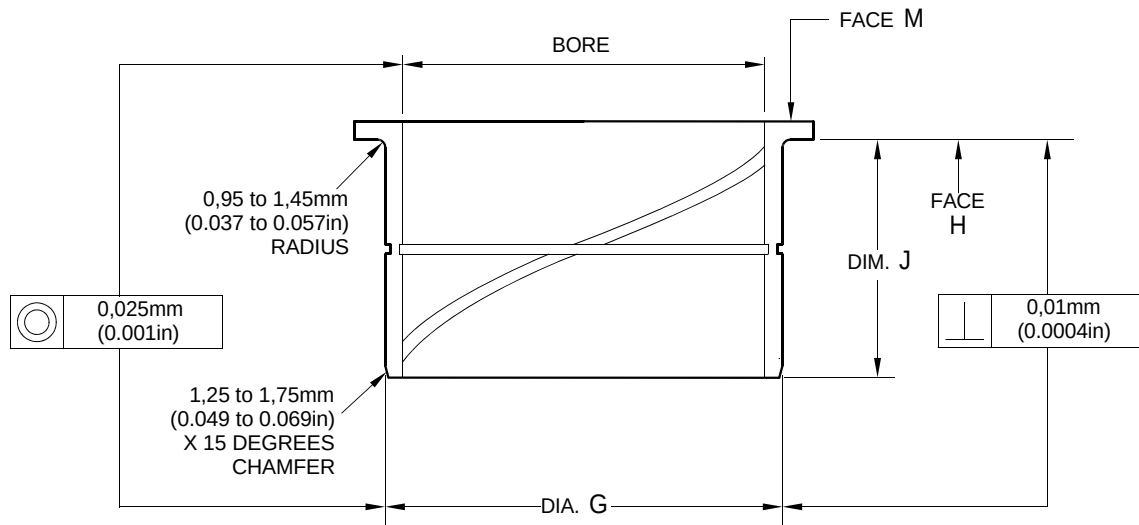

REPAIR BUSH 450258806 MACHINING

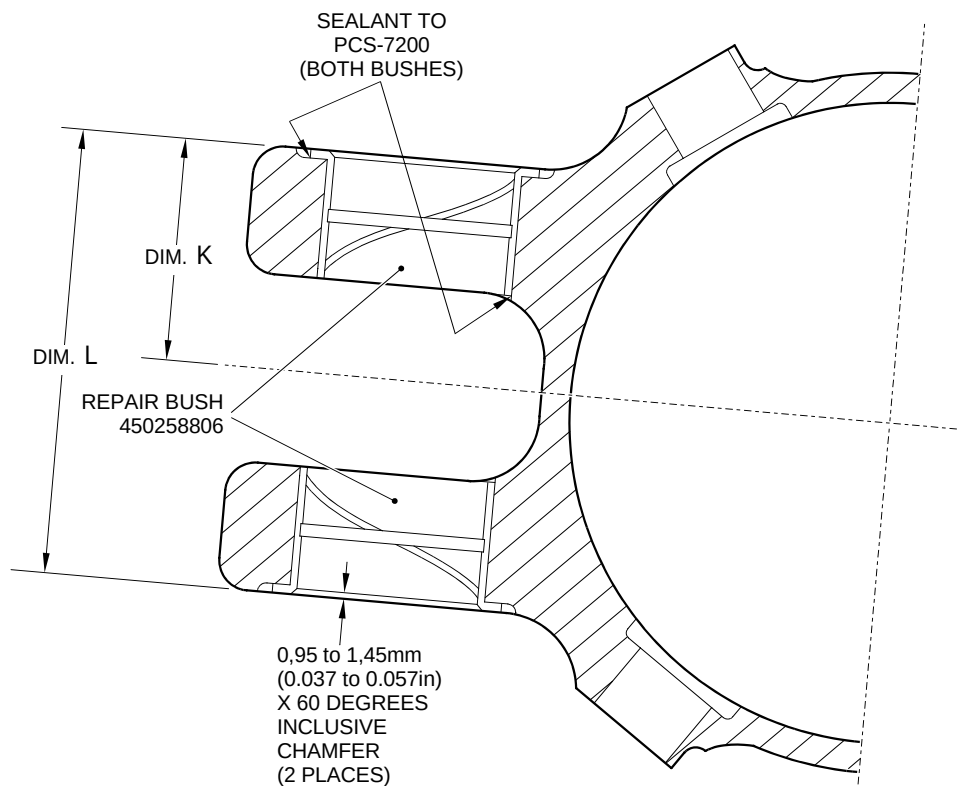


**PART SECTION Z-Z
WITH REPAIR BUSHES INSTALLED**

A321-S-32-12-22-081-1


**Repair to Main Fitting - Repair Bush Machining and Installation
Figure 602**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

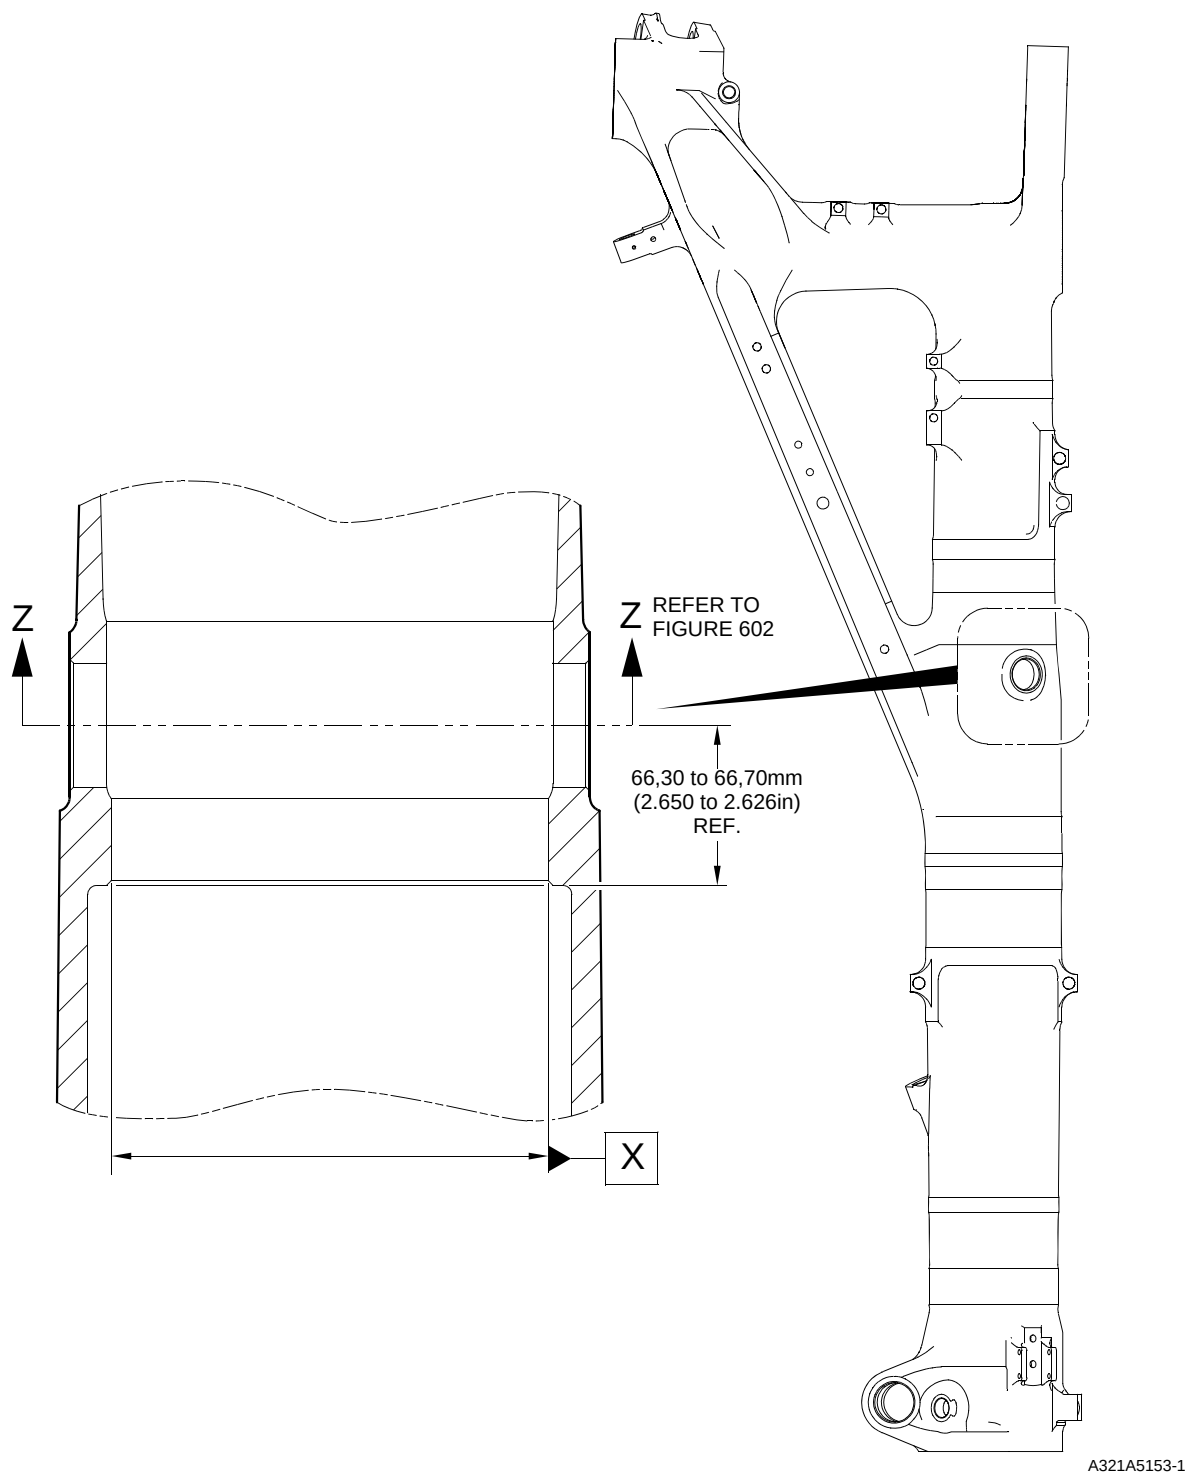


Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

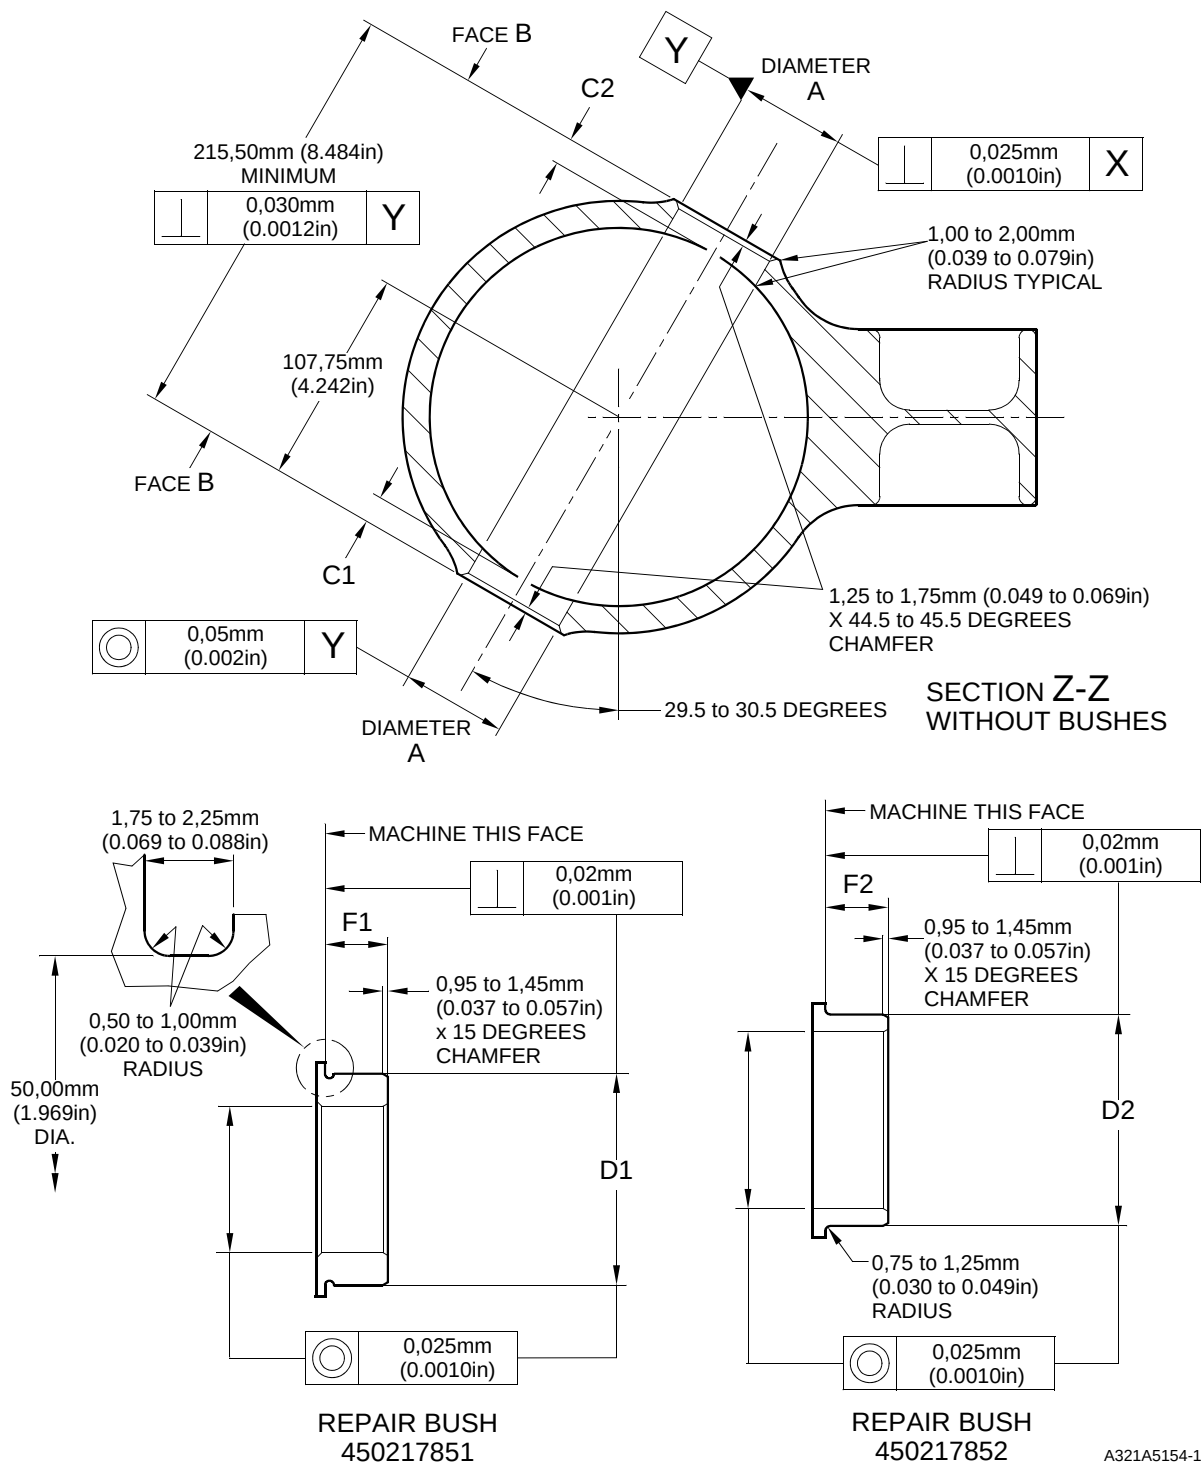

**Repair to Main Fitting - Machining
Figure 602**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

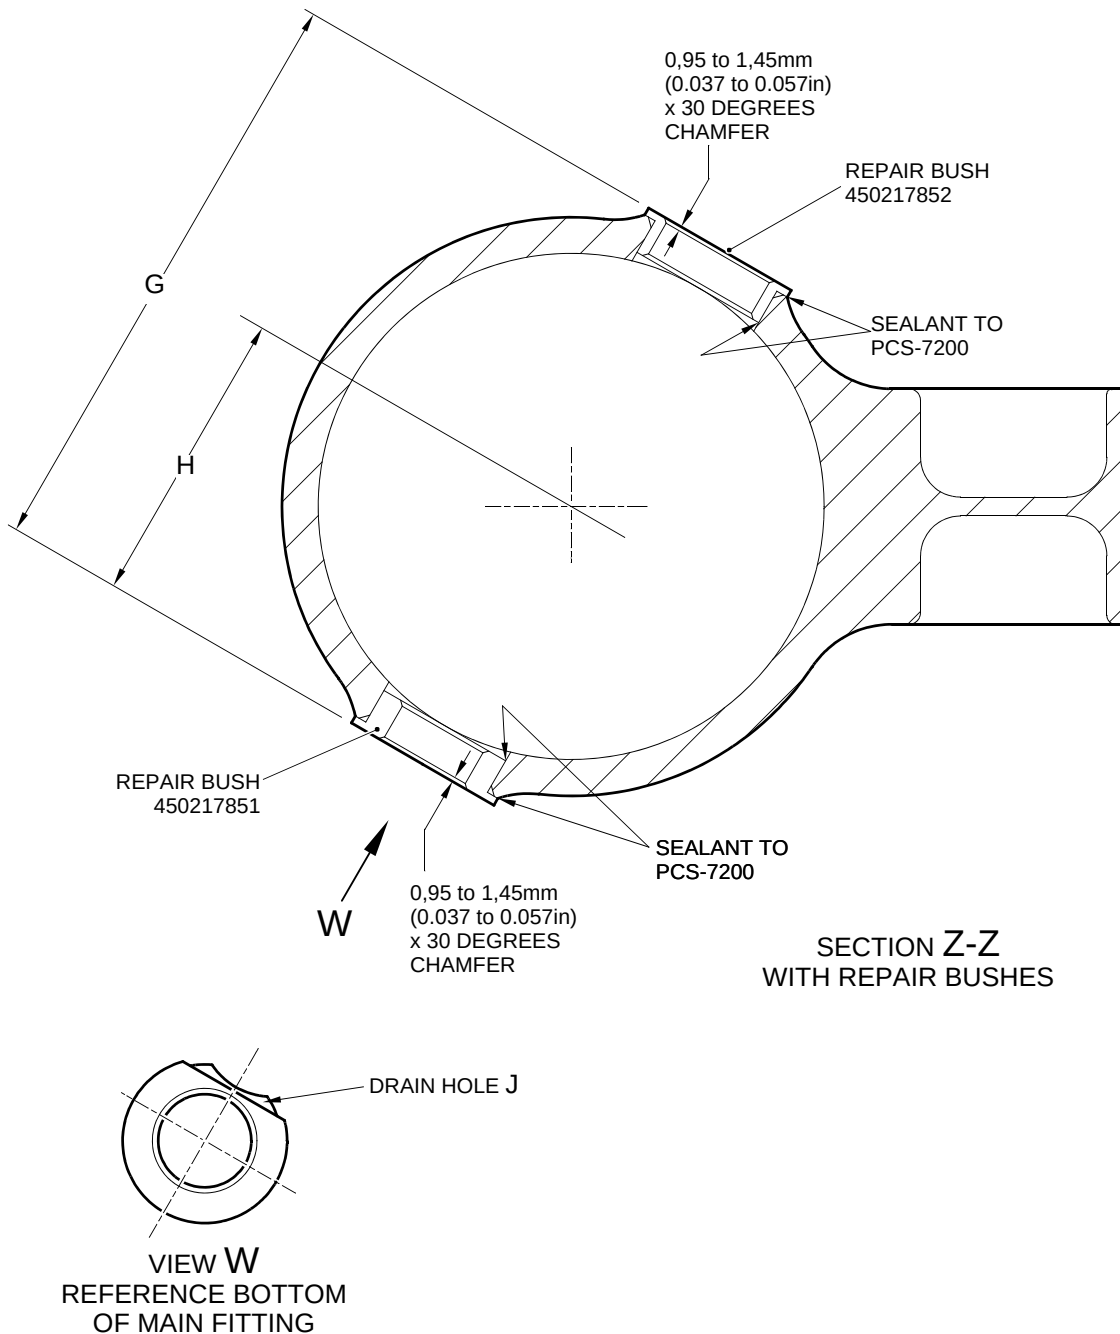



A321A5155-1

**Repair to Main Fitting - Repair Bush Installation
Figure 603**

32-12-22

Repair No. 11-9
Page 606
Dec 6/2019

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

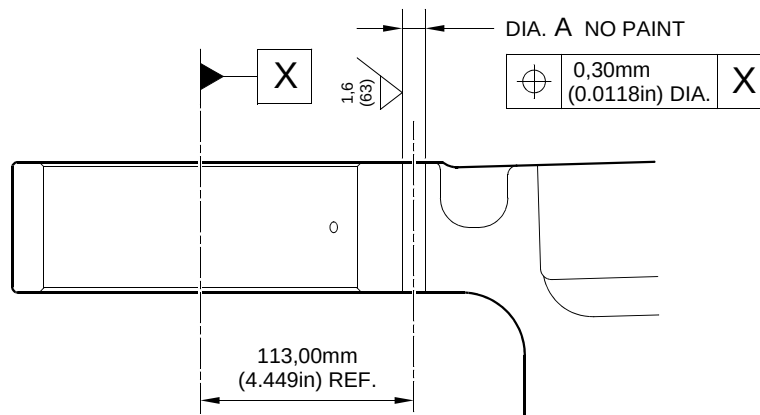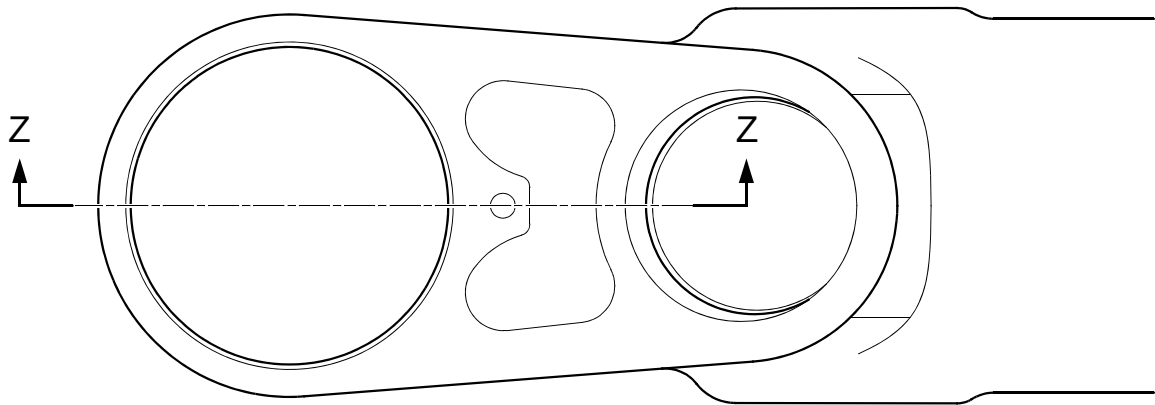



SECTION Z-Z
(WITHOUT BEARING)

A321-S-32-12-22-018-1

Repair to Main Fitting - Machining
Figure 601

Repair No. 11-11
Page 603
Dec 6/2019


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

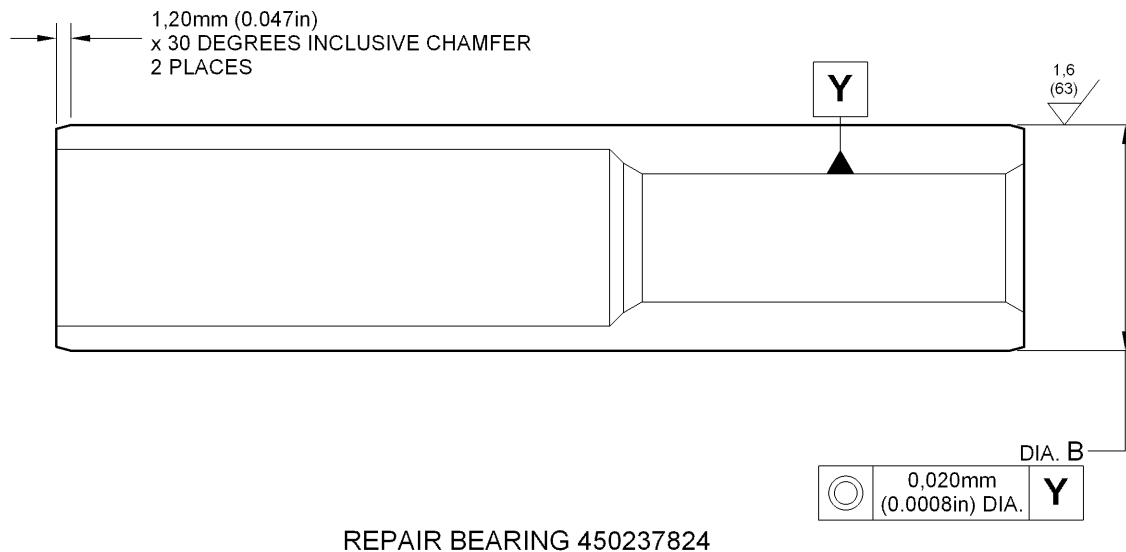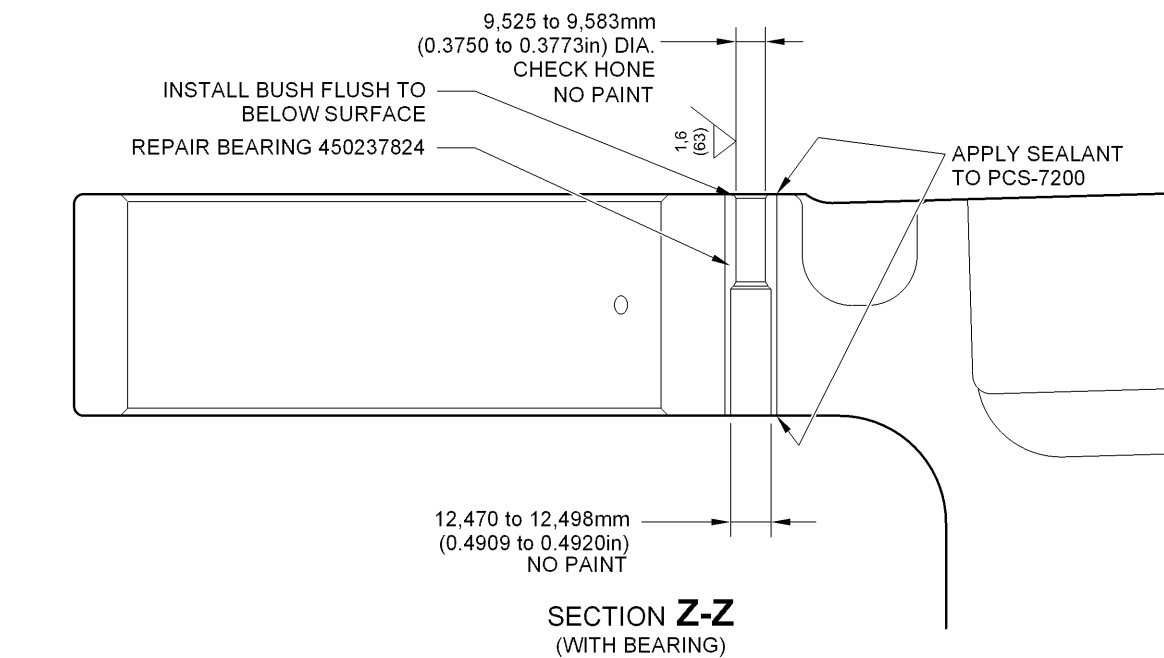

A321-S-32-12-22-004-1

Repair Bearing - Machining and Installation
Figure 602

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

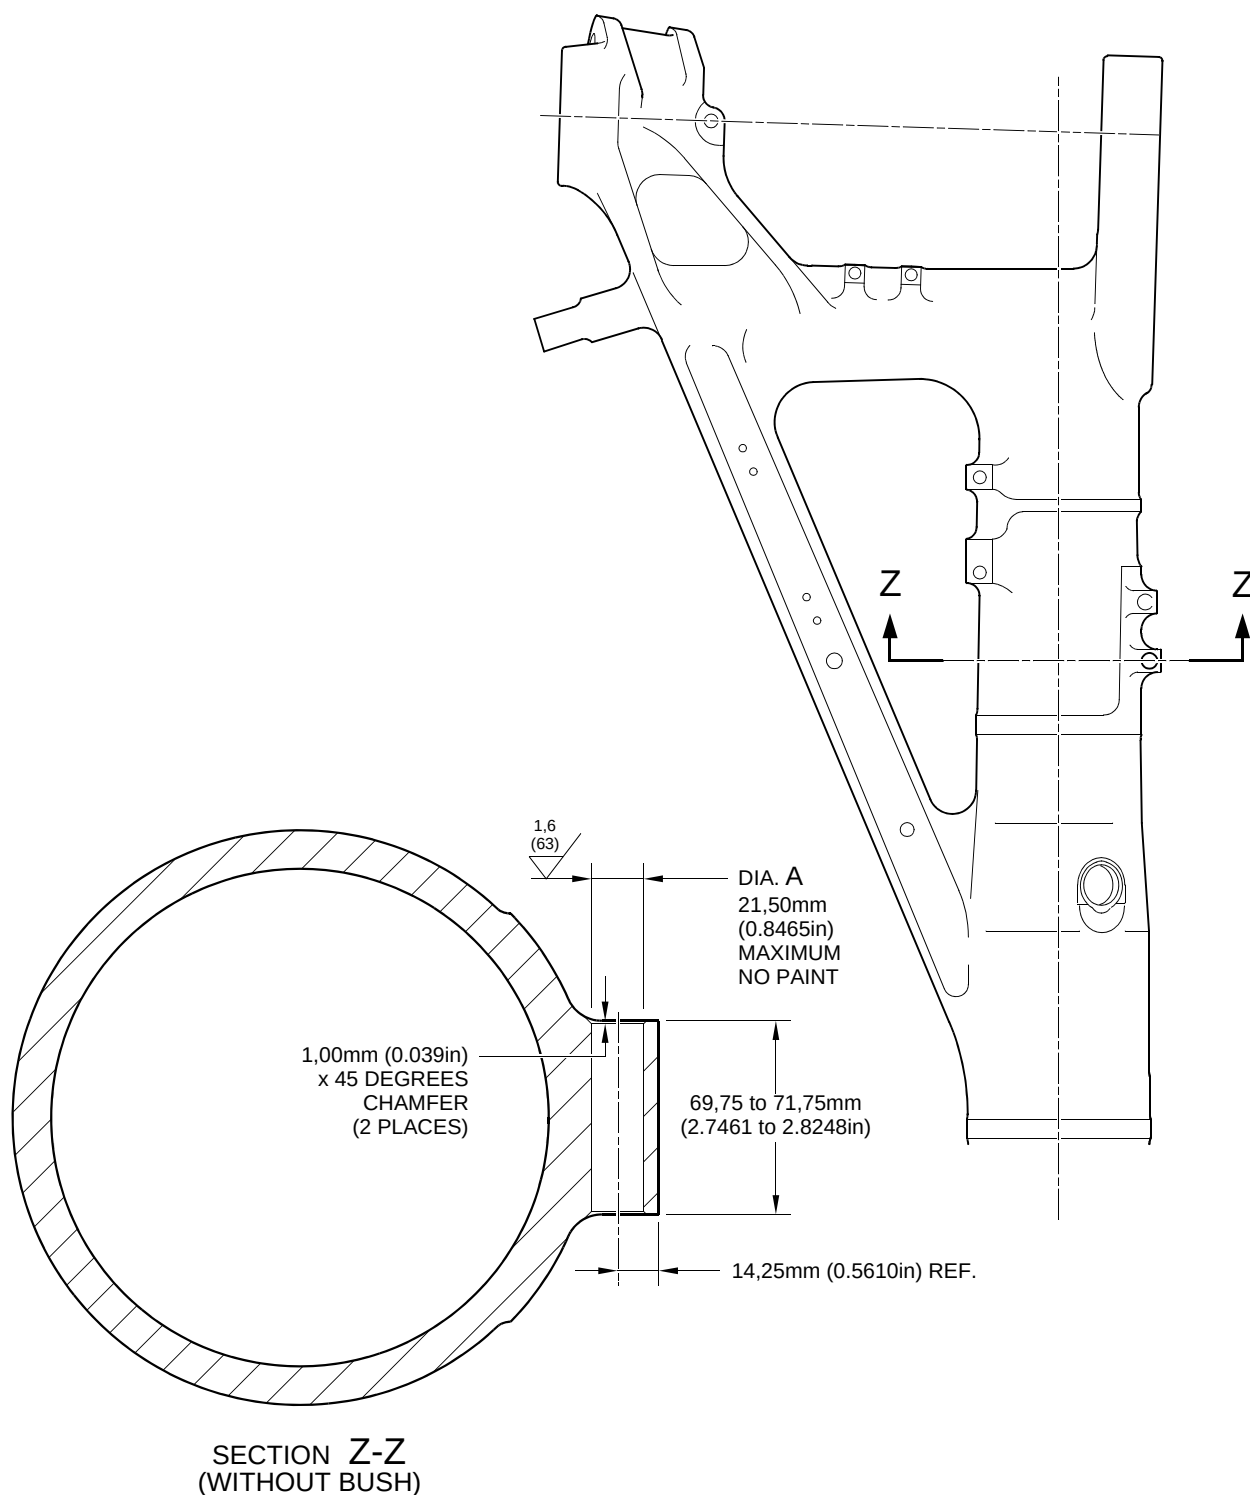


A321-S-32-12-22-036-1


Repair to Main Fitting - Machining
Figure 601

Repair No. 11-12
Page 603
Dec 6/2019

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

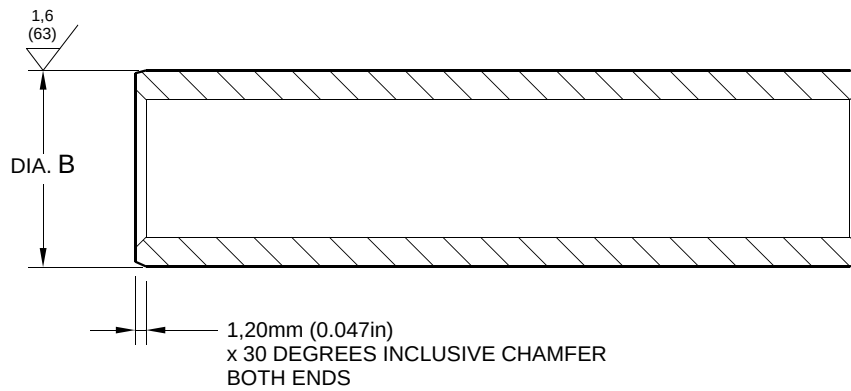

REPAIR BUSH 450237800

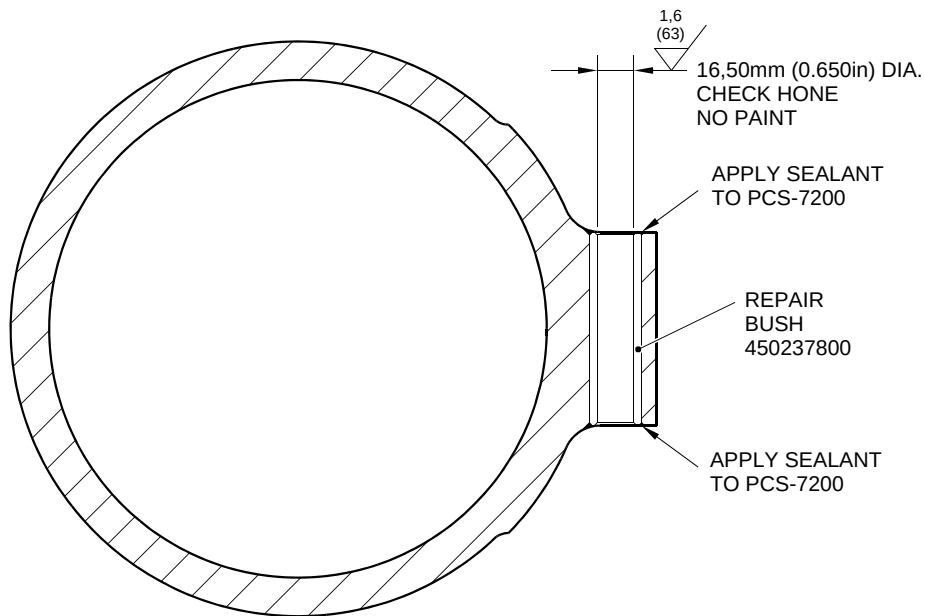


SECTION Z-Z
(REFER TO FIGURE 601)
WITH REPAIR BUSH

A321-S-32-12-22-037-1


Repair Bush - Machining and Installation
Figure 602

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

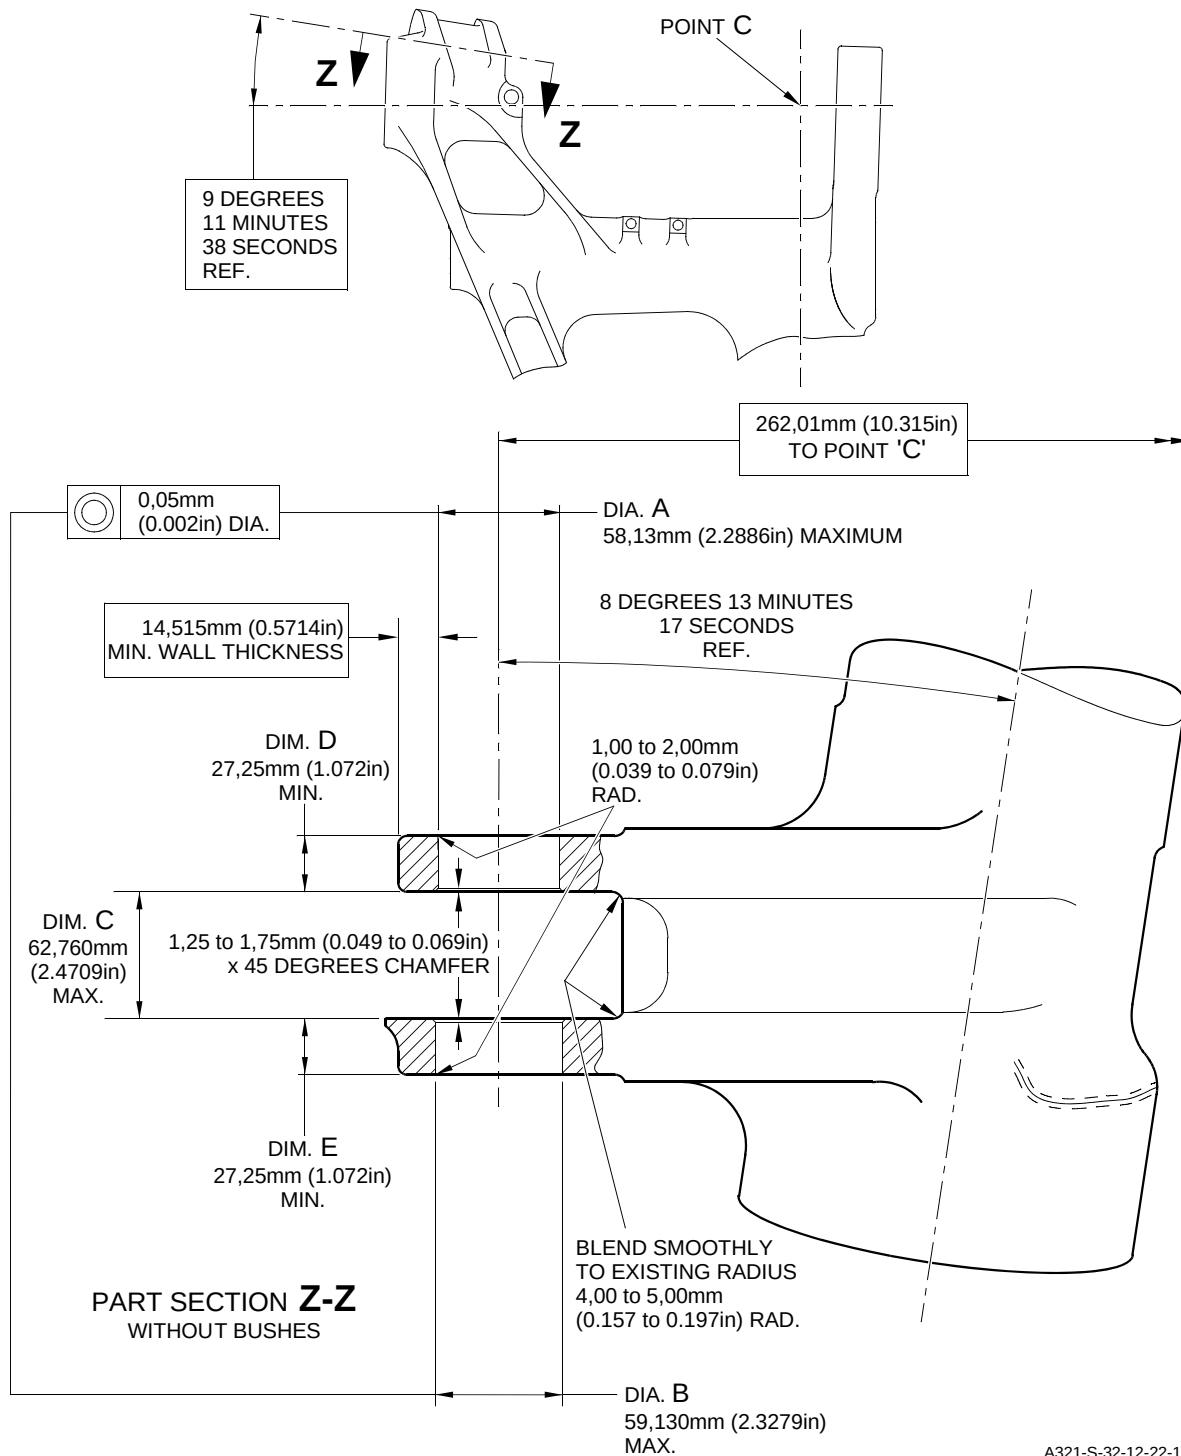


**Repair to Main Fitting
Figure 601**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

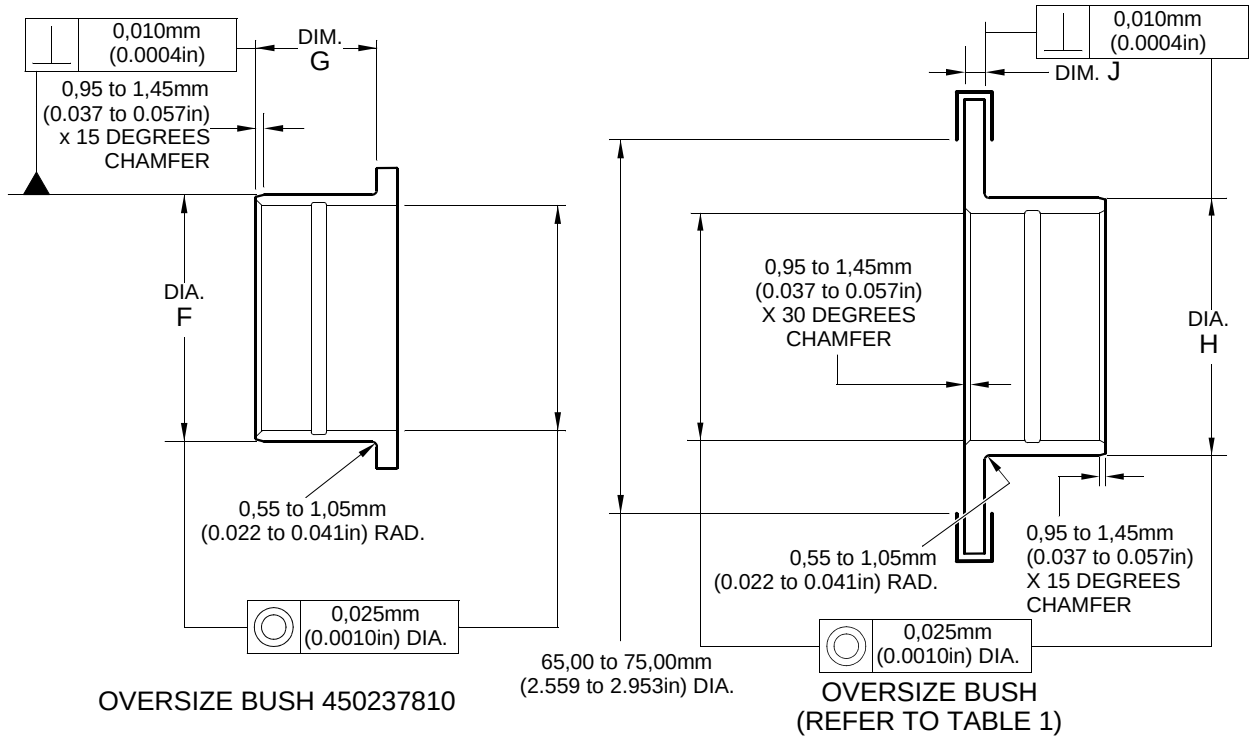


NITRIDING DEPTH 0,18 to 0,23mm (0.007 to 0.009in), 0,02 to 0,04mm (0.0008 to 0.0016in) REMOVAL OVER AREA SHOWN 750HV MIN.

NOTE: REPAIR BUSHES 450237351, 450237352, 450237353, 450237354 AND 450237355 ARE TO BE NITRIDED BEFORE DESPATCH TO OVERHAUL AGENCY. DIAMETER H AND CORNER RADIUS ARE TO BE MACHINED ON RECEIPT BY OVERHAUL AGENCY TO SUIT INDIVIDUAL BORE OF MAIN FITTING. LOCALLY APPLY CADMIUM PLATE TO THE REWORKED OUTER DIAMETER OF THE BUSHES: REFER TO PCS-2141.

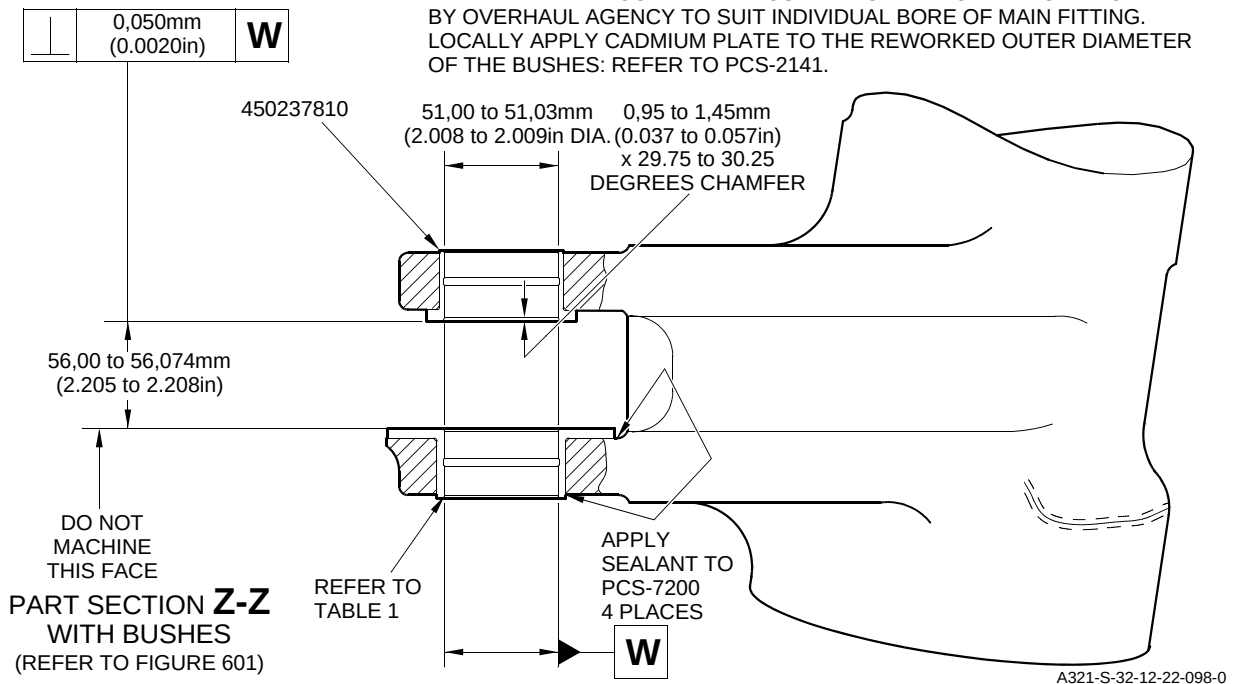


**Repair Bushes - Machining and Installation
Figure 602**

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

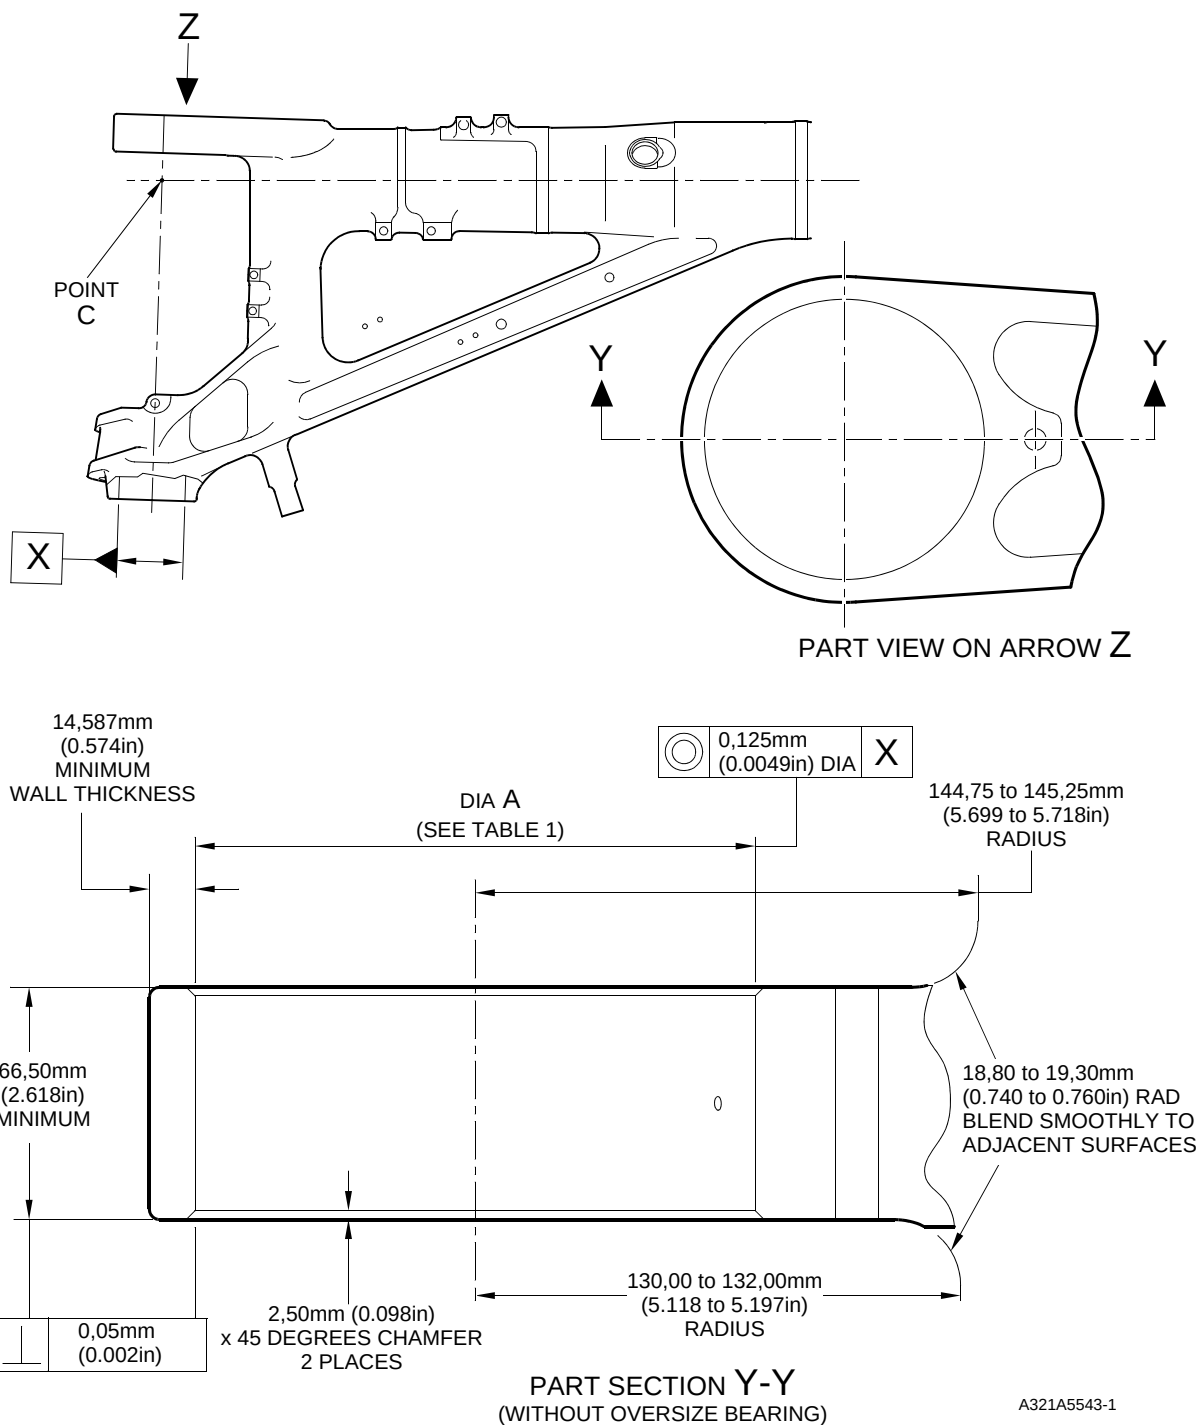

Repair to Main Fitting - Machining
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

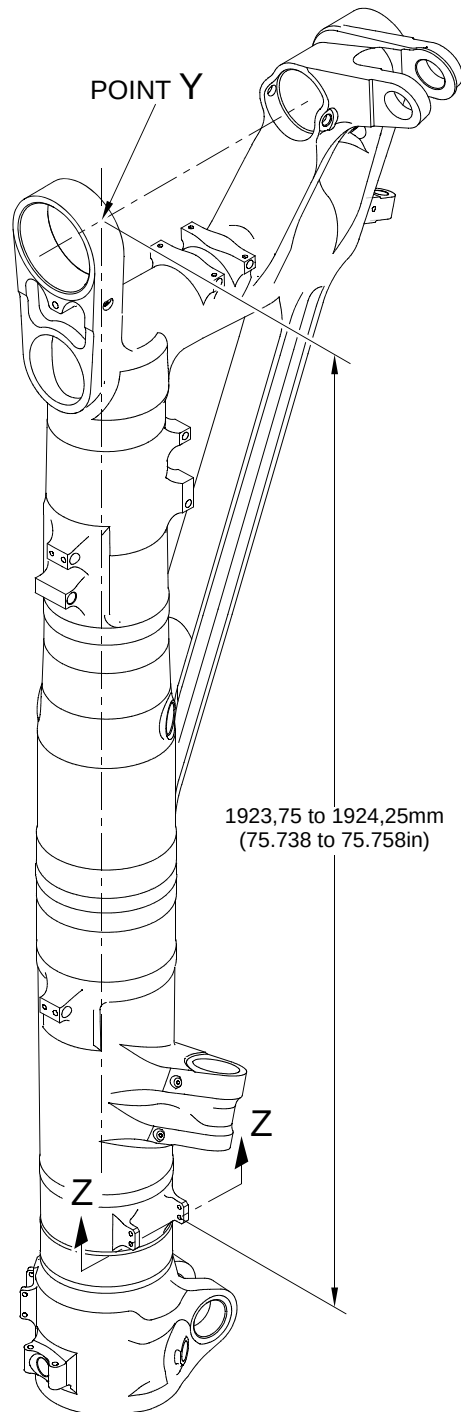


A321A5549-1

Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

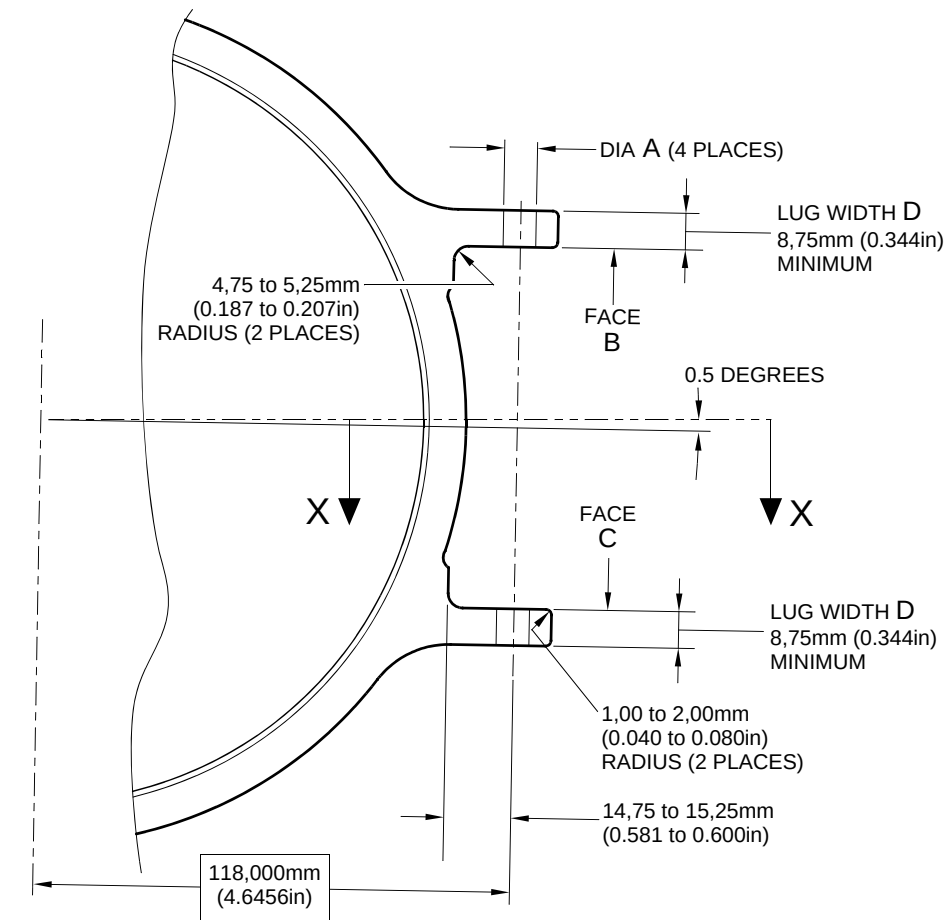

**SECTION Z-Z
(WITHOUT BUSHES)**

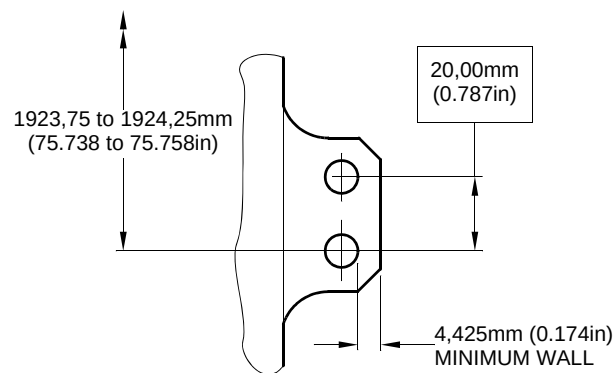


**SECTION X-X
(WITHOUT BUSHES)**

A321A5550-2

Repair to Main Fitting - Machining
Figure 602



**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

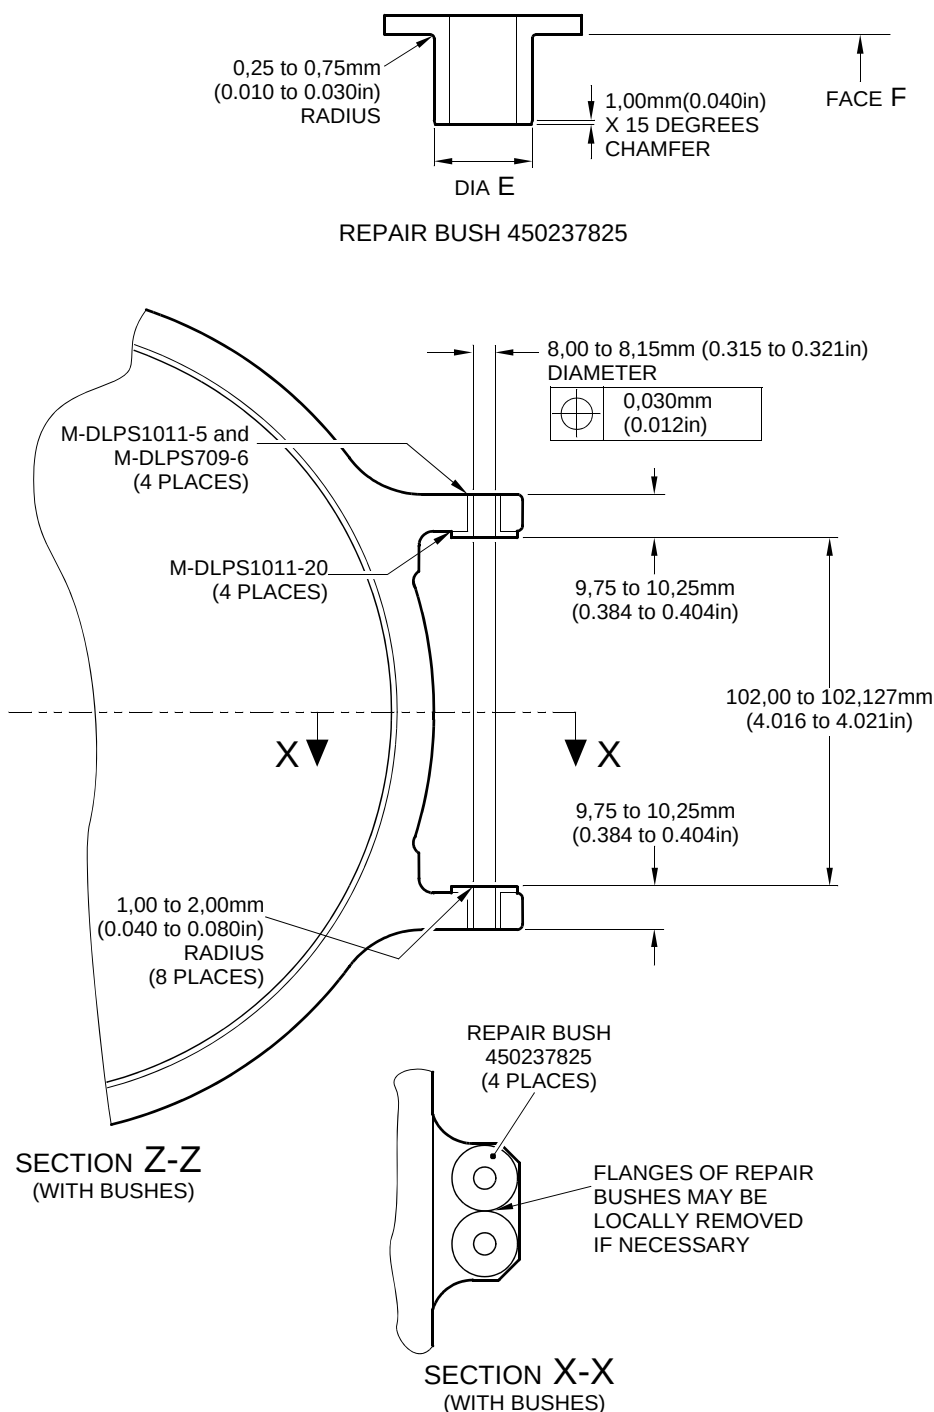

A321A5551-1

**Repair Bush - Machining and Installation
Figure 603**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

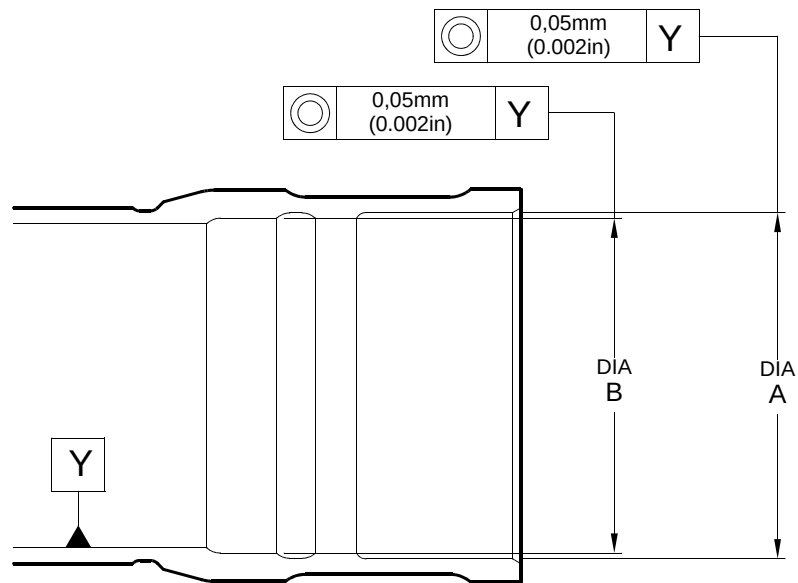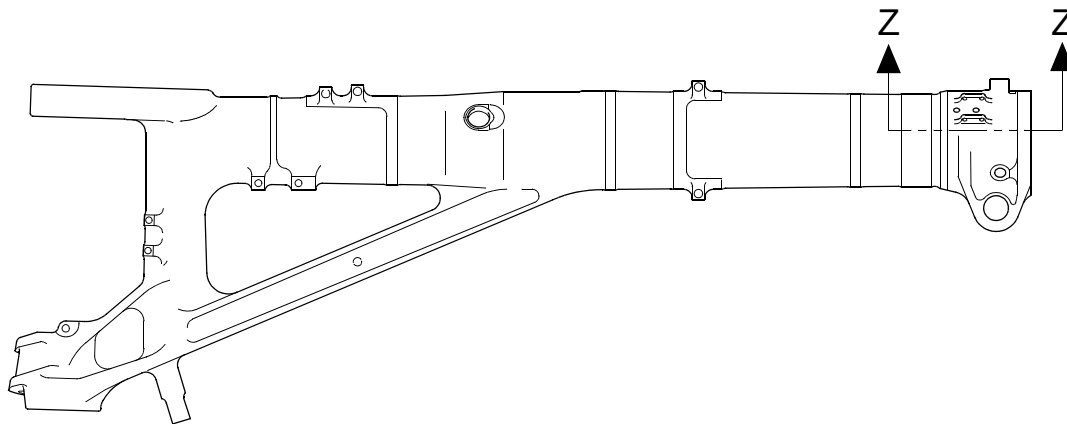


SECTION Z-Z

A321A5695-1

Repair to Main Fitting
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

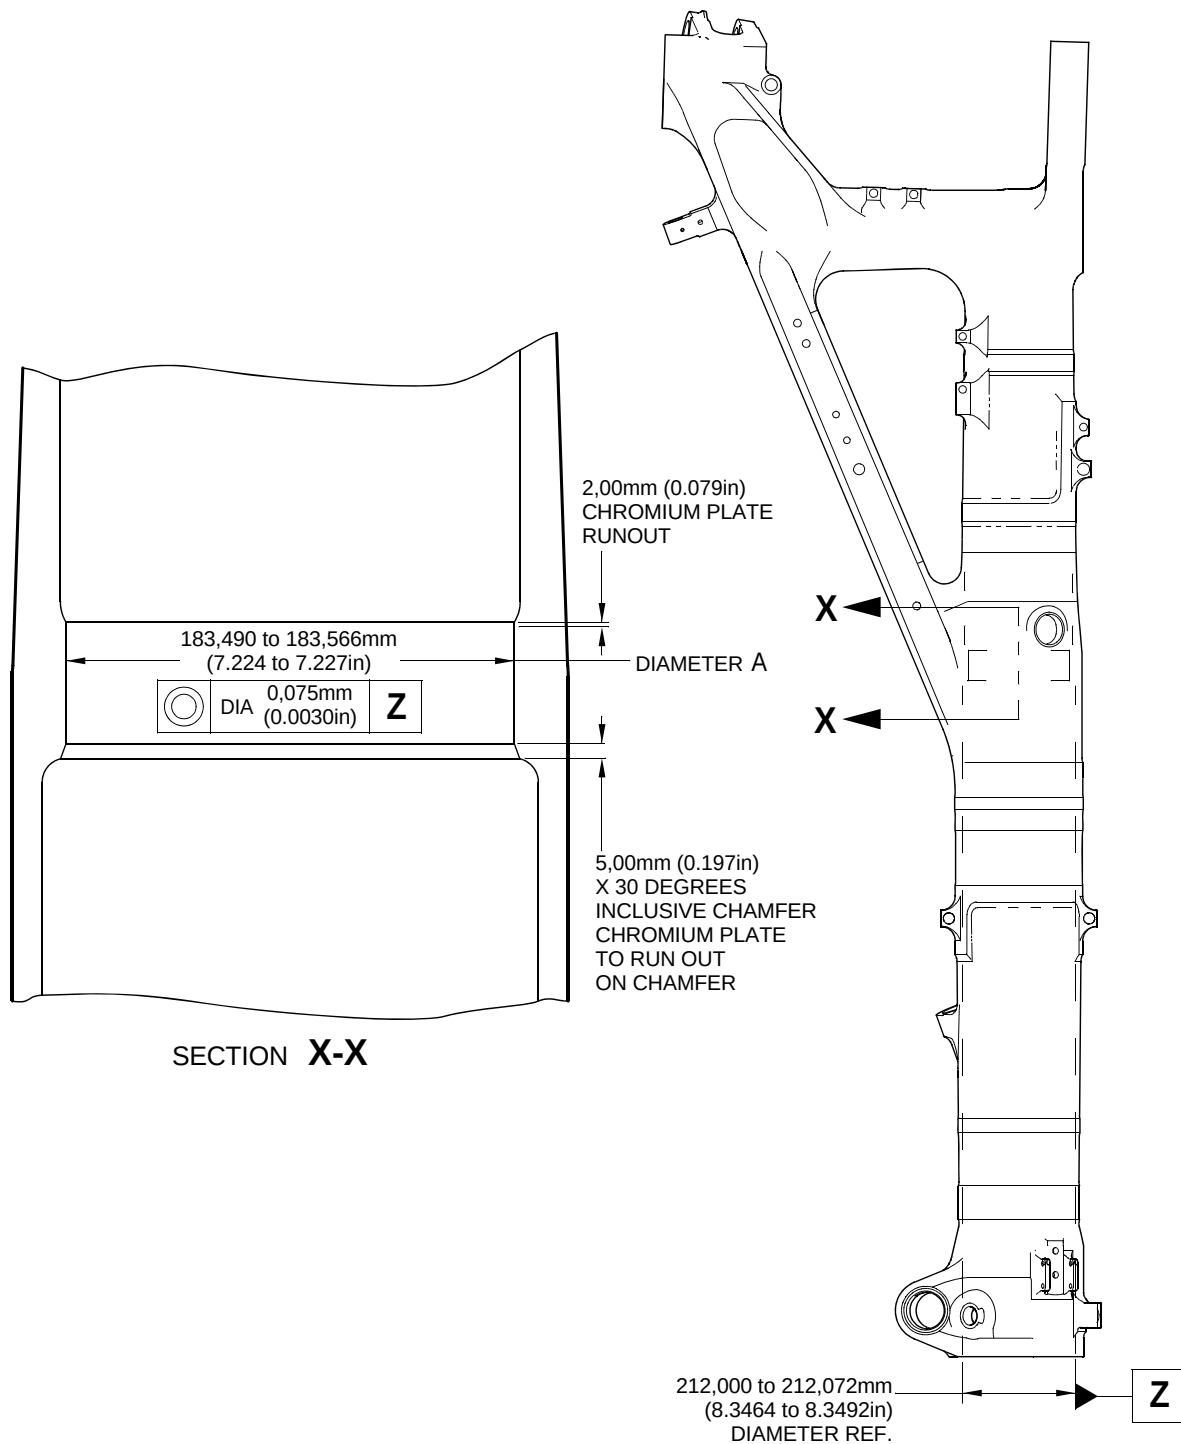

A321A5708-2


Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

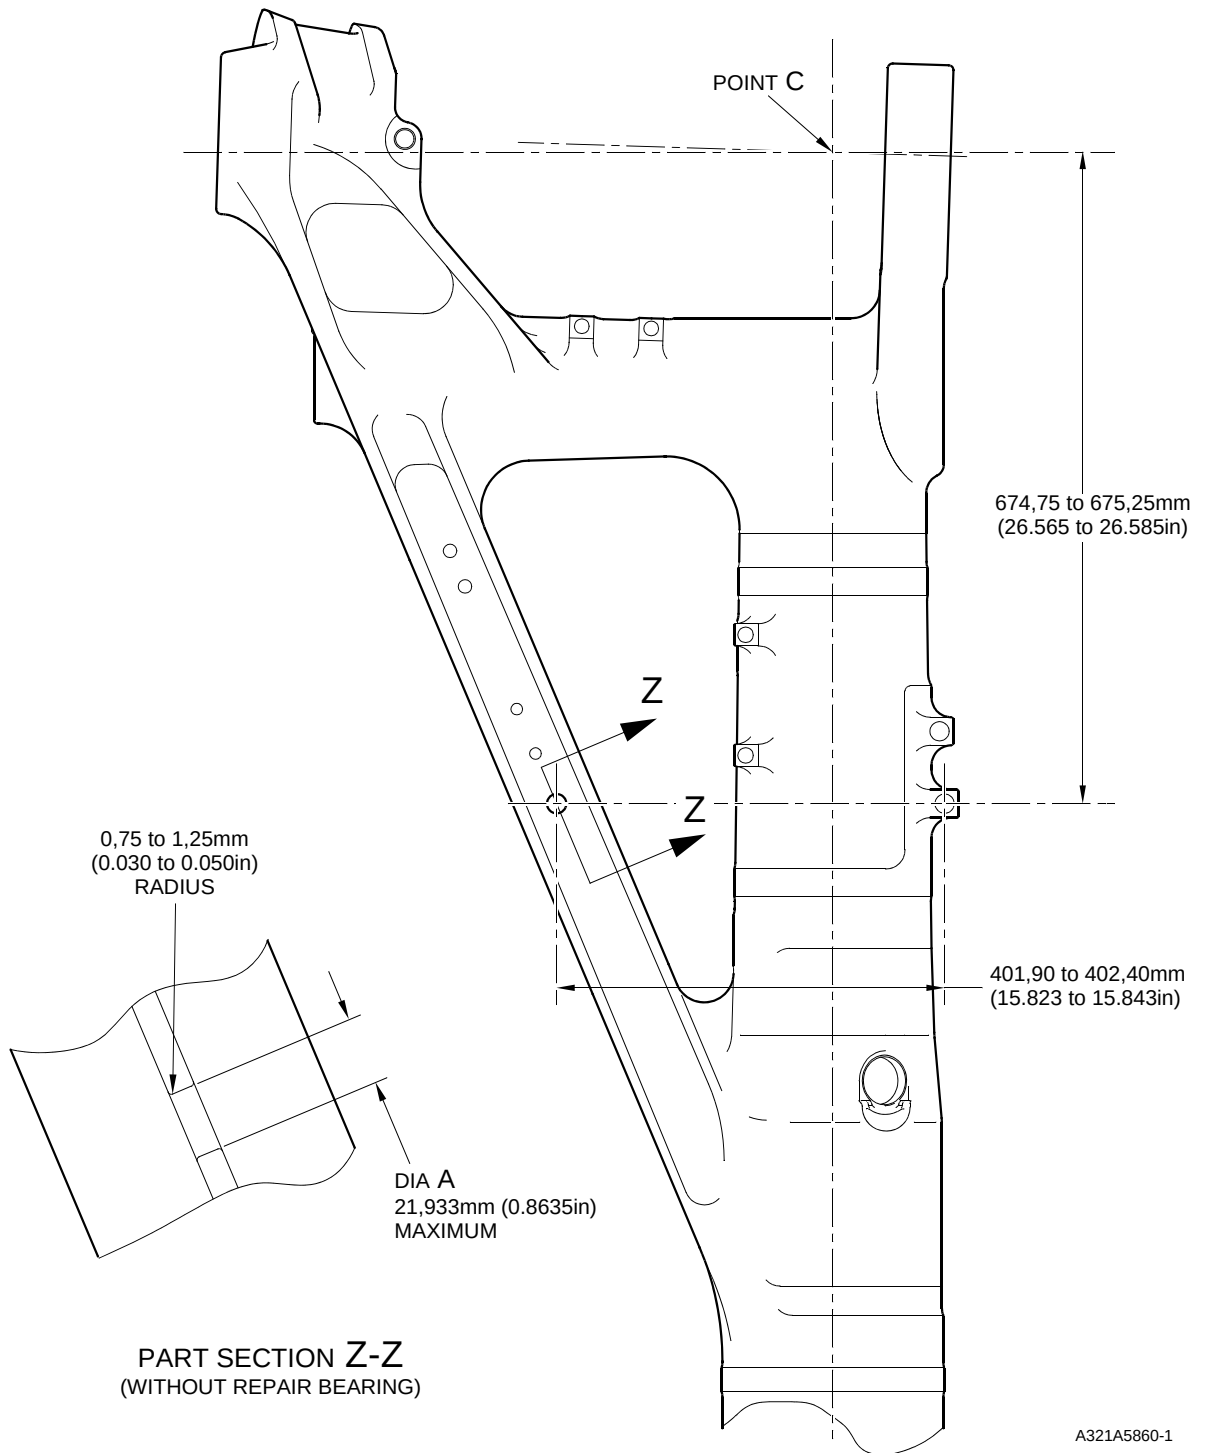


**Repair to Main Fitting - Machining
Figure 601**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

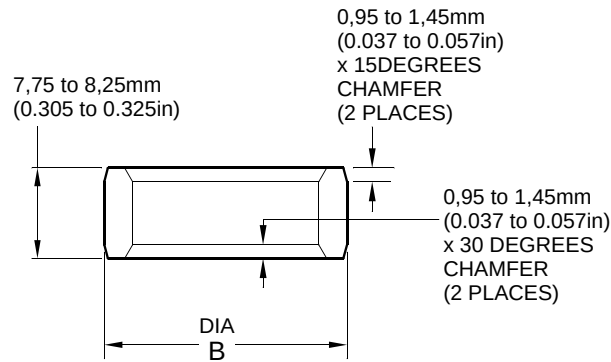

REPAIR BEARING

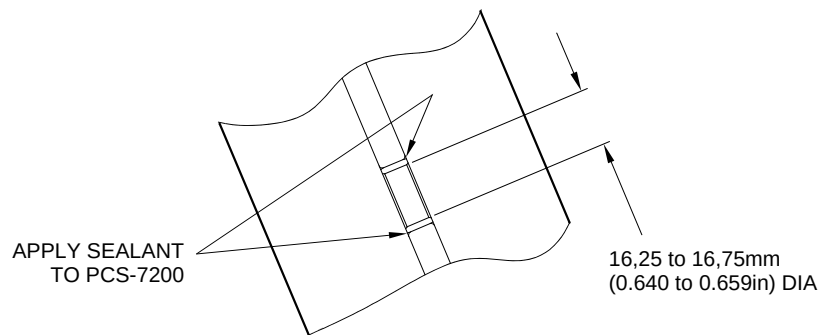


**PART SECTION Z-Z
(WITH REPAIR BEARING)**

A321A5991-1



**Repair Bearing - Machining and Installation
Figure 602**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

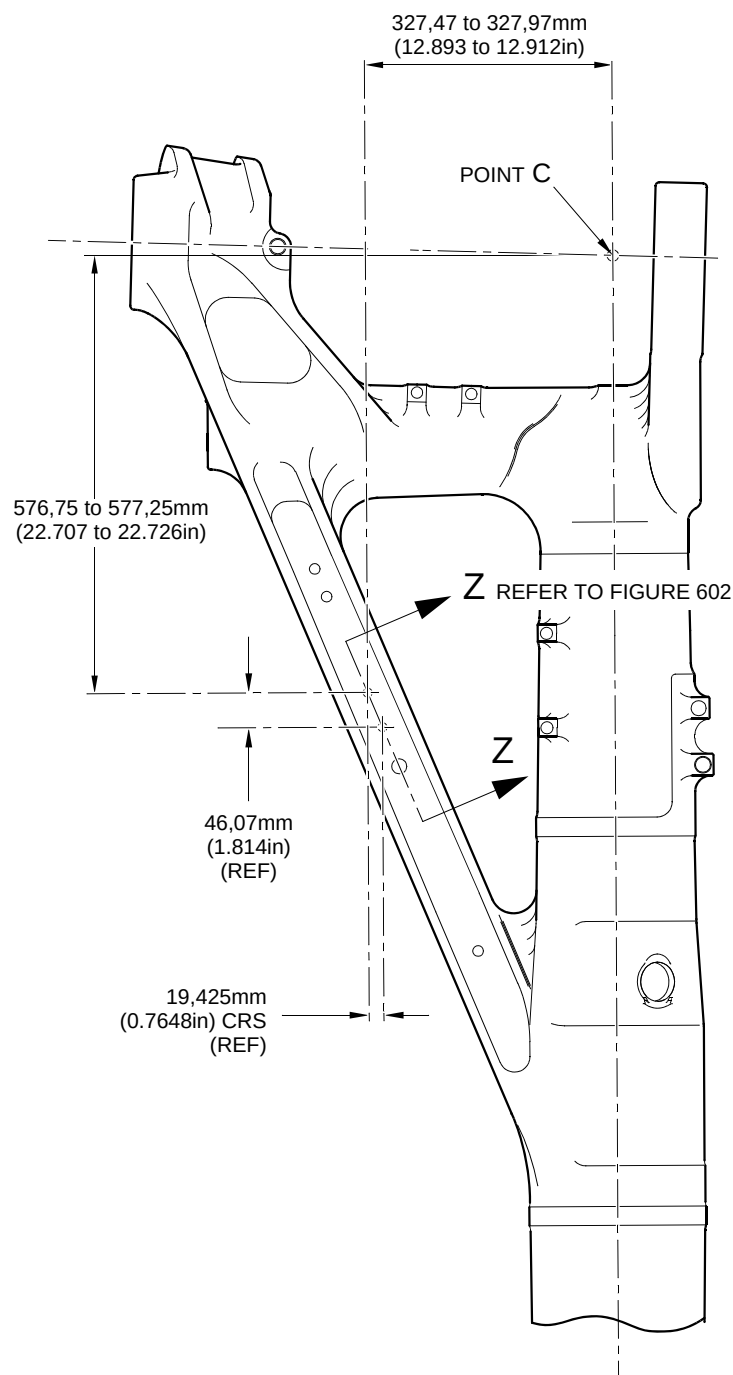

Repair to Main Fitting - Machining
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

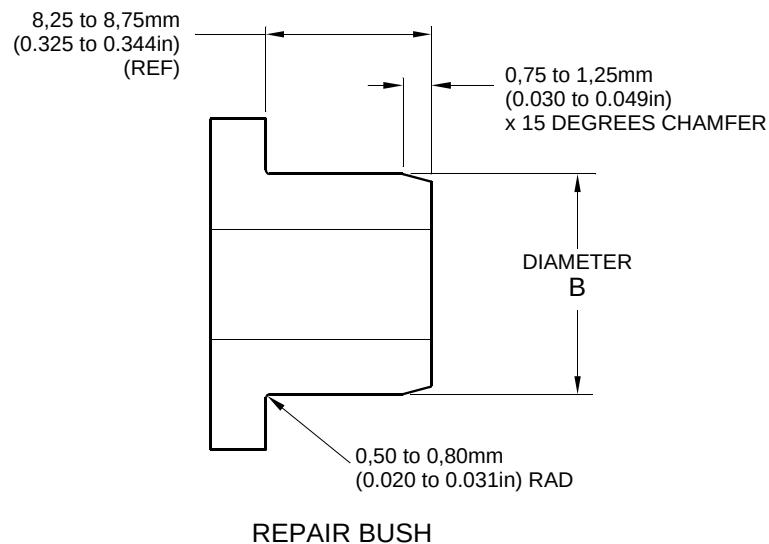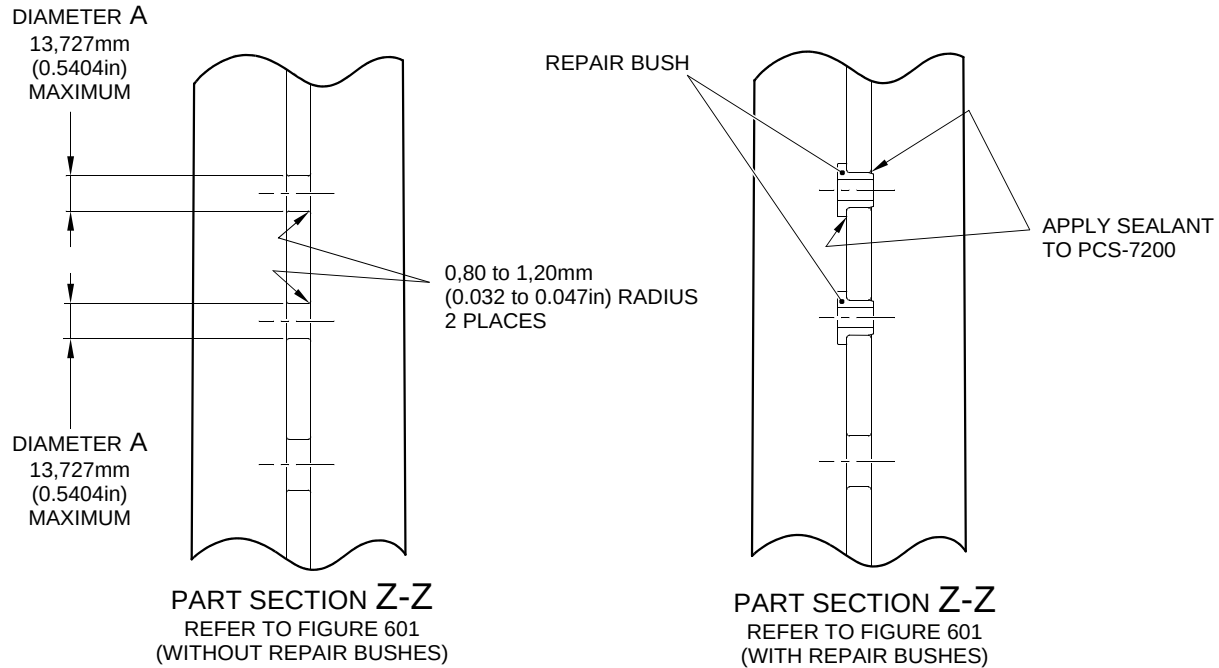

A321A5992-1



**Repair Bushes - Machining and Installation
Figure 602**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

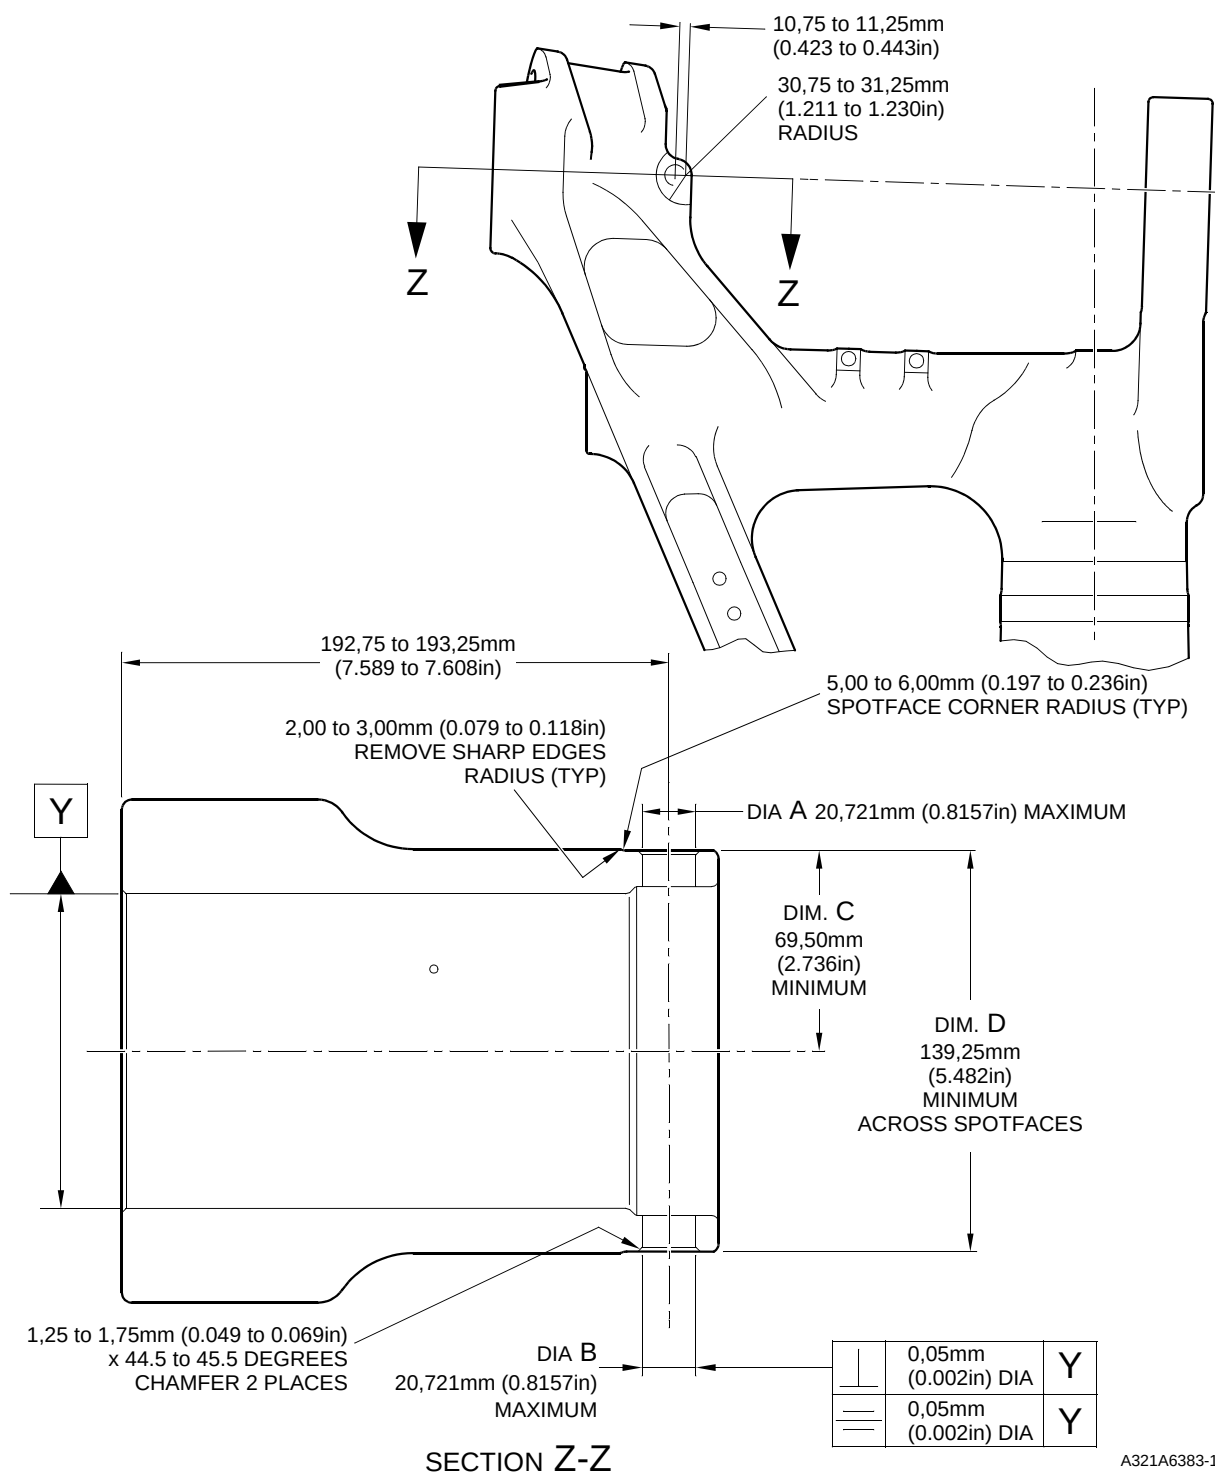

**Repair to Main Fitting - Machining
Figure 601**


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

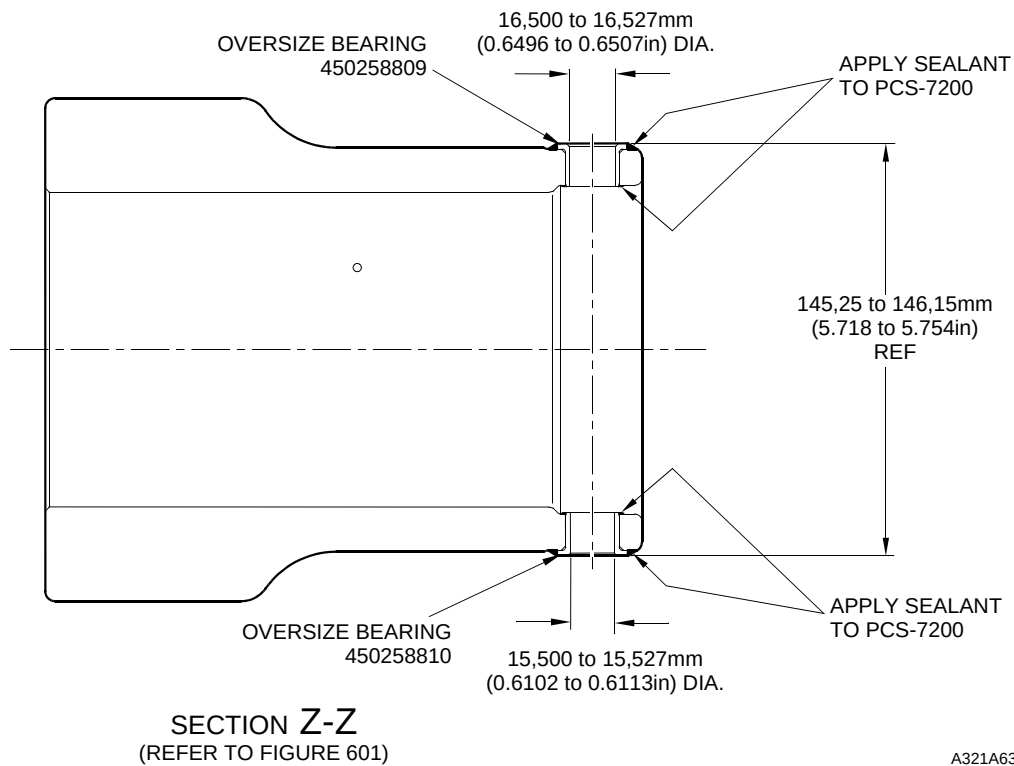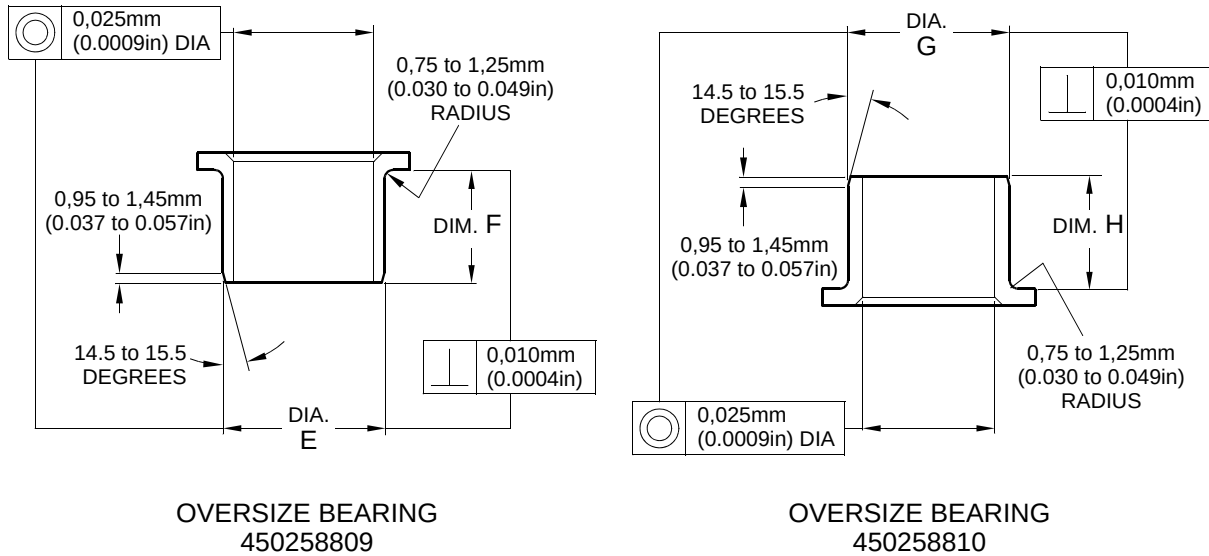

A321A6384-2

Oversize Bearings - Machining and Installation
Figure 602


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

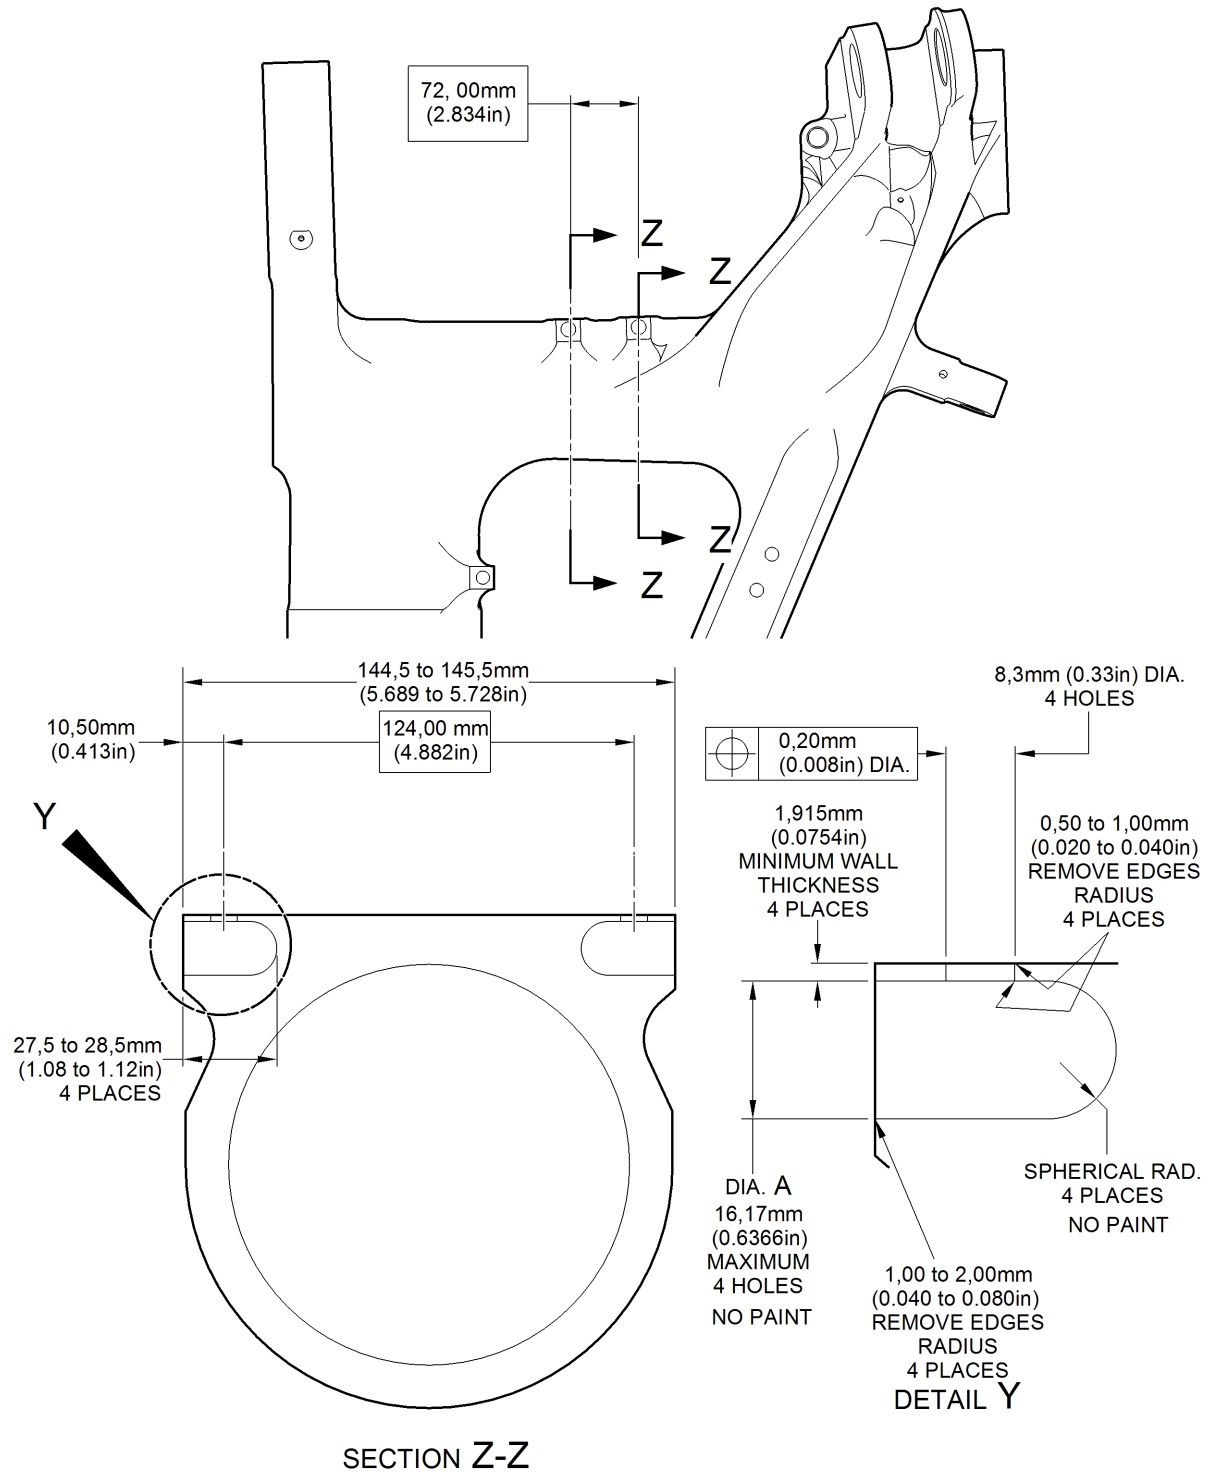

A321-S-32-12-22-024-1


**Repair to Main Fitting
Figure 601**

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

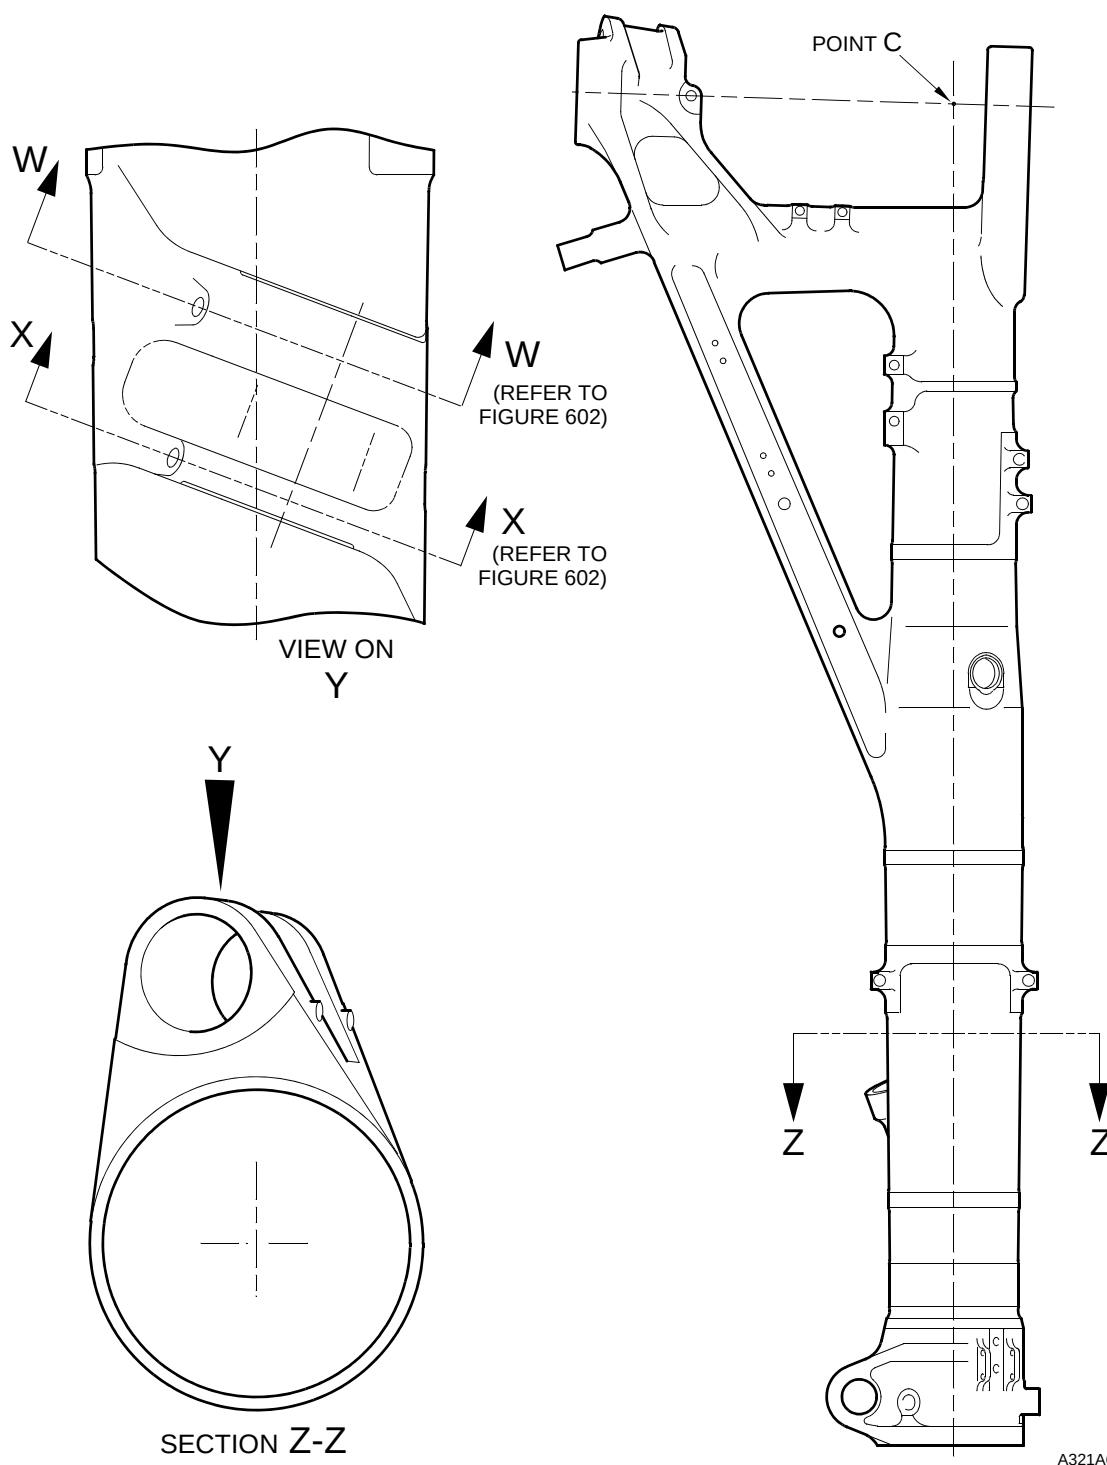


Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

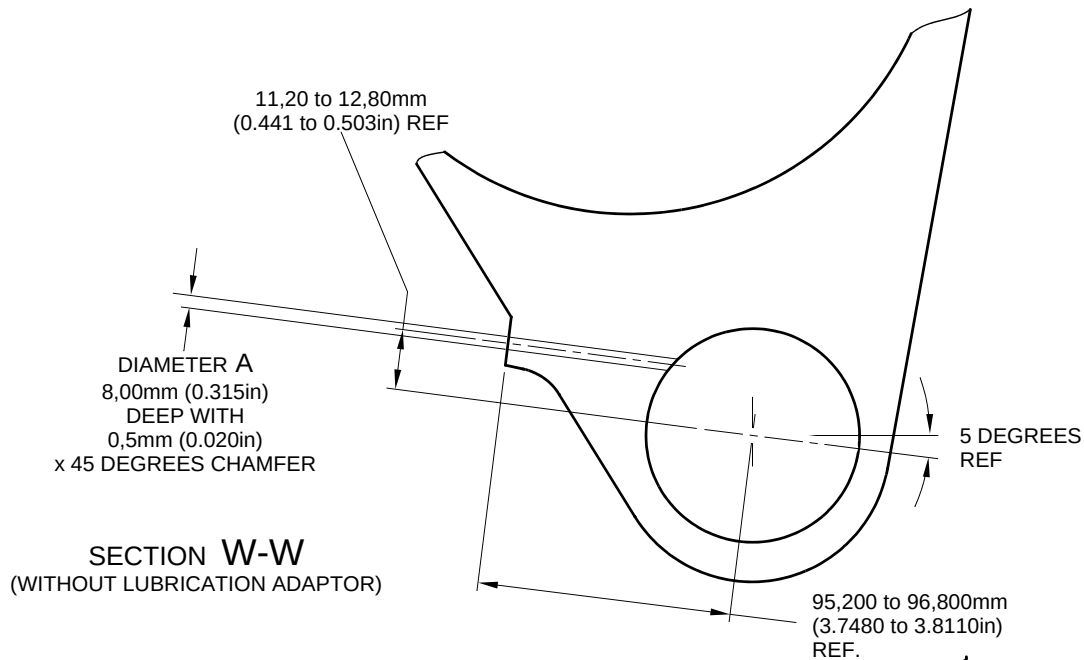

NOTE:
DIAMETERS A MUST FOLLOW
THE LINE OF EXISTING BORES

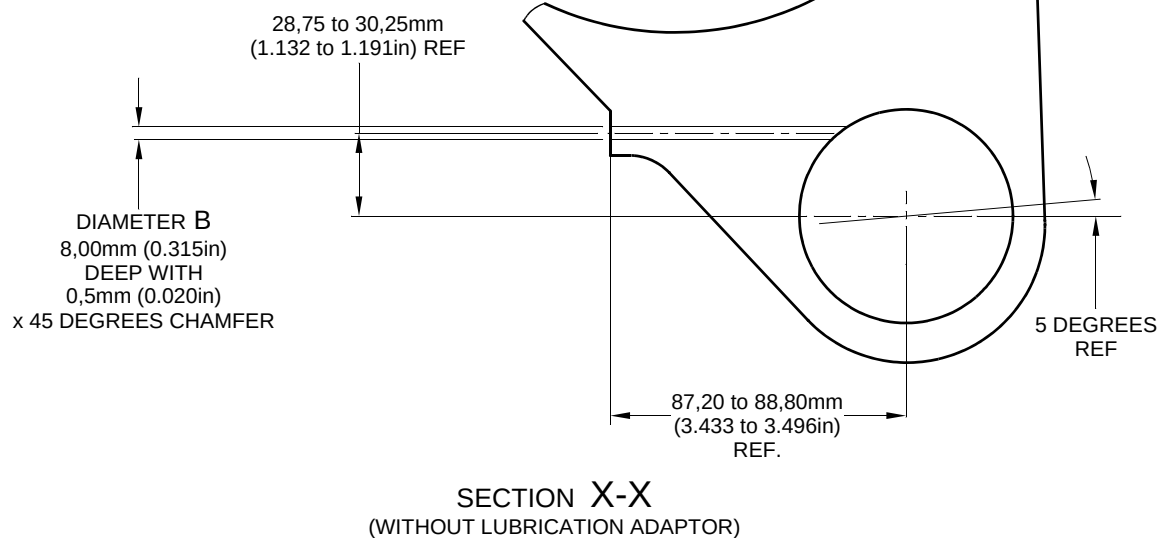



A321A6770-1

Repair to Main Fitting - Machining
Figure 602

32-12-22

Repair No. 11-23
Page 604
Dec 6/2019



PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

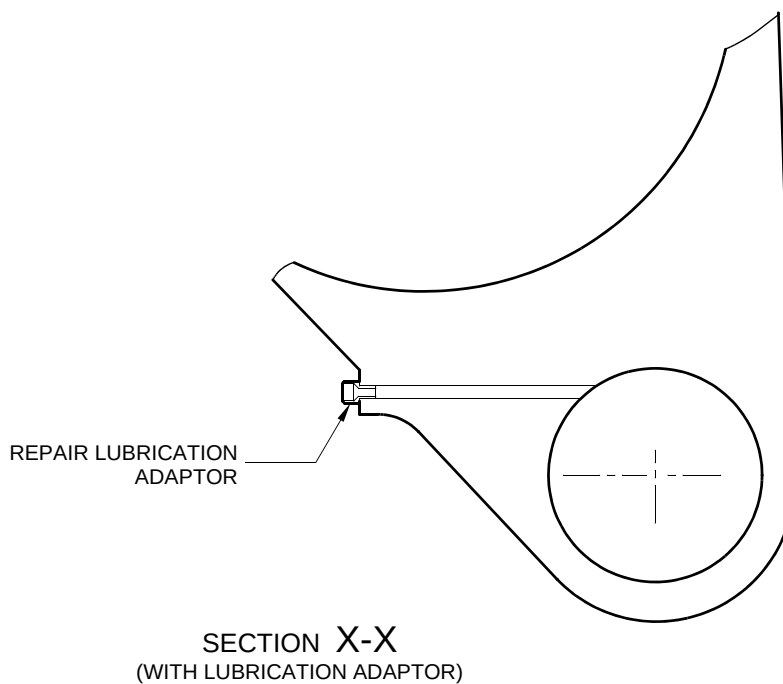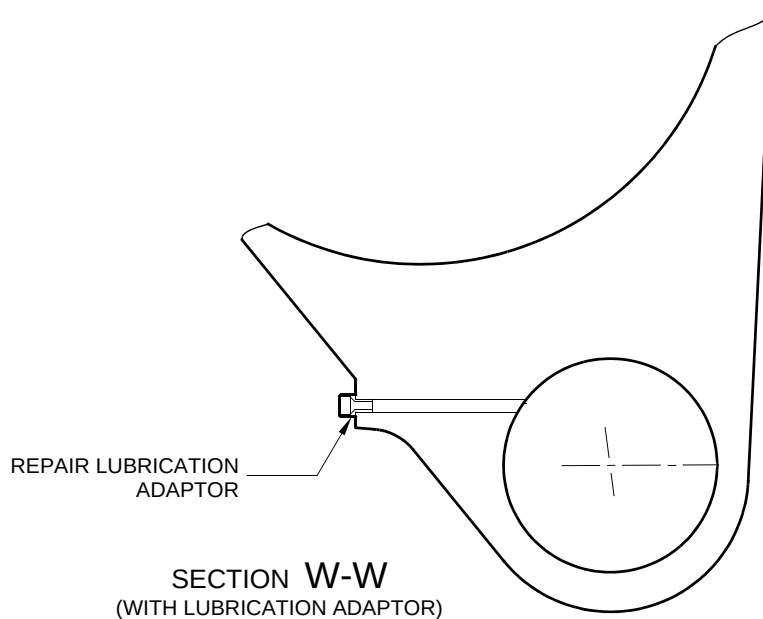

A321A6771-1

Oversize Lubrication adapter - Installation
Figure 603

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

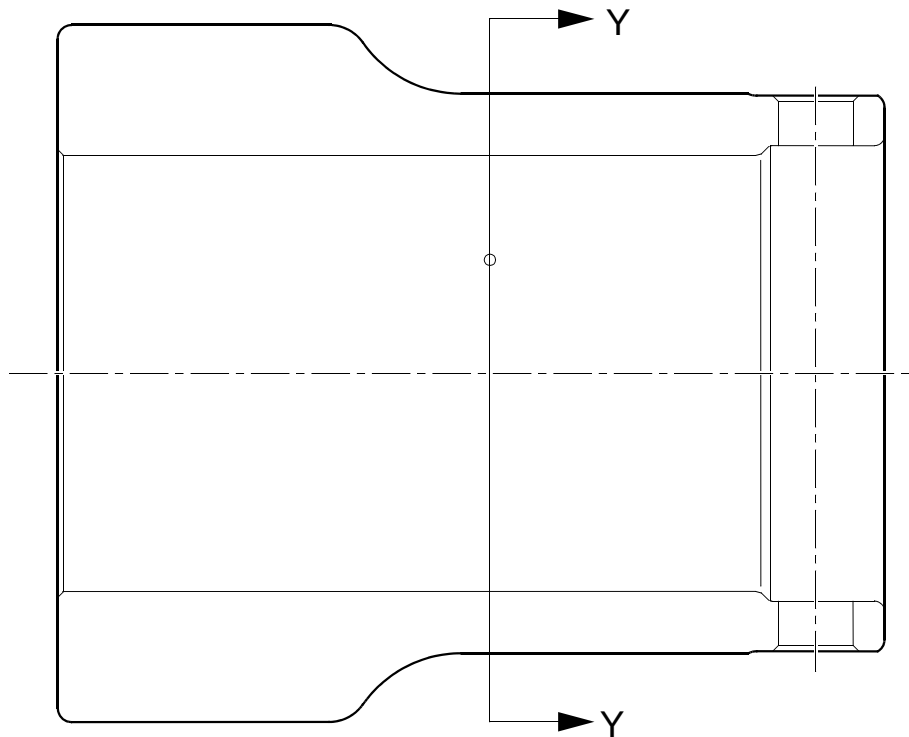
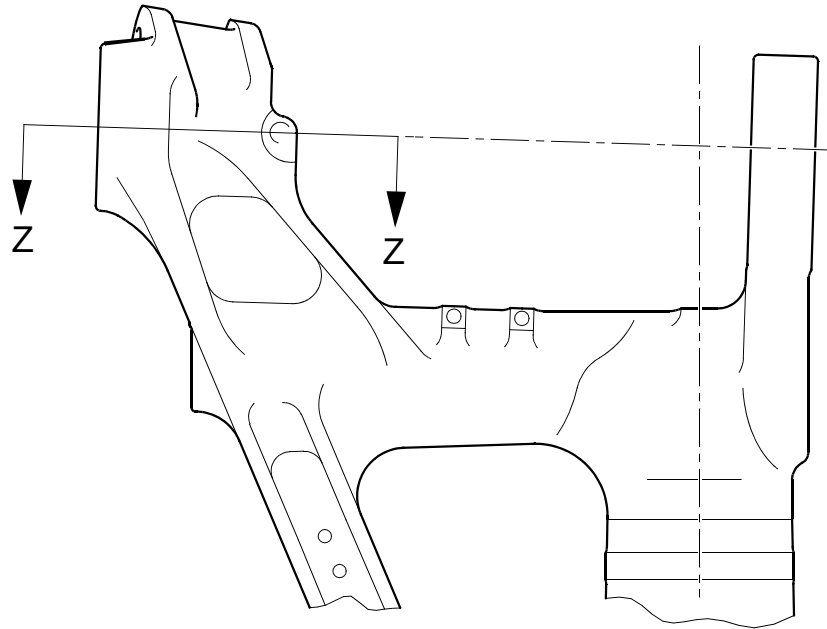


SECTION Z-Z

A321A6877-1


Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

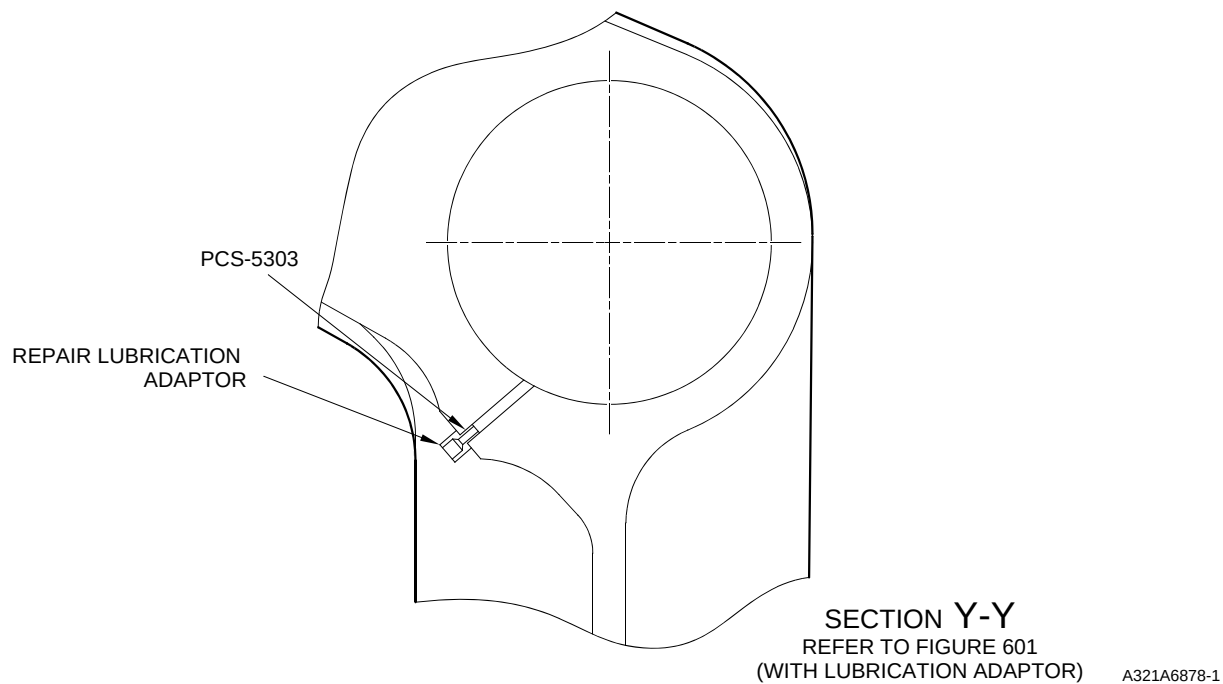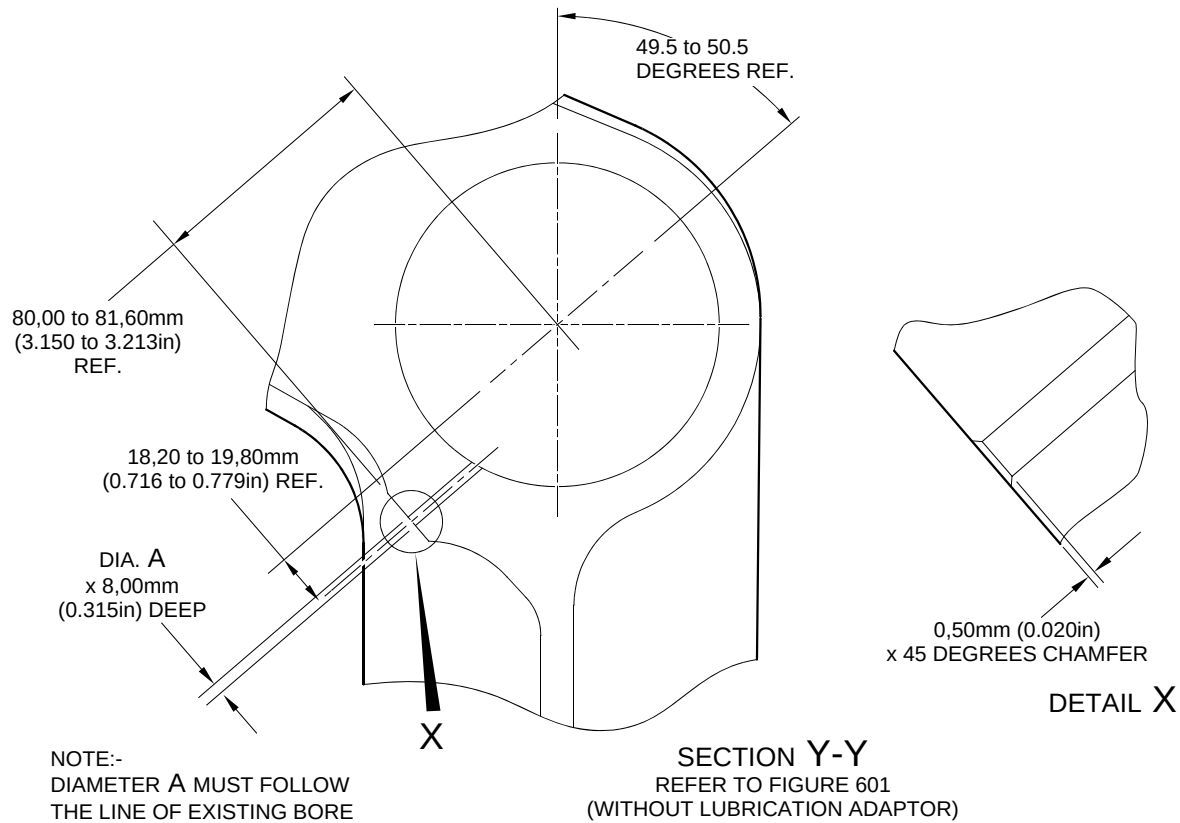


Repair to Main Fitting
Figure 602


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

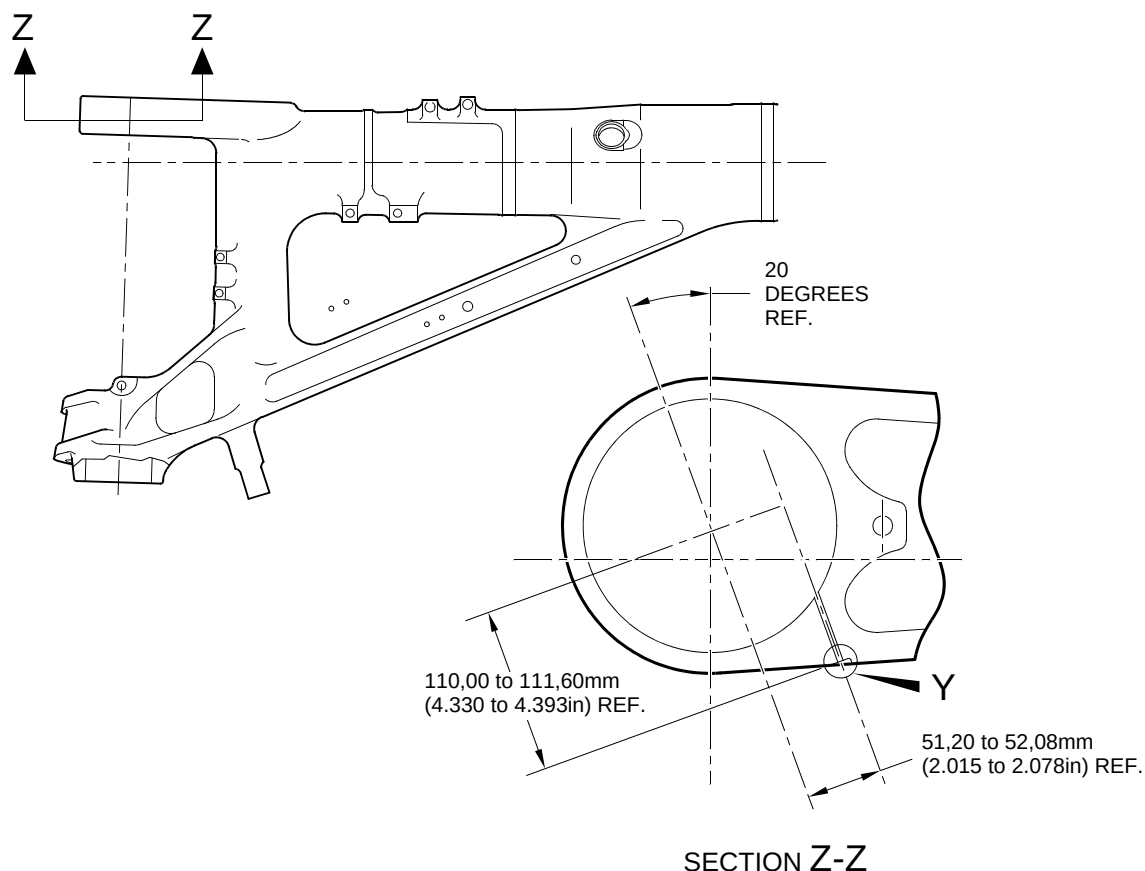

NOTE:-
DIAMETER A MUST FOLLOW
THE LINE OF EXISTING BORE

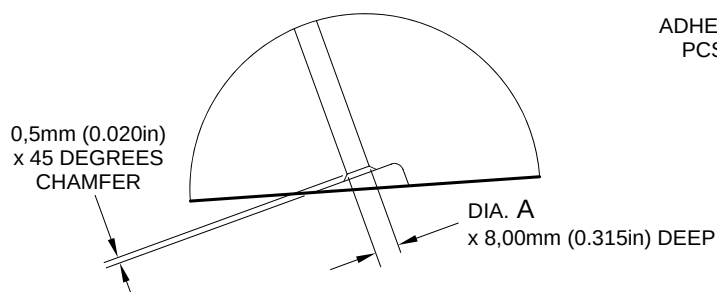

DETAIL Y
(WITHOUT LUBRICATION ADAPTOR)

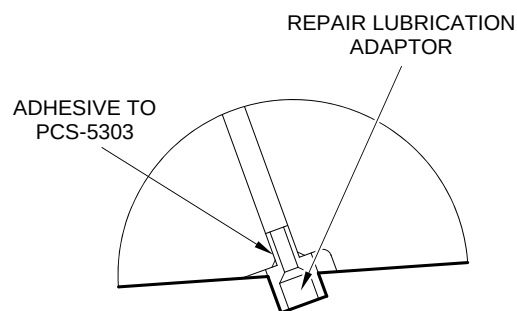


DETAIL Y
(WITH LUBRICATION ADAPTOR)

A321A6879-1

Repair to Main Fitting
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

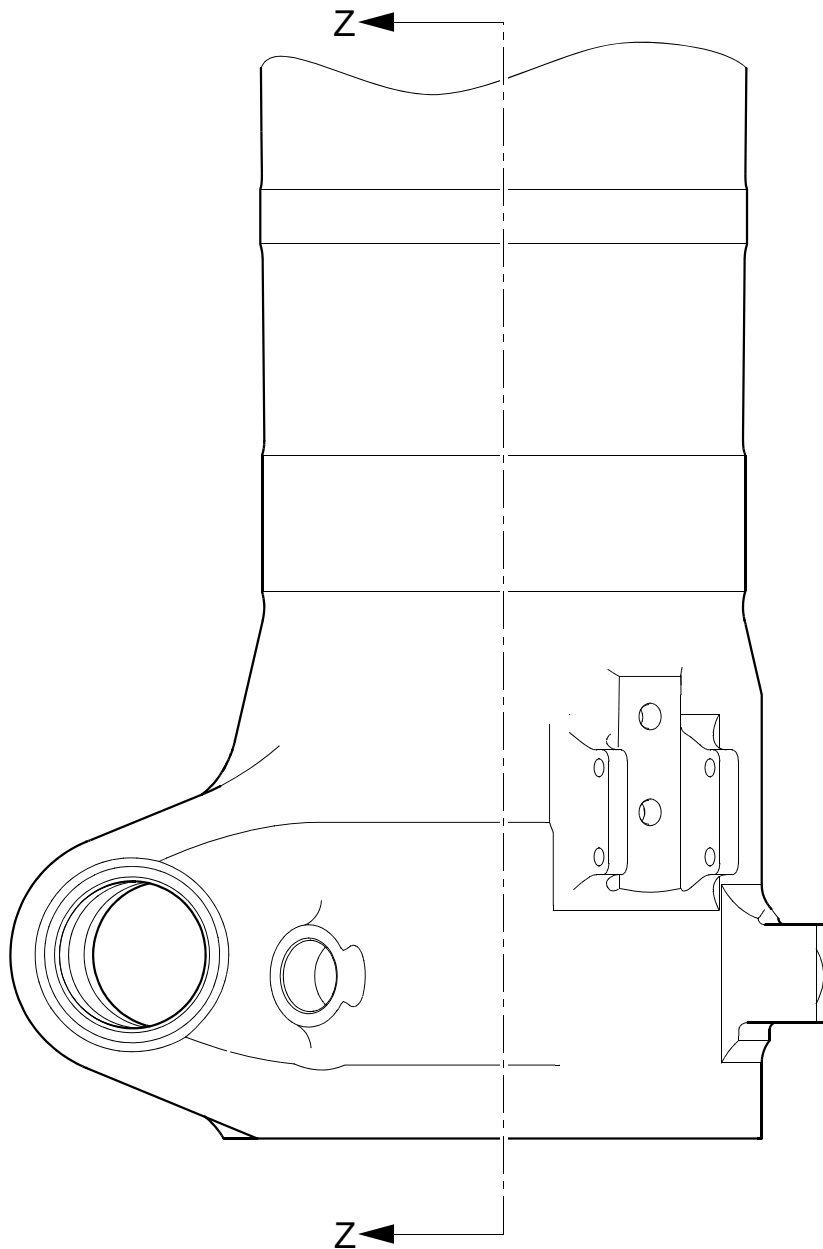

A321A6881-1

Repair to Main Fitting
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

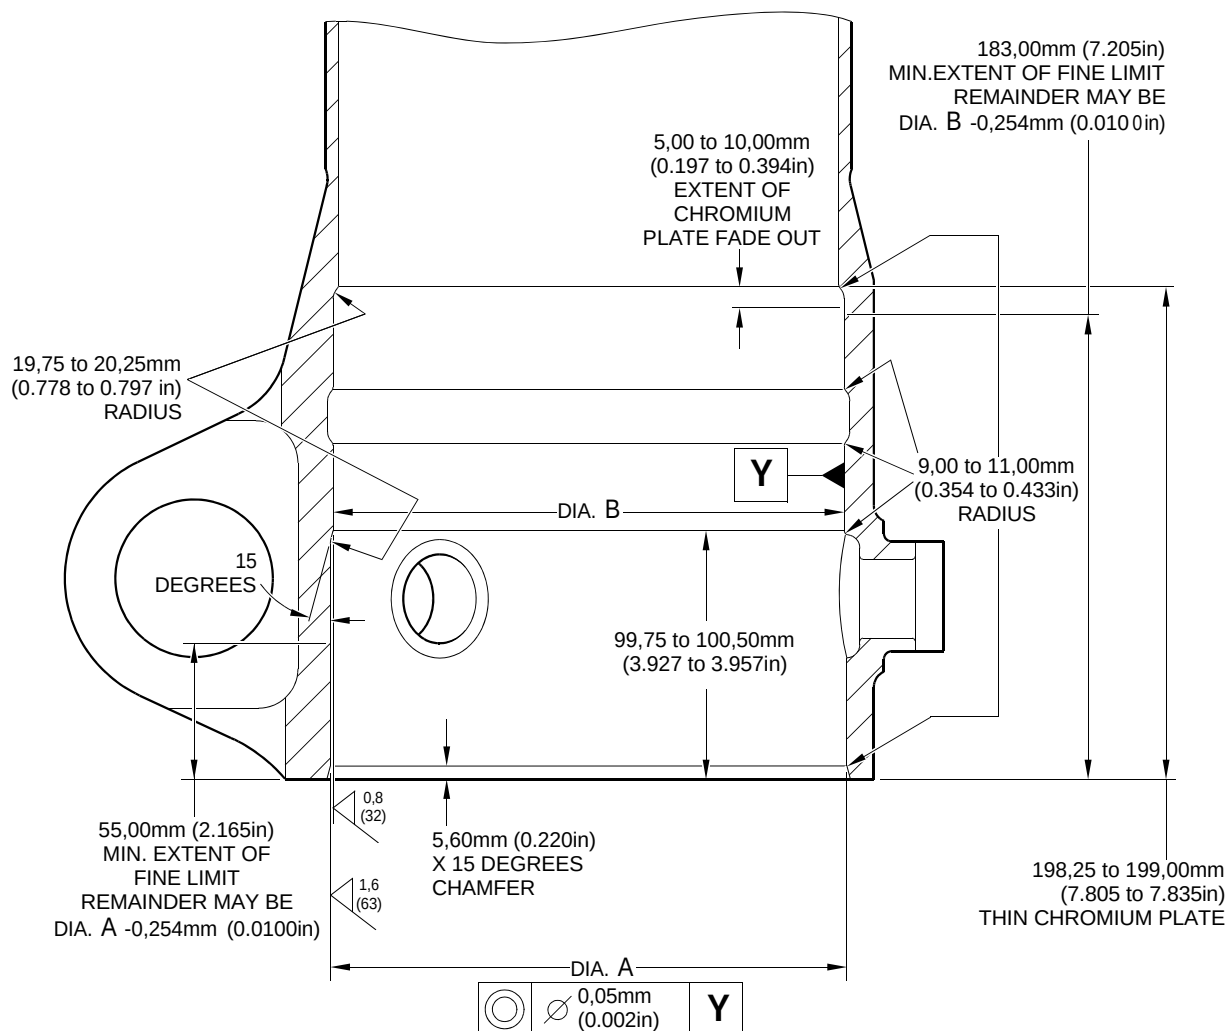

A321A6882-2


**Repair to Main Fitting - Machining
Figure 602**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

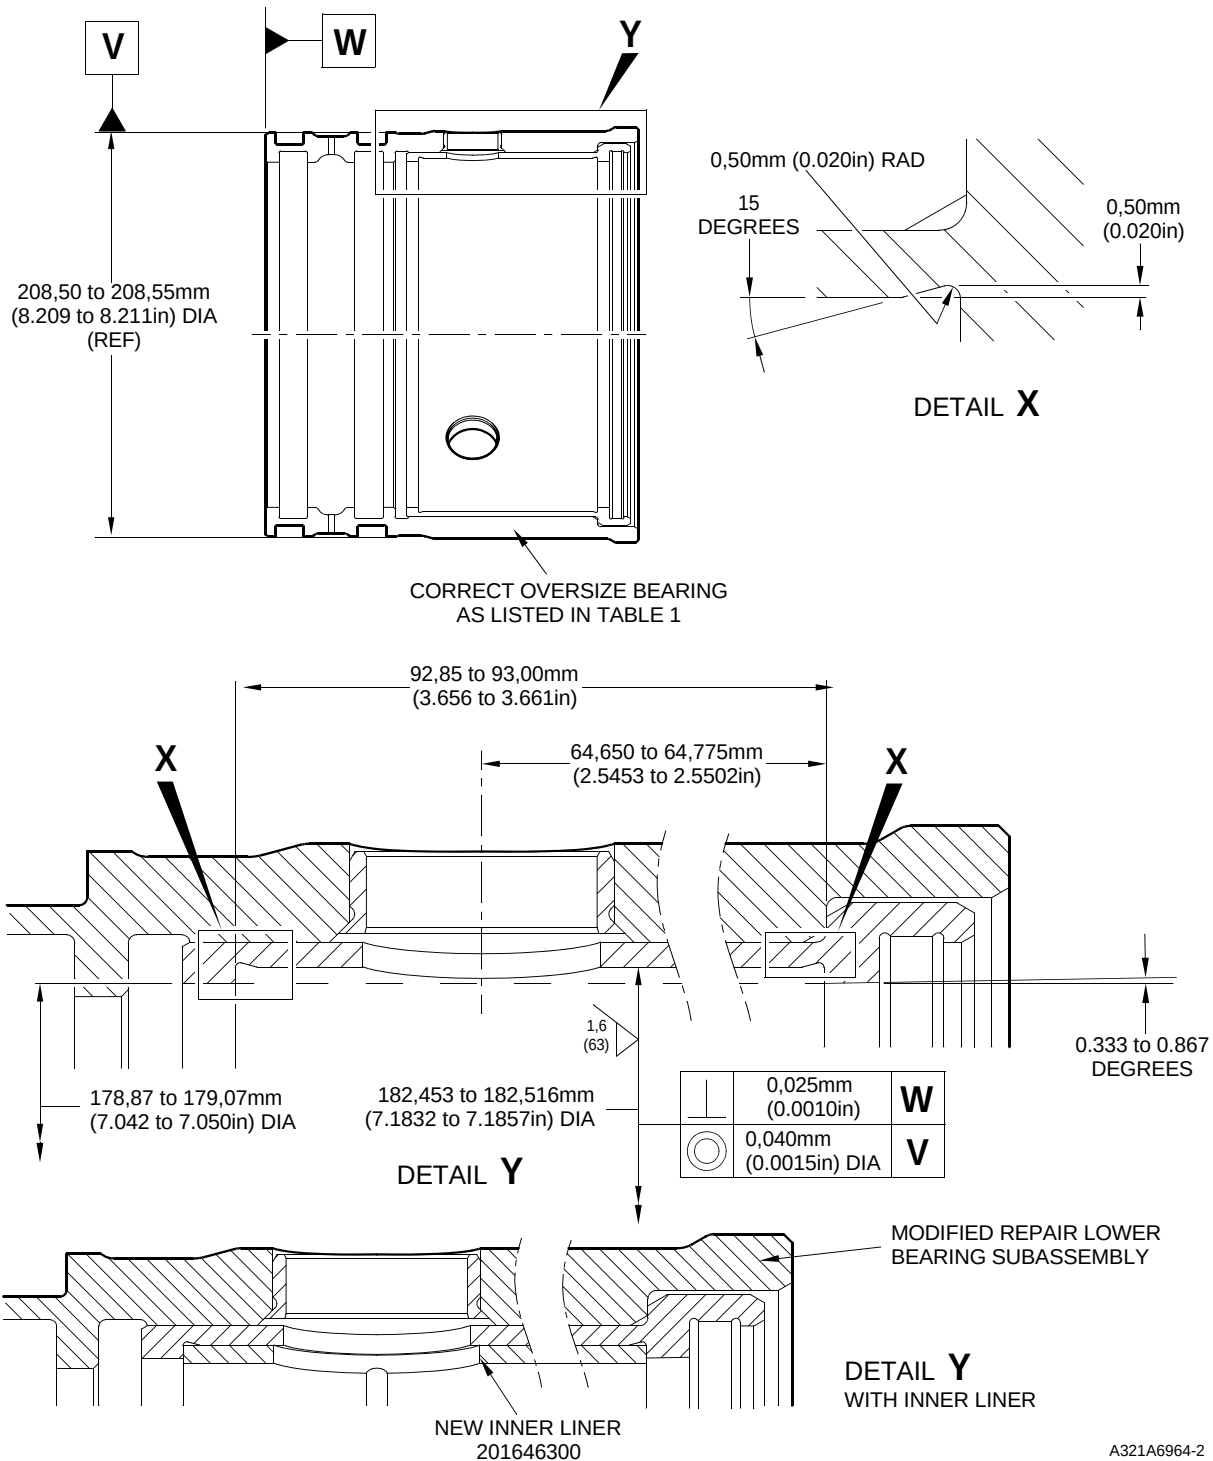


Lower Bearing Subassembly Machining and Liner Installation
Figure 603

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

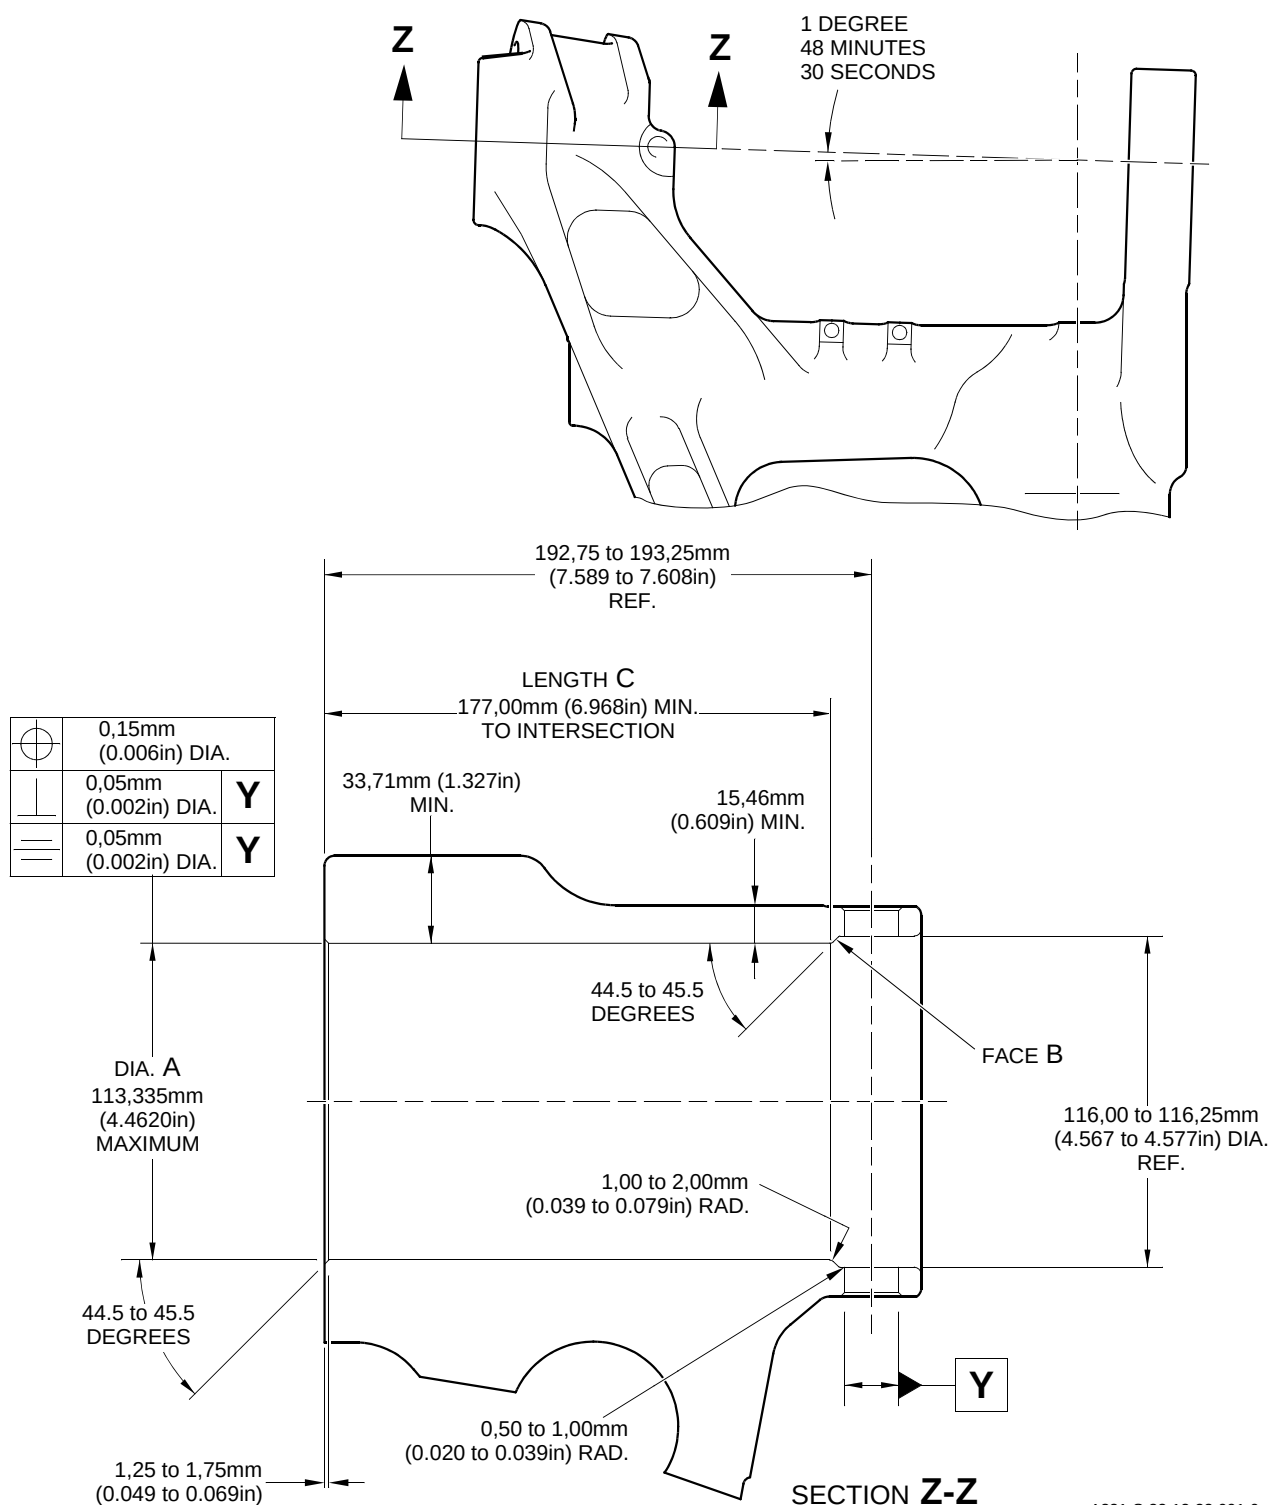

Repair to Main Fitting
Figure 601


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

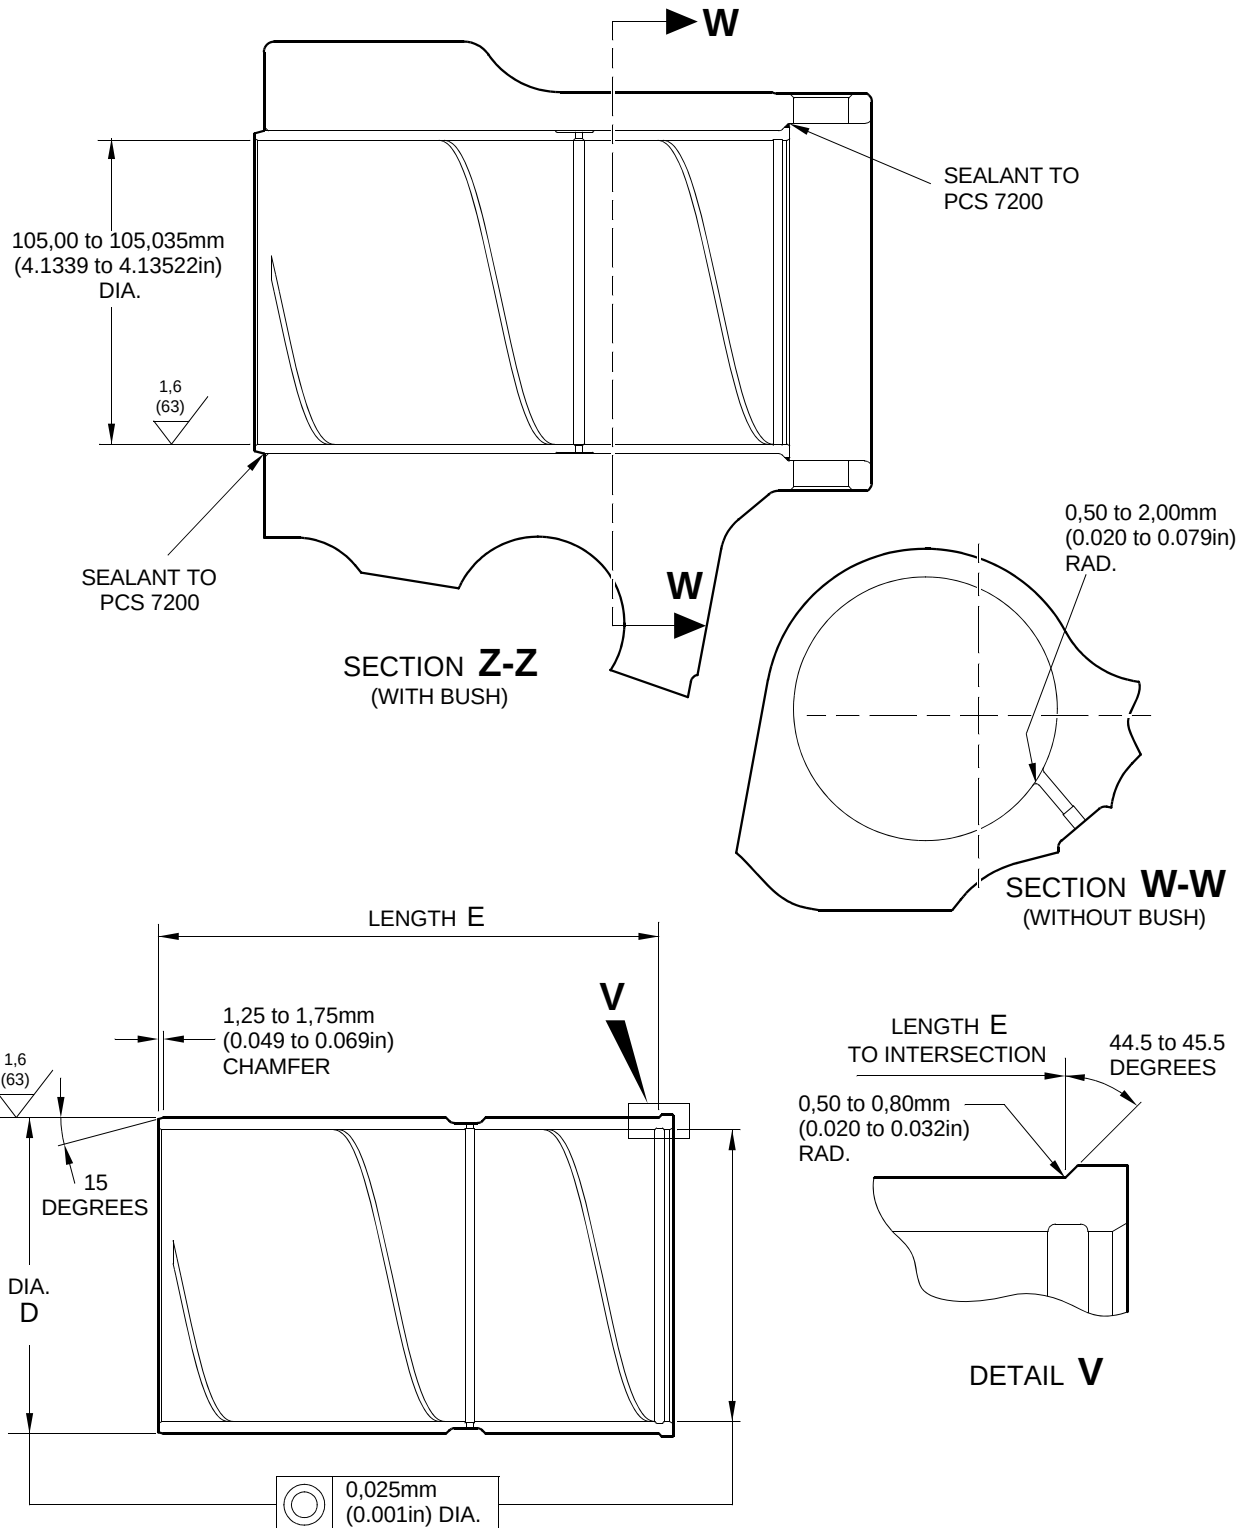

A321-S-32-12-22-095-0

**Repair Bearing - Machining and Installation
Figure 602**



**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

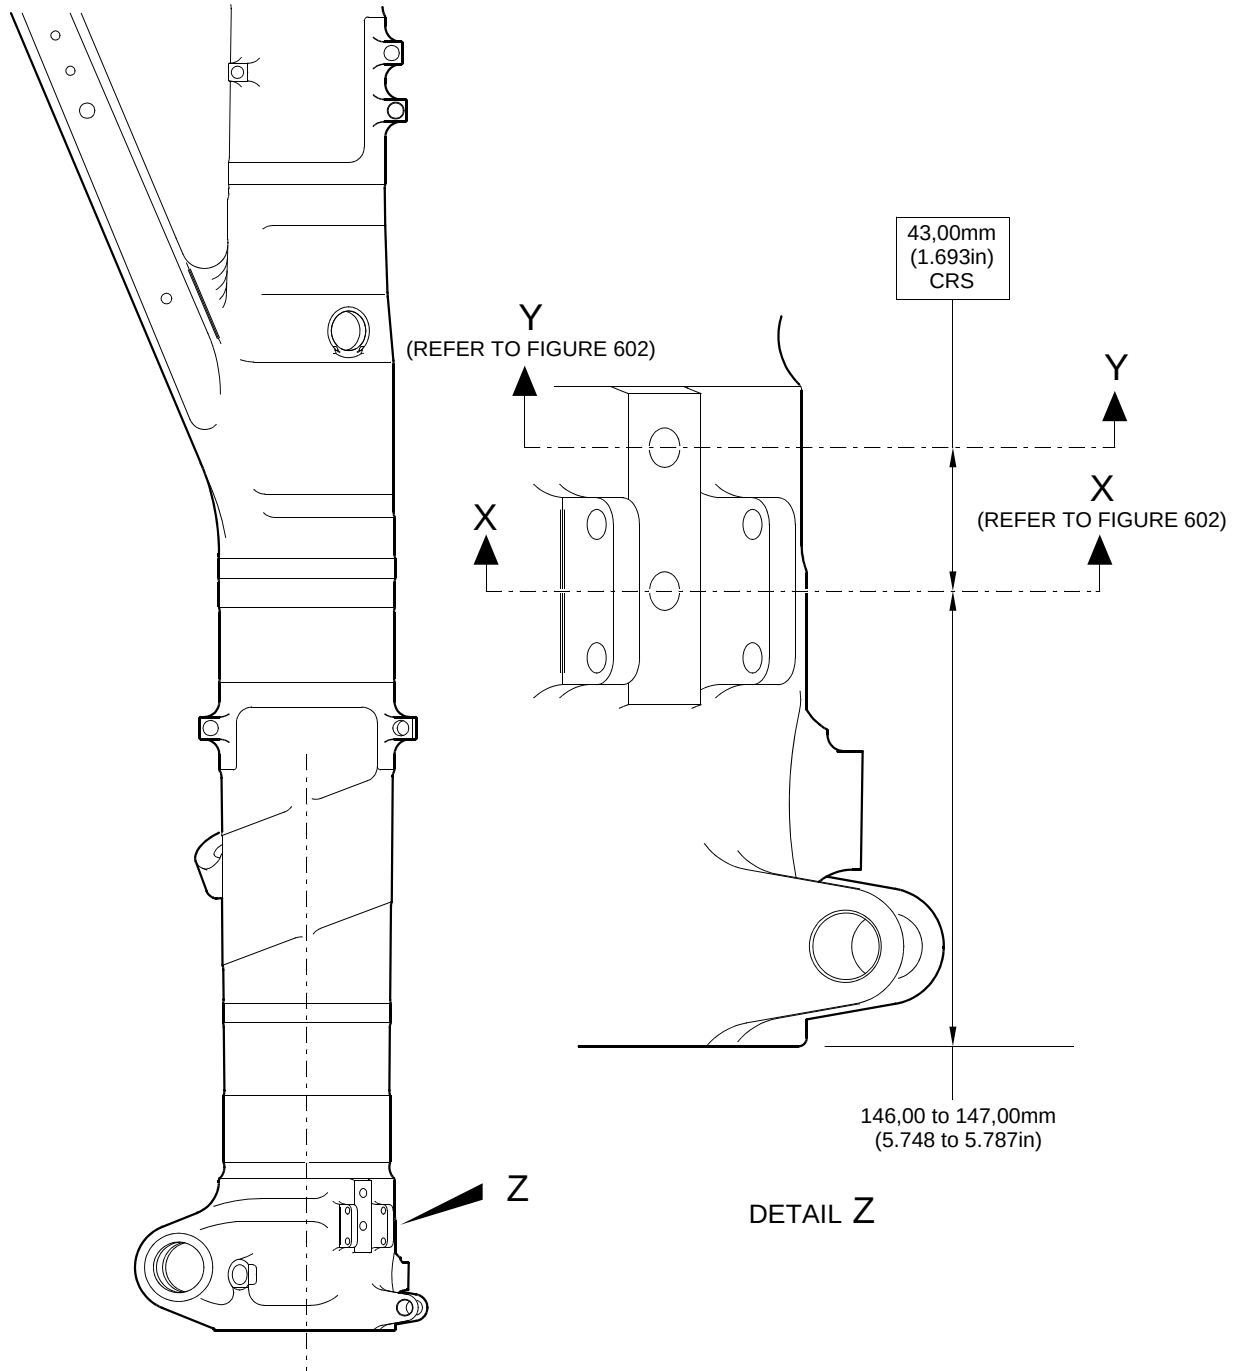

A321A7163-1

Repair to Main Fitting
Figure 601


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

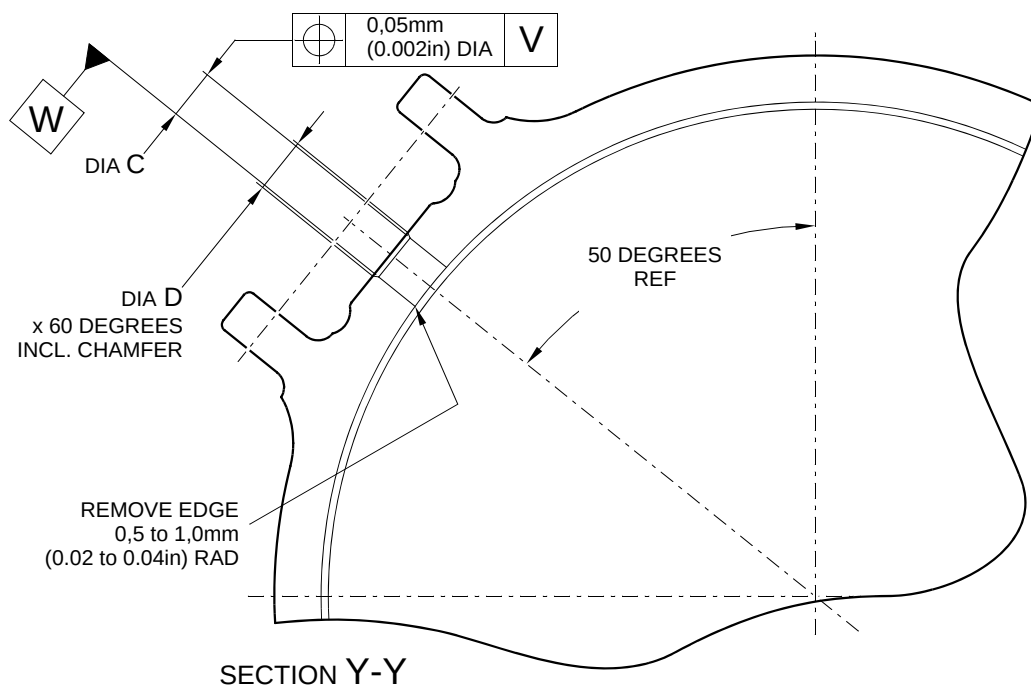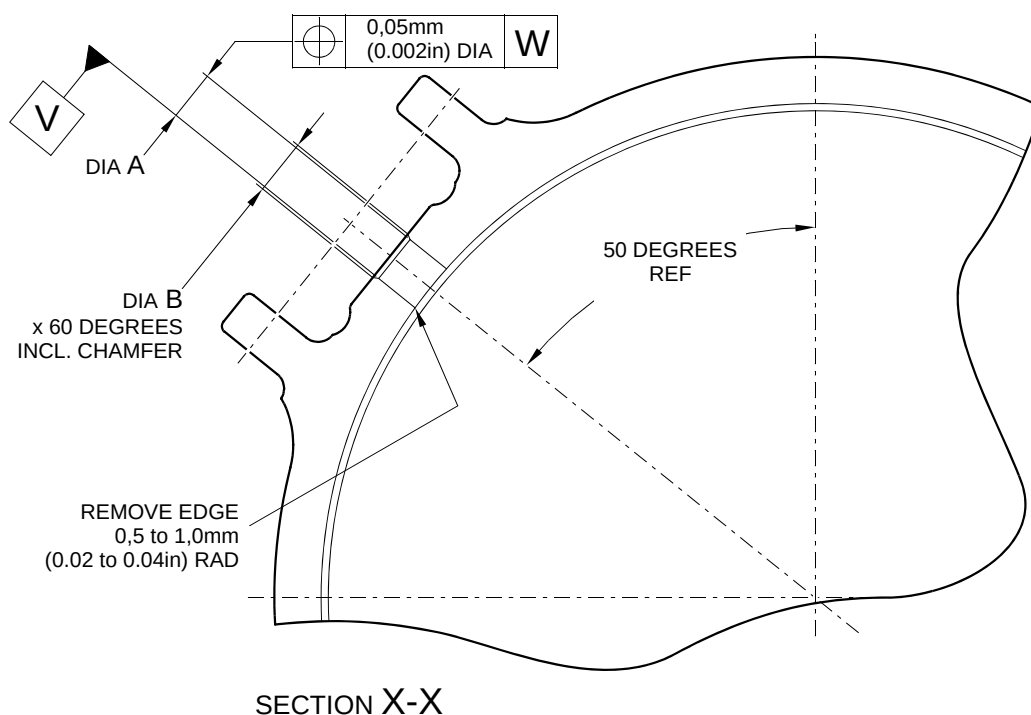

A321A7164-1


Repair to Main Fitting
 Figure 602

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

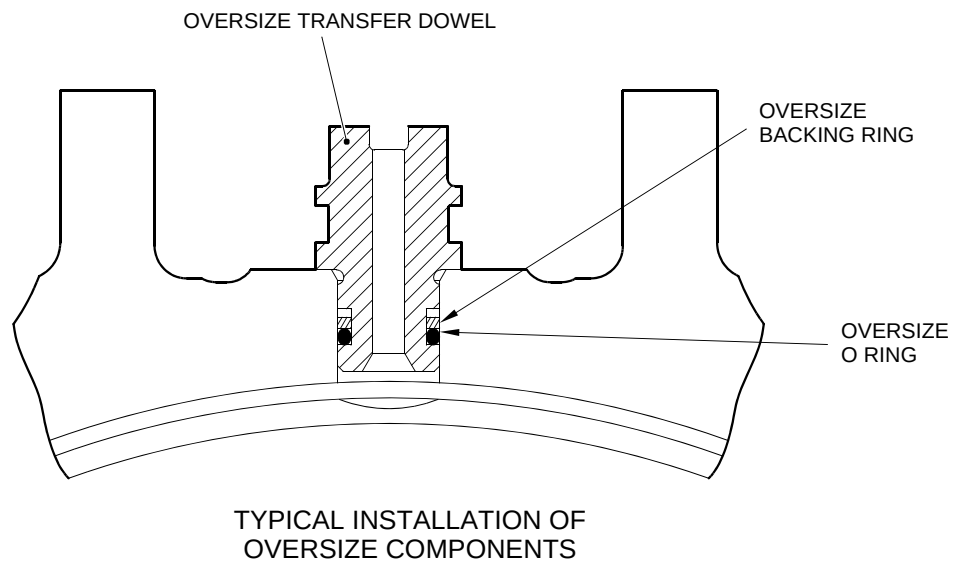


Override Transfer Dowel - Installation
Figure 603

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

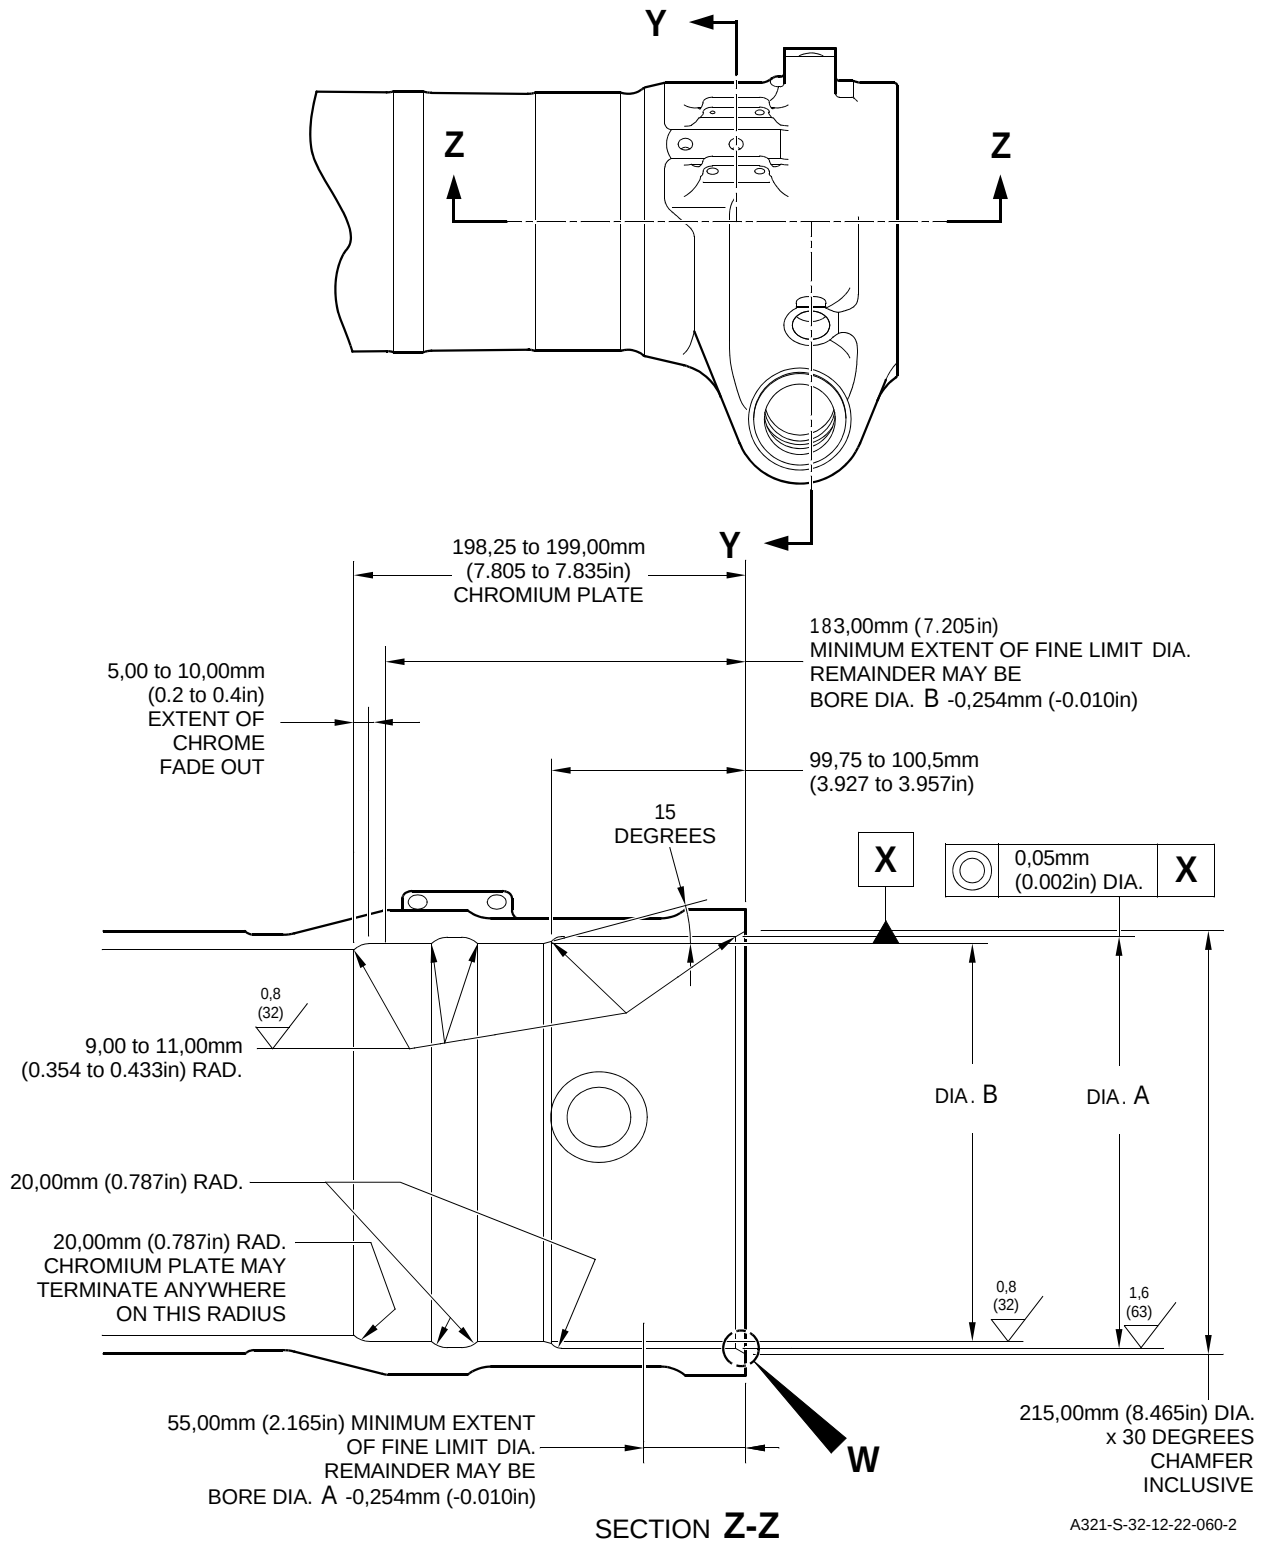


Repair to Main Fitting - Machining
Figure 601

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

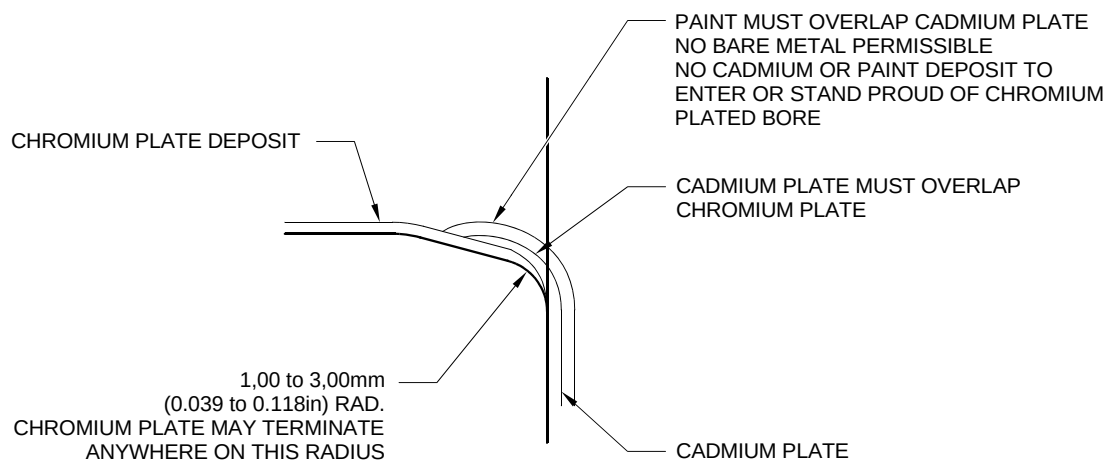

DETAIL W
CHROMIUM PLATE TERMINATION
LOWER BARREL

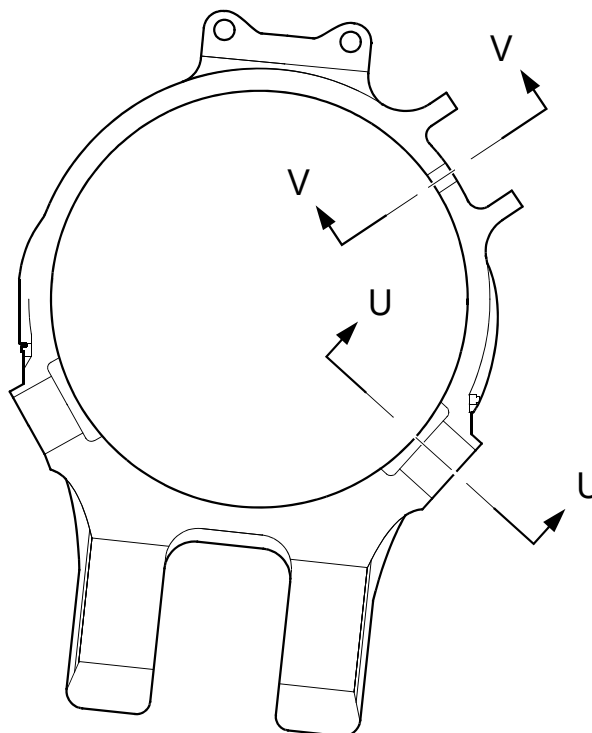


SECTION Y-Y

A321-S-32-12-22-061-1


Repair to Main Fitting
Figure 602

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

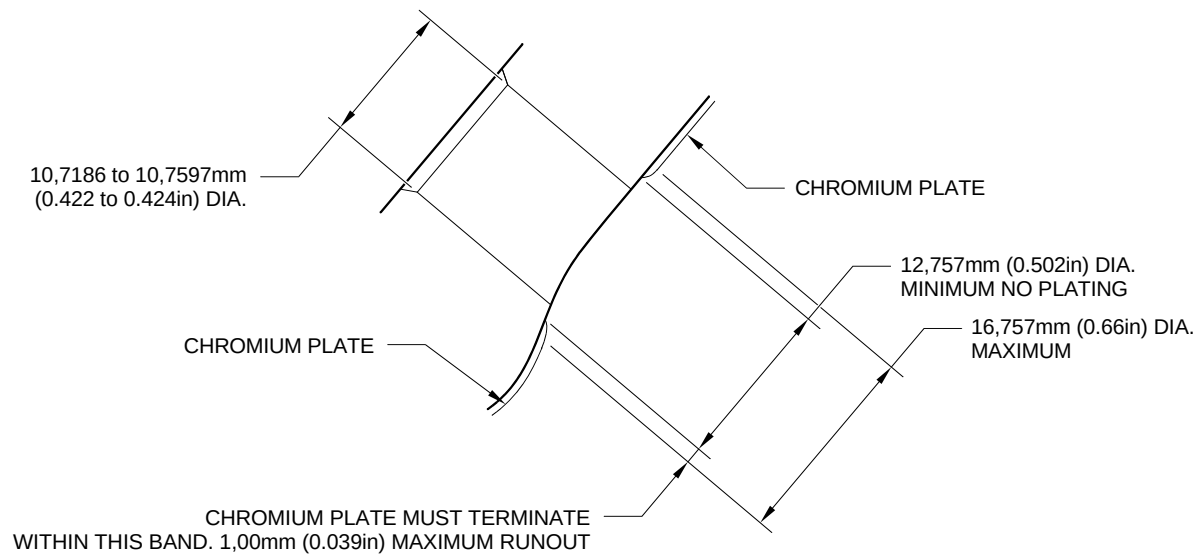

SECTION V-V

CHROMIUM PLATE TERMINATION
AROUND CHANGEOVER VALVE HOLES
TYPICAL 2 POSITIONS

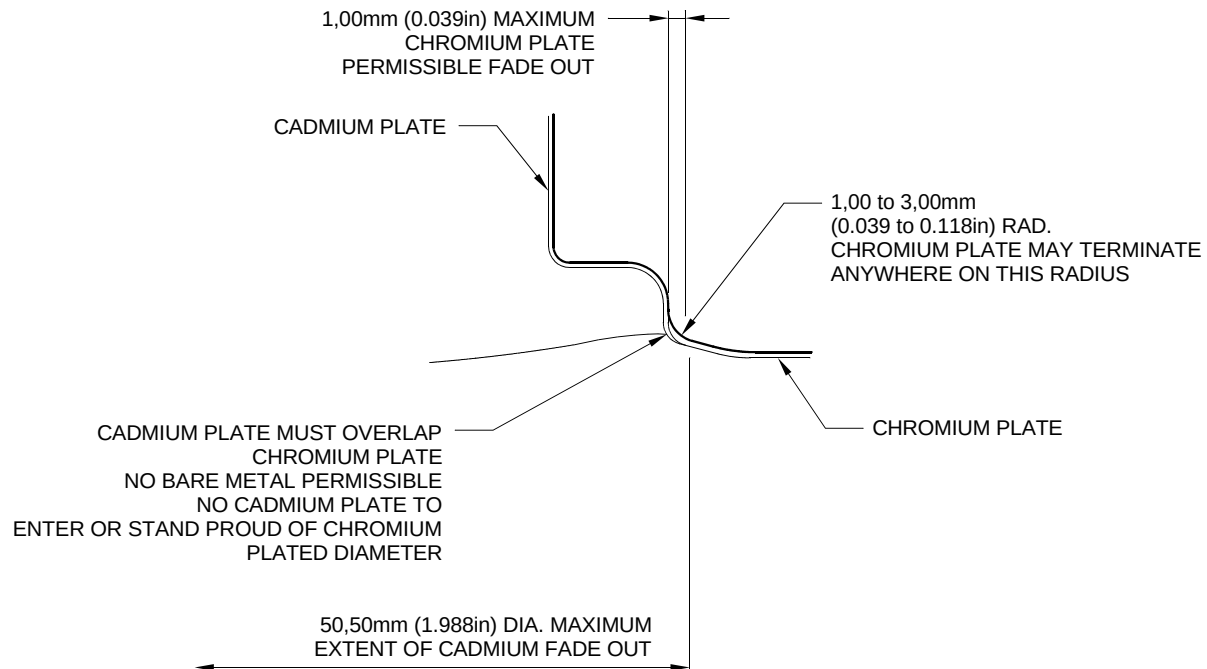

SECTION U-U

CHROMIUM PLATE TERMINATION
AROUND DOWEL HOLES
TYPICAL 3 POSITIONS


A321-S-32-12-22-062-1

**Repair to Main Fitting - Chromium Plate Termination
Figure 603**

32-12-22

Repair No. 11-29
Page 608
Dec 9/2022


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

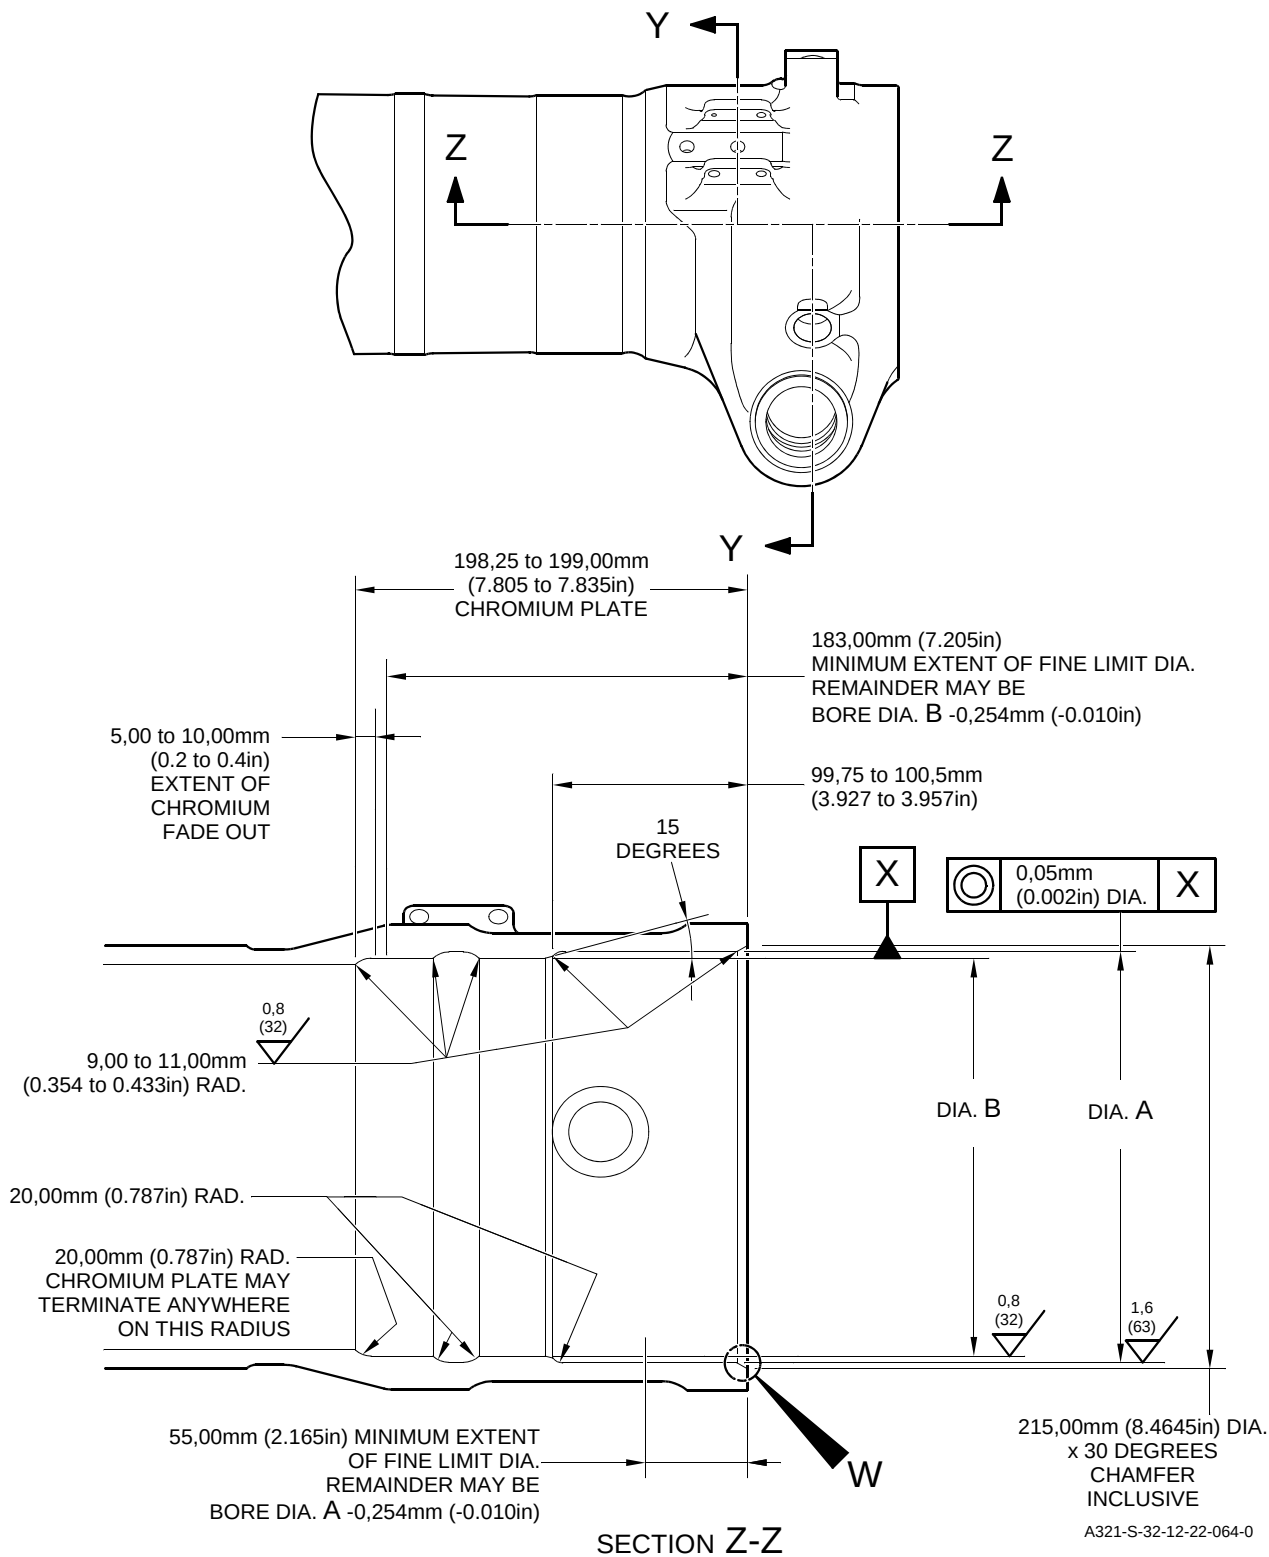


**Repair to Main Fitting - Machining
Figure 601**

32-12-22

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

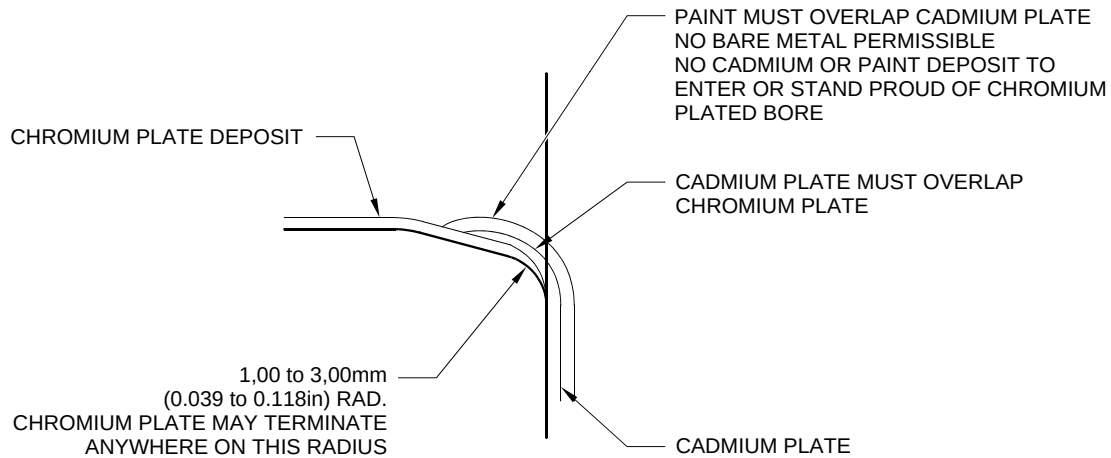

DETAIL W

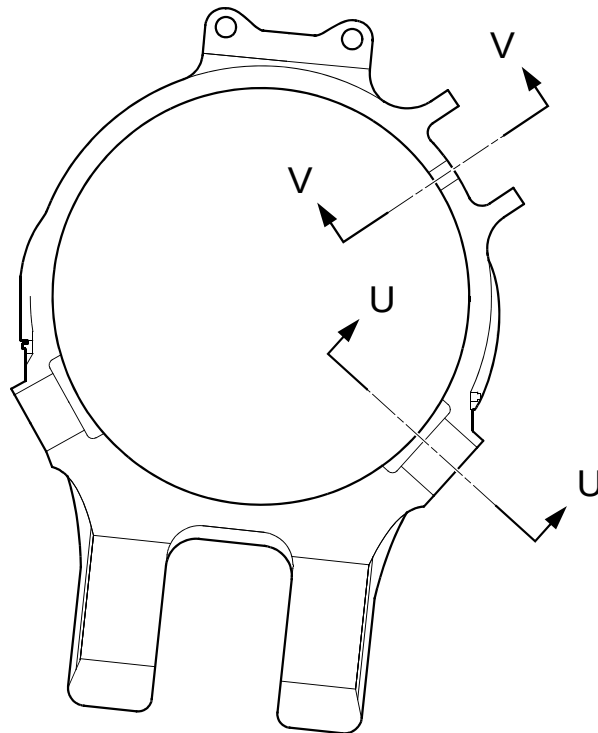


SECTION Y-Y


A321-S-32-12-22-065-0

Repair to Main Fitting
Figure 602

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

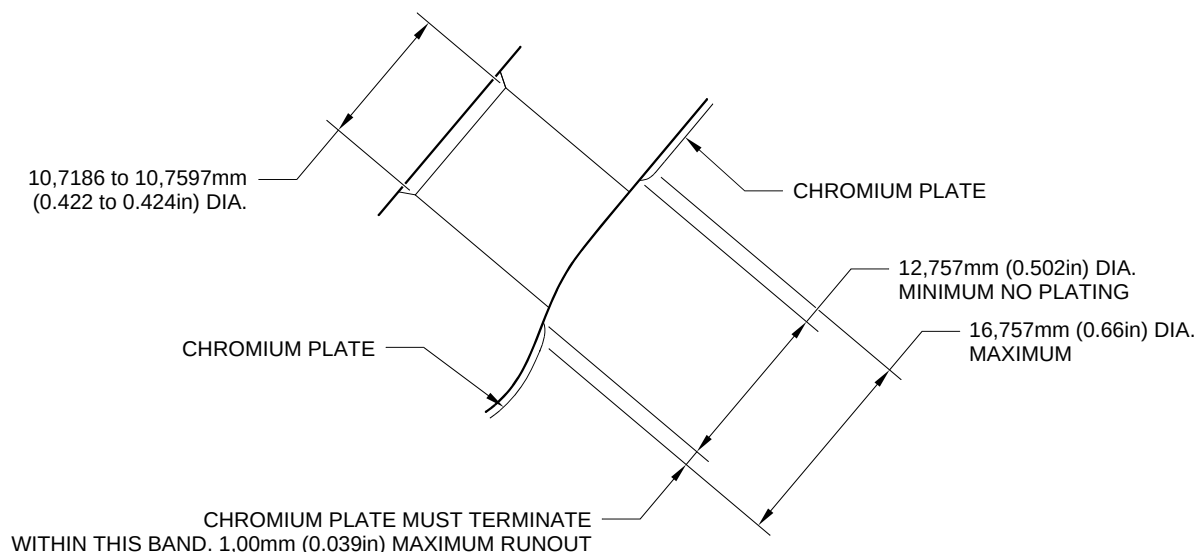

SECTION V-V
CHROMIUM PLATE TERMINATION
AROUND CHANGEOVER VALVE HOLES
TYPICAL 2 POSITIONS

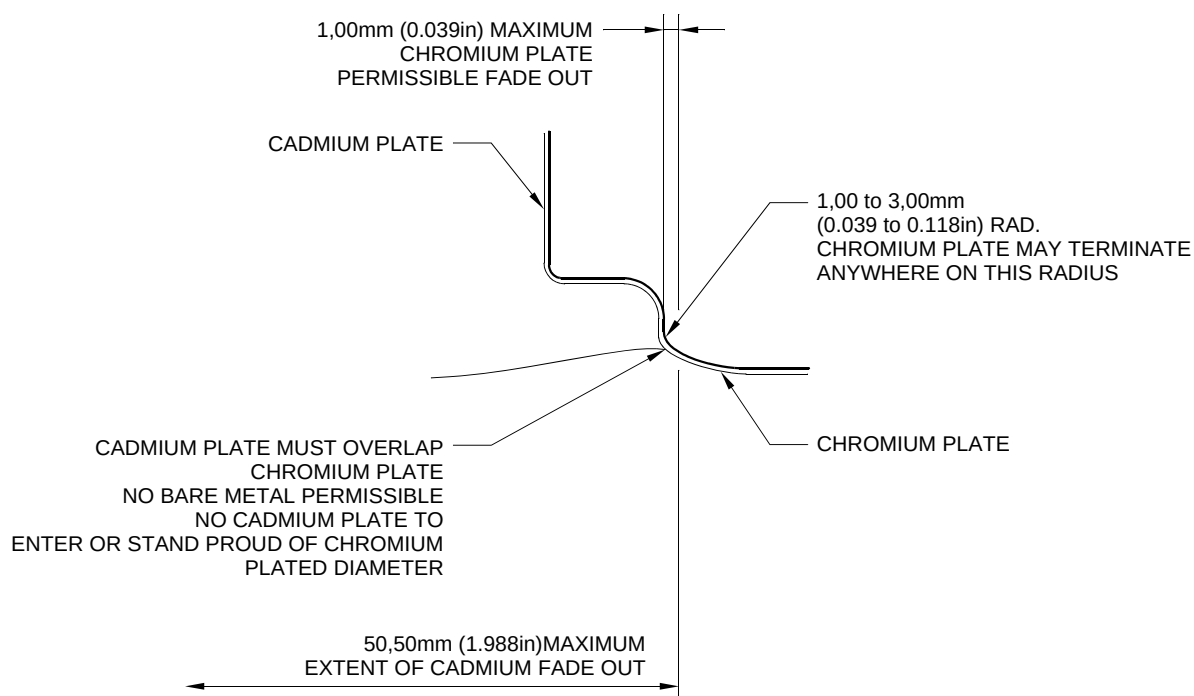


SECTION U-U
CHROMIUM PLATE TERMINATION
AROUND DOWEL HOLES
TYPICAL 3 POSITIONS

A321-S-32-12-22-066-0

Repair to Main Fitting - Chromium Plate Termination
Figure 603

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

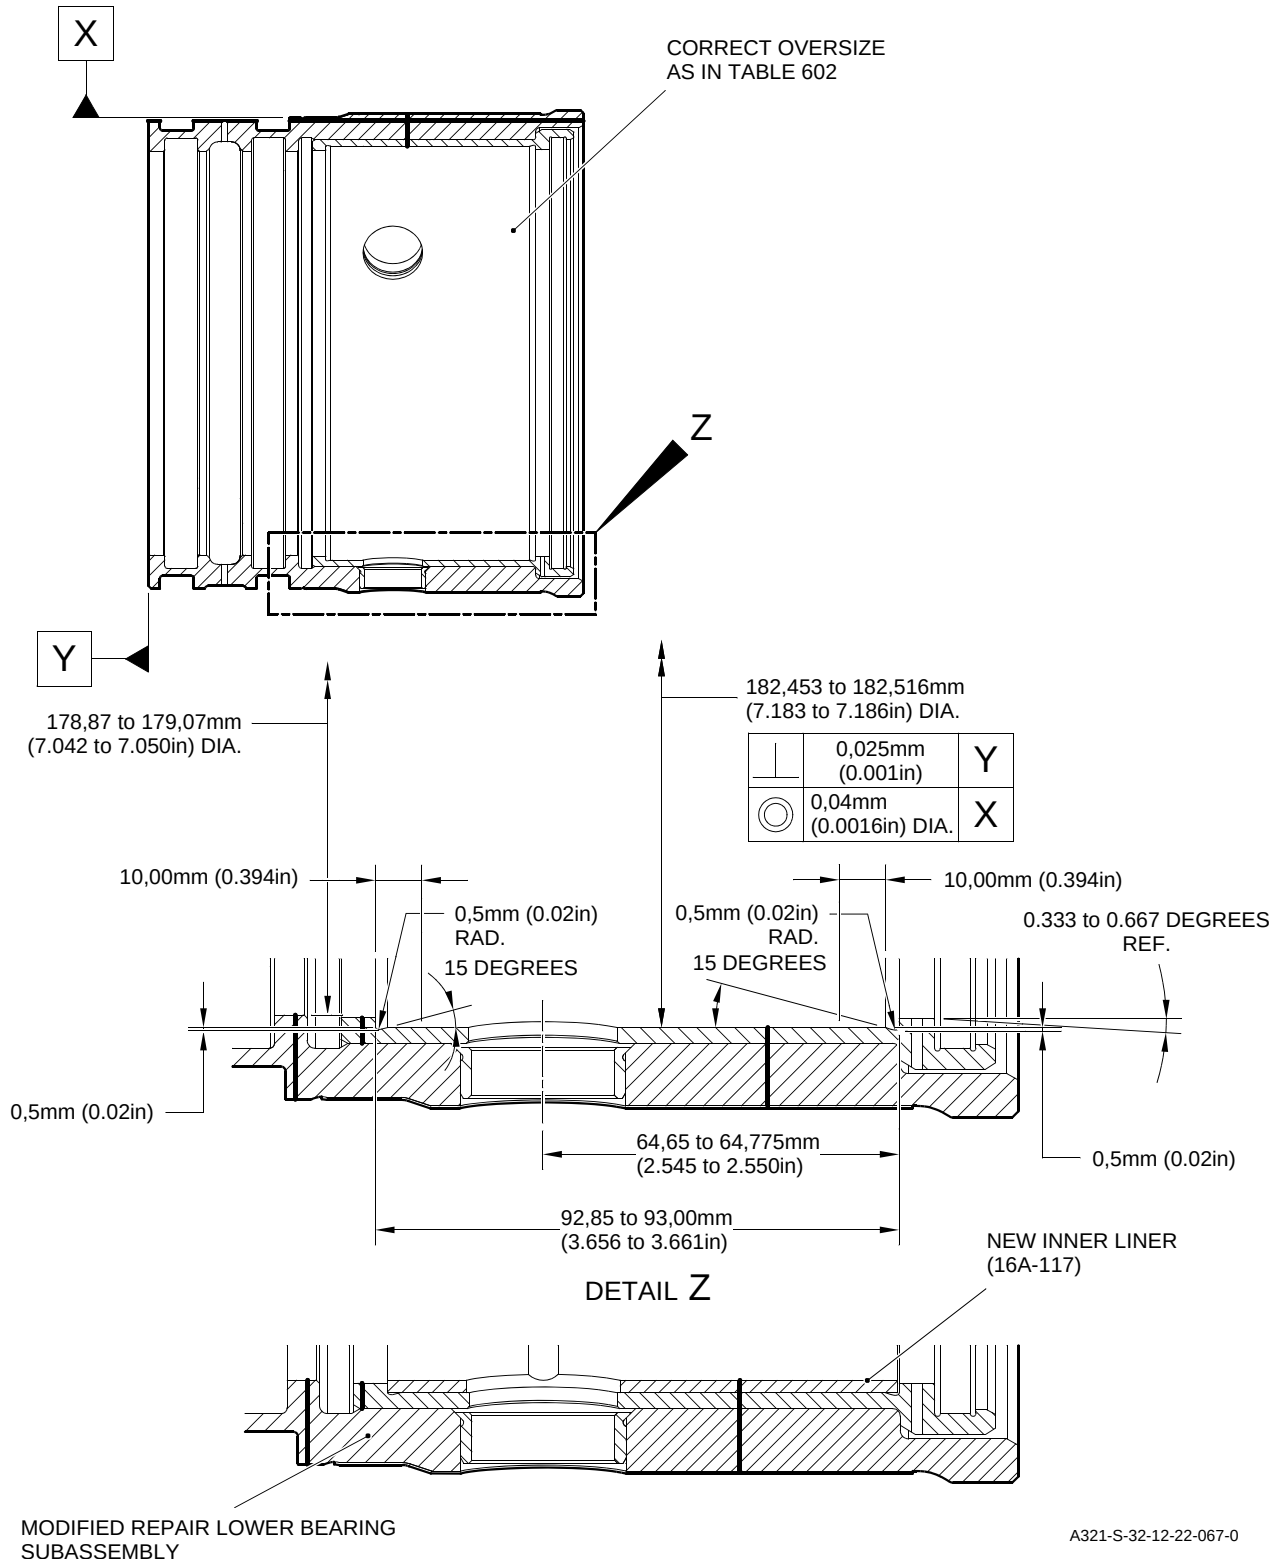

A321-S-32-12-22-067-0

**Lower Bearing Subassembly - Machining and Inner Liner Installation
Figure 604**


Repair No. 11-30

Page 608

Dec 6/2019

32-12-22

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

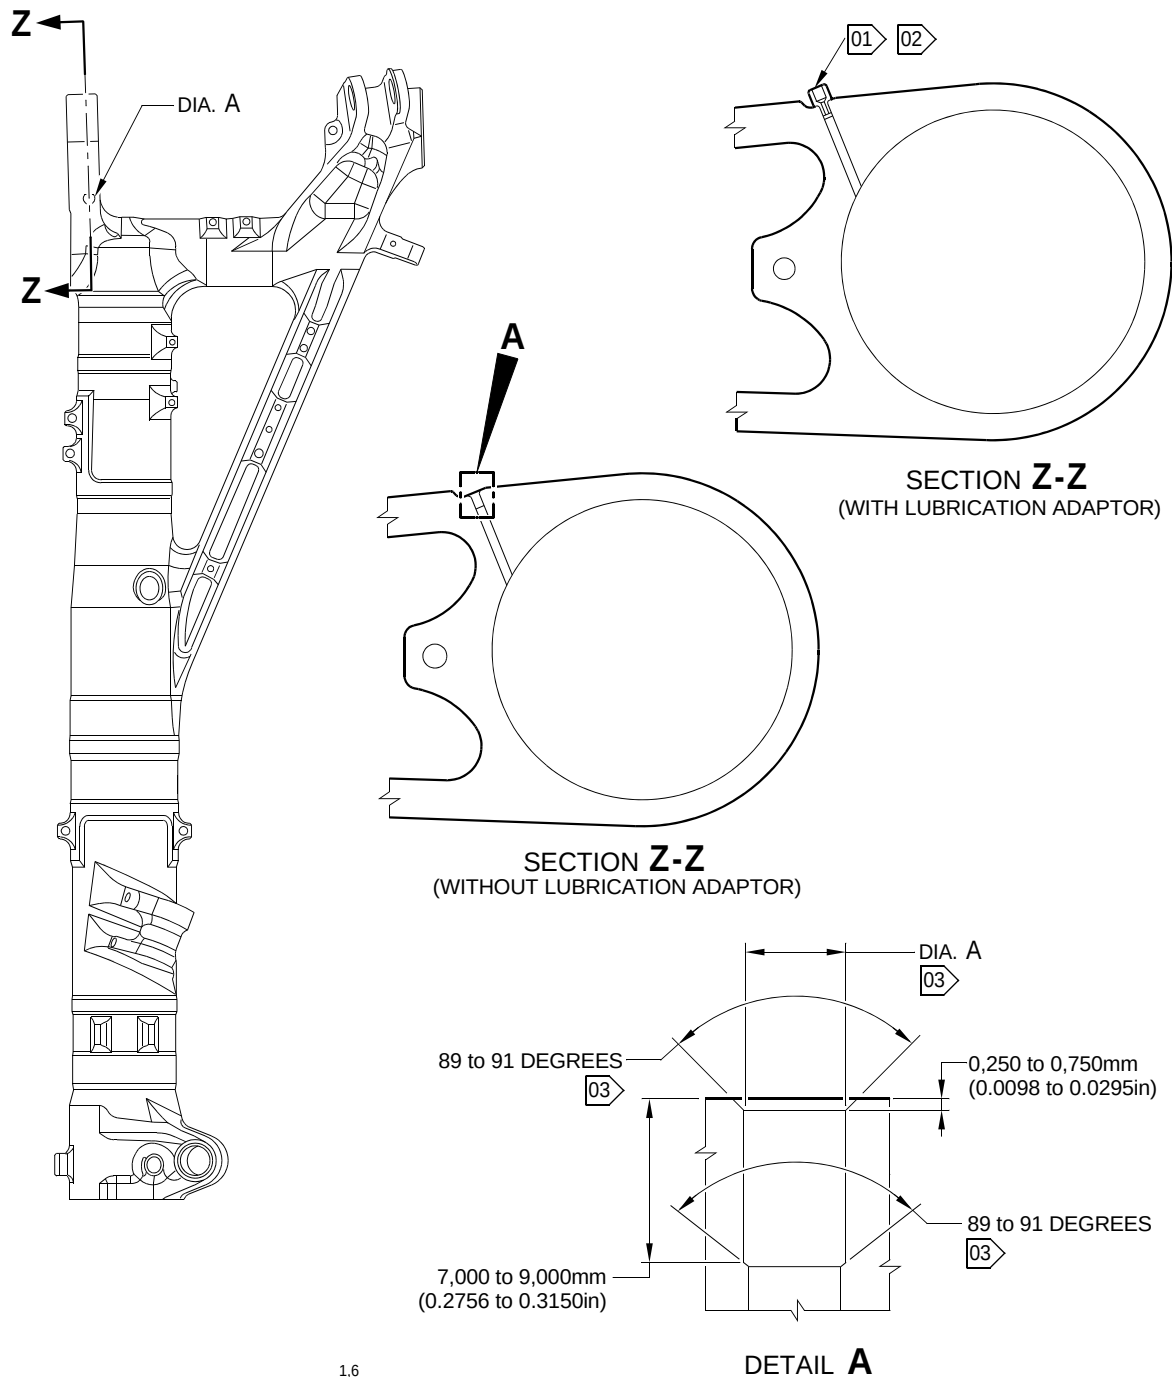
NOTE:

THE SURFACE FINISH MUST BE $\sqrt{1.6 \over 63}$ OR BETTER UNLESS GIVEN DIFFERENTLY.
DIAMETER A MUST BE FOLLOW THE LINE OF EXISTING BORE.

[01] > APPLY LOCTITE GRADE 270 TO ADAPTOR INTERFACE WITH MAIN FITTING: REFER TO PCS-5303.


[02] > INSTALL THE APPLICABLE LUBRICATION ADAPTOR: REFER TO TABLE 601.

[03] > CADMIUM PLATE OPTIONAL AND NO PAINT.

A321-T-32-12-22-111-0

Repair to Main Fitting
Figure 601

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

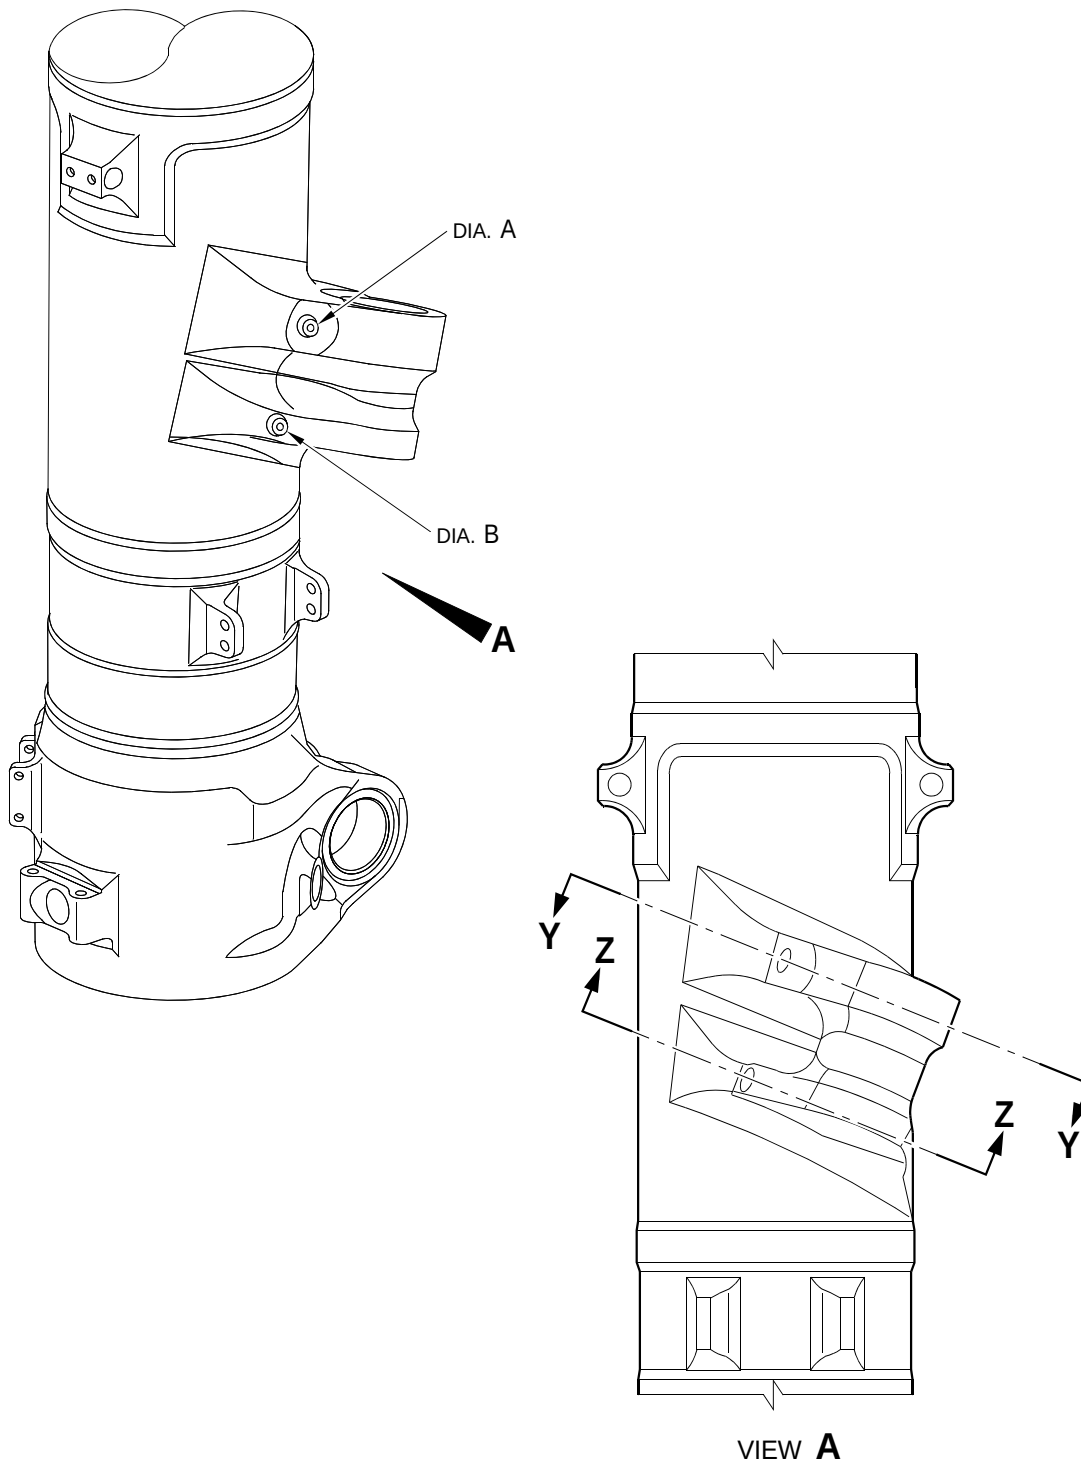


A321-T-32-12-22-112-0


Repair to Main Fitting
Figure 601 - Sheet 1

Repair No. 11-32
Page 604
32-12-22
Mar 18/2025


PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

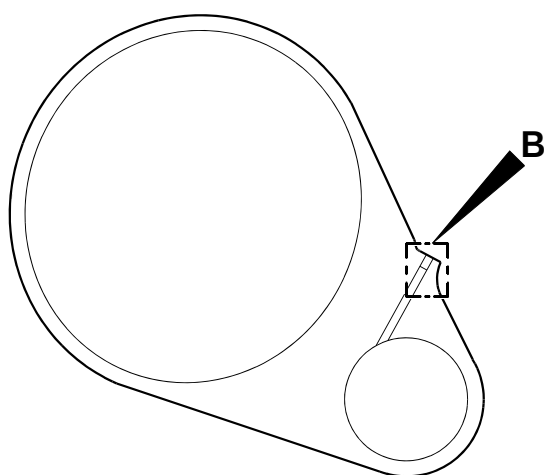


SECTION Z-Z
(WITHOUT LUBRICATION ADAPTOR)

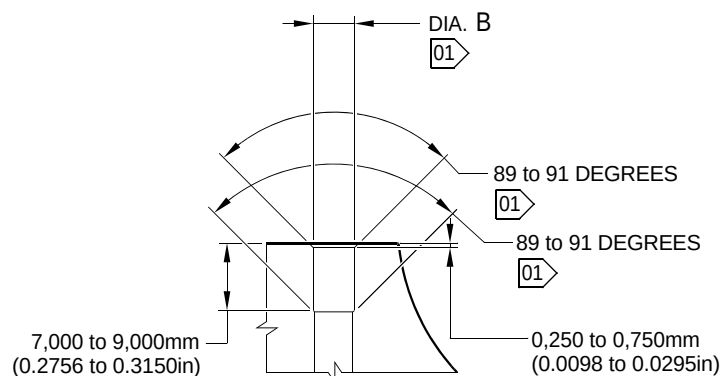

DETAIL B

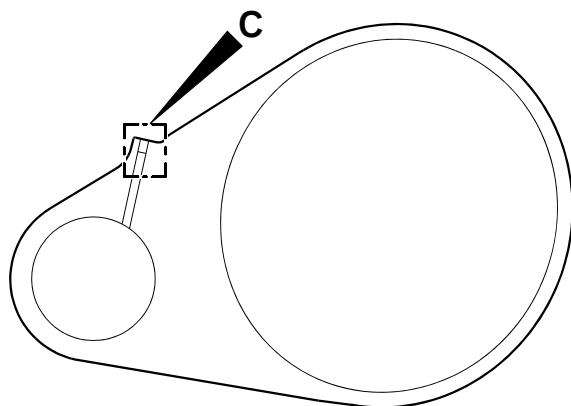

SECTION Y-Y
(WITHOUT LUBRICATION ADAPTOR)

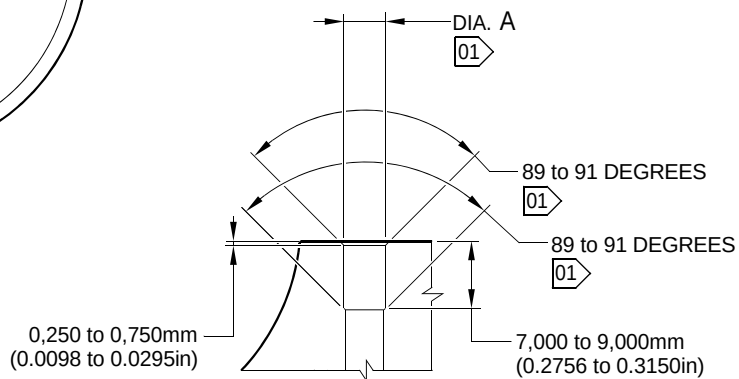

DETAIL C

NOTE:


THE SURFACE FINISH MUST BE $\nabla^{1,6}_{(63)}$ OR BETTER UNLESS GIVEN DIFFERENTLY.
DIAMETER(S) A AND/OR B MUST FOLLOW THE LINE OF EXISTING BORES.

01 CADMIUM PLATE OPTIONAL AND NO PAINT.


A321-T-32-12-22-113-0

Repair to Main Fitting
Figure 601 - Sheet 2

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

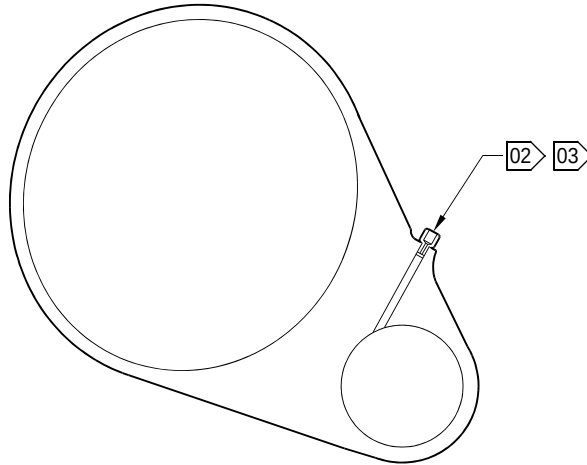

SECTION Z-Z
(WITH LUBRICATION ADAPTOR)

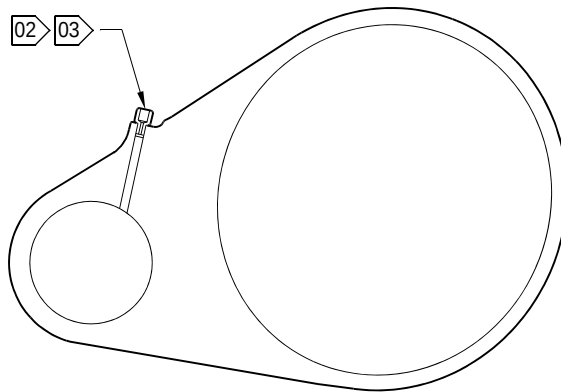

SECTION Y-Y
(WITH LUBRICATION ADAPTOR)

NOTE:


02 APPLY LOCTITE GRADE 270 TO ADAPTOR INTERFACE WITH MAIN FITTING: REFER TO PCS-5303.

03 INSTALL THE APPLICABLE LUBRICATION ADAPTOR: REFER TO TABLE 601.

A321-T-32-12-22-114-0

Repair to Main Fitting
Figure 601 - Sheet 3

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

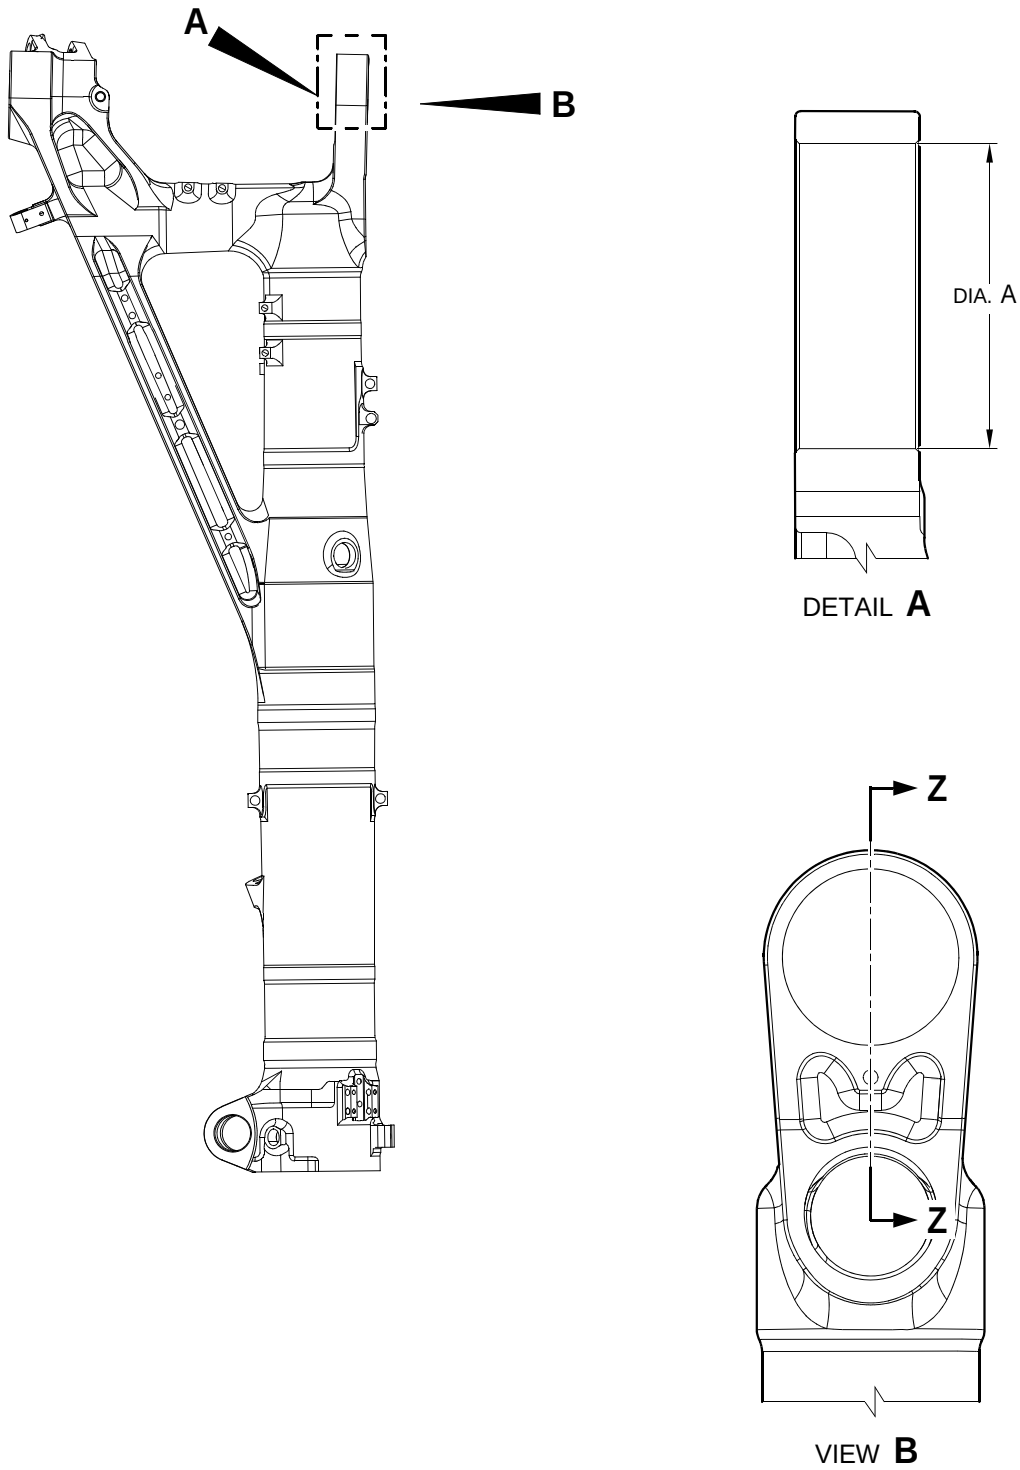


A321-T-32-12-22-146-0

Repair to Main Fitting
Figure 601 - Sheet 1

Repair No. 11-33
Page 604
Mar 18/2025

32-12-22

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

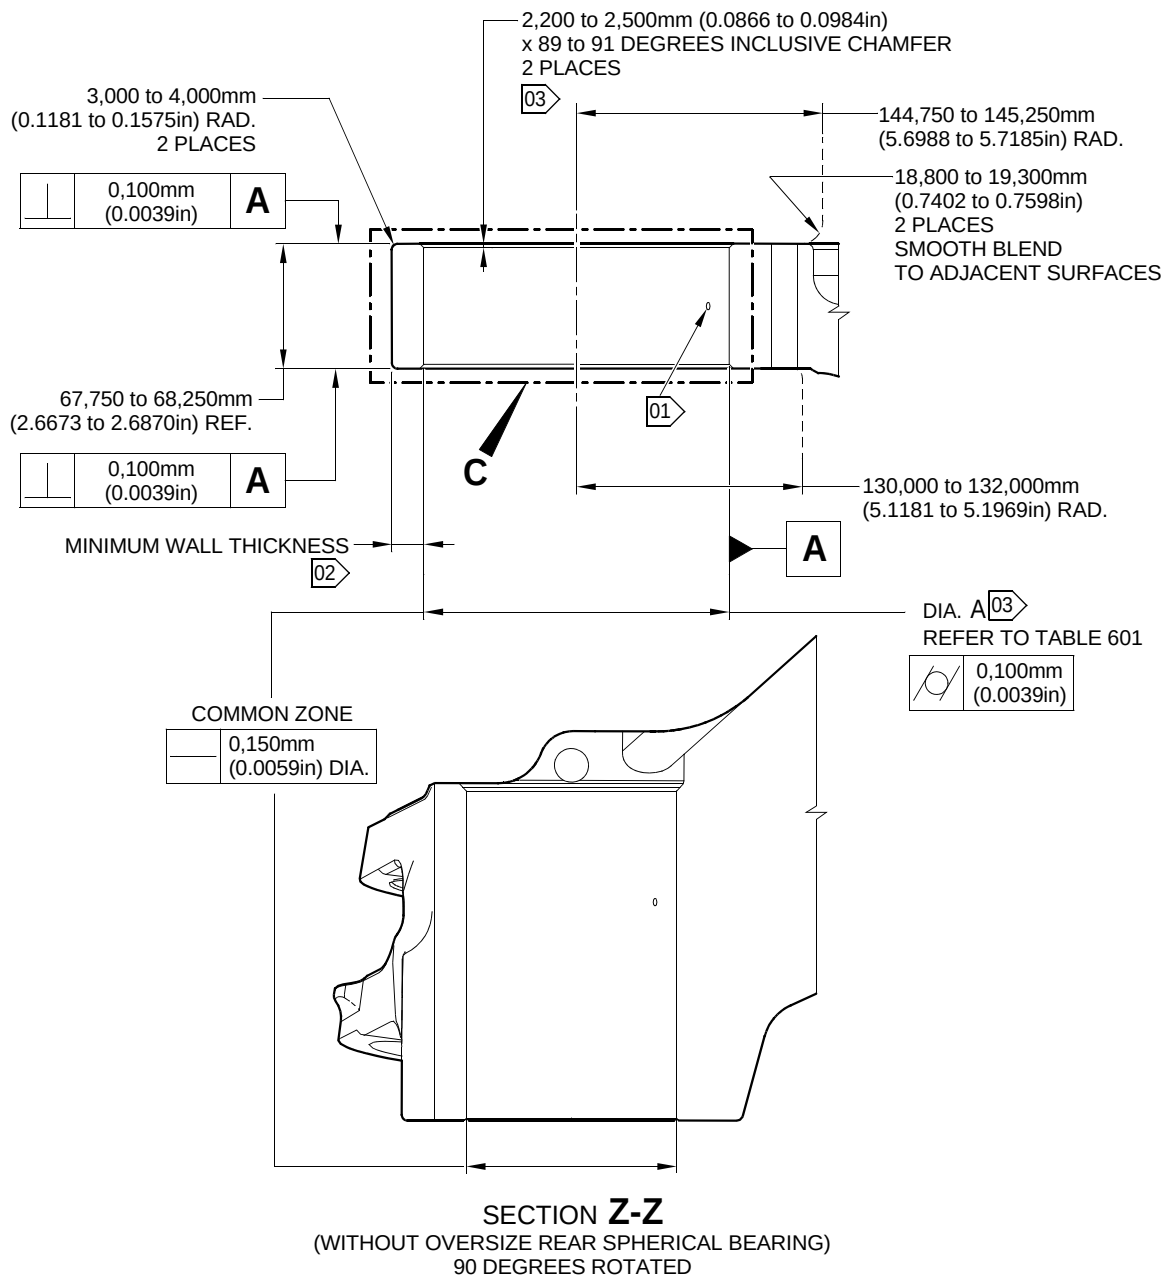
NOTE:

THE SURFACE FINISH MUST BE $\sqrt{1.6}$ (63) OR BETTER UNLESS GIVEN DIFFERENTLY.
DIAMETER A MUST FOLLOW THE AXIS OF EXISTING BORE.

[01] REMOVE THE BREAK EDGES WITHIN 0,500 to 2,000mm (0.0197 to 0.0787in) RAD.


[02] FOR THE MAIN FITTING (20-410B), (20-410C), (20-420B) and (20-420C):
THE MINIMUM WALL THICKNESS IS 15,382mm (0.6056in).
FOR THE MAIN FITTING (20-410D) and (20-420D):
THE MINIMUM WALL THICKNESS IS 15,582mm (0.6134in).

[03] PRIMER PAINT ONLY: REFER TO PCS-2500. NO WITNESS OF TOP COAT PAINT PERMITTED ON THESE SURFACES.


A321-T-32-12-22-147-0

Repair to Main Fitting
Figure 601- Sheet 2

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

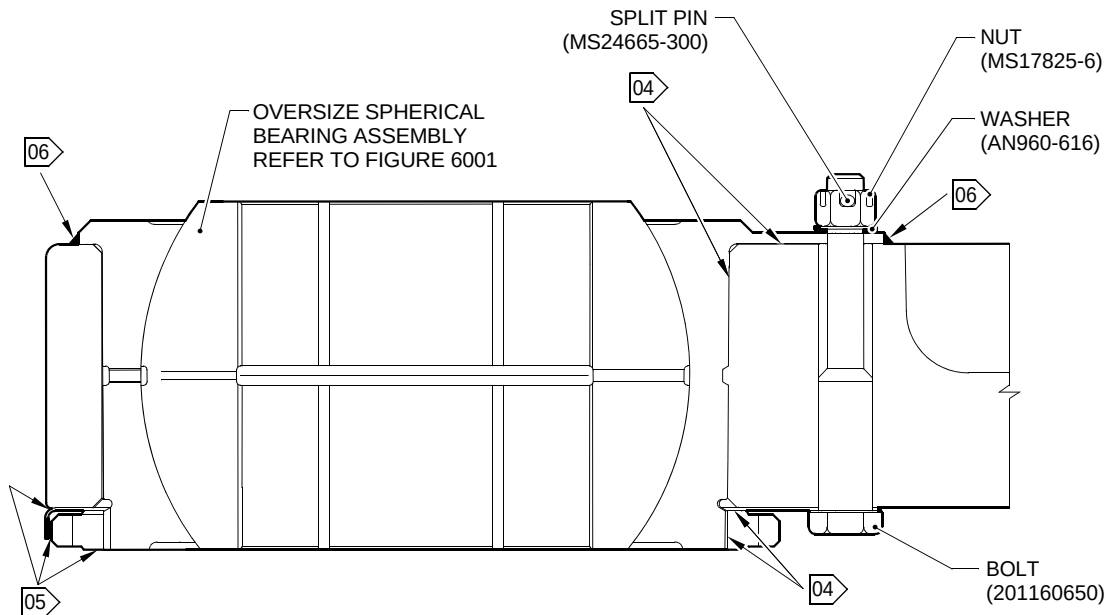

SECTION Z-Z
(WITH OVERSIZE REAR SPHERICAL BEARING)
90 DEGREES ROTATED

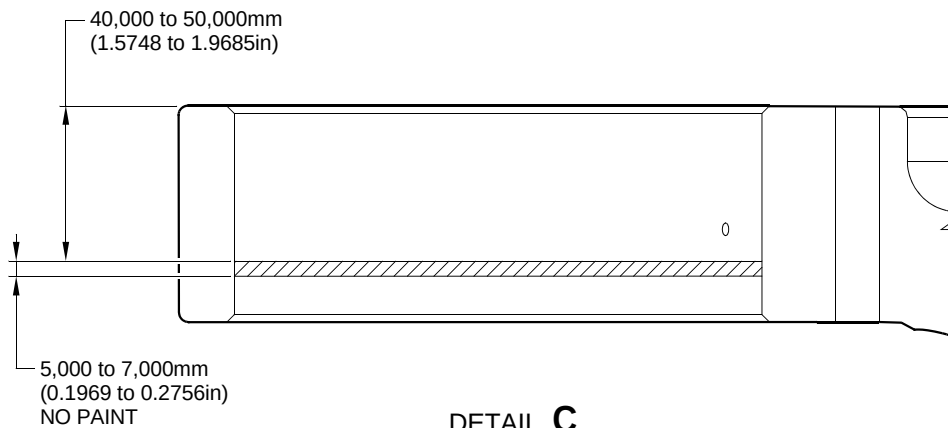

DETAIL C


NOTE:

- 04** APPLY MOLYKOTE 111 TO THE BOLT SHANKS, THREADS, UNDERCUTS AND ALL INTERFACES BETWEEN MATING PARTS MUST BE COATED BEFORE ASSEMBLY: REFER TO PCS-7303. ALL CAVITIES AND VOIDS MUST BE FILLED TO PREVENT MOISTURE INGRESS.
- 05** APPLY A FULL BEAD OF SEALANT, PR340-2 WITH A MAXIMUM HEIGHT OF 1,000mm (0.0394in) ABOVE ADJOINING SURFACES: REFER TO PCS-7200.
- 06** APPLY SEALANT: REFER TO PCS-7200 TYPE 2.

A321-T-32-12-22-148-0


Repair to Main Fitting
Figure 601 - Sheet 3

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

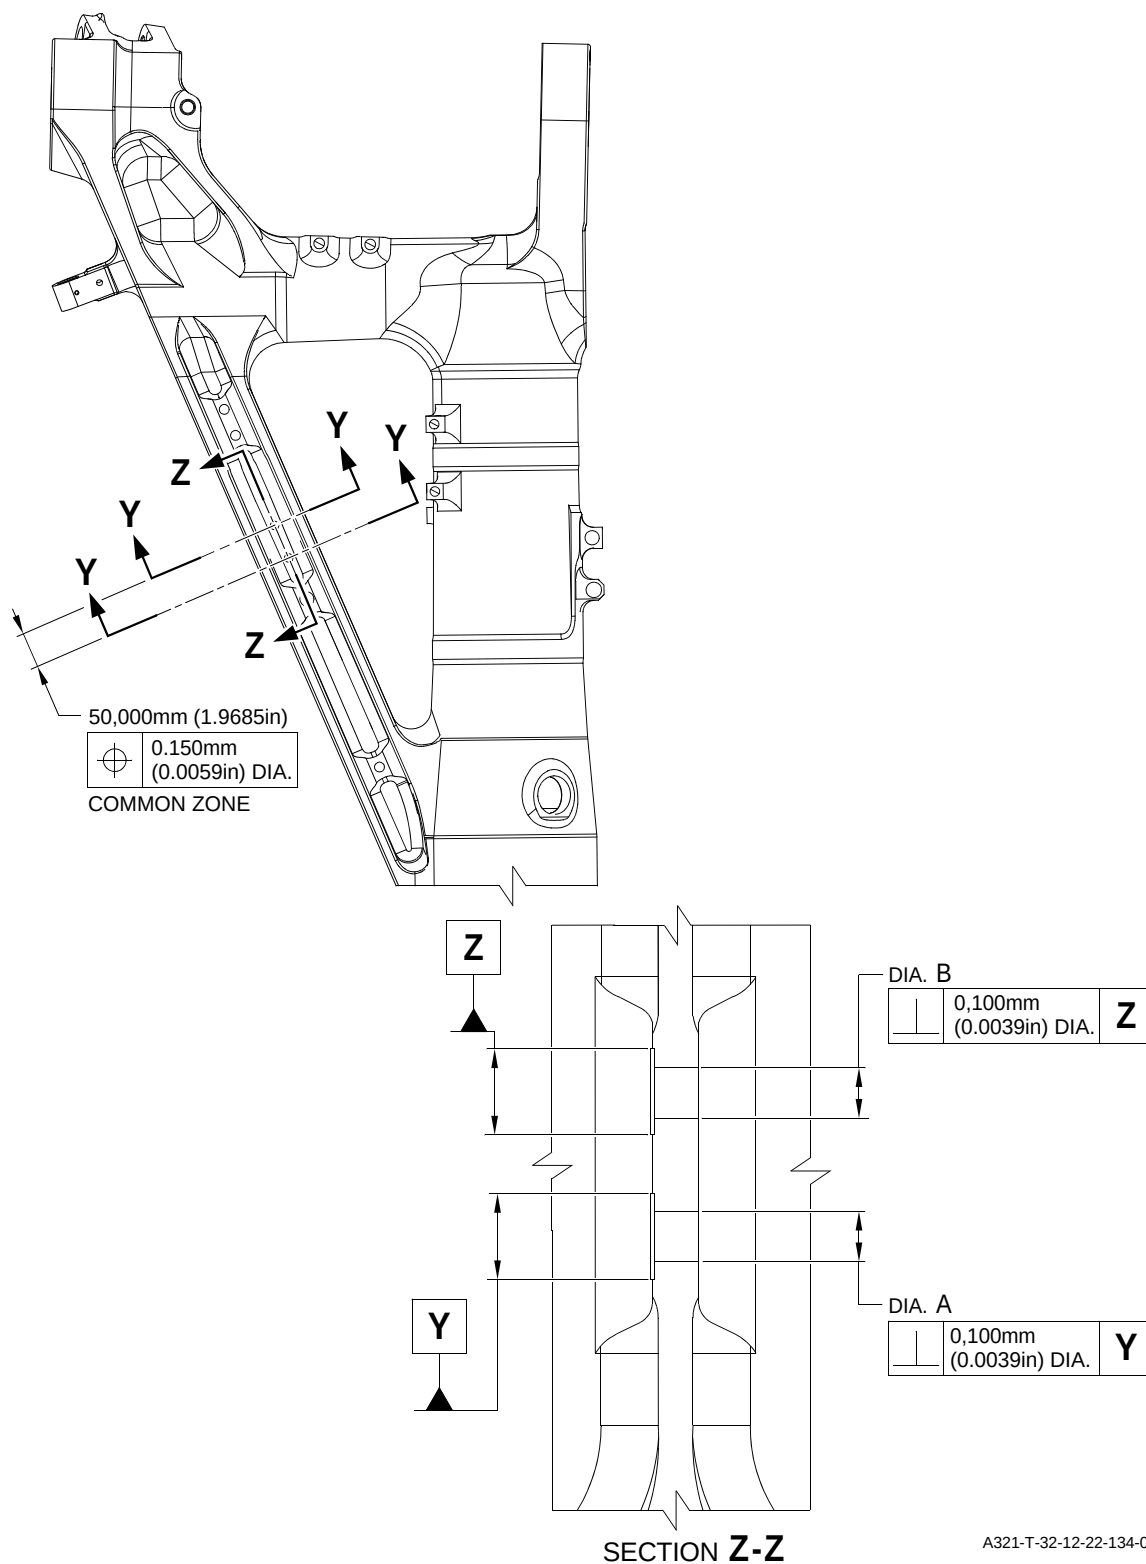


Repair to Main Fitting
Figure 601 - Sheet 1

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

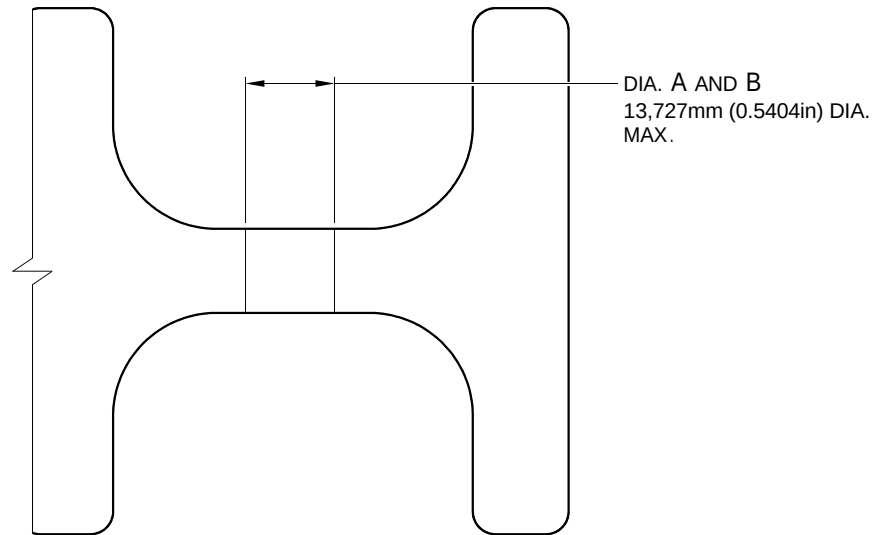

**SECTION Y-Y
(WITHOUT BUSHES)**

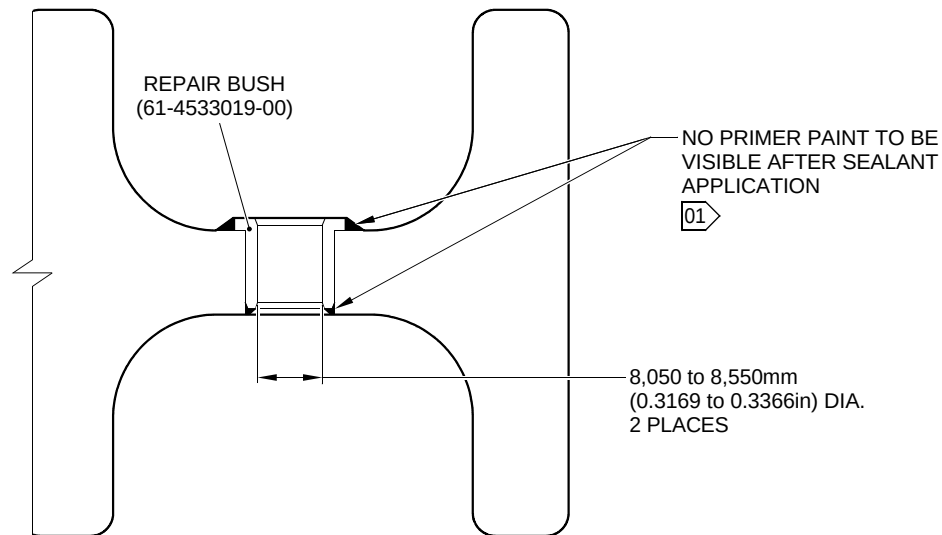

**SECTION Y-Y
(WITH BUSHES)**

NOTE:


THE SURFACE FINISH MUST BE  OR BETTER UNLESS GIVEN DIFFERENTLY.
DIAMETERS A AND B MUST FOLLOW THE AXIS OF EXISTING BORE.
DEBURR THE SHARP EDGES WITH 0,500 to 1,000mm (0.0197 to 0.0394in) RAD.
UNLESS GIVEN DIFFERENTLY.

 APPLY FILLET SEALANT: REFER TO PCS-7200. MAKE SURE THAT THE SEALANT COMPLETELY COVERS EXPOSED PRIMER PAINT.

A321-T-32-12-22-135-0

Repair to Main Fitting
Figure 601 - Sheet 2

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

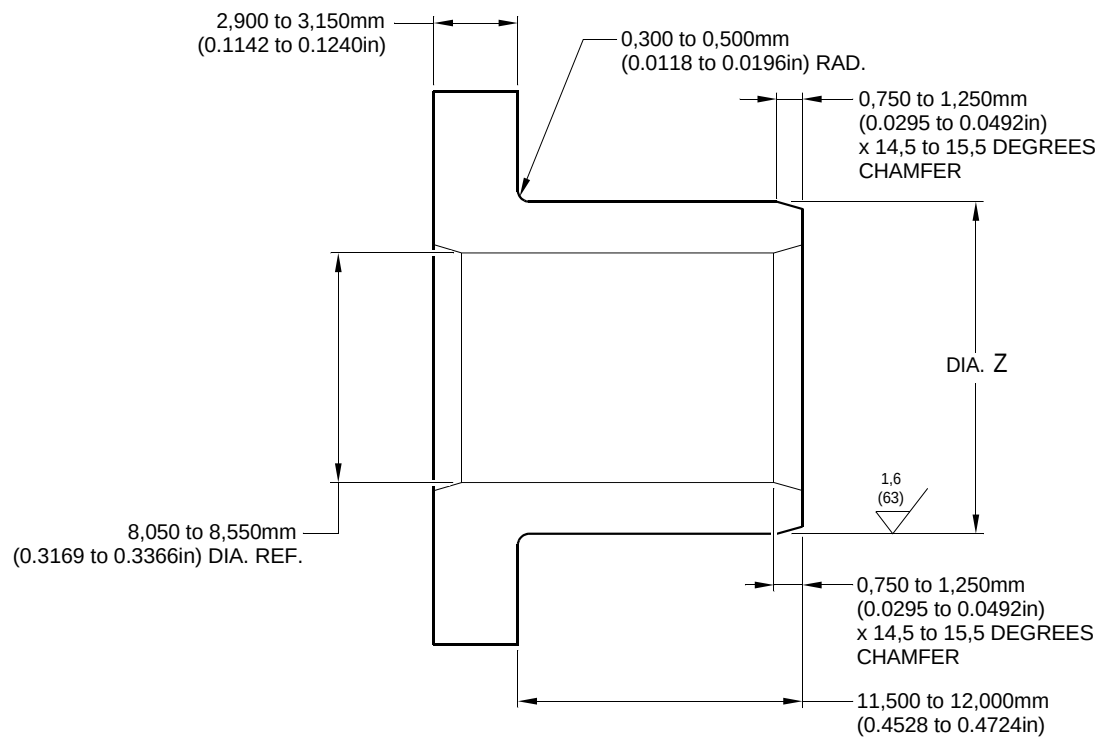


NOTE:

THE SURFACE FINISH MUST BE $\sqrt{3,2}$ (125) OR BETTER UNLESS GIVEN DIFFERENTLY.
DEBURR THE SHARP EDGES WITH 0,130 to 0,380mm (0.0051 to 0.0150in) RAD.
UNLESS GIVEN DIFFERENTLY.
APPLY CADMIUM PLATE ALL OVER: REFER TO PCS-2101. THE CADMIUM PLATE THICKNESS MUST BE BETWEEN 0,010 to 0,015mm (0.0004 to 0.0006in).

A321-T-32-12-22-136-0


Repair to Main Fitting - Bush
Figure 602

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

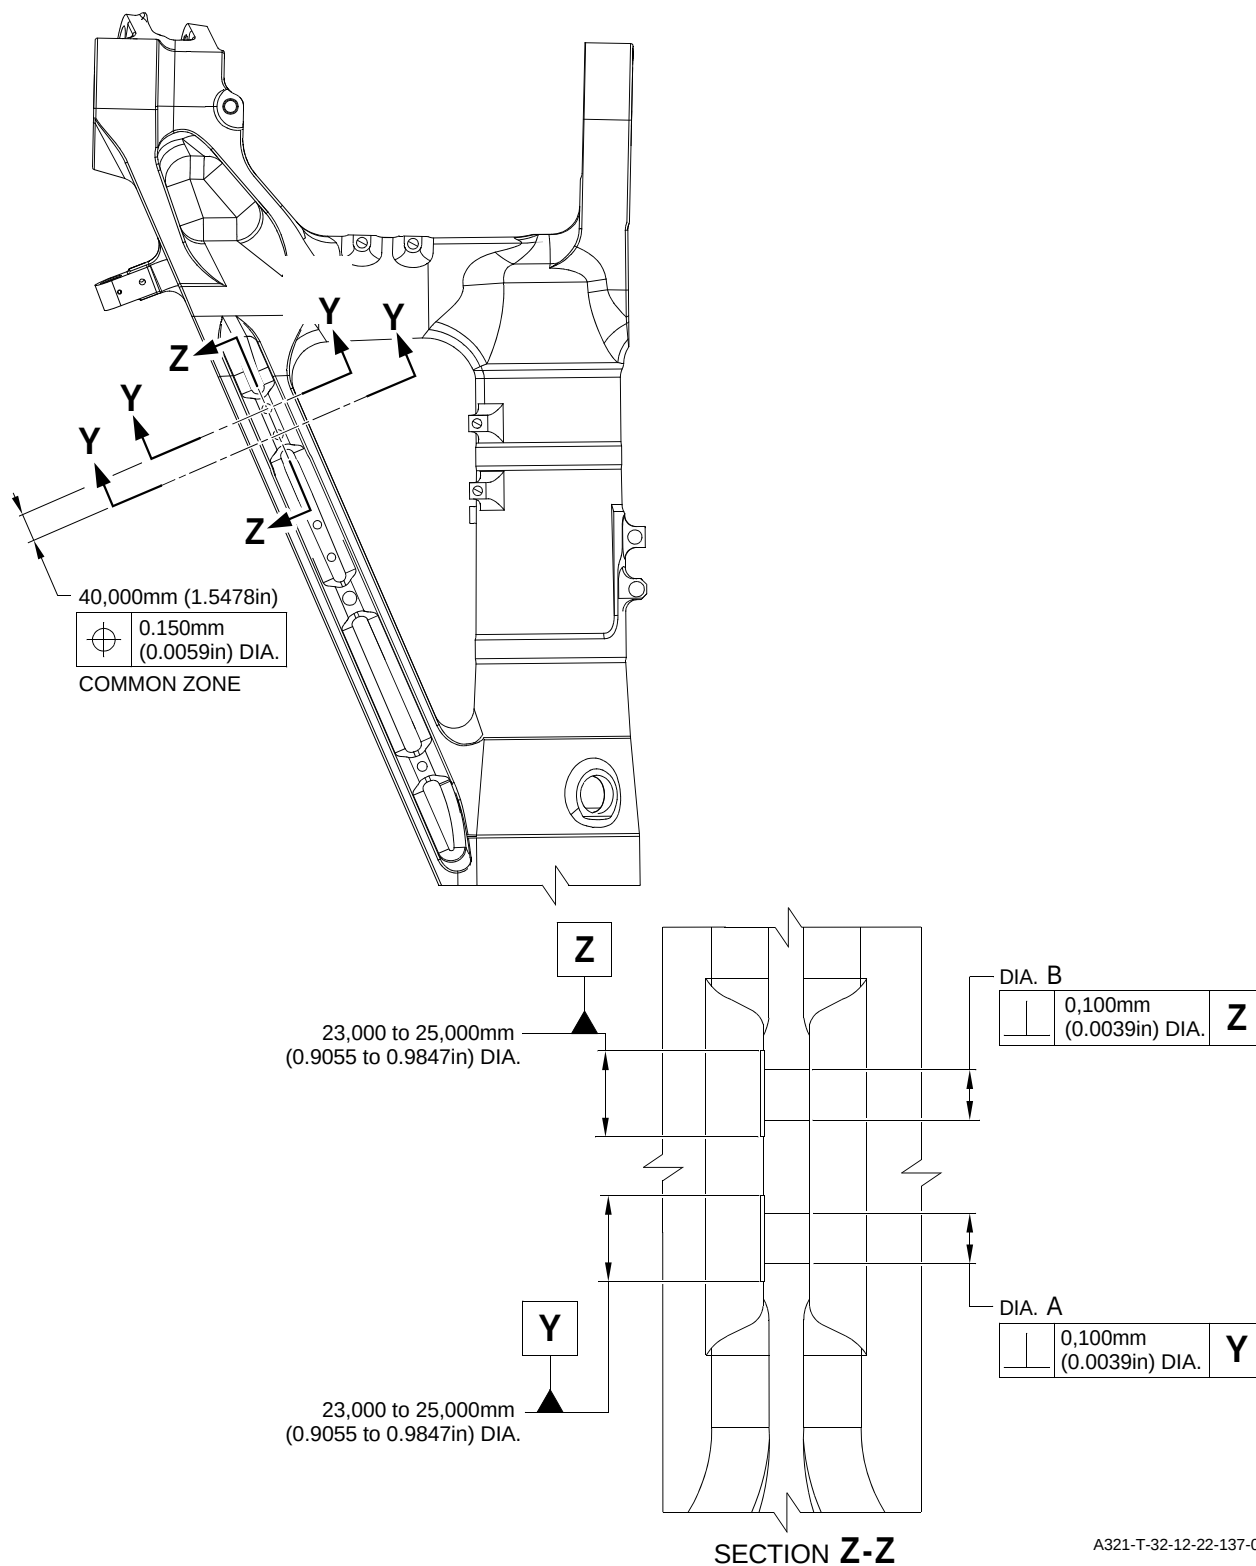

Repair to Main Fitting
Figure 601 - Sheet 1

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

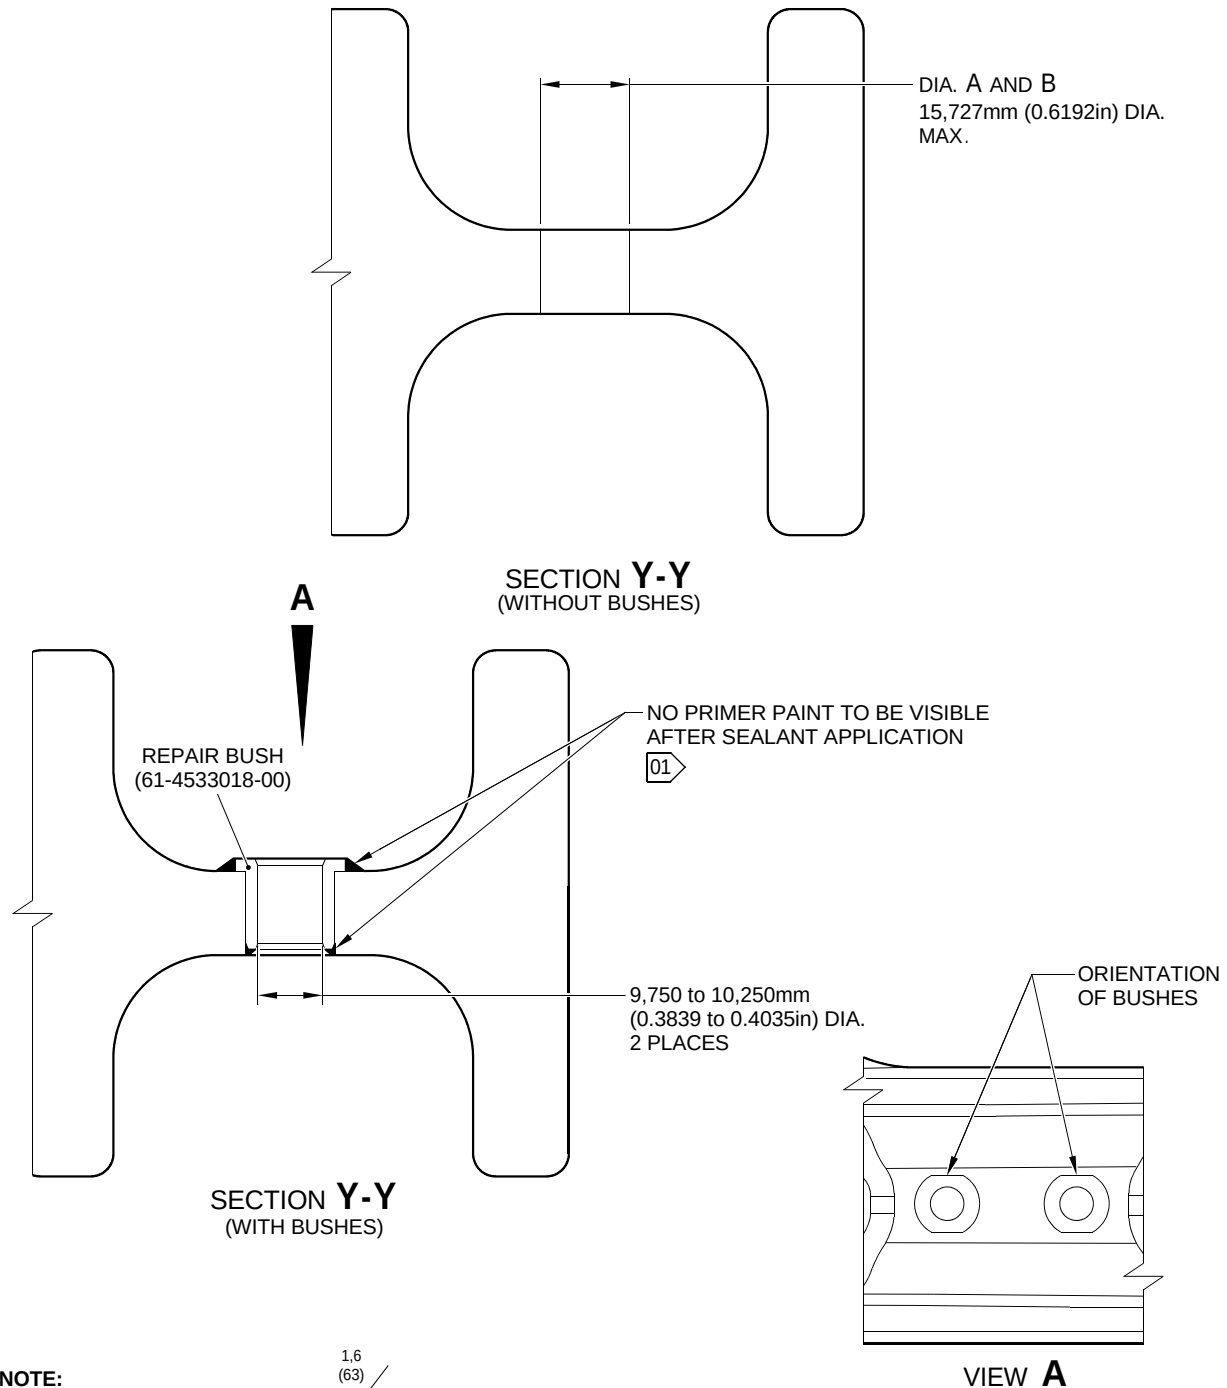

NOTE:
THE SURFACE FINISH MUST BE $\sqrt{1,6}$ (63) OR BETTER UNLESS GIVEN DIFFERENTLY.
DIAMETERS A AND B MUST FOLLOW THE AXIS OF EXISTING BORE.
DEBURR THE SHARP EDGES WITH 0,500 to 1,000mm (0.0197 to 0.0394in) RAD.
UNLESS GIVEN DIFFERENTLY.


01 APPLY FILLET SEALANT: REFER TO PCS-7200. MAKE SURE THAT THE SEALANT COMPLETELY
COVERS EXPOSED PRIMER PAINT.

A321-T-32-12-22-138-0

Repair to Main Fitting
Figure 601 - Sheet 2

Repair No. 11-35
Page 604
32-12-22
Mar 18/2025

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**


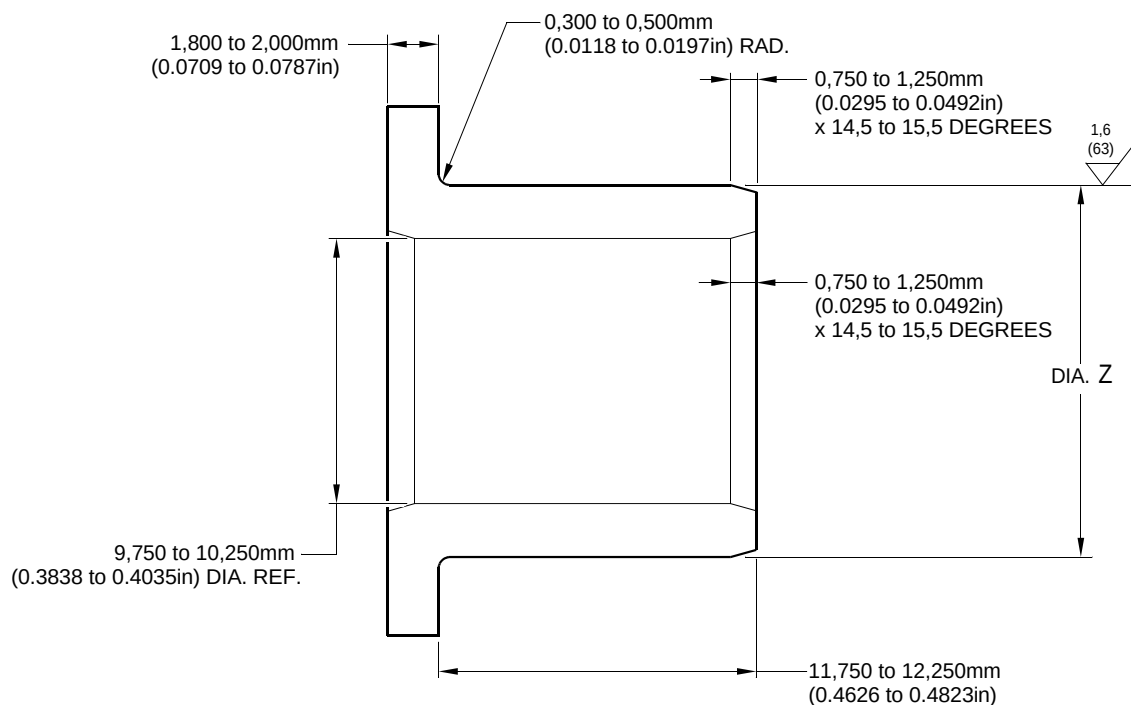

NOTE:

THE SURFACE FINISH MUST BE ∇ 3,2 (125) OR BETTER UNLESS GIVEN DIFFERENTLY.
 APPLY CADMIUM PLATE ALL OVER: REFER TO PCS-2101. THE PLATING THICKNESS
 MUST BE BETWEEN 0,010 to 0,015mm (0.0004 to 0.0006in).
 DEBURR THE SHARP EDGES WITH 0,130 to 0,380mm (0.0051 to 0.0150in) RAD.
 UNLESS GIVEN DIFFERENTLY.

A321-T-32-12-22-139-0

Repair to Main Fitting - Bush
Figure 602


**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

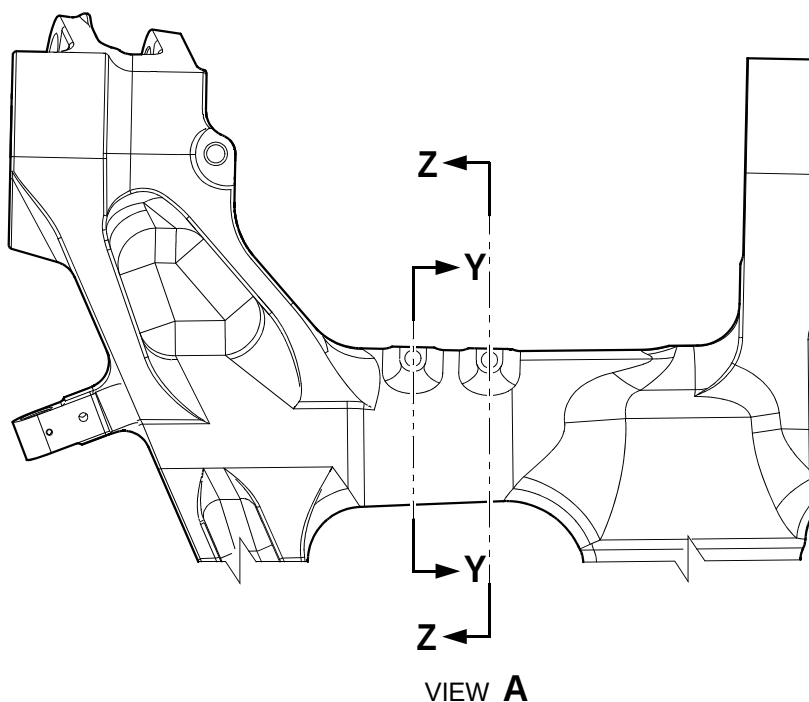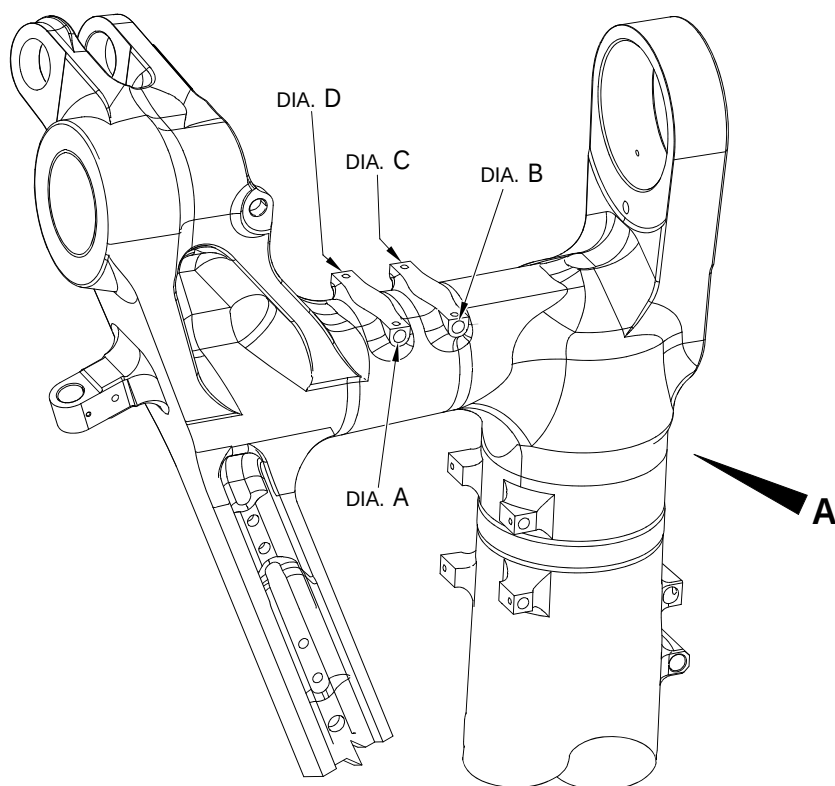

A321-T-32-12-22-140-0

Repair to Main Fitting
Figure 601 - Sheet 1

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

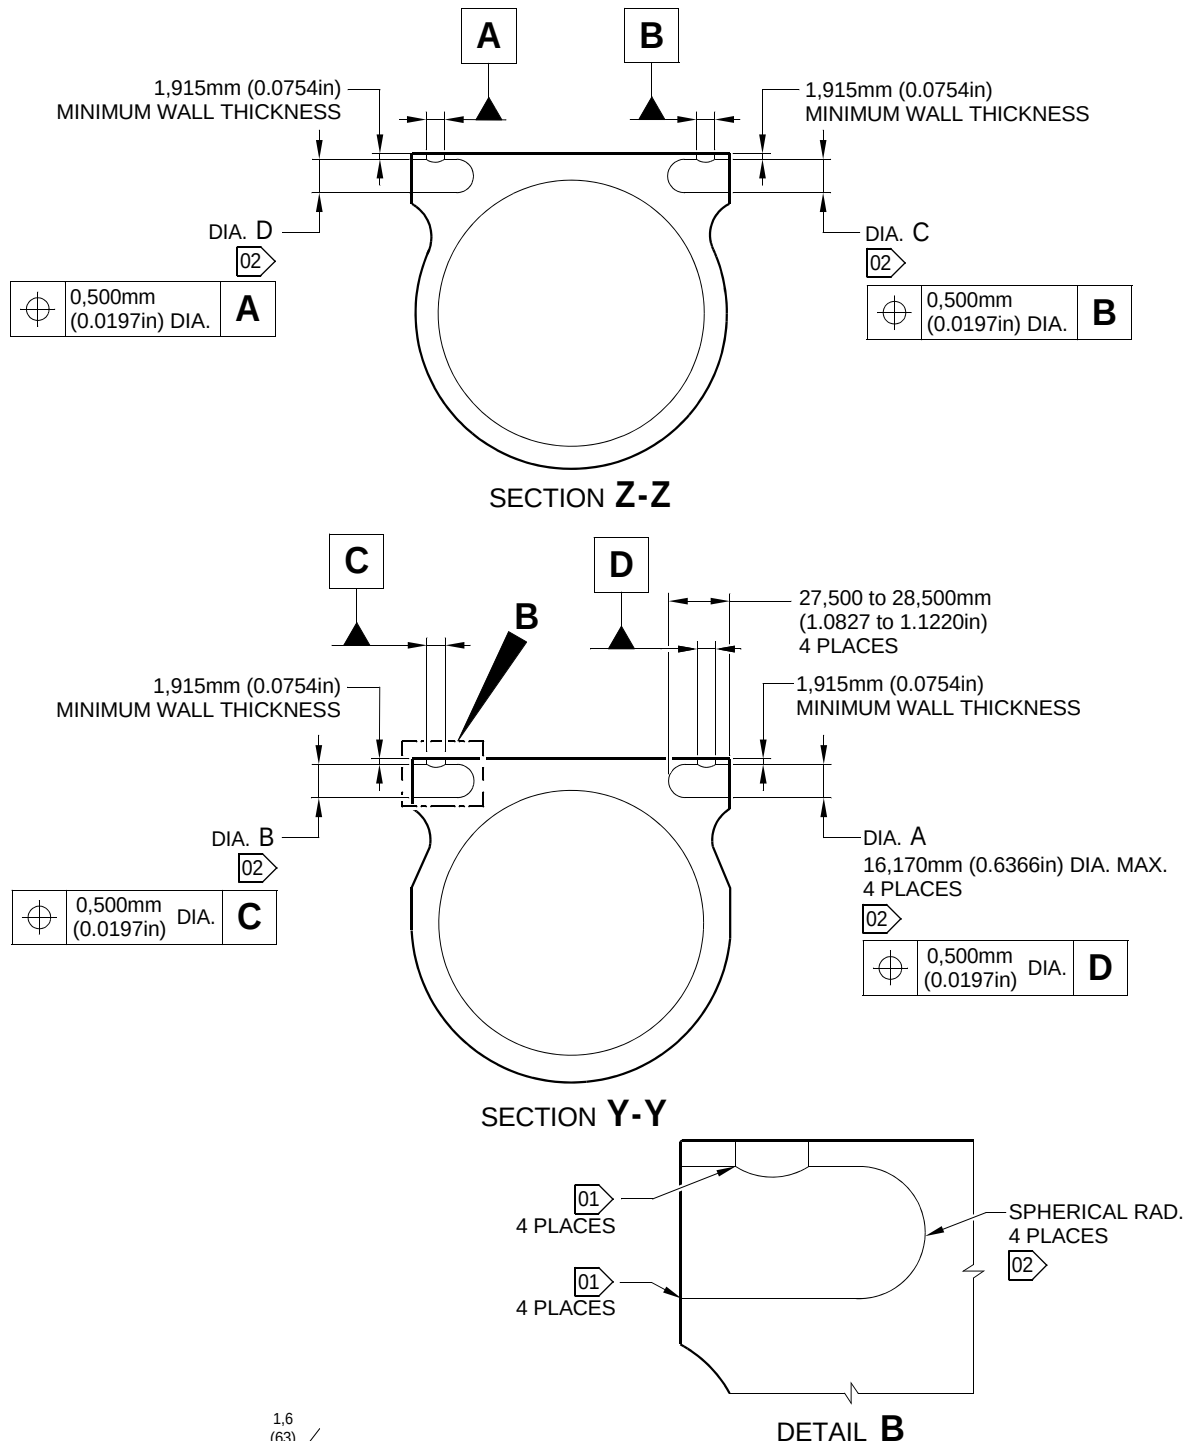
NOTE:

THE SURFACE FINISH MUST BE $\sqrt{1,6}$ (63) OR BETTER UNLESS GIVEN DIFFERENTLY.
DIAMETERS A, B, C AND D MUST FOLLOW THE AXIS OF EXISTING BORES.

01 REMOVE THE SHARP EDGES OF 0,250 to 1,000mm (0.0098 to 0.0394in) RAD.

02 NO PAINT.

A321-T-32-12-22-141-0

Repair to Main Fitting
Figure 601 - Sheet 2