

MAIN LANDING GEAR LEG

PART NUMBER

201587001, 201587002

201587003, 201587004


201587005, 201587006

201587007, 201587008

COMPONENT MAINTENANCE MANUAL WITH ILLUSTRATED PARTS LIST

STATEMENT OF INITIAL CERTIFICATION

This manual complies with British Civil Airworthiness Requirements, Section A, Chapter A5-3.

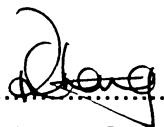Signed 

Date 18.3.98

CAA Approval No. DAI/1018/39

NOTE: The above certification does not apply to revisions or amendments made after the date of initial certification by other Approved Organisations. Revisions or Amendments made by other Approved Organisations must each be separately certified and recorded on separate record sheets.

The technical data in this document (or file) may contain US data and be controlled for export under the Export Administration Regulations (EAR), 15 CFR Parts 730-774, ECCN: 9E991. Violations of these laws may be subject to fines and penalties under the Export Administration Act.

© **SAFRAN LANDING SYSTEMS 2016 (AND SUBSEQUENT REVISION PAGE DATES)**

This document and all information contained herein is the sole property of Safran Landing Systems (and/or its affiliated companies). No intellectual property rights are granted by the delivery of this document or the disclosure of its content. This document shall not be reproduced to a third party without the express written consent of Safran Landing Systems (and/or the appropriate affiliated company).

32-12-22 TITLE PAGE
Sep 16/2016

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

**РУКОВОДСТВО ПО ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ КОМПОНЕНТА 32-12-22
ОСНОВНАЯ СТОЙКА ШАССИ**

СОПРОВОДИТЕЛЬНОЕ ПИСЬМО К РЕВИЗИИ № 69

1. ПОСТОЯННЫЕ РЕВИЗИИ

A. Убедиться, что ревизия № 68 внесена в руководство и зарегистрирована как вставленная..

2. NEW/REVISED PAGES

Subject Reference	Remove and Destroy Pages	Insert New/Revised		Reason for Change
		Pages	Dated	
Record of Revisions	1	1	Mar 18/2025	Updated revision status
Unit Identification Chart	1 to 4	1 to 8	Mar 18/2025	Added Ref. Codes 2253 and 2255 details
List of Effective Pages	1 to 14	1 to 16	Mar 18/2025	Updated pages
Table of Contents	1 to 12	1 to 14	Mar 18/2025	Added content. Updated page numbers. Updated figure numbers
Disassembly	314 to 316	314 to 316	Mar 18/2025	Added para 2.P.(31)
Check	504, 507 to 512	504, 507 to 514	Mar 18/2025	Updated tables 501 and 502
Repair	606 to 684	606 to 698.2	Mar 18/2025	Updated table 601. Updated caution at para 3.C. Updated figure titles. Deleted figures 626, 627, 649, 650, 653 and 654. Updated figure 626. Added figures 642 648. Updated table 602. Updated figure numbers
Repair No. 9-1	601 and 602	601 and 602	Mar 18/2025	Added fig-item (18-80A) in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 9-2	601 to 603	601 to 603	Mar 18/2025	Added fig-item (18-80A) in para 1. Updated Messier-Dowty Limited to Safran Landing Systems

**COMPONENT MAINTENANCE MANUAL 32-12-22
MAIN LANDING GEAR LEG**

Subject Reference	Remove and Destroy Pages	Insert New/Revised		Reason for Change
		Pages	Dated	
Repair No. 9-4	601 and 602	601 and 602	Mar 18/2025	Added fig-item (18-80A) in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 9-5	601	601	Mar 18/2025	Added fig-item (18-80A) in paras 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 9-6	601 and 602	601 and 602	Mar 18/2025	Added fig-item (18-80A) in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 9-7	601 and 602	601 and 602	Mar 18/2025	Added fig-item (18-80A) in paras 1. and 1.A.(2)
Repair No. 9-8	601 to 603 and 605	601 to 603 and 605	Mar 18/2025	Added fig-item (18-80A) in para 1. Updated Messier-Dowty Limited to Safran Landing Systems. Updated conversion value in figure 602
Repair No. 9-9	601 and 602	601 and 602	Mar 18/2025	Added fig-item (18-80A) in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 9-10	601 to 606	601 to 608	Mar 18/2025	Added fig-item (18-80A) in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 9-11	601, 602 and 605	601, 602 and 605	Mar 18/2025	Added fig-item (18-80A) in para 1. Updated material specification in para 1.D.(1). Updated Messier-Dowty Limited to Safran Landing System. Updated figure 603

**COMPONENT MAINTENANCE MANUAL 32-12-22
MAIN LANDING GEAR LEG**

Subject Reference	Remove and Destroy Pages	Insert New/Revised		Reason for Change
		Pages	Dated	
Repair No. 11-1	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-2	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-3	601 to 603	601 to 603	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-4	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-5	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-6	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-7	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-8	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems

**COMPONENT MAINTENANCE MANUAL 32-12-22
MAIN LANDING GEAR LEG**

Subject Reference	Remove and Destroy Pages	Insert New/Revised		Reason for Change
		Pages	Dated	
Repair No. 11-9	601 to 603	601 to 603	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-11	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-12	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-13	601 to 603	601 to 603	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-14	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-17	601	601	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-18	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1
Repair No. 11-19	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1
Repair No. 11-20	601	601	Mar 18/2025	Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-21	601	601	Mar 18/2025	Updated fig-items in para 1

**COMPONENT MAINTENANCE MANUAL 32-12-22
MAIN LANDING GEAR LEG**

Subject Reference	Remove and Destroy Pages	Insert New/Revised		Reason for Change
		Pages	Dated	
Repair No. 11-22	601	601	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-23	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Added caution at para 1.E. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-24	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-25	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-27	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-28	601 and 602	601 and 602	Mar 18/2025	Updated fig-items in para 1. Updated Messier-Dowty Limited to Safran Landing Systems
Repair No. 11-31	-	601 to 604	Mar 18/2025	Added repair no. 11-31
Repair No. 11-32	-	601 to 606	Mar 18/2025	Added repair no. 11-32
Repair No. 11-33	-	601 to 606	Mar 18/2025	Added repair no. 11-33
Repair No. 11-34	-	601 to 606	Mar 18/2025	Added repair no. 11-34
Repair No. 11-35	-	601 to 606	Mar 18/2025	Added repair no. 11-35
Repair No. 11-36	-	601 to 604	Mar 18/2025	Added repair no. 11-36
Repair No. 11-37	-	601 to 606	Mar 18/2025	Added repair no. 11-37
Repair No. 14-4	-	601 to 606	Mar 18/2025	Added repair no. 14-4

**COMPONENT MAINTENANCE MANUAL 32-12-22
MAIN LANDING GEAR LEG**

Subject Reference	Remove and Destroy Pages	Insert New/Revised		Reason for Change
		Pages	Dated	
Repair No. 17-1	601 and 602	601 and 602	Mar 18/2025	Updated Messier-Dowty Limited to Safran Landing Systems. Updated table 601
Repair No. 18-8	-	601 to 604	Mar 18/2025	Added repair no. 18-8
Repair No. 21-1	601	601	Mar 18/2025	Updated fig-item (2-340) only in para 1
Repair No. 21-2	601	601	Mar 18/2025	Updated fig-item (2-340) only in para 1
Repair No. 21-3	601	601	Mar 18/2025	Updated fig-item (2-340) only in para 1
Repair No. 21-4	601	601	Mar 18/2025	Updated fig-item (2-350) only in para 1
Repair No. 21-5	601	601	Mar 18/2025	Updated fig-item (2-350) only in para 1
Repair No. 21-6	601	601	Mar 18/2025	Updated fig-item (2-350) only in para 1
Assembly (Including Storage)	701, 702, 704 to 709 and 729 to 798.6	701, 702, 704 to 709 and 729 to 798.12	Mar 18/2025	Updated paras 1.H.(1), 1.I.(1), 2.E, 2.F, 2.G, 2.H, 2.J, 2.K, 2.M, 2.N and 2.O. Added paras 2.I and 2.L. Added figure 713. Updated figures 705, 706, 707, 708 and 710. Updated figure numbers
Fits and Clearances	836 to 868	836 to 872	Mar 18/2025	Updated figure 815. Updated tables 813, 814, 818 and 823
Special Tools, Fixtures and Equipment	901 to 906	901 to 906	Mar 18/2025	Updated para 1.A
Illustrated Parts List	1020 to 1098.36	1020 to 1098.48	Mar 18/2025	Updated IPL figs 13 to 18 to include Ref. Codes: 2253 and 2255. Updated IPL fig 15.

COMPONENT MAINTENANCE MANUAL 32-12-22
MAIN LANDING GEAR LEG

3. REVISION RECORD

- A. Record the issue date and insertion date of this revision in the Record of Revisions and retain this Letter of Transmittal.

© SAFRAN LANDING SYSTEMS 2025 (AND SUBSEQUENT REVISION PAGE DATES)

This document and all information contained herein is the sole property of Safran Landing Systems (and/or its affiliated companies). No intellectual property rights are granted by the delivery of this document or the disclosure of its content. This document shall not be reproduced to a third party without the express written consent of Safran Landing Systems (and/or the appropriate affiliated company).

Issued by

Safran Landing Systems UK Ltd

Cheltenham Road, Gloucester, GL2 9QH, England

Telephone: +44 (0) 1452 712424 Fax: +44 (0) 1452 713821

COMPONENT MAINTENANCE MANUAL 32-12-22
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

RECORD OF REVISIONS

REV NO.	ISSUE DATE	INSERTION DATE	BY	REV NO.	ISSUE DATE	INSERTION DATE	BY
1-15	INCORPORATED		M-D	46	Jun 17/2016	Jun 17/2016	M-D
16	Aug 1/2006	Aug 1/2006	M-D	47	Sep 16/2016	Sep 16/2016	SAFRAN
17	Apr 2/2007	Apr 2/2007	M-D	48	Dec 9/2016	Dec 9/2016	SAFRAN
18	Oct 1/2007	Oct 1/2007	M-D	49	Mar 24/2017	Mar 24/2017	SAFRAN
19	Jan 1/2008	Jan 1/2008	M-D	50	Jun 23/2017	Jun 23/2017	SAFRAN
20	Jul 1/2008	Jul 1/2008	M-D	51	Dec 8/2017	Dec 8/2017	SAFRAN
21	Jan 1/2009	Jan 1/2009	M-D	52	Mar 23/2018	Mar 23/2018	SAFRAN
22	Feb 1/2009	Feb 1/2009	M-D	53	Dec 21/2018	Dec 21/2018	SAFRAN
23	Jul 1/2009	Jul 1/2009	M-D	54	May 31/2019	May 31/2019	SAFRAN
24	Oct 1/2009	Oct 1/2009	M-D	55	Dec 6/2019	Dec 6/2019	SAFRAN
25	Jan 1/2010	Jan 1/2010	M-D	56	Mar 20/2020	Mar 20/2020	SAFRAN
26	Jul 1/2010	Jul 1/2010	M-D	57	Sep 18/2020	Sep 18/2020	SAFRAN
27	Oct 1/2010	Oct 1/2010	M-D	58	Dec 4/2020	Dec 4/2020	SAFRAN
28	Jan 1/2011	Jan 1/2011	M-D	59	Mar 19/2021	Mar 19/2021	SAFRAN
29	Mar 31/2011	Mar 31/2011	M-D	60	Jun 18/2021	Jun 18/2021	SAFRAN
30	Jul 1/2011	Jul 1/2011	M-D	61	Sep 17/2021	Sep 17/2021	SAFRAN
31	Jul 8/2011	Jul 8/2011	M-D	62	Mar 18/2022	Mar 18/2022	SAFRAN
32	Oct 1/2011	Oct 1/2011	M-D	63	Jun 17/2022	Jun 17/2022	SAFRAN
33	Apr 2/2012	Apr 2/2012	M-D	64	Dec 9/2022	Dec 9/2022	SAFRAN
34	Oct 1/2012	Oct 1/2012	M-D	65	Dec 23/2022	Dec 23/2022	SAFRAN
35	Jun 28/2013	Jun 28/2013	M-D	66	Jun 16/2023	Jun 16/2023	SAFRAN
36	Dec 24/2013	Dec 24/2013	M-D	67	Aug 11/2023	Aug 11/2023	SAFRAN
37	Mar 28/2014	Mar 28/2014	M-D	68	Mar 15/2024	Mar 15/2024	SAFRAN
38	May 14/2014	May 14/2014	M-D	69	Mar 18/2025	Mar 18/2025	SAFRAN
39	Sep 26/2014	Sep 26/2014	M-D				
40	Oct 10/2014	Oct 10/2014	M-D				
41	Oct 14/2014	Oct 14/2014	M-D				
42	Mar 20/2015	Mar 20/2015	M-D				
43	Jun 19/2015	Jun 19/2015	M-D				
44	Sep 18/2015	Sep 18/2015	M-D				
45	Dec 11/2015	Dec 11/2015	M-D				

RECORD OF REVISIONS

32-12-22

Page 1
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

RECORD OF TEMPORARY REVISIONS

[illegible]

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
LIST OF SERVICE BULLETINS

SB NUMBER	SB TITLE	SB REVISION NUMBER	DATE INCORPORATED INTO MANUAL	COVER SB NO.
201-32-22	MLG - Installation of stub bolt subassembly for the forward pintle pin in place of the cross bolt.	Initial Issue	Aug 1/2000	A320-32-1213
		1	No effect	
201-32-24	MLG - To allow an increase in aircraft maximum take-off weight to 93 tonne.	Initial Issue	Aug 1/2000	-
201-32-29	MLG -To add tracking numbers to parts listed in Airbus Airworthiness Limitations Section (ALS).	Initial Issue	Apr 2/2007	-
		1	No effect	
201-32-31	MLG - Installation of a 201585 series MLG Leg and Dressings where a 201387 MLG Leg and Dressings has been installed.	Initial Issue	Apr 2/2007	-
201-32-39	MLG -To add tracking numbers to parts listed in Airbus Maintenance Planning Document, Section 9-1. (Torque link apex pin nut)	Initial Issue	Nov 1/2004	A320-32-1265
		1	No effect	
201-32-49	MLG - Introduction of a new lower bearing subassembly.	Initial Issue	Jan 1/2009	A320-32-1340
		1	No effect	
201-32-53	MLG - Introduction of new charging labels	Initial Issue	Apr 2/2012	-
201-32-54	MLG - Introduction of new 1M and 2M Axle harnesses	Initial Issue	Mar 28/2014	A320-32-1395
		1	No effect	
		2	No effect	
201-32-55	MLG - Introduction of new 1M and 2M Leg Harness and of new 1M and 2M Axle Harnesses	Initial Issue	Jan 1/2011	-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
LIST OF SERVICE BULLETINS (Continued)

SB NUMBER	SB TITLE	SB REVISION NUMBER	DATE INCORPORATED INTO MANUAL	COVER SB NO.
201-32-58	MLG Leg-Introduction of new retaining pins and a new lower bearing subassembly with a new self lubricating liner	Initial Issue	Oct 1/2011	A320-32-1374 A320-32-1386
201-32-59	MLG Leg - Introduction of new retaining pins for the lower bearing subassembly	Initial Issue	Dec 24/2013	-
201-32-60	MLG Leg - Introduction of a new lower bearing subassembly with a new low friction inner liner	Initial Issue	May 14/2014	A320-32-1414
201-32-62	MLG Leg - Barkhausen Noise Inspection of Main Landing Gear Sliding Tube Axles.	Initial Issue	No effect	-
201-32-65	MLG Leg - Introduction of a new Main Fitting	Initial Issue	Mar 20/2015	A320-32-1428
201-32-70	MLG Leg - Introduction of a new torque link damper unit	1	Dec 21/2018	A320-32-1446
201-32-72	MLG Leg - Introduction of a new main fitting subassembly and related parts	Initial Issue	Mar 20/2020	A320-32-1488
201-32-76	MLG - Introduction of a new upper pivot bracket	Initial Issue	Dec 4/2020	
201-32-77	MLG - Introduction of a new changeover valve stem and housing	Initial Issue	Dec 4/2020	-
201-32-80	MLG Complete - Modification of the transfer block subassembly	Initial Issue	Dec 4/2020	A320-32-1494 A320-32-1495

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
LIST OF SERVICE BULLETINS (Continued)

SB NUMBER	SB TITLE	SB REVISION NUMBER	DATE INCORPORATED INTO MANUAL	COVER SB NO.
201-32-78	MLG - Conversion of low - friction lower - bearing MLG to standard lower - bearing MLG	Initial Issue	Mar 19/2021	-
201-32-81	MLG complete - Introduction of a new transfer block subassembly	Initial Issue	Mar 19/2021	A321-32-1502 A321-32-1503

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

№ детали 201587001 и 201587002
РУКОВОДСТВО ПО ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ КОМПОНЕНТА
ОСНОВНАЯ СТОЙКА ШАССИ

ТАБЛИЦА ИДЕНТИФИКАЦИИ АГРЕГАТА

PART NUMBER	DASH NO.	SAFRAN LANDING SYSTEMS MODIFICATION NUMBER	SAFRAN LANDING SYSTEMS SERVICE BULLETIN NUMBER	MOD. STRIKE NO.
201587001	-	-	-	-
201587002	-			-
201587001	-	EDES2-0005-2542	-	-
201587002	-			-
201587001	-	EDES2-0005-2253	-	-
201587002	-			-
201587001	-	EDES2-0005-2255	-	-
201587002	-			-
201587001	010	(c)AC12221	201-32-22	-
201587002	010			-
201587001	010	EDES2-0005-2253	-	-
201587002	010			-
201587001	010	EDES2-0005-2255	-	-
201587002	010			-
201587001	020	(c)AC12454	201-32-29	-
201587002	020			-
201587001	020	EDES2-0005-2253	-	-
201587002	020			-
201587001	020	EDES2-0005-2255	-	-
201587002	020			-
201587001	030	(c)AC12492	201-32-39	-
201587002	030			-
201587001	030	(c)AC12636	201-32-49	-
201587002	030			-
201587001	030	MAF1-0005-2157	201-32-55	-
201587002	030			-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
UNIT IDENTIFICATION CHART (Continued)

PART NUMBER	DASH NO.	SAFRAN LANDING SYSTEMS MODIFICATION NUMBER	SAFRAN LANDING SYSTEMS SERVICE BULLETIN NUMBER	MOD. STRIKE NO.
201587001	030	MAF1-0005-2156	201-32-53	-
201587002	030			-
201587001	030	MAF1-0005-2155	201-32-54	-
201587002	030			-
201587001	030	MAF1-0005-2161	201-32-59	-
201587002	030			-
201587001	030	MAF1-0005-2164	201-32-60	-
201587002	030			-
201587001	030	MAF1-0005-2162	-	-
201587002	030			-
201587001	030	MAF1-0005-2180	201-32-65	-
201587002	030			-
201587001	030	MAF1-0005-2207	201-32-70	-
201587002	030			-
201587001	030	EDES2-0005-2253	-	-
201587002	030			-
201587001	030	EDES2-0005-2255	-	-
201587002	030			-
201587003	-	(c)AC12229	201-32-24	-
201587004	-			-
201587003	-	EDES2-0005-2542	-	-
201587004	-			-
201587003	-	EDES2-0005-2253	-	-
201587004	-			-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
UNIT IDENTIFICATION CHART (Continued)

PART NUMBER	DASH NO.	SAFRAN LANDING SYSTEMS MODIFICATION NUMBER	SAFRAN LANDING SYSTEMS SERVICE BULLETIN NUMBER	MOD. STRIKE NO.
201587003	-	EDES2-0005-2255	-	-
201587004	-			-
201587003	010	(c)AC12454	201-32-29	-
201587004	010			-
201587003	010	EDES2-0005-2253	-	-
201587004	010			-
201587003	010	EDES2-0005-2255	-	-
201587004	010			-
201587003	020	(c)AC12492	201-32-39	-
201587004	020			-
201587003	020	EDES2-0005-2253	-	-
201587004	020			-
201587003	020	EDES2-0005-2255	-	-
201587004	020			-
201587003	030	(c)AC12636	201-32-49	-
201587004	030			-
201587003	030	MAF1-0005-2155	201-32-54	-
201587004	030			-
201587003	030	EDES2-0005-2253	-	-
201587004	030			-
201587003	030	EDES2-0005-2255	-	-
201587004	030			-
201587003	040	MAF1-0005-2157	201-32-55	-
201587004	040			-
201587003	040	MAF1-0005-2160	201-32-58	-
201587004	040			-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
UNIT IDENTIFICATION CHART (Continued)

PART NUMBER	DASH NO.	SAFRAN LANDING SYSTEMS MODIFICATION NUMBER	SAFRAN LANDING SYSTEMS SERVICE BULLETIN NUMBER	MOD. STRIKE NO.
201587003	040	EDES2-0005-2253	-	-
201587004	040			-
201587003	040	EDES2-0005-2255	-	-
201587004	040			-
201587003	050	MAF1-0005-2156	201-32-53	-
201587004	050			-
201587003	050	EDES2-0005-2253	-	-
201587004	050			-
201587003	050	EDES2-0005-2255	-	-
201587004	050			-
201587003	060	MAF1-0005-2161	201-32-59	-
201587004	060			-
201587003	060	EDES2-0005-2253	-	-
201587004	060			-
201587003	060	EDES2-0005-2255	-	-
201587004	060			-
201587003	070	MAF1-0005-2162	-	-
201587004	070			-
201587003	070	EDES2-0005-2253	-	-
201587004	070			-
201587003	070	EDES2-0005-2255	-	-
201587004	070			-
201587003	080	MAF1-0005-2180	201-32-65	-
201587004	080			-
201587003	080	MAF1-0005-2207	201-32-70	-
201587004	080			-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
UNIT IDENTIFICATION CHART (Continued)

PART NUMBER	DASH NO.	SAFRAN LANDING SYSTEMS MODIFICATION NUMBER	SAFRAN LANDING SYSTEMS SERVICE BULLETIN NUMBER	MOD. STRIKE NO.
201587003	080	EDES2-0005-2253	-	-
201587004	080			-
201587003	080	EDES2-0005-2255	-	-
201587004	080			-
201587005	-	(c)AC12332	201-32-31	-
201587006	-			-
201587005	-	EDES2-0005-2253	-	-
201587006	-			-
201587005	-	EDES2-0005-2255	-	-
201587006	-			-
201587005	010	(c)AC12454	201-32-29	-
201587006	010			-
201587005	010	EDES2-0005-2253	-	-
201587006	010			-
201587005	010	EDES2-0005-2255	-	-
201587006	010			-
201587005	020	(c)AC12492	201-32-39	-
201587006	020			-
201587005	020	(c)AC12636	201-32-49	-
201587006	020			-
201587005	020	MAF1-0005-2157	201-32-55	-
201587006	020			-
201587005	020	MAF1-0005-2156	201-32-53	-
201587006	020			-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
UNIT IDENTIFICATION CHART (Continued)

PART NUMBER	DASH NO.	SAFRAN LANDING SYSTEMS MODIFICATION NUMBER	SAFRAN LANDING SYSTEMS SERVICE BULLETIN NUMBER	MOD. STRIKE NO.
201587005	020	MAF1-0005-2155	201-32-54	-
201587006	020			-
201587005	020	MAF1-0005-2161	201-32-59	-
201587006	020			-
201587005	020	MAF1-0005-2164	201-32-60	-
201587006	020			-
201587005	020	MAF1-0005-2162	-	-
201587006	020			-
201587005	020	MAF1-0005-2180	201-32-65	-
201587006	020			-
201587005	020	MAF1-0005-2207	201-32-70	-
201587006	020			-
201587005	020	EDES2-0005-2253	-	-
201587006	020			-
201587005	020	EDES2-0005-2255	-	-
201587006	020			-
201587007	-	MAF1-0005-2160	201-32-58	-
201587008	-			-
201587007	-	EDES2-0005-2542	-	-
201587008	-			-
201587007	-	EDES2-0005-2253	-	-
201587008	-			-
201587007	-	EDES2-0005-2255	-	-
201587008	-			-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
UNIT IDENTIFICATION CHART (Continued)

PART NUMBER	DASH NO.	SAFRAN LANDING SYSTEMS MODIFICATION NUMBER	SAFRAN LANDING SYSTEMS SERVICE BULLETIN NUMBER	MOD. STRIKE NO.
201587007	010	MAF1-0005-2156	201-32-53	-
201587008	010			-
201587007	010	EDES2-0005-2253	-	-
201587008	010			-
201587007	010	EDES2-0005-2255	-	-
201587008	010			-
201587007	020	MAF1-0005-2162	-	-
201587008	020			-
201587007	020	MAF1-0005-2180	201-32-65	-
201587008	020			-
201587007	020	MAF1-0005-2207	201-32-70	-
201587008	020			-
201587007	020	EDES2-0005-2253	-	-
201587008	020			-
201587007	020	EDES2-0005-2255	-	-
201587008	020			-
201587007	030	EDES2-0005-2253	-	-
201587008	030			-
201587007	030	EDES2-0005-2255	-	-
201587008	030			-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES

Subject	Page	Date	Subject	Page	Date
Title Page	1	Sep 16/2016	List of Effective	13	Mar 18/2025
	2	Blank	Pages (Continued)	14	Mar 18/2025
				15	Mar 18/2025
Record of Revisions	1	Mar 18/2025		16	Mar 18/2025
	2	Blank			
			Table of Contents	1	Mar 18/2025
Record of Temporary	1	Dec 6/2019		2	Mar 18/2025
Revisions	2	Blank		3	Mar 18/2025
				4	Mar 18/2025
List of Service Bulletins	1	Dec 6/2019		5	Mar 18/2025
	2	Dec 4/2020		6	Mar 18/2025
	3	Mar 19/2021		7	Mar 18/2025
	4	Blank		8	Mar 18/2025
				9	Mar 18/2025
Unit Identification	1	Mar 18/2025		10	Mar 18/2025
Chart	2	Mar 18/2025		11	Mar 18/2025
	3	Mar 18/2025		12	Mar 18/2025
	4	Mar 18/2025		13	Mar 18/2025
	5	Mar 18/2025		14	Blank
	6	Mar 18/2025			
	7	Mar 18/2025	Introduction	1	Mar 18/2022
	8	Blank		2	Blank
List of Effective	1	Mar 18/2025	Description and	1	Dec 6/2019
Pages	2	Mar 18/2025	Operation	2	Dec 6/2019
	3	Mar 18/2025		3	Dec 6/2019
	4	Mar 18/2025		4	Dec 6/2019
	5	Mar 18/2025			
	6	Mar 18/2025	Testing and Fault	101	Dec 6/2019
	7	Mar 18/2025	Isolation	102	Dec 6/2019
	8	Mar 18/2025		103	Dec 6/2019
	9	Mar 18/2025		104	Dec 6/2019
	10	Mar 18/2025		105	Dec 6/2019
	11	Mar 18/2025		106	Dec 6/2019
	12	Mar 18/2025		107	Dec 6/2019

LIST OF EFFECTIVE PAGES

32-12-22

Page 1
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Testing and Fault	108	Dec 6/2019	Check	512	Mar 18/2025
Isolation (Continued)	109	Dec 6/2019	(Continued)	513	Mar 18/2025
	110	Blank		514	Blank
Disassembly	301	Dec 6/2019	Repair	601	Dec 6/2019
	302	Mar 15/2024		602	Dec 6/2019
	303	Mar 15/2024		603	Mar 19/2021
	304	Mar 20/2020		604	Mar 15/2024
	305	Mar 20/2020		605	Mar 15/2024
	306	Mar 20/2020		606	Mar 18/2025
	307	Mar 19/2021		607	Mar 18/2025
	308	Mar 19/2021		608	Mar 18/2025
	309	Mar 20/2020		609	Mar 18/2025
	310	Mar 20/2020		610	Mar 18/2025
	311	Mar 20/2020		611	Mar 18/2025
	312	Mar 20/2020		612	Mar 18/2025
	313	Mar 15/2024		613	Mar 18/2025
	314	Mar 18/2025		614	Mar 18/2025
	315	Mar 18/2025		615	Mar 18/2025
	316	Mar 18/2025		616	Mar 18/2025
				617	Mar 18/2025
Cleaning	401	Dec 6/2019		618	Mar 18/2025
	402	Blank		619	Mar 18/2025
				620	Mar 18/2025
Check	501	Sep 18/2020		621	Mar 18/2025
	502	Mar 18/2022		622	Mar 18/2025
	503	Mar 19/2021		623	Mar 18/2025
	504	Mar 18/2025		624	Mar 18/2025
	505	Mar 19/2021		625	Mar 18/2025
	506	Mar 19/2021		626	Mar 18/2025
	507	Mar 18/2025		627	Mar 18/2025
	508	Mar 18/2025		628	Mar 18/2025
	509	Mar 18/2025		629	Mar 18/2025
	510	Mar 18/2025		630	Mar 18/2025
	511	Mar 18/2025		631	Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEGLIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Repair (Continued)	632	Mar 18/2025	Repair (Continued)	667	Mar 18/2025
	633	Mar 18/2025		668	Mar 18/2025
	634	Mar 18/2025		669	Mar 18/2025
	635	Mar 18/2025		670	Mar 18/2025
	636	Mar 18/2025		671	Mar 18/2025
	637	Mar 18/2025		672	Mar 18/2025
	638	Mar 18/2025		673	Mar 18/2025
	639	Mar 18/2025		674	Mar 18/2025
	640	Mar 18/2025		675	Mar 18/2025
	641	Mar 18/2025		676	Mar 18/2025
	642	Mar 18/2025		677	Mar 18/2025
	643	Mar 18/2025		678	Mar 18/2025
	644	Mar 18/2025		679	Mar 18/2025
	645	Mar 18/2025		680	Mar 18/2025
	646	Mar 18/2025		681	Mar 18/2025
	647	Mar 18/2025		682	Mar 18/2025
	648	Mar 18/2025		683	Mar 18/2025
	649	Mar 18/2025		684	Mar 18/2025
	650	Mar 18/2025		685	Mar 18/2025
	651	Mar 18/2025		686	Mar 18/2025
	652	Mar 18/2025		687	Mar 18/2025
	653	Mar 18/2025		688	Mar 18/2025
	654	Mar 18/2025		689	Mar 18/2025
	655	Mar 18/2025		690	Mar 18/2025
	656	Mar 18/2025		691	Mar 18/2025
	657	Mar 18/2025		692	Mar 18/2025
	658	Mar 18/2025		693	Mar 18/2025
	659	Mar 18/2025		694	Mar 18/2025
	660	Mar 18/2025		695	Mar 18/2025
	661	Mar 18/2025		696	Mar 18/2025
	662	Mar 18/2025		697	Mar 18/2025
	663	Mar 18/2025		698	Mar 18/2025
	664	Mar 18/2025		698.1	Mar 18/2025
	665	Mar 18/2025		698.2	Mar 18/2025
	666	Mar 18/2025			

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Repair No. 1-1	601	Dec 6/2019	Repair No. 6-3	602	Dec 6/2019
	602	Dec 6/2019	(Continued)	603	Dec 6/2019
	603	Dec 6/2019		604	Blank
	604	Dec 6/2019			
			Repair No. 7-1	601	Dec 6/2019
Repair No. 1-2	601	Dec 6/2019		602	Dec 6/2019
	602	Dec 6/2019		603	Dec 6/2019
	603	Dec 6/2019		604	Blank
	604	Dec 6/2019			
			Repair No. 7-2	601	Dec 6/2019
Repair No. 2-1	601	Dec 6/2019		602	Dec 6/2019
	602	Dec 6/2019		603	Dec 6/2019
				604	Blank
Repair No. 3-1	601	May 31/2019			
	602	May 31/2019	Repair No. 8-1	601	Dec 6/2019
	603	Dec 8/2017		602	Dec 6/2019
	604	Blank		603	Dec 6/2019
				604	Blank
Repair No. 4-1	601	Dec 6/2019			
	602	Dec 6/2019	Repair No. 8-2	601	Dec 6/2019
				602	Dec 6/2019
Repair No. 5-1	601	Dec 9/2016		603	Dec 6/2019
	602	Dec 9/2016		604	Blank
Repair No. 6-1	601	Dec 6/2019	Repair No. 9-1	601	Mar 18/2025
	602	Dec 6/2019		602	Mar 18/2025
	603	Dec 6/2019		603	Dec 6/2019
	604	Blank		604	Dec 6/2019
Repair No. 6-2	601	Dec 6/2019	Repair No. 9-2	601	Mar 18/2025
	602	Dec 6/2019		602	Mar 18/2025
	603	Dec 6/2019		603	Mar 18/2025
	604	Blank		604	Dec 9/2016
Repair No. 6-3	601	Dec 6/2019	Repair No. 9-3	601	Dec 6/2019

LIST OF EFFECTIVE PAGES

32-12-22

Page 4
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Repair No. 9-3	602	Blank	Repair No. 9-10	603	Mar 18/2025
(Continued)			(Continued)	604	Mar 18/2025
				605	Mar 18/2025
Repair No. 9-4	601	Mar 18/2025		606	Mar 18/2025
	602	Mar 18/2025		607	Mar 18/2025
	603	Aug 11/2023		608	Blank
	604	Aug 11/2023	Repair No. 9-11	601	Mar 18/2025
Repair No. 9-5	601	Mar 18/2025		602	Mar 18/2025
	602	Dec 6/2019		603	Dec 6/2019
				604	Aug 11/2023
Repair No. 9-6	601	Mar 18/2025		605	Mar 18/2025
	602	Mar 18/2025		606	Blank
	603	Dec 6/2019			
	604	Blank	Repair No. 10-1	601	Dec 6/2019
				602	Dec 6/2019
Repair No. 9-7	601	Mar 18/2025		603	Dec 6/2019
	602	Mar 18/2025		604	Blank
	603	Dec 6/2019			
	604	Dec 6/2019	Repair No. 11-1	601	Mar 18/2025
				602	Mar 18/2025
Repair No. 9-8	601	Mar 18/2025		603	Dec 6/2019
	602	Mar 18/2025		604	Dec 6/2019
	603	Mar 18/2025			
	604	Aug 11/2023	Repair No. 11-2	601	Mar 18/2025
	605	Mar 18/2025		602	Mar 18/2025
	606	Blank		603	Dec 6/2019
				604	Dec 6/2019
Repair No. 9-9	601	Mar 18/2025			
	602	Mar 18/2025	Repair No. 11-3	601	Mar 18/2025
	603	Dec 6/2019		602	Mar 18/2025
	604	Dec 6/2019		603	Mar 18/2025
				604	Dec 6/2019
Repair No. 9-10	601	Mar 18/2025		605	Dec 6/2019
	602	Mar 18/2025		606	Dec 6/2019

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Repair No. 11-4	601	Mar 18/2025	Repair No. 11-10	602	Blank
	602	Mar 18/2025	(Continued)		
	603	Dec 6/2019			
	604	Dec 6/2019	Repair No. 11-11	601	Mar 18/2025
Repair No. 11-5				602	Mar 18/2025
	601	Mar 18/2025		603	Dec 6/2019
	602	Mar 18/2025		604	Dec 6/2019
	603	Dec 6/2019			
Repair No. 11-6	604	Dec 6/2019	Repair No. 11-12	601	Mar 18/2025
				602	Mar 18/2025
	601	Mar 18/2025		603	Dec 6/2019
	602	Mar 18/2025		604	Dec 6/2019
Repair No. 11-7	603	Dec 6/2019			
	604	Dec 6/2019	Repair No. 11-13	601	Mar 18/2025
				602	Mar 18/2025
	601	Mar 18/2025		603	Mar 18/2025
Repair No. 11-8	602	Mar 18/2025		604	Dec 8/2017
	603	Dec 6/2019		605	Dec 8/2017
	604	Dec 6/2019		606	Blank
	605	Dec 6/2019			
	606	Blank	Repair No. 11-14	601	Mar 18/2025
				602	Mar 18/2025
Repair No. 11-9				603	Dec 6/2019
	601	Mar 18/2025		604	Blank
	602	Mar 18/2025			
	603	Mar 18/2025	Repair No. 11-15	601	Dec 4/2020
Repair No. 11-10	604	Dec 6/2019		602	Dec 6/2019
	605	Dec 6/2019		603	Dec 6/2019
	606	Dec 6/2019		604	Dec 6/2019
				605	Dec 6/2019
				606	Blank
			Repair No. 11-16	601	Dec 4/2020
				602	Dec 6/2019

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Repair No. 11-17	601	Mar 18/2025	Repair No. 11-25	601	Mar 18/2025
	602	May 31/2019		602	Mar 18/2025
				603	Dec 6/2019
Repair No. 11-18	601	Mar 18/2025		604	Blank
	602	Mar 18/2025	Repair No. 11-26	601	Dec 4/2020
	603	Dec 6/2019		602	Mar 15/2024
	604	Dec 6/2019		603	Mar 15/2024
Repair No. 11-19	601	Mar 18/2025		604	Dec 6/2019
	602	Mar 18/2025		605	Mar 15/2024
	603	Dec 6/2019		606	Mar 15/2024
	604	Dec 6/2019			
Repair No. 11-20	601	Mar 18/2025	Repair No. 11-27	601	Mar 18/2025
	602	Blank		602	Mar 18/2025
				603	Mar 24/2017
				604	Mar 24/2017
Repair No. 11-21	601	Mar 18/2025	Repair No. 11-28	601	Mar 18/2025
	602	Dec 6/2019		602	Mar 18/2025
	603	Dec 6/2019		603	Dec 6/2019
	604	Dec 6/2019		604	Dec 6/2019
Repair No. 11-22	601	Mar 18/2025		605	Dec 6/2019
	602	Mar 24/2017		606	Dec 6/2019
Repair No. 11-23	601	Mar 18/2025	Repair No. 11-29	601	Dec 23/2022
	602	Mar 18/2025		602	Dec 23/2022
	603	Dec 6/2019		603	Dec 6/2019
	604	Dec 6/2019		604	Dec 23/2022
	605	Dec 6/2019		605	Dec 23/2022
	606	Blank		606	Dec 23/2022
Repair No. 11-24	601	Mar 18/2025		607	Dec 23/2022
	602	Mar 18/2025		608	Dec 9/2022
	603	Dec 6/2019	Repair No. 11-30	601	Dec 4/2020
	604	Dec 6/2019		602	Dec 6/2019

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Repair No. 11-30	603	Dec 6/2019	Repair No. 11-35	603	Mar 18/2025
(Continued)	604	Dec 6/2019	(Continued)	604	Mar 18/2025
	605	Dec 6/2019		605	Mar 18/2025
	606	Dec 6/2019		606	Blank
	607	Dec 6/2019			
	608	Dec 6/2019	Repair No. 11-36	601	Mar 18/2025
				602	Mar 18/2025
Repair No. 11-31	601	Mar 18/2025		603	Mar 18/2025
	602	Mar 18/2025		604	Mar 18/2025
	603	Mar 18/2025			
	604	Mar 18/2025	Repair No. 11-37	601	Mar 18/2025
				602	Mar 18/2025
Repair No. 11-32	601	Mar 18/2025		603	Mar 18/2025
	602	Mar 18/2025		604	Mar 18/2025
	603	Mar 18/2025		605	Mar 18/2025
	604	Mar 18/2025		606	Mar 18/2025
	605	Mar 18/2025			
	606	Mar 18/2025	Repair No. 12-1	601	Dec 6/2019
				602	Dec 6/2019
Repair No. 11-33	601	Mar 18/2025		603	Dec 6/2019
	602	Mar 18/2025		604	Dec 6/2019
	603	Mar 18/2025			
	604	Mar 18/2025	Repair No. 12-2	601	Dec 6/2019
	605	Mar 18/2025		602	Dec 6/2019
	606	Mar 18/2025		603	Dec 6/2019
				604	Dec 6/2019
Repair No. 11-34	601	Mar 18/2025		605	Dec 6/2019
	602	Mar 18/2025		606	Dec 6/2019
	603	Mar 18/2025			
	604	Mar 18/2025	Repair No. 12-3	601	Dec 6/2019
	605	Mar 18/2025		602	Dec 6/2019
	606	Blank		603	Dec 6/2019
				604	Dec 6/2019
Repair No. 11-35	601	Mar 18/2025			
	602	Mar 18/2025			

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Repair No. 12-4	601	Dec 6/2019	Repair No. 14-3	602	Dec 6/2019
	602	Dec 6/2019	(Continued)	603	Dec 6/2019
	603	Dec 6/2019		604	Dec 6/2019
	604	Dec 6/2019		605	Dec 6/2019
				606	Blank
Repair No. 12-5	601	Dec 6/2019	Repair No. 14-4	601	Mar 18/2025
	602	Dec 6/2019		602	Mar 18/2025
	603	Dec 6/2019		603	Mar 18/2025
	604	Dec 6/2019		604	Mar 18/2025
Repair No. 13-1	601	Dec 6/2019		605	Mar 18/2025
	602	Dec 6/2019		606	Mar 18/2025
	603	Dec 6/2019	Repair No. 15-1	601	Dec 6/2019
	604	Dec 6/2019		602	Dec 6/2019
	605	Dec 6/2019		603	Dec 6/2019
	606	Dec 9/2022		604	Dec 6/2019
Repair No. 13-2	601	Dec 6/2019	Repair No. 15-2	601	Dec 6/2019
	602	Dec 6/2019		602	Dec 6/2019
	603	Dec 6/2019		603	Dec 6/2019
	604	Dec 6/2019		604	Dec 6/2019
Repair No. 14-1	601	May 31/2019	Repair No. 16-1	601	Dec 6/2019
	602	Jun 23/2017		602	Mar 20/2020
	603	Jun 23/2017		603	Dec 6/2019
	604	Jun 23/2017		604	Mar 20/2020
Repair No. 14-2	601	May 31/2019	Repair No. 17-1	601	Mar 18/2025
	602	May 31/2019		602	Mar 18/2025
	603	May 31/2019		603	Dec 6/2019
	604	May 31/2019		604	Blank
Repair No. 14-3	601	Dec 6/2019			

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Repair No. 18-1	601	Dec 6/2019	Repair No. 19-1	602	May 31/2019
	602	Dec 6/2019	(Continued)	603	May 31/2019
				604	May 31/2019
Repair No. 18-2	601	Dec 6/2019		605	May 31/2019
	602	Dec 6/2019		606	Blank
	603	Dec 6/2019			
	604	Dec 6/2019	Repair No. 19-2	601	Dec 6/2019
				602	Dec 6/2019
Repair No. 18-3	601	Dec 6/2019		603	Dec 6/2019
	602	Blank		604	Dec 6/2019
Repair No. 18-4	601	Dec 6/2019	Repair No. 20-1	601	Dec 6/2019
	602	Dec 6/2019		602	Dec 6/2019
				603	Dec 6/2019
Repair No. 18-5	601	Dec 6/2019		604	Blank
	602	Dec 6/2019			
	603	Dec 6/2019	Repair No. 21-1	601	Mar 18/2025
	604	Blank		602	Dec 6/2019
				603	Dec 6/2019
Repair No. 18-6	601	Dec 6/2019		604	Dec 6/2019
	602	Dec 6/2019			
	603	Dec 6/2019	Repair No. 21-2	601	Mar 18/2025
	604	Blank		602	Mar 20/2020
				603	Mar 20/2020
Repair No. 18-7	601	Dec 6/2019		604	Dec 6/2019
	602	Dec 6/2019			
			Repair No. 21-3	601	Mar 18/2025
Repair No. 18-8	601	Mar 18/2025		602	Sep 16/2016
	602	Mar 18/2025		603	Sep 16/2016
	603	Mar 18/2025		604	Sep 16/2016
	604	Mar 18/2025			
			Repair No. 21-4	601	Mar 18/2025
Repair No. 19-1	601	May 31/2019		602	Dec 6/2019
				603	Dec 6/2019
				604	Dec 6/2019

LIST OF EFFECTIVE PAGES

32-12-22

Page 10
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Repair No. 21-5	601	Mar 18/2025	Repair No. 25-2	604	Blank
	602	Dec 6/2019	(Continued)		
	603	Dec 6/2019			
	604	Dec 6/2019	Repair No. 26-1	601	Dec 6/2019
Repair No. 21-6				602	Dec 6/2019
	601	Mar 18/2025		603	Dec 6/2019
	602	Dec 6/2019		604	Dec 6/2019
	603	Dec 6/2019			
	604	Dec 6/2019	Assembly (Including Storage)	701	Mar 18/2025
Repair No. 22-1				702	Mar 18/2025
	601	Dec 6/2019		703	Mar 20/2020
	602	Dec 6/2019		704	Mar 18/2025
				705	Mar 18/2025
Repair No. 23-1				706	Mar 18/2025
	601	Dec 9/2016		707	Mar 18/2025
	602	Dec 9/2016		708	Mar 18/2025
	603	Dec 9/2016		709	Mar 18/2025
	604	Blank		710	Mar 15/2024
Repair No. 23-2	601	Dec 6/2019		711	Mar 20/2020
	602	Dec 6/2019		712	Mar 20/2020
	603	Dec 6/2019		713	Mar 20/2020
	604	Dec 6/2019		714	Sep 17/2021
Repair No. 24-1				715	Sep 17/2021
	601	Dec 6/2019		716	Sep 17/2021
	602	Dec 6/2019		717	Sep 17/2021
	603	Dec 6/2019		718	Sep 17/2021
	604	Dec 6/2019		719	Sep 17/2021
Repair No. 25-1				720	Mar 15/2024
	601	Dec 6/2019		721	Mar 15/2024
	602	Dec 6/2019		722	Sep 17/2021
	603	Dec 6/2019		723	Sep 17/2021
	604	Blank		724	Sep 17/2021
Repair No. 25-2				725	Sep 17/2021
	601	Dec 6/2019		726	Sep 17/2021
	602	Dec 6/2019		727	Sep 17/2021
	603	Dec 6/2019			

LIST OF EFFECTIVE PAGES

32-12-22

Page 11
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Assembly (Including	728	Sep 17/2021	Assembly (Including	763	Mar 18/2025
Storage) (Continued)	729	Mar 18/2025	Storage) (Continued)	764	Mar 18/2025
	730	Mar 18/2025		765	Mar 18/2025
	731	Mar 18/2025		766	Mar 18/2025
	732	Mar 18/2025		767	Mar 18/2025
	733	Mar 18/2025		768	Mar 18/2025
	734	Mar 18/2025		769	Mar 18/2025
	735	Mar 18/2025		770	Mar 18/2025
	736	Mar 18/2025		771	Mar 18/2025
	737	Mar 18/2025		772	Mar 18/2025
	738	Mar 18/2025		773	Mar 18/2025
	739	Mar 18/2025		774	Mar 18/2025
	740	Mar 18/2025		775	Mar 18/2025
	741	Mar 18/2025		776	Mar 18/2025
	742	Mar 18/2025		777	Mar 18/2025
	743	Mar 18/2025		778	Mar 18/2025
	744	Mar 18/2025		779	Mar 18/2025
	745	Mar 18/2025		780	Mar 18/2025
	746	Mar 18/2025		781	Mar 18/2025
	747	Mar 18/2025		782	Mar 18/2025
	748	Mar 18/2025		783	Mar 18/2025
	749	Mar 18/2025		784	Mar 18/2025
	750	Mar 18/2025		785	Mar 18/2025
	751	Mar 18/2025		786	Mar 18/2025
	752	Mar 18/2025		787	Mar 18/2025
	753	Mar 18/2025		788	Mar 18/2025
	754	Mar 18/2025		789	Mar 18/2025
	755	Mar 18/2025		790	Mar 18/2025
	756	Mar 18/2025		791	Mar 18/2025
	757	Mar 18/2025		792	Mar 18/2025
	758	Mar 18/2025		793	Mar 18/2025
	759	Mar 18/2025		794	Mar 18/2025
	760	Mar 18/2025		795	Mar 18/2025
	761	Mar 18/2025		796	Mar 18/2025
	762	Mar 18/2025		797	Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Assembly (Including	798	Mar 18/2025	Fits and Clearances	822	Dec 6/2019
Storage) (Continued)	798.1	Mar 18/2025	(Continued)	823	Dec 6/2019
	798.2	Mar 18/2025		824	Dec 6/2019
	798.3	Mar 18/2025		825	Dec 6/2019
	798.4	Mar 18/2025		826	Dec 6/2019
	798.5	Mar 18/2025		827	Dec 6/2019
	798.6	Mar 18/2025		828	Dec 6/2019
	798.7	Mar 18/2025		829	Dec 6/2019
	798.8	Mar 18/2025		830	Dec 6/2019
	798.9	Mar 18/2025		831	Dec 6/2019
	798.10	Mar 18/2025		832	Dec 6/2019
	798.11	Mar 18/2025		833	Dec 6/2019
	798.12	Mar 18/2025		834	Dec 6/2019
				835	Dec 6/2019
Fits and Clearances	801	Dec 6/2019		836	Mar 18/2025
	802	Dec 6/2019		837	Mar 18/2025
	803	Dec 6/2019		838	Mar 18/2025
	804	Dec 6/2019		839	Mar 18/2025
	805	Dec 6/2019		840	Mar 18/2025
	806	Dec 6/2019		841	Mar 18/2025
	807	Dec 6/2019		842	Mar 18/2025
	808	Dec 6/2019		843	Mar 18/2025
	809	Dec 6/2019		844	Mar 18/2025
	810	Dec 6/2019		845	Mar 18/2025
	811	Dec 6/2019		846	Mar 18/2025
	812	Dec 6/2019		847	Mar 18/2025
	813	Dec 6/2019		848	Mar 18/2025
	814	Dec 6/2019		849	Mar 18/2025
	815	Dec 6/2019		850	Mar 18/2025
	816	Dec 6/2019		851	Mar 18/2025
	817	Dec 6/2019		852	Mar 18/2025
	818	Dec 6/2019		853	Mar 18/2025
	819	Dec 6/2019		854	Mar 18/2025
	820	Dec 6/2019		855	Mar 18/2025
	821	Dec 6/2019		856	Mar 18/2025

LIST OF EFFECTIVE PAGES

32-12-22

Page 13
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Fits and Clearances	857	Mar 18/2025	Illustrated Parts List	1010	Mar 19/2021
(Continued)	858	Mar 18/2025	(Continued)	1011	Mar 19/2021
	859	Mar 18/2025		1012	Mar 19/2021
	860	Mar 18/2025		1013	Dec 4/2020
	861	Mar 18/2025		1014	Mar 19/2021
	862	Mar 18/2025		1015	Mar 19/2021
	863	Mar 18/2025		1016	Mar 19/2021
	864	Mar 18/2025		1017	Mar 19/2021
	865	Mar 18/2025		1018	Mar 19/2021
	866	Mar 18/2025		1019	Mar 19/2021
	867	Mar 18/2025		1020	Mar 18/2025
	868	Mar 18/2025		1021	Mar 18/2025
	869	Mar 18/2025		1022	Mar 18/2025
	870	Mar 18/2025		1023	Mar 18/2025
	871	Mar 18/2025		1024	Mar 18/2025
	872	Mar 18/2025		1025	Mar 18/2025
				1026	Mar 18/2025
Special Tools, Fixtures	901	Mar 18/2025		1027	Mar 18/2025
and Equipment	902	Mar 18/2025		1028	Mar 18/2025
	903	Mar 18/2025		1029	Mar 18/2025
	904	Mar 18/2025		1030	Mar 18/2025
	905	Mar 18/2025		1031	Mar 18/2025
	906	Mar 18/2025		1032	Mar 18/2025
	907	Mar 20/2020		1033	Mar 18/2025
	908	Blank		1034	Mar 18/2025
				1035	Mar 18/2025
Illustrated Parts List	1001	Dec 9/2016		1036	Mar 18/2025
	1002	Dec 9/2016		1037	Blank
	1003	Dec 6/2019		1038	Mar 18/2025
	1004	Dec 6/2019		1039	Mar 18/2025
	1005	Dec 6/2019		1040	Mar 18/2025
	1006	May 31/2019		1041	Mar 18/2025
	1007	Mar 20/2020		1042	Mar 18/2025
	1008	Mar 19/2021		1043	Blank
	1009	Mar 19/2021		1044	Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEGLIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date	Subject	Page	Date
Illustrated Parts List	1045	Mar 18/2025	Illustrated Parts List	1080	Mar 18/2025
(Continued)	1046	Mar 18/2025	(Continued)	1081	Mar 18/2025
	1047	Blank		1082	Mar 18/2025
	1048	Mar 18/2025		1083	Mar 18/2025
	1049	Mar 18/2025		1084	Mar 18/2025
	1050	Mar 18/2025		1085	Mar 18/2025
	1051	Mar 18/2025		1086	Mar 18/2025
	1052	Mar 18/2025		1087	Mar 18/2025
	1053	Blank		1088	Mar 18/2025
	1054	Mar 18/2025		1089	Blank
	1055	Mar 18/2025		1090	Mar 18/2025
	1056	Mar 18/2025		1091	Mar 18/2025
	1057	Mar 18/2025		1092	Mar 18/2025
	1058	Mar 18/2025		1093	Mar 18/2025
	1059	Mar 18/2025		1094	Mar 18/2025
	1060	Mar 18/2025		1095	Mar 18/2025
	1061	Mar 18/2025		1096	Mar 18/2025
	1062	Mar 18/2025		1097	Blank
	1063	Mar 18/2025		1098	Mar 18/2025
	1064	Mar 18/2025		1098.1	Mar 18/2025
	1065	Mar 18/2025		1098.2	Mar 18/2025
	1066	Mar 18/2025		1098.3	Mar 18/2025
	1067	Mar 18/2025		1098.4	Mar 18/2025
	1068	Mar 18/2025		1098.5	Mar 18/2025
	1069	Blank		1098.6	Mar 18/2025
	1070	Mar 18/2025		1098.7	Mar 18/2025
	1071	Mar 18/2025		1098.8	Mar 18/2025
	1072	Mar 18/2025		1098.9	Mar 18/2025
	1073	Blank		1098.10	Mar 18/2025
	1074	Mar 18/2025		1098.11	Mar 18/2025
	1075	Mar 18/2025		1098.12	Mar 18/2025
	1076	Mar 18/2025		1098.13	Mar 18/2025
	1077	Mar 18/2025		1098.14	Mar 18/2025
	1078	Mar 18/2025		1098.15	Mar 18/2025
	1079	Mar 18/2025		1098.16	Mar 18/2025

LIST OF EFFECTIVE PAGES

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

LIST OF EFFECTIVE PAGES (Continued)

Subject	Page	Date
Illustrated Parts List	1098.17	Mar 18/2025
(Continued)	1098.18	Mar 18/2025
	1098.19	Mar 18/2025
	1098.20	Mar 18/2025
	1098.21	Mar 18/2025
	1098.22	Mar 18/2025
	1098.23	Mar 18/2025
	1098.24	Mar 18/2025
	1098.25	Mar 18/2025
	1098.26	Mar 18/2025
	1098.27	Mar 18/2025
	1098.28	Mar 18/2025
	1098.29	Mar 18/2025
	1098.30	Mar 18/2025
	1098.31	Mar 18/2025
	1098.32	Mar 18/2025
	1098.33	Mar 18/2025
	1098.34	Mar 18/2025
	1098.35	Mar 18/2025
	1098.36	Mar 18/2025
	1098.37	Blank
	1098.38	Mar 18/2025
	1098.39	Mar 18/2025
	1098.40	Mar 18/2025
	1098.41	Blank
	1098.42	Mar 18/2025
	1098.43	Mar 18/2025
	1098.44	Mar 18/2025
	1098.45	Mar 18/2025
	1098.46	Mar 18/2025
	1098.47	Mar 18/2025
	1098.48	Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
TABLE OF CONTENTS

	<u>Page</u>
Description and Operation	1
General	1
Description	1
Operation	1
Data	2
Testing and Fault Isolation	101
Equipment and Materials	101
Test Conditions	102
Procedure	102
Fault Isolation	109
Disassembly	301
General	301
Procedure	307
Cleaning	401
General	401
Procedure	401
Check	501
General	501
Detailed Inspection	501
Special Detailed Inspection	501
Repair	601
General	601
Repair Procedure Conditions	602
Protective Treatment	602
Approved Repairs	689
Repair No. 1-1 Lower Bearing Subassembly	Repair No. 1-1 601
Repair No. 1-2 Lower Bearing Subassembly	Repair No. 1-2 601
Repair No. 2-1 Pin	Repair No. 2-1 601
Repair No. 3-1 Pivot Pin	Repair No. 3-1 601
Repair No. 4-1 Uplock Pin	Repair No. 4-1 601
Repair No. 5-1 Pin	Repair No. 5-1 601
Repair No. 6-1 Pin	Repair No. 6-1 601
Repair No. 6-2 Pin	Repair No. 6-2 601
Repair No. 6-3 Pin	Repair No. 6-3 601
Repair No. 7-1 Pin	Repair No. 7-1 601
Repair No. 7-2 Pin	Repair No. 7-2 601
Repair No. 8-1 Bracket	Repair No. 8-1 601
Repair No. 8-2 Bracket	Repair No. 8-2 601
Repair No. 9-1 Sliding Tube	Repair No. 9-1 601
Repair No. 9-2 Sliding Tube	Repair No. 9-2 601
Repair No. 9-3 Sliding Tube (Superseded)	Repair No. 9-3 601
Repair No. 9-4 Sliding Tube	Repair No. 9-4 601
Repair No. 9-5 Sliding Tube	Repair No. 9-5 601

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
TABLE OF CONTENTS (Continued)

	<u>Page</u>
Repair No. 9-6 Sliding Tube	Repair No. 9-6 601
Repair No. 9-7 Sliding Tube	Repair No. 9-7 601
Repair No. 9-8 Sliding Tube	Repair No. 9-8 601
Repair No. 9-9 Sliding Tube	Repair No. 9-9 601
Repair No. 9-10 Sliding Tube	Repair No. 9-10 601
Repair No. 9-11 Sliding Tube	Repair No. 9-11 601
Repair No. 10-1 Pin	Repair No. 10-1 601
Repair No. 11-1 Main Fitting	Repair No. 11-1 601
Repair No. 11-2 Main Fitting	Repair No. 11-2 601
Repair No. 11-3 Main Fitting	Repair No. 11-3 601
Repair No. 11-4 Main Fitting	Repair No. 11-4 601
Repair No. 11-5 Main Fitting	Repair No. 11-5 601
Repair No. 11-6 Main Fitting	Repair No. 11-6 601
Repair No. 11-7 Main Fitting	Repair No. 11-7 601
Repair No. 11-8 Main Fitting	Repair No. 11-8 601
Repair No. 11-9 Main Fitting	Repair No. 11-9 601
Repair No. 11-10 Main Fitting (Withdrawn)	Repair No. 11-10 601
Repair No. 11-11 Main Fitting	Repair No. 11-11 601
Repair No. 11-12 Main Fitting	Repair No. 11-12 601
Repair No. 11-13 Main Fitting	Repair No. 11-13 601
Repair No. 11-14 Main Fitting	Repair No. 11-14 601
Repair No. 11-15 Main Fitting	Repair No. 11-15 601
Repair No. 11-16 Main Fitting	Repair No. 11-16 601
Repair No. 11-17 Main Fitting	Repair No. 11-17 601
Repair No. 11-18 Main Fitting	Repair No. 11-18 601
Repair No. 11-19 Main Fitting	Repair No. 11-19 601
Repair No. 11-20 Main Fitting (Withdrawn)	Repair No. 11-20 601
Repair No. 11-21 Main Fitting	Repair No. 11-21 601
Repair No. 11-22 Main Fitting	Repair No. 11-22 601
Repair No. 11-23 Main Fitting	Repair No. 11-23 601
Repair No. 11-24 Main Fitting	Repair No. 11-24 601
Repair No. 11-25 Main Fitting	Repair No. 11-25 601
Repair No. 11-26 Main Fitting	Repair No. 11-26 601
Repair No. 11-27 Main Fitting	Repair No. 11-27 601
Repair No. 11-28 Main Fitting	Repair No. 11-28 601
Repair No. 11-29 Main Fitting	Repair No. 11-29 601
Repair No. 11-30 Main Fitting	Repair No. 11-30 601
Repair No. 11-31 Main Fitting	Repair No. 11-31 601
Repair No. 11-32 Main Fitting	Repair No. 11-32 601
Repair No. 11-33 Main Fitting	Repair No. 11-33 601
Repair No. 11-34 Main Fitting	Repair No. 11-34 601
Repair No. 11-35 Main Fitting	Repair No. 11-35 601
Repair No. 11-36 Main Fitting	Repair No. 11-36 601

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
TABLE OF CONTENTS (Continued)

	<u>Page</u>
Repair No. 11-37 Main Fitting	601
Repair No. 12-1 Lower Torque Link	601
Repair No. 12-2 Upper Torque Link	601
Repair No. 12-3 Upper Torque Link	601
Repair No. 12-4 Lower Torque Link	601
Repair No. 12-5 Upper Torque Link	601
Repair No. 13-1 Upper Slave Link	601
Repair No. 13-2 Upper Slave Link	601
Repair No. 14-1 Upper Diaphragm Tube	601
Repair No. 14-2 Upper Diaphragm Tube	601
Repair No. 14-3 Upper Diaphragm Tube	601
Repair No. 14-4 Upper Diaphragm Tube	601
Repair No. 15-1 Bracket	601
Repair No. 15-2 Bracket	601
Repair No. 16-1 Bracket	601
Repair No. 17-1 Pivot Bracket	601
Repair No. 18-1 Cylinder	601
Repair No. 18-2 Cylinder	601
Repair No. 18-3 Cylinder (Withdrawn)	601
Repair No. 18-4 Cylinder	601
Repair No. 18-5 Cylinder	601
Repair No. 18-6 Cylinder	601
Repair No. 18-7 Cylinder	601
Repair No. 18-8 Cylinder	601
Repair No. 19-1 Lock Stay Cardan	601
Repair No. 19-2 Lock Stay Cardan	601
Repair No. 20-1 Lower Slave Link	601
Repair No. 21-1 Transfer Block	601
Repair No. 21-2 Transfer Block	601
Repair No. 21-3 Transfer Block	601
Repair No. 21-4 Transfer Block	601
Repair No. 21-5 Transfer Block	601
Repair No. 21-6 Transfer Block	601
Repair No. 22-1 Spherical Bearing	601
Repair No. 23-1 Pintle pin	601
Repair No. 23-2 Pintle Pin	601
Repair No. 24-1 Harness Support Bracket	601
Repair No. 25-1 Retaining Pin	601
Repair No. 25-2 Retaining Pin	601
Repair No. 26-1 Upper Pivot Bracket	601
Assembly (Including Storage)	701
General	701
Procedure	706

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
TABLE OF CONTENTS (Continued)

	<u>Page</u>
Storage	798.12
Fits and Clearances	801
Fits and Clearances Definitions	801
Remarks	869
Torque Data	869
Special Tools, Fixtures and Equipment	901
General	901
Illustrated Parts List	1001
Introduction	1002
How To Use This Illustrated Parts List	1003
Vendor Codes, Names and Addresses	1004
Numerical Index	1005
Detailed Parts List	1031

ILLUSTRATIONS

<u>Fig.</u>		<u>Page</u>
1	Main Landing Gear Leg	3
2	Diagram of Operation	4
101	Main Landing Gear Leg (1-1)	105
102	Electrical Bonding Resistance Test Points (Tables 101 and 102)	108
601	Bracket (2-120 and 2-130) - Protective Treatment	622
602	Transfer Block (2-340, 2-340A, 2-350 and 2-350A) - Protective Treatment	623
603	Bracket (4-140 and 4-150) - Protective Treatment	624
604	Bracket (5-160) - Protective Treatment	625
605	Bracket (6-170 and 6-180) - Protective Treatment	626
606	Slave Link (6-230) - Protective Treatment	627
607	Slave Link (6-230A) - Protective Treatment	628
608	Pin (10-80) - Protective Treatment	629
609		630
610	Pin (11-130) - Protective Treatment	631
611		632
612	Valve Stem (12-90) - Protective Treatment	633
613	Retaining Pin (13-10) - Protective Treatment	633
614	Inflation Valve (13-110A) - Protective Treatment	634
615	Pin (13-190 and 13-190A) - Protective Treatment	635
616	Upper Diaphragm Tube (15-390) - Protective Treatment	636
617	Cylinder (17-230) - Protective Treatment	637
618	Sliding Tube (18-80) or (18-80A) - Protective Treatment (Sheet 1)	638
618	Sliding Tube (18-80) or (18-80A) - Protective Treatment (Sheet 2)	639
619	Main Fitting Subassembly (20-90, 20-90A, 20-100 and 20-100A) - Protective Treatment (Sheet 1)	640
619	Main Fitting Subassembly (20-90, 20-90A, 20-100 and 20-100A) - Protective Treatment (Sheet 2)	641
620	Main Fitting (20-410) and (20-420) - Protective Treatment	642

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

TABLE OF CONTENTS (Continued)

ILLUSTRATIONS (Continued)

<u>Fig.</u>		<u>Page</u>
621	Main Fitting (20-410) and (20-420) - Protective Treatment	643
622	Main Fitting (20-410A) and (20-420A) - Protective Treatment (Sheet 1)	644
622	Main Fitting (20-410A) and (20-420A) - Protective Treatment (Sheet 2)	645
623	Upper Diaphragm Tube (15-390A) - Protective Treatment	646
624	Cylinder (17-230A) - Protective Treatment	647
625	Sliding Tube (18-80B) - Protective Treatment (Sheet 1)	648
625	Sliding Tube (18-80B) - Protective Treatment (Sheet 2)	649
625	Sliding Tube (18-80B) - Protective Treatment (Sheet 3)	650
625	Sliding Tube (18-80B) - Protective Treatment (Sheet 4)	651
626	Upper Pivot Bracket (10-160) Only - Protective Treatment	652
627	Upper Pivot Bracket (10-160A) - Protective Treatment	653
628	Valve Stem (12-90A) - Protective Treatment	654
629	Upper Diaphragm Tube Subassembly (15-360) - Protective Treatment	655
630	Upper Diaphragm Tube Subassembly (15-360A) - Protective Treatment	656
631	Bracket (2-80 and 2-90) - Protective Treatment	657
632	Harness Support Bracket (7-100, 7-100A, 7-110 and 7-110A) - Protective Treatment	658
633	Bracket (8-170) - Protective Treatment	659
634	Harness Support Bracket (11-140) - Protective Treatment	660
635	Transfer block (2-310B and 2-320B) - Protective Treatment - Sheet 1	661
635	Transfer block (2-310B and 2-320B) - Protective Treatment - Sheet 2	662
636	Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment - Sheet 1	663
636	Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment - Sheet 2	664
636	Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment - Sheet 3	665
636	Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment - Sheet 4	666
636	Main Fitting (20-410B, 20-420B, 20-410C, 20-420C, 20-410D and 20-420D) - Protective Treatment - Sheet 5	667
636	Main Fitting (20-410B, 20-420B, 20-410D and 20-420D) - Protective Treatment - Sheet 6	668
636	Main Fitting (20-410B, 20-420B, 20-410D and 20-420D) - Protective Treatment - Sheet 7	669
637	Uplock Pin in Fitting (5-400A) - Protective Treatment	670
638	Main Fitting (20-90B) and (20-100B) - Protective Treatment - Sheet 1	671
638	Main Fitting (20-90B) and (20-100B) - Protective Treatment - Sheet 2	672
639	Forward Pintle Pin (1-60A) - Protective Treatment	673
640	Spacer (4-180) Only - Protective Treatment	674
641	Drag-arm Spacer (4-180A) - Protective Treatment	674
642	Bracket (4-210) - Protective Treatment	675
643	Bracket (9-150) - Protective Treatment	676
644	Bracket (9-150A) - Protective Treatment	677
645	Spacer (9-190) - Protective Treatment	678

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

TABLE OF CONTENTS (Continued)

ILLUSTRATIONS (Continued)

<u>Fig.</u>		<u>Page</u>
646	Spacer (9-190A) - Protective Treatment	679
647	Spacer (11-30) - Protective Treatment	680
648	Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) -	
	Protective Treatment - Sheet 1	681
648	Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) -	
	Protective Treatment - Sheet 2	682
648	Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) -	
	Protective Treatment - Sheet 3	683
648	Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) -	
	Protective Treatment - Sheet 4	684
648	Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) -	
	Protective Treatment - Sheet 5	685
648	Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) -	
	Protective Treatment - Sheet 6	686
648	Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) -	
	Protective Treatment - Sheet 7	687
648	Sliding tube (18-80D, 18-80E, 18-80F and 18-80G) -	
	Protective Treatment - Sheet 8	688
649	Approved Repairs - Key Diagram	693
650	Main Fitting Repairs - Key Diagram	694
651	Torque Link Repairs - Key Diagram	695
652	Sliding Tube Repairs - Key Diagram	696
653	Upper Diaphragm Tube Repairs - Key Diagram	697
654	Cylinder Repairs - Key Diagram	698
655	Transfer Block Repairs - Key Diagram	698.1
656	Harness Support Bracket Repairs - Key Diagram	698.2
657	Upper Pivot Bracket Repairs - Key Diagram	698.2
601	Repair to Lower Bearing Subassembly	Repair No. 1-1 604
601	Repair to Lower Bearing Subassembly	Repair No. 1-2 604
601	Repair to Pin	Repair No. 2-1 602
601	Repair to Pivot Pin	Repair No. 3-1 603
601	Repair to Uplock Pin	Repair No. 4-1 602
601	Repair to Pin	Repair No. 5-1 602
601	Repair to Pin	Repair No. 6-1 603
601	Repair to Pin	Repair No. 6-2 603
601	Repair to Pin	Repair No. 6-3 603
601	Repair to Pin	Repair No. 7-1 603
601	Repair to Pin	Repair No. 7-2 603
601	Repair to Bracket	Repair No. 8-1 603

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

TABLE OF CONTENTS (Continued)
ILLUSTRATIONS (Continued)

<u>Fig.</u>			<u>Page</u>
601	Repair to Bracket	Repair No. 8-2	603
601	Repair to Sliding Tube	Repair No. 9-1	603
602	Repair to Sliding Tube	Repair No. 9-1	604
601	Repair to Sliding Tube	Repair No. 9-2	604
601	Repair to Sliding Tube - Machining	Repair No. 9-4	603
602	Repair Bush - Machining and Installation	Repair No. 9-4	604
601	Repair to Sliding Tube	Repair No. 9-5	602
601	Repair to Sliding Tube	Repair No. 9-6	603
601	Repair to Sliding Tube - Machining	Repair No. 9-7	603
602	Repair Bushes - Machining and Installation	Repair No. 9-7	604
601	Repair to Sliding Tube - Machining	Repair No. 9-8	604
602	Repair Bushes - Machining and Installation	Repair No. 9-8	605
601	Repair to Sliding Tube - Machining	Repair No. 9-9	603
602	Repair Bushes - Machining and Installation	Repair No. 9-9	604
601	Repair to Sliding Tube	Repair No. 9-10	605
602	Repair to Sliding Tube	Repair No. 9-10	606
601	Repair to Sliding Tube	Repair No. 9-11	603
602	Repair to Sliding Tube - Machining	Repair No. 9-11	604
603	Repair Bushes - Machining and Installation	Repair No. 9-11	605
601	Repair to Pin	Repair No. 10-1	603
601	Repair to Main Fitting	Repair No. 11-1	603
602	Overize Bushes - Machining and Installation	Repair No. 11-1	604
601	Repair to Main Fitting	Repair No. 11-2	603
602	Overize Bush(es) - Machining and Installation	Repair No. 11-2	604
601	Repair to Main Fitting	Repair No. 11-3	604
602	Repair to Main Fitting	Repair No. 11-3	605
603	Repair to Main Fitting - Repair Bush Machining and Installation	Repair No. 11-3	606
601	Repair to Main Fitting	Repair No. 11-4	603
602	Repair Bush - Machining and Installation	Repair No. 11-4	604
601	Repair to Main Fitting	Repair No. 11-5	603
602	Repair Bush - Machining and Installation	Repair No. 11-5	604
601	Repair to Main Fitting	Repair No. 11-6	603
602	Repair Bush - Machining and Installation	Repair No. 11-6	604
601	Repair to Main Fitting	Repair No. 11-7	603
602	Repair to Main Fitting	Repair No. 11-7	604
603	Repair to Main Fitting - Repair Bush Machining and Installation	Repair No. 11-7	605
601	Repair to Main Fitting	Repair No. 11-8	603
602	Repair to Main Fitting - Repair Bush Machining and Installation	Repair No. 11-8	604
601	Repair to Main Fitting	Repair No. 11-9	604
602	Repair to Main Fitting - Machining	Repair No. 11-9	605
603	Repair to Main Fitting - Repair Bush Installation	Repair No. 11-9	606
601	Repair to Main Fitting - Machining	Repair No. 11-11	603
602	Repair Bearing - Machining and Installation	Repair No. 11-11	604
601	Repair to Main Fitting - Machining	Repair No. 11-12	603
602	Repair Bush - Machining and Installation	Repair No. 11-12	604
601	Repair to Main Fitting - Machining	Repair No. 11-13	604

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

TABLE OF CONTENTS (Continued)
ILLUSTRATIONS (Continued)

<u>Fig.</u>			<u>Page</u>
602	Repair to Bushes - Machining and Installation	Repair No. 11-13	605
601	Repair to Main Fitting - Machining	Repair No. 11-14	603
601	Repair to Main Fitting	Repair No. 11-15	603
602	Repair to Main Fitting - Machining	Repair No. 11-15	604
603	Repair Bush - Machining and installation	Repair No. 11-15	605
601	Repair to Main Fitting	Repair No. 11-16	602
601	Repair to Main Fitting	Repair No. 11-17	602
601	Repair to Main Fitting - Machining	Repair No. 11-18	603
602	Repair Bearing - Machining and Installation	Repair No. 11-18	604
601	Repair to Main Fitting - Machining	Repair No. 11-19	603
602	Repair Bushes - Machining and Installation	Repair No. 11-19	604
601	Repair to Main Fitting - Machining	Repair No. 11-21	603
602	Repair Bush - Machining and Installation	Repair No. 11-21	604
601	Repair to Main Fitting	Repair No. 11-22	602
601	Repair to Main Fitting	Repair No. 11-23	603
602	Repair to Main Fitting - Machining	Repair No. 11-23	604
603	Oversize Lubrication adapter - Installation	Repair No. 11-23	605
601	Repair to Main Fitting	Repair No. 11-24	603
602	Repair to Main Fitting	Repair No. 11-24	604
601	Repair to Main Fitting	Repair No. 11-25	603
601	Repair to Main Fitting	Repair No. 11-26	604
602	Repair to Main Fitting - Machining	Repair No. 11-26	605
603	Lower Bearing Subassembly Machining and Liner Installation	Repair No. 11-26	606
601	Repair to Main Fitting	Repair No. 11-27	603
602	Repair Bearing - Machining and Installation	Repair No. 11-27	604
601	Repair to Main Fitting	Repair No. 11-28	604
602	Repair to Main Fitting	Repair No. 11-28	605
603	Oversize Transfer Dowel - Installation	Repair No. 11-28	606
601	Repair to Main Fitting - Machining	Repair No. 11-29	606
602	Repair to Main Fitting	Repair No. 11-29	607
603	Repair to Main Fitting - Chromium Plate Termination	Repair No. 11-29	608
601	Repair to Main Fitting - Machining	Repair No. 11-30	605
602	Repair to Main Fitting	Repair No. 11-30	606
603	Repair to Main Fitting - Chromium Plate Termination	Repair No. 11-30	607
604	Lower Bearing Subassembly - Machining and Inner Liner Installation	Repair No. 11-30	608
601	Repair to Main Fitting	Repair No. 11-31	604
601	Repair to Main Fitting - Sheet 1	Repair No. 11-32	604
601	Repair to Main Fitting - Sheet 2	Repair No. 11-32	605
601	Repair to Main Fitting - Sheet 3	Repair No. 11-32	606
601	Repair to Main Fitting - Sheet 1	Repair No. 11-33	604
601	Repair to Main Fitting - Sheet 2	Repair No. 11-33	605
601	Repair to Main Fitting - Sheet 3	Repair No. 11-33	606

TABLE OF CONTENTS

32-12-22

Page 8
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

TABLE OF CONTENTS (Continued)
ILLUSTRATIONS (Continued)

<u>Fig.</u>			<u>Page</u>
601	Repair to Main Fitting - Sheet 1	Repair No. 11-34	603
601	Repair to Main Fitting - Sheet 2	Repair No. 11-34	604
602	Repair to Main Fitting - Bush	Repair No. 11-34	605
601	Repair to Main Fitting - Sheet 1	Repair No. 11-35	603
601	Repair to Main Fitting - Sheet 2	Repair No. 11-35	604
602	Repair to Main Fitting - Bush	Repair No. 11-35	605
601	Repair to Main Fitting - Sheet 1	Repair No. 11-36	603
601	Repair to Main Fitting - Sheet 2	Repair No. 11-36	604
601	Repair to Main Fitting - Sheet 1	Repair No. 11-37	603
601	Repair to Main Fitting - Sheet 2	Repair No. 11-37	604
601	Repair to Main Fitting - Sheet 3	Repair No. 11-37	605
602	Repair sleeve	Repair No. 11-37	606
601	Repair to Lower Torque Link - Machining	Repair No. 12-1	603
602	Repair Bushes - Machining and Installation	Repair No. 12-1	604
601	Repair to Upper Torque Link - Machining	Repair No. 12-2	604
602	Repair Bushes - Machining and Installation	Repair No. 12-2	605
603	Repair Sleeves - Machining and Installation	Repair No. 12-2	606
601	Repair to Upper Torque Link - Machining	Repair No. 12-3	603
602	Repair Bushes - Machining and Installation	Repair No. 12-3	604
601	Repair to Lower Torque Link - Machining	Repair No. 12-4	603
602	Repair Bushes - Machining and Installation	Repair No. 12-4	604
601	Repair to Upper Torque Link - Machining	Repair No. 12-5	603
602	Repair Sleeves - Machining and Installation	Repair No. 12-5	604
601	Repair to Upper Slave Link - Machining	Repair No. 13-1	604
602	Repair to Upper Slave Link - Machining	Repair No. 13-1	605
603	Repair Bushes - Machining and Installation	Repair No. 13-1	606
601	Repair to Upper Slave Link - Machining	Repair No. 13-2	603
602	Repair Bushes - Installation	Repair No. 13-2	604
601	Repair to Upper Diaphragm Tube - Machining	Repair No. 14-1	603
602	Repair Bush - Machining and Installation	Repair No. 14-1	604
601	Repair to Upper Diaphragm Tube - Machining	Repair No. 14-2	603
602	Repair Bush - Machining and Installation	Repair No. 14-2	604
601	Repair to Upper Diaphragm Tube	Repair No. 14-3	604
602	Repair to Upper Diaphragm Tube	Repair No. 14-3	605
601	Repair to Upper Diaphragm Tube - Sheet 1	Repair No. 14-4	605
601	Repair to Upper Diaphragm Tube - Sheet 2	Repair No. 14-4	606
601	Repair to Bracket - Machining	Repair No. 15-1	603
602	Repair Bearing - Machining and Installation	Repair No. 15-1	604
601	Repair to Bracket - Machining	Repair No. 15-2	603
602	Repair Bearing - Machining and Installation	Repair No. 15-2	604
601	Repair to Bracket - Machining	Repair No. 16-1	603
602	Repair Bushes - Machining and Installation	Repair No. 16-1	604

TABLE OF CONTENTS

32-12-22

Page 9
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

TABLE OF CONTENTS (Continued)
ILLUSTRATIONS (Continued)

<u>Fig.</u>			<u>Page</u>
601	Repair to Pivot Bracket	Repair No. 17-1	603
601	Repair to Cylinder	Repair No. 18-1	602
601	Repair to Cylinder - Machining	Repair No. 18-2	603
602	Oversize Thread Insert - Installation	Repair No. 18-2	604
601	Repair to Cylinder	Repair No. 18-4	602
601	Repair to Cylinder	Repair No. 18-5	603
601	Repair to Cylinder	Repair No. 18-6	603
601	Repair to Cylinder	Repair No. 18-7	602
601	Repair to Cylinder	Repair No. 18-8	603
602	Repair to Cylinder	Repair No. 18-8	604
601	Repair to Lock Stay Cardan	Repair No. 19-1	603
602	Repair to Lock Stay Cardan - Machining	Repair No. 19-1	604
603	Repair Bushes - Machining and Installation	Repair No. 19-1	605
601	Repair to Lock Stay Cardan - Machining	Repair No. 19-2	603
602	Repair Bushes - Machining and Installation	Repair No. 19-2	604
601	Repair to Lower Slave Link	Repair No. 20-1	603
601	Repair to Transfer Block - Machining	Repair No. 21-1	603
602	Repair Bush - Machining and Installation	Repair No. 21-1	604
601	Repair to Transfer Block - Machining	Repair No. 21-2	603
602	Repair Bush - Machining and Installation	Repair No. 21-2	604
601	Repair to Transfer Block - Machining	Repair No. 21-3	603
602	Repair Threaded Insert - Machining and Installation	Repair No. 21-3	604
601	Repair to Transfer Block - Machining	Repair No. 21-4	603
602	Repair Bush - Machining and Installation	Repair No. 21-4	604
601	Repair to Transfer Block - Machining	Repair No. 21-5	603
602	Repair Bush - Machining and Installation	Repair No. 21-5	604
601	Repair to Transfer Block - Machining	Repair No. 21-6	603
602	Repair Threaded Insert - Machining and Installation	Repair No. 21-6	604
601	Repair to Spherical Bearing	Repair No. 22-1	602
601	Repair to Pintle Pin	Repair No. 23-1	603
601	Repair to Pintle Pin	Repair No. 23-2	603
602	Repair Bushes - Machining and Installation	Repair No. 23-2	604
601	Repair to Harness Support Bracket	Repair No. 24-1	603
602	Repair Bushes - Machining and Installation	Repair No. 24-1	604
601	Repair to Retaining Pin	Repair No. 25-1	603
601	Repair to Retaining Pin	Repair No. 25-2	603
601	Repair to Upper Pivot Bracket - Machining	Repair No. 26-1	603
602	Repair Sleeve - Machining and Installation	Repair No. 26-1	604
701	Main Fitting Subassembly (20-90) - Bearing (20-300) - Installation (Sheet 1 of 2)		711
701	Main Fitting Subassembly (20-90) - Ardrex Application (Sheet 2 of 2)		712
702	Labels (20-10, 20-30, 20-40, 20-60 and 20-80) and wiring diagram plate (1-110)		
	- Installation		713

TABLE OF CONTENTS

32-12-22

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

TABLE OF CONTENTS (Continued)
ILLUSTRATIONS (Continued)

<u>Fig.</u>		<u>Page</u>
703	Main Fitting Subassembly (20-90B) or (20-90C) - Installation (Sheet 1 of 6)	722
703	Main Fitting Subassembly (20-90B) or (20-90C) - Installation (Sheet 2 of 6)	723
703	Main Fitting Subassembly (20-90B) or (20-90C) - Installation (Sheet 3 of 6)	724
703	Main Fitting Subassembly (20-90B) or (20-90C) - Installation (Sheet 4 of 6)	725
703	Main Fitting Subassembly (20-90B) or (20-90C) - Installation (Sheet 5 of 6)	726
703	Main Fitting Subassembly (20-90B) or (20-90C) - Installation (Sheet 6 of 6)	727
704	Installation of Labels	728
705	Label (18-70) - Installation.	731
706	Label (17-290) Only and Bush (18-50) Only - Installation.	732
707	Sliding Tube Subassembly (17-240B or 17-240G) - Installation of Bushes (Sheet 1 of 5)	737
707	Sliding Tube Subassembly (17-240B or 17-240G) - Installation of Bushes (Sheet 2 of 5)	738
707	Sliding Tube Subassembly (17-240B or 17-240C or 17-240F) - Installation of Bushes (Sheet 3 of 5)	739
707	Sliding Tube Subassembly (17-240C or 17-240F) - Installation of Bushes (Sheet 4 of 5)	740
707	Sliding Tube Subassembly (17-240C or 17-240F) - Installation of Bushes (Sheet 5 of 5)	741
708	Bushes (18-20 and 18-30) - Installation.	743
709	Label (17-250) - Installation.	743
710	Application of Jointing Compound	751
711	Pre SB 201-32-49 or Pre SB 201-32-58 or Pre SB 201-32-60 Lower Bearing (16-150) or (16A-150) Grease Groove Dimensions After Installation in the Gland Housing (16-140) or (16A-140) or (16A-140A).	752
712	Post SB-201-32-58 - Lower Bearing Subassembly Machining and Liner Installation . (Sheet 1 of 2)	757
712	Assembly of Lower Bearing Subassembly (16A-110C) (Sheet 2 of 2)	758
713	Assembly of Lower Bearing Subassembly (16-110D or 16A-110E).	759
714	Seal Configuration (Sheet 1 of 2)	760
714	Seal Configuration (Sheet 2 of 2)	761
715	Upper Diaphragm Tube Subassembly (15-360 only).	768
716	Crimping of the Pin (15-120)	769
717	Upper Diaphragm Tube Subassembly (15-360A)	776
718	Locking Plate (15-80) - Hole Locations	777
719	Application of Ardrex AV100D to the Upper Diaphragm Tube (15-390) (Sheet 1 of 3)	778
719	Application of Ardrex AV100D to the Upper Diaphragm Tube (15-390A) (Sheet 2 of 3)	779
719	Application of Ardrex AV100D to the Pin (13-190) (Sheet 3 of 3)	780
720	Bushes (10-240, 10-250, 11-220 and 11-230) - Installation.	785
721	1M Electrical Axle Harness (11-40) and 2M Electrical Axle Harness (11-50)- Installation	787
722	Assembly of Damper (9-160).	789
723	Bracket Subassembly (5-270) - Installation	797
724	Bracket Subassembly (5-90) - Installation	798
725	Bushes (3-150 and 3-160) - Installation.	798.3
726	Bolt Subassembly (1-40A) - Assembly	798.7

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

TABLE OF CONTENTS (Continued)
ILLUSTRATIONS (Continued)

<u>Fig.</u>		<u>Page</u>
727	Proximity Switch (7-230) and Target (7-180) - Adjustment.	798.11
728	Proximity Switch (7-40) and Target (6-130) - Adjustment.	798.11
801	Fits and Clearances - Key Diagram.	802
802	Fits and Clearances - Key Diagram.	803
803	Fits and Clearances (Table 801)	804
804	Fits and Clearances (Table 802)	807
805	Fits and Clearances (Table 803)	810
806	Fits and Clearances (Table 804)	814
807	Fits and Clearances (Table 805)	817
808	Fits and Clearances (Table 806)	819
809	Fits and Clearances (Table 807)	821
810	Fits and Clearances (Table 808)	823
811	Fits and Clearances (Table 809)	826
812	Fits and Clearances (Table 810)	828
813	Fits and Clearances (Table 811)	830
814	Fits and Clearances (Table 812)	832
815	Fits and Clearances (Table 813)	836
816	Fits and Clearances (Table 814)	840
817	Fits and Clearances (Table 815)	845
818	Fits and Clearances (Table 816)	849
819	Fits and Clearances (Table 817)	852
820	Fits and Clearances (Table 818)	855
821	Fits and Clearances (Table 819)	858
822	Fits and Clearances (Table 820)	860
823	Fits and Clearances (Table 821)	864
824	Fits and Clearances (Table 822)	867
IPL 1	Main Landing Gear Leg	1032
IPL 2	Main Landing Gear Leg (Sheet 1)	1036
IPL 2	Main Landing Gear Leg (Sheet 2)	1038
IPL 3	Main Landing Gear Leg	1044
IPL 4	Main Landing Gear Leg	1048
IPL 5	Main Landing Gear Leg	1054
IPL 6	Main Landing Gear Leg	1060
IPL 7	Main Landing Gear Leg	1064
IPL 8	Main Landing Gear Leg	1070
IPL 9	Main Landing Gear Leg	1074
PL 10	Main Landing Gear Leg	1078
IPL 11	Main Landing Gear Leg	1082
IPL 12	Main Landing Gear Leg	1086
IPL 13	Main Landing Gear Leg	1090
IPL 14	Main Landing Gear Leg	1098
IPL 15	Main Landing Gear Leg	1098.4
IPL 16	Main Landing Gear Leg (Pre SB-201-32-58) (Post SB-201-32-78)	1098.12

TABLE OF CONTENTS

32-12-22

Page 12
Mar 18/2025

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

TABLE OF CONTENTS (Continued)ILLUSTRATIONS (Continued)

<u>Fig.</u>		<u>Page</u>
IPL 16A	Main Landing Gear Leg (Post SB-201-32-58) (Pre SB-201-32-78).....	1098.18
IPL 17	Main Landing Gear Leg	1098.26
IPL 18	Sliding Tube Subassembly	1098.34
IPL 19	Main Landing Gear Leg	1098.38
IPL 20	Main Landing Gear Leg	1098.42

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
INTRODUCTION

1. General

- A. AECMA Simplified English to PSC-85-16598 is used in this manual.
- B. This manual contains Description, Operation, Maintenance procedures and an Illustrated Parts List (IPL). IPL Figure and Item numbers in parentheses follow the part name to identify them.
- C. A Unit Identification Chart is included to show the modification status of the unit. The modification status is related to the unit part number by the dash number: the dash number is marked on the unit name plate adjacent to the part number.
- D. All references in this manual are to the left configuration of the unit unless the instructions tell you differently.
- E. All dimensions and quantities in this manual are in SI units with Imperial units in parentheses. A comma shows a decimal part of an SI unit. A full point shows a decimal part of an Imperial unit.
- F. This manual refers to Process Specifications (M-DLPS and PCS) and Non-destructive Tests (M-DLNDT). These are available within the Safran Landing Systems Technical Publications on-line service.
- G. All the materials in this manual have a Ref. Item identification. This is the reference item number of the material in the Aircraft Manufacturer's Consumable Materials List.
- H. Use approved persons and good aircraft engineering practice for all procedures in this manual.
- I. The repairs in this CMM have been approved under Airbus' EASA Design Organisation Approval No. EASA.21J.031.
- J. On occasion a REF. CODE can be identified in the NOMENCLATURE column in the DETAILED PARTS LIST. This is a Safran Landing Systems reference code and is used for cross-reference purposes only.
- K. The accuracy and the adequacy of the instructions in this CMM have been technically verified by shop verification (performed or simulated) or by similarity with manufacturing instructions or with component maintenance manuals instructions from other programs that have been verified in shop.

2. Reference Publications

- A. Safran Landing Systems UK Ltd Component Maintenance Manual, Main Landing Gear Leg and Dressings, [32-12-21](#).
- B. Safran Landing Systems UK Ltd Component Maintenance Manual, Axle Harness 1M and 2M, [32-12-29](#).
- C. Safran Landing Systems UK Ltd Component Maintenance Manual, Damper, [32-11-93](#).
- D. Safran Landing Systems UK Ltd Component Maintenance Manual, Damper, [32-12-85](#).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
DESCRIPTION AND OPERATION

1. General

A. The main landing gear leg is a two stage, telescopic shock absorber.

2. Description (Refer to [Figures 1](#) and [2](#))

A. The main landing gear leg has a sliding tube subassembly that operates in a main fitting subassembly. The sliding tube subassembly operates through a lower bearing subassembly. The lower bearing subassembly also seals the sliding tube subassembly in the main fitting subassembly.

B. An upper torque link subassembly attaches to the main fitting subassembly. A lower torque link subassembly attaches to the sliding tube subassembly. A damper attaches to the upper torque link subassembly. A pin installs through the damper and connects the upper and lower torque link subassemblies.

C. A slave link subassembly and a lower slave link subassembly attach opposite the upper and lower torque link subassemblies.

D. A rod and a cylinder install in the sliding tube subassembly. A piston installs in the cylinder. An upper diaphragm tube subassembly installs in the main fitting subassembly. A baffle, a compression orifice plate and a diaphragm subassembly install in the upper diaphragm tube subassembly. The rod goes through the baffle.

E. An upper bearing housing installs between the top of the sliding tube subassembly and the main fitting subassembly. A recoil orifice plate operates in the upper bearing housing.

3. Operation (Refer to [Figure 2](#))

A. Compression

(1) The sliding tube subassembly moves into the main fitting subassembly. The subsequent decrease in volume causes hydraulic fluid to flow through the upper bearing housing: the recoil orifice plate moves and slows the flow of hydraulic fluid. The decrease in volume also causes hydraulic fluid to move through the diaphragm and lift the compression orifice plate: the hydraulic fluid flows through the baffle and into the upper diaphragm tube subassembly. This slows the speed of the compression.

(2) Hydraulic fluid that moves into the upper diaphragm tube compresses the nitrogen in the main fitting subassembly and the upper diaphragm tube subassembly. As the pressure of the nitrogen increases, the hydraulic fluid in the rod moves against the piston. The piston is pushed into the cylinder and compresses the nitrogen in it. This slows the speed of the compression more.

B. Recoil

(1) After compression, the nitrogen pressure in the cylinder pushes the piston to the end of the cylinder: hydraulic fluid moves out of the cylinder and into the rod. The nitrogen pressure in the main fitting subassembly and the upper diaphragm subassembly pushes the hydraulic fluid through the baffle: the compression orifice plate is pushed against the diaphragm subassembly and limits the flow of hydraulic fluid through it. This slows the speed of the recoil. The sliding tube subassembly moves out of the main fitting subassembly.

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

C. The Upper and Lower Torque Link Subassemblies

- (1) The upper and lower torque link subassemblies prevent the sliding tube subassembly from turning in the main fitting subassembly.
- (2) The damper controls the movement of the upper and lower torque link subassemblies.


4. Data

Weight with hydraulic fluid 522 kg (1151 lb) approximately

Weight without hydraulic fluid 505 kg (1113 lb) approximately

Hydraulic fluid Material Ref. Item 02-501

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

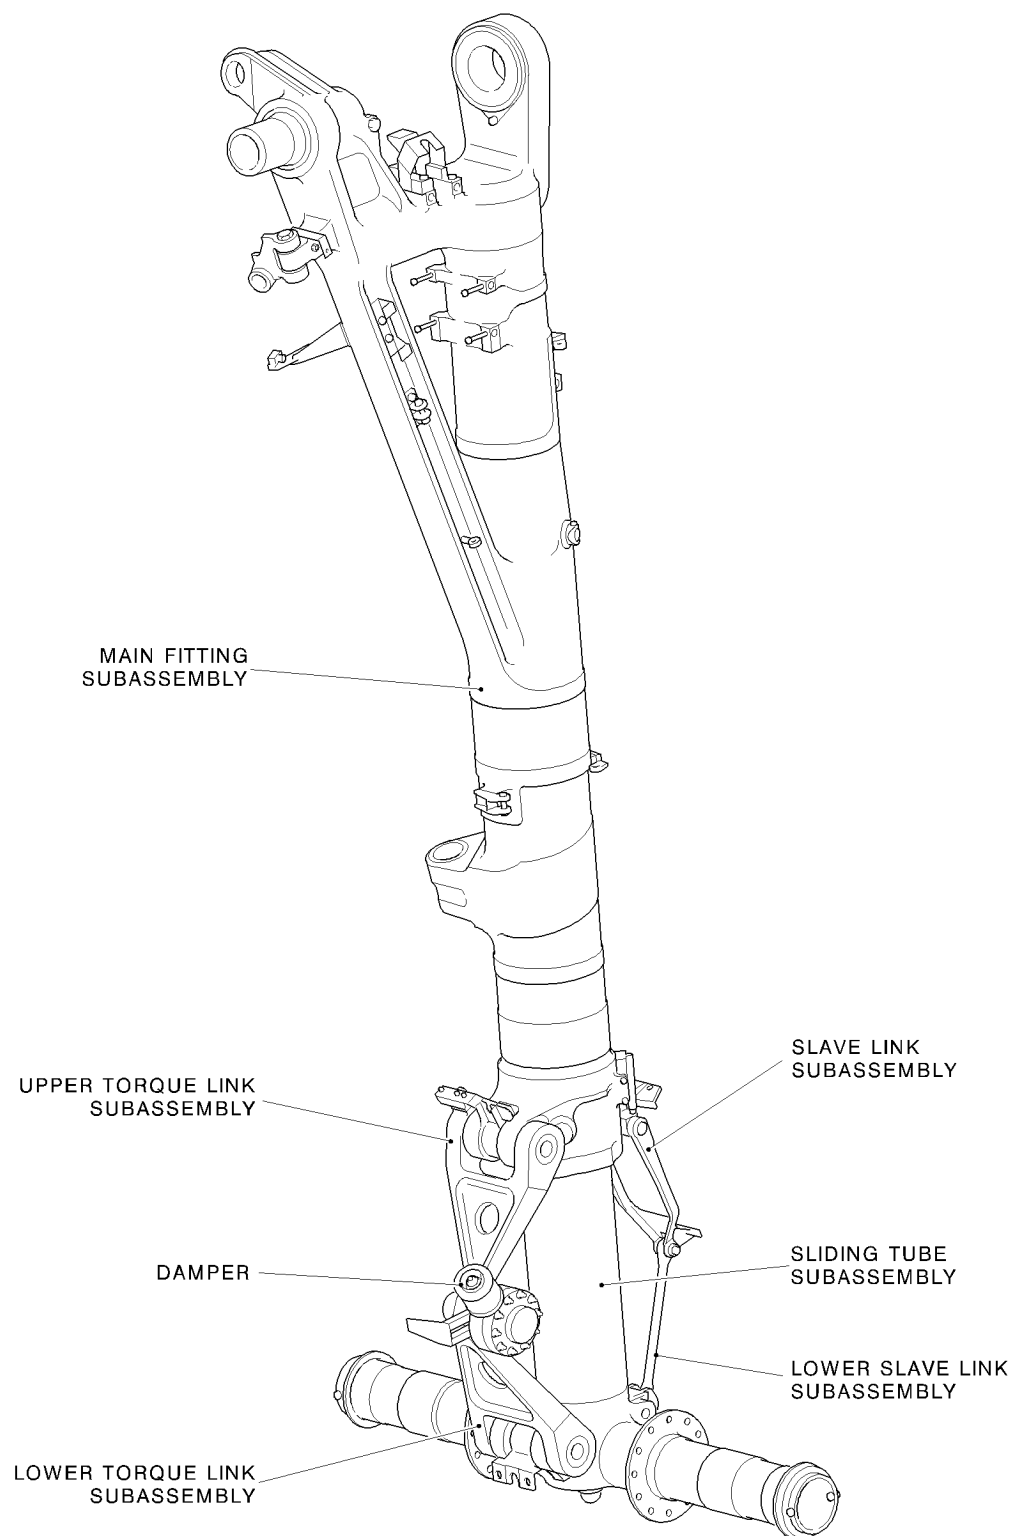

A3219168-1

**Main Landing Gear Leg
Figure 1**

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

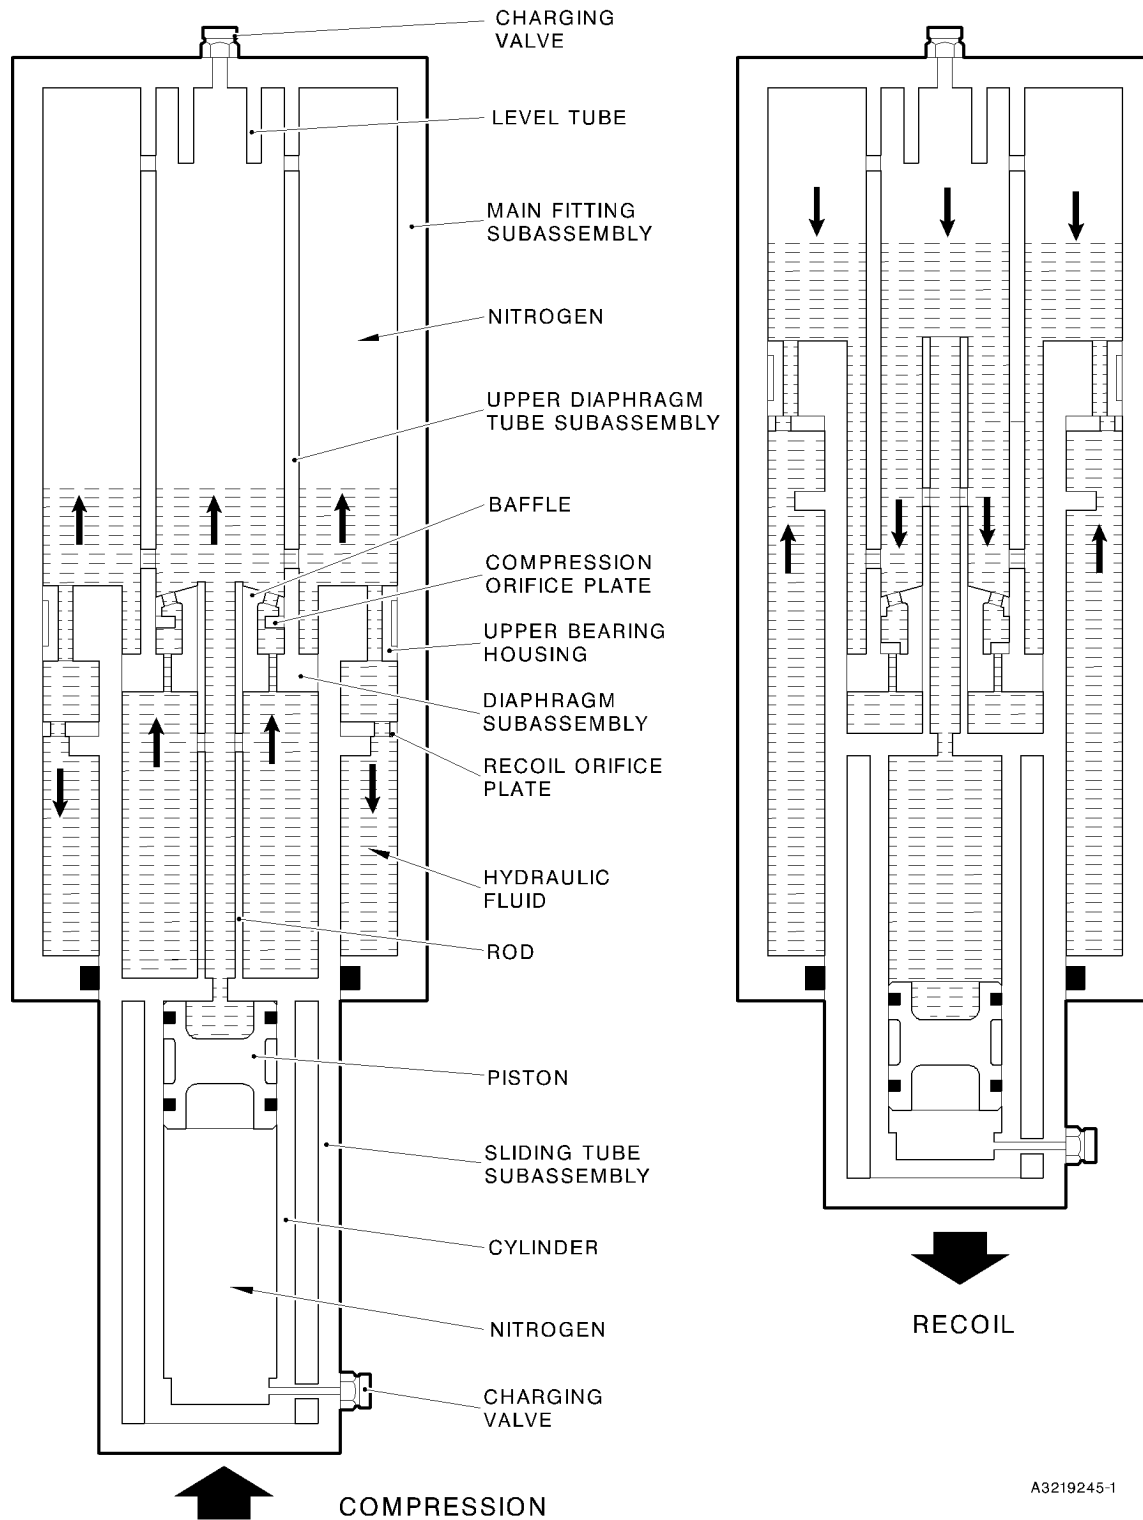


Diagram of Operation
Figure 2

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
TESTING AND FAULT ISOLATION

1. Equipment and Materials

A. Equipment

(1) This equipment is necessary:

NOTE: Alternative equivalents are permitted.

Part No.	Equipment	Function
-	Hydraulic Test Rig	Main landing gear leg (1-1) tests
-	Nitrogen Supply	
-	Loading Press	
-	Milliohmmeter Megger, Type BT51	Electrical bonding resistance tests
-	28 VDC Power Supply	Proximity switch and target tests
T14218	Turner Inflation Equipment	Main landing gear leg (1-1) tests
T14500	Crowfoot Wrench	Close the charging valves (13-60 and 17-20)
460002502	Charging Adapter	Main landing gear leg (1-1) tests
460005842	Lampbox	Proximity switch and target tests
460006231	Holding Fixture	Main landing gear leg (1-1) tests
460006232	Load Cell and Adapter	
460006233	Press Adapter	
460006234	Offset Adapter	
460007260	Bottom Press Adapter	

B. Materials

(1) These materials are necessary:

NOTE: Alternative equivalents are permitted.

Ref. Item	Material
TBA	Nitrogen
02-501	Hydraulic fluid

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

2. Test Conditions

WARNING: DO NOT GET HYDRAULIC FLUID ON YOUR SKIN OR IN YOUR EYES. DO NOT BREATHE THE FUMES. ONLY USE IN A LOCATION THAT HAS A CONTINUOUS FLOW OF CLEAN AIR. HYDRAULIC FLUID IS POISONOUS AND DANGEROUS.

A. General

- (1) The hydraulic test rig must have a hand pump and a power pump. The power pump must have a controlled flow of not less than 4,5 l/min (4.62 in³/sec).
- (2) The inflation equipment must be to MIL-G-8348.
- (3) The temperature of the test fluid must be between 20 and 40 °C (68 and 104 °F).
- (4) The test fluid must be clean: refer to M-DLPS910-1.
- (5) During all hydraulic tests, the unit and the test circuit must be hydraulically full.
- (6) Examine the unit for damage before you start the tests.
- (7) During the proximity switch tests the ambient temperature must be between 15 and 25 °C (59 and 77 °F).

3. Procedure

A. Piston (17-200) Leakage Tests

- (1) Use the Charging Adapter 460002502 and the Turner Inflation Equipment T14218: connect the charging valve (17-20) to the nitrogen supply. Open the charging valve (17-20).
- (2) Slowly increase the nitrogen pressure to between 9,32 and 10,68 bar (135 and 155 lbf/in²). Make a record of the pressure. Close the charging valve (17-20) and hold the nitrogen pressure for 15 minutes.
- (3) Open the charging valve (17-20) and measure the nitrogen pressure: it must be the same as the record in para (2). Leakage must not occur.
- (4) Release the nitrogen pressure.
- (5) Disconnect the nitrogen supply and remove the Turner Inflation Equipment T14218 and the Charging Adapter 460002502.
- (6) Make sure that all of the nitrogen pressure has been released: remove the charging valve (17-20).
- (7) Refer to ASSEMBLY: install the charging valve (17-20) and complete the assembly procedure.

B. Main Landing Gear Leg (1-1) Tests

(1) Initial Operations

- (a) Use these special tools to install the main landing gear leg (1-1) vertically in the loading press:
 - 1 The Holding Fixture 460006231.
 - 2 The Press Adapter 460006233.

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

3 The Bottom Press Adapter 460007260.

- (b) Assemble the Load Cell and Adapter 460006232 and the Offset Adapter 460006234 to the main landing gear leg (1-1).

(2) Procedure to Fill and Pressurize the Main Landing Gear Leg (1-1)

CAUTION: DO NOT PUT AN END LOAD OF MORE THAN 5,08 TONNES (5 TONS) ON THE MAIN LANDING GEAR LEG (1-1).

- (a) Make sure that there is no pressure in the main landing gear leg (1-1): open the charging valves (13-60 and 17-20).
- (b) Use the Charging Adapter 460002502 to connect the hydraulic test rig to the charging valve (13-60).
- (c) Slowly increase the hydraulic pressure to between 13,11 and 14,48 bar (190 and 210 lbf/in²) and let the unit extend fully.
- (d) Release the hydraulic pressure and fully close the unit.
- (e) Do para (c) and (d) until the hydraulic fluid that comes out of the unit does not have air in it.
- (f) Fully close the unit and disconnect the hydraulic test rig.
- (g) Use the Charging Adapter 460002502 and the Turner Inflation Equipment T14218 to connect the nitrogen supply to the charging valve (13-60).

CAUTION: DO NOT USE A PRESSURE OF MORE THAN 7,58 BAR (110 LBF/IN²).

- (h) Slowly increase the nitrogen pressure until the unit starts to extend. Hold the pressure and fully extend the unit. The pressure must not be more than 7,58 bar (110 lbf/in²).

NOTE: The charging valve (17-20) must be open to let the unit extend fully.

- (i) Refer to Figure 101 and measure the dimension X: it must be between 483,05 and 487,85 mm (19.017 and 19.207 in).
- (j) Disconnect the nitrogen supply and remove the Turner Inflation Equipment T14218 and the Charging Adapter 460002502.
- (k) Open the charging valve (13-60) and release the nitrogen pressure. Do not close the charging valve (13-60).
- (l) Use the Charging Adapter 460002502 and the Turner Inflation Equipment T14218 to connect the charging valve (17-20) to the nitrogen supply.
- (m) Slowly increase the nitrogen pressure to between 13,11 and 14,48 bar (190 and 210 lbf/in²).

NOTE: Nitrogen will be released through the charging valve (13-60) as the piston (17-200) moves.

- (n) Slowly increase the nitrogen pressure to between 67,59 and 70,34 bar (980 and 1020 lbf/in²).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

- (o) Close the charging valve (17-20); use the Crowfoot Wrench T14500 to torque it to between 5,7 and 7,9 N m (50 and 70 lbf in).
 - (p) Disconnect the nitrogen supply and remove the Turner Inflation Equipment T14218 and the Charging Adapter 460002502.
 - (q) Use the Turner Inflation Equipment T14218 and the Charging Adapter 460002502 to connect the nitrogen supply to the charging valve (13-60).
 - (r) Slowly increase the nitrogen pressure to between 6,90 and 8,27 bar (100 and 120 lbf/in²).
 - (s) Close the charging valve (13-60); use the Crowfoot Wrench T14500 to torque it to between 5,7 and 7,9 N m (50 and 70 lbf in).
 - (t) Disconnect the nitrogen supply and remove the Turner Inflation Equipment T14218 and the Charging Adapter 460002502.
- (3) Leakage Tests
- (a) Make a record of the nitrogen pressure at the charging valve (13-60), (P1A) and the charging valve (17-20), (P1B).
 - (b) Make a record of the ambient temperature, (T1).
 - (c) Keep the unit in this condition for a minimum of six hours.
 - (d) Measure the nitrogen pressure at the charging valve (13-60), (P2A) and the charging valve (17-20), (P2B).
 - (e) Measure the ambient temperature, (T2).
 - (f) Compare the pressures P1A and P2A and compare the pressures P1B and P2B. The pressures P1A and P2A must be the same and the pressures P1B and P2B must be the same, unless:
 - 1 There is a difference between the temperatures T1 and T2
 - 2 There is an error because of the pressure gauge capacity.
 - (g) If there is a difference between the temperatures T1 and T2, calculate the correct value for the nitrogen pressures (these will be P3A and P3B) and adjust the pressures to the corrected values. Use the formula:

$$P3A = \frac{(P2A + Z) \times (T1 + K)}{(T2 + K)} - Z$$


OR

$$P3B = \frac{(P2B + Z) \times (T1 + K)}{(T2 + K)} - Z$$

Where K = 273 for temperatures in °C
(459 for temperatures in °F)

Z = 1 for pressures in bar
(15 for pressures in lbf/in²)

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

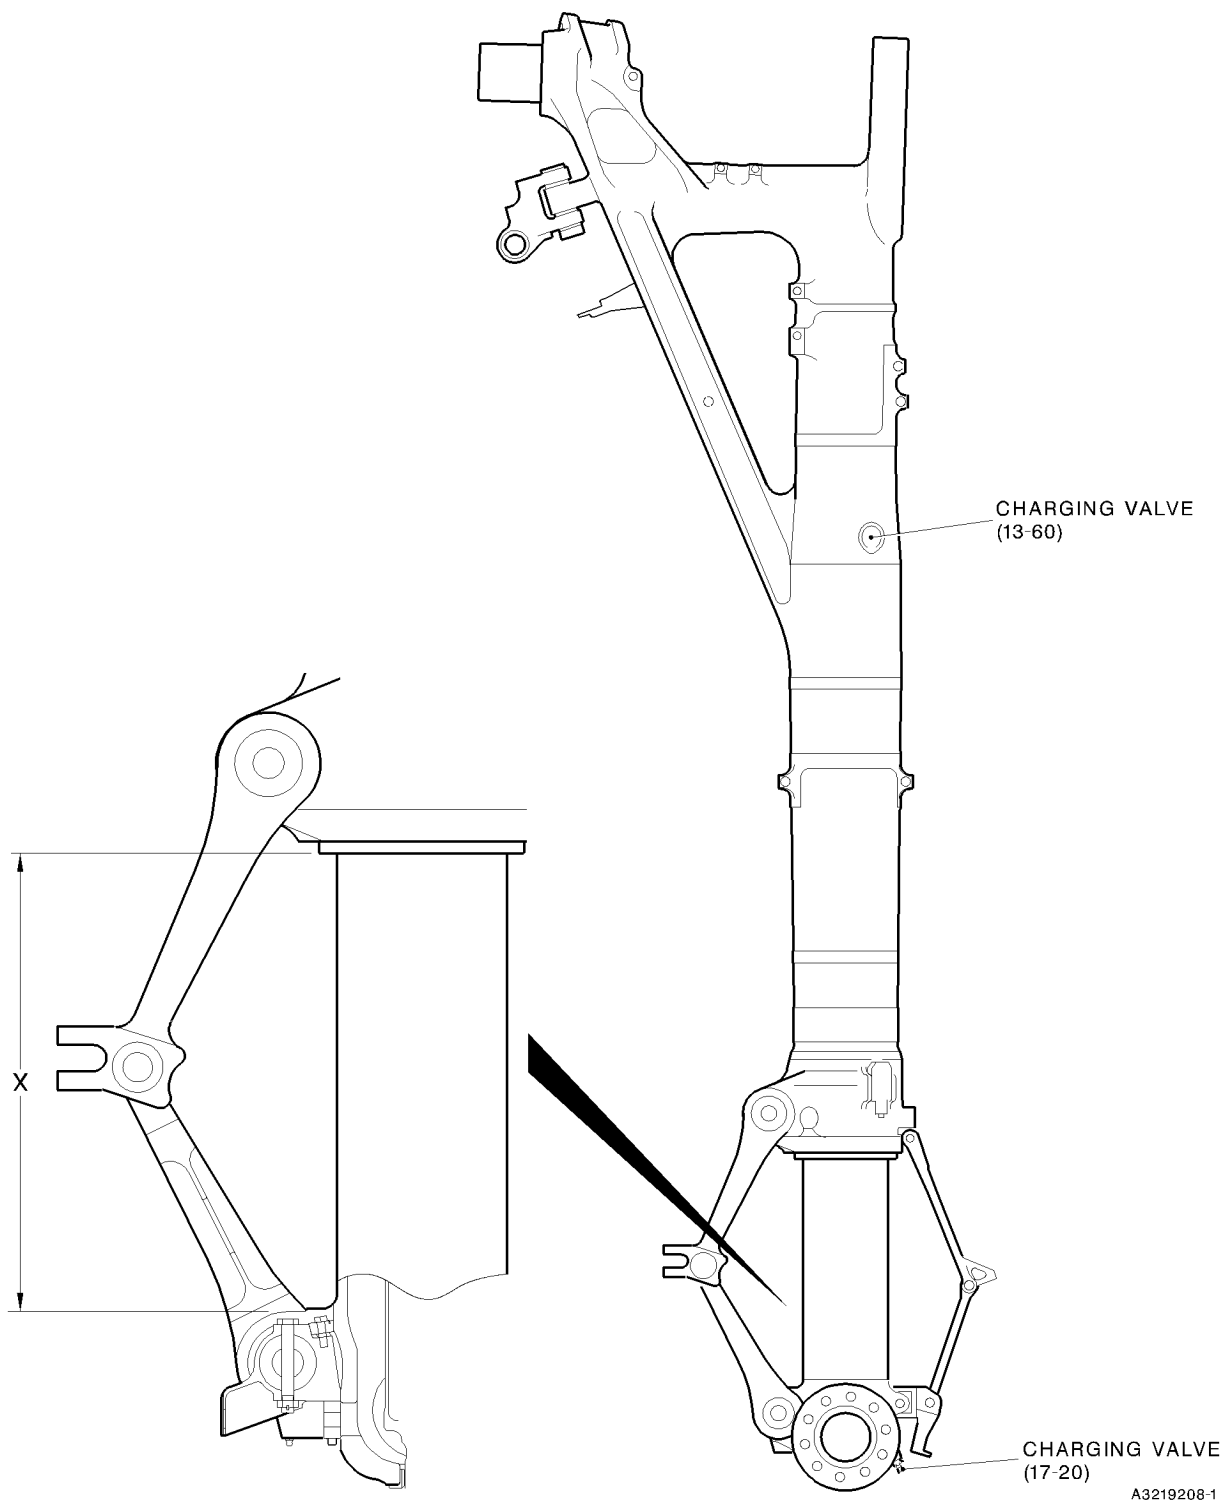

Main Landing Gear Leg (1-1)
Figure 101

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

(h) If there is an error because of the gauge capacity:

- 1 Close the charging valve (13-60).
- 2 Release the pressure in the gauge.
- 3 Open the charging valve (13-60) and measure the nitrogen pressure, (P4A).
- 4 Close the charging valve (13-60).
- 5 Close the charging valve (17-20).
- 6 Release the pressure in the gauge.
- 7 Open the charging valve (17-20) and measure the nitrogen pressure, (P4B).
- 8 Calculate the correct values for the nitrogen pressures (these will be P5A and P5B) and adjust the pressures to the corrected values. Use the formula:

$$P5A = P1A + (P2A - P4A)$$

OR

$$P5B = P1B + (P2B - P4B)$$

(4) Prepare for Transport and Storage

- (a) Open the charging valve (13-60) and reduce the nitrogen pressure to between 3,45 and 4,82 bar (50 and 70 lbf/in²).
- (b) Close the charging valve (13-60); use the Crowfoot Wrench T14500 to torque it to between 5,7 and 7,9 N m (50 and 70 lbf in).
- (c) Open the charging valve (17-20) and reduce the nitrogen pressure to between 3,45 and 4,82 bar (50 and 70 lbf/in²).
- (d) Close the charging valve (17-20); use the Crowfoot Wrench T14500 to torque it to between 5,7 and 7,9 N m (50 and 70 lbf in).
- (e) Write this data on a label and attach it to the unit: THE GEAR MUST BE INFLATED TO THE APPROPRIATE PRESSURES BEFORE BEING PLACED IN SERVICE.

(5) Complete the torque procedure for the retaining pins (13-10): refer to ASSEMBLY.

C. Proximity Switches (7-40 and 7-230) Adjustments and Tests

- (1) Use the loading press: set the dimension between the pins (10-80 and 11-130) to between 632,80 and 636,95 mm (24.9134 and 25.0767 in).
- (2) Adjust the spacers (6-140, 7-50, 7-190 and 7-240) or laminated shims (6-140A, 7-50A, 7-90A and 7-240A): refer to ASSEMBLY.

NOTE: If the calculated gap is in the tolerance, the spacers (6-140, 7-50, 7-190 and 7-240) or laminated shims (6-140A, 7-50A, 7-90A and 7-240A) are not necessary.

- (3) Connect the 28 VDC power supply, the Lampbox 460005842 and the main landing gear leg (1-1).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG


- (4) Use the loading press to fully extend the main landing gear leg (1-1).
 - (5) Use the loading press to slowly close the main landing gear leg (1-1):
 - (a) The proximity switch (7-230) must operate before the main landing gear leg (1-1) has closed by 26,00 mm (1.0236 in).
 - (b) The proximity switch (7-40) must operate before the main landing gear leg (1-1) has closed by 29,30 mm (1.1535 in).
 - (6) Do para (4) and (5) again.
 - (7) Disconnect the 28 VDC supply and the Lampbox 460005842.
 - (8) Remove the main landing gear leg (1-1) from the loading press.
- D. Electrical Bonding Resistance Tests ([Refer to Figure 102](#))

CAUTION: DO NOT CAUSE DAMAGE TO THE PAINT FINISH.

NOTE: Make sure that the main landing gear leg (1-1) is electrically isolated from the equipment that is used to hold it.

- (1) Use the Milliohmmeter Megger, Type BT51, to measure the electrical bonding resistance.
 - (a) Measure between the bearing (20-250) and the test points given in Table 101. The electrical bonding resistance must not be more than the limit given in Table 101.
 - (b) Measure between the axle of the sliding tube subassembly (17-240) and the test points given in Table 102. The electrical bonding resistance must not be more than the limit given in Table 102.

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

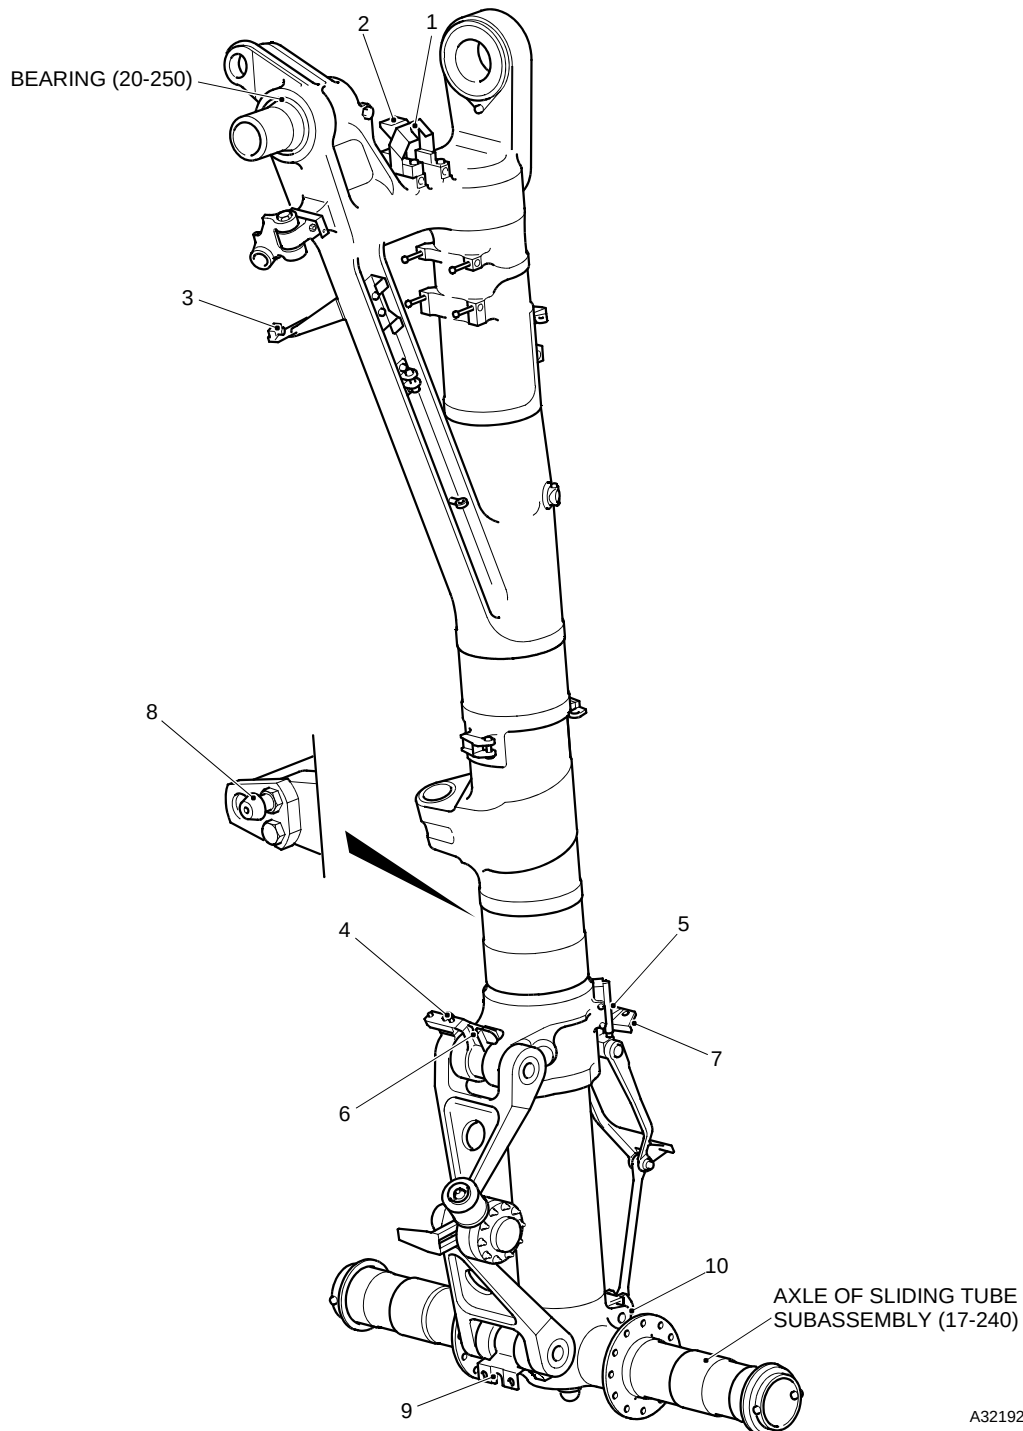

A3219209-2

Electrical Bonding Resistance Test Points (Tables 101 and 102)
Figure 102

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
Electrical Bonding Resistance Tests
Table 101 ([Refer to Figure 102](#))

TEST POINT	IPL FIGURE AND ITEM No.	NAME	LIMIT VALUE MILLIOHMS
1	2-80	Bracket	10
2	2-120	Bracket	10
3	4-100	Proximity switch connector shell	20
4	7-230	Proximity switch connector shell	20
5	7-100	Harness support bracket	20
6	10-160	Upper pivot bracket	20
7	7-40	Proximity switch connector shell	20
8	5-390	Static discharge connector	10

Electrical Bonding Resistance Tests
Table 102 ([Refer to Figure 102](#))

TEST POINT	IPL FIGURE AND ITEM No.	NAME	LIMIT VALUE MILLIOHMS
9	11-140	Harness support bracket	20
10	8-170	Bracket	20

4. Fault Isolation

A. To be given subsequently.

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
DISASSEMBLY

1. General

WARNING: DO NOT GET HYDRAULIC FLUID ON YOUR SKIN OR IN YOUR EYES. DO NOT BREATHE THE FUMES. ONLY USE IN A LOCATION THAT HAS A CONTINUOUS FLOW OF CLEAN AIR. HYDRAULIC FLUID IS POISONOUS AND DANGEROUS.

NOTE: Refer to **TESTING AND FAULT ISOLATION** to find the necessary level of disassembly. This will give the condition of the component or the possible cause of its malfunction.

- A. Make sure that the work area, the tools and the equipment are clean.
- B. Discard parts that you must not use again. These include:

IPL Fig/Item No.	Part Name
1-10	Split pin
1-41	Heat shrink sleeve
1-43	Ferrule
1-45	Bowden cable
1-80	Tab washers
2-70	Tab washers
2-150	Tab washer
2-180	Tab washers
2-200	Tab washer
2-230	Split pins
3-20	Split pin
3-180	Split pin
4-20	Split pin
4-110	Split pins
4-170	Tab washers
4-200	Tab washers
4-220	Split pin
4-270	Split pins
5-170	Split pin
5-320	Split pins
5-360	Split pin
6-60	Split pin
6-240	Split pin
7-60	Split pins
8-40	Split pins

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

IPL Fig/Item No.	Part Name
8-100	Split pins
9-10	Split pin
10-20	Tab washers
10-40	Split pin
10-100	Tab washers
10-150	O-ring seals
11-70	Tab washers
11-90	Split pin
12-10	Split pins
12-50	Split pins
12-100	O-ring seal
12-110	Backing ring
12-130	O-ring seals
12-140	Backing rings
12-150	O-ring seals
12-160	Backing rings
13-67	O-ring seal
13-120	O-ring seal
13-140	Split pin
14-20	Split pins
15-80	Locking plate
15-90	Screws
15-100	Tab washers
15-120	Pin
15-170	Tab washers
15-250	O-ring seal
15-260	Backing rings
15-280	Seal
15-290	Seal
15-310	O-ring seal
15-320	Split pin
16-20	O-ring seal
16-30	Backing rings
16-40	O-ring seal
16-50	Backing rings
16-60	Seal

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

IPL Fig/Item No.	Part Name
16-70	Seal
16-80	Joint seal
16-90	Sealing ring
16-100	Wiper ring
16A-117	Inner liner
17-27	O-ring seal
17-60	O-ring seal
17-70	Backing ring
17-90	Lock washer
17-110	Tab washers
17-190	Seal
17-210	O-ring seal
17-220	Backing ring
19-10	Split pin

C. Wire Thread Inserts

(1) If necessary, remove the wire thread inserts:

- (a) Bend the outer coil of the wire thread insert to the centre of the hole.
- (b) Remove the wire thread insert. Make sure that broken pieces do not stay in the hole.

D. Special Tools

(1) These special tools are necessary:

NOTE: Alternative equivalents are permitted.

Part No.	Special Tool	Function
MT1025	Bench Clamp	Use with MT1026/63 and 460006406
MT1026/63	Holding Blocks	Hold the cylinder (17-230)
T14500	Crowfoot Wrench	Remove the charging valves (13-60 and 17-20)
T14544	Torque Adapter	Remove the nut (9-50)
460001355	Extractor	Remove the lubrication adapters (18-60), (20-130), (20-160), (20-190) and (20-220)
460004331/1	Drift	Use with 460006151/47
460004331/7	Drift	Use with 460006151/24, 460006151/25, 460006151/26 and 460006151/51

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

Part No.	Special Tool	Function
460004331/8	Drift	Use with 460006151/7, 460006151/20, 460006151/30 and 460006151/31
460004331/9	Drift	Use with 460006151/47, 460006151/87 and 460006151/88
460004331/20	Drift	Use with 460006151/21 and 460006151/22
460004331/21	Drift	Use with 460006151/9, 460006151/10 and 460007259
460004680	Extraction Tube	Remove the forward pintle bush (20-250A)
460006151/7	Extractor	Remove the bushes (18-30)
460006151/9	Extractor	Remove the bushes (20-340) and (20-350)
460006151/10	Extractor	Remove the bushes (10-250, 11-230, 18-40 and 20-330)
460006151/20	Extractor	Remove the bushes (18-20)
460006151/21	Extractor	Remove the bush (15-370)
460006151/22	Extractor	Remove the bush (15-380)
460006151/24	Extractor	Remove the bearings (5-280 and 5-290) and the bushes (20-380)
460006151/25	Extractor	Remove the bearing (4-340) and the bush (20-360)
460006151/26	Extractor	Remove the bearing (4-350)
460006151/30	Extractor	Remove the bush (6-210 and 8-160)
460006151/31	Extractor	Remove the bush (6-220 and 8-150)
460006151/47	Extractor	Remove the bearings (20-230, 20-240 and 20-290)
460006151/48	Extractor	Remove the bearing (20-290)
460006151/51	Extractor	Remove the bushes (20-390)
460006151/86	Extractor	Remove the bushes (20-320)
460006151/87	Extractor	Remove the bearing (20-270)
460006151/88	Extractor	Remove the bearing (20-260)
460006208	Lifting Bar Assembly	Hold the main landing gear leg (1-1), use with 460007281 and 460007282
460006211	Lifting Tackle	Lift the sliding tube subassembly (17-240) and related parts

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

Part No.	Special Tool	Function
460006213	Transport and Build Trolley	Hold the main landing gear leg (1-1)
460006215	Support Arms	
460006216	Towing Frame	
460006223	Jacking Dome Adapter	
460006237	Adapter	
460006232	Extraction Pad	Remove the bearing (20-300)
460006253	Extractor	Remove the bearing (20-280)
460006261	Extraction Pad	Remove the bearing (20-310)
460006262	Extraction Bar	Use with 460006232, 460006263 and 460006261
460006263	Extraction Pad	Remove the bearing (20-300)
460006267	Press Pad Assembly	Remove drag arm sleeve (20-370A)
460006404	Torque Adapter	Remove the jacking dome (17-80)
460006406	Holding Blocks	Hold the upper diaphragm tube (15-390)
460006410	Assembly/Extraction Tool	Remove the level tube (15-300)
460006413	Extractor	Remove the bushes (7-130)
460006415	Extractor Pad and Drawbolt	Remove the bush (2-310)
460006416	Extractor	Remove the bush (2-320)
460006497	Hydraulic-Pneumatic Pump Set	To remove the forward pintle bush (2-250A)
460006498/7	Bolt	
460006499/25	Press Pad	
460007230	Torque Adapter	Remove the nuts (14-60)
460007231	Spacer	Use with 460007282
460007232	Torque Adapter	Remove the locking nut (19-52)
460007234	Location Frame	Hold the main landing gear leg (1-1) (left configuration)
OR 460007235	Location Frame	Hold the main landing gear leg (1-2) (right configuration)
460007240	Build Trolley	Hold the sliding tube subassembly (17-240) and related parts

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

Part No.	Special Tool	Function
460007242	Torque Reaction Adapter	Hold the pin (9-70)
460007254	Extractor	Remove the bush (18-50)
460007259	Extractor Plate	Remove the bushes (20-340 and 20-350)
460007278	Torque Reactor	Use with 460006406
460007279	Pin Spanner	Remove the upper bearing housing (15-40)
460007281	Pintle Location Assembly	Hold the main landing gear leg (1-1), use with 460006208
460007282	Spherical Bearing Locator	
460007283	Torque Adapter	Remove the diaphragm subassembly (15-190)
460007284	Pin Spanner	Remove the nut subassembly (17-130)

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

2. Procedure (Refer to IPL Figures 1 to 20)

A. Initial Operations

- (1) Use these special tools as necessary during the procedure to lift and to hold the unit:
 - (a) The Lifting Bar Assembly 460006208
 - (b) The Spherical Bearing Locator 460007282
 - (c) The Pintle Location Assembly 460007281
 - (d) The Transport and Build Trolley 460006213
 - (e) The Support Arms 460006215
 - (f) The Towing Frame 460006216
 - (g) The Jacking Dome Adapter 460006223
 - (h) The Adapter 460006237
 - (i) The Spacer 460007231
 - (j) The Location Frame 460007234 (for left configuration units)
 - (k) The Location Frame 460007235 (for right configuration units).

B. Pintle Pin (1-60)

- (1) Pre SB 201-32-22: remove the split pin (1-10), the nut (1-20), the washer (1-30), the bolt (1-40) and the washer (1-50).
- (2) Post SB 201-32-22: remove the split pins (1-10A), the nuts (1-20A), the spacers (1-25), the washers (1-30A), the shims (1-35), the bolt subassembly (1-40A) and the washers (1-50A).
- (3) Post SB 201-32-22: cut the Bowden cable (1-45) and remove the cross bolts (1-47 and 1-49).
- (4) Remove the pintle pin (1-60).
- (5) Remove the bolts (1-70), tab washers (1-80), nuts (1-90) and retainers (1-100).
- (6) Remove the wiring diagram plate (1-110).

C. PRE SB 201-32-81: Transfer Block Subassembly (2-290 and 2-290A)

- (1) Remove the bolt (2-10), the washer (2-20), the pin (2-30), the spacer (2-40) and the threaded insert (2-50).
- (2) Release the tab washers (2-70). Remove the bolts (2-60), the tab washers (2-70) and the bracket (2-80).
- (3) Remove the bolts (2-100), the washers (2-110) and the bracket (2-120).
- (4) Release the tab washer (2-150). Remove the bolt (2-140), the tab washer (2-150) and the bonding cable (2-160).
- (5) Release the tab washers (2-180 and 2-200). Remove the bolts (2-170 and 2-190) and the tab washers (2-180 and 2-200).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

- (6) Remove the nuts (2-210) and retainers (2-220).
 - (7) Remove the split pins (2-230), the nuts (2-240), the washers (2-250), the bolts (2-260) and the bracket (2-270).
 - (8) Remove the transfer block subassembly (2-290 and 2-290A).
 - (9) Use the Extractor Pad and Drawbolt 460006415 to remove the bush (2-310) and the Extractor 460006416 to remove the bush (2-320) from the transfer block (2-340 and 2-340A).
- D. POST SB 201-32-81: Transfer Block Subassembly (2-290B)
- (1) Remove the bolt (2-10), the washer (2-20), the pin (2-30), the spacer (2-40) and the threaded insert (2-50).
 - (2) Release the tab washer (2-150). Remove the bolt (2-140), the tab washer (2-150) and the bonding cable (2-160).
 - (3) Release the tab washers (2-180 and 2-200). Remove the bolts (2-170 and 2-190A) and the tab washers (2-180 and 2-200).
 - (4) Remove the nuts (2-210) and retainers (2-220).
 - (5) Remove the transfer block subassembly (2-290B).
 - (6) Use the Extractor Pad and Drawbolt 460006415 to remove the bush (2-310) and the Extractor 460006416 to remove the bush (2-320) from the transfer block (2-340B).
- E. Cardan Assembly (3-10)
- (1) Remove the split pin (3-20), the nut (3-30), the washer (3-40), the pin (3-50), the spacers (3-60 and 3-70) and the cardan assembly (3-10).
 - (2) Remove the lubrication fittings (3-80, 3-100 and 3-120) and the identification washers (3-90, 3-110 and 3-130) from the lock stay cardan subassembly (3-140).
 - (3) Remove the bushes (3-150 and 3-160) from the lock stay cardan (3-170).
 - (4) Remove the split pin (3-180), the nut (3-190), the washer (3-200), the bolt (3-210) and the bracket (3-220).
- F. Rod End Assembly (4-10), Proximity Switch (4-100) and Bracket Subassembly (4-330)
- (1) Remove the split pin (4-20), the nut (4-30), the washer (4-40) and the rod end assembly (4-10).
 - (2) Remove the spherical bearing (4-50) from the rod end (4-60).
 - (3) Remove the nuts (4-70), the washers (4-80), the cap screws (4-90) and the proximity switch (4-100).
 - (4) Remove the split pins (4-110), the nuts (4-120), the washers (4-130) and the bracket (4-140).
 - (5) Release the tab washers (4-170 and 4-200). Remove the nuts (4-160), the tab washers (4-170), the spacer (4-180), the bolts (4-190), the tab washers (4-200) and the bracket (4-210).
 - (6) Remove the split pin (4-220), the nut (4-230), the washer (4-240), the bolt (4-250) and the sleeve (4-260).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

- (7) Remove the split pins (4-270), the nuts (4-280), the washers (4-290) and the bolts (4-300).
 - (8) Remove the bonding cable (4-310) and the washer (4-320).
 - (9) Remove the bracket subassembly (4-330).
 - (10) Use the Drift 460004331/7 and the Extractor 460006151/25 to remove the bearing (4-340) from the bracket (4-360).
 - (11) Use the Drift 460004331/7 and the Extractor 460006151/26 to remove the bearing (4-350) from the bracket (4-360).
- G. Bracket Assembly (5-10), Bracket Subassemblies (5-90 and 5-270) and Uplock Pin (5-400)
- (1) Remove the bolts (5-20 and 5-40), the washers (5-30 and 5-50), the nut (5-60) and the bracket assembly (5-10).
 - (2) Remove the spherical bearing (5-70) from the bracket (5-80): refer to M-DLPS1014-2.
 - (3) Remove the bolts (5-100 and 5-120), the washers (5-110 and 5-130), the nut (5-140) and the bracket subassembly (5-90).
 - (4) Remove the spherical bearing (5-150) from the bracket (5-160): refer to M-DLPS1014-2.
 - (5) Remove the split pin (5-170), the nut (5-180), the washer (5-190), the bolt (5-200) and the sleeve (5-210).
 - (6) Remove the bolt (5-220), the washer (5-230) and the bonding cable (5-240).
 - (7) Remove the bolt (5-250), the washer (5-260), the bracket subassembly (5-270) and the nut (5-310).
 - (8) Use the Drift 460004331/7 and the Extractor 460006151/24 to remove the bearings (5-280 and 5-290) from the bracket (5-300).
 - (9) PRE SB 201-32-72:
 - (a) Remove the split pins (5-320), the nuts (5-330), the washers (5-340) and the bolts (5-350).
 - (b) Remove the split pin (5-360), the nut (5-370), the washer (5-380), the static discharge connector (5-390) and the uplock pin (5-400).
 - (10) POST SB 201-32-72:
 - (a) Remove the split pins (5-320A), the nuts (5-330A), the washers (5-340B) and the bolts (5-350A).
 - (b) Remove the ground stud subassembly (5-390A), the washer (5-380B), the bolt (5-395) and the uplock pin (5-400A).
- H. Slave Link Subassembly (6-190) and Lower Slave Link Subassembly (6-290)
- (1) Remove the split pin (6-10), the nut (6-20), the washer (6-30), the bolt (6-40) and the spacer (6-50).
 - (2) Remove the split pin (6-60), the slotted nut (6-70), the washer (6-80) and the pivot pin (6-90).
 - (3) Remove the slave link subassembly (6-190) and its attached parts.

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

- (4) Remove the nuts (6-100), the washers (6-110), the cap screws (6-120), the target (6-130) and the spacers (6-140) or the laminated shim (6-140A).

NOTE: If the calculated gap is in the tolerance, the spacers (6-140) or the laminated shim (6-140A) is not installed.

- (5) Remove the bolts (6-150), the washers (6-160) and the bracket (6-170).
- (6) Remove the bushes (6-200) from the slave link (6-230).
- (7) Use the Drift 460004331/8 and the Extractor 460006151/30 to remove the bush (6-210) from the slave link (6-230).
- (8) Use the Drift 460004331/8 and the Extractor 460006151/31 to remove the bush (6-220) from the slave link (6-230).
- (9) Remove the split pin (6-240), the nut (6-250), the washer (6-260), the bolt (6-270) and the spacer (6-280): remove the lower slave link subassembly (6-290).
- (10) Remove the grooved spherical bearing (6-300) or the self lubricating bearing (6-300A) from the lower slave link (6-310).

I. Proximity Switches (7-40 and 7-230) and Harness Support Bracket (7-100)

- (1) Remove the nuts (7-10), the washers (7-20), the cap screws (7-30), the proximity switch (7-40) and the spacer (7-50) or the laminated shim (7-50A).

NOTE: If the calculated gap is in the tolerance, the spacer (7-50) or the laminated shim (7-50A) is not installed.

- (2) Remove the split pins (7-60), the nuts (7-70), the washers (7-80), the bolts (7-90) and the harness support bracket (7-100).
- (3) Remove the pivot bracket subassembly (7-120).
- (4) Use the Extractor 460006413 to remove the bushes (7-130) from the pivot bracket (7-140).
- (5) Remove the nuts (7-150), the washers (7-160), the cap screws (7-170), the target (7-180) and the spacer (7-190) or the laminated shim (7-190A).

NOTE: If the calculated gap is in the tolerance, the spacer (7-190) or the laminated shim (7-190A) is not installed.

- (6) Remove the nuts (7-200), the washers (7-210), the cap screws (7-220), the proximity switch (7-230) and the spacer (7-240) or the laminated shim (7-240A).

J. Bracket Subassembly (8-90)

- (1) Remove the nuts (8-10), the washers (8-20) and the bolts (8-30).
- (2) Remove the split pins (8-40), the nuts (8-50), the washers (8-60), the bolts (8-70) and the bracket (8-80).
- (3) Remove the split pin (8-100), the nut (8-110), the washer (8-120), the sleeves (8-130) and the bolt (8-140). Remove the bracket subassembly (8-90).
- (4) Use the Extractor 460006151/31 and the Drift 460004331/8 to remove the bush (8-150).
- (5) Use the Extractor 460006151/30 and the Drift 460004331/8 to remove the bush (8-160).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

K. Damper (9-160)

- (1) Remove the split pin (9-10), the nut (9-20), the washer(s) (9-30) and the bolt (9-40).
- (2) Remove the clamp (9-165) and the dust cap (9-170).
- (3) Use the Torque Reaction Adapter 460007242 to hold the pin (9-70) and use the Torque Adapter T14544 to remove the nut (9-50). Remove the spacer (9-60), the pin (9-70), the spacer (9-80) and the sleeve (9-90).
- (4) Remove the bolts (9-100), the washers (9-110), the bolts (9-120), the washers (9-130), the bolts (9-140), the washers (9-145) and the bracket (9-150).
- (5) Remove the damper (9-160), the spacers (9-180 and 9-190) and the sleeve (9-200).

L. Upper Torque Link Subassembly (10-170)

- (1) Release the tab washers (10-20). Remove the bolts (10-10), the tab washers (10-20) and the wedge (10-30).
- (2) Remove the split pin (10-40), the nut (10-50), the washers (10-60), the bolt (10-70) and the pin (10-80).
- (3) Remove the upper torque link subassembly (10-170), the upper pivot bracket (10-160) and the spacers (10-270).
- (4) Remove the lubrication shaft subassembly (10-90) from the pin (10-80).
- (5) Remove the O-ring seals (10-150) from the lubrication shaft subassembly (10-90).
- (6) Remove the lubrication fittings (10-120) and the identification washers (10-130).
- (7) Release the tab washers (10-100). Remove the lubrication adapters (10-110) and the tab washers (10-100).
- (8) Remove the lubrication fittings (10-180 and 10-210) and the identification washers (10-190 and 10-220). Remove the lubrication adapters (10-200 and 10-230).
- (9) Remove the bushes (10-240).
- (10) Use the Extractor 460006151/10 to remove the bushes (10-250) from the upper torque link (10-260).

M. 1M Electrical Axle Harness (11-40) and 2M Electrical Axle Harness (11-50)

- (1) Remove the cap screws (11-10), the washers (11-20) and the harness support (11-30).
- (2) Remove the 2M electrical axle harness (11-50).
- (3) Remove the 1M electrical axle harness (11-40).

N. Lower Torque Link Subassembly (11-150)

- (1) Release the tab washers (11-70).
- (2) Remove the bolts (11-60), the tab washers (11-70) and the wedge (11-80).
- (3) Remove the split pin (11-90), the nut (11-100), the washer (11-110) and the bolt (11-120).
- (4) Remove the pin (11-130), the harness support bracket (11-140), the lower torque link subassembly (11-150) and the spacers (11-250).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

- (5) Remove the lubrication fittings (11-160 and 11-190) and the identification washers (11-170 and 11-200). Remove the lubrication adapters (11-180 and 11-210).
 - (6) Remove the bushes (11-220).
 - (7) Use the Extractor 460006151/10 to remove the bushes (11-230) from the lower torque link (11-240).
- O. Housing (12-170)
- (1) Remove the split pins (12-10), the nuts (12-20), the washers (12-30) and the bolts (12-40).
 - (2) Remove the housing (12-170) and its related parts.
 - (3) Remove the split pins (12-50), the washers (12-60), the pin (12-70) and the cap screw (1).
 - (4) Remove the valve stem (12-90).
 - (5) Remove the O-ring seal (12-100) and the backing ring (12-110).
 - (6) Remove the transfer dowels (12-120).
 - (7) Remove the O-ring seals (12-130 and 12-150) and the backing rings (12-140 and 12-160).
- P. Shock Absorber Subassembly (13-50) and Related Parts
- (1) Remove the split pins (14-20), the nuts (14-30), the washers (14-40) and the bolts (14-50).
 - (2) Use the Torque Adapter 460007230 to remove the nuts (14-60).
 - (3) Remove the stop rings (14-70).
- WARNING: RELEASE ALL NITROGEN PRESSURE BEFORE YOU REMOVE THE CHARGING VALVES (13-60 AND 17-20).**
- (4) Slowly open the charging valve (17-20) and release all of the second stage nitrogen pressure.
 - (5) Slowly open the charging valve (13-60) and release all of the first stage nitrogen pressure.
 - (6) Release the cup washers (13-20).
 - (7) Remove the retaining pins (13-10) and the cup washers (13-20).
 - (8) Remove the lubrication fittings (13-30) and the identification washers (13-40).
 - (9) Use the Crowfoot Wrench T14500 to remove the charging valve (13-60). Remove the O-ring seal (13-67) from the charging valve (13-60).
 - (10) Remove the bolts (13-70), the spacers (13-80) and the inflation valve subassembly (13-90).
 - (11) Remove the plate (13-100) from the inflation valve (13-110).
 - (12) Remove the O-ring seal (13-120) and the backing rings (13-130).
 - (13) Remove the split pin (13-140), the nut (13-150), the washers (13-160), the bolt (13-170) and the stop ring (13-180).
 - (14) Remove the pin (13-190), the washer subassembly (13-200) and the bush (13-230).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

- (15) Remove the shock absorber subassembly (13-50) and its related parts from the main fitting subassembly (20-90).
- (16) Use the Lifting Tackle 460006211 and install the sliding tube subassembly (17-240) in the Build Trolley 460007240.
- (17) Remove the bearings (15-20 and 15-30).
- (18) Remove the upper bearing housing (15-40) and related parts as follows:
 - (a) Release the tab washers (15-100).
- CAUTION: DISCARD THE SCREWS (15-90) AND THE LOCKING PLATES (15-80) WHEN REMOVED.**
- (b) Remove the screws (15-90) and the tab washers (15-100).
 - (c) Remove the locking plate (15-80).
 - (d) Use Pin Spanner 460007279 to remove the upper bearing housing (15-40).
 - (e) Remove and discard the pins (15-120).
 - (f) Remove the two piece stop with inserts (15-130).
- (19) Remove the locking pins (15-50), the retaining ring (15-60) and the recoil orifice plate (15-70).
- (20) Remove the upper diaphragm tube subassembly (15-360) and its related parts.
- (21) Release the tab washers (15-170). Remove the bolts (15-160), the tab washers (15-170) and the lock plate (15-180).
- (22) Use the Torque Adapter 460007283, the Torque Reactor 460007278, the Holding Blocks 460006406 and the Bench Clamp MT1025 to remove the diaphragm subassembly (15-190), the compression orifice plate (15-220), the clapper seat (15-230) and the baffle (15-240).
- (23) Remove the O-ring seal (15-250) and the backing rings (15-260).
- (24) Remove the bearing (15-270) and the seals (15-280 and 15-290).
- (25) Use the Assembly/Extraction Tool 460006410 to remove the level tube (15-300) and remove the O-ring seal (15-310).
- (26) Remove the split pin (15-320), the nut (15-330), the washer (15-340) and the bolt (15-350).
- (27) Use the Extractor 460006151/21 and the Drift 460004331/20 to remove the bush (15-370).
- (28) Use the Extractor 460006151/22 and the Drift 460004331/20 to remove the bush (15-380) from the upper diaphragm tube (15-390).
- (29) Lower Bearing Subassembly (16-110) Pre SB 201-32-58
 - (a) Remove the lower bearing subassembly (16-110) and its related parts from the sliding tube subassembly (17-240).
 - (b) Remove the O-ring seal (16-20), the backing rings (16-30), the O-ring seal (16-40) and the backing rings (16-50).
 - (c) Remove the seals (16-60 and 16-70).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

- (d) Remove the joint seal (16-80), the sealing ring (16-90) and the wiper ring (16-100).
 - (e) Remove the lower bearing (16-150) from the lower bearing housing subassembly (16-120).
 - (f) Remove the bushes (16-130) from the gland housing (16-140).
- (30) Lower Bearing Subassembly (16A-110D) Post SB 201-32-58
- (a) Remove the lower bearing subassembly (16A-110D) and its related parts from the sliding tube subassembly (17-240).
 - (b) Remove the O-ring seal (16A-20), the backing rings (16A-30), the O-ring seal (16A-40) and the backing rings (16A-50).
 - (c) Remove the seals (16A-60 and 16A-70).
 - (d) Remove the joint seal (16A-80), the sealing ring (16A-90) and the wiper ring (16A-100).
 - (e) Remove the inner liner (16A-117) from the lower bearing subassembly (16A-110D) and discard it.
 - (f) Remove the lower bearing (16A-150A) from the lower bearing housing subassembly (16A-120B). Discard the machined lower bearing (16A-150A).
 - (g) Remove the bushes (16A-130A) from the gland housing (16A-140B).
- (31) Lower Bearing Subassembly (16-110D or 16A-110E) Post Ref. Code: 2253
- (a) Remove the lower bearing subassembly (16-110D or 16A-110E) and its related parts from the sliding tube subassembly (17-240).
 - (b) Remove the O-ring seal (16-20A or 16A-20A), the backing rings (16-30 or 16A-30), the O-ring seal (16-40A or 16A-40A) and the backing rings (16-50 or 16A-50).
 - (c) Remove the seals (16-60 or 16A-60) and (16-70 or 16A-70).
 - (d) Remove the joint seal (16-80 or 16A-80), the sealing ring (16-90 or 16A-90) and the wiper ring (16-100 or 16A-100).
 - (e) Remove the common lower bearing bushes (16-130A or 16A-130B) from the lower bearing housing (16-140B or 16A-140C).
- (32) Use the Crowfoot Wrench T14500 to remove the charging valve (17-20). Remove the O-ring seal (17-27) from the charging valve (17-20).
- (33) Remove the cap screws (17-30), the washers (17-40) and the valve support (17-50).
- (34) Remove the O-ring seal (17-60) and the backing ring (17-70).
- (35) Release the lock washer (17-90) and use the Torque Adapter 460006404 to remove the jacking dome (17-80). Remove the lock washer (17-90).
- (36) Remove the cylinder (17-230) and its related parts from the sliding tube subassembly (17-240).
- (37) Hold the cylinder (17-230) in the Bench Clamp MT1025 and Holding Blocks MT1026/63.
- (38) Release the tab washer (17-110) and remove the bolts (17-100). Remove the tab washers (17-110).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

- (39) Remove the lock plate (17-120) and use the Pin Spanner 460007284 to remove the nut subassembly (17-130). Remove the rod (17-160) and the washer (17-170).
- (40) Remove the piston (17-200) and remove the bearing (17-180) and the seal (17-190).
- (41) Remove the O-ring seal (17-210) and the backing ring (17-220) from the cylinder (17-230).
- (42) Remove the cylinder (17-230) from the Bench Clamp MT1025 and Holding Blocks MT1026/63.
- (43) Remove the labels (17-250 and 17-290).
- (44) Remove the lubrication fittings (17-270) and the identification washers (17-280) from the sliding tube subassembly (17-240).
- (45) Remove the sliding tube subassembly (17-240) from the Build Trolley 460007240.
- (46) Sliding Tube Subassembly (17-240)
 - (a) Remove the bushes (18-10).
 - (b) Use the Extractor 460006151/20 and the Drift 460004331/8 to remove the bushes (18-20).
 - (c) Use the Extractor 460006151/7 and the Drift 460004331/8 to remove the bushes (18-30).
 - (d) Use the Extractor 460006151/10 and the Drift 460004331/21 to remove the bushes (18-40).
 - (e) Use the Extractor 460007254 to remove the bush (18-50).
 - (f) Remove the lubrication fittings (18-52) and identification washers (18-54).
 - (g) Remove the label (18-70) from the sliding tube (18-80).
- Q. Spherical Bearing (19-50) and Bung (19-60)
 - (1) Remove the split pin (19-10), the nut (19-20), the washers (19-30) and the bolt (19-40).
 - (2) Release the lock indentations of the locking washer (19-54).
 - (3) Use the Torque Adapter 460007232 to remove the locking nut (19-52). Remove the locking washer (19-54) and the outer race and the ball of the spherical bearing (19-50).
NOTE: The outer race and the ball are parts of the spherical bearing (19-550). They are a set: keep them together.
 - (4) Remove the bung (19-60).
- R. Main Fitting Subassembly (20-90)
 - (1) Remove the labels (20-10, 20-30, 20-40, 20-60 and 20-80).
 - (2) Remove the lubrication fitting (20-110) and the identification washer (20-120). Remove the lubrication adapter (20-130).
 - (3) Remove the lubrication fitting (20-140) and the identification washer (20-150). Remove the lubrication adapter (20-160).
 - (4) Remove the lubrication fitting (20-170) and the identification washer (20-180). Remove the lubrication adapter (20-190).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

- (5) Remove the lubrication fittings (20-200) and identification washers (20-210). Remove the lubrication adapters (20-220).
- (6) Use the Extractor 460001355 and remove the lubrication adapters (20-130), (20-160) (20-190) and (20-220).
- (7) Use the Extractor 460006151/47 and the Drift 460004331/1 to remove the bearings (20-230 and 20-240).
- (8) Remove the bearing (20-250 only).
- (9) Use the Hydraulic-Pneumatic Pump Set 460006497, the Bolt 460006498/7, the Press Pad 460006499/25 and the Extraction Tube 460004680 and remove the forward pintle bush (20-250A).
- (10) Use the Extractor 460006151/88 and the Drift 460004331/9 to remove the bearing (20-260).
- (11) Use the Extractor 460006151/87 and the Drift 460004331/9 to remove the bearing (20-260 and 20-270).
- (12) Use the Extractor 460006253 to remove the bearing (20-280).
- (13) Use the Extractor 460006151/47/48 and the Drift 460004331/9 to remove the bearing (20-290).
- (14) Use the Extraction Pad 460006263/460006232 and the Extraction Bar 460006262 to remove the bearing (20-300).
- (15) Use the Extraction Pad 460006261 and the Extraction Bar 460006262 to remove the bearing (20-310).
- (16) Use the Extractor 460006151/86 to remove the bushes (20-320).
- (17) Use the Extractor 460006151/10 and the Drift 460004331/21 to remove the bushes (20-330).
- (18) Use the Extractor Plate 460007259/460006151/9 and the Drift 460004331/21 to remove the bushes (20-340 and 20-350).
- (19) Use the Extractor 460006151/25 and the Drift 460004331/7 to remove the bush (20-360).
- (20) Remove the bearing (20-370 only).
- (21) Use the Press Pad Assembly 460006267 and remove the drag arm sleeve (20-370A only).
- (22) Use the Extractor 460006151/24 and the Drift 460004331/7 to remove the bushes (20-380).
- (23) Use the Extractor 460006151/51 and the Drift 460004331/7 to remove the bushes (20-390).
- (24) Remove the bearings (20-400).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
CLEANING

1. General

A. Materials

- (1) These materials are necessary:

NOTE: Alternative equivalents are permitted.

Ref. Item	Material
11-524	White spirit

2. Procedure

A. Cleaning

WARNING: DO NOT GET CLEANING AGENTS ON YOUR SKIN, IN YOUR EYES OR NEAR A FLAME. DO NOT BREATHE THE FUMES. ONLY USE IN A LOCATION THAT HAS A CONTINUOUS FLOW OF CLEAN AIR. CLEANING AGENTS ARE POISONOUS AND FLAMMABLE.

CAUTION: DO NOT USE CHLORINATED SOLVENTS. CHLORINATED SOLVENTS CAN MIX WITH VERY SMALL QUANTITIES OF WATER IN HYDRAULIC SYSTEMS TO MAKE HYDROCHLORIC ACID. HYDROCHLORIC ACID WILL CAUSE CORROSION ON METAL SURFACES.

- (1) Clean all the metal parts with white spirit, Material Ref. Item 11-524. Make sure that you fully remove all sealants, adhesives and jointing compounds.
- (2) Dry all the metal parts.
- (3) Use clean PVC or polythene gloves to prevent corrosion of metal parts.
- (4) Prevent corrosion of the metal parts that you do not immediately use for assembly procedures: refer to PCS-2800.

B. Paint Removal

WARNING: DO NOT GET PAINT STRIPPER ON YOUR SKIN, IN YOUR EYES OR NEAR A FLAME. DO NOT BREATHE THE FUMES. ONLY USE IN A LOCATION THAT HAS A CONTINUOUS FLOW OF CLEAN AIR. PAINT STRIPPER IS POISONOUS AND FLAMMABLE.

- (1) Remove the damaged paint: refer to PCS-2700.
- (2) Clean the part: refer to para 2.A.
- (3) Paint the part: [refer to REPAIR](#).

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

INTENTIONALLY BLANK

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG
CHECK

1. General

A. The procedure to examine the parts is in two levels:

- (1) Detailed Inspection.
- (2) Special Detailed Inspection.

2. Detailed Inspection

A. Examine Parts Visually

- (1) Visually examine each part. Carefully examine changes of section and areas which contact sealing rings.
- (2) Examine each part for these types of damage:
 - (a) Corrosion.
 - (b) Deterioration of protective treatment.
 - (c) Distortion and/or cracks.
 - (d) Wear or fretting.
 - (e) Scores, dents or burrs.
 - (f) Unserviceable screw threads.
 - (g) Parts of permanent assemblies that are not correctly attached.

B. Examine Dimensions

- (1) Measure all the parts that are in **FITS AND CLEARANCES** and compare with the dimensions in the table.
- (2) Spring Data
 - (a) Not applicable.

3. Special Detailed Inspection

A. Special Dimension Check:

- (1) Examine the rod (17-160) for the diameter of radial damping holes. The diameter of each hole must be between 5,40 and 5,60 mm (0.213 and 0.220 in).
- (2) Examine the thread form of the diaphragm subassembly (15-190) and diaphragm (15-210A) with shadow graph projection.

NOTE: The thread size is M142 x 1.5 pitch - 5h6h to BS3643.

- (3) Examine the 4 holes in the sliding tube (18-80) where the bracket (8-170) installs, for burrs. If you find burrs contact Safran Landing Systems who will supply an applicable repair.

NOTE: Use a good light source and 10x magnification to view the area, to look for burrs.

B. Unless instructions are different:

- (1) Examine all parts shown in Tables 501 and 502 to the applicable NDT and information given.

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL

MAIN LANDING GEAR LEG

CAUTION: YOU MUST DISASSEMBLE ALL PARTS, THIS WILL INCLUDE THE BUSHES, THEY MUST BE REMOVED AND DISCARDED. YOU MUST APPLY THE NDT INSPECTION TO THE DETAIL LEVEL PART ONLY AS IDENTIFIED IN TABLES 501 AND 502. IF THE BUSHES ARE NOT REMOVED THE INSPECTION IS NOT COMPLETE FOR THE DETAIL PART AND DAMAGE CAN OCCUR.

- (2) Parts that are included in Tables 501 and 502 must be fully disassembled to the lowest detail level for NDT inspection. This includes the removal of all of the bushes.

Examination of Magnetic Steel Parts by Non-destructive Testing

Table 501

Fig Item No.	Name	Material Type	M-D Spec	Remarks
1-40	Bolt	Steel, S99	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
1-47, 1-47A, 1-49, and 1-49A,	Cross Bolt	Steel, S99	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
1-60	Pintle pin	Steel, S155 or 300M to MTL1201	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
1-60A	Pintle pin	Steel, 300M to MTL1201	PCS-3100 and PCS-3002	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
2-30	Pin	Stainless Steel, 17-4PH to AMS5643	PCS-3100	Inclusion class 4
2-40	Spacer	Stainless Steel, S80	PCS-3100	Inclusion class 3
2-50	Threaded insert	Steel, S154	PCS-3100	Inclusion class 3

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

Fig Item No.	Name	Material Type	M-D Spec	Remarks
3-50	Pin	Steel, S99	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 3 on areas without chromium plate - Chromium plated areas
3-60	Spacer	Stainless Steel, S80	PCS-3100	Inclusion class 3
3-70	Spacer	Stainless Steel, S80	PCS-3100	Inclusion class 3
4-60	Rod end	Steel, S154	PCS-3100	Inclusion class 3
4-190	Bolt	Steel, S154	PCS-3100	Inclusion class 3
4-190A	Special Bolt	Steel 4340 to MTL-1101	PCS-3100	Inclusion class 3
5-160	Bracket	Steel, S99	PCS-3100	Inclusion class 4
5-200	Bolt	Steel, S154	PCS-3100	Inclusion class 3
5-390	Static dis- charge con- nector	Stainless Steel, MAT130 or AMS5659 Cond H1025	PCS-3100	Inclusion class 4
5-400	Uplock pin	Steel, S99	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
5-400A	Uplock pin	Steel, 4340 to MTL-1101	PCS-3100 and PCS-3002	- Inclusion class 3 - Chromium plated areas
6-90	Pin	Steel, S99	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
9-50	Nut	Steel, S99 to MAT123	PCS-3100	Inclusion class 3

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

Fig Item No.	Name	Material Type	M-D Spec	Remarks
9-70	Pin	Steel, S155 or MTL1201	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
9-90	Spacer	Steel, S99	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
9-180	Spacer	Stainless Steel, S145	PCS-3100	Inclusion class 3
9-200	Sleeve	Stainless Steel, S145	PCS-3100	Inclusion class 3
10-80	Pin	Steel, S155 or MTL1201	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
10-260 and 10-260A	Upper torque link	Steel, MAT125	PCS-3100	Inclusion class 3
10-270	Spacer	Stainless Steel, S80	PCS-3100	Inclusion class 2
11-130	Pin	Steel, S155 or MTL1201	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
11-240 and 11-240A	Lower torque link	Steel, MAT125	PCS-3100	Inclusion class 3
12-70	Pin	Steel, S154	PCS-3100	Inclusion class 3
12-90	Valve stem	Steel, S99	PCS-3100	Inclusion class 3
12-90A	Valve stem	Steel, S99 or 4340 to AMS 6414	PCS-3100	Inclusion class 3

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

Fig Item No.	Name	Material Type	M-D Spec	Remarks
13-10 13-10A	Retaining pin	Steel S99	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 2 on areas without chromium plate - Chromium plated areas
13-10B	Retaining pin	Steel, 4340 to MTL-1101	PCS-3100 and PCS-3002	- Inclusion class 3 on areas without chromium plate - Chromium plated areas
13-70	Bolt	Steel	PCS-3100	Inclusion class 2
13-110	Inflation valve	Stainless Steel, Z8CND17-04	PCS-3100	Inclusion class 3
13-110A	Inflation valve	Stainless Steel, Z8CND17-04T1	PCS-3100	Inclusion class 3
13-190 13-190A	Pin	Steel, 35NCD16	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
14-60	Nut	Steel, 35CD4	PCS-3100	Inclusion class 4
15-50	Locking pin	Steel, 35CD4 or 4340 to AMS6414 or 35NCD16 to NCT 10-123-11 MD	PCS-3100	Inclusion class 3
15-60	Retaining ring	Steel, 35CD4 or 4340 to AMS6414 or 35NCD16 to NCT 10-123-11 MD	PCS-3100	Inclusion class 3
15-70	Recoil orifice plate	Steel, 35CD4 or 4340 to AMS6414 or 35NCD16 to NCT 10-123-11 MD	PCS-3100	Inclusion class 2
15-180	Lock plate	Steel, 25CD4S	PCS-3100	Inclusion class 2

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

Fig Item No.	Name	Material Type	M-D Spec	Remarks
15-220	Compression orifice plate	Steel, 35CD4 or 4340 to AMS6414 or 35NCD16 to NCT 10-123-11 MD	PCS-3100	Inclusion class 2
15-230	Clapper seat	Steel, 35CD4 or 4340 to AMS6414 or 35NCD16 to NCT 10-123-11 MD	PCS-3100	Inclusion class 2
15-300	Level tube	Stainless Steel, Z15CN17-03 Type 1 or 17-4PH to AMS 5604/5643	PCS-3100	Inclusion class 2
15-350	Bolt	Stainless Steel, Z6CNU17-04	PCS-3100	Inclusion class 3
15-390	Upper dia-phragm tube	Steel, 4340	PCS-3100	Inclusion class 4
15-390A	Upper dia-phragm tube	Steel, 4340 to MTL-1101	PCS-3100	Inclusion class 3
17-80	Jacking dome	Steel, 35NCD16	PCS-3100	Inclusion class 4
17-120	Lock plate	Steel, 25CD4S or MTL1101	PCS-3100	Inclusion class 2
17-170	Washer	Steel, 35NCD16	PCS-3100	Inclusion class 3
17-230	Cylinder	Steel, 35NCD16	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
17-230A	Cylinder	Steel, 35NCD16 to NCT 10-123-11MD or Steel, 4340 to AMS6414	PCS-3100	- Inclusion class 3

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

Fig Item No.	Name	Material Type	M-D Spec	Remarks
18-80 and 18-80A	Sliding tube	Steel, 300M	PCS-3100 and M-DLNDT3 Parts 1 and 2	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
18-80B	Sliding tube	Steel, 300M to MTL1201	PCS-3100 and PCS-3002	- Inclusion class 4 on areas without chromium plate - Chromium plated areas
18-80D, 18-80E, 18-80F and 18-80G	Sliding tube	Steel, 300M to MTL-1201	PCS-3100	- Inclusion class 4
19-40	Bolt	Steel, S154	PCS-3100	- Inclusion class 3
20-410 20-410A	Main fitting	Steel, MAT135 (35NCD16THQ)	PCS-3100	- Inclusion class 4
20-420 20-420A	Main fitting	Steel, MAT135 (35NCD16THQ)	PCS-3100	- Inclusion class 4
20-410B 20-420B	Main fitting	Steel, 35NCD16THQ to MTL1203	PCS-3100	- Inclusion class 4
20-410C, 20-410D, 20-420C and 20-420D	Main fitting	Steel, 300M to MTL1201	PCS-3100	- Inclusion class 4

**Examination of Non-Magnetic Parts by Non-destructive Testing
Table 502**

Fig Item No.	Name	Material Type	M-D Spec	Remarks
2-80	Bracket	Aluminium Alloy, L113 or L168-T6511	PCS-3200	-
2-90	Bracket	Aluminium Alloy, L113 or L168-T6511	PCS-3200	-
2-120	Bracket	Aluminium Alloy, L113	PCS-3200	-
2-130	Bracket	Aluminium Alloy, L113	PCS-3200	-

**PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG**

Fig Item No.	Name	Material Type	M-D Spec	Remarks
2-270	Bracket	Aluminium Alloy, L113	PCS-3200	-
2-280	Bracket	Aluminium Alloy, L113	PCS-3200	-
2-340 Only, 2-340A	Transfer block	Aluminium Alloy, L168T6511	PCS-3200	-
2-340B	Transfer block	Aluminium Alloy, BS L168-T6511 or BS 2L93 or 7075-T73 T7351, T7310 or T73511 to MTL-2701 or 7050 T7451 to MTL-2712	PCS-3200	-
2-350 Only, 2-350A	Transfer block	Aluminium Alloy, L168T6511	PCS-3200	-
2-350B	Transfer block	Aluminium Alloy, BS L168-T6511 or BS 2L93 or 7075-T73 T7351, T7310 or T73511 to MTL-2701 or 7050 T7451 to MTL-2712	PCS-3200	-
3-170	Lock stay cardan	Aluminium Alloy, 7010T736	PCS-3200	-
4-140	Bracket	Aluminium Alloy, BS L168-T6511 or BS 2L93 or 7075-T73, T7351, T73510 or T73511 to MTL-2701	PCS-3200	-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

Fig Item No.	Name	Material Type	M-D Spec	Remarks
4-150	Bracket	Aluminium Alloy, BS L168-T6511 or BS 2L93 or 7075-T73, T7351, T73510 or T73511 to MTL-2701	PCS-3200	-
4-180A	Drag-arm Spacer	Aluminium Alloy, 7075-T73 to AMS QQ-A-250/12 or to MTL-2701	PCS-3200	-
4-210	Bracket	Aluminium Alloy, 6082 to BS EN 4007 (MAT206) or Aluminium Alloy, 2014A to BS L168 or 6082 to BS EN 2326 or BS 2L93 or 7075-T73, T7351, T73510 or T73511 to MTL-2701	PCS-3200	-
4-360	Bracket	Aluminium Alloy, L168T6511	PCS-3200	-
5-80	Bracket	Aluminium Alloy, L168T6511	PCS-3200	-
5-300	Bracket	Aluminium Alloy, L168T6511 or L93T651	PCS-3200	-
6-50	Spacer	Stainless Steel, S130	PCS-3200	-
6-170	Bracket	Aluminium Alloy, BS L168-T6511 or BS 2L93 or 7075-T73, T7351, T73510 or T73511 to MTL-2701	PCS-3200	-

PART No. 201587001 AND 201587002 COMPONENT MAINTENANCE MANUAL
MAIN LANDING GEAR LEG

Fig Item No.	Name	Material Type	M-D Spec	Remarks
6-180	Bracket	Aluminium Alloy, BS L168-T6511 or BS 2L93 or 7075-T73, T7351, T73510 or T73511 to MTL-2701	PCS-3200	-
6-230 Only	Slave link	Aluminium Alloy, L99	PCS-3200	-
6-280	Spacer	Stainless Steel, S130	PCS-3200	-
6-310	Lower slave link	Aluminium Alloy, BS L168 or BS 2L93 or 7075-T73, T7351, T73510 or T73511 to MTL-2701	PCS-3200	-
7-50	Spacer	Aluminium Alloy, L70	PCS-3200	-
7-100	Harness support bracket	Aluminium Alloy, L99	PCS-3200	-
7-100A	Harness support bracket	Aluminium Alloy, L168 or L93	PCS-3200	-
7-110	Harness support bracket	Aluminium Alloy, L99	PCS-3200	-
7-110A	Harness support bracket	Aluminium Alloy, L168 or L93	PCS-3200	-
7-140	Pivot bracket	Aluminium Alloy, BS L168-T6511 or BS 2L93 or 7075-T73, T7351, T73510 or T73511 to MTL-2701	PCS-3200	-
8-170	Bracket	Aluminium Alloy, L168 or L93	PCS-3200	-