

VMware Horizon Client



- Getting Started with the VMware Horizon Client on IGEL OS(see page 3)
- Configuring VMware Horizon on IGEL OS(see page 6)

VMware Horizon Client 2 / 39



Getting Started with the VMware Horizon Client on IGEL OS

Error rendering macro 'include'
com.atlassian.renderer.v2.macro.MacroException: No page title provided.

How to Create a Session

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Sessions.




2. Click



The session is created.

VMware Horizon Client 3 / 39




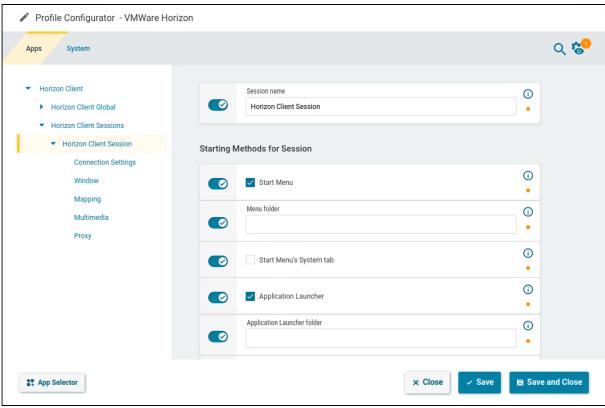

VMware Horizon Client 4 / 39



3. Under **Connection Settings**, specify the **Server URL** and then save the settings.

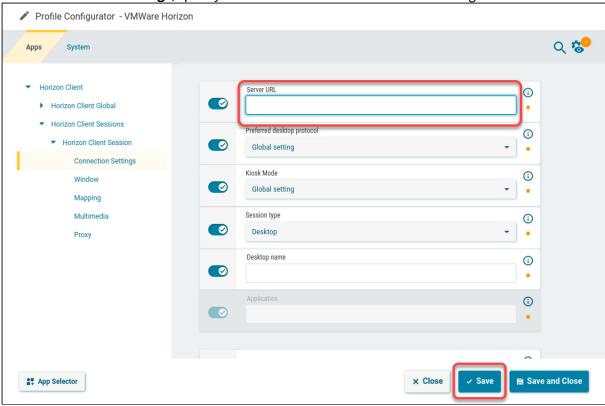

VMware Horizon Client 5 / 39




Configuring VMware Horizon on IGEL OS

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Configuring Server Options (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Server Options.

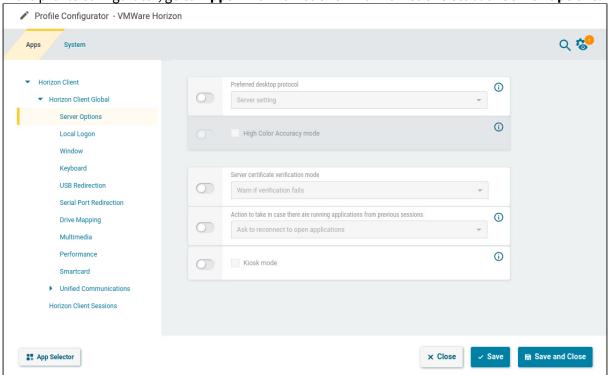

2. Edit the settings according to your needs. The parameters are described in the following.

Preferred desktop protocol

The selected option is preferred by the client when negotiating the connection protocol. If the server does not accept the connection protocol preferred by the client, the connection protocol preferred by the server will be used.

Possible values:

- **Server setting**: The client does not provide the server details of a preferred connection protocol. The connection protocol preferred by the server is used. (Default)
- **PCoIP**: The client tells the server that it prefers PCoIP as the connection protocol.
- VMware Blast: The client tells the server that it prefers VMware Blast as the connection protocol.

VMware Horizon Client 6 / 39



(i) Hardware video acceleration can be used for VMware Blast. Whether hardware video acceleration can be used or not is dependent on the device's hardware. If no hardware video acceleration is available, rendering will take place via software, without acceleration.

High Color Accuracy Mode

Enables H.264 encoding with high color accuracy in VMware Blast sessions. The Horizon Client uses high color accuracy only if the agent supports it.

(i) On mobile devices that are running on battery, this feature might reduce battery life and performance.

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

High color accuracy is allowed.

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

High color accuracy is not allowed. (Default)

Server certificate verification mode

Specifies what will happen if server certificate verification fails.

Possible values:

- · Reject if verification fails
- Warn if verification fails (default)
- Allow unverifiable connections

Action to take in case there are running applications from previous sessions

Specifies the start behavior of an **application**-type session if applications from a previous session are still running. The session type is defined under **Apps > Horizon Client > Horizon Client Sessions > [Session Name] > Connection Settings > Session Type**.

Possible values:

• **Ask to reconnect to open applications**: When the session starts, the user is asked whether they want to re-establish the connection. If the connection is reestablished, the applications running

VMware Horizon Client 7 / 39



will be available. The applications will have the same status as when the connection was terminated. (Default)

- **Reconnect automatically to open applications**: The connection will be re-established automatically. The application running will be available. The application will have the same status as when the connection was terminated.
- Do not ask to reconnect and do not reconnect: The connection will not be re-established.

Kiosk mode

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Horizon client sessions are held in kiosk mode.

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.


Horizon client sessions are held in normal mode. (Default)

VMware Horizon Client 8 / 39



Configuring the Local Logon (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Server Options.

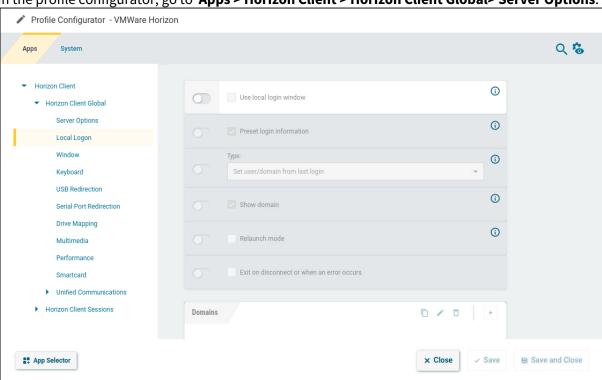

2. Edit the settings according to your needs. The parameters are described in the following.

Use local login window

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The local login window of the endpoint device will be used to log in to the server. If you use the local login window, you can prepopulate login information.

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

VMware Horizon Client 9 / 39



The local login window will not be used. (Default)

Preset login information

Only available if **Use local login window** is enabled.



Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Login information will appear automatically in the login window. With **Type**, you can specify the source of the login information. (Default)

Type

Only available if **Use local login window** is enabled.

- Set user/domain from last login: The login information from the last session will appear automatically in the login window. (Default)
- Set user/domain from session setup: Session-specific login information will appear automatically in the login window. The session-specific login information is described under **Connection Settings** → [session name] > Connection Settings(see page 31).

Show domain



Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The domain will be shown in the login window. (Default)

Relaunch mode



Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The login window is shown in relaunch mode and cannot be closed.

VMware Horizon Client 10/39



Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The login window is not shown in relaunch mode. (Default)

Exit on disconnect or when an error occurs

Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The session will be ended completely when the connection is terminated.

Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The connection overview will be shown when the connection is terminated. (Default)

Show domain

• Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The domain will be shown in the login window. (Default)

Relaunch mode

Error rendering macro 'include'

VMware Horizon Client 11/39



com.atlassian.renderer.v2.macro.MacroException: No page title provided.

•

The login window is shown in relaunch mode and cannot be closed.

Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The login window is not shown in relaunch mode. (Default)

Exit on disconnect or when an error occurs

Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The session will be ended completely when the connection is terminated.

Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The connection overview will be shown when the connection is terminated. (Default)

Domain

Defines one or more domains under which the user can log in.

Error rendering macro 'include'
com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Click

Error rendering macro 'include'

VMware Horizon Client 12 / 39



com.atlassian.renderer.v2.macro.MacroException: No page title provided.



to add a new domain.

Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Click

Error rendering macro 'include'
com.atlassian.renderer.v2.macro.MacroException: No page title provided.

to remove the selected domain.

Error rendering macro 'include'
com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Click

Error rendering macro 'include'
com.atlassian.renderer.v2.macro.MacroException: No page title provided.

to edit the selected domain.

Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Click

Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.


to copy the selected domain.

VMware Horizon Client 13 / 39



Configuring the Window (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Window.

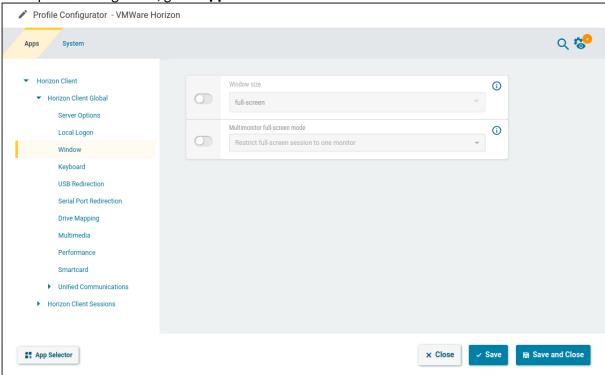

2. Edit the settings according to your needs. The parameters are described in the following.

Window size

Specifies the width and height of the window.

Possible options:

- full-screen: The session is shown on the full screen. The device's taskbar is not visible. (Default)
- Numeric details, e.g. **1280x1024**: The session is shown in the selected resolution or on the selected percentage of the screen area.

Multimonitor full-screen mode

Specifies how the session window is distributed across multiple screens.


- Restrict full-screen session to one monitor (Default)
- · Display full-screen session on all monitors

VMware Horizon Client 14 / 39



Configuring the Keyboard Settings (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Keyboard.

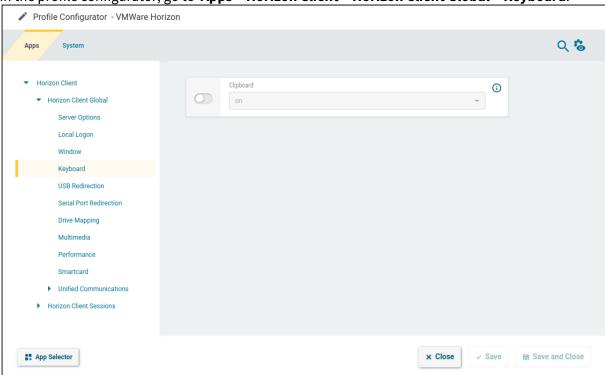

2. Edit the settings according to your needs. The parameters are described in the following.

Clipboard

Possible options:

- **on**: The clipboard of the device is redirected to the session.
- **off**: The clipboard is not redirected.

Configuring USB Redirection (Global)


You can enable and configure USB redirection for specific devices. A USB composite device can be split into its components (interfaces). Example: A USB dictation device that is split into the components loudspeaker, microphone, storage device/drive, and control buttons.

 $\begin{tabular}{ll} \textbf{(i)} & \textbf{Ensure that the power supplied by the USB connection is adequate for the device.} \end{tabular}$

VMware Horizon Client 15 / 39



- (i) If USB redirection is enabled, drive mapping should be disabled; see Laufwerkszuordnung. Otherwise, USB redirection can cause a storage device to be removed from the drive mapping. This is the case if the **Automatically connect when inserted** option is enabled.
 - 1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > USB Redirection.

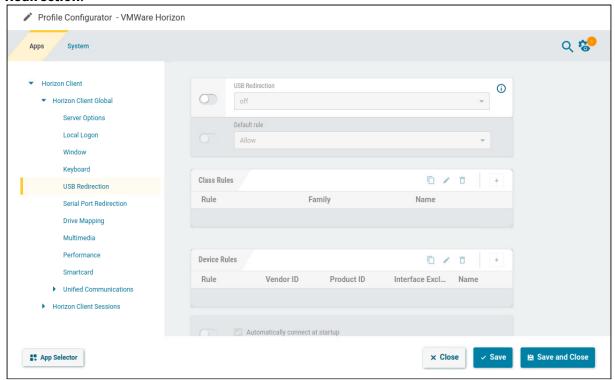

USB Redirection

- on: USB redirection is enabled,
- off: USB redirection is disabled (Default)

Default rule: This rule will apply if no special rule was configured for a class or a device.

- Allow
- Deny

Error rendering macro 'include'

VMware Horizon Client 16 / 39



com.atlassian.renderer.v2.macro.MacroException: No page title provided.



Creating a Class Rule

1. To create a new rule, click



Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.


in the Class Rules area.

- 2. Choose a **Rule**. The rule specifies whether the use of the device class defined here is allowed or denied.
- 3. Under Family, select the class of device for which the rule should apply. Examples: Audio, Printer, Smartcard, Storage Devices.
- 4. Under **Name**, give a name for the rule.

17/39 **VMware Horizon Client**



5. Click on Confirm.

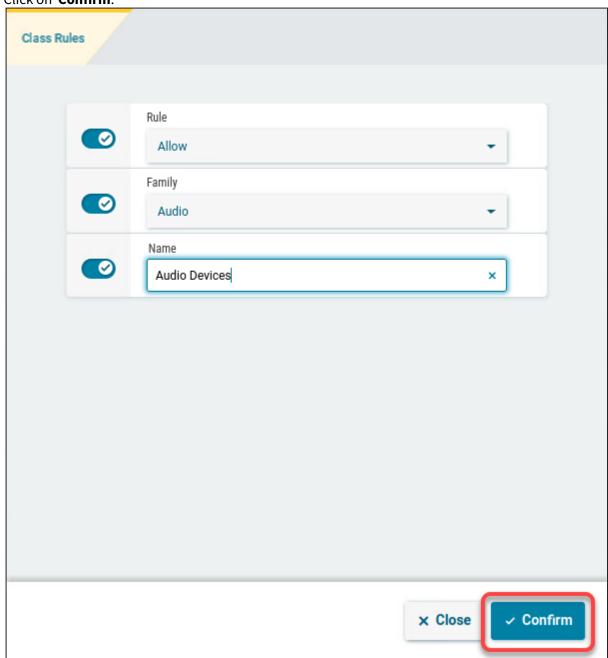

Creating a Device Rule

(i) When a rule is defined, at least one of the properties **Vendor ID** or **Product ID** must be given.

1. To create a new rule, click

VMware Horizon Client 18 / 39



Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

in the **Device Rules** area.

- 2. Choose a **Rule**. The following rules are available:
 - **Deny**: The device will not be redirected via USB redirection.
 - **Allow**: The device will be redirected via USB redirection.
 - Split: A USB composite device will automatically be split into its individual components
 - No auto-split: A USB composite device will not be split.
- 3. Provide the **Vendor ID** of the device as a hexadecimal value.
- 4. Provide the **Product ID** of the device as a hexadecimal value. The product ID can contain asterisks '*', each asterisk representing one hexadecimal digit. If the field is left empty, any product ID is matched.

Error rendering macro 'include'


com.atlassian.renderer.v2.macro.MacroException: No page title provided.

- 5. Only for USB composite devices: Under Interface Exclude List, enter a list of interfaces that are to be excluded from USB redirection. The individual interfaces are separated by spaces. Example: "0 1".
- 6. Under **Name**, give a name for the rule.

VMware Horizon Client 19/39



7. Click on Confirm.

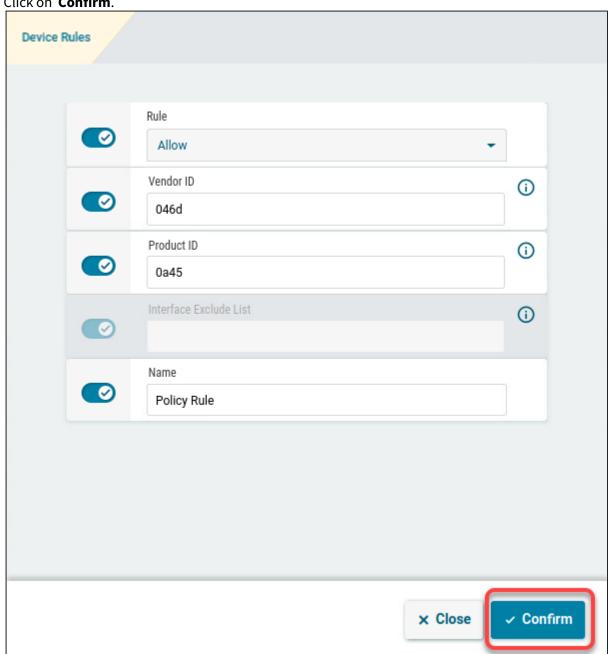

Automatically connect at startup

Error rendering macro 'include'

VMware Horizon Client 20 / 39



com.atlassian.renderer.v2.macro.MacroException: No page title provided.

•

USB devices that were inserted before the start of the session are available in the session. (Default)

Automatically connect when inserted

Error rendering macro 'include'

com. at lassian. renderer. v2. macro. Macro Exception: No page title provided.

USB devices that are inserted during the session are available in the session. (Default)

Automatic splitting of composite USB devices

Error rendering macro 'include' com.atlassian.renderer.v2.macro.MacroException: No page title provided.

A USB composite device will automatically be split into its individual components (interfaces). The class rules will be applied to these individual devices.

Error rendering macro 'include'
com.atlassian.renderer.v2.macro.MacroException: No page title provided.


The device will not be split into its components.

Configuring Serial Port Redirection (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Serial Port Redirection.

VMware Horizon Client 21 / 39



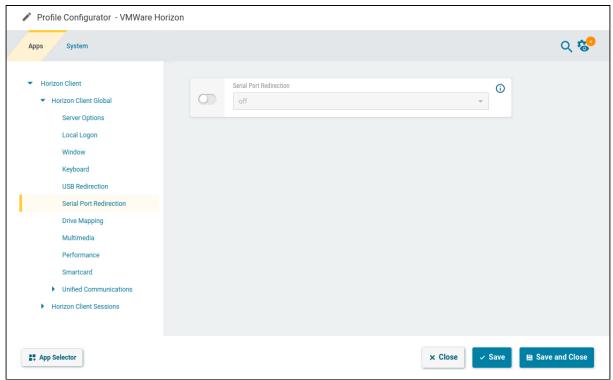

Serial Port Redirection

With the serial port redirection feature, you can redirect locally connected serial (/dev/ttyS) ports, such as built-in RS232 ports or USB-to-Serial adapters, to their RDS-hosted desktops.

- **on**: The serial port is redirected.
- off: The serial port is not redirected.


Configuring Drive Mapping (Global)

Through drive mapping, connected mass storage devices can be made available in the session. In addition, you can define specific directories on a local drive that should be mapped separately.

VMware Horizon Client 22 / 39



1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Drive Mapping.

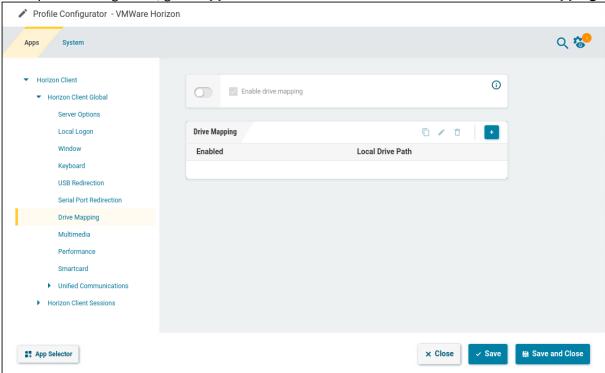

2. Edit the settings according to your needs. The parameters are described in the following.

Enable Drive Mapping

Error rendering macro 'include'
com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Drive mapping is enabled. (Default)

- (i) If you want to use drive mapping, make sure that **Devices > Storage Devices > Storage Hotplug > Enable client drive mapping** is enabled.
- Before you unplug a hotplug storage device from the endpoint device, you must safely remove it. Otherwise, data on the hotplug storage device can be damaged. Depending on the configuration, there are one or several possibilities to safely remove a hotplug storage device:

Click on

VMware Horizon Client 23 / 39



Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

in the taskbar. The taskbar is not available in a fullscreen session.

- Click on
 - Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

in the in-session control bar. Depending on the configuration, the in-session control bar may be available in a fullscreen session.

- Function Accessories > Safely Remove Hardware with further starting possibilities; amongst other things, a hotkey can be defined here.
 If the following warning is displayed: Volume(s) still in use. Don't remove the device, then the hotplug storage device must not be removed. First, exit the program concerned or close all files or directories that reside on the hotplug storage device.
- Drive Mapping: List of mapped drives.

Mapping a Specific Directory

1. Click

Error rendering macro 'include'


com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Add to bring up the mapping window.

- 2. Click **Enabled** to enable the drive connection.
- 3. Provide the **Local Drive Path** of the local directory to which the mapping is to refer.

VMware Horizon Client 24 / 39



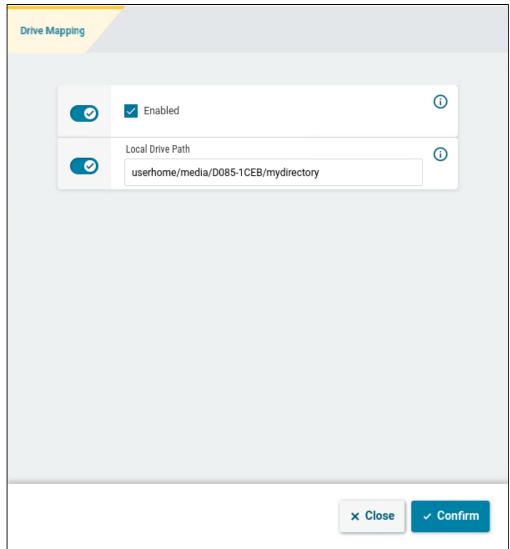


VMware Horizon Client 25 / 39



Configuring Multimedia (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Multimedia.

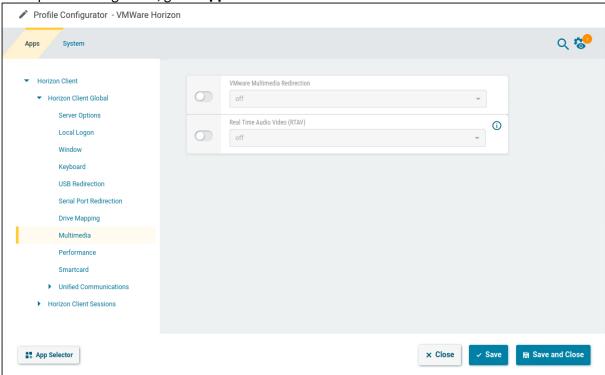

2. Edit the settings according to your needs. The parameters are described in the following.

VMware Multimedia Redirection

Possible values:

- off: The server renders the multimedia data and sends the individual images to the client. (Default)
- **on**: The client renders the multimedia data supplied by the server.

Real Time Audio Video (RTAV)

Specifies the redirection of video data from the client USB webcam.

Possible values:

• off: The client does not forward the webcam data as video data. (Default)

i With USB redirection, data from the webcam can be forwarded to the server even if RTAV is disabled.


• On: The client forwards the webcam data as video data.

VMware Horizon Client 26 / 39



Configuring Performance Settings (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Performance.

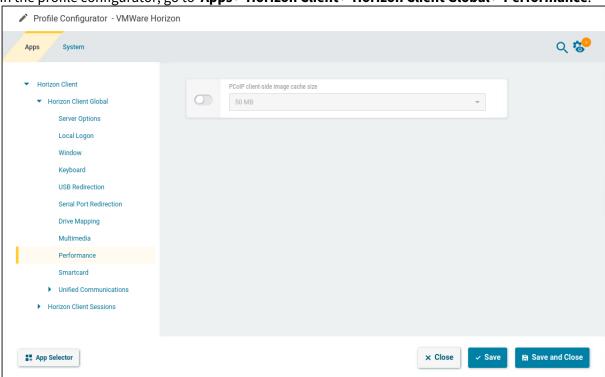

2. Edit the settings according to your needs. The parameters are described in the following.

PCoIP client-side image cache size

Specifies the size of the cache for images. Caching parts of the display reduces the amount of data to be transferred. (Minimum: 50 MB; maximum: 300 MB; default: 50 MB)




Larger cache sizes of 250 MB or more should only be used if at least 2 GB RAM or more is available.

VMware Horizon Client 27 / 39



Configuring Smartcard Access (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Smartcard.

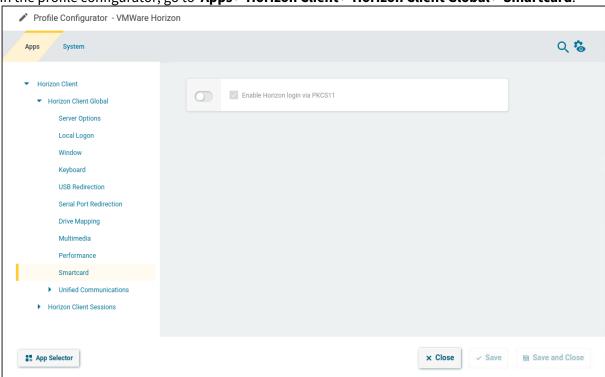

2. Edit the settings according to your needs. The parameters are described in the following.

Enable Horizon login via PKCS11




The user can log in to a Horizon session via PKCS11. (Default)

Configuring Skype for Business (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Unified Communications > Skype for Business.

VMware Horizon Client 28 / 39



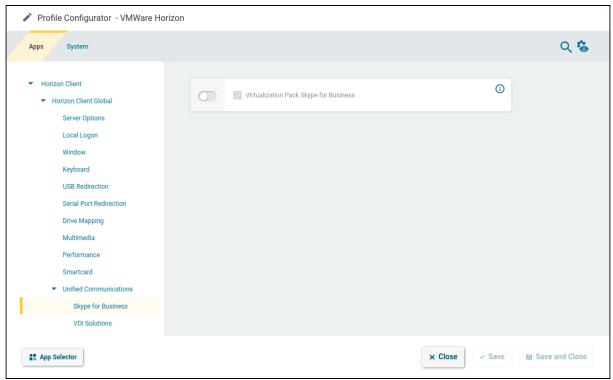



Server and Network Requirements

Skype for Business optimization requires additional configuration on the server side. For more information, see the VMware article Configuring VMware Virtualization Pack for Skype for Business¹.

Virtualization Pack Skype for Business



Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The Virtualization Pack Skype for Business is active. (Default)


VMware Horizon Client 29/39

¹ https://docs.vmware.com/en/VMware-Horizon-7/7.13/horizon-remote-desktop-features/GUID-ABE8ACEE-02DE-4F1C-99D8-6B589E1762E9.html



Configuring HTML5 and Microsoft Teams Optimization (Global)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Global > Unified Communications > VDI Solutions.

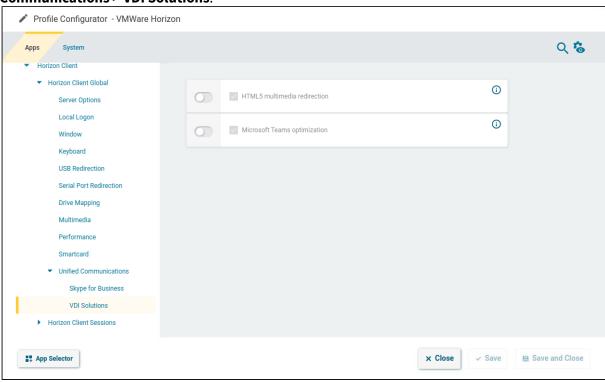

2. Edit the settings according to your needs. The parameters are described in the following.

HTML5 multimedia redirection



Server and Browser Requirements

HTML5 multimedia redirection requires additional configuration on the server side. For more information, see the VMware article Configuring HTML5 Multimedia Redirection².

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

HTML5 multimedia content is redirected from a remote desktop to the endpoint devices. (Default)

VMware Horizon Client 30 / 39

 $^{2\} https://docs.vmware.com/en/VMware-Horizon-7/7.13/horizon-remote-desktop-features/GUID-6A68ECA4-6B9C-43C5-B437-D39B71005BAD.html$



Microsoft Teams optimization



Server and Network Requirements

Microsoft Teams optimization requires additional configuration on the server side. For more information, see the VMware articles Microsoft Teams Optimization with VMware Horizon³ and Configuring Media Optimization for Microsoft Teams⁴.



Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The audio and video streams for Microsoft Teams are redirected to the endpoint devices. Audio and video data are not processed by the server.*

Configuring the Connection Settings (Session Specific)


1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Sessions > [session name] > Connections Settings.

VMware Horizon Client 31/39

 $^{{\}tt 3~https://techzone.vmware.com/resource/microsoft-teams-optimization-vmware-horizon}\\$

⁴ https://docs.vmware.com/en/VMware-Horizon/2106/horizon-remote-desktop-features/GUID-F68FA7BB-B08F-4EFF-9BB1-1F9FC71F8214.html



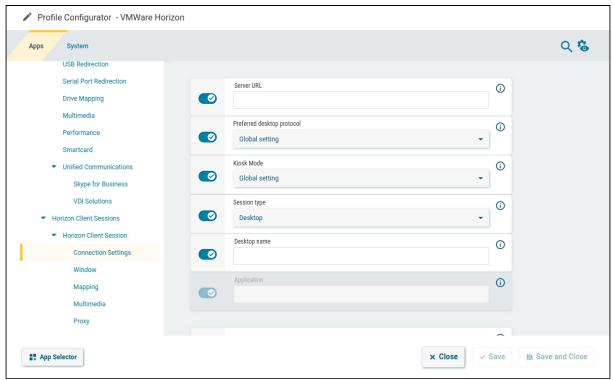

Server URL:

URL of the VMware Horizon server.

Preferred desktop protocol

The selected option is preferred by the client when negotiating the connection protocol.

Possible values:

- Global setting (default)
- Server setting
- RDP
- PCoIP
- VMWare Blast

Enable kiosk mode

- Global setting (default)
- On: The Horizon client is run in a non-interactive mode that is suitable for kiosk mode operation.
- · Off

VMware Horizon Client 32 / 39



Session type

Specifies whether the session contains a desktop or an individual application.

Possible values:

- **Desktop**: The session contains a desktop. (Default)
- **Application**: The session contains an individual application.

Desktop name

Specifies a name for the desktop. This option is available if **Session Type** is set to "Desktop".

Application

The name of the application that is launched during the session. This option is available if **Session Type** is set to "Application".

Use passthrough authentication for this session

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

The username and password are temporarily saved and used for authentication purposes in this session.

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

Passthrough authentication is not used. (Default)

User name

User name when logging on to the VMware Horizon server

User password

Password when logging on to the VMware Horizon server

Domain

Domain when logging on to the VMware Horizon server

VMware Horizon Client 33 / 39



Autoconnect

Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

When the session starts, the connection to the desktop or application will automatically be established. For this to be possible, the name of the desktop or application must be defined.


Error rendering macro 'include'

com.atlassian.renderer.v2.macro.MacroException: No page title provided.

When the session starts, the overview will be shown. (Default)

Configuring the Window Settings (Session Specific)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Sessions > [session name] > Window.

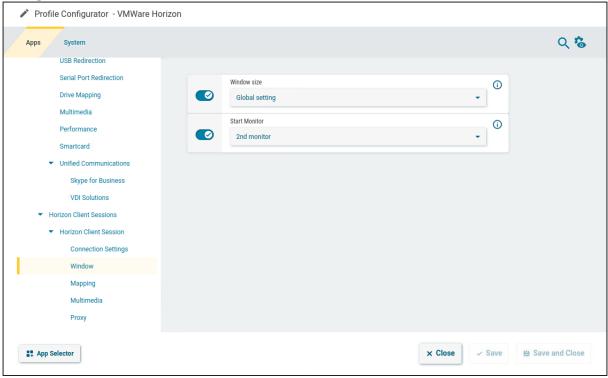

VMware Horizon Client 34 / 39



Window size

Specifies the width and height of the window.

Possible values:


- **Global setting**: The window size is carried over from the global settings for Horizon Client sessions, see Window.
- full-screen: The session is shown on the full screen.
- user selection
- Numeric details: The session is shown in the selected resolution or on the selected percentage of the screen area.

Start monitor

Specifies the monitor on which the session is shown.

Configuring Drive Mapping and Redirection (Session Specific)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Sessions > [session name] > Mapping.

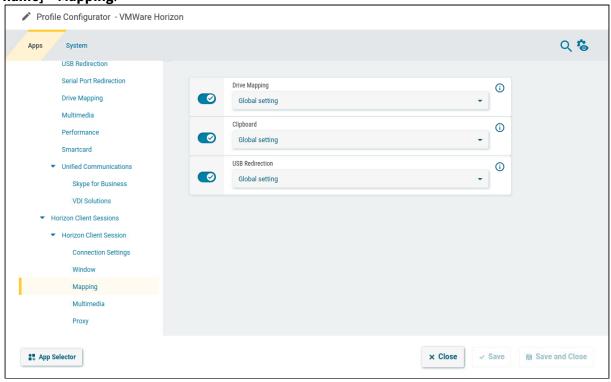

VMware Horizon Client 35 / 39



Drive Mapping

Possible options:

- Global setting: The setting Apps > Horizon Client > Horizon Client Global > Drive Mapping > Enable drive mapping will be used.
- or
- off

Clipboard

Possible options:

- Global setting: The setting Apps > Horizon Client > Horizon Client Global > Keyboard > Clipboard will be used.
- on
- off

USB Redirection

If the global setting **Apps > Horizon Client > Horizon Client Global > USB Redirection > USB Redirection** is disabled, USB redirection can not be enabled on a session-specific basis.

Possible options:


- Global setting: The setting Apps > Horizon Client > Horizon Client Global > USB Redirection > USB Redirection will be used.
- off

Configuring Multimedia Settings (Session Specific)

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Sessions > [session name] > Multimedia.

VMware Horizon Client 36 / 39



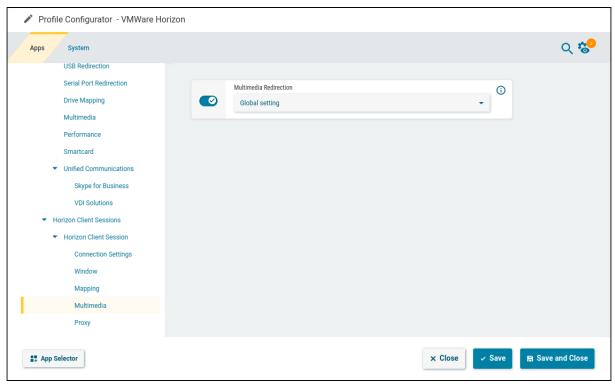

Multimedia Redirection

If the global setting **Apps > Horizon Client > Horizon Client Global > Multimedia > VMware Multimedia Redirection** is disabled, multimedia redirection can not be enabled on a session-specific basis.

Possible options:

- Global setting: The setting Apps > Horizon Client > Horizon Client Global > Multimedia > VMware Multimedia Redirection will be used.
- off


Configuring Proxy Settings (Session Specific)

You can configure the use of a proxy for the connection between the client and server.

1. In the profile configurator, go to Apps > Horizon Client > Horizon Client Sessions > [session name] > Proxy.

VMware Horizon Client 37 / 39



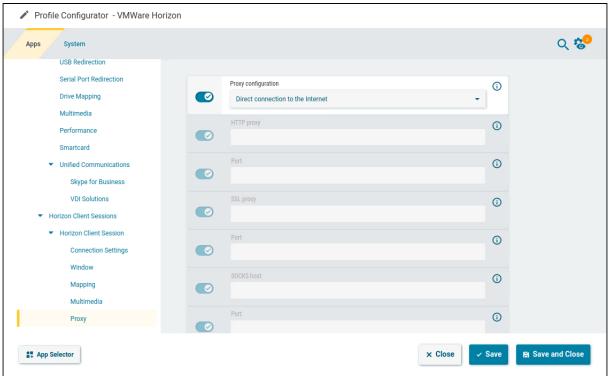

Proxy configuration

Possible options:

- Direct connection to the Internet: No proxy will be used.
- Manual proxy configuration: The proxy is configured with the following settings.
- **System-wide proxy configuration**: The proxy configured under **Network > Proxy** is configured.

HTTP proxy

URL of the proxy for HTTP.

Port

Port of the proxy for HTTP.

SSL proxy

URL of the proxy for SSL.

VMware Horizon Client 38 / 39



Port

Port of the proxy for SSL.

SOCKS host

URL of the proxy for SOCKS.

Port

Port of the proxy for SOCKS.

SOCKS protocol version

Version of the SOCKS protocol used.

Possible optione:

- SOCKS v4
- SOCKS v5 (default)

No proxy for

List of URLs for which no proxy is to be used (separated by commas).