SONY®

Television

Setup Guide


BRAVIA

KD-75X8500D / 65X8500D / 55X8500D FW-65X8501D / 55X8501D



4-584-912-13(1) 4 9 1 2 1 3 * (1) 4 5 8 4 9 1 2 1 3 0	GB	Setup Guide
	CS	设定指南
	СТ	安裝指南
	VN	Hướng dẫn cài đặt
	FR	Guide d'installation
	RU	Руководство по устано
	TH	คู่มือการตั้งค่า



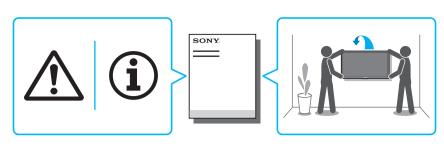

Reference Guide / 参考指南 / 參考指南 / Hướng dẫn Tham khảo / Guide de référence / Справочник / คู่มือถ้างอิง / Panduan Referensi / دليل مرجع / دليل مرجع / دليل مرجع




Help Help Guide




http://rd1.sony.net/help/tv/cga1/h_ga/

Help Guide / 帮助指南 / 說明指南 / Hướng dẫn Trợ giúp / Guide d'aide / Справочное руководство / คู่มือช่วยเหลือ / Petunjuk Penggunaan / راهنمای کمک / دلیل المساعدة

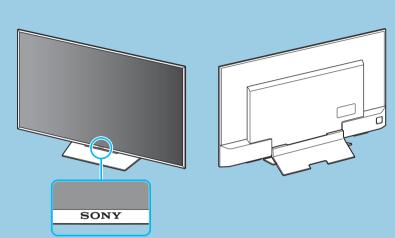



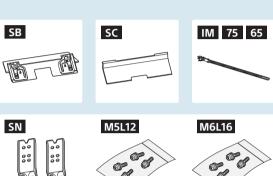












Only on limited region/country/TV model. 仅针对有限的地区/国家/电视机型号。 僅限於限定地區/國家/電視機機型。 Chi có ở khu vực/quốc gia giới hạn/kiểu TV. Uniquement dans certains pays ou certaines regions/modèle de téléviseur. Только в определенных регионах/странах/модели телевизора. มีเฉพาะในบางภูมิภาค/ประเทศ/รุ่นทีวีเท่านั้น Hanya untuk kawasan/negara/model TV tertentu

في منطقة/بلد محدودة فقط/موديل التلفزيون.

