



Electro-Voice®

OWNER'S MANUAL
BEDIENUNGSANLEITUNG



P900ORT
P1200ORT
PRECISION SERIES
DSP CONTROLLED

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	3
IMPORTANT SERVICE INSTRUCTIONS	3
DESCRIPTION	4
UNPACKING & WARRANTY	5
INSTALLATION NOTES	5
FRONT VIEW	6
REAR VIEW	7
INPUT A / INPUT B	7
PARALLEL CONNECTION	7
DSP OUT	7
CONTROL PORT	7
RS-232 INTERFACE	8
ADDRESS	8
REMOTE CAN-BUS	8
EASY REMOTE	9
POWER AMP OUTPUT	9
OUTPUT VOLTAGE CONFIGURATION	10
GROUND-LIFT SWITCH	10
MAINS INPUT	10
CABLING	11
LF-CONNECTION CORDS	10
REMOTE CONTROL NETWORK	11
NETWORK EXAMPLES	12
CAN-BUS	14
MAINS OPERATION & RESULTING TEMP	15
SPECIFICATIONS / TECHNISCHE DATEN	32
BLOCK DIAGRAM AMPLIFIER	34
BLOCK DIAGRAM RCM-24	35
DIMENSIONS / ABMESSUNGEN	36

INHALT

WICHTIGE SICHERHEITSHINWEISE	19
WICHTIGE SERVICEHINWEISE	19
BESCHREIBUNG	20
AUSPACKEN & GARANTIE	21
INSTALLATIONSHINWEISE	21
FRONTSEITE	22
RÜCKSEITE	23
INPUT A / INPUT B	23
PARALLEL	23
DSP OUT	23
CONTROL PORT	23
RS-232 INTERFACE	24
ADDRESS	24
REMOTE CAN-BUS	24
EASY REMOTE	25
ENDSTUFENAUSGÄNGE	25
KONFG. DER AUSGANGSSPANNUNG	26
GROUND-LIFT SCHALTER	26
NETZEINGANG	26
VERKABELUNG	27
NF-VERBINDUNGSKABEL	27
REMOTE CONTROL NETZWERK	27
NETZWERK-BEISPIELE	28
CAN-BUS	30
LEITUNGSSPEZIFIKATIONEN	30
NETZBETRIEB & WÄRMEENTWICKLUNG	31
SPECIFICATIONS / TECHNISCHE DATEN	32
BLOCK DIAGRAM AMPLIFIER	34
BLOCK DIAGRAM RCM-24	35
ABMESSUNGEN	36

IMPORTANT SAFETY INSTRUCTIONS



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

AVIS: RISQUÉ DE CHOC ELECTRIQUE. NE PAS OUVRIR.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated „dangerous voltage“ within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on this apparatus.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. To completely disconnect mains power from this apparatus, the power supply cord must be unplugged.

For US and CANADA only:

Do not defeat the safety purpose of the grounding-type plug. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

IMPORTANT SERVICE INSTRUCTIONS

CAUTION: These servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the Operating Instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.

1. Security regulations as stated in the EN 60065 (VDE 0860 / IEC 65) and the CSA E65 - 94 have to be obeyed when servicing the appliance
2. Use of a mains separator transformer is mandatory during maintenance while the appliance is opened, needs to be operated and is connected to the mains
3. Switch off the power before retrofitting any extensions, changing the mains voltage or the output voltage.
4. The minimum distance between parts carrying mains voltage and any accessible metal piece (metal enclosure), respectively between the mains poles has to be 3 mm and needs to be minded at all times. The minimum distance between parts carrying mains voltage and any switches or breakers that are not connected to the mains (secondary parts) has to be 6 mm and needs to be minded at all times.
5. Replacing special components that are marked in the circuit diagram using the security symbol (Note) is only permissible when using original parts.
6. Altering the circuitry without prior consent or advice is not legitimate.
7. Any work security regulations that are applicable at the location where the appliance is being serviced have to be strictly obeyed. This applies also to any regulations about the work place itself.
8. All instructions concerning the handling of MOS - circuits have to be observed.



NOTE:

SAFETY COMPONENT (MUST BE REPLACED BY ORIGINAL PART)

DESCRIPTION

Congratulations! With buying an Electro-Voice PRECISION SERIES power amplifier you have chosen an appliance that employs the most advanced technology.

P-Series power amps combine outstanding audio performance, highest reliability and operational stability. Each power amplifier employs an RCM-24 Remote Control module allowing centralized configuration, control and monitoring of all relevant power amp parameters (like output current, output voltage, load impedance, etc.).



The power amplifiers employ two high-performance output transformers each and offer floating loudspeaker outputs.

The gapless protection circuitry concept not only prevents the power amp itself but also the connected loudspeaker systems from being damaged. These extensive protections include Dynamic Audio Limiters, DC/HF-Protections, Back-EMF-Protection, Inrush Current Limiter, Short Circuit Protection and of course Thermal Overload Protection for the output transistors and mains transformers.

Three-speed high performance fans guarantee outstanding thermal stability at absolute low running noise. The ventilation is directed front-to-rear allowing trouble-free operation even in smaller amp-racks.

Comprehensively dimensioned power supply units with low-leakage toroidal transformers provide extensive headroom far above the stated nominal power.

The RCM-24 provides full-size overview of the system's entire status and control over all relevant system parameters at any time. The RCM-24 module allows integration into a Remote



Control Network consisting of up to 250 power amps. The Windows Software IRIS – Intelligent Remote & Integrated Supervision – allows controlling and monitoring an entire PA-system from a single or several PCs. Any operational status like initial power-on status, temperature, modulation, limiting, activation of protections, deviation in the load impedance, etc., are centrally registered and displayed, which provides the opportunity to take specific measures prior to the occurrence of critical operational states. Programming an automatic response for exceeding or falling below specific limits is possible as well. All parameters, e.g. power-on/off, levels, muting, filters, etc. can be controlled in real-time and saved in any power amp

Monitoring the connected loudspeaker systems is performed through measuring output currents and –voltages of the two power amplifier channels. Each time the signal falls below or exceeds set limit values is immediately indicated and logged, thus detecting and indicating short circuits and line interruption during normal operation. The integrated impedance test function allows more precise checking the connected loudspeaker systems. The integrated signal generator is employed together with the current/voltage testing to measure the connected loudspeakers' and cable's impedance plus over the entire frequency range. The resulting impedance graph is displayed on the PC-screen. Comparing the measured impedance progression to a reference value is possible at all times, which allows recognizing even the slightest loudspeaker defects or irregularities.

Next to controlling and monitoring, the RCM-24 Remote Control module provides comprehensive signal processing functions. It includes a total of 20 parametric filter-, X-over functions, delays, routing and level control as well as compressors and limiters per channel. All parameters can be freely edited and stored in the module's 8 user presets. Independent from network control all DSP-settings (filter, delay, level) are maintained in case of failure. Additionally, the control inputs of the power amps can be used for network-independent switching to another preset (e.g. alarm settings with maximum energy for voice and text announcements). Therefore, P-Series amps with RCM-24 modules installed fulfil even the highest safety requirements.

When designing the RCM-24, uncompromising audio quality was the highest maxim. AD/DA-conversion is performed at a resolution of 24-bit and 128-times oversampling with linear phase; the internal word length is 48 bits. With this the RCM-24's dynamic range reaches 115 dB, which is an absolute peak value for digital audio appliances.


All configuration, control and monitoring details of P-Series power amps are explained in the documentation accompanying the PC Windows software IRIS.

UNPACKING & WARRANTY

Carefully open the packaging and take out the power amplifier. Next to the power amplifier itself, the package also includes this owner's manual, a mains cord, the warranty certificate, four stand-feet, six screw-on connectors (1x 2-pole, 4x 3-pole, 1x 6-pole) plus a set of rack shelf mounting adapters. Please inspect carefully whether all information in the warranty certificate has been filled in completely, since only a completely filled in warranty certificate entitles you to stake any warranty claims. The appliance comes with a 36 months warranty, starting with the date when receiving the good from your dealer.

INSTALLATION NOTES

Generally, installing or mounting power amps should be carried out in a way that guarantees continuously unopposed front-to-rear air circulation. When including an appliance in a closed cabinet or rack shelf system make sure to provide sufficient ventilation. Leave a gap of at least 60mm x 330mm (up to the cabinet's top ventilation louvers) for air circulation between the rear of the power amplifier and the cabinet/rack's rear wall. Make sure to leave at least 100mm of space above the cabinet or rack shelf system. Since the temperature inside of the cabinet or rack shelf system can easily rise up to 40°C during operation, bearing in mind the maximally allowable environmental temperature during operation for all other appliances installed in the same rack shelf system is mandatory. (also refer to "MAINS OPERATION & RESULTING TEMPERATURE")

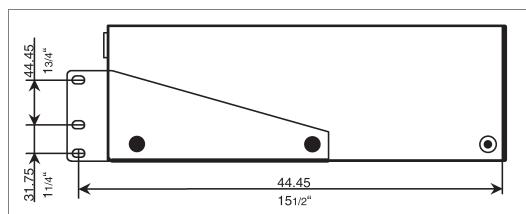

The use of rails or optionally available rack adapters – NRS 90235 (112733) – is mandatory as well when installing the appliance in a rack shelf system to prevent the front panel from bending.

Caution: For problem-free operation exceeding the maximally allowable environmental temperature or +40°C is not permissible.

The power amplifier has to be protected against: dripping or splashing water, direct sunlight, high temperatures or direct influence of heat sources, high humidity, extensive dust and vibrations. Condensation on internal parts may occur after transporting the power amplifier from a cold into a warmer environment. In that case operation is only permissible after the appliance has gained the new temperature (after approximately one hour). If foreign objects or liquids have entered the power amplifier's enclosure make sure to instantly separate the appliance from the mains power and contact an authorised DYNACORD service centre for inspection before continuing operation.

Do not use any sprays or solvents for cleaning the appliance, because they might severely damage the surface of the enclosure or lead to dangerous fire hazard.

FRONT VIEW



Use the **POWER switch** located in the centre of the front panel to switch the appliance's power on. The soft-start function prevents current inrush peaks on the mains, which in addition prevents the mains line protection switch from activating during power-on operation of the power amplifier. The loudspeaker outputs are activated via relay switching with a delay of approximately 2 seconds effectively attenuating eventual power-on noise. The **PROTECT** LED lights during the delay time and the fans run at maximum speed. This is normal to confirm the immaculate operation of the protection circuitry. Upon power-on, all power amps with RCM-24 Module installed regain the state of operation prior to the last power-off.

For example: if a power amplifier had been switched off using the POWER-switch while being in Stand-by mode, upon power-on it restarts in this exact mode.




This indicator lights when the power amplifier has been switched on. Causes for the POWER-indicator not lighting are: the appliance is not connected to the mains network, a defective primary fuse, or the power amplifier is set to stand-by operation (STAND-BY LED lights).




This indicator light when the power amplifier is in stand-by mode, which can be activated from the RCM-24 or via Easy Remote. In stand-by operation only the internal auxiliary power supply unit is activated. The main power supply unit is separated from the mains.



The **PROTECT** LED lights indicating that one of the internal protection circuits against thermal overload, short-circuit, Back-EMF, HF-occurrence at the output, etc., has been activated. In that case, the output relays separate the power amps from the load connected to prevent the connected loudspeaker systems and the power amplifiers as well from being damaged. Whatever caused the fault – e.g. a short-circuited speaker cable – **needs to be remedied. In case of thermal overload you have to wait until the power amplifier automatically regains normal operation.**

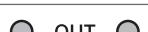


The **OUT** LED lights as soon as an audio signal of approximately 30dB below full modulation is present. The LED is dimmed when speaker cables are short-circuited or a protection circuit has been activated.

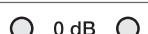


The **0 dB** LED lights when the power amplifier is driven at its maximum. Higher input voltage does not result in higher peak output voltage.



This indicator lights as soon as the integrated dynamic limiter is activated and the power amplifier is driven at the clipping limit or generally at its maximum capacity. Short-term blinking is not a problem, since the internal limiter trims input levels of up to +21dBu down to a S/N-ratio of approximately 1%. If, on the other hand, this LED lights constantly, reducing the volume is recommended to prevent the loudspeaker systems connected from being damaged by probable overload.

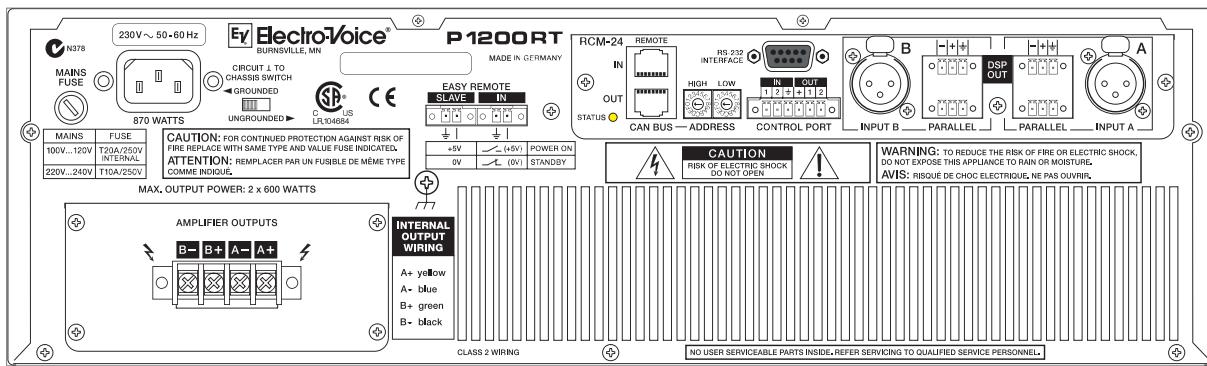

INPUT A / INPUT B

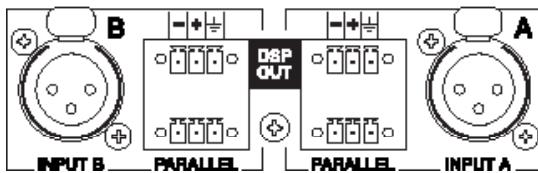

The inputs INPUT A & INPUT B are electronically balanced offering an input sensitivity of +6dBu (1.55 V) for direct connection of mixing consoles, etc. Connection can be established via the XLR-type input connectors or the supplied screw-on connectors, which are connected in parallel. The pin-assignment of the XLR-type input connectors is according to the IEC 268 standard.

In case floating inputs are needed, retrofitting optionally available input transformers is possible. One extension-kit NRS 90208 (Order-No. 121 641) per channel is needed.

PARALLEL CONNECTION


Connection can be established via the XLR-type input connectors INPUT A / INPUT B or the supplied screw-on connectors which are connected in parallel. In addition, using the PARALLEL-connectors provides the possibility for connecting the input signal through to feed additional power amplifiers, without the need for extra splitter-cables.

DSP OUT

The DSP output signal – i.e. the post-digital-signal-processing-unit audio signal – is present at the DSP OUT. The DSP output signal is simultaneously fed to the power amplifier output stage and is correspondingly amplified present at the power amp's main outputs.

The DSP OUT can be utilized for feeding the digitally processed audio signal from the RCM-24 Remote Control Module to additional power amplifiers (without DSP-module); e.g. for increasing the overall output power. With a nominal level of +6dBu and a maximum level of +21dBu (8.7V) the output signal is electronically balanced. Output impedance is 100 Ω.

CONTROL PORT

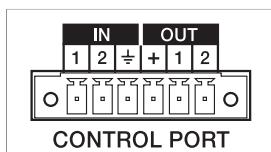

The CONTROL PORT offers two freely programmable control inputs and control outputs as well as the reference connections for ground potential and +5V. Using the PC Windows software IRIS, the control inputs can be configured and serve for instance for Power-On / Stand-by switching, preset switching or parameter control.

The two control contacts IN1 / IN2 are internally set to +5V (open) via pull-up resistors. Activating the control inputs is possible by closing the contacts to ground potential (pin 3) via external switches, pushbuttons or relays.

The two control outputs OUT1 / OUT2 are carried out as Open Collector Outputs. In non-active state (Off) they provide high ohmic resistance. In the active state (On) these outputs are connected to ground. The outputs serve for signalling internal operational states. They can be used for the direct triggering of LEDs, indication lights or relays. The +5V reference connector provides power supply for externally connected appliances with amperage of maximally 100mA. The control outputs allow signal indication of operational states (critical temperature, exceeding or decline of defined limit values, faults, etc.) at central operator desks or to other systems (fire alarm system, general alert system) even without PC. For further detail about configuring the control ports, please refer to the documentation accompanying the IRIS software.


REAR VIEW

RS-232 INTERFACE



The RS-232 interface is for connecting media control systems as well as building management systems providing control and monitoring of all parameters. Communication is established via an easily to implement ASCII-protocol allowing trouble-free integration of Remote Amplifiers in media and touch panel control systems. For a programmer's guide and complete protocol description, please refer to the documentation accompanying the IRIS software.

ADDRESS

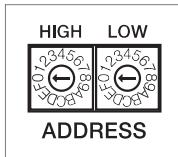


The address selection switch allows setting the amplifier's network address, which, within a CAN-network, can range from 01 to 250 (FA hex). Caution: Each address may exist only once within a network. Otherwise network conflicts might occur. Address setting has to be performed in hexadecimal code. The selection switch LOW represents the low-value digit while the HIGH-switch represents the high-value digit.

Adress-Table:

HIGH	LOW	Adress	HIGH	LOW	Adress
0	0	Stand-alone	8	0 ... F	128 ... 143
0	1 ... F	1 ... 15	9	0 ... F	144 ... 159
1	0 ... F	16 ... 31	A	0 ... F	160 ... 175
2	0 ... F	32 ... 47	B	0 ... F	176 ... 191
3	0 ... F	48 ... 63	C	0 ... F	192 ... 207
4	0 ... F	64 ... 79	D	0 ... F	208 ... 223
5	0 ... F	80 ... 95	E	0 ... F	224 ... 239
6	0 ... F	96 ... 111	F	0 ... A	240 ... 250
7	0 ... F	112 ... 127	F	B ... F	reserved

Address 0 (00 hex, factory-pre-set) ensures that the amplifier is separated from the remote communication, so that it does not appear in the system set-up even though it might be connected to the CAN-bus. When the amplifier is powered-on with its address set to "0", all internal parameters are set to "0" respectively to bypass and the routing is set to 2-in-2. In that case the amplifier behaves absolutely linear, i.e. signal processing is deactivated.

REMOTE CAN BUS

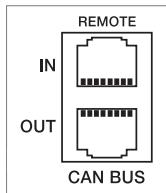


Each amplifier employs two RJ-45 sockets for Remote CAN-bus connection. The sockets are parallel connected and serve as input as well as for connecting through of the Remote network. Common RJ-45 patch cables can be used for rack-shelf cabling. The CAN-bus needs to be terminated at both ends using a 120ohms termination plug.

Detailed guidelines concerning cabling and bus length are provided in the chapter "REMOTE CONTROL NETWORK".

Both RJ-45 sockets additionally carry the balanced audio monitor signal. The nominal output level is +6dBu (1.55V) while the maximum output level is +21dBu (8.7V).

Connector Pin-Assignment:

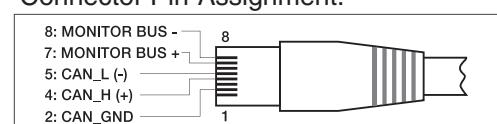

(Connector Pin-Assignment):


STATUS O

The STATUS LED provides optical indication of CAN-bus traffic. When the power amplifier's address is set to "00" so that it is separated from the CAN-bus, the STATUS LED blinks every 3 seconds.

As soon as CAN-bus communication is recognized, the LED is activated for at least 100ms whenever the power amplifier actively sends data on the CAN-bus.

The STATUS LED may also be activated from the PC. In this case, the LED of the according power amplifier blinks fast and steady while all other status-LEDs within the system stay dimmed.

EASY REMOTE

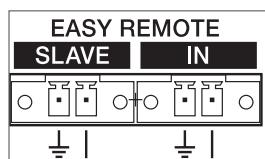

Easy Remote provides a simple way to remotely power-on/off the power amplifier. The Easy Remote function is only useful for appliances not employing a RCM-24 Module. Controlling appliances with RCM-24 Module installed per Easy Remote is practically pointless.

EASY REMOTE IN


Leaving the pins of the EASY REMOTE IN socket open, i.e. when connecting +5V, the appliance power is switched on. When connecting the EASY REMOTE IN, i.e. when feeding 0V from the control output, the appliance enters standby mode.

EASY REMOTE SLAVE

The EASY REMOTE SLAVE connector provides connection for additional appliances with Easy-Remote function (e.g. for switching several devices within a rack-shelf ON/OFF).

The switching of the slave-units is delayed to prevent the mains fuses from blowing.

POWER AMPLIFIER OUTPUTS

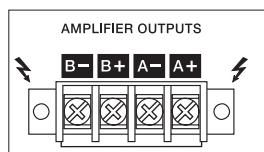

4-pole binding-post terminals are provided for the power amplifier channels „A“ and „B“. Two integrated audio output transformers convert the power amp's nominal output voltage to 100V or 70V respectively. Depending on the configuration, the corresponding output voltage is present at the floating output terminals.

The maximum amount of connected loudspeaker systems is reached when the loudspeaker network's total power consumption equals the power amplifier's nominal output capacity, without exceeding the power amp's nominal load impedance.

For further information on nominal output capacity and nominal load impedance, please refer to the "SPECIFICATIONS".

Caution: During operation the binding-post terminals might carry high voltages. Therefore, installing the loudspeaker network has to be in accordance with applicable safety regulations. Installation has to be carried out by accordingly trained professionals only. When installing and operating 100V PA-systems obeying the VDE-regulation DIN VDE 0800 is mandatory. Especially when 100V alarm PA-system installations are concerned, safety measures have to be in accordance with rating class 3. Before operating the power amplifier closing the coverlid attached to the terminal strip is mandatory.

REAR VIEW


OUTPUT VOLTAGE CONFIGURATION

The power amplifier's output voltage is factory pre-set to the corresponding voltage setting for loudspeaker networks as they are usually used in the specific country of shipment. Changing this setting takes only little effort.

Mains Voltage	Factory Pre-Set
220V, 230V, 240V	100V Output Voltage
100V, 120V	70V Output Voltage

Caution: Opening the appliance is necessary to reconfigure the output voltage setting. Therefore, only trained personnel may perform reconfiguration.
Before changing the configuration the power amplifier has to be separated from the mains through pulling the mains plug.

For reconfiguring the output voltage, please proceed as follows:

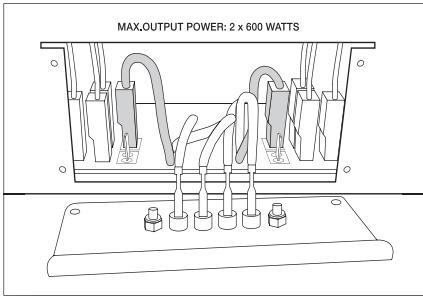

- Disconnect any cables connected to the appliance; especially the mains cord.
- Remove all fixing screws of the output connectors panel.
- Pull out the panel by holding it at the terminal strips (see diagram).
- The connector pins 100V and 70V are for selecting the desired output voltage for channel A (right channel) & B (left channel).
- Change the output voltage by pulling the corresponding connector (grey shaded in the diagram) and inserting it to the connector pin for the desired voltage setting.
- The diagram shows the configuration with both channels set to 70V.

For the RCM-24 Module to be able to assign the corresponding currents and voltages, the appliance needs to be modified as follows:


- Remove all screws securing the cover plate.
- Remove the plastic screw in the top plate.
- Open the appliance by removing the cover.
- On the printed board assembly 86276:
 - for 100V output voltage: close the bridge R56
 - for 70V output voltage: open the bridge R56
- Proceed in reverse order to reassemble the appliance.

GROUND-LIFT SWITCH



The ground-lift switch allows eliminating noise loops. If the power amplifier is operated together with other equipment in a 19" rack-shelf, setting the switch to its GROUNDED position is recommended. If the power amplifier is operated together with appliances with differing ground potentials, setting the switch to its UNGROUNDED position is recommended.

MAINS INPUT

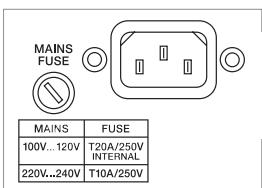


Under normal circumstances, the mains fuse only blows in case of fault. Replacing the fuse is only permissible when using a new fuse of the same type with identical amperage, voltage and blow characteristics. If the mains fuse blows more often, please contact an authorized service centre.

LF-CONNECTION CORDS


Choosing balanced cables (two conductors for the audio signal plus separate shielding mesh) with XLR-type connectors is recommended for LF-signal connection. Although connecting unbalanced cables to the power amplifier inputs is possible as well, using balanced cabling is always preferable. A great number of today's audio appliances employ balanced outputs. With balanced cabling, the shield connects all metal enclosure parts and thus efficiently eliminates the introduction of noise and hum.

XLR-type connector pin-assignment

XLR (male)

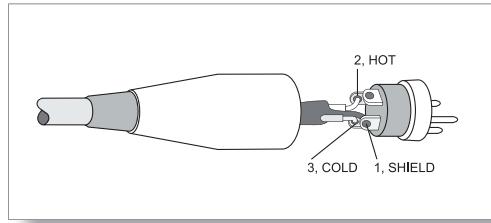

XLR (female)

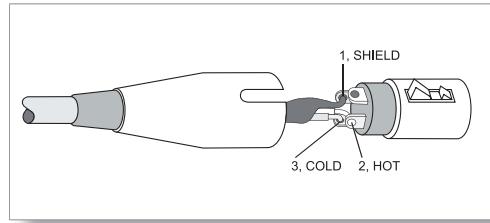

REMOTE CONTROL NETWORK


The network of the remote power amps is based on the CAN-bus standard, which for years is especially popular in automotive, industrial and security applications. The CAN-bus is a balanced serial interface for command and data transmission. Controlling the power amplifiers is performed from a PC with IRIS – Intelligent Remote & Integrated Supervision – software installed. The UCC1 USB-CAN Converter serves as interface between the PC and the CAN-bus. Connecting up to 100 power amplifiers per CAN-Bus with a maximum total cable length of 1,000 meters is possible. An additional CAN-bus is needed for controlling more than 100 power amps while the IRIS software allows administering a total of 250 power amps.

The network topology used by the CAN-bus is based on the so-called "bus or line topology", i.e. all participants are connected via a single two-wire cable (Twisted-Pair cable, shielded or unshielded) with the cabling running from one participant on the bus to the next, allowing unlimited communication among all appliances. In general, it does not matter whether a participant on the bus is a power amplifier

or an UCC1 USB-CAN converter, so that both – UCC1 and the PC as well – can be inserted at any position. Incorporating several UCC1 and PCs on a single CAN-bus is also possible. A total of up to 100 appliances can be operated on a single CAN-bus. Since the CAN-interfaces of all appliances are galvanically separated from the rest of the


circuitry, network cabling also carries a common ground conductor (CAN_GND) ensuring that all CAN-interfaces in the network are connected to a common ground potential. The UCC1 provides the possibility for switching the CAN-ground to circuit-ground.

Each participant on the bus system has two RJ-45 connectors for the Remote CAN-bus. These sockets are connected in parallel to serve as input and output (for connecting through) for the data transfer within the remote-network. The CAN-bus has to be terminated at both ends using 120Ω terminator plugs, two of which – CAN-TERM 120Ω – are supplied with the UCC1. Connect one of these to the RJ-45 socket of the first and the other to the socket of the last appliance on the CAN-bus.

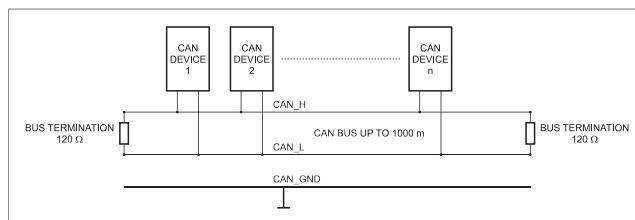


NETWORK-EXAMPLES


The following diagrams show examples of the data-bus wiring for different order of size:

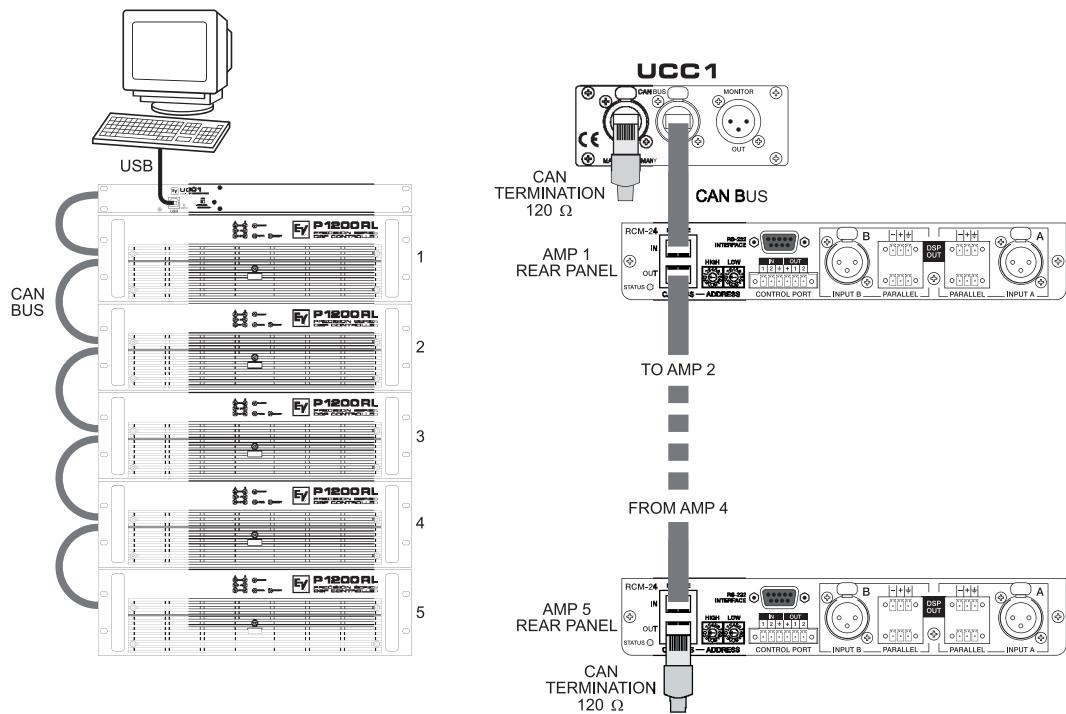

System with 5 amps and one UCC1 / PC at the beginning of the bus
Terminators at the UCC1 (first unit on the bus) and at amp 5 (last unit on the bus)

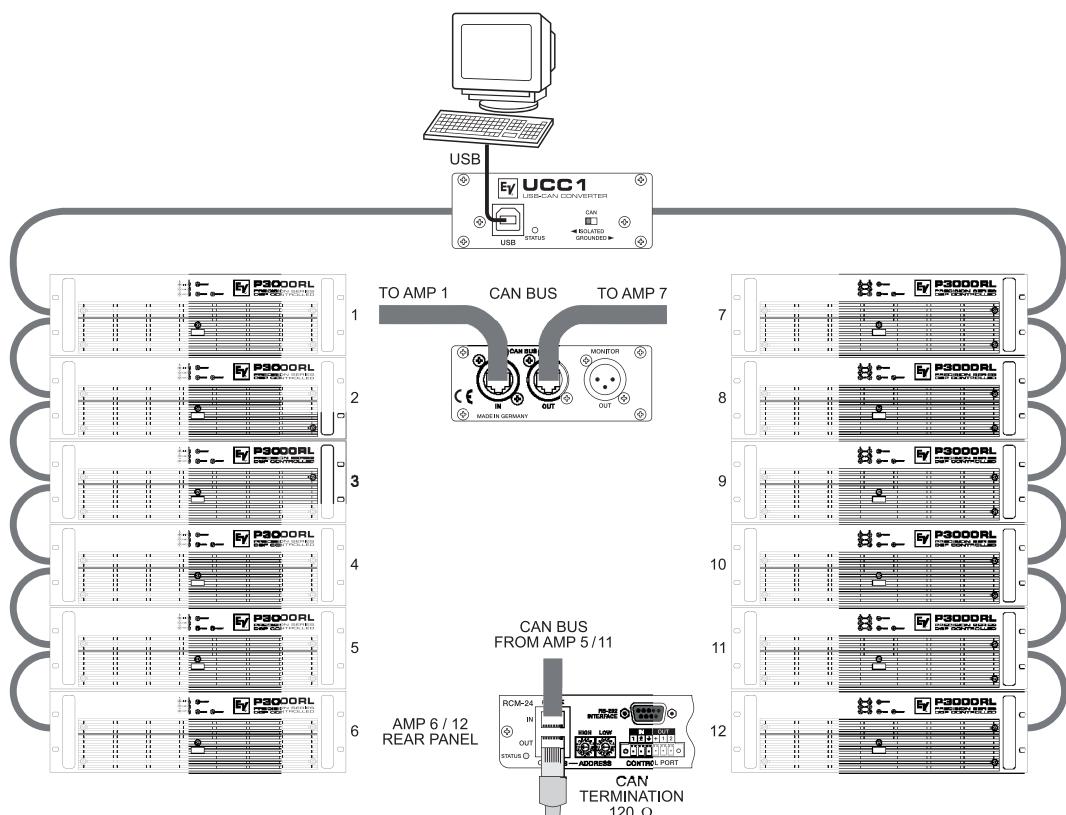

System with 2 amp-racks and an UCC1 / PC in the middle
Terminators at amp 6 (first unit on the bus) and amp 12 (last unit on the bus)

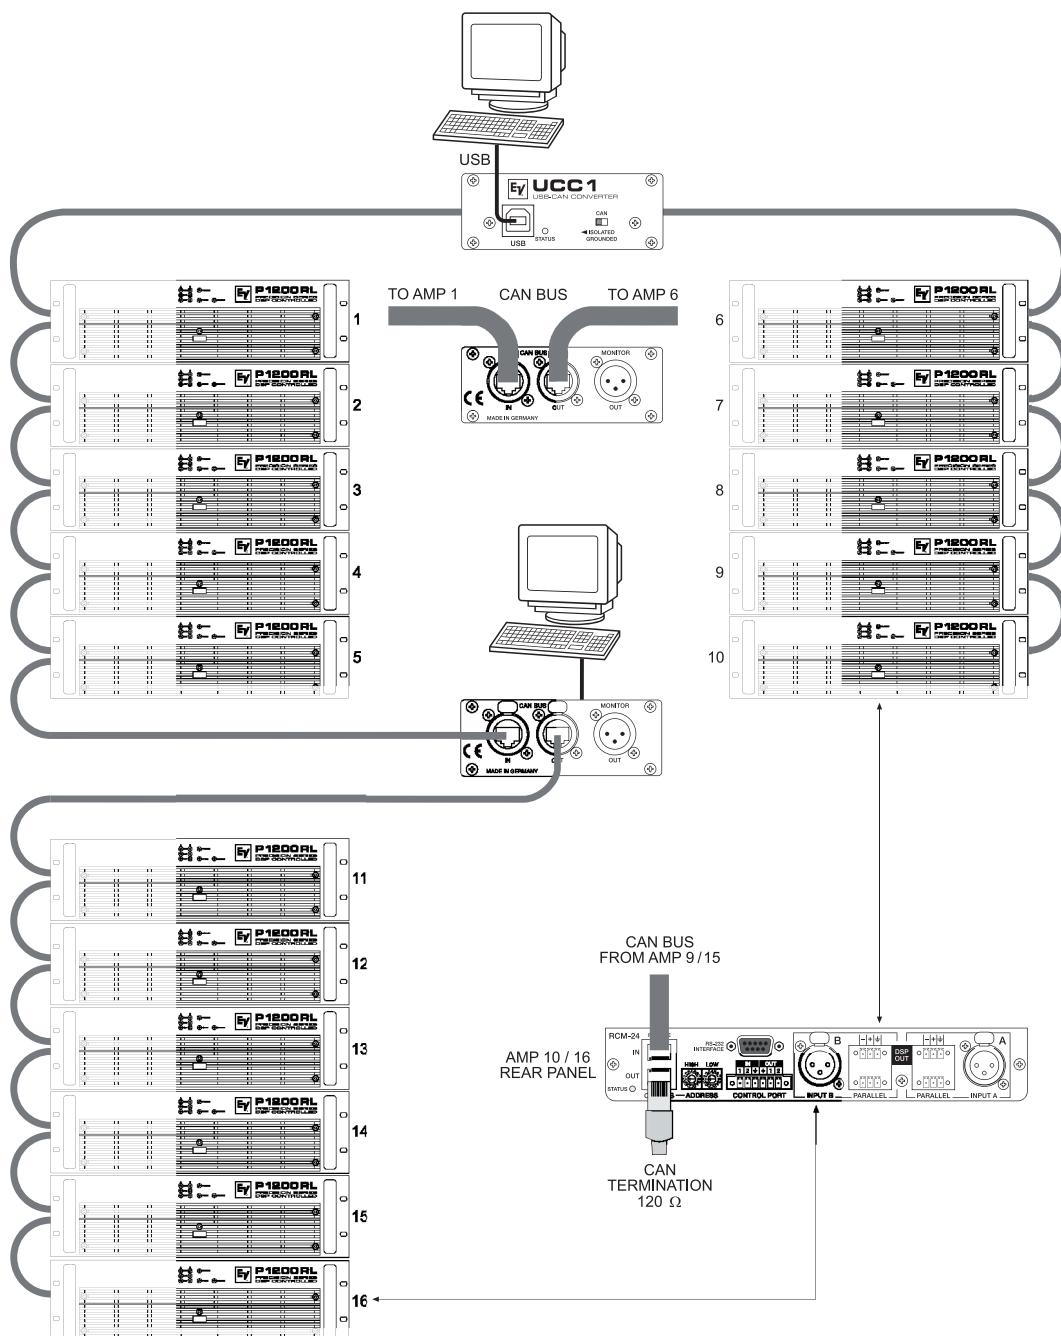

System with several amp-racks and several UCC1 / PCs
UCC1s anywhere on the CAN-bus
Terminators at amp 10 (first unit on the bus) and amp 16 (last unit on the bus)

Next to the CAN-bus signal, network cabling also carries the balanced monitor audio signal for monitoring the power amp inputs and outputs. This monitor-bus allows software-controlled monitoring of the input and output signals of all poweramps that are included in the remote network, without the need for additional wiring. The monitor signal is present at the UCC1's XLR-type MONITOR Output connector for further distribution to (e.g.) a mixing console to be monitored via headphones or an active monitor speaker connected.

CAN-BUS

Baud Rate	Bus Length
500 kbit/s	100 m
250 kbit/s	250 m
125 kbit/s	500 m
62.5 kbit/s	1000 m
20 kbit/s	2500 m
10 kbit/s	5000 m

The CAN-bus allows using different data rates, with the data rate being indirectly proportional to the bus length. Small net works allow baud rates up to 500kbit/s.

For sizable dimensioned networks reducing the baud rate (minimum 10kbit/s) is necessary. The integration of repeaters is generally recommended when the bus-length exceeds 1,000m.

CAN-BUS CABLE SPECIFICATIONS

According to the ISO 11898-2 standard, CAN-bus data transfer cabling has to be carried out using Twisted-Pair cables with or without shielding providing a characteristic impedance of 120Ω . Both ends of a CAN-bus need to be terminated with 120Ω termination-plugs.

The maximum bus-length depends on the actual data transfer rate, the kind of data transfer cable being used, as well as the total number of participants on the bus. The following table shows the most essential coherencies for CAN-networks consisting of up 64 participants:

Bus Length	Cable for data Transmission		Termination	Max. Data Transfer Rate
	Resistance per Unit Length	Cable Diameter		
0 ... 40 m	< 70 mΩ/m	0.25 ... 0.34 mm ² AWG23, AWG22	124 Ω	1000 kbit/s bei 40 m
40 ... 300 m	< 60 mΩ/m	0.34 ... 0.6 mm ² AWG22, AWG20	127 Ω	500 kbit/s bei 100 m
300 ... 600 m	< 40 mΩ/m	0.5 ... 0.6 mm ² AWG20	150 Ω ... 300 Ω*	100 kbit/s bei 500 m
600 ... 1000 m	< 26 mΩ/m	0.75 ... 0.8 mm ² AWG18	150 Ω ... 300 Ω*	62.5 kbit/s bei 1000 m

* With longer cables and many participants on the CAN-bus, termination resistors with higher impedance than the specified 120Ω are recommended to reduce the ohmic load of the interface drivers and therefore the voltage drop between the two cable ends.

The following table is meant for first assessment of necessary cable diameters for different bus lengths and bus-participant numbers:

Bus Length	Number of Appliances on the CAN-Bus		
	32	64	100
100 m	0.25 mm ² bzw. AWG24	0.34 mm ² bzw. AWG22	0.34 mm ² bzw. AWG22
250 m	0.34 mm ² bzw. AWG22	0.5 mm ² bzw. AWG20	0.5 mm ² bzw. AWG20
500 m	0.75 mm ² bzw. AWG18	0.75 mm ² bzw. AWG18	1.0 mm ² bzw. AWG17

Additionally, the length of branch lines – for participants that are not directly connected to the CAN-bus – is also of importance. For data transfer rates of up to 125kbit/s, the maximum length of a single stub cable should not exceed 2m. For higher bit rates a maximum length of only 0.3m is still permissible. The entire length of all branch lines should not exceed 30 m.

General Note:

As long as only short distances (up to 10m) are concerned, common RJ-45 patch cables with 100Ω characteristic impedance (AWG 24 / AWG 26) can be used for the cabling inside of a rack-shelf system. The previously outlined guidelines for network cabling are mandatory as far as the rack-shelf interconnection or fixed installations are involved.

MAINS OPERATION & RESULTING TEMPERATURE

MAINS OPERATION

The following tables allow determining power supply and cabling requirements. The values of the column „1/8 max. Output“ are relevant for „normal“ operation. These values are based on operating the power amplifier with VDE-noise at 1/8 of the maximum output power, which approximately equates the load of the power amplifier being operated with a music signal at maximum volume possible, without noticeable clipping.

RESULTING TEMPERATURE INSIDE THE POWER AMPLIFIER

The power drawn from the mains network is converted into acoustic output power to feed the connected loudspeaker systems & heat. The difference between drawn power and dispensed power is called leakage power or dissipation (P_d). The amount of heat resulting from power dissipation might remain inside of a rack-shelf and needs to be diverted using appropriate measures. The following table provides auxiliary means for calculating the temperatures inside of a rack-shelf system/cabinet and the ventilation efforts necessary. The column “ P_d ” lists the leakage power in relation to different operational states. The column “BTU/hr” lists the dispensed heat amount per hour.

P1200RT	U_{Mains} [V]	I_{Mains} [A]	P_{Mains} [W]	P_{out} [W]	P_d [W]	BTU/hr ⁽³⁾
Idling	230V	0.55	85	-	85	290
Max. Output ⁽¹⁾ 100V @ 40Ω, 70V @ 19.6Ω	230V	6.40	1185	2 x 380	425	1450
Max. Output ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	10.5	2030	2 x 600	830	2832
½ max. Output ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	6.60	1230	2 x 200	830	2832
⅛ max. Output ⁽²⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	3.80	675	2 x 75	525	1791
Normal Operation (-10dB) ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	3.78	670	2 x 50	570	1945
Nominal Operation (0dB) ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	9.69	1870	2 x 500	870	2969
Alarm Operation (-3dB) ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	7.27	1370	2 x 250	870	2969

P900RT	U_{Mains} [V]	I_{Mains} [A]	P_{Mains} [W]	P_{out} [W]	P_d [W]	BTU/hr ⁽³⁾
Idling	230V	0.45	70	-	70	239
Max. Output ⁽¹⁾ 100V @ 57Ω, 70V @ 28Ω	230V	4.97	920	2 x 280	360	1228
Max. Output ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	8.16	1580	2 x 450	680	2320
½ max. Output ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	5.13	960	2 x 150	660	2252
⅛ max. Output ⁽²⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	2.90	520	2 x 56.3	407.5	1390
Normal Operation (-10dB) ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	2.84	505	2 x 35	435	1484
Nominal Operation (0dB) ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	7.32	1410	2 x 350	710	2423
Alarm Operation (-3dB) ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	5.48	1030	2 x 175	680	2320

For approximation; when operating the appliance at 120V mains the stated current values need to be doubled.

(1) modulated with sine signal

(2) modulated with VDE-noise

(3) 1BTU = 1055.06J = 1055.06Ws



Electro-Voice®

BEDIENUNGSANLEITUNG



P900ORT
P1200ORT
PRECISION SERIES
DSP CONTROLLED

INHALT

WICHTIGE SICHERHEITSHINWEISE	19
WICHTIGE SERVICEHINWEISE	19
BESCHREIBUNG	20
AUSPACKEN & GARANTIE	21
INSTALLATIONSHINWEISE	21
FRONTSEITE	22
RÜCKSEITE	23
INPUT A / INPUT B	23
PARALLEL	23
DSP OUT	23
CONTROL PORT	23
RS-232 INTERFACE	24
ADDRESS	24
REMOTE CAN-BUS	24
EASY REMOTE	25
ENDSTUFEAUSGÄNGE	25
KONFG. DER AUSGANGSSPANNUNG	26
GROUND-LIFT SCHALTER	26
NETZEINGANG	26
VERKABELUNG	27
NF-VERBINDUNGSKABEL	27
REMOTE CONTROL NETZWERK	27
NETZWERK-BEISPIELE	28
CAN-BUS	30
LEITUNGSSPEZIFIKATIONEN	30
NETZBETRIEB & WÄRMEENTWICKLUNG	31
SPECIFICATIONS / TECHNISCHE DATEN	32
BLOCK DIAGRAM AMPLIFIER	34
BLOCK DIAGRAM RCM-24	35
ABMESSUNGEN	36

WICHTIGE SICHERHEITSHINWEISE



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

AVIS: RISQUÉ DE CHOC ELECTRIQUE. NE PAS OUVRIR.



Das Blitzsymbol innerhalb eines gleichseitigen Dreiecks soll den Anwender auf nicht isolierte Leitungen und Kontakte im Geräteinneren hinweisen, an denen hohe Spannungen anliegen, die im Fall einer Berührung zu lebensgefährlichen Stromschlägen führen können.



Das Ausrufezeichen innerhalb eines gleichseitigen Dreiecks soll den Anwender auf wichtige Bedienungs- sowie Servicehinweise in der zum Gerät gehörenden Literatur aufmerksam machen.

1. Lesen Sie diese Hinweise.
2. Heben Sie diese Hinweise auf.
3. Beachten Sie alle Warnungen.
4. Richten Sie sich nach den Anweisungen.
5. Betreiben Sie dieses Gerät nicht in unmittelbarer Nähe von Wasser. Stellen Sie bitte sicher, dass kein Tropf- oder Spritzwasser ins Geräteinnere eindringen kann. Platzieren Sie keine mit Flüssigkeiten gefüllte Objekte, wie Vasen oder Trinkgefäße, auf dem Gerät ab.
6. Verwenden Sie zum Reinigen des Gerätes ausschliesslich ein trockenes Tuch.
7. Verdecken Sie keine Lüftungsschlitzte. Beachten Sie bei der Installation des Gerätes stets die entsprechenden Hinweise des Herstellers.
8. Vermeiden Sie die Installation des Gerätes in der Nähe von Heizkörpern, Wärmespeichern, Öfen oder anderer Wärmequellen.
9. Verwenden Sie mit dem Gerät ausschliesslich Zubehör/ Erweiterungen, die vom Hersteller hierzu vorgesehen sind.
10. Überlassen Sie sämtliche Servicearbeiten und Reparaturen einem ausgebildeten Kundendiensttechniker.
Bringen Sie das Gerät direkt zu unserem Kundendienst, wenn es beschädigt wurde oder eine Funktionsstörung zeigt.
11. Um das Gerät komplett spannungsfrei zu schalten, muss der Netzstecker gezogen werden.

WICHTIGE SERVICEHINWEISE

ACHTUNG: Diese Servicehinweise sind ausschliesslich zur Verwendung durch qualifiziertes Servicepersonal. Um die Gefahr eines elektrischen Schlages zu vermeiden, führen Sie keine Wartungsarbeiten durch, die nicht in der Bedienungsanleitung beschrieben sind, außer Sie sind hierfür qualifiziert. Überlassen Sie sämtliche Servicearbeiten und Reparaturen einem ausgebildeten Kundendiensttechniker.


1. Bei Reparaturarbeiten im Gerät sind die Sicherheitsbestimmungen nach EN 60065 (VDE 0860) einzuhalten.
2. Bei allen Arbeiten, bei denen das geöffnete Gerät mit Netzzspannung verbunden ist und betrieben wird, ist ein Netz - Trenntransformator zu verwenden.
3. Vor einem Umbau mit Nachrüstsätzen, Umschaltung der Netzzspannung oder sonstigen Modifikationen ist das Gerät stromlos zu schalten.
4. Die Mindestabstände zwischen netzspannungsführenden Teilen und berührbaren Metallteilen (Metallgehäuse) bzw. zwischen den Netzpolen betragen 3 mm und sind unbedingt einzuhalten.
Die Mindestabstände zwischen netzspannungsführenden Teilen und Schaltungsteilen, die nicht mit dem Netz verbunden sind (sekundär), betragen 6mm und sind unbedingt einzuhalten.
5. Spezielle Bauteile, die im Stromlaufplan mit dem Sicherheitssymbol gekennzeichnet sind, (Note) dürfen nur durch Originalteile ersetzt werden.
6. Eigenmächtige Schaltungsänderungen dürfen nicht vorgenommen werden.
7. Die am Reparaturort gültigen Schutzbestimmungen der Berufsgenossenschaften sind einzuhalten. Hierzu gehört auch die Beschaffenheit des Arbeitsplatzes.
8. Die Vorschriften im Umgang mit MOS - Bauteilen sind zu beachten.

NOTE:  SAFETY COMPONENT (MUST BE REPLACED BY ORIGINAL PART)

BESCHREIBUNG

Herzlichen Glückwunsch! Sie haben sich mit einer Endstufe der PRECISION SERIES von Electro-Voice für ein Gerät modernster Technologie entschieden.

Die Endstufen der P-Serie vereinen überragende Audio-Performance mit höchster Zuverlässigkeit und Betriebssicherheit. Jede Endstufe ist mit dem RCM-24 Remote Control Modul ausgestattet, welches die zentrale Konfiguration, Steuerung und Überwachung aller relevanten Endstufenparameter (wie Ausgangstrom, -spannung, Lastimpedanz, ...) ermöglicht.

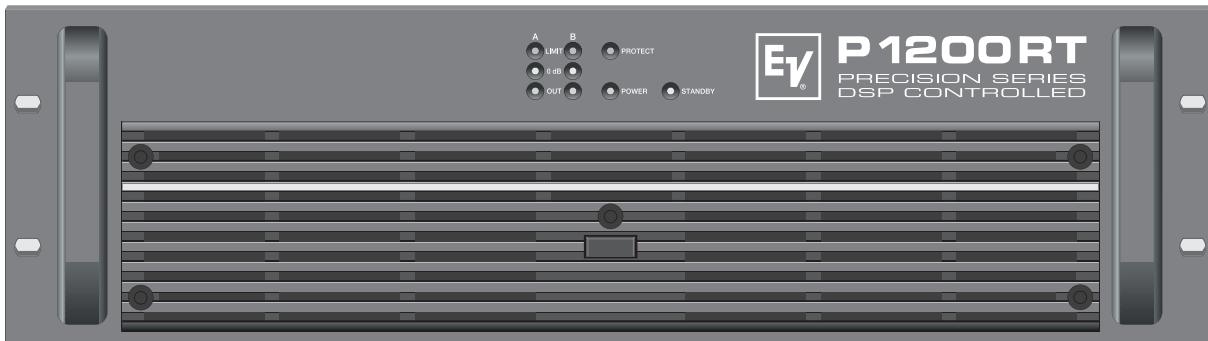


Die Endstufen sind mit je zwei Hochleistungs-Ausgangstransformatoren bestückt und stellen die Lautsprecherausgänge erdfrei zur Verfügung.

Ein lückenloses Konzept an Protections schützt nicht nur die Endstufen, sondern auch die angeschlossenen Lautsprecher. Zu diesen Schutzschaltungen gehören dynamische Audio-Limiter, DC/HF-Protections, Back-EMF-Protection, Inrush Current Limiter, Short Circuit Protection und natürlich die Temperaturüberwachung der Endtransistoren und der Netztransformatoren.

Die thermische Stabilität wird durch dreistufige Hochleistungslüfter mit sehr niedrigem Geräuschpegel gewährleistet. Die Luftführung ist Front-to-Rear, was den problemlosen Betrieb in grossen und schmalen Endstufen-Racks ermöglicht.

Durch grosszügig dimensionierte Netzteile mit stieuarmen Ringkerstransformatoren wird ein grosser Headroom weit oberhalb der ausgewiesenen Nennleistung erzielt.

Mit dem RCM-24 hat man zu jeder Zeit einen vollständigen Überblick über den gesamten Systemzustand und die Kontrolle über alle relevanten Systemparameter. Das RCM-24 Modul erlaubt die Anbindung an ein Remote Control Netzwerk mit bis zu 250 Endstufen. Ein komplettes PA-System kann von einem oder mehreren PCs mit Hilfe der Windows Software IRIS – Intelligent Remote & Integrated Supervision – gesteuert und überwacht werden. Sämtliche Betriebszustände, z. B. Einschaltstatus, Temperatur, Aussteuerung, Limiting, Ansprechen von Schutzschaltungen, Abweichungen der Lastimpedanz usw., werden zentral erfasst und dargestellt. Dadurch kann schon vor dem Auftreten von kritischen Betriebszuständen reagiert und gezielt eingegriffen werden. Eine automatische Reaktion auf Über- oder Unterschreitung bestimmter Grenzwerte ist ebenfalls programmierbar. Alle Parameter, z. B. Power On/Off, Level, Mute, Filter usw. sind in Echtzeit steuerbar und können in jeder Endstufe abgespeichert werden.

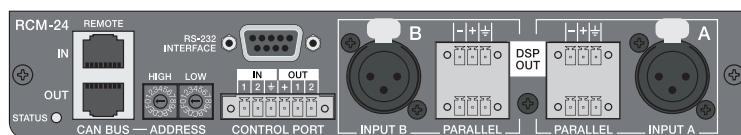

Die angeschlossenen Lautsprecher werden durch Messung der Ausgangströme und -spannungen der beiden Endstufenkanäle überwacht. Jede Über- oder Unterschreitung der eingestellten Grenzwerte wird sofort gemeldet und protokolliert. Kurzschlüsse oder Leitungsunterbrechungen werden so während des normalen Anlagenbetriebs erkannt und dargestellt. Eine wesentlich genauere Überprüfung der angeschlossenen Lautsprecher ermöglicht die integrierte Impedanz-Messfunktion. Dabei wird mit Hilfe des internen Signal-Generators und der Strom-/Spannungsmessung die Impedanz des oder der Lautsprecher plus der Zuleitungen über den gesamten Frequenzbereich gemessen und als Impedanzkurve am PC Bildschirm dargestellt. Der gemessene Impedanzverlauf kann jederzeit mit einem Referenzwert verglichen werden, wodurch schon geringste Lautsprecherdefekte oder Mängel erkennbar sind.

Neben der Steuerung und Überwachung stellt das RCM-24 Remote Control Modul umfangreiche Signalverarbeitungsfunktionen zur Verfügung. Enthalten sind insgesamt 20 parametrische Filter, X-Over Funktionen, Delays, Routing und Level Control, sowie Kompressor und Limiter pro Kanal. Sämtliche Parameter sind frei editierbar und können auf dem Modul in bis zu 8 User Memories abgespeichert werden. Unabhängig von der Kontrolle durch das Netzwerk bleiben in einem Havariefall alle DSP-Einstellungen (Filter, Delay, Level) erhalten. Außerdem lassen sich die Steuereingänge der Endstufen zur netzwerkunabhängigen Umschaltung auf ein anderes Preset (z.B. Alarmierungs-Einstellung mit maximaler Energie im Sprachbereich) verwenden. Damit wird die P-Serie mit RCM-24 Modul auch höchsten Sicherheitsanforderungen gerecht.

Beim Hardware-Design des RCM-24 wurde auf kompromisslose Audioqualität höchster Wert gelegt. Die AD/DA-Wandlung findet mit 24-Bit Auflösung und 128-fachem Oversampling mit linearer Phase statt; die interne Wortlänge ist 48 Bit. Damit erreicht das RCM-24 eine Dynamik von 115 dB, ein absoluter Spitzenwert für digitale Audiogeräte.


Sämtliche Details zur Konfiguration, Steuerung und Überwachung der P-Series Endstufen finden Sie in der Dokumentation der PC Windows Software IRIS.

AUSPACKEN & GARANTIE

Öffnen Sie die Verpackung und entnehmen Sie die Endstufe. Zusätzlich zu dieser Bedienungsanleitung liegen dem Gerät ein Netzkabel, die Garantiekarte, vier Gerätefüsse und sechs Schraub-Steckverbinder (1 mal 2-polig, 4 mal 3-polig, 1 mal 6-polig) bei. Überprüfen Sie bitte ob die Garantiekarte vollständig ausgefüllt ist, denn nur so können Sie etwaige Garantieansprüche geltend machen. Sie haben auf das Gerät 36 Monate Garantie, die ab dem Zeitpunkt der Aushändigung durch den Händler gilt. Bewahren Sie zur Garantiekarte auch den Kaufbeleg, der den Termin der Übergabe festlegt, auf.

INSTALLATIONSHINWEISE

Generell sind die Endstufen so aufzustellen oder zu montieren, daß die Luftzufuhr an der Frontseite und die Entlüftung an der Geräterückseite nicht behindert wird. Für den Einbau in Gehäuse und Gestellschränke ist zu beachten, daß eine ausreichende Belüftung der Geräte möglich ist. Zwischen der Endstufen Rückseite und der Schrank/Rack-Innenseite ist ein freier Luftkanal bis zur oberen Rack- oder Schrankentlüftung von mindestens 60mm x 330mm vorzusehen. Oberhalb des Schrankes soll ein freier Raum von mindestens 100mm für die Entlüftung vorgesehen werden. Da beim Betrieb die Temperatur im Gehäuse- oder Schrank bis zu 40°C ansteigen kann, muß die maximal zulässige Umgebungstemperatur der übrigen im Gestellschrank befindlichen Geräte beachtet werden.
(siehe „NETZBETRIEB UND WÄRMEENTWICKLUNG“)

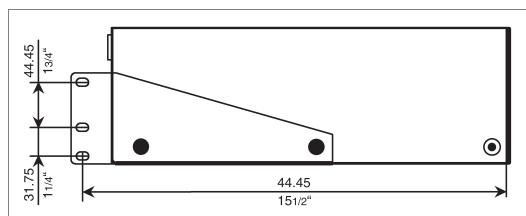

Beim Einbau in Gestellschränken sollen in jedem Fall Einbauschienen oder die als Zubehör erhältlichen Rackeinbauwinkel NRS 90235 (112733) verwendet werden, um ein Verwinden der Frontblende zu verhindern.

Achtung: Die max. Umgebungstemperatur von +40°C soll für störungsfreien Betrieb nicht überschritten werden.

Die Endstufe ist zu schützen vor: Tropf- oder Spritzwasser, direkter Sonnenbestrahlung, hoher Umgebungstemperatur oder unmittelbarer Einwirkung von Wärmequellen, hoher Luftfeuchtigkeit, starken Staubablagerungen und starken Vibrationen

Wenn die Endstufe direkt von einem kalten an einen warmen Ort gebracht wird, kann sich Feuchtigkeit auf Innenteilen niederschlagen. Das Gerät darf erst in Betrieb genommen werden, wenn es sich auf die geänderte Temperatur erwärmt hat (nach etwa einer Stunde). Sollte ein fester Gegenstand oder Flüssigkeit in das Gehäuse gelangen, trennen Sie sofort die Stromquellen vom Gerät ab und lassen das Gerät von einer autorisierten Servicestelle überprüfen, bevor Sie es weiterverwenden. Zur Reinigung des Gerätes dürfen keine Sprühmittel verwendet werden, da diese dem Gerät schaden und sich plötzlich entzünden können.

FRONTSEITE



Mit dem **POWER Schalter** in der Mitte der Frontblende wird das Gerät eingeschaltet. Eine Softstart-Schaltung vermeidet dabei Einschaltstromspitzen auf der Netzeleitung. Dadurch wird verhindert, dass der Leitungsschutzschalter des Stromnetzes beim Einschalten der Endstufe anspricht. Die Lautsprecher werden über die Ausgangsrelais um ca. 2 Sekunden verzögert zugeschaltet, wodurch etwaige Einschaltgeräusche effektiv unterdrückt werden. Während dieser Verzögerung leuchtet die **PROTECT LED** und die Lüfter laufen mit maximaler Geschwindigkeit. Dies ist normal und bestätigt die einwandfreie Funktion der Schutzschaltungen. Alle Endstufen mit RCM-24 Modul befinden sich nach dem Einschalten wieder in dem Zustand, in dem sie ausgeschaltet wurden. Wurde das Gerät z.B. im Standby Modus per POWER Schalter ausgeschaltet, so wird es sich nach dem Einschalten wieder in diesem Modus befinden.

POWER

Diese Anzeige leuchtet auf, wenn die Endstufe eingeschaltet ist. Falls die POWER Anzeige nicht leuchtet, ist das Gerät nicht mit dem Stromnetz verbunden, die Primärsicherung defekt oder die Endstufe befindet sich im Standby Modus (STANDBY LED leuchtet).

STANDBY

Diese Anzeige leuchtet, wenn sich die Endstufe im Standby Modus befindet, welcher über das RCM-24 oder über Easy Remote aktiviert werden kann. Im Standby Modus ist nur das interne Hilfsnetzteil aktiviert. Das Leistungsnetzteil ist netzseitig getrennt.

PROTECT

Wenn die **PROTECT-Anzeige** aufleuchtet, hat eine der internen Schutzschaltungen wie Übertemperatur, Kurzschluss, Back-EMF, Hochfrequenz am Ausgang.... ange- sprochen. Die Endstufen werden in diesem Fall über die Ausgangsrelais von der Last getrennt, um etwaige Schäden an den Lautsprechern oder der Endstufe selbst zu verhindern. Die Fehlerursache, beispielsweise eine kurzgeschlossene Lautsprecherleitung muss beseitigt werden. Bei Überhitzung muss einige Zeit ge- wartet werden, bis die Endstufe sich selbstständig wieder in den normalen Betriebs- zustand schaltet.

OUT


Die OUT-LED beginnt ca. 30dB unter Vollaussteuerung zu leuchten. Bei Kurzschluss von Lautsprecherleitungen oder Ansprechen einer Schutzschaltung verlischt diese Anzeige.

0 dB


Die 0dB Anzeige leuchtet auf, wenn die Endstufe mit maximaler Aussteuerung be- trieben wird. Eine höhere Eingangsspannung hat keine Erhöhung der Spitzenausgangs- spannung zur Folge.

LIMIT

Diese Anzeige leuchtet auf, sobald der eingebaute dynamische Limiter anspricht und die Endstufe an der Aussteuerungsgrenze oder generell im Grenzbereich betrieben wird. Kurzzeitiges Aufleuchten ist dabei unproblematisch, da der interne Limiter Eingangspegel bis zu +21dBu auf einen Klirrfaktor von ca. 1% ausregeln kann. Leuchtet diese LED jedoch dauerhaft sollte die Lautstärke reduziert werden, um etwaige Überlastungsschäden der angeschlossenen Lautsprecherboxen zu vermeiden.

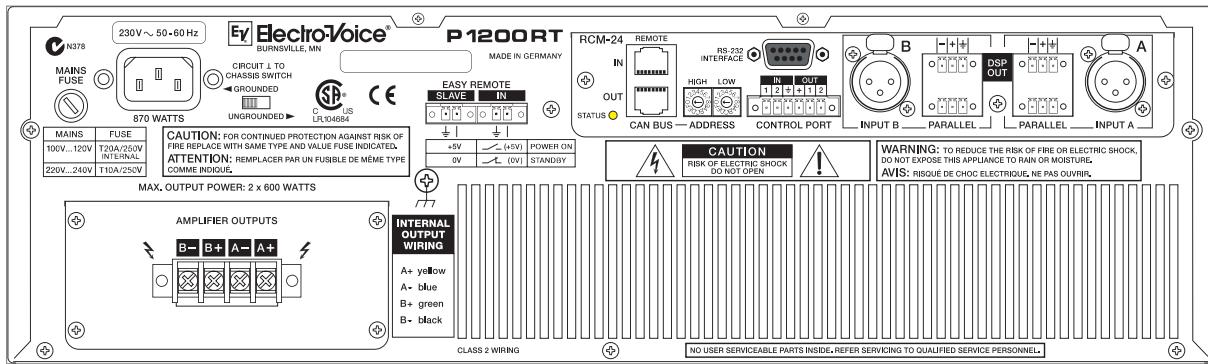

INPUT A / INPUT B

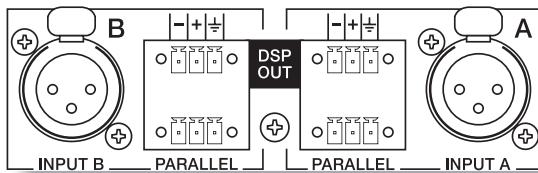

Die Eingänge INPUT A & INPUT B sind elektronisch symmetrisch mit einer Eingangsempfindlichkeit von +6dBu (1.55V) für den direkten Betrieb mit Mischpulten usw. ausgelegt.

Der Anschluss kann entweder über die XLR-Eingangsbuchsen oder die parallelgeschalteten Schraubsteckverbindungen, die im Lieferumfang enthalten sind, erfolgen. Die XLR-Eingangsbuchsen sind nach IEC Norm 268 beschaltet. Für den Fall, dass die Eingänge potenzialfrei sein müssen, ist die Nachrüstung von Eingangsübertragern vorgesehen. Es wird dazu je Kanal der Nachrüstsatz NRS 90208 (Nr. 121 641) benötigt.

Die Eingänge INPUT A & INPUT B sind elektronisch symmetrisch mit einer Eingangsempfindlichkeit von +6dBu (1.55V) für den direkten Betrieb mit Mischpulten usw. ausgelegt.

PARALLEL


Das Eingangssignal kann entweder über die XLR-Buchsen INPUT A / INPUT B oder über die parallelgeschalteten Schraubsteckverbindungen erfolgen. Die Buchsen PARALLEL ermöglichen aber auch ein einfaches „Durchschleifen“ des Signals zu weiteren Endstufen ohne aufwändige Splitkabel.

DSP OUT

An der Buchse DSP OUT liegt das DSP-Ausgangssignal, also das Signal hinter dem digitalen Signalprocessing, an. Dieses Signal wird gleichzeitig in den Leistungsblock der Endstufe eingespeist und gelangt entsprechend verstärkt an die Endstufenausgänge.

Der Ausgang DSP OUT kann verwendet werden, um weitere Endstufen (ohne DSP Modul) mit dem verarbeiteten Signal aus dem RCM-24 Remote Control Modul zu versorgen, z.B. zur Leistungserweiterung. Das Ausgangssignal ist elektronisch symmetrisch, der Nennpegel beträgt +6dBu, der Maximalpegel beträgt +21dBu (8.7V). Die Ausgangsimpedanz beträgt 100Ω.

CONTROL PORT

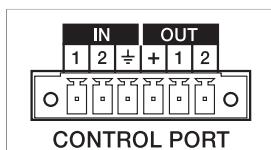

Der CONTROL PORT enthält zwei frei-programmierbare Steuereingänge und Steuerausgänge, sowie die Referenzanschlüsse für Masse und +5V. Die Steuereingänge sind mit Hilfe der PC Windows Software IRIS konfigurierbar, und dienen z. B. zur Power On / Standby Umschaltung, zur Presetumschaltung oder zur Parameterkontrolle.

Die beiden Steukontakte IN1 / IN2 liegen intern über Pull-Up Widerstände auf +5V (offen). Zum Aktivieren können die Steuereingänge über externe Schalter, Taster oder Relais gegen Masse (Pin 3) geschlossen werden.

Die beiden Steuerausgänge OUT1 / OUT2 sind Open Collector Outputs, die im nichtaktiven Zustand (Off) hochohmig sind. Im aktiven Zustand (On) sind die Ausgänge gegen Masse geschlossen. Die Ausgänge dienen zur Signalisierung interner Zustände und können direkt LEDs, Kontrollleuchten oder Relais ansteuern. Der +5V Referenzanschluss dient zur Versorgung der extern angeschlossenen Elementen mit einem Strom bis zu 100mA max. Über die Steuerausgänge können Betriebszustände (kritische Temperatur, Über- oder Unterschreitung definierter Grenzwerte, Fehler, usw.) an zentrale Bedienplätze oder andere Systeme (Brandmeldeanlage, Alarmierungsanlage) auch ohne PC gemeldet werden. Nähere Hinweise zur Konfiguration des Control Ports finden Sie in der IRIS Dokumentation.


RÜCKSEITE

RS-232 INTERFACE



Das RS-232 Interface dient als Schnittstelle zu Mediensteuerungssystemen bzw. Gebäudemanagementsystemen. Über RS-232 können sämtliche Parameter gesteuert und abgefragt werden. Die Kommunikation erfolgt über ein einfach zu implementierendes ASCII Protokoll. Auf diese Weise können die Remote Verstärker problemlos in Medien- und Touchpanel-Steuerungen integriert werden. Programmierhinweise und eine vollständige Protokollbeschreibung finden Sie in der IRIS Dokumentation

ADDRESS

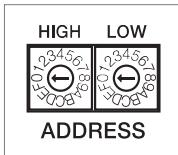


Mit Hilfe der Adress-Wahlschalter stellen Sie die Netzwerk-Adresse des Verstärkers ein. In einem CAN-Netzwerk können Sie die Adressen 01 bis 250 (FA hex) verwenden. Achtung: Jede Adresse darf im System nur einmal vorkommen, da es sonst zu Netzwerk-Konflikten kommt. Die Adresseinstellung erfolgt in Hexadezimal. Der Wahlschalter LOW ist das niederwertige Digit, der Schalter HIGH ist das höherwertige Digit.

Adress-Tabelle:

HIGH	LOW	Adresse	HIGH	LOW	Adresse
0	0	Stand-alone	8	0 ... F	128 ... 143
0	1 ... F	1 ... 15	9	0 ... F	144 ... 159
1	0 ... F	16 ... 31	A	0 ... F	160 ... 175
2	0 ... F	32 ... 47	B	0 ... F	176 ... 191
3	0 ... F	48 ... 63	C	0 ... F	192 ... 207
4	0 ... F	64 ... 79	D	0 ... F	208 ... 223
5	0 ... F	80 ... 95	E	0 ... F	224 ... 239
6	0 ... F	96 ... 111	F	0 ... A	240 ... 250
7	0 ... F	112 ... 127	F	B ... F	reserviert

Die Adresse 0 (00 hex, Auslieferungszustand) sorgt dafür, dass der Verstärker von der Remote-Kommunikation getrennt ist, und somit nicht mehr im System erscheint, auch wenn er am CAN-Bus angeschlossen ist. Wenn der Verstärker mit Adresse 0 eingeschaltet wird, werden sämtliche internen Parameter auf 0 bzw. Bypass und das Routing auf 2-in-2 gestellt. Der Verstärker verhält sich dann völlig linear, die Signalverarbeitungsfunktionen sind deaktiviert.

REMOTE CAN BUS

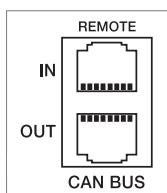


Jeder Verstärker hat zwei RJ-45 Buchsen für den Remote CAN-Bus. Die Buchsen sind parallel geschaltet und dienen als Eingang und zum Weiterschleifen des Remote-Netzwerkes. Zur Verkabelung im Rack können handelsübliche RJ-45 Netzwerkkabel verwendet werden. Der CAN-Bus benötigt an beiden Enden einen Abschluss-Stecker mit 120 Ohm Abschlusswiderstand (im Lieferumfang).

Ausführliche Richtlinien zur Verdrahtung und Buslänge finden Sie im Kapitel „Remote Control Netzwerk“.

An den beiden RJ-45 Buchsen liegt auch das symmetrische Audio-Monitorignal. Der Nenn-Ausgangspegel beträgt +6dBu (1.55V), der maximale Ausgangspegel ist +21dBu (8.7V)

Steckerbelegung:

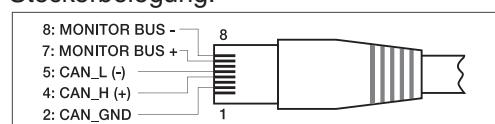

(Ansicht Kontaktseite)


STATUS O

Die LED STATUS dient zur Kontrolle der Kommunikation am CAN-Bus. Wenn die Adresse 00 eingestellt und die Endstufe softwaremässig vom CAN-Bus abgekoppelt ist, blinkt die LED regelmässig alle 3 Sek. kurz auf.

Sobald eine Kommunikation am CAN-Bus erkannt wurde, wird die LED immer dann für mindestens 100 ms aktiviert, wenn die Endstufe selbst Daten auf den CAN-Bus sendet.

Die STATUS LED kann auch vom PC aktiviert werden. Die LED der betreffenden Endstufe blinkt dann in einem schnellen regelmässigen Rhythmus, alle anderen Status-LEDs im System bleiben dunkel. Diese Funktion dient zur Überprüfung der Kommunikation und zur schnellen Identifikation einer Endstufe in einem grösseren System (s. a. IRIS Dokumentation).

EASY REMOTE

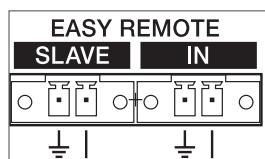

Über Easy-Remote kann die Endstufe auf einfache Weise ferngesteuert, ein- und ausgeschaltet werden. Die Easy Remote Funktion kommt nur bei Geräten ohne RCM-24 Modul zum Tragen. Eine Steuerung von Geräten mit RCM-24 Modul per Easy Remote ist nicht sinnvoll.

EASY REMOTE IN


Werden die Pins der EASY REMOTE IN Buchse offen gelassen bzw. mit +5V beaufschlagt, so schaltet das Gerät ein. Bei einer Verbindung der Pins oder 0V vom Steuerausgang, schaltet das Gerät in den Standby Modus.

EASY REMOTE SLAVE

An EASY REMOTE SLAVE können weitere Geräte mit Easy Remote Funktion angeschlossen werden (z.B. zur Rack-ON/OFF Steuerung bei mehreren Geräten in einem Rack).

Das Einschalten der Slave-Geräte erfolgt zeitverzögert um ein Ansprechen von Netzsicherungen zu vermeiden.

ENDSTUFENAUSGÄNGE

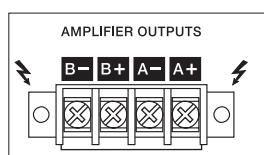

Für die Endstufenkanäle A und B sind 4-polige Schraubklemmen vorgesehen. Über zwei eingebaute Audio-Ausgangsübertrager wird die Nennausgangsspannung der Endstufe auf 100V bzw. 70V für Lautsprecheranzeige transformiert. Je nach Konfiguration steht die entsprechende Ausgangsspannung potentialfrei an den Ausgangsklemmen zur Verfügung.

Die Anzahl der maximal anschliessbaren Lautsprecher ist erreicht, wenn die Gesamtleistungsaufnahme des Lautsprechernetzes dem Nennleistungswert der Endstufe entspricht. Der Nennlastwiderstand der Endstufe sollte dabei nicht unterschritten werden.

Die Nennleistungswerte und Nennlastwiderstände entnehmen Sie bitte dem Kapitel „Technische Daten“.

Vorsicht: Die Ausgänge können im Betrieb berührungsgefährliche Spannungen annehmen. Die angeschlossenen Lautsprecherkreise sind aus diesem Grund gemäss den geltenden Sicherheitsbestimmungen zu installieren. Die Installation darf nur durch entsprechend geschulte Fachkräfte durchgeführt werden.

Für das Errichten und Betreiben von 100V-Lautsprecheranlagen ist die VDE-Bestimmung DIN VDE 0800 zu beachten.

Besonders bei 100V-Lautsprecheranlagen für Alarmierungszwecke sind alle Schutzmassnahmen für die Bemessungsklasse 3 auszulegen. Vor der Inbetriebnahme der Endstufe muss in jedem Fall die an der Klemmleiste montierte Abdeckung geschlossen werden.

RÜCKSEITE

KONFIGURATION DER AUSGANGSSPANNUNG


Die Ausgangsspannung der Endstufen ist werkseitig auf die in den jeweiligen Ländern üblichen Spannungen für Lautsprechernetze voreingestellt und kann in wenigen Schritten umkonfiguriert werden.

Netzspannung	Auslieferungszustand
220V, 230V, 240V	100V Ausgangsspannung
100V, 120V	70V Ausgangsspannung

Achtung: Die Konfiguration der Ausgangsspannung erfordert das Öffnen des Gerätes und darf nur von entsprechend geschultem Personal durchgeführt werden.

Bevor mit dem Umbau begonnen wird, muss die Spannungsfreiheit des Gerätes durch Ziehen des Netzsteckers sichergestellt werden.

Möchten Sie die Ausgangsspannung umkonfigurieren, dann gehen Sie wie folgt vor:

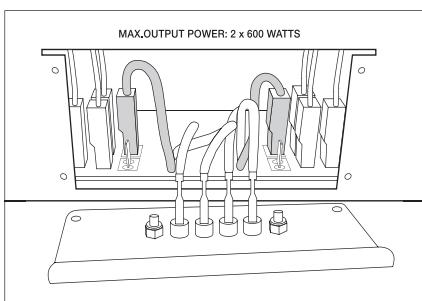


- Alle an das Gerät angeschlossenen Kabel, insbesondere das Netzkabel, entfernen.
- Alle Schrauben zur Befestigung der Ausgangsbuchsenblende entfernen.
- Blende an den Schraubklemmen herausziehen (s. Abbildung)
- Zur Auswahl der Ausgangsspannung dienen die Steckkontakte 100V und 70V für Kanal A (rechts) & B (links)
- Um die Ausgangsspannung zu ändern, ziehen Sie den entsprechenden Stecker (grau hinterlegt) ab und stecken ihn auf den Steckkontakt für die gewünschte Spannung
- In der Abbildung sehen Sie die Konfiguration 70V für beide Kanäle

Damit das RCM-24 Modul auch die entsprechenden Ströme und Spannungen zuordnen kann, muss das Gerät zusätzlich folgendermassen modifiziert werden:


- Alle Schrauben zur Haubenbefestigung entfernen
- Kunststoffschraube an der Geräteoberseite entfernen
- Gerät durch Abnehmen der Haube öffnen
- Auf Printplatte 86276: für 100V Ausgangsspannung: Brücke R56 schliessen
für 70V Ausgangsspannung: Brücke R56 öffnen
- Gerät in umgekehrter Reihenfolge wieder zusammenbauen

GROUND-LIFT SCHALTER

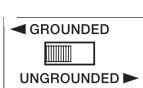

Mit dem Ground-Lift Schalter können Sie Brummschleifen verhindern. Wenn die Endstufe zusammen mit anderen Geräten in einem 19"-Rack betrieben wird, sollte der Schalter in Stellung GROUNDED stehen. Wird die Endstufe mit Geräten mit unterschiedlichem Erdungspotenzial betrieben, sollte der Schalter in Stellung UNGROUNDED stehen.

NETZEINGANG

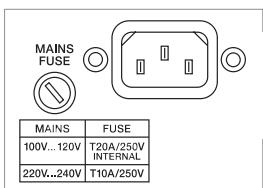


Die Netzsicherung löst unter normalen Umständen nur bei einem Fehlerfall aus. Die Sicherung darf nur gegen eine gleichwertige Sicherung mit gleicher Strom-, Spannungs- und Auslösecharakteristik getauscht werden. Sollte die Netzsicherung wiederholt durchbrennen, kontaktieren Sie bitte die nächstgelegene Servicestelle.

NF-VERBINDUNGSKABEL


Als NF-Verbindung wählen Sie am besten symmetrisch ausgelegte Kabel (2 Signaladern + Schirmgeflecht) mit XLR-Stecker. Obwohl alle Endstufeneingänge auch unsymmetrisch belegt werden können, stellt ein symmetrisch ausgeführtes NF-Verbindungs kabel die bessere Alternative zu einer unsymmetrischen Verbindung dar. Die meisten Audiogeräte verfügen über symmetrisch aufgebaute Ausgänge. Der Schirm im Kabel verbindet bei symmetrischer Signalführung alle metallischen Gehäuse und verhindert dadurch lückenlos ein Einkoppeln von externen Störsignalen, im wesentlichen Brummen, auf den Audiosignalpfad.

XLR-Steckerbelegung

XLR (male)

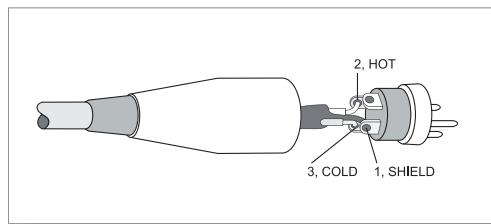

XLR (female)

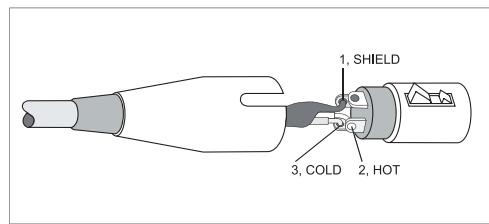

REMOTE CONTROL NETZWERK


Das Netzwerk der Remote Endstufen basiert auf dem CAN-Bus Standard, der sich im Automotive-, Industrie- und Sicherheits-Bereich durchgesetzt und über Jahre hinweg bewährt hat. Der CAN-Bus ist eine symmetrische serielle Schnittstelle zur Übertragung von Kommandos und Daten. Die Steuerung der Endstufen erfolgt von einem PC mit IRIS Intelligent Remote & Integrated Supervision Software. Als Interface zwischen PC und CAN-Bus dient der UCC1 USB-CAN Converter. Pro CAN-Bus lassen sich 100 Endstufen bis zu einer maximalen Kabellänge von 1000 Metern anschliessen. Wenn mehr als 100 Endstufen kontrolliert werden sollen, ist ein weiterer CAN-Bus notwendig. Insgesamt kann die IRIS Software bis zu 250 Endstufen verwalten.

Der CAN-Bus verwendet als Netzwerktopologie die sogenannte „Bus- oder Linien-Topologie“. Das heisst, alle Teilnehmer sind an einer einzigen Zweidrahtleitung (Twisted-Pair-Kabel, geschirmt oder ungeschirmt) angeschlossen, wobei die Verkabelung von einem Busteilnehmer zum nächsten verlaufen muss. Jedes Gerät kann hierbei uneingeschränkt mit jedem anderen Gerät kommunizieren. Dabei ist es grundsätzlich

egal, ob der Busteilnehmer eine Endstufe oder ein UCC1 USB-CAN Converter ist. Somit kann der UCC1 (und damit der PC) an beliebiger Stelle im CAN-Bus sitzen.


Auch mehrere UCC1 und PCs am CAN-Bus sind möglich. Ingesamt können bis zu 100 Geräte an einem CAN-Bus betrieben werden. Da die CAN-Schnittstellen in allen Geräten galvanisch getrennt von den übrigen Schaltungsteilen aufgebaut ist, wird auch eine gemeinsame Masseleitung (CAN_GND) in der Netzwerkverkabelung mitgeführt. Damit ist sichergestellt, dass alle CAN-Schnittstellen im Netzwerk auf einem gemeinsamen Potenzial liegen. Im UCC1 besteht die Möglichkeit, den CAN-Ground auf Schaltungsmasse zu legen.

Jeder Bus-Teilnehmer hat 2 RJ-45 Buchsen für den Remote CAN-Bus. Die Buchsen sind parallel geschaltet und dienen als Eingang und Ausgang (zum Weiterschleifen) des Remote-Netzwerkes. Der CAN-Bus muss an beiden Enden mit einem 120Ω Abschlusswiderstand terminiert werden. Zu diesem Zweck liegen dem UCC1 zwei Abschluss-Stecker CAN-TERM 120Ω bei. Stecken Sie diese Abschluss-Stecker in die freien RJ-45 Buchsen des ersten und des letzten Gerätes am CAN-Bus.

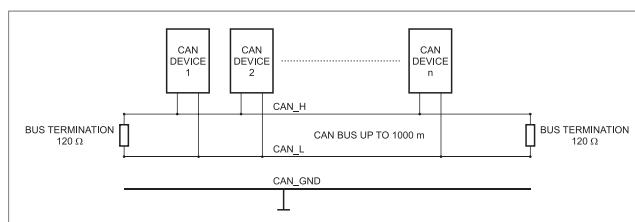


NETZWERK-BEISPIELE


Die folgenden Bilder zeigen Beispiele von Datenbusverdrahtungen in unterschiedlichen Größenordnungen:

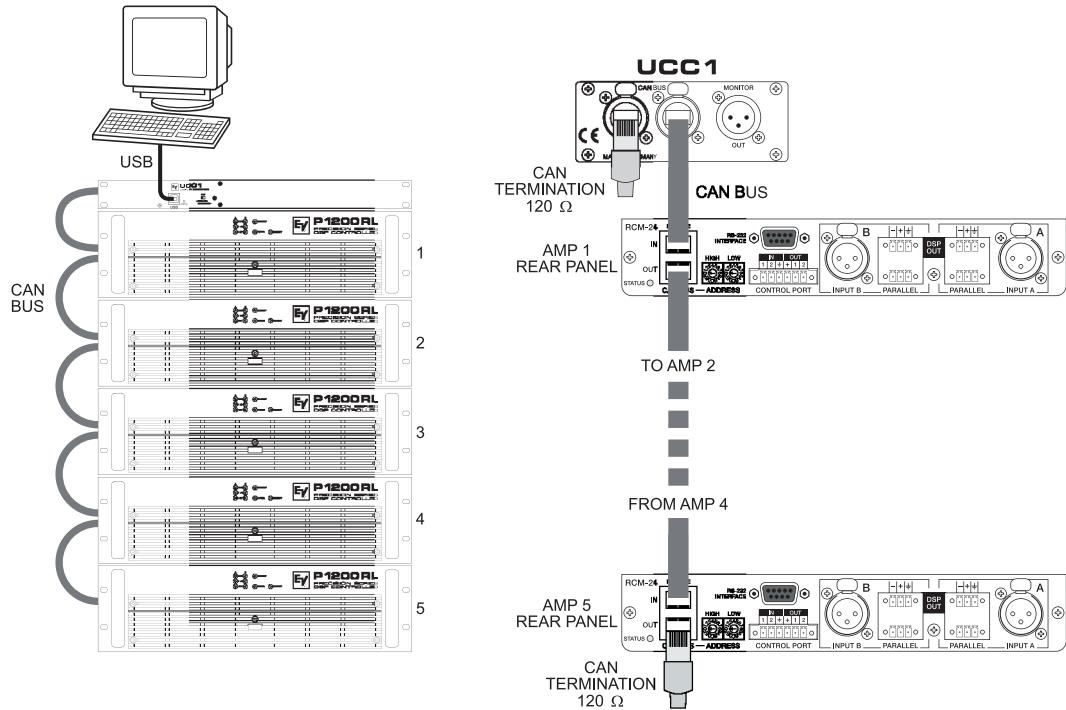

System mit 5 Verstärkern und einem UCC1 / PC am Bus-Anfang
Abschluss-Stecker am UCC1 (Bus-Anfang) und am Verstärker 5 (Bus-Ende)

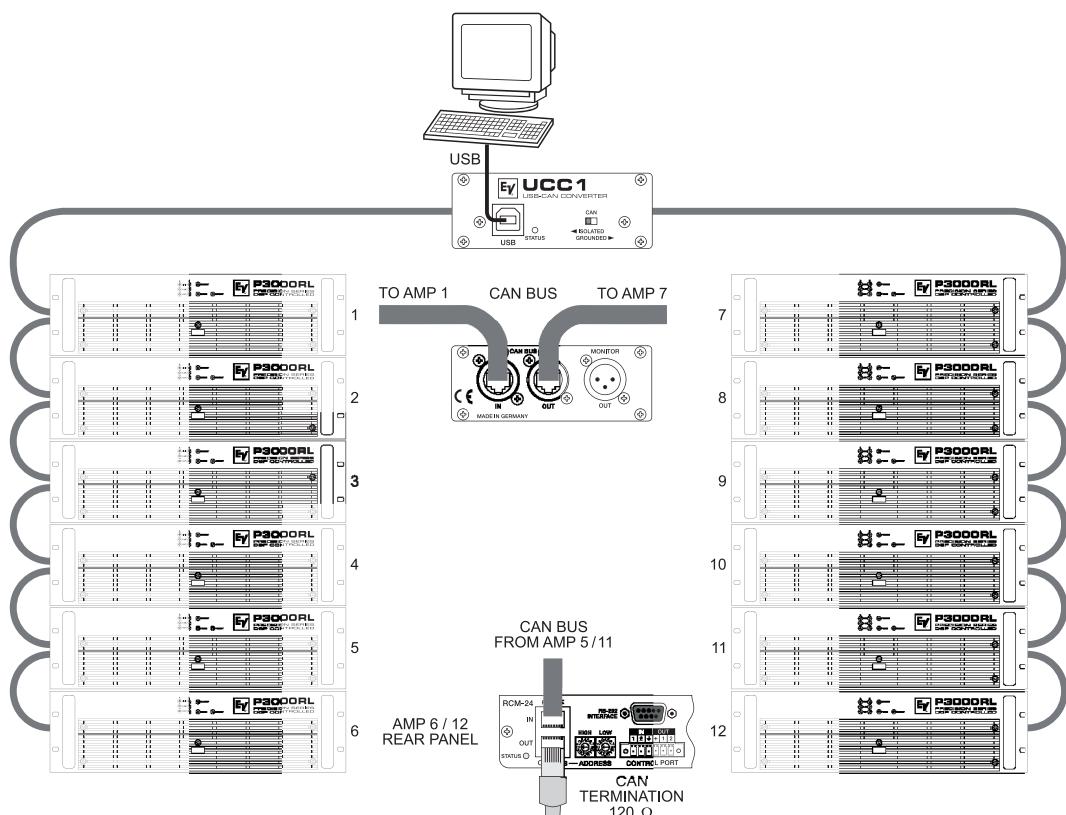

System mit 2 Racks und einem UCC1 / PC in der Mitte
Abschluss-Stecker an Verstärker 6 (Bus-Anfang) und Verstärker 12 (Bus-Ende)

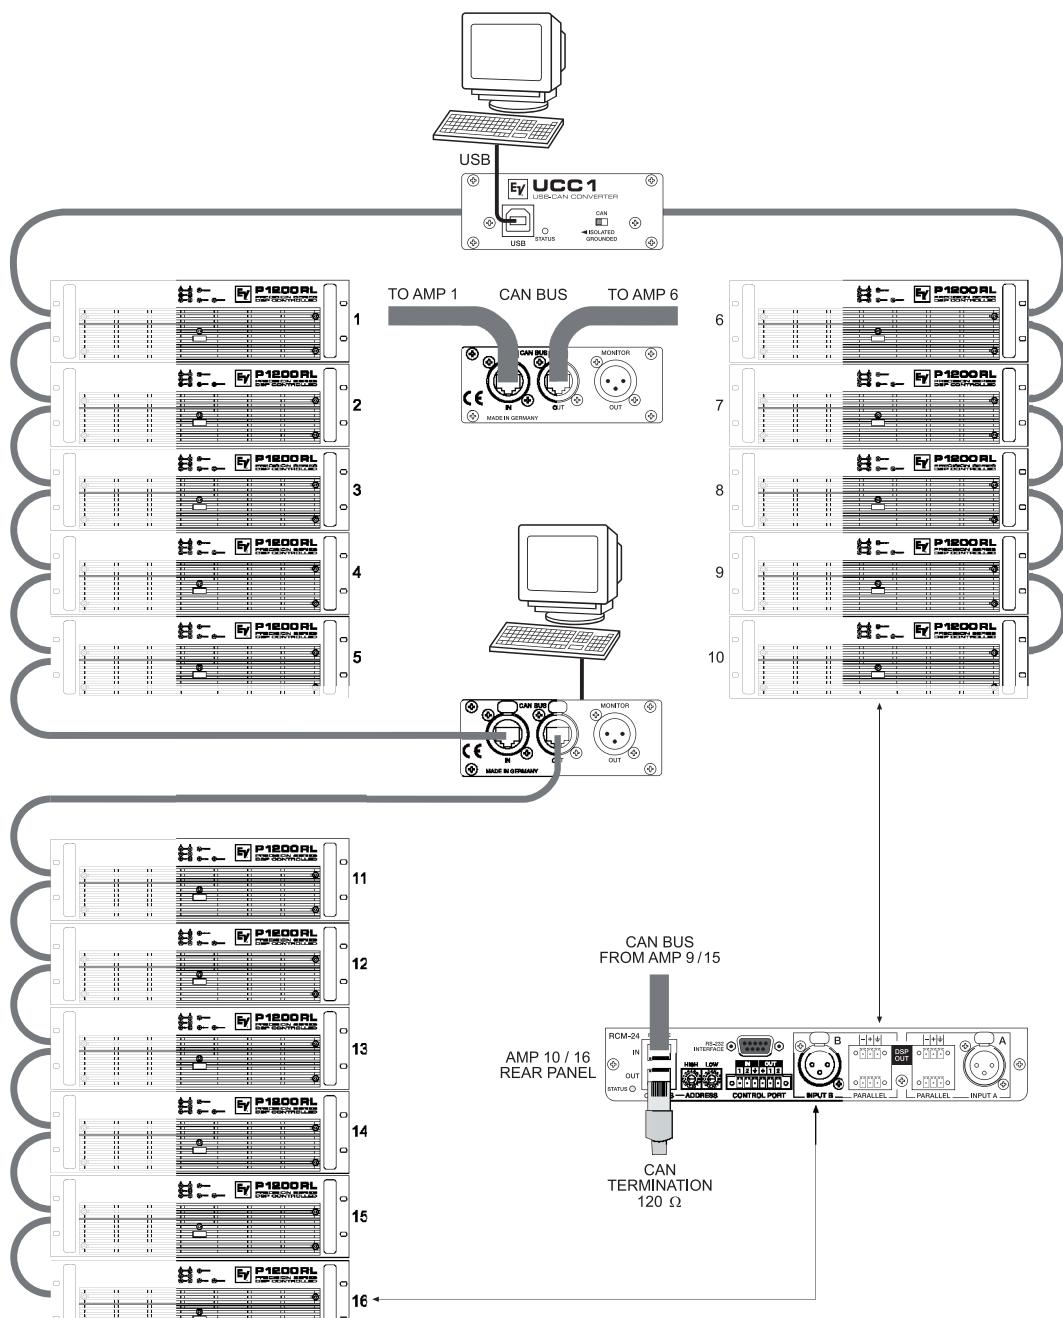

System mit mehreren Racks und mehreren UCC1 / PCs
 UCC1 an beliebigen Stellen im CAN-Bus
 Abschluss-Stecker an Verstärker 10 (Bus-Anfang) und Verstärker 16 (Bus-Ende)

In der Netzwerk-Verkabelung ist neben dem CAN-Bus auch das symmetrische Audio-Monitor Signal zum Abhören der Endstufeneingänge und –ausgänge mitgeführt. Dieser Monitorbus ermöglicht das softwaregesteuerte Abhören der Eingangs- oder Ausgangssignale aller im Remote-Netzwerk vorhandenen Endstufen ohne zusätzlichen Verdrahtungsaufwand. Am UCC1 liegt das Monitor Signal an der XLR Output Buchse MONITOR an und kann beispielsweise auf einen Mischpulteingang gelegt und über Kopfhörer oder direkt über eine aktive Monitorbox abgehört werden.

CAN-BUS

Baud Rate	Bus Länge
500 kbit/s	100 m
250 kbit/s	250 m
125 kbit/s	500 m
62.5 kbit/s	1000 m
20 kbit/s	2500 m
10 kbit/s	5000 m

Der CAN-Bus erlaubt die Verwendung unterschiedlicher Datenraten, wobei die Datenrate indirekt proportional zur Buslänge ist. Wenn das Netzwerk nur eine geringe Ausdehnung hat, sind höhere Baudaten bis zu 500 kbit/s möglich. Bei grösseren Ausdehnungen muss die Baudate herabgesetzt werden (min. 10 kbit/s). Buslängen über 1000 m sollten grundsätzlich nur mit Repeatern realisiert werden.

CAN-Bus Leitungsspezifikationen

Gemäss dem ISO 11898-2 Standard sollten für den CAN-Bus als Datenübertragungskabel vorzugsweise Twisted-Pair-Leitungen, geschirmt oder ungeschirmt, mit einem Wellenwiderstand von 120Ω zum Einsatz kommen. Als Leitungsabschluss muss an beiden Enden ein Abschlusswiderstand von 120Ω vorgesehen werden.

Die maximale Buslänge ist abhängig von der Datenübertragungsrate, von der Art des Datenübertragungskabels sowie von der Anzahl der Bus-Teilnehmer. Die folgende Tabelle zeigt die wesentlichen Zusammenhänge für CAN-Netzwerke mit bis zu 64 Teilnehmern:

Buslänge	Datenübertragungskabel		Abschlusswiderstand	max. Datenübertragungsrate
	Widerstandsbelag	Kabelquerschnitt		
0 ... 40 m	< 70 mΩ/m	0.25 ... 0.34 mm ² AWG23, AWG22	124 Ω	1000 kbit/s bei 40 m
40 ... 300 m	< 60 mΩ/m	0.34 ... 0.6 mm ² AWG22, AWG20	127 Ω	500 kbit/s bei 100 m
300 ... 600 m	< 40 mΩ/m	0.5 ... 0.6 mm ² AWG20	150 Ω ... 300 Ω*	100 kbit/s bei 500 m
600 ... 1000 m	< 26 mΩ/m	0.75 ... 0.8 mm ² AWG18	150 Ω ... 300 Ω*	62.5 kbit/s bei 1000 m

* Bei langen Leitungen und vielen Geräten am CAN-Bus werden hochohmigere Abschlusswiderstände als die spezifizierten 120Ω empfohlen, um die ohmsche Last für die Schnittstellentreiber und damit den Spannungsabfall von einem zum anderen Leitungsende zu verringern.

Die nächste Tabelle dient zur ersten Abschätzung des erforderlichen Kabelquerschnitts für unterschiedliche Buslängen und verschiedene Anzahl der Bus-Teilnehmer:

Buslänge	Anzahl der Geräte am CAN-Bus		
	32	64	100
100 m	0.25 mm ² bzw. AWG24	0.34 mm ² bzw. AWG22	0.34 mm ² bzw. AWG22
250 m	0.34 mm ² bzw. AWG22	0.5 mm ² bzw. AWG20	0.5 mm ² bzw. AWG20
500 m	0.75 mm ² bzw. AWG18	0.75 mm ² bzw. AWG18	1.0 mm ² bzw. AWG17

Zu beachten ist noch die Länge der Abzweigleitungen, wenn ein Teilnehmer nicht direkt am CAN-Bus angeschlossen ist. Diese Stichleitungen sollten bei Datenübertragungsraten bis zu 125 kbit/s eine Einzellänge von max. 2 m und bei höheren Bitraten von max. 0,3 m nicht überschreiten. Die Gesamtlänge aller Abzweigleitungen sollte 30 m nicht übersteigen.

Grundsätzlich gilt:

Für die Rack-Verdrahtung können handelsübliche RJ-45 Patchkabel mit 100Ω Wellenwiderstand verwendet werden (AWG 24 / AWG 26), wenn es sich nur um kurze Strecken handelt (bis zu 10 m). Für die Verdrahtung der Racks untereinander und in der Gebäudeinstallation sind unbedingt die oben genannten Richtlinien für die Netzwerkverkabelung einzuhalten.

NETZBETRIEB & WÄRMEENTWICKLUNG

NETZBETRIEB

Mit Hilfe der folgenden Tabellen können die Anforderungen für Stromversorgung und Zuleitungen bestimmt werden. Für „normalen“ Betrieb können die Werte der Spalte „½ max. Ausgangsleistung“ verwendet werden. Die Endstufe wurde hier mit VDE-Rauschen bei ½ der maximalen Ausgangsleistung betrieben. Dies entspricht etwa der Belastung wenn die Endstufe mit Musiksignal an der Aussteuerungsgrenze betrieben wird.

WÄRMEENTWICKLUNG IN DER ENDSTUFE

Die vom Stromnetz aufgenommene Leistung wird in Ausgangsleistung für die Lautsprecher & Wärme umgewandelt. Die Differenz aus aufgenommener Leistung und abgegebener Leistung nennt man Verlustleistung (P_d). Die durch Verluste entstehende Wärmemenge verbleibt u.U. im Rack und muss durch geeignete Massnahmen abgeleitet werden. Zur Berechnung der Wärmeverhältnisse im Rack/Schrank bzw. nötiger Abluftmassnahmen kann die nachfolgende Tabelle benutzt werden. Die Spalte P_d zeigt die Verlustleistung bei verschiedenen Betriebszuständen. Die Spalte BTU/hr zeigt die abgegebene Wärmemenge je Stunde.

P1200RT	U_{Netz} [V]	I_{Netz} [A]	P_{Netz} [W]	P_{out} [W]	P_d [W]	BTU/hr ⁽³⁾
Leerlauf	230V	0.55	85	-	85	290
Max. Ausgangsleistung ⁽¹⁾ 100V @ 40Ω, 70V @ 19.6Ω	230V	6.40	1185	2 x 380	425	1450
Max. Ausgangsleistung ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	10.5	2030	2 x 600	830	2832
½ max. Ausgangsleistung ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	6.60	1230	2 x 200	830	2832
½ max. Ausgangsleistung ⁽²⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	3.80	675	2 x 75	525	1791
Normalbetrieb (-10dB) ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	3.78	670	2 x 50	570	1945
Nennbetrieb (0dB) ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	9.69	1870	2 x 500	870	2969
Alarmbetrieb (-3dB) ⁽¹⁾ 100V @ 20Ω, 70V @ 9.8Ω	230V	7.27	1370	2 x 250	870	2969

P900RT	U_{Netz} [V]	I_{Netz} [A]	P_{Netz} [W]	P_{out} [W]	P_d [W]	BTU/hr ⁽³⁾
Leerlauf	230V	0.45	70	-	70	239
Max. Ausgangsleistung ⁽¹⁾ 100V @ 57Ω, 70V @ 28Ω	230V	4.97	920	2 x 280	360	1228
Max. Ausgangsleistung ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	8.16	1580	2 x 450	680	2320
½ max. Ausgangsleistung ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	5.13	960	2 x 150	660	2252
½ max. Ausgangsleistung ⁽²⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	2.90	520	2 x 56.3	407.5	1390
Normalbetrieb (-10dB) ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	2.84	505	2 x 35	435	1484
Nennbetrieb (0dB) ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	7.32	1410	2 x 350	710	2423
Alarmbetrieb (-3dB) ⁽¹⁾ 100V @ 28.5Ω, 70V @ 14Ω	230V	5.48	1030	2 x 175	680	2320

Für 120V Netzspannung sind die Stromangaben in etwa zu verdoppeln

(1) Aussteuerung mit Sinus-Signal

(2) Aussteuerung mit VDE-Rauschen

(3) 1BTU = 1055.06J = 1055.06Ws

SPECIFICATIONS / TECHNISCHE DATEN


System (amplifier) at rated conditions, both channels driven, rated loads, unless otherwise specified.

	P900RT		P1200RT	
	100V	70V	100V	70V
Rated Load Impedance	28.5Ω	14Ω	20Ω	9.8Ω
Maximum Midband Output Power THD = 1%, 1kHz	410W	400W	590W	580W
Maximum Midband Output Voltage THD = 1%, 1kHz, RMS, rated load	108V	74.8V	109.5V	75.4V
Rated Output Power THD < 0.2%, 20Hz ... 20kHz	350W	350W	500W	500W
Rated Output Voltage THD < 0.2%, 20Hz ... 20kHz	100V	70V	100V	70V
Maximum RMS Voltage Swing THD = 1%, 1kHz, no load	125V	87V	121V	88V
THD at rated output power, MBW = 80kHz, 1kHz	< 0.05%			
IMD-SMPTE 60Hz, 7kHz	< 0.1%			
DIM30 3.15kHz, 15kHz	< 0.2%			
Crosstalk Attenuation ref. 1kHz, at rated output power	> 80dB			
Frequency Response -3dB, ref. 1kHz	45Hz ... 22.5kHz			
Damping Factor at 100Hz / 1kHz, 8Ω	> 300 / > 200			
Signal to Noise Ratio, Amplifier A-weighted	106dB			
Signal to Noise Ratio, System A-weighted	100dB			
Input Sensitivity at rated output power @ 4Ω, 1kHz	+6dBu (1.55V)			
Max. Input Voltage	+21dBu (8.7V)			
Input Impedance 20Hz ... 20kHz, balanced	20kΩ			
CMR @ 1kHz	80dB			
Output Voltage DSP OUT / Monitor	rated: +6dBu (1.55V) max: +21dBu (8.7V)			
Output Impedance DSP OUT / Monitor	< 100Ω			
Minimum Output Load DSP OUT / Monitor	600Ω			
Digital Signal Processing				
AD & DA Conversion	24 Bit, Sigma-Delta, 128 x Oversampling, Linear Phase			
Sample Rate	48kHz			
Internal Wordlength	48 bit			
Dynamic Range	115dB (typical)			
Functions	Volume Control, Routing, X-Over (6, 12, 18, 24 dB/Oct Slope, Butterworth, Bessel, Linkwitz-Riley), Filter (Parametric EQ, Lo / Hi Shelving EQ, LPN, Lo / Hi Pass, Allpass), Compressor / Limiter, Delay			


SPECIFICATIONS / TECHNISCHE DATEN

Interfaces	CAN-Bus, 10 ... 500 kbit/s, RJ-45 (PC Control) RS-232, 19.2 kbit/s, 9-pol. SUB-D (Multi Media Control)	
Control Port / GPIO	6-pol. Phoenix 2 Control Inputs Inactive / OFF +5.0V (> 2.4V) or open (internal pull-up) Active / ON 0V (< 0.8V) 2 Control Outputs Inactive / OFF High (Open Collector) Active / ON Low (< 0.5V / I = 0.7A) Input Voltage +32.0V max. Switching Current 1.0A max. Reference Outputs +5.0V / 100mA and GND	
Power Requirements	240V, 230V, 120V, 100V / 50Hz ... 60Hz, factory configured	
Power Consumption 1/8 max. output voltage at rated load	690W	870W
Protection	Audio limiters, High temperature, DC, HF, Back-EMF, Peak current limiters, Inrush current limiters, Turn-on delay	
Cooling	Front-to-rear, 3-stage-fans	
Dimensions (W x H x D), mm	483 x 132.5 x 426	
Weight	22kg	24kg
Optional Input Transformer	NRS 90208 (121 641)	
Optional Output Transformer (Monitor)	NRS 90227 (112 679)	
Rear-rackmount 15,5"	NRS 90235 (112 733)	
Rear-rackmount 18"	NRS 90223 (112 701)	





BLOCK DIAGRAM AMPLIFIER

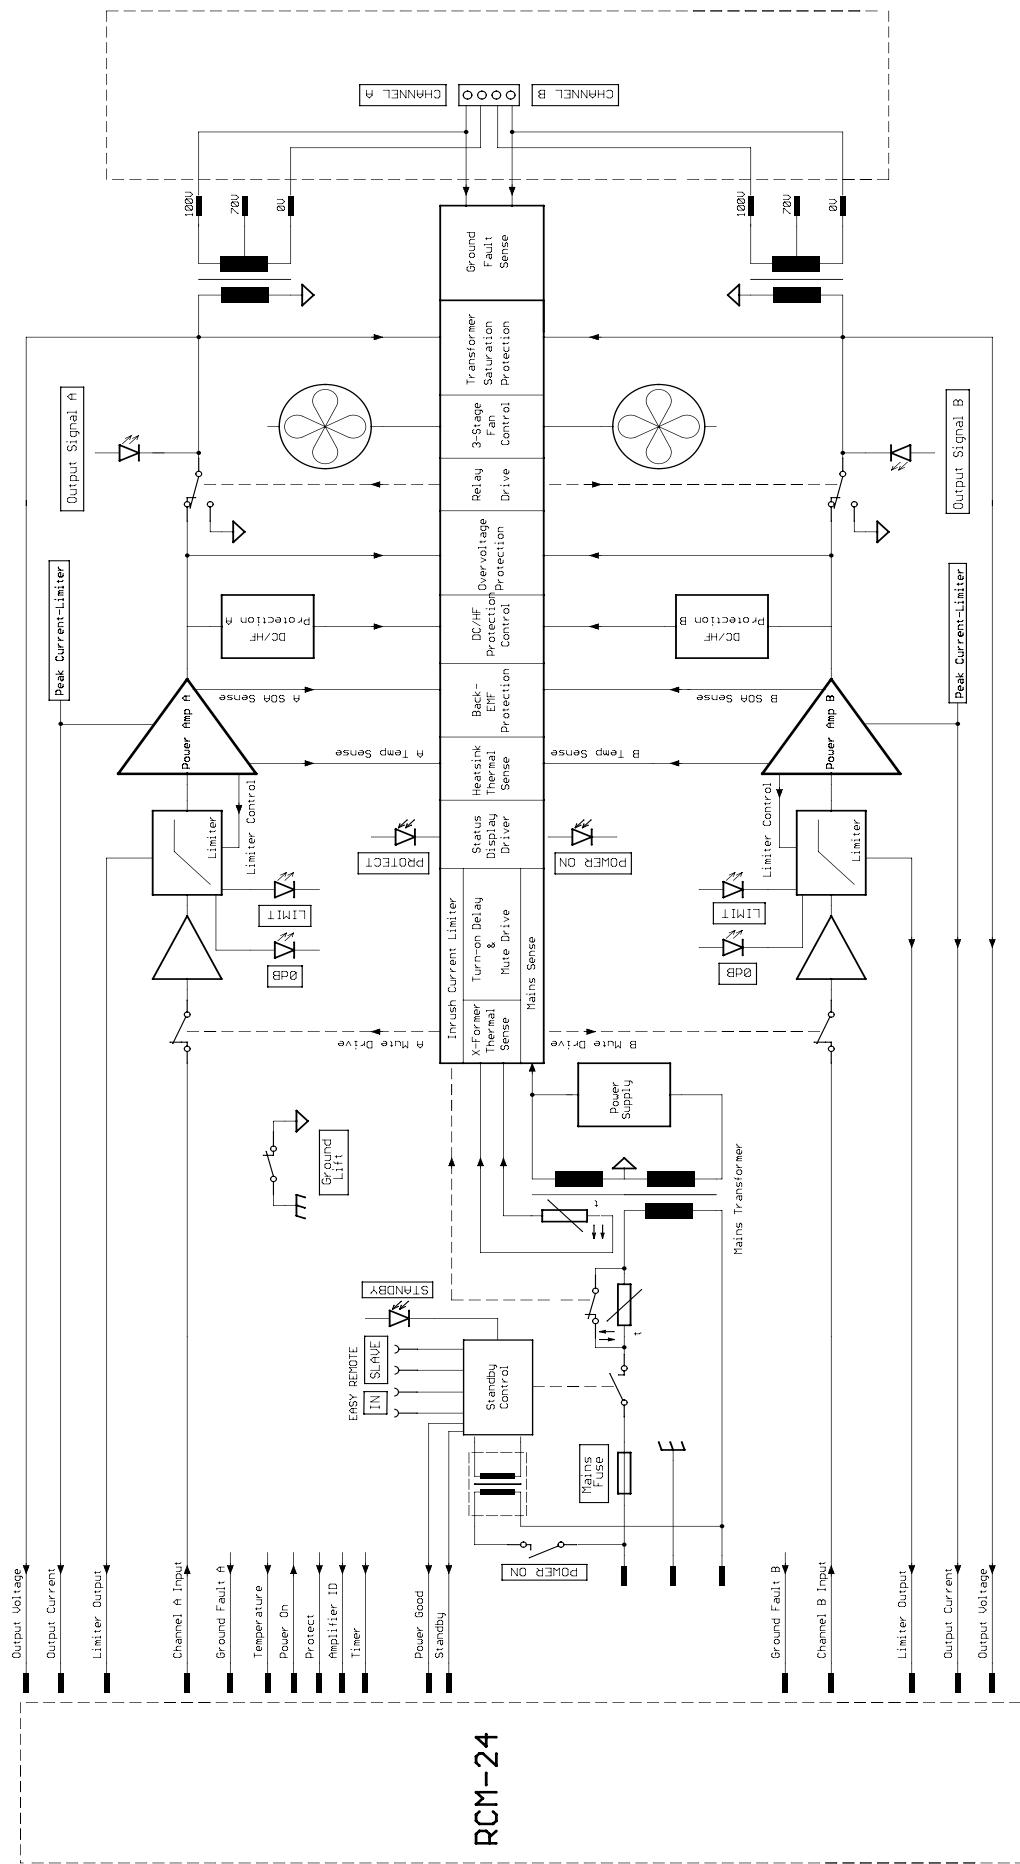

BLOCK DIAGRAM RCM-24

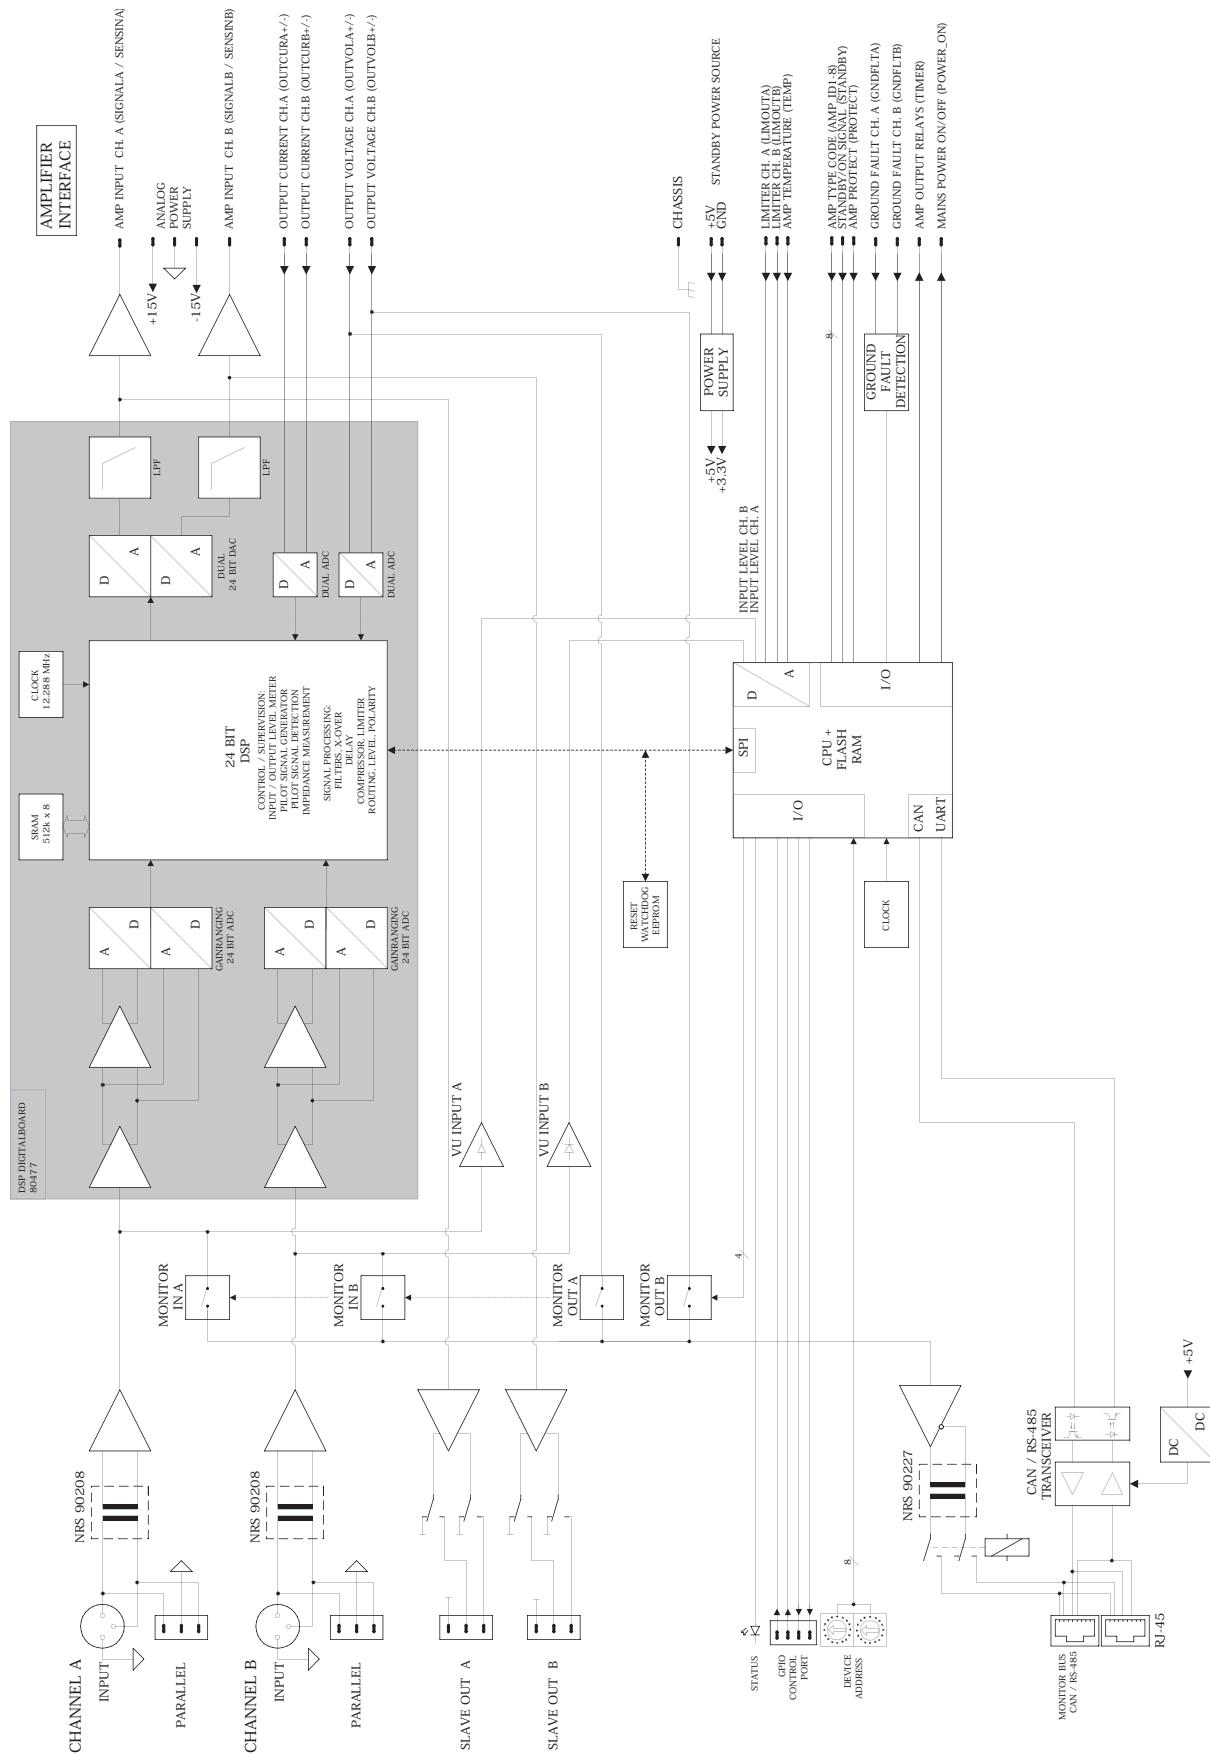

DIMENSIONS / ABMESSUNGEN

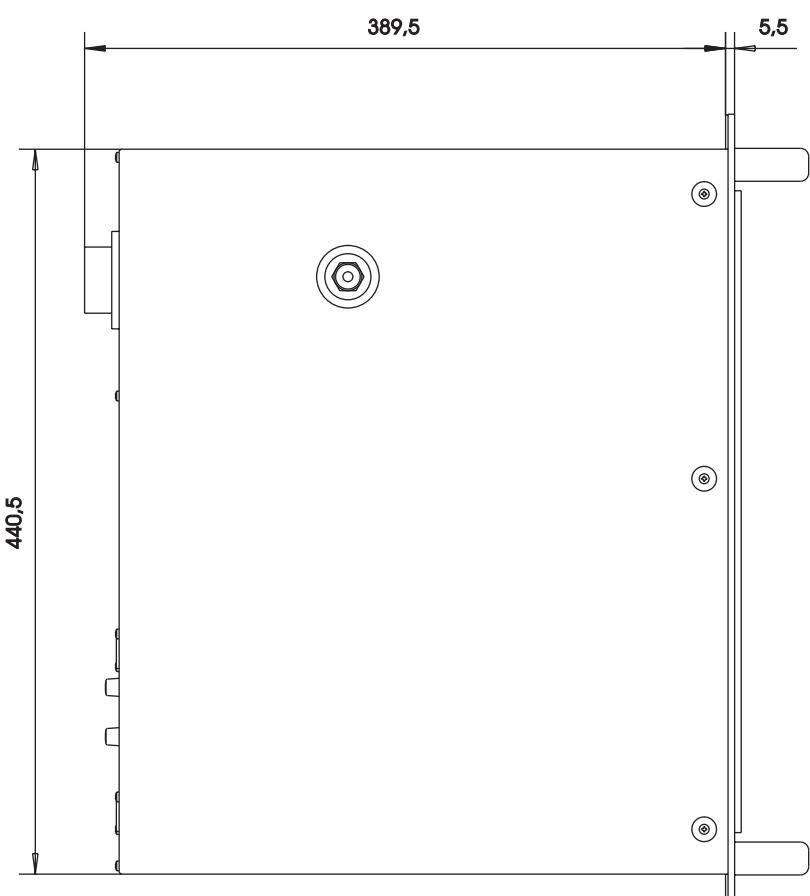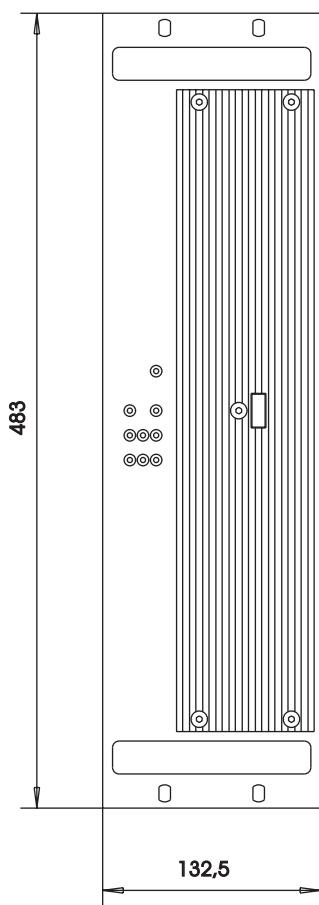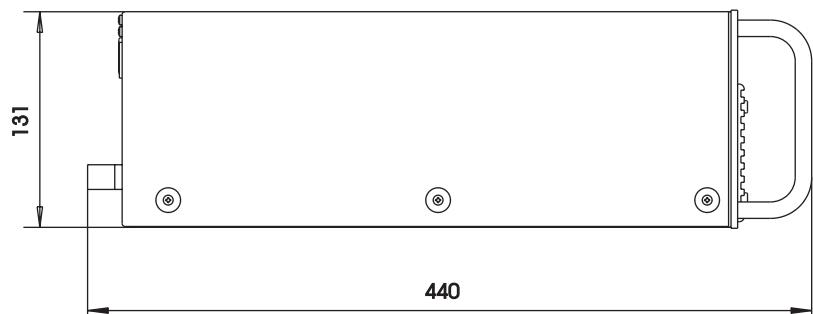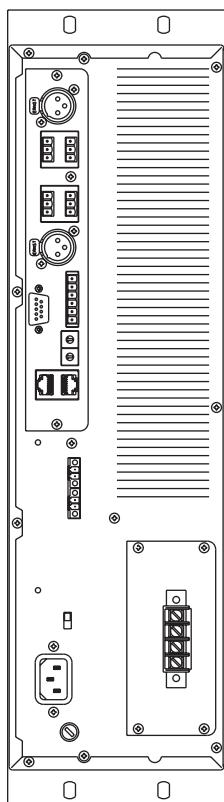

NOTES



USA Telex Communications Inc., 12000 Portland Ave. South, Burnsville, MN 55337, Phone: +1 952-884-4051, FAX: +1 952-884-004:

Germany EVI AUDIO, Hirschberger Ring 45, D 94315, Straubing, Germany Phone: 49 9421-706 0, FAX: 49 9421-706 265

Subject to change without prior notice.

Printed in Germany

10/08/2002 / 361 122

www.electro-voice.de