

PDS-4K Presentation Switcher

Quick Start Guide



Barco Technical Support:


USA: +1 (866) 992-2726

EMEA: +32 (56) 36 8019


CHINA: 40088 22726

www.barco.com/en/support

PDS-4K Presentation Switcher: Rear-Panel Setup

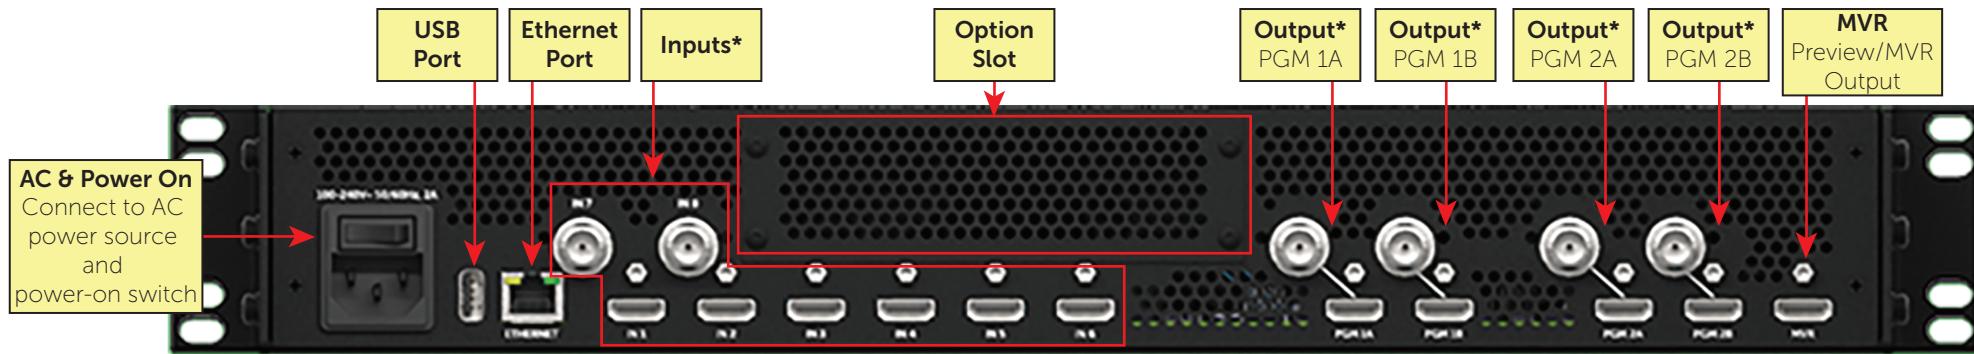

*Note: The PDS-4K has HDMI inputs and outputs. The PDS-4K SDI has HDMI and SDI inputs and outputs.

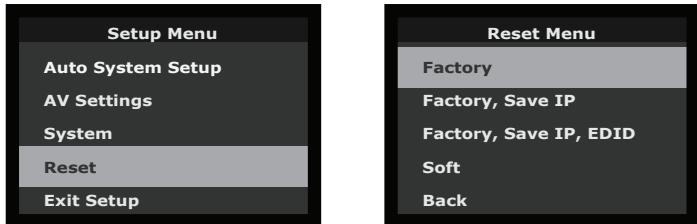Getting started	Factory Reset	Refer to the PDS-4K User's Guide
<ol style="list-style-type: none"> 1. Connect inputs and outputs. Plug primary displays in to PGM 1A and PGM 2A outputs. 2. Connect power to the PDS-4K. 3. Turn power on. 4. Perform a Factory reset 	<ol style="list-style-type: none"> 1. Press the Adjust knob to enter the Setup menu. 2. Scroll to and select Reset on the Setup Menu. 3. Scroll to and select Factory on the Reset menu. Factory deletes all user files and still-store images, restoring the default system settings. 4. Select Yes, when prompted, to confirm the Factory reset. 	<p>Refer to the <i>PDS-4K User's Guide</i> (R5912621) for detailed system specifications, descriptions, and operation instructions.</p> <p>Documentation for <i>PDS-4K</i> is available online at www.barco.com/td/R9009650.</p> <p>Documentation for <i>PDS-4K: SDI</i> is available online at www.barco.com/td/R9009651.</p> <p>Note: Any item contained in this document may change without notice.</p>

PDS-4K Presentation Switcher

Quick Start Guide



Barco Technical Support:


USA: +1 (866) 992-2726

EMEA: +32 (56) 36 8019

CHINA: 40088 22726

www.barco.com/en/support

PDS-4K Presentation Switcher: Front-Panel Setup

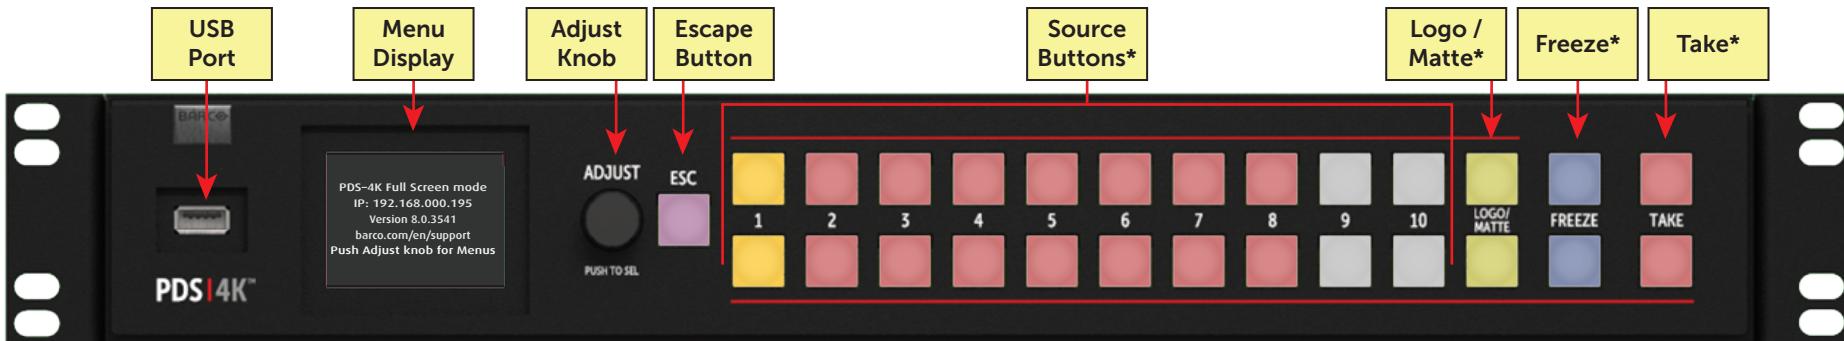

***Note:** The top row of Source, Logo / Matte, Freeze, and Take buttons control PGM output 1; the bottom-row buttons control PGM output 2.

Adjust knob, ESC button, and menu display

- Press the **adjust knob** to enter menus on the menu display and to make selections.
- Turn the **adjust knob** to scroll up or down through the menus on the menu display.
- Press the **ESC button** to deactivate a selection, to move back one level in a menu, or to exit a menu.

Front-panel button operation (Continued)

Logo / Matte

- Press the **Logo / Matte** button to select a logo or matte color for the assigned output.
- Press the **Take** button to transition the selected logo or matte to PGM.

Freeze

- Press the **Freeze** button to "freeze" the active source on PVW for the assigned output.
To thaw the source in PVW, select the source button again.
- Press the **Take** button to transition the frozen scaler from PVW to PGM for the assigned output.
To thaw a source on PGM, select the same button as the source on PGM, and press the **Take** button.

Note: When "Auto Take" is turned on, the **Freeze** button immediately "freezes" the source on PVW and transitions it to PGM. The **Take** button is disabled, but it still indicates that a transition is taking place by shifting from dim red to bright amber during the transition.

Front-panel button operation

Note: Top row controls PGM output 1, and bottom row controls PGM output 2.

Source

- Use the **source** buttons to select sources for the assigned output.
- Press the **Take** button to transition the selected source to PGM.

Front-panel button colors

- | | |
|--|--|
| ■ | Blinking green – Source, Cue, or Preset on Preview (PVW). |
| ■ | Bright amber – Source on Program (PGM). If the PGM source is also on PVW, the button will not flash green.) |
| ■ | Bright red – Loss of signal (on PGM). |
| ■ | Dim red – Loss of signal (not on PGM). |
| ■ | Dim yellow – Valid source. |
| ■ | Dim cyan – Cue. |
| ■ | Dim white – Preset. |
| ■ | Not lit – Unassigned. |
- Freeze buttons only**
- | | |
|--|--|
| ■ | Bright blue – A scaler on PVW or PGM is "frozen" on a frame of video. |
| ■ | Dim blue – PVW and PGM scalers are not "frozen." |