PLUG PULLER · ONE-SIDED PULLER

Full guide, one-sided puller

Everything about the one-sided puller: getting the file, measuring, every dial with a picture, printing, assembly, use and care, what to do when a print does not fit, every warning, and how the advanced dials work.

Contents

Which tool this is 4

Get the file 5

In your browser 5

On your computer 5

Working in the browser 6

Measure your plug and your hand 7

Plug length, Plug width at the prong end, Plug width at the cord end, Plug thickness at the prong end, Plug thickness at the cord end, Cord thickness, Outlet cover plate style, Finger width, Hand width, Strap width

Start with the plug size finder 7

The measuring form 9

Match a card instead of measuring 9

Try it on paper first 10

Step 1 - Your Plug 11

Plug preset, Plug length, Plug width at the prong end, Plug width at the cord end, Plug thickness at the prong end, Plug thickness at the cord end, Cord thickness, Outlet cover plate style, Show the see-through plug

Step 2 - Size 19

Hand size, Finger width, Hand width

Step 3 - Attachment 22

Attachment, Strap opening style, Strap width

Step 4 - Cord Hook 24

Hook side

The optional dials 25

Advanced - Zip Tie Placement 26

Zip-tie hole placement, Number of zip-tie rows, Zip-tie pair 1 position, Zip-tie pair 2 position, Zip-tie pair 3 position, Zip-tie hole distance from the pocket wall

Advanced - Velcro Placement 32

Strap slot placement, Strap slot position

Advanced - Render Quality 34

Render quality

Custom Mode 35

Reset Custom to the Medium reference, Auto-fit

Body Shape (Custom size only) 37

Body length, Body width at the widest point, Cord-end corner width, Body width at the plug end, Body width at the middle, Side corner position, Body thickness, Round the cord half only

Plug Pocket (Custom size only) 45

Pocket seat diameter, Pocket width, Pocket depth, Pocket reference drop, Pocket seat floor thickness, Plug recess floor thickness, Pocket side taper

Finger Holes (Custom size only) 50

Finger holes on or off, Finger hole diameter, Finger hole spacing, Finger hole position

T Hook (Custom size only) 54

Cord hook on or off, Hook slot width, Hook length, Hook crossbar width, Hook crossbar height, Hook slot inset, Hook stem side offset, Hook stem offset, Hook catch reach, Hook tip drop

Plug Wall Notch (Custom size only) 60

Wall notch on or off, Wall notch width, Wall notch depth, Wall notch corner rounding

Zip Tie Holes (Custom size only) 62
Zip-tie hole diameter, Zip-tie row spacing, Zip-tie column spacing, Zip-tie distance from the notch, Zip-tie countersink

Velcro / Wing Strap Holes (Custom size only) 65
Strap slot length, Strap slot width, Strap slot distance from the centerline, Strap slot position along the body, Strap slot lean

Edge Rounding (Custom size only) 70
Body side rounding, Top edge rounding, Bottom edge rounding, Strap slot corner rounding, Strap opening edge rounding, Finger hole rim rounding, Hook crossbar corner rounding, Hook slot corner rounding, Hook edge rounding

Render, export and print 76
- What to buy 76

Assemble 77

Use it 78
- Safety 78
- Care 78

If the print does not fit 79
- Red warning tags 81
- Notes that show in the preview only 82
- Printing problems 82

Advanced settings 83
- The plug side rail 83
- Zip-tie placement 83
- Strap slot placement 83
- Custom size 83
- Guard rails 84
- Saved settings 84
- The command line 84

Going deeper 85

Which tool this is


This guide is for the one-sided puller, src/Plug_Puller_Parametric.scad (as one file, Plug_Puller_One_Sided_SingleFile.scad): the tool for a plug with 2 prongs or a USB-C tip, a pocket around the plug's back and sides with two finger holes below it, pulled with one hand. A plug with 3 prongs, or any plug 24 mm thick or more, is the two-sided puller's job: that tool is a separate file, with its own guide.

The Customizer's four steps are your plug, your size, the attachment and the hook's side. This full guide covers getting the file, measuring your plug and your hand or matching a card, every dial with a picture, printing, assembly, use and care, what to do when a print does not fit, every warning, and how the advanced dials work.

> If red text appears beside the part in the preview, read it: it names the measurement to fix, and the part will not fit until it is gone.

How to read the pictures

- **Black:** the tool
- **Teal:** your plug
- **Red dashed:** the edges this dial moved
- ① the numbers match the key beside the picture

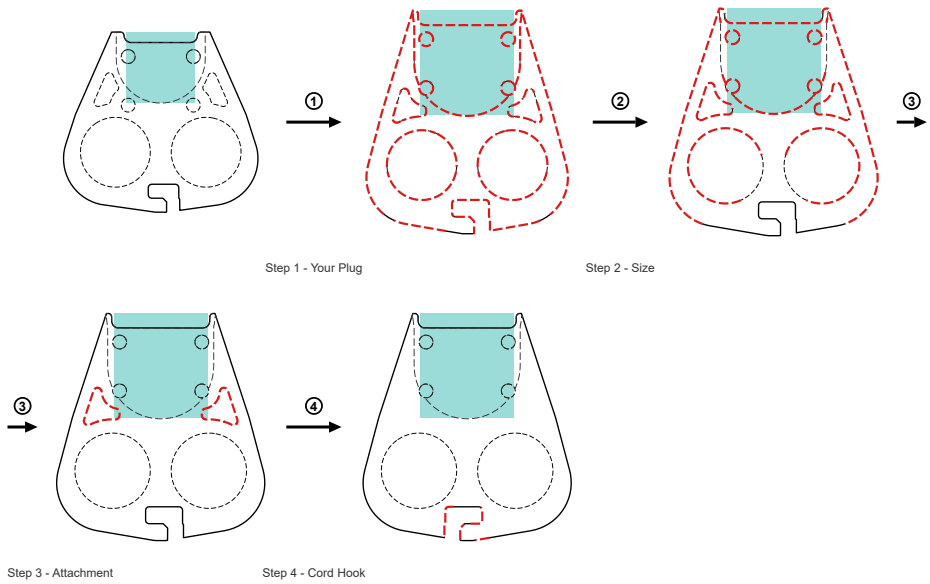

Five stages of the one-sided puller, left to right, the top row first, the plug end at the top; arrows numbered 1 to 4 show the steps, and red dashes mark the edges each step moved. Start, the defaults: the tool as the file opens, with a 25 mm wide plug in teal. Step 1 - Your Plug: plug length, plug width at both ends, plug thickness at both ends, cord thickness, outlet cover plate style; red on the body edge, finger holes, seat, wall notch, wing openings and zip-tie holes. Step 2 - Size: hand size, finger width, hand width; red on the body edge, finger holes, pocket, wall notch, wing openings and zip-tie holes. Step 3 - Attachment: attachment; the wing openings removed, drawn in red from the old outline. Step 4 - Cord Hook: hook side; red on the hook.

- Step 1: type your plug's numbers
- Step 2: pick your hand size
- Step 3: pick how it attaches
- Step 4: pick the hook's side

Get the file

The one-sided puller is the file `src/Plug_Puller_Parametric.scad`. There are two ways to open it and fill in its form: in your web browser with nothing to install, or in the free OpenSCAD program on your computer. Both show the same form, called the Customizer.

Two tools, two files. The one-sided puller is for a plug with 2 prongs or a USB-C tip. A plug with 3 prongs, or any plug 24 mm thick or more, needs the two-sided puller, which is a separate file, `src/Plug_Puller_Two_Sided.scad` (as one file, `dist/Plug_Puller_Two_Sided_SingleFile.scad`), with its own guide; in your browser it is the two-sided puller in the Assistive Forge. No setting inside one file makes the other tool, as a setting did in older versions: to get the other tool, open its file.

In your browser

The OpenSCAD Assistive Forge is a version of OpenSCAD that runs in your browser, on a computer or a phone, built for keyboard and screen reader use. Nothing is uploaded: your numbers stay on your device.

1. Open the one-sided puller in the Assistive Forge. On a first visit Forge asks which interface you want: choose **Assistive Forge**, then **Download & Continue**, and it downloads its engine once.
2. Forge offers to keep a copy of the project in your browser. Choose **Save My Copy**: the tool is then listed on Forge's main page whenever you come back, no link needed.
3. The form shows the four steps' dials first. The rest sit behind one button, **Show all parameters**.

If the link cannot load, Forge says why and offers **Try again**. You can also download the whole tool as one file, `dist/Plug_Puller_One_Sided_SingleFile.scad`, and open it from Forge's main page, under Open or start a project.

On your computer

OpenSCAD is the free program that turns your numbers into a printable file. You use one panel of it and never touch the code.

1. Download OpenSCAD from https://openscad.org/downloads.html: the **Development Snapshot** for your system. This project is tested with the snapshot of 2026-01-03; any recent snapshot works. The regular release works too, only slower.
2. Get the project: on its GitHub page press the green **Code** button, then **Download ZIP**, and unzip it anywhere. Or download only `dist/Plug_Puller_One_Sided_SingleFile.scad`, the whole tool in one file.
3. Open `src/Plug_Puller_Parametric.scad` (or the single file) in OpenSCAD: double-click it, or use **File ▸ Open**. A wall of code appears in an editor pane. Ignore it; you will not touch it.
4. Show the Customizer, the form you type into: in the **View** menu, make sure **Hide Customizer** is unchecked. In older versions it is **Window ▸ Customizer**.

The form's sections read top to bottom in the order you decide things: **Step 1 - Your Plug**, **Step 2 - Size**, **Step 3 - Attachment**, then **Step 4 - Cord Hook**. Everything below Step 4 is optional.

Working in the browser

Forge and the desktop program show the same form and make the same tool. What differs:

- Forge draws the tool with the see-through plug in its preview and any red warning text beside it. It does not draw the green and orange notes of the desktop program's preview.
- A render takes longer in the browser than on the desktop, and longest on a phone. Forge says **Preview ready** under the picture when it is done.
- On a phone the screen is tight. The parameter search finds any dial by its name, and searching also brings back the dials behind **Show all parameters**.
- Forge can be installed as an app that works offline: use your browser's install button at the right end of the address bar.
- To send your numbers to someone, or to keep them, use Forge's **Copy Link**: the link carries the values you changed, and opening it puts them back.

Problem	What to do
"The shared project could not be opened"	Forge names the reason. Press **Try again**; if it keeps failing, download the single file and open it from Forge's main page.
A dial you want is not on the form	Press **Show all parameters**. The four steps' dials are shown first; the rest sit behind that button.
Red text beside the tool in the preview	A measurement cannot work, and the text names it. Fix it before you export: the red text is part of the model.

Measure your plug and your hand

Everything here is in mm: a US plug is about 25 mm wide, so a 1 on your paper means you measured in inches. You need a caliper or a ruler with mm marks, the plug in its outlet, and your own hand only if you pick Measure my hand. Print the measuring form at 100 % and fill it in as you go: the sections below are the form's rows, in the same order, and the card names (R1, C1, F1 / F2) are the cards of the printed measuring stencil, described under Match a card instead of measuring.

Start with the plug size finder

Count the plug's prongs first. A plug with 2 prongs, or a USB-C tip, is the one-sided puller's; a plug with 3 prongs is the two-sided puller's. The two tools are separate files, so a plug of the other kind needs the other tool's file and guide. Then print the plug size finder page at 100 % (actual size), check its 50 mm square with a ruler, and lay the plug flat on the outlines of its group, prongs up. When an outline matches, pick that preset in Step 1 and skip the plug rows below; the hand rows still apply. Between two outlines, or none close? Measure every row.

> The page is printed at true size on page 86, at the end of this guide.

The page shows five plugs at true size, each lying on its wide side with its prongs up and every prong face on one dashed line, the cord drawn below each at its true width. The left group, under "2 prongs or a USB-C tip: the ONE-SIDED puller", holds the one-sided puller's presets; the right group, under "3 prongs: the TWO-SIDED puller", the two-sided puller's. Each outline is labelled with the preset to pick. A 50 by 50 mm calibration square sits at the bottom left, the five steps below beside it.

Preset to pick	Tool file	Prongs	Length (mm)	Width at the prong end (mm)	Width at the cord end (mm)	Cord (mm)
USB-C laptop tip	one-sided puller	USB-C metal tip	17	10.25	10.25	6.1 (round)
Flat 2-prong lamp plug - NEMA 1-15	one-sided puller	2	32.5	20	11.1	7 (flat, 3.6 thick)
Wide 2-prong appliance plug - NEMA 1-15	one-sided puller	2	38	34	34	5 (round)
Standard 3-prong plug - NEMA 5-15	two-sided puller	3	46.1	24.66	13.6	9.25 (round)
Heavy-duty extension cord - NEMA 5-15	two-sided puller	3	51	26.56	24.5	8.25 (round)

Form row	What to measure	How	Typical	Stencil card
2	**Plug length** measure_plug_length	With the plug in the outlet, ruler from the wall plate face to the plug's back face. On a laptop or charger plug, measure from the device's edge.	20 to 50 mm; example 38 mm	card R1

Form row	What to measure	How	Typical	Stencil card
3	**Plug width at the prong end** measure_plug_width_prong_end	Caliper straight across the plastic body just behind the prongs, the wide way, parallel to the wall. Measure the body, not the metal prongs; if the head flares, take the widest part of that first stretch.	20 to 38 mm; example 34 mm	card R1
4	**Plug width at the cord end** measure_plug_width_cord_end	The same wide direction, but where the cord leaves the plug body. Skip any soft rubber strain relief and measure the last part of the hard body you would grip.	10 to 35 mm; example 13 mm	card R1
5	**Plug thickness at the prong end** measure_plug_thickness_prong_end	Caliper across the plug body's thin direction, usually top to bottom on a flat plug, just behind the prongs. A plug 24 mm thick or more needs the two-sided puller, so measure carefully.	12 to 30 mm; example 16 mm	card R1
6	**Plug thickness at the cord end** measure_plug_thickness_cord_end	The same thin direction, where the cord leaves the plug body, skipping the soft strain relief. On a straight-sided plug, such as a wide appliance plug, it is the same as at the prong end.	8 to 30 mm; example 9 mm	card R1
7	**Cord thickness** measure_cord_thickness	Caliper across the cord just behind the plug, on its thin side: flat cord the narrow way, round cord the diameter. With the stencil, the smallest C1 slot that slips over the cord is this number.	3 to 7 mm; example 5 mm	card C1
8	**Outlet cover plate style** measure_wall_plate_style	Look at the outlet cover plate: two small oval openings is Standard flat plate; one big rectangle per outlet is Rocker / Decora; a bigger, thicker plate is Oversized / Jumbo; no plate or a flush outlet is No plate / flush.	Choices: Standard flat plate, Rocker / Decora, Oversized / Jumbo, No plate / flush	none
11	**Finger width** measure_finger_width	Caliper across the widest knuckle of your middle finger, the finger that goes into the pull hole. With the stencil, find the smallest F1 or F2 hole your finger passes through comfortably and subtract 5 from its number. No caliper? Take a ring that fits that finger snugly, measure the ring's inner diameter in mm and add 1.5 mm.	16 to 24 mm; example 22 mm	card F1 / F2
12	**Hand width** measure_hand_width	Caliper or ruler straight across the four knuckles of your flat hand, fingers together, no thumb. Measure at the widest point.	70 to 100 mm; example 88 mm	card R1
15	**Strap width** strap_width	Read the width on the strap's packaging. ONE-WRAP comes in 10, 13, 16, 20 and 25 mm.	10 to 25 mm; example 15 mm	none

> Sanity check: each plug width is a two-digit number, roughly 12 to 45, and the prong-end width is usually the bigger one; the finger width is roughly 14 to 32. A number like 1.3 is inches: measure again with the mm side.

When you measure for someone else, a relative or a client, measure their hand for the finger and hand rows and their outlet and plug for the plug rows. Doubtful between two values? Round up: a slightly roomy fit works, a tight one does not.

The measuring form

> The form is printed at true size on page 87, at the end of this guide; the paper stencil sheet follows it. Print the form at 100 % (actual size, never fit to page) and check its 50 mm bar with a ruler before you trust it. Fill in the blanks top to bottom as you measure, then type the numbers into the Customizer in the same order.

Match a card instead of measuring

The measuring stencil is a set of thin printed cards. Each has a two-letter name raised on its face, so you can find it by touch. Hold your plug in the plug cards: if it fills one card's openings, snug with no big gaps, that card names the preset to pick in Step 1, and the tool whose file holds it, and you type no numbers at all.

Card	What it is	What it answers
P1	The flat 2-prong lamp plug (NEMA 1-15)	the one-sided puller's preset `Flat 2-prong lamp plug - NEMA 1-15`
P2	The standard 3-prong plug (NEMA 5-15)	the two-sided puller's preset `Standard 3-prong plug - NEMA 5-15`
P3	The heavy-duty extension cord plug (NEMA 5-15)	the two-sided puller's preset `Heavy-duty extension cord - NEMA 5-15`
P4	The wide 2-prong appliance plug (NEMA 1-15)	the one-sided puller's preset `Wide 2-prong appliance plug - NEMA 1-15`
R1	A ruler: raised mm ticks, numbers every 10 mm, and a notch every 10 mm you can count by touch	the plug's length, widths and thicknesses
C1	A cord gauge: open slots 3 to 9 mm wide along one edge, slid onto the cord from the side	the cord thickness: the smallest slot that slips over the cord
F1, F2	Finger holes 15 to 25 mm across (F1) and 26 to 32 mm (F2)	your finger width: the smallest hole your middle finger passes through comfortably, minus 5

Each P card has three openings: W for the plug's width, T for its thickness, and an open slot that slides onto the cord. The USB-C laptop tip has no card: its metal tip names it. If no card fits, your plug is between presets: measure it instead. The measured tool fits better than any preset.

Printing the cards. Print `stl/Measuring-Stencil/Visual/Measuring-Stencil_Visual_All-Cards.stl`: 1.2 mm thick cards, no supports, any rigid filament, packed onto sheets for a 200 by 200 mm bed. The tactile version, `stl/Measuring-Stencil/Tactile/`, prints every label as a raised character at ADA size and adds a Grade 2 braille title flap to every card. Or print one card at a time from `stl/Measuring-Stencil/`. For a smaller bed, open `Measuring_Stencil.scad` in OpenSCAD, set `bed_width` and `bed_depth` to your bed, and export `part_index` 1, then 2, and so on, one sheet at a time. `part_index` 0 previews every sheet at once; do not print that one.

Folding the tactile flaps. The tactile version is also `label_mode` set to Tactile in the file. Each flap prints leaning back, held by thin fins. Snap the fins off, then fold the flap away from the card until it lies flat, so the braille lands face up beyond the card's edge. Fold once, gently; a PETG or PP hinge folds more reliably than PLA.

No 3D printer yet? The last pages of the printed quick start and full guide are the paper versions at true size: the plug size finder in place of the P cards (every preset's outline, for both tools) and the stencil sheet, with a 100 mm ruler and the finger circles. Print them at 100 % (actual size, never fit to page) and check the 50 by 50 mm square with a ruler before you trust them. On their own they are `plug-size-finder.svg` and `stencil-sheet.svg`.

Try it on paper first

Every preset at every size has a printable sheet with the tool's exact outline at true size, its dimensions in mm, a 50 by 50 mm square to check the print scale, and the Customizer settings that make it. Print one at 100 % (actual size, never fit to page) and measure the square with a ruler: it must be exactly 50 by 50 mm, or the print was scaled. Cut out the outline along the solid line and poke through the two finger circles. Hold it against your plug on the wall: the plug should fit inside the dashed pocket outline, and the notch at the top edge should straddle the outlet cover. Try the finger holes; if they feel wrong, try the next size's sheet.

Plug preset	Small	Medium	Large
USB-C laptop tip	sheet	sheet	sheet
Flat 2-prong lamp plug (NEMA 1-15)	sheet	sheet	sheet
Wide 2-prong appliance plug (NEMA 1-15)	sheet	sheet	sheet

Every sheet, for both tools, is also in one printable PDF with an index: `docs/Plug_Puller_Outline_Sheets.pdf`. The sheets cover the presets only; a plug or a hand between sizes is better served by measuring.


Step 1 - Your Plug

Pick a plug preset, or leave it on Measure my plug and type your plug's numbers.

Plug preset

Customizer name: **plug_preset**

Fills in all six plug numbers from a measured reference plug (and, for the USB-C tip, the No plate / flush wall notch), so the pocket, the wall notch, the cord hook and the zip-tie and wing positions all take that plug's shape at once.

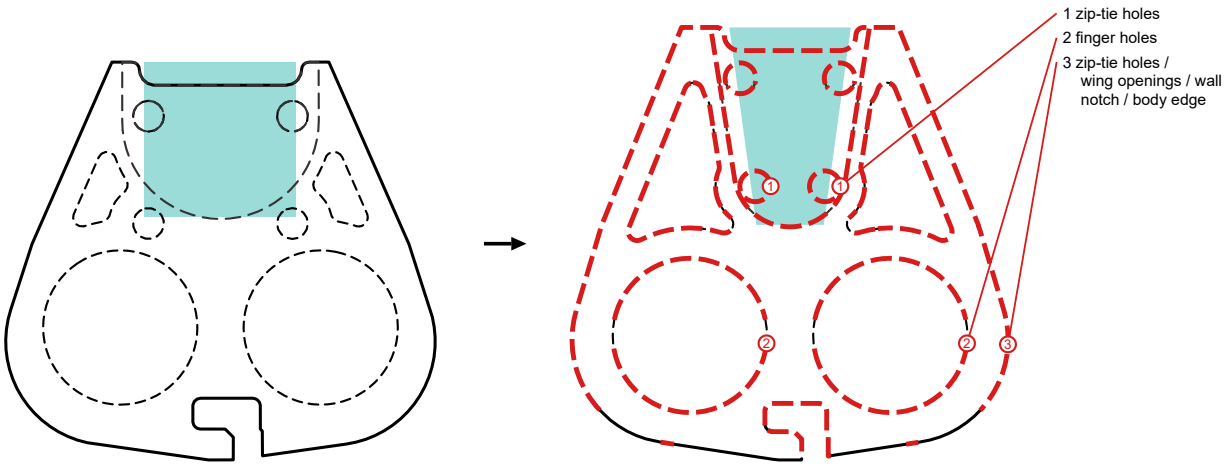

Measure my plug
→ Flat 2-prong lamp plug - NEMA 1-15


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: plug preset set to Flat 2-prong lamp plug - NEMA 1-15. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket. 2, the finger holes: the two large holes in the lower half. 3, the zip-tie holes, the wing openings, the wall notch and the body edge.

Default	Measure my plug
Choices	Measure my plug, USB-C laptop tip, Flat 2-prong lamp plug - NEMA 1-15, Wide 2-prong appliance plug - NEMA 1-15
Moves	body edge, finger holes, wall notch, wing openings, zip-tie holes

Plug length

Customizer name: **measure_plug_length**

Runs the pocket farther toward the finger holes and stretches the whole body to keep the finger holes and zip-tie rows clear of it.

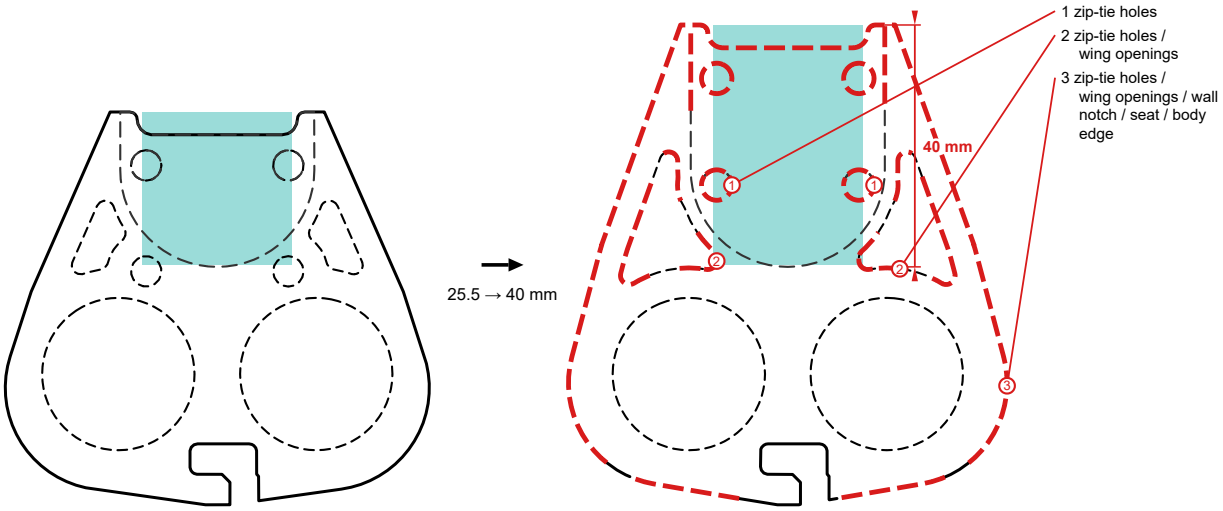


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: plug length at 40 mm. The red line marks the pocket's length and reads 40 mm, the number you type. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket. 2, the zip-tie holes and the wing openings. 3, the zip-tie holes, the wing openings, the wall notch, the seat and the body edge.

Default	25.5 mm
Range	12 to 85 mm, in steps of 0.5 mm
Moves	body edge, seat, wall notch, wing openings, zip-tie holes

Plug width at the prong end

Customizer name: **measure_plug_width_prong_end**

Widens or narrows the pocket, its seat and the wall notch at the plug end, and moves the zip-tie holes and wing openings with them.

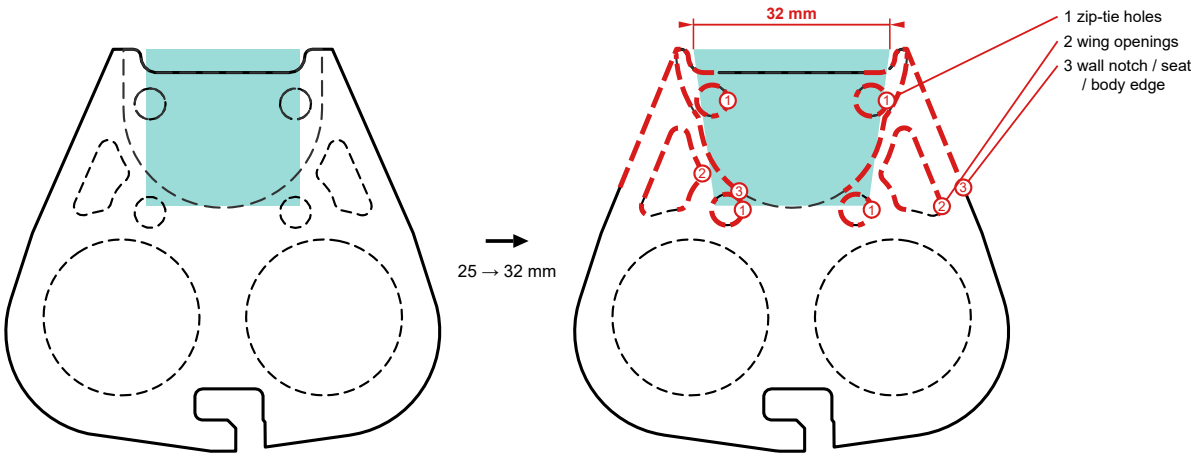


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: plug width at the prong end at 32 mm. The red line marks the plug's width at the prong end and reads 32 mm, the number you type. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket. 2, the wing openings: the two openings beside the pocket. 3, the wall notch, the seat and the body edge: the notch in the top edge; the round recess at the plug end; the outer outline.

Default	25 mm
Range	8 to 38 mm, in steps of 0.5 mm
Moves	body edge, seat, wall notch, wing openings, zip-tie holes

Plug width at the cord end

Customizer name: **measure_plug_width_cord_end**

Tilts the pocket's side walls to match the plug's taper, and the zip-tie holes and wing openings lean in with them.

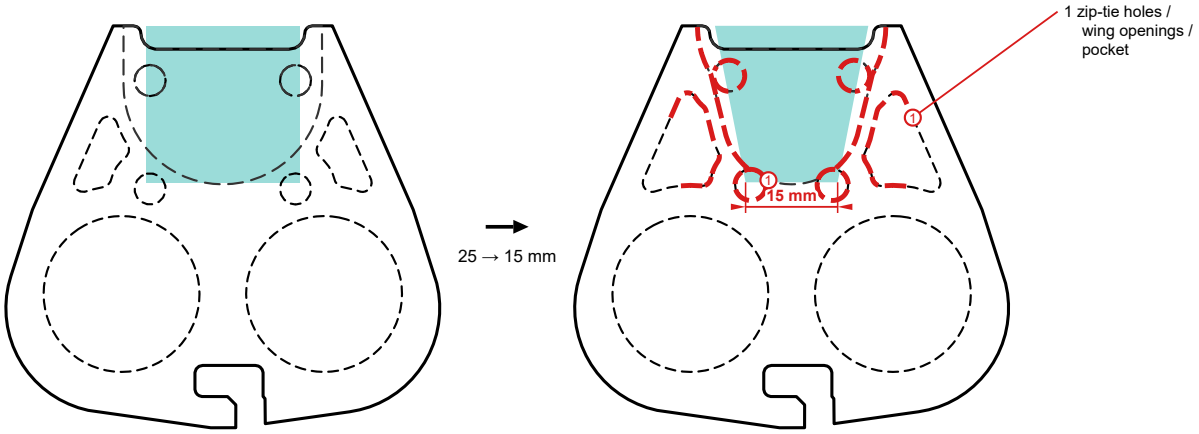


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: plug width at the cord end at 15 mm. The red line marks the plug's width at the cord end and reads 15 mm, the number you type. Marked in red: 1, the zip-tie holes, the wing openings and the pocket: the four small holes beside the pocket; the two openings beside the pocket; the plug recess on the centerline.

Default	25 mm
Range	8 to 38 mm, in steps of 0.5 mm
Moves	pocket, wing openings, zip-tie holes

Plug thickness at the prong end

Customizer name: **measure_plug_thickness_prong_end**

Deepens or shallows the two pocket floors, the round seat and the plug recess, to suit the fatter of the two thickness numbers.

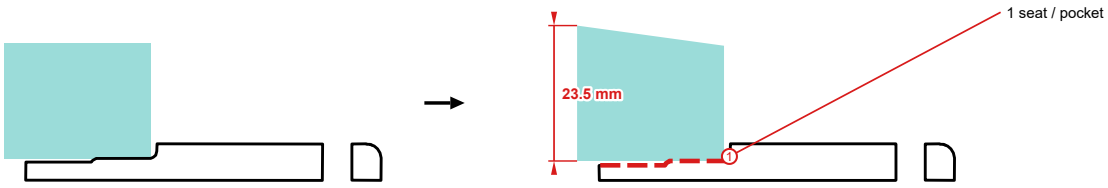

20 → 23.5 mm
section at x = 0 mm

Two vertical slices of the one-sided puller at x = 0 mm, before left and after right, the top face up. Left: the defaults, the plug in teal in the cut. Right: plug thickness at the prong end at 23.5 mm. The red line marks the plug's thickness at the prong end and reads 23.5 mm, the number you type. Marked in red: 1, the seat and the pocket: the round recess at the plug end; the plug recess on the centerline.


Default	20 mm
Range	4 to 40 mm, in steps of 0.5 mm
Moves	pocket, seat

> **Note:** The fatter of the two thickness numbers sets the floors, so lowering one alone changes nothing; 24 mm or more sends you to the two-sided puller.

Plug thickness at the cord end

Customizer name: **measure_plug_thickness_cord_end**

Deepens or shallows the two pocket floors, the round seat and the plug recess, when this end is the fatter end of the plug.

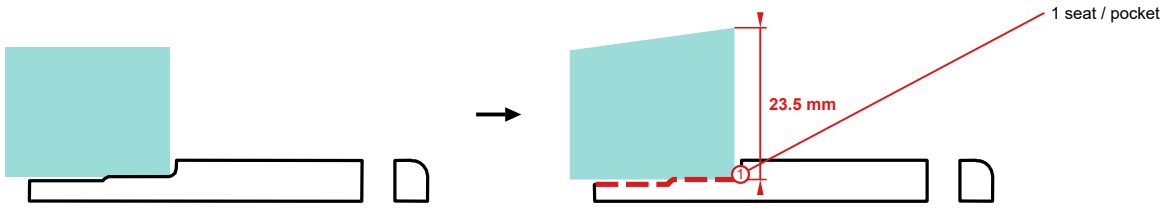

20 → 23.5 mm
section at x = 0 mm

Two vertical slices of the one-sided puller at x = 0 mm, before left and after right, the top face up. Left: the defaults, the plug in teal in the cut. Right: plug thickness at the cord end at 23.5 mm. The red line marks the plug's thickness at the cord end and reads 23.5 mm, the number you type. Marked in red: 1, the seat and the pocket: the round recess at the plug end; the plug recess on the centerline.


Default	20 mm
Range	4 to 40 mm, in steps of 0.5 mm
Moves	pocket, seat

Note: The fatter of the two thickness numbers sets the floors, so lowering one alone changes nothing; 24 mm or more sends you to the two-sided puller.

Cord thickness

Customizer name: **measure_cord_thickness**

Widens the cord hook's slot and crossbar to fit the cord, and moves the finger holes and the whole body up to make room.

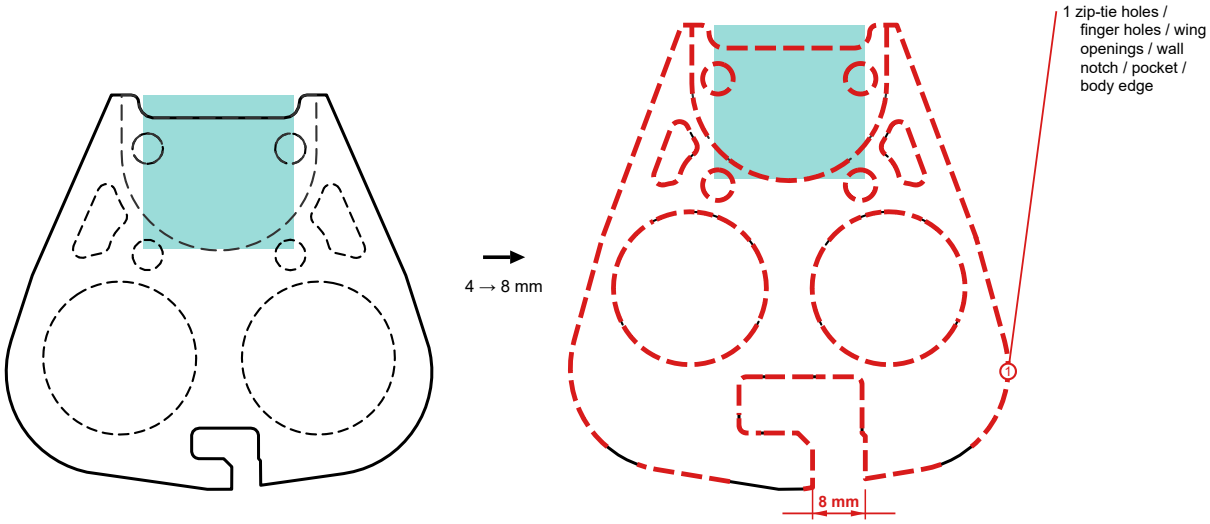


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: cord thickness at 8 mm. The red line marks the cord hook slot and reads 8 mm, the number you type; the slot is drawn 8.8 mm wide, so the cord slips in. Marked in red: 1, the zip-tie holes, the finger holes, the wing openings, the wall notch, the pocket and the body edge.

Default	4 mm
Range	1.5 to 9 mm, in steps of 0.5 mm
Moves	body edge, finger holes, pocket, wall notch, wing openings, zip-tie holes

Outlet cover plate style

Customizer name: **measure_wall_plate_style**

Cuts the wall notch at the plug end deeper or shallower to suit the cover plate, and the zip-tie rows shift down with it.

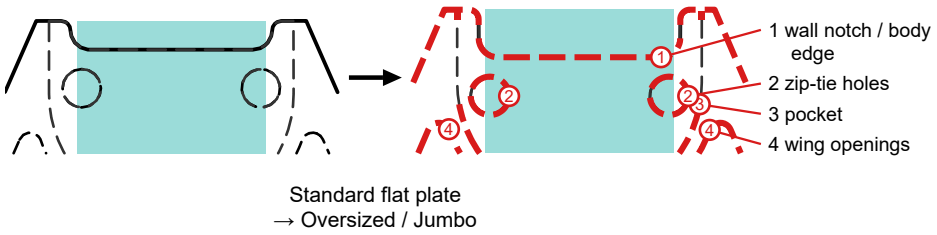

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: outlet cover plate style set to Oversized / Jumbo. Marked in red: 1, the wall notch and the body edge: the notch in the top edge; the outer outline. 2, the zip-tie holes: the four small holes beside the pocket. 3, the pocket: the plug recess on the centerline. 4, the wing openings: the two openings beside the pocket.

Default	Standard flat plate
Choices	Standard flat plate, Rocker / Decora, Oversized / Jumbo, No plate / flush
Moves	body edge, pocket, wall notch, wing openings, zip-tie holes

Show the see-through plug

Customizer name: **show_plug_preview**

Shows or hides the see-through plug in the preview and changes nothing in the printed tool.

> **No picture.** Changes no shape: the see-through plug is a preview aid and is never exported.

Default	On
Choices	On or off (a check box)


Step 2 - Size

Pick your hand size, or pick Measure my hand and type your hand's numbers.

Hand size

Customizer name: **size**

Scales the whole body, both finger holes, the wing openings and the zip-tie grid to the chosen hand size.

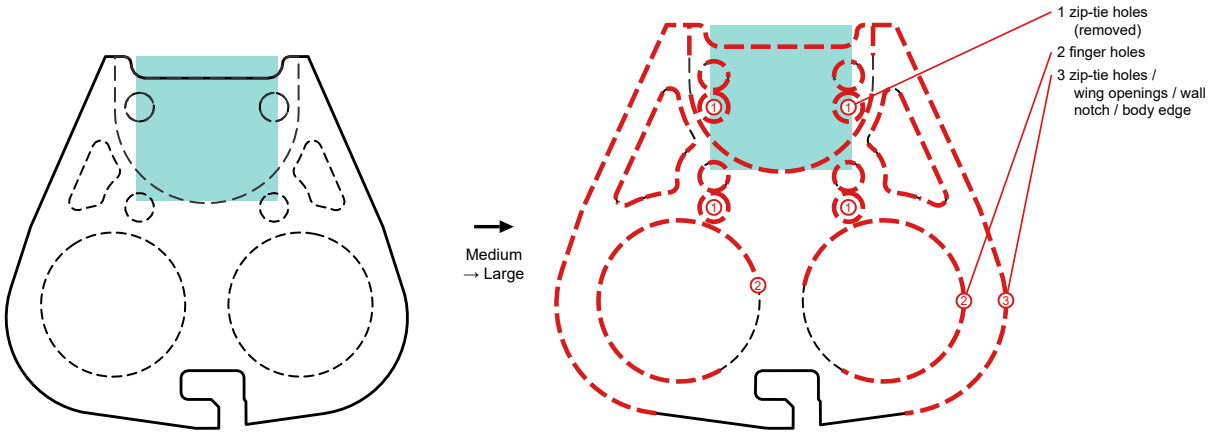


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: hand size set to Large. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket, removed. 2, the finger holes: the two large holes in the lower half. 3, the zip-tie holes, the wing openings, the wall notch and the body edge.

Default	Medium
Choices	Small, Medium, Large, Measure my hand, Custom
Moves	body edge, finger holes, wall notch, wing openings, zip-tie holes

Finger width

Customizer name: **measure_finger_width**

Widens both finger holes, spaces them farther apart and pushes them and the body up to keep the walls printable.

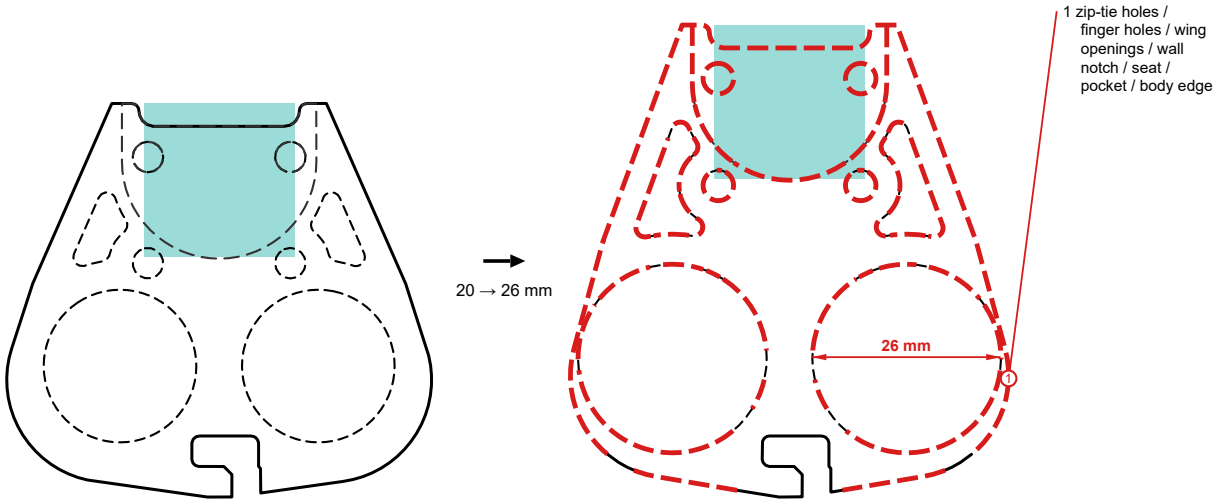

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Measure my hand, a 25 mm wide plug in teal. Right: finger width at 26 mm. The red line marks a finger hole and reads 26 mm, the number you type; the hole is drawn 31.4 mm across, wider than the finger. Marked in red: 1, the zip-tie holes, the finger holes, the wing openings, the wall notch, the seat, the pocket and the body edge.


Default	20 mm
Range	14 to 32 mm, in steps of 0.5 mm
Moves	body edge, finger holes, pocket, seat, wall notch, wing openings, zip-tie holes

> **Note:** Only acts when size is Measure my hand.

Hand width

Customizer name: **measure_hand_width**

Widens the whole body outline and thickens the slab in step with the hand.

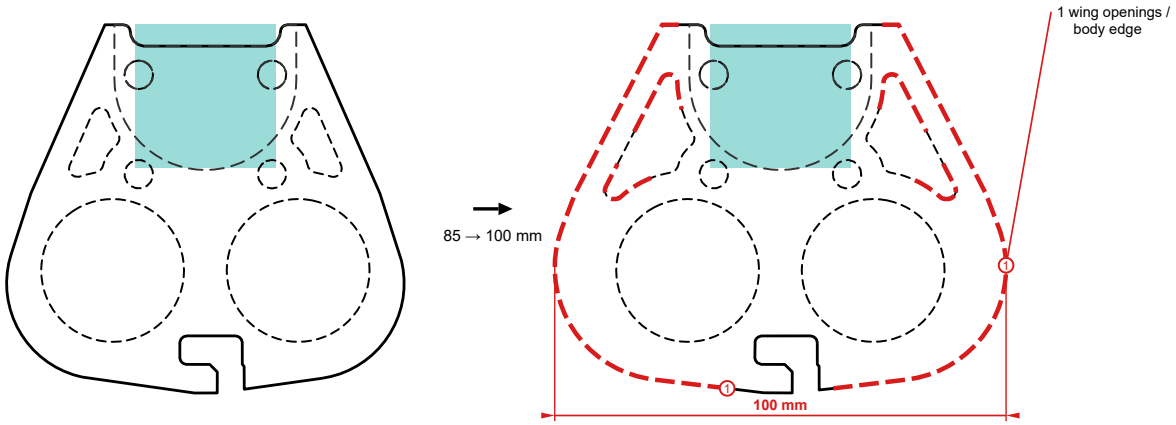

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Measure my hand, a 25 mm wide plug in teal. Right: hand width at 100 mm. The red line marks the body at its widest and reads 100 mm, the number you type; the body is drawn 80.3 mm wide, narrower than the hand, as its width is worked out from the hand width. Marked in red: 1, the wing openings and the body edge: the two openings beside the pocket; the outer outline.

Default	85 mm
Range	60 to 110 mm, in steps of 1 mm
Moves	body edge, wing openings

> **Note:** Only acts when size is Measure my hand.


Step 3 - Attachment

Pick how the tool attaches.

Attachment

Customizer name: **attachment**

Adds or removes the zip-tie holes and the wing or slot openings for the strap.

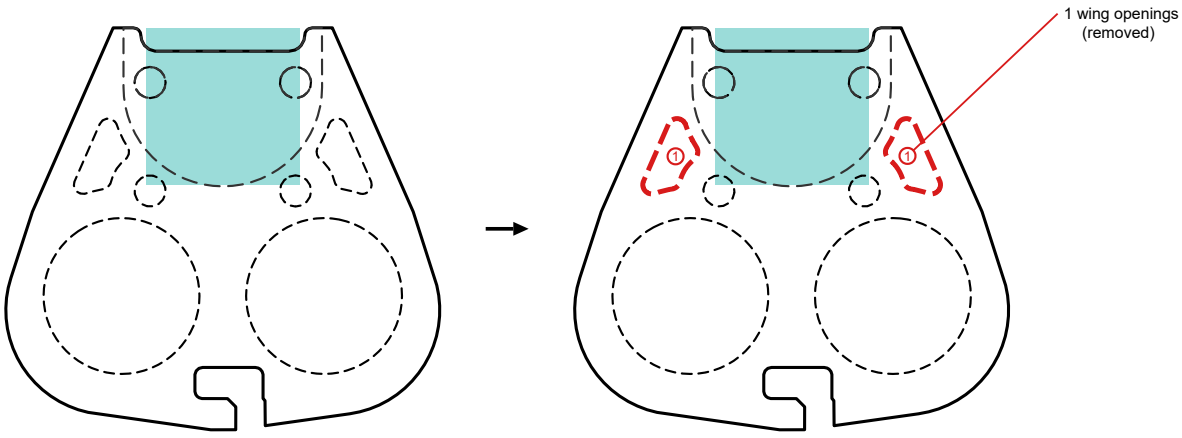

Zip ties + Velcro
→ Zip ties


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: attachment set to Zip ties. Marked in red: 1, the wing openings: the two openings beside the pocket, removed. The body edge, the pocket, the seat and the wall notch stay where they were.

Default	Zip ties + Velcro
Choices	Zip ties, Velcro strap, Zip ties + Velcro, None
Moves	wing openings

Strap opening style

Customizer name: **velcro_style**

Swaps the curved wing openings for a pair of plain rectangular slots that lean along the body's sides.

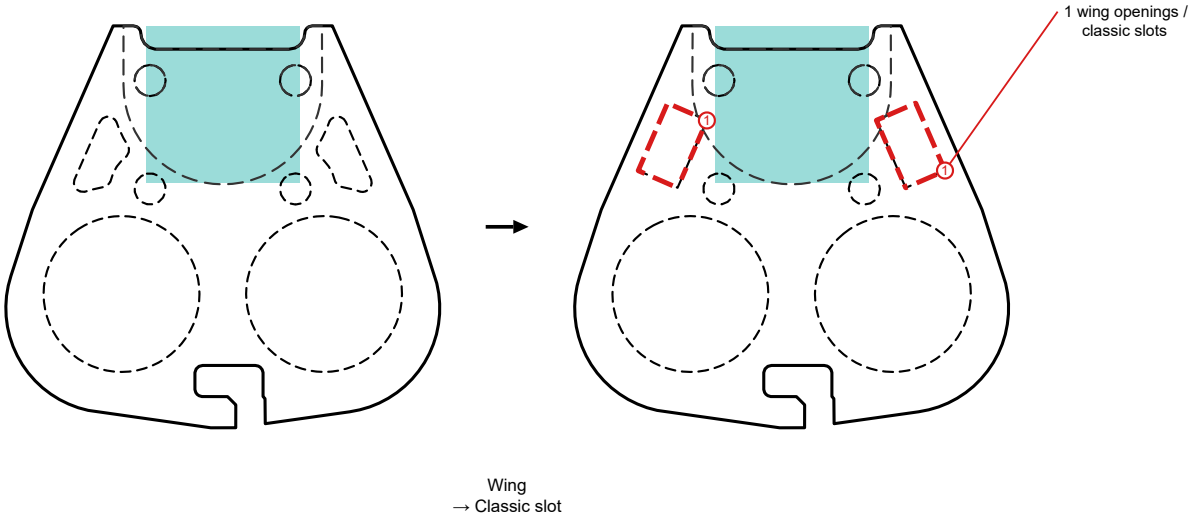

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: strap opening style set to Classic slot. Marked in red: 1, the wing openings and the classic slots: the two openings beside the pocket; the two slots beside the pocket.

Default	Wing
Choices	Wing, Classic slot
Moves	classic slots, wing openings
Red warnings	WING OPENING SMALLER THAN STRAP WIDTH

Strap width

Customizer name: **strap_width**

Sets the strap width the wing opening is checked against and changes no shape.

> **No picture.** Changes no shape: it only sets the width the W-14 check compares the wing opening against.

Default	15 mm
Range	10 to 25 mm, in steps of 1 mm
Red warnings	WING OPENING SMALLER THAN STRAP WIDTH · WING WEB COLLAPSED - NO ROOM FOR STRAP


Step 4 - Cord Hook

Pick the hook's side.

Hook side

Customizer name: **hook_hand**

Mirrors the cord hook at the cord end so its catch faces the other side, and nothing else moves.

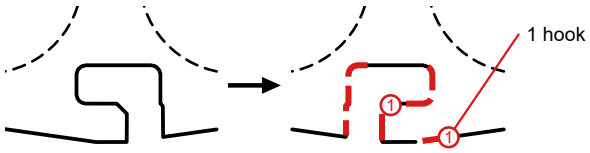

Right
→ Left

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: hook side set to Left. Marked in red: 1, the hook: the cord hook slot in the bottom edge. The body edge, the pocket, the seat and the wall notch stay where they were.

Default	Right
Choices	Right, Left
Moves	hook

The optional dials

Everything below Step 4 in the Customizer is optional. These dials apply in every hand size, except the sections marked (Custom size only), which do nothing until Step 2's hand size is Custom. The sections follow in the Customizer's order; how they work together is explained after the troubleshooting sections.


- **Advanced - Zip Tie Placement**, 6 dials: Zip-tie hole placement, Number of zip-tie rows, Zip-tie pair 1 position, Zip-tie pair 2 position, Zip-tie pair 3 position, Zip-tie hole distance from the pocket wall.
- **Advanced - Velcro Placement**, 2 dials: Strap slot placement, Strap slot position.
- **Advanced - Render Quality**, 1 dial: Render quality.
- **Custom Mode**, 2 dials: Reset Custom to the Medium reference, Auto-fit.
- **Body Shape (Custom size only)**, 8 dials: Body length, Body width at the widest point, Cord-end corner width, Body width at the plug end, Body width at the middle, Side corner position, Body thickness, Round the cord half only.
- **Plug Pocket (Custom size only)**, 7 dials: Pocket seat diameter, Pocket width, Pocket depth, Pocket reference drop, Pocket seat floor thickness, Plug recess floor thickness, Pocket side taper.
- **Finger Holes (Custom size only)**, 4 dials: Finger holes on or off, Finger hole diameter, Finger hole spacing, Finger hole position.
- **T Hook (Custom size only)**, 10 dials: Cord hook on or off, Hook slot width, Hook length, Hook crossbar width, Hook crossbar height, Hook slot inset, Hook stem side offset, Hook stem offset, Hook catch reach, Hook tip drop.
- **Plug Wall Notch (Custom size only)**, 4 dials: Wall notch on or off, Wall notch width, Wall notch depth, Wall notch corner rounding.
- **Zip Tie Holes (Custom size only)**, 5 dials: Zip-tie hole diameter, Zip-tie row spacing, Zip-tie column spacing, Zip-tie distance from the notch, Zip-tie countersink.
- **Velcro / Wing Strap Holes (Custom size only)**, 5 dials: Strap slot length, Strap slot width, Strap slot distance from the centerline, Strap slot position along the body, Strap slot lean.
- **Edge Rounding (Custom size only)**, 9 dials: Body side rounding, Top edge rounding, Bottom edge rounding, Strap slot corner rounding, Strap opening edge rounding, Finger hole rim rounding, Hook crossbar corner rounding, Hook slot corner rounding, Hook edge rounding.

Advanced - Zip Tie Placement

Zip-tie hole placement

Customizer name: **zip_placement**

Switches the zip-tie pairs from the automatic rows to the three position dials, which slide each pair along the plug's side.

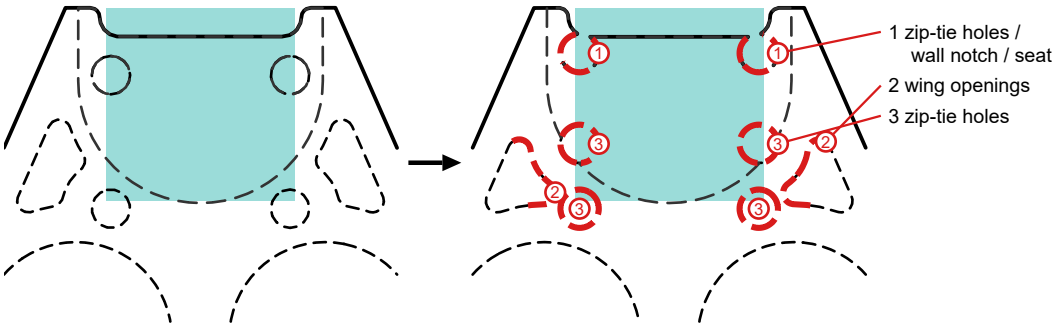


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: zip-tie hole placement set to Manual. Marked in red: 1, the zip-tie holes, the wall notch and the seat: the four small holes beside the pocket; the notch in the top edge; the round recess at the plug end. 2, the wing openings: the two openings beside the pocket. 3, the zip-tie holes: the four small holes beside the pocket.

Default	Auto
Choices	Auto, Manual
Moves	seat, wall notch, wing openings, zip-tie holes

Number of zip-tie rows

Customizer name: **zip_row_count**

Adds or removes a pair of zip-tie holes, and the rows squeeze together when the body has no room for another.

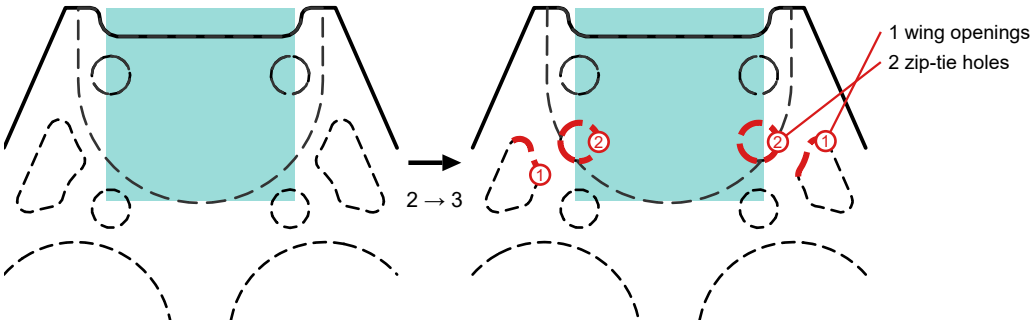


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: number of zip-tie rows at 3. Marked in red: 1, the wing openings: the two openings beside the pocket. 2, the zip-tie holes: the four small holes beside the pocket.

Default	2
Range	1 to 3, in steps of 1
Moves	wing openings, zip-tie holes

Zip-tie pair 1 position

Customizer name: **zip_pos_1**

Slides the first pair of zip-tie holes along the plug's side, measured from the plug end.

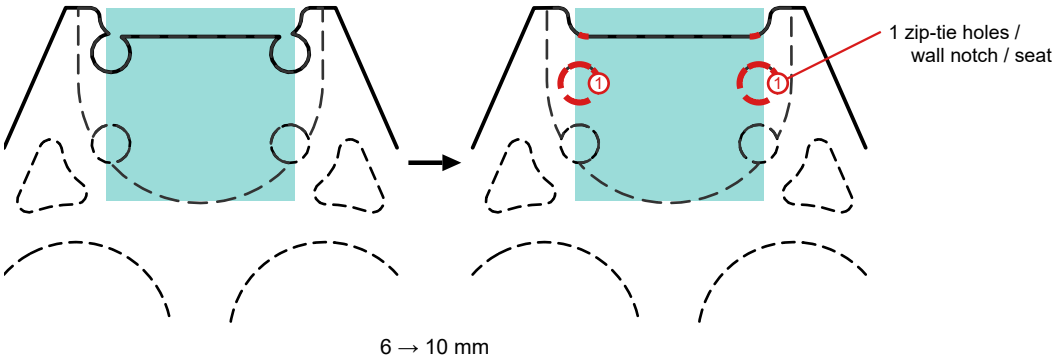

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with zip-tie hole placement set to Manual, a 25 mm wide plug in teal. Right: zip-tie pair 1 position at 10 mm. Marked in red: 1, the zip-tie holes, the wall notch and the seat: the four small holes beside the pocket; the notch in the top edge; the round recess at the plug end.


Default	6 mm
Range	0 to 55 mm, in steps of 0.5 mm
Moves	seat, wall notch, zip-tie holes
Red warnings	ZIP TIE HOLES HIT FINGER HOLES · ZIP TIE ROWS OVERLAP EACH OTHER · ZIP TIE HOLES HIT VELCRO SLOTS

> **Note:** Only acts when zip_placement is Manual.

Zip-tie pair 2 position

Customizer name: **zip_pos_2**

Slides the second pair of zip-tie holes along the plug's side, measured from the plug end.

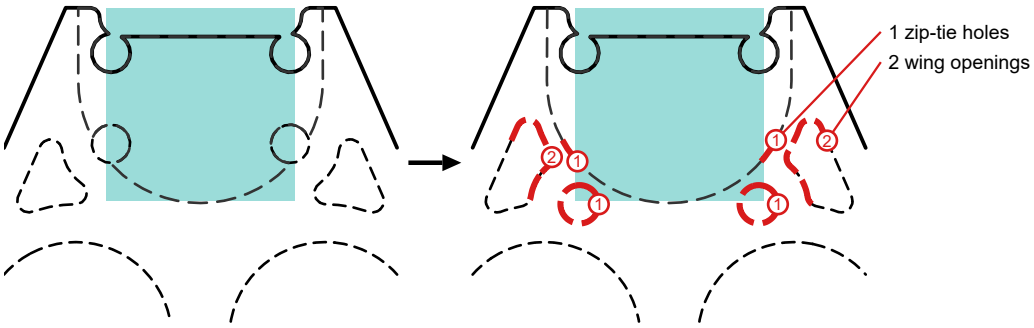

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with zip-tie hole placement set to Manual, a 25 mm wide plug in teal. Right: zip-tie pair 2 position at 26 mm. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket. 2, the wing openings: the two openings beside the pocket.


Default	18 mm
Range	0 to 55 mm, in steps of 0.5 mm
Moves	wing openings, zip-tie holes
Red warnings	ZIP TIE HOLES HIT FINGER HOLES · ZIP TIE ROWS OVERLAP EACH OTHER · ZIP TIE HOLES HIT VELCRO SLOTS

> **Note:** Only acts when zip_placement is Manual.

Zip-tie pair 3 position

Customizer name: **zip_pos_3**

Slides the third pair of zip-tie holes along the plug's side, measured from the plug end.

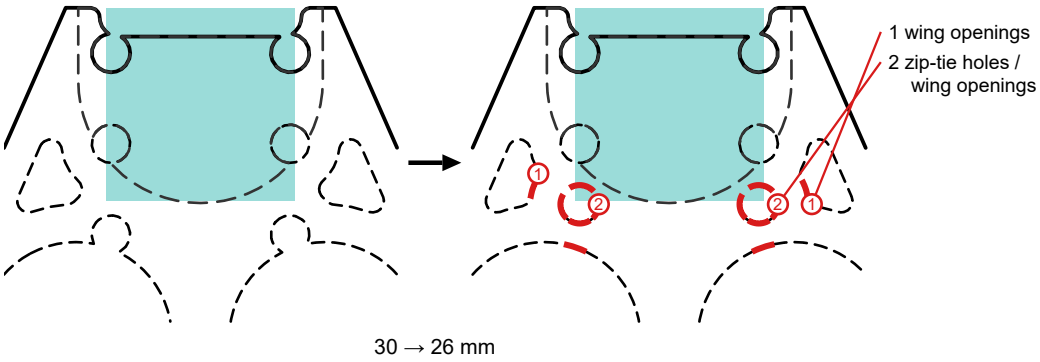

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with zip-tie hole placement set to Manual and number of zip-tie rows set to 3, a 25 mm wide plug in teal. Right: zip-tie pair 3 position at 26 mm. Marked in red: 1, the wing openings: the two openings beside the pocket. 2, the zip-tie holes and the wing openings: the four small holes beside the pocket; the two openings beside the pocket.


Default	30 mm
Range	0 to 55 mm, in steps of 0.5 mm
Moves	wing openings, zip-tie holes
Red warnings	ZIP TIE HOLES HIT FINGER HOLES · ZIP TIE ROWS OVERLAP EACH OTHER · ZIP TIE HOLES HIT VELCRO SLOTS

Note: Only acts when zip_placement is Manual and zip_row_count is 3.

Zip-tie hole distance from the pocket wall

Customizer name: **zip_edge_offset**

Moves every zip-tie hole farther from or closer to the pocket wall, and the wing openings reshape around them.

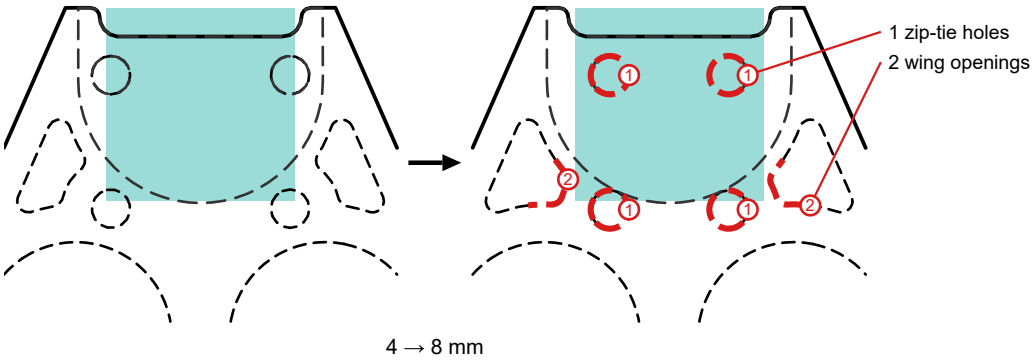

4 → 8 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: zip-tie hole distance from the pocket wall at 8 mm. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket. 2, the wing openings: the two openings beside the pocket.


Default	4 mm
Range	2.5 to 12 mm, in steps of 0.25 mm
Moves	wing openings, zip-tie holes

Advanced - Velcro Placement

Strap slot placement

Customizer name: **velcro_placement**

Switches the strap openings to a pair of plain slots that the position dial slides along the plug's side, whatever the opening style.

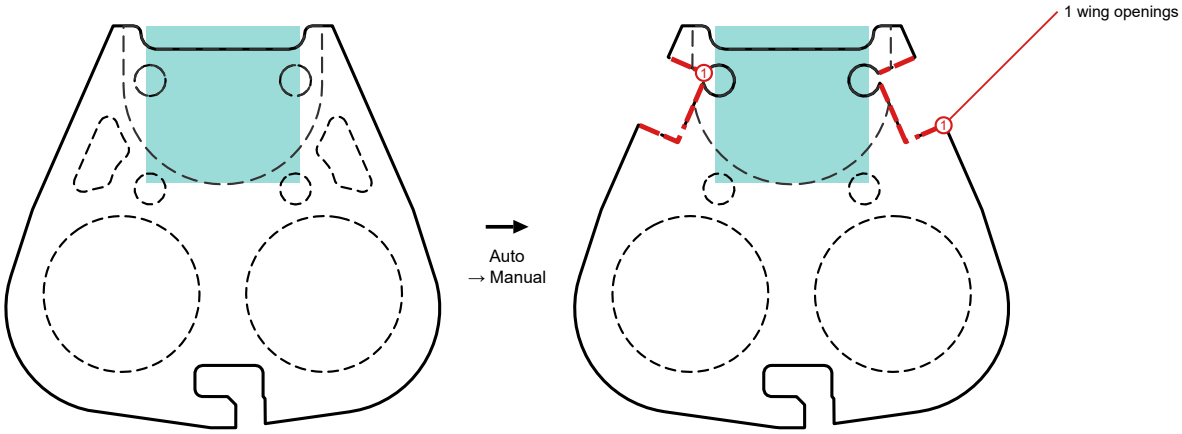


Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults, a 25 mm wide plug in teal. Right: strap slot placement set to Manual. Marked in red: 1, the wing openings: the two openings beside the pocket. The body edge, the pocket, the seat and the wall notch stay where they were.

Default	Auto
Choices	Auto, Manual
Moves	wing openings

Strap slot position

Customizer name: **velcro_pos**

Slides the pair of strap slots along the plug's side, measured from the plug end.

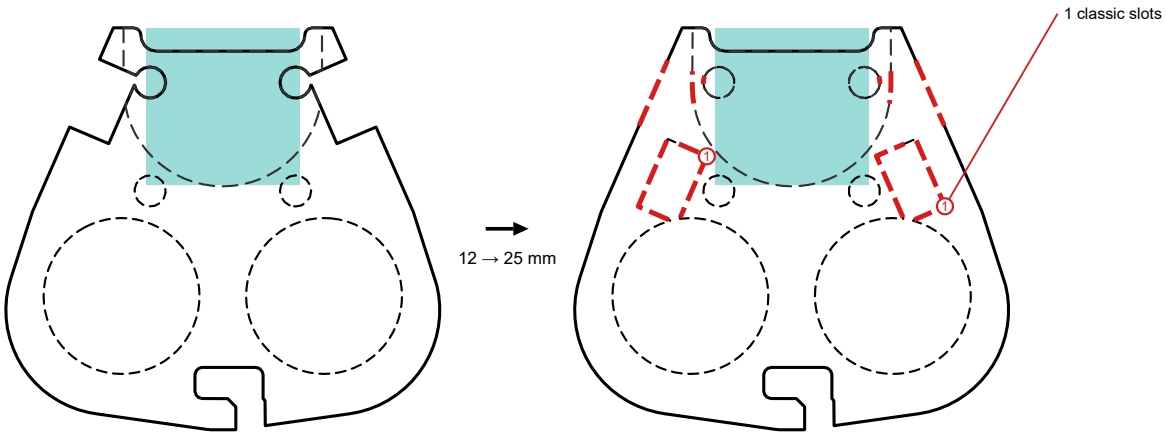

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with strap opening style set to Classic slot and strap slot placement set to Manual, a 25 mm wide plug in teal. Right: strap slot position at 25 mm. Marked in red: 1, the classic slots: the two slots beside the pocket.

Default	12 mm
Range	0 to 55 mm, in steps of 0.5 mm
Moves	classic slots
Red warnings	ZIP TIE HOLES HIT VELCRO SLOTS

> **Note:** Only acts when velcro_placement is Manual.

Advanced - Render Quality

Render quality

Customizer name: **quality**

Sets how many flat segments draw each curve and changes no dimension.

> **No picture.** Changes no shape: it only sets the number of segments in every circle and arc.


Default	64 segments
Range	24 to 128 segments, in steps of 8 segments

Custom Mode

Reset Custom to the Medium reference

Customizer name: **reset_custom_to_medium**

Swaps every Custom slider for the Medium reference values for one render, so the whole tool snaps back to the Medium shape.

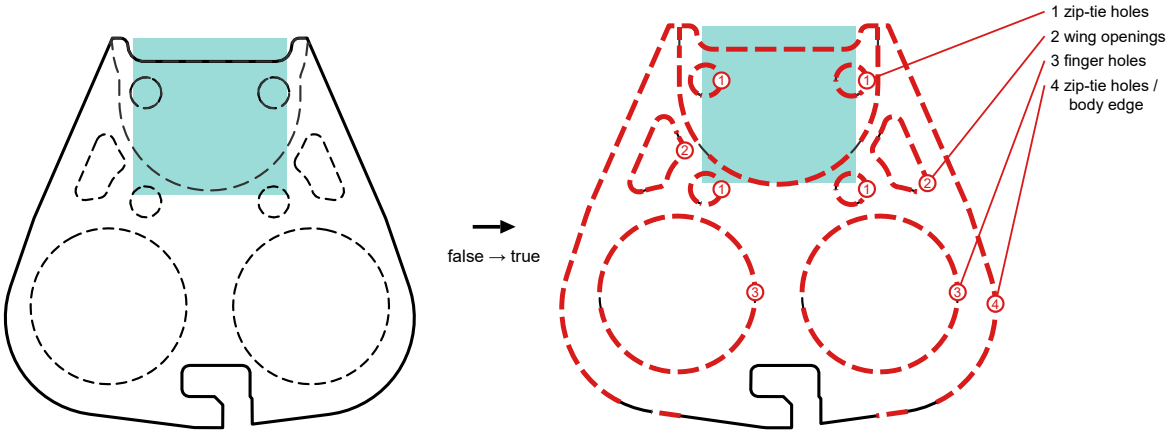

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: reset Custom to the Medium reference set to true. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket. 2, the wing openings: the two openings beside the pocket. 3, the finger holes: the two large holes in the lower half. 4, the zip-tie holes and the body edge.

Default	Off
Choices	On or off (a check box)
Moves	body edge, finger holes, wing openings, zip-tie holes

> **Note:** Only acts when size is Custom.

Auto-fit

Customizer name: **custom_enable_auto_fit**

Lets the tool clamp any Custom slider that would push a feature past the body or into a neighbor, and changes nothing while every slider is inside its safe range.

> **No picture.** Changes no shape at the Custom defaults: it only clamps sliders that leave their safe range, and every clamp is reported in the console.


Default	On
Choices	On or off (a check box)
Red warnings	ZIP TIE HOLES HIT FINGER HOLES · FINGER HOLES OUTSIDE BODY · POCKET SEAT WIDER THAN TOP EDGE · POCKET WIDER THAN BODY · WALL NOTCH WIDER THAN TOP EDGE

Body Shape (Custom size only)

Body length

Customizer name: **custom_puller_length**

Stretches the whole body from the cord end to the plug end.

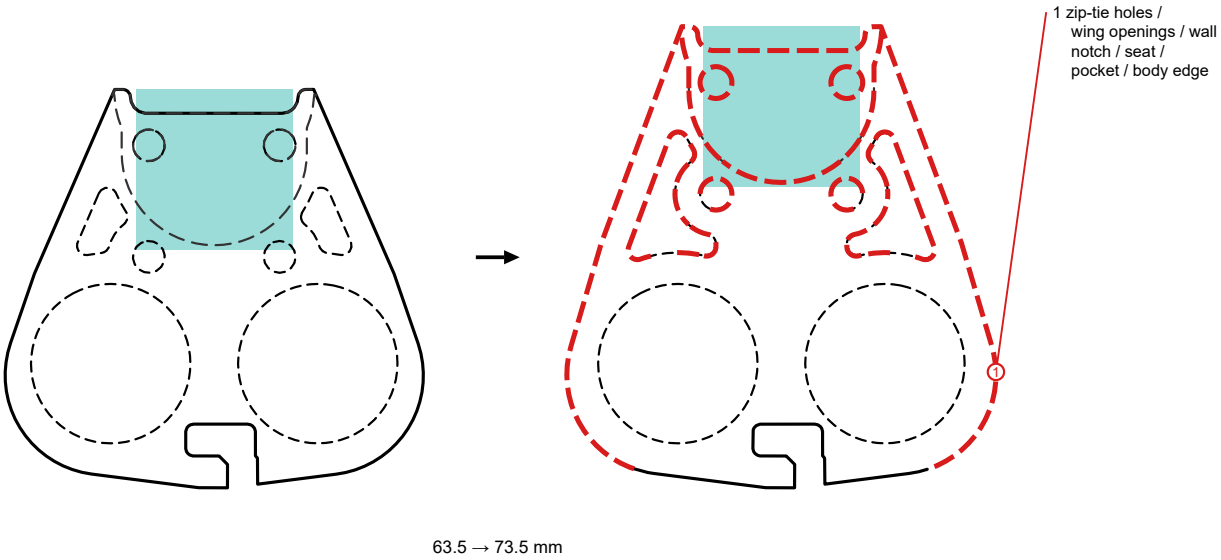

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: body length at 73.5 mm. Marked in red: 1, the zip-tie holes, the wing openings, the wall notch, the seat, the pocket and the body edge.


Default	63.5 mm
Range	50 to 120 mm, in steps of 0.5 mm
Moves	body edge, pocket, seat, wall notch, wing openings, zip-tie holes

Note: Only acts when size is Custom.

Body width at the widest point

Customizer name: **custom_puller_bottom_width**

Widens the body at its widest point, just above the cord end, before the side rounding is applied.

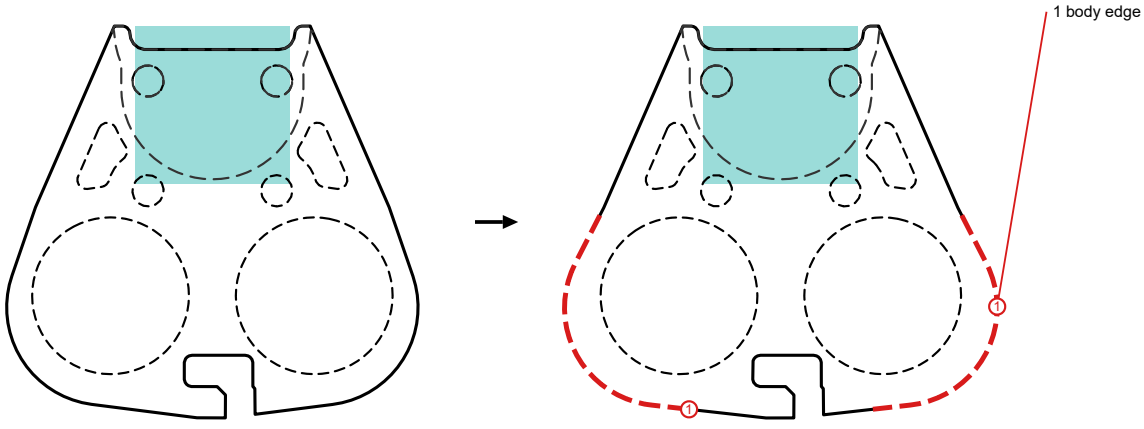

77.6 → 87.6 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: body width at the widest point at 87.6 mm. Marked in red: 1, the body edge: the outer outline. Everything else follows the outline.


Default	77.6 mm
Range	50 to 120 mm, in steps of 0.05 mm
Moves	body edge

> **Note:** Only acts when size is Custom.

Cord-end corner width

Customizer name: **custom_puller_bottom_corners**

Widens the flat at the cord end where the two lower corners of the body outline sit.

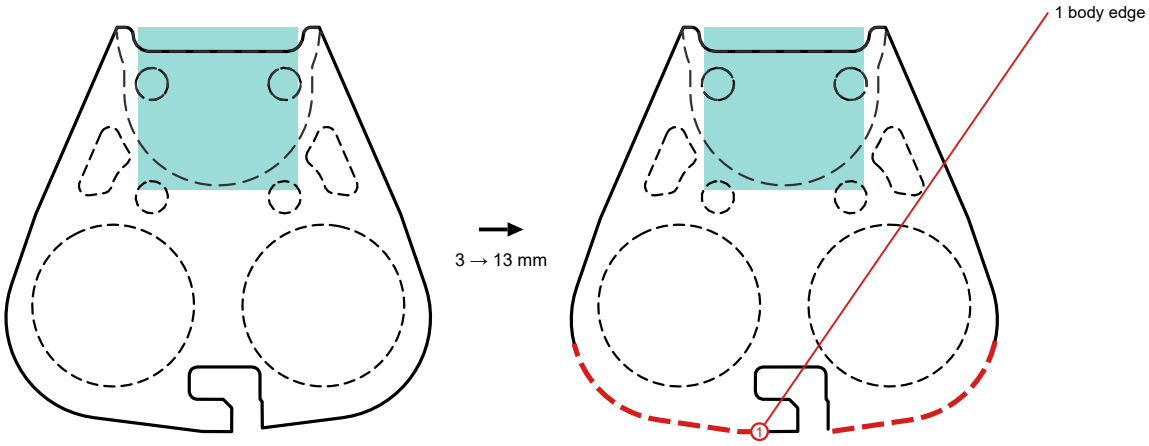

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: cord-end corner width at 13 mm. Marked in red: 1, the body edge: the outer outline. Everything else follows the outline.


Default	3 mm
Range	3 to 80 mm, in steps of 0.25 mm
Moves	body edge

> **Note:** Only acts when size is Custom.

Body width at the plug end

Customizer name: **custom_puller_top_width**

Widens the plug end of the body, where the wall notch and the pocket seat sit.

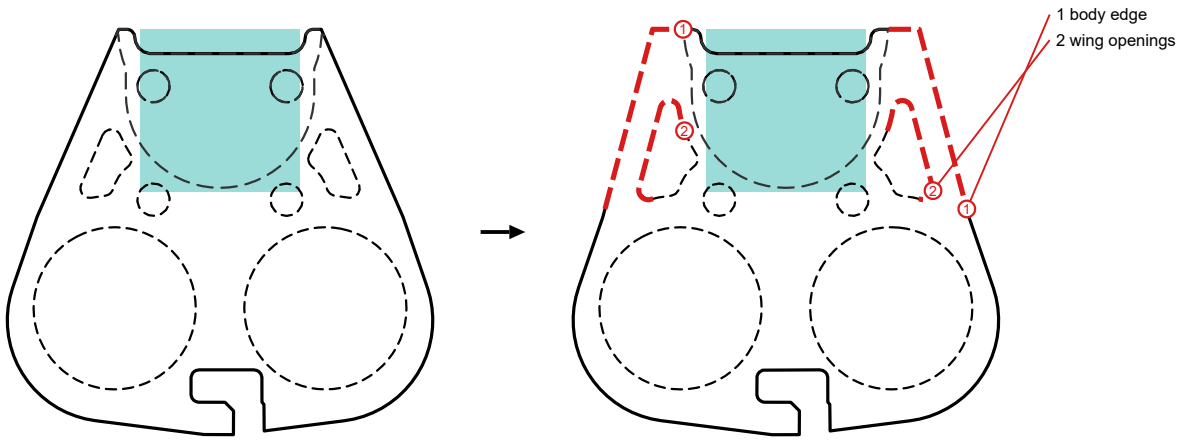

31.75 → 41.75 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: body width at the plug end at 41.75 mm. Marked in red: 1, the body edge: the outer outline. 2, the wing openings: the two openings beside the pocket. Everything else follows the outline.


Default	31.75 mm
Range	25 to 80 mm, in steps of 0.25 mm
Moves	body edge, wing openings

> **Note:** Only acts when size is Custom.

Body width at the middle

Customizer name: **custom_puller_middle_width**

Widens the body at the middle control point, bulging or straightening the side edges between the widest point and the plug end.

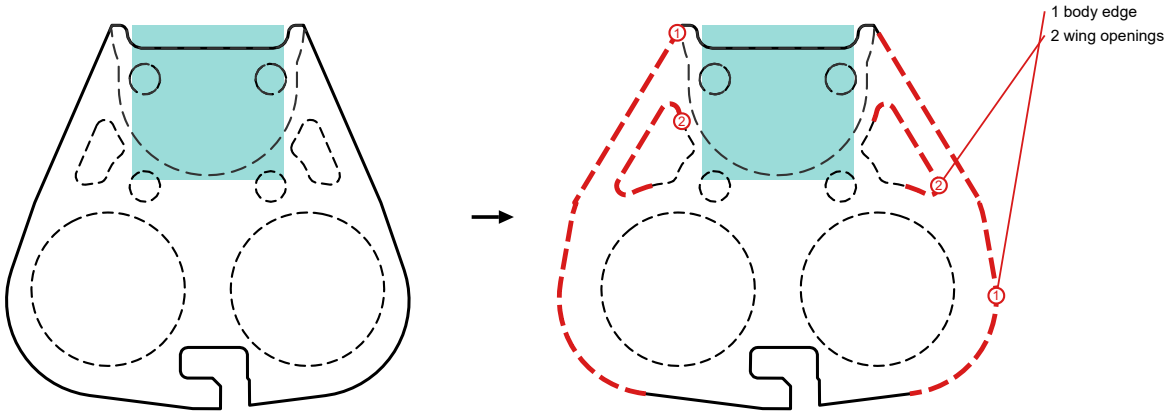

57.35 → 67.35 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: body width at the middle at 67.35 mm. Marked in red: 1, the body edge: the outer outline. 2, the wing openings: the two openings beside the pocket. Everything else follows the outline.


Default	57.35 mm
Range	25 to 120 mm, in steps of 0.05 mm
Moves	body edge, wing openings

> **Note:** Only acts when size is Custom.

Side corner position

Customizer name: **custom_puller_side_corner**

Moves the two widest corners of the body outline up toward the plug end or down toward the cord end.

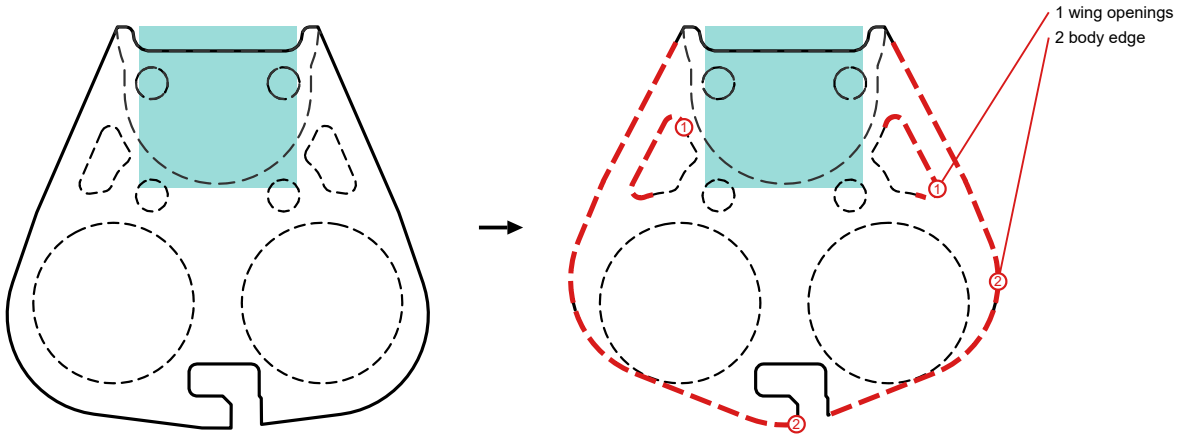

4.65 → 14.65 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: side corner position at 14.65 mm. Marked in red: 1, the wing openings: the two openings beside the pocket. 2, the body edge: the outer outline. Everything else follows the outline.


Default	4.65 mm
Range	3 to 35 mm, in steps of 0.05 mm
Moves	body edge, wing openings

> **Note:** Only acts when size is Custom.

Body thickness

Customizer name: **custom_body_thickness**

Thickens the whole slab, so every hole and the pocket get deeper walls.

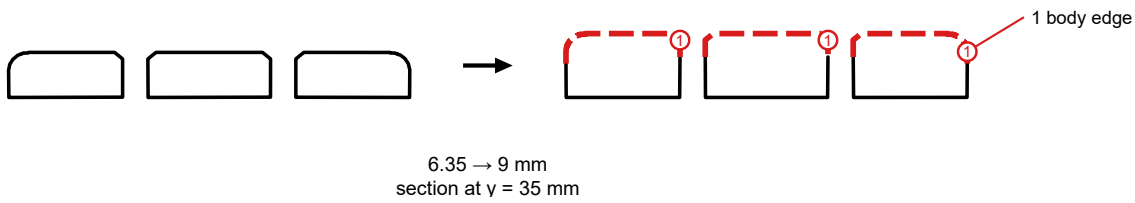

6.35 → 9 mm
section at y = 35 mm

Two vertical slices of the one-sided puller at y = 35 mm, before left and after right, the top face up. Left: the defaults with hand size set to Custom, the plug in teal in the cut. Right: body thickness at 9 mm. Marked in red: 1, the body edge: the outer outline. Everything else follows the outline.


Default	6.35 mm
Range	4 to 15 mm, in steps of 0.05 mm
Moves	body edge

> **Note:** Only acts when size is Custom.

Round the cord half only

Customizer name: **custom_body_round_bottom_only**

Rounds the whole outline instead of only the cord half, so the plug end loses its crisp corners.

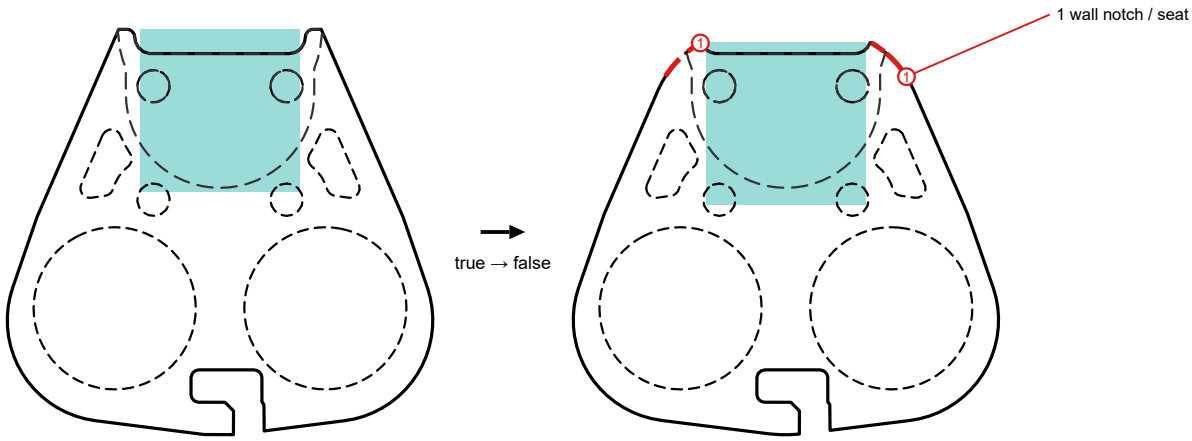

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: round the cord half only set to false. Marked in red: 1, the wall notch and the seat: the notch in the top edge; the round recess at the plug end.

Default	On
Choices	On or off (a check box)
Moves	body edge, hook, seat, wall notch


> **Note:** Only acts when size is Custom.

Plug Pocket (Custom size only)

Pocket seat diameter

Customizer name: **custom_pocket_seat_diameter**

Widens the round seat cut into the plug end of the pocket.

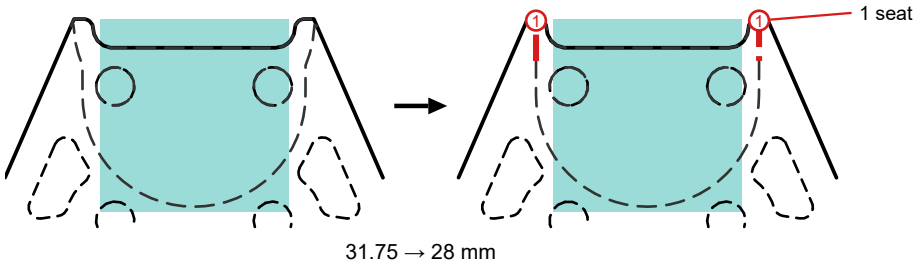

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: pocket seat diameter at 28 mm. Marked in red: 1, the seat: the round recess at the plug end. The body edge, the pocket, the wall notch and the wing openings stay where they were.


Default	31.75 mm
Range	10 to 45 mm, in steps of 0.05 mm
Moves	seat

> **Note:** Only acts when size is Custom.

Pocket width

Customizer name: **custom_pocket_width**

Widens the plug recess, and the zip-tie holes and wing openings move outward with its wall.

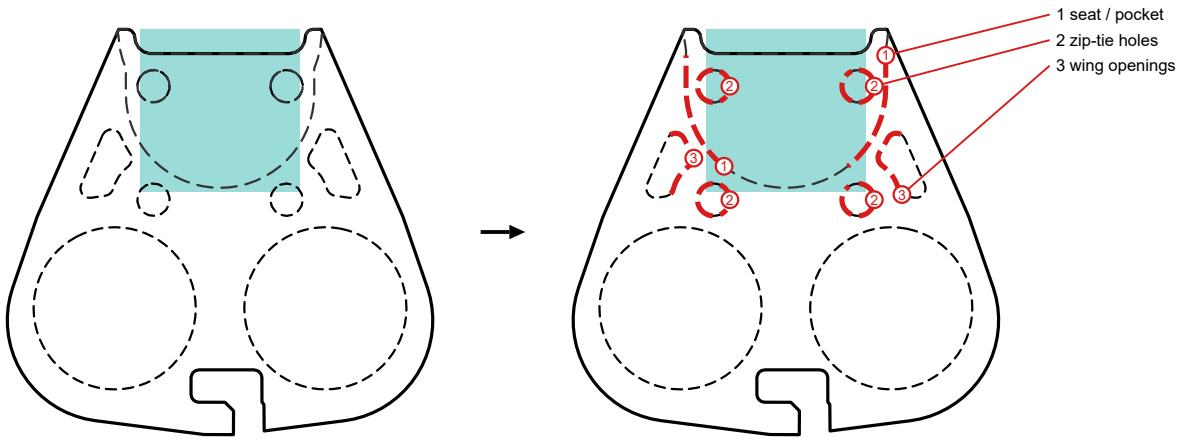

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: pocket width at 34 mm. Marked in red: 1, the seat and the pocket: the round recess at the plug end; the plug recess on the centerline. 2, the zip-tie holes: the four small holes beside the pocket. 3, the wing openings: the two openings beside the pocket.


Default	28.85 mm
Range	10 to 45 mm, in steps of 0.05 mm
Moves	pocket, seat, wing openings, zip-tie holes

> **Note:** Only acts when size is Custom.

Pocket depth

Customizer name: **custom_pocket_depth**

Runs the plug recess farther from the plug end toward the finger holes.

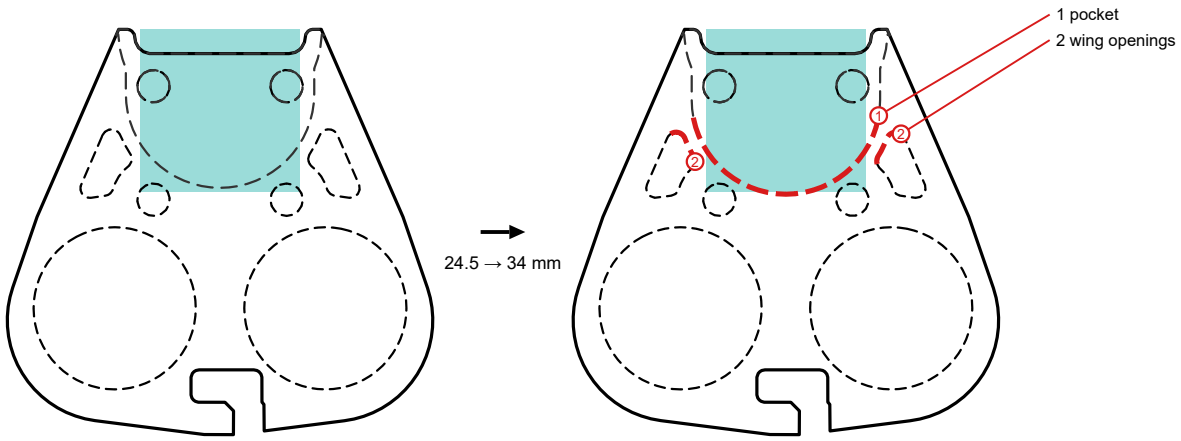

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: pocket depth at 34 mm. Marked in red: 1, the pocket: the plug recess on the centerline. 2, the wing openings: the two openings beside the pocket.

Default	24.5 mm
Range	5 to 60 mm, in steps of 0.5 mm
Moves	pocket, wing openings

> **Note:** Only acts when size is Custom.

Pocket reference drop

Customizer name: **custom_pocket_dome_drop**

Changes no shape of the pocket, because the recess outline is built from the plug width at the plug end and the side taper, and this reference point cancels out of it.


> **No picture.** Changes no shape: the recess is a rounded-nose shape whose width at the plug end is the pocket width and whose walls follow the side taper, so this reference point cancels out; measured with straight and with tapered walls.

Default	2.15 mm
Range	0 to 8 mm, in steps of 0.05 mm

Pocket seat floor thickness

Customizer name: **custom_pocket_seat_floor**

Thins or thickens the floor left under the round seat, so the seat is cut deeper or shallower.

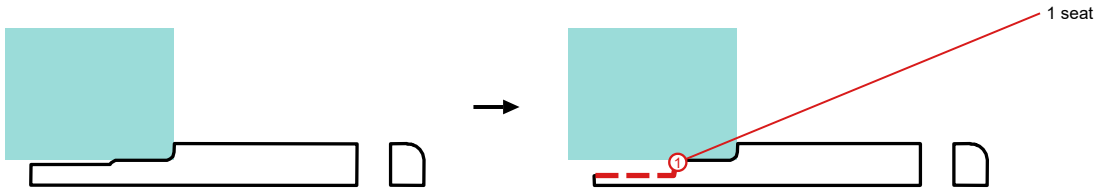

3.175 → 1.5 mm
section at x = 0 mm

Two vertical slices of the one-sided puller at x = 0 mm, before left and after right, the top face up. Left: the defaults with hand size set to Custom, the plug in teal in the cut. Right: pocket seat floor thickness at 1.5 mm. Marked in red: 1, the seat: the round recess at the plug end.


Default	3.175 mm
Range	0 to 8 mm, in steps of 0.025 mm
Moves	seat

Note: Only acts when size is Custom.

Plug recess floor thickness

Customizer name: **custom_pocket_floor**

Thins or thickens the floor left under the plug recess, so the recess is cut deeper or shallower.

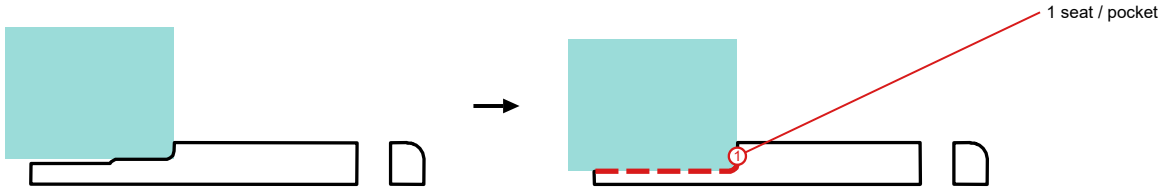

3.81 → 2 mm
section at x = 0 mm

Two vertical slices of the one-sided puller at x = 0 mm, before left and after right, the top face up. Left: the defaults with hand size set to Custom, the plug in teal in the cut. Right: plug recess floor thickness at 2 mm. Marked in red: 1, the seat and the pocket: the round recess at the plug end; the plug recess on the centerline.


Default	3.81 mm
Range	0 to 12 mm, in steps of 0.025 mm
Moves	pocket, seat

Note: Only acts when size is Custom.

Pocket side taper

Customizer name: **custom_pocket_side_angle**

Tilts the pocket's side walls inward toward the cord end, and the zip-tie holes and strap slots lean in along the same line.

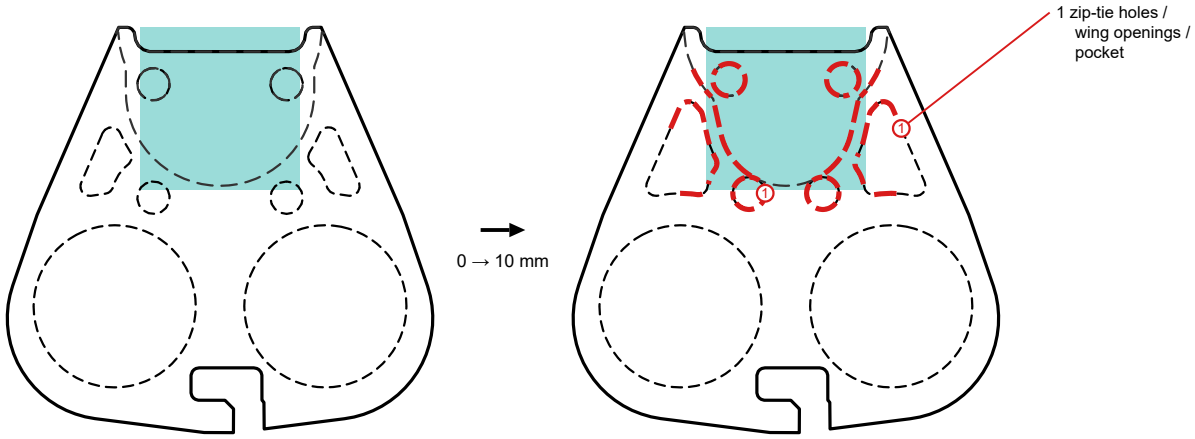

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: pocket side taper at 10 mm. Marked in red: 1, the zip-tie holes, the wing openings and the pocket: the four small holes beside the pocket; the two openings beside the pocket; the plug recess on the centerline.

Default	0 mm
Range	-15 to 25 mm, in steps of 0.5 mm
Moves	pocket, wing openings, zip-tie holes


> **Note:** Only acts when size is Custom.

Finger Holes (Custom size only)

Finger holes on or off

Customizer name: **custom_enable_finger_holes**

Cuts or leaves out both finger holes.

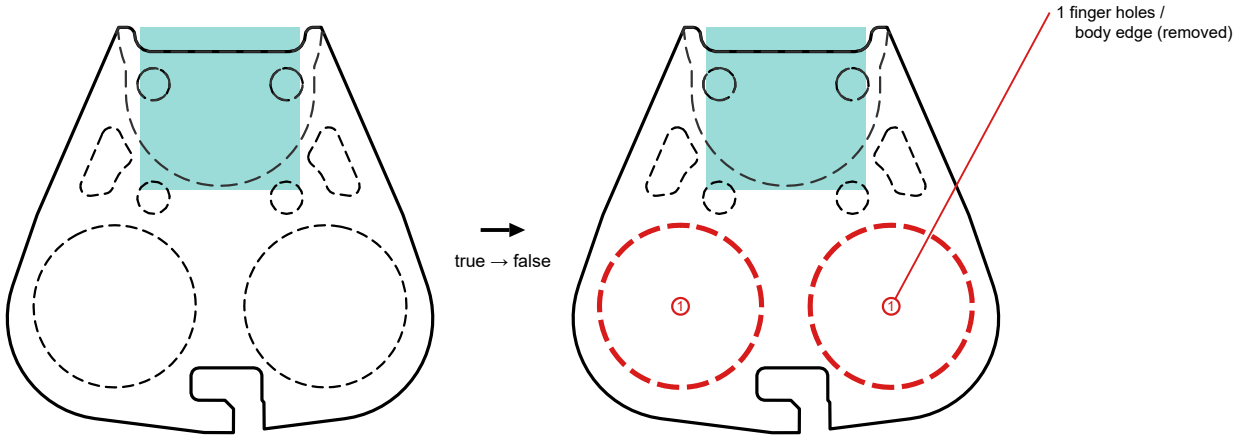

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: finger holes on or off set to false. Marked in red: 1, the finger holes and the body edge: the two large holes in the lower half; the outer outline, removed. Everything else follows the outline.


Default	On
Choices	On or off (a check box)
Moves	body edge, finger holes

> **Note:** Only acts when size is Custom.

Finger hole diameter

Customizer name: **custom_finger_hole_diameter**

Widens both finger holes.

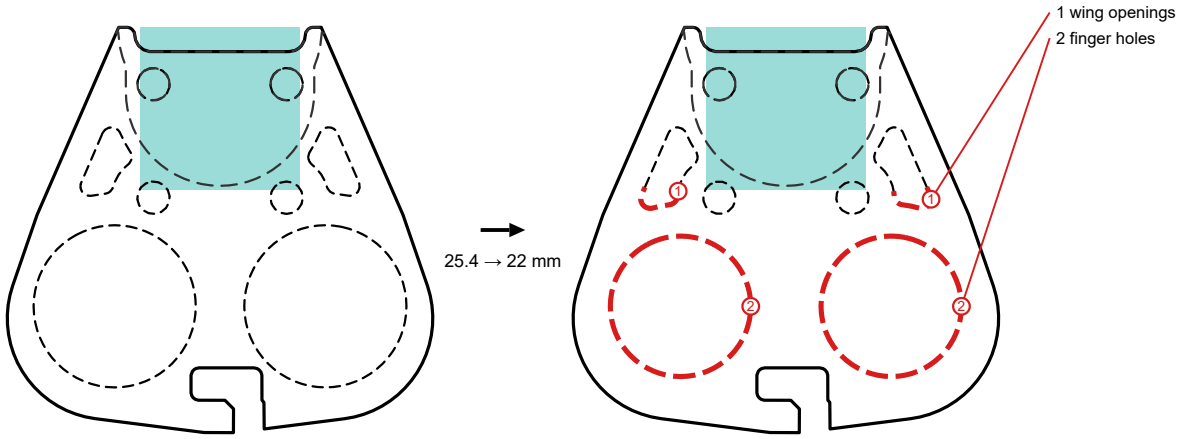

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: finger hole diameter at 22 mm. Marked in red: 1, the wing openings: the two openings beside the pocket. 2, the finger holes: the two large holes in the lower half. The body edge, the pocket, the seat and the wall notch stay where they were.


Default	25.4 mm
Range	15 to 40 mm, in steps of 0.1 mm
Moves	finger holes, wing openings

Note: Only acts when size is Custom.

Finger hole spacing

Customizer name: **custom_finger_hole_spacing**

Moves the two finger holes farther apart or closer together.

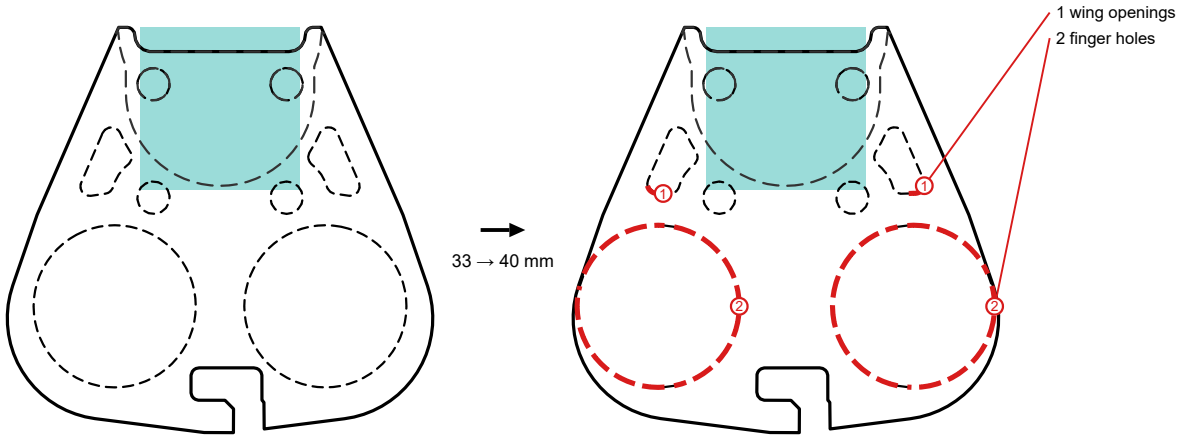

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: finger hole spacing at 40 mm. Marked in red: 1, the wing openings: the two openings beside the pocket. 2, the finger holes: the two large holes in the lower half.


Default	33 mm
Range	20 to 50 mm, in steps of 0.5 mm
Moves	finger holes, wing openings

> **Note:** Only acts when size is Custom.

Finger hole position

Customizer name: **custom_finger_hole_y_position**

Slides both finger holes up toward the pocket or down toward the cord hook.

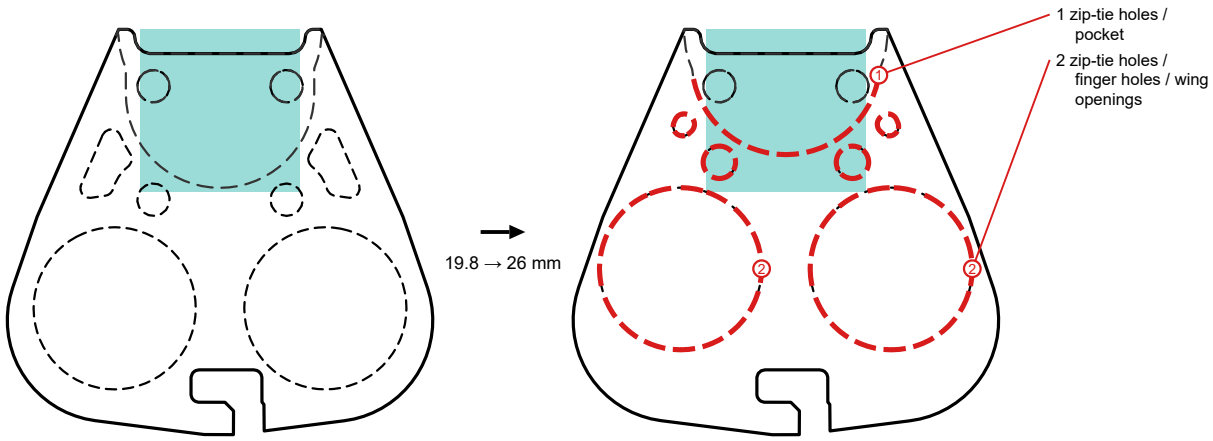

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: finger hole position at 26 mm. Marked in red: 1, the zip-tie holes and the pocket. 2, the zip-tie holes, the finger holes and the wing openings.

Default	19.8 mm
Range	10 to 50 mm, in steps of 0.1 mm
Moves	finger holes, pocket, wing openings, zip-tie holes


Note: Only acts when size is Custom.

T Hook (Custom size only)

Cord hook on or off

Customizer name: **custom_enable_t_hook**

Cuts or leaves out the cord hook at the cord end.

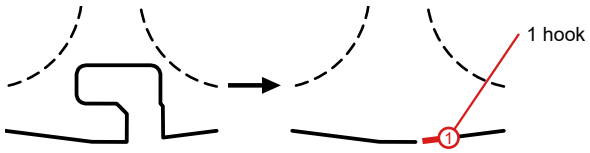

true → false

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: cord hook on or off set to false. Marked in red: 1, the hook: the cord hook slot in the bottom edge. The body edge, the pocket, the seat and the wall notch stay where they were.


Default	On
Choices	On or off (a check box)
Moves	hook

> **Note:** Only acts when size is Custom.

Hook slot width

Customizer name: **custom_t_hook_base_gap**

Widens the slot the cord slides into at the cord end.

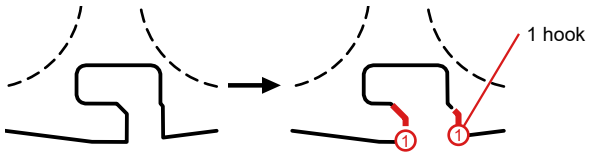

4.7625 → 7 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: hook slot width at 7 mm. Marked in red: 1, the hook: the cord hook slot in the bottom edge. The body edge, the pocket, the seat and the wall notch stay where they were.


Default	4.7625 mm
Range	3 to 10 mm, in steps of 0.05 mm
Moves	hook

> **Note:** Only acts when size is Custom.

Hook length

Customizer name: **custom_t_hook_length**

Runs the cord hook farther into the body from the cord end.

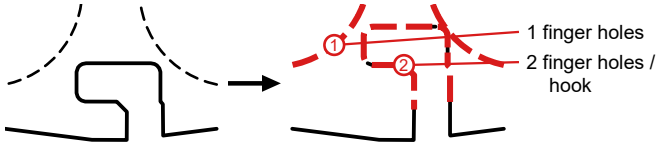

10.16 → 15 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: hook length at 15 mm. Marked in red: 1, the finger holes: the two large holes in the lower half. 2, the finger holes and the hook: the two large holes in the lower half; the cord hook slot in the bottom edge.


Default	10.16 mm
Range	6 to 20 mm, in steps of 0.05 mm
Moves	finger holes, hook, pocket, wing openings, zip-tie holes

> **Note:** Only acts when size is Custom.

Hook crossbar width

Customizer name: **custom_t_hook_holder_width**

Widens the crossbar the cord hooks under at the top of the slot.

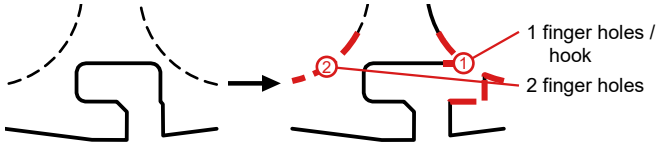

11.1125 → 16 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: hook crossbar width at 16 mm. Marked in red: 1, the finger holes and the hook: the two large holes in the lower half; the cord hook slot in the bottom edge. 2, the finger holes: the two large holes in the lower half.


Default	11.1125 mm
Range	8 to 25 mm, in steps of 0.05 mm
Moves	finger holes, hook, wing openings, zip-tie holes

> **Note:** Only acts when size is Custom.

Hook crossbar height

Customizer name: **custom_t_hook_holder_length**

Makes the crossbar opening taller or shorter along the body.

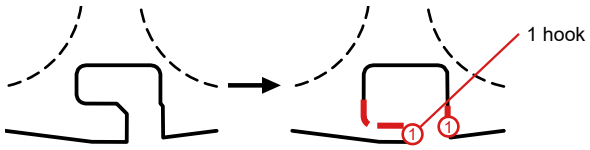

5.08 → 8 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: hook crossbar height at 8 mm. Marked in red: 1, the hook: the cord hook slot in the bottom edge. The body edge, the pocket, the seat and the wall notch stay where they were.

Default	5.08 mm
Range	2 to 15 mm, in steps of 0.05 mm
Moves	hook

> **Note:** Only acts when size is Custom.

Hook slot inset

Customizer name: **custom_t_hook_gap_offset**

Changes no shape of the printed tool, because the J-hook cord catch does not read this dial.


> **No picture.** Changes no shape: the J-hook cord catch is drawn without this dial; it only appears in the Cutouts Only 2D debug overlay.

Default	0 mm
Range	0 to 8 mm, in steps of 0.5 mm

Hook stem side offset

Customizer name: **custom_t_hook_leg_offset**

Moves nothing on the hook itself, and only pushes the finger holes up when the auto-fit keep-out around the hook grows with it.

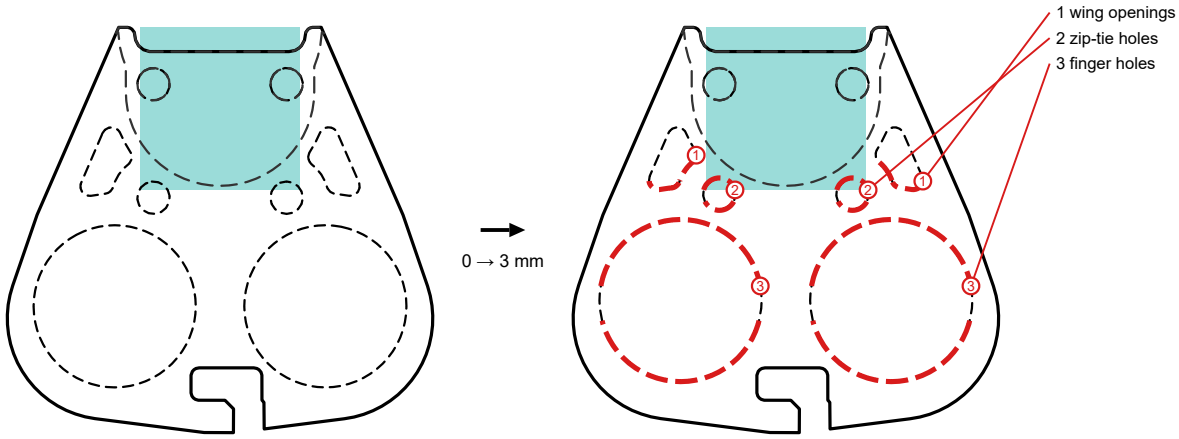

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: hook stem side offset at 3 mm. Marked in red: 1, the wing openings: the two openings beside the pocket. 2, the zip-tie holes: the four small holes beside the pocket. 3, the finger holes: the two large holes in the lower half.


Default	0 mm
Range	-5 to 5 mm, in steps of 0.5 mm
Moves	finger holes, wing openings, zip-tie holes

> **Note:** Only acts when size is Custom; the J-hook cord catch is drawn without this dial, and only the auto-fit clamp on the finger holes reads it.

Hook stem offset

Customizer name: **custom_t_hook_stem_offset**

Shifts the cord slot sideways along the crossbar, making the J of the hook deeper or shallower.

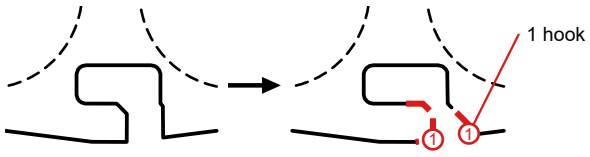

4.5 → 7 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: hook stem offset at 7 mm. Marked in red: 1, the hook: the cord hook slot in the bottom edge. The body edge, the pocket, the seat and the wall notch stay where they were.


Default	4.5 mm
Range	0 to 8 mm, in steps of 0.05 mm
Moves	hook

Note: Only acts when size is Custom.

Hook catch reach

Customizer name: **custom_t_hook_catch_reach**

Extends the crossbar past the slot on the catch side, lengthening the lip the cord hooks under.

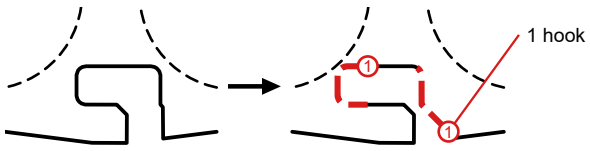

4.55 → 8 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: hook catch reach at 8 mm. Marked in red: 1, the hook: the cord hook slot in the bottom edge. The body edge, the pocket, the seat and the wall notch stay where they were.

Default	4.55 mm
Range	0 to 10 mm, in steps of 0.05 mm
Moves	hook

Note: Only acts when size is Custom.

Hook tip drop

Customizer name: **custom_t_hook_tip_drop**

Changes no shape of the printed tool, because the hook slot's mouth already opens through the cord end.

> **No picture.** Only acts when size is Custom. Changes no shape: the hook slot's mouth already opens through the cord end (the body ends at Y = 0), so sagging the mouth farther below that edge cuts only air; measured at 1.98, 4 and 0.


Default	1.98 mm
Range	0 to 5 mm, in steps of 0.05 mm

Plug Wall Notch (Custom size only)

Wall notch on or off

Customizer name: **custom_enable_plug_wall_notch**

Cuts or leaves out the notch at the plug end that straddles the outlet's cover plate.

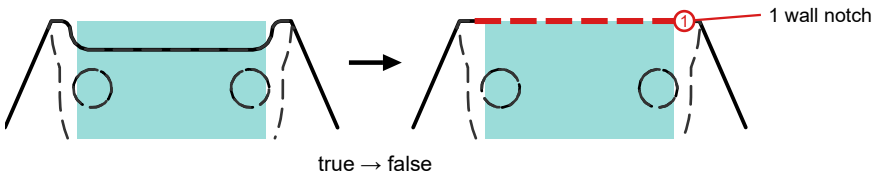

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: wall notch on or off set to false. Marked in red: 1, the wall notch: the notch in the top edge. The body edge, the pocket, the seat and the wing openings stay where they were.


Default	On
Choices	On or off (a check box)
Moves	wall notch

> **Note:** Only acts when size is Custom.

Wall notch width

Customizer name: **custom_plug_wall_notch_width**

Widens or narrows the notch at the plug end.

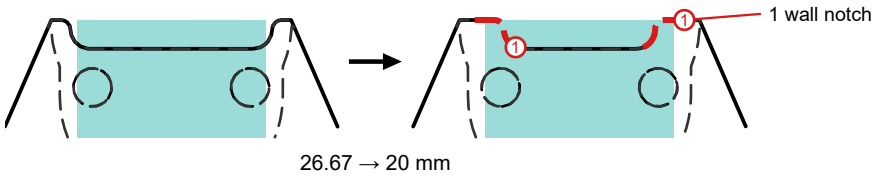

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: wall notch width at 20 mm. Marked in red: 1, the wall notch: the notch in the top edge. The body edge, the pocket, the seat and the wing openings stay where they were.


Default	26.67 mm
Range	5 to 40 mm, in steps of 0.01 mm
Moves	wall notch

> **Note:** Only acts when size is Custom.

Wall notch depth

Customizer name: **custom_plug_wall_notch_height**

Cuts the notch deeper or shallower into the plug end.

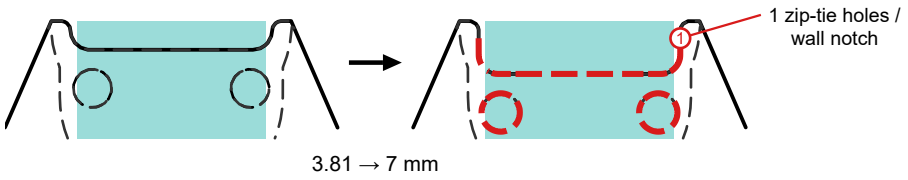

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: wall notch depth at 7 mm. Marked in red: 1, the zip-tie holes and the wall notch: the four small holes beside the pocket; the notch in the top edge. The body edge, the pocket, the seat and the wing openings stay where they were.


Default	3.81 mm
Range	0 to 10 mm, in steps of 0.05 mm
Moves	wall notch, wing openings, zip-tie holes

> **Note:** Only acts when size is Custom.

Wall notch corner rounding

Customizer name: **custom_plug_wall_notch_rounding**

Rounds or squares the notch's two inner corners.

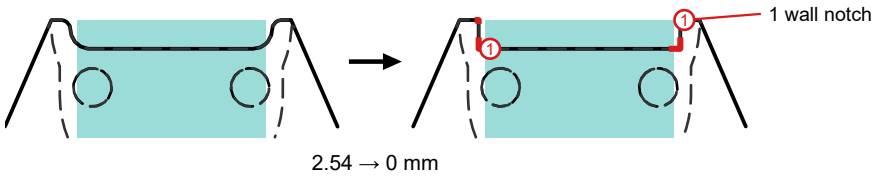

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: wall notch corner rounding at 0 mm. Marked in red: 1, the wall notch: the notch in the top edge. The body edge, the pocket, the seat and the wing openings stay where they were.

Default	2.54 mm
Range	0 to 5 mm, in steps of 0.01 mm
Moves	wall notch


> **Note:** Only acts when size is Custom.

Zip Tie Holes (Custom size only)

Zip-tie hole diameter

Customizer name: **custom_zip_tie_hole_diameter**

Widens every zip-tie hole.

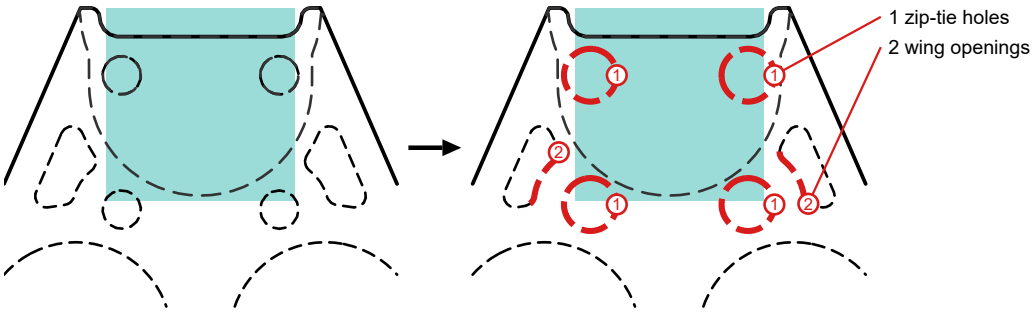

5.08 → 7 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: zip-tie hole diameter at 7 mm. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket. 2, the wing openings: the two openings beside the pocket. The body edge, the pocket, the seat and the wall notch stay where they were.


Default	5.08 mm
Range	2 to 8 mm, in steps of 0.02 mm
Moves	wing openings, zip-tie holes

Note: Only acts when size is Custom.

Zip-tie row spacing

Customizer name: **custom_zip_tie_height_spacing**

Moves the second row of zip-tie holes closer to or farther from the first.

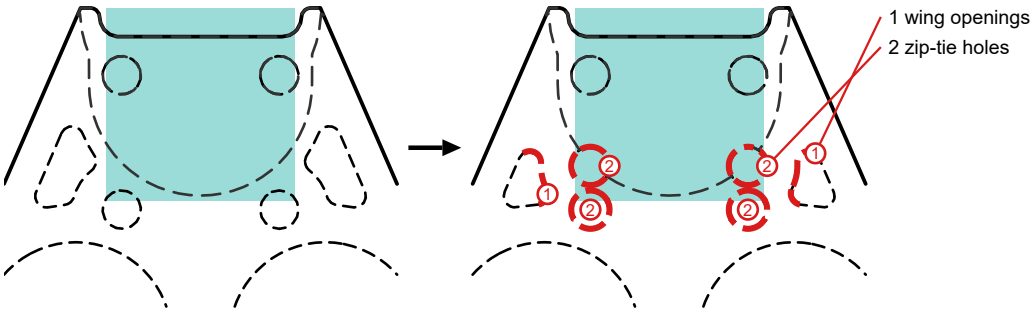

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: zip-tie row spacing at 12 mm. Marked in red: 1, the wing openings: the two openings beside the pocket. 2, the zip-tie holes: the four small holes beside the pocket.

Default	17.78 mm
Range	5 to 30 mm, in steps of 0.02 mm
Moves	wing openings, zip-tie holes

> **Note:** Only acts when size is Custom.

Zip-tie column spacing

Customizer name: **custom_zip_tie_width_spacing**

Moves no zip-tie hole, because the two columns follow the pocket wall, and only feeds the auto-fit keep-out that can trim the row spacing by a hair.


> **No picture.** Changes no shape of its own: the zip-tie columns sit zip_edge_offset inside the pocket wall; this dial only feeds the auto-fit finger keep-out, which trimmed the row spacing by 0.05 mm at the Custom defaults.

Default	17.7 mm
Range	10 to 50 mm, in steps of 0.02 mm

Zip-tie distance from the notch

Customizer name: **custom_zip_tie_distance_from_notch**

Moves the first row of zip-tie holes farther from the wall notch, and the second row follows.

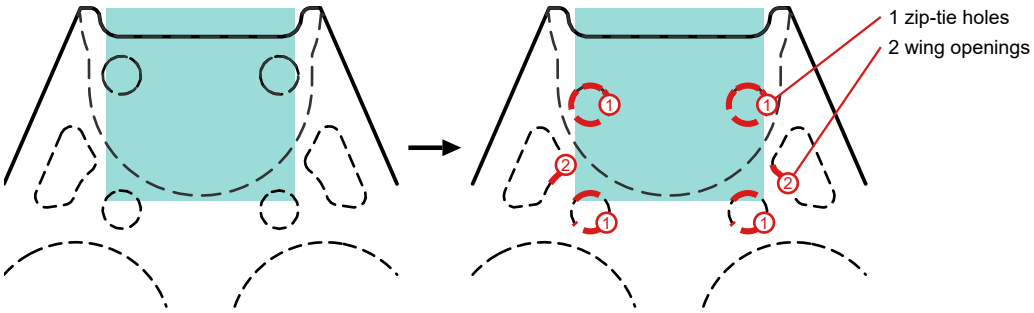

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: zip-tie distance from the notch at 9 mm. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket. 2, the wing openings: the two openings beside the pocket.

Default	5.1 mm
Range	1 to 15 mm, in steps of 0.05 mm
Moves	wing openings, zip-tie holes

> **Note:** Only acts when size is Custom.

Zip-tie countersink

Customizer name: **custom_zip_tie_countersink**

Flares the top of the zip-tie holes wider so the tie head sits flush.



Two vertical slices of the one-sided puller at x = 10.4 mm, before left and after right, the top face up. Left: the defaults with hand size set to Custom, the plug in teal in the cut. Right: zip-tie countersink at 2.5 mm. Marked in red: 1, the zip-tie holes: the four small holes beside the pocket. 2, the zip-tie holes and the pocket: the four small holes beside the pocket; the plug recess on the centerline.

Default	0.9 mm
Range	0 to 3 mm, in steps of 0.05 mm
Moves	pocket, zip-tie holes


> **Note:** Only acts when size is Custom.

Velcro / Wing Strap Holes (Custom size only)

Strap slot length

Customizer name: **custom_velcro_hole_length**

Lengthens each plain strap slot along its lean.

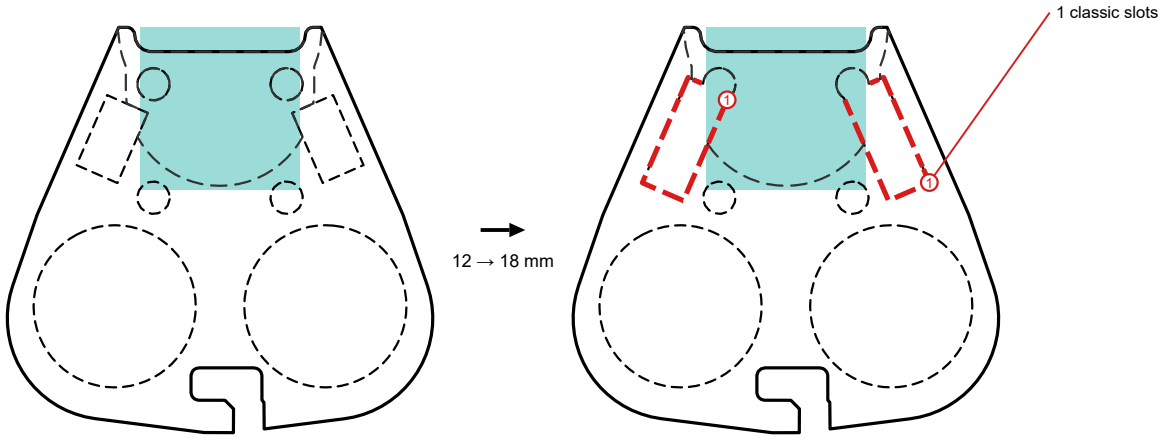

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom and strap opening style set to Classic slot, a 25 mm wide plug in teal. Right: strap slot length at 18 mm. Marked in red: 1, the classic slots: the two slots beside the pocket. The body edge, the pocket, the seat and the wall notch stay where they were.


Default	12 mm
Range	6 to 20 mm, in steps of 0.5 mm
Moves	classic slots

> **Note:** Only acts when size is Custom and velcro_style is Classic slot, or when velcro_placement is Manual.

Strap slot width

Customizer name: **custom_velcro_hole_width**

Widens each plain strap slot.

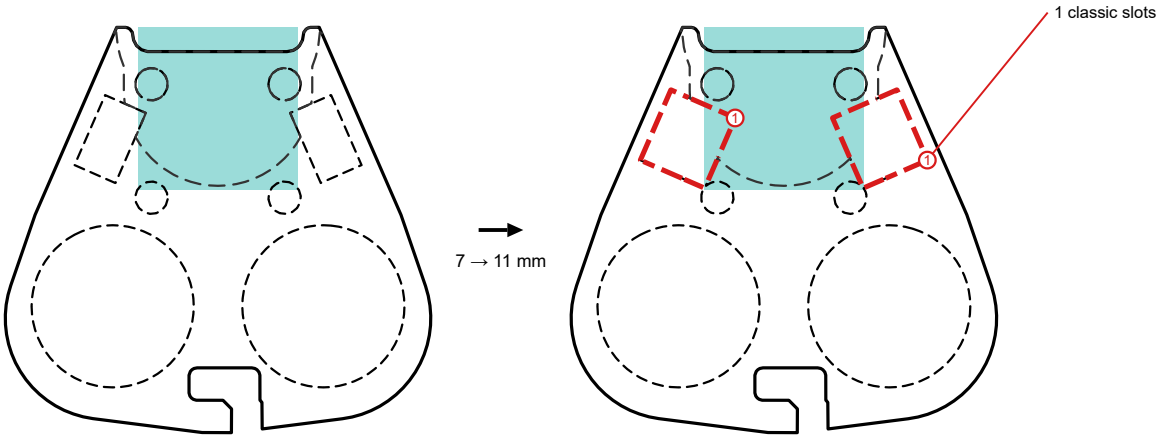

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom and strap opening style set to Classic slot, a 25 mm wide plug in teal. Right: strap slot width at 11 mm. Marked in red: 1, the classic slots: the two slots beside the pocket. The body edge, the pocket, the seat and the wall notch stay where they were.


Default	7 mm
Range	3 to 14 mm, in steps of 0.5 mm
Moves	classic slots

Note: Only acts when size is Custom and velcro_style is Classic slot, or when velcro_placement is Manual.

Strap slot distance from the centerline

Customizer name: **custom_velcro_hole_x_center**

Moves the two plain strap slots closer to or farther from the centerline.

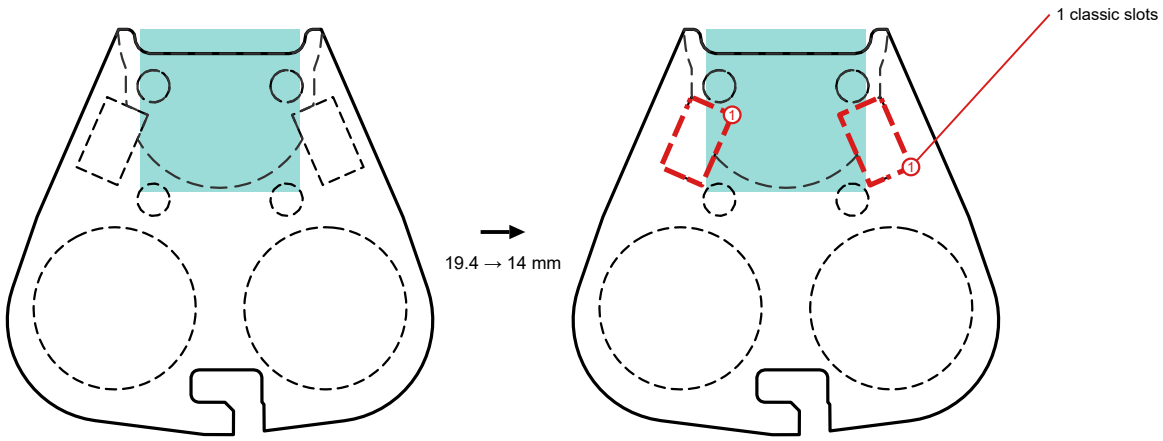

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom and strap opening style set to Classic slot, a 25 mm wide plug in teal. Right: strap slot distance from the centerline at 14 mm. Marked in red: 1, the classic slots: the two slots beside the pocket.


Default	19.4 mm
Range	5 to 35 mm, in steps of 0.05 mm
Moves	classic slots

Note: Only acts when size is Custom and velcro_style is Classic slot, or when velcro_placement is Manual.

Strap slot position along the body

Customizer name: **custom_velcro_hole_y_center**

Slides the two plain strap slots toward the cord end or the plug end.

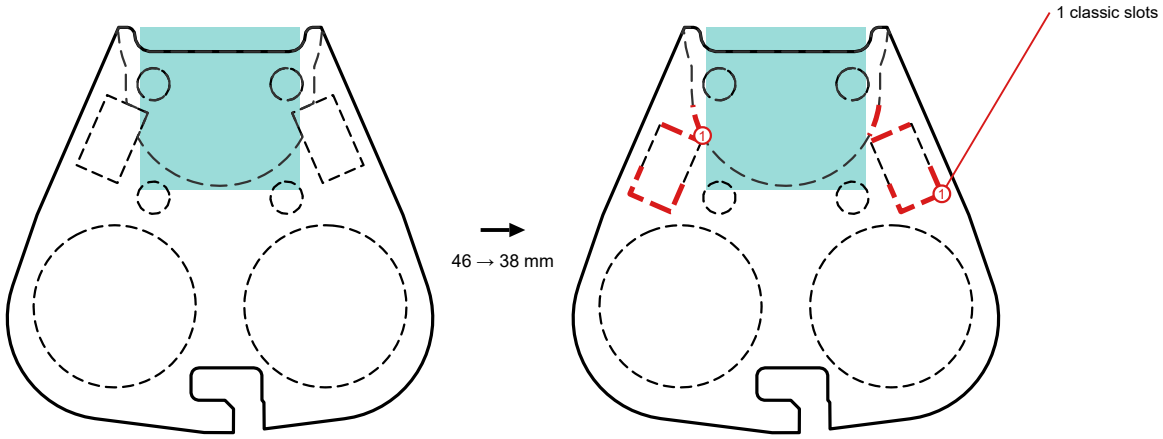

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom and strap opening style set to Classic slot, a 25 mm wide plug in teal. Right: strap slot position along the body at 38 mm. Marked in red: 1, the classic slots: the two slots beside the pocket.


Default	46 mm
Range	30 to 80 mm, in steps of 0.5 mm
Moves	classic slots

> **Note:** Only acts when size is Custom, velcro_style is Classic slot and velcro_placement is Auto.

Strap slot lean

Customizer name: **custom_velcro_hole_rotation**

Leans the two plain strap slots more or less steeply, mirrored on the two sides.

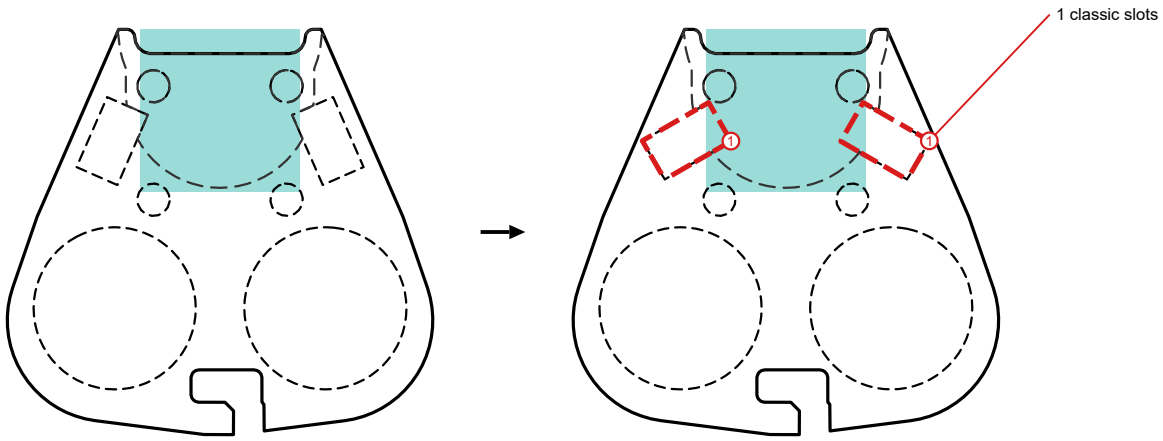

23.5 → 60 deg

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom and strap opening style set to Classic slot, a 25 mm wide plug in teal. Right: strap slot lean at 60 deg. Marked in red: 1, the classic slots: the two slots beside the pocket.

Default	23.5 degrees
Range	0 to 180 degrees, in steps of 0.5 degrees
Moves	classic slots


> **Note:** Only acts when size is Custom and velcro_style is Classic slot, or when velcro_placement is Manual.

Edge Rounding (Custom size only)

Body side rounding

Customizer name: **custom_body_side_rounding**

Rounds the body outline's corners more or less, down to the plain octagon at 0.

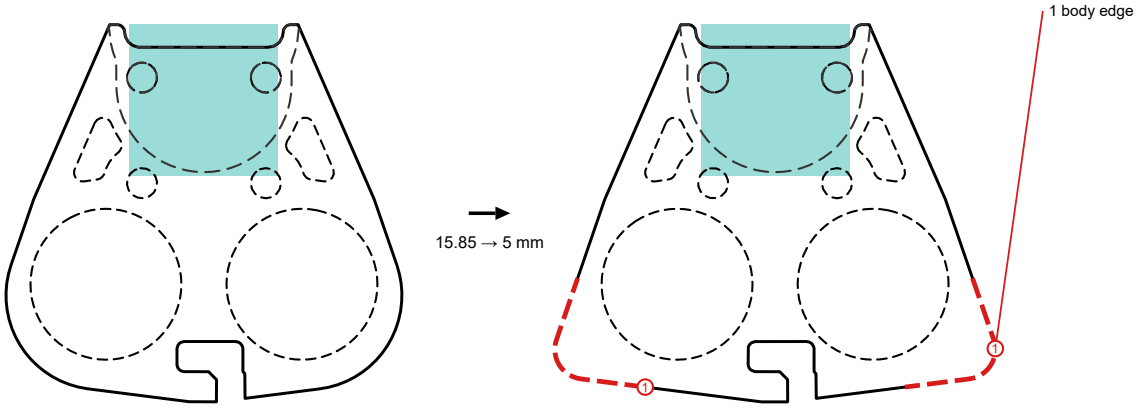

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: body side rounding at 5 mm. Marked in red: 1, the body edge: the outer outline. Everything else follows the outline.


Default	15.85 mm
Range	0 to 30 mm, in steps of 0.05 mm
Moves	body edge

Note: Only acts when size is Custom.

Top edge rounding

Customizer name: **custom_body_top_rounding**

Rounds or squares the edge where the body's top face meets its sides.



2.54 → 0 mm
section at y = 35 mm

Two vertical slices of the one-sided puller at y = 35 mm, before left and after right, the top face up. Left: the defaults with hand size set to Custom, the plug in teal in the cut. Right: top edge rounding at 0 mm. Marked in red: 1, the body edge: the outer outline. Everything else follows the outline.


Default	2.54 mm
Range	0 to 5 mm, in steps of 0.01 mm
Moves	body edge

> **Note:** Only acts when size is Custom.

Bottom edge rounding

Customizer name: **custom_body_bottom_rounding**

Rounds or squares the edge where the body's bottom face meets its sides.



0 → 2 mm
section at y = 35 mm

Two vertical slices of the one-sided puller at y = 35 mm, before left and after right, the top face up. Left: the defaults with hand size set to Custom, the plug in teal in the cut. Right: bottom edge rounding at 2 mm. Marked in red: 1, the body edge: the outer outline. Everything else follows the outline.


Default	0 mm
Range	0 to 5 mm, in steps of 0.1 mm
Moves	body edge

> **Note:** Only acts when size is Custom.

Strap slot corner rounding

Customizer name: **custom_velcro_side_rounding**

Rounds the four corners of each plain strap slot.

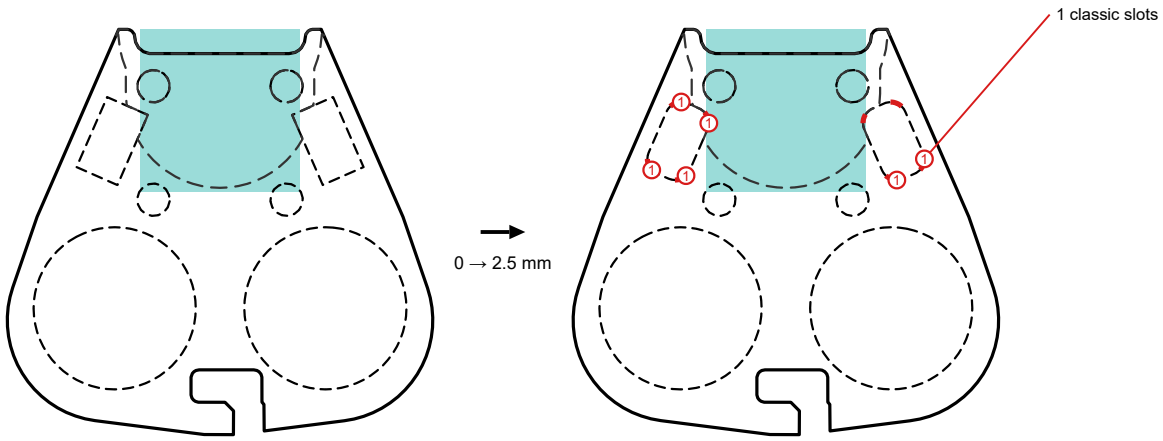

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom and strap opening style set to Classic slot, a 25 mm wide plug in teal. Right: strap slot corner rounding at 2.5 mm. Marked in red: 1, the classic slots: the two slots beside the pocket. The body edge, the pocket, the seat and the wall notch stay where they were.


Default	0 mm
Range	0 to 3 mm, in steps of 0.5 mm
Moves	classic slots

Note: Only acts when size is Custom and velcro_style is Classic slot, or when velcro_placement is Manual.

Strap opening edge rounding

Customizer name: **custom_velcro_top_bottom_rounding**

Flares the top and bottom edges of the strap openings so the strap does not chafe.



0 → 1.5 mm
section at y = 46 mm

Two vertical slices of the one-sided puller at y = 46 mm, before left and after right, the top face up. Left: the defaults with hand size set to Custom, the plug in teal in the cut. Right: strap opening edge rounding at 1.5 mm. Marked in red: 1, the wing openings: the two openings beside the pocket. 2, the wing openings and the pocket: the two openings beside the pocket; the plug recess on the centerline.

Default	0 mm
Range	0 to 3 mm, in steps of 0.1 mm
Moves	pocket, wing openings

> **Note:** Only acts when size is Custom.

Finger hole rim rounding

Customizer name: **custom_finger_hole_rounding**

Rounds or squares the rims of both finger holes on both faces.



2.5 → 0 mm
section at y = 19.8 mm

Two vertical slices of the one-sided puller at y = 19.8 mm, before left and after right, the top face up. Left: the defaults with hand size set to Custom, the plug in teal in the cut. Right: finger hole rim rounding at 0 mm. Marked in red: 1, the finger holes: the two large holes in the lower half. The body edge, the pocket, the seat and the wall notch stay where they were.


Default	2.5 mm
Range	0 to 5 mm, in steps of 0.1 mm
Moves	finger holes

> **Note:** Only acts when size is Custom.

Hook crossbar corner rounding

Customizer name: **custom_t_hook_holder_side_rounding**

Rounds or squares the top corners of the hook's crossbar.

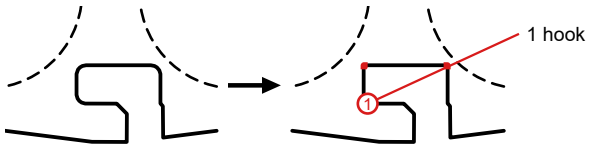

1.27 → 0 mm

Two top views of the one-sided puller, before left and after right, the plug end at the top. Left: the defaults with hand size set to Custom, a 25 mm wide plug in teal. Right: hook crossbar corner rounding at 0 mm. Marked in red: 1, the hook: the cord hook slot in the bottom edge. The body edge, the pocket, the seat and the wall notch stay where they were.

Default	1.27 mm
Range	0 to 3 mm, in steps of 0.01 mm
Moves	hook

> **Note:** Only acts when size is Custom.

Hook slot corner rounding

Customizer name: **custom_t_hook_gap_side_rounding**

Changes no shape of the printed tool, because the J-hook cord catch draws its own corners.


> **No picture.** Changes no shape: the J-hook cord catch is drawn without this dial; it only appears in the Cutouts Only 2D debug overlay.

Default	0 mm
Range	0 to 3 mm, in steps of 0.1 mm

Hook edge rounding

Customizer name: **custom_t_hook_top_bottom_rounding**

Flares the top and bottom edges of the cord hook's slot and crossbar.

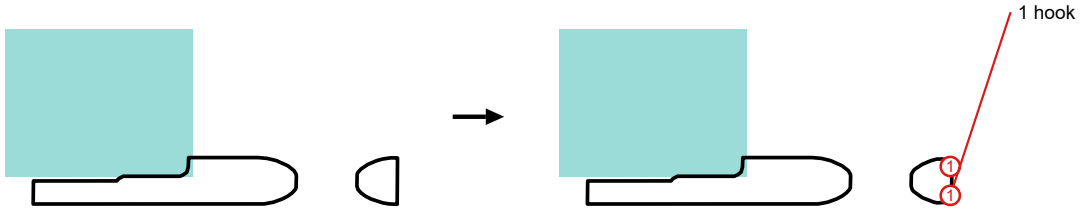

0 → 2 mm
section at x = 4.5 mm

Two vertical slices of the one-sided puller at x = 4.5 mm, before left and after right, the top face up. Left: the defaults with hand size set to Custom, the plug in teal in the cut. Right: hook edge rounding at 2 mm. Marked in red: 1, the hook: the cord hook slot in the bottom edge. The body edge, the pocket, the seat and the wall notch stay where they were.

Default	0 mm
Range	0 to 3 mm, in steps of 0.1 mm
Moves	hook

Note: Only acts when size is Custom.

Render, export and print

1. On the computer, press **F6** (or **Design** ▸ **Render**) and wait for the progress bar to finish; a render takes from a few seconds to a minute. In Forge, the preview draws on its own: wait for **Preview ready** under the picture.
2. Look for red text beside the part. If there is any, read it: it names the measurement to fix, and the part will not fit until it is gone.
3. Save the file: on the computer, **File** ▸ **Export** ▸ **Export as STL**; in Forge, **Export STL**. If you export without rendering, OpenSCAD asks you to render first: press F6 and export again. The quick preview (F5) looks complete but cannot be exported.

Load the STL into your slicer with these settings:

Setting	Value
Orientation	flat face down on the bed, the plug pocket facing up. No supports.
Layer height	0.2 mm
Walls	3 to 4: you pull hard on this part
Infill	25 to 35 percent
Material	PETG. PLA, ABS and ASA work too. Never a flexible filament: the tool has to stay stiff.

The picture shows nine one-sided pullers printed this way, in three sizes, all flat on the bed.



Nine one-sided pullers in three sizes printed flat on the printer bed, the pocket side up, no supports.

What to buy


Nothing to solder and almost nothing to buy: filament, zip ties, and a strap if you want one. For the one-sided puller you need two zip ties up to 4.8 mm wide (about 200 mm long), or one hook-and-loop strap 10 to 25 mm wide. The filament each tool uses, and the strap widths that fit, are in the bill of materials.

Assemble


The tool goes onto the plug while the plug is in the outlet. You need two zip ties, or a strap; the sizes are in the bill of materials.

1. Seat the tool on the plugged-in plug: the plug sits in the pocket, and the notch at the plug end straddles the outlet cover.
2. Press the cord into the hook at the cord end so it cannot slip out.
3. Push the first zip tie down through one of the zip-tie holes beside the pocket.
4. Pass the tie around the plug body and up through the hole on the other side of the pocket.
5. Pull the tie tight and cut off the tail.
6. Fit the second zip tie through the other pair of holes the same way.
7. Instead of the ties, or as well: thread the strap through the two wing openings and around the plug, and close it.


The tool can stay on the plug between uses. The pictures below show the finished one-sided puller strapped to a lamp plug at Small, Medium and Large, next to a printed hand for scale.

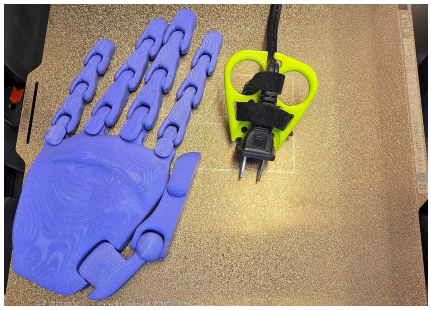

The one-sided puller at Small size strapped to a black two-prong lamp plug, on the printer bed beside a printed hand model for scale.

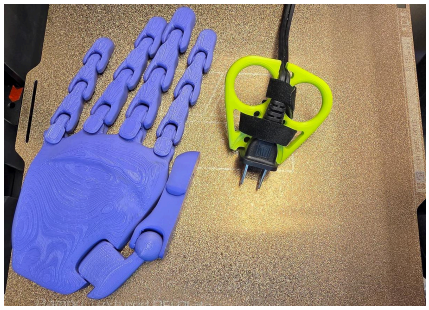

The one-sided puller at Medium size strapped to a black two-prong lamp plug, beside a printed hand model for scale.

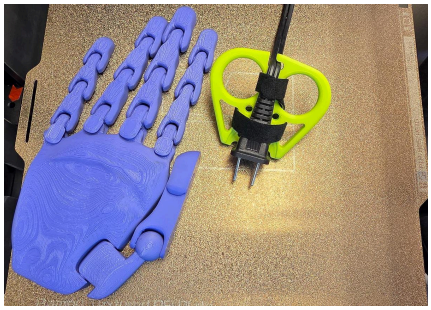

The one-sided puller at Large size strapped to a black two-prong lamp plug, beside a printed hand model for scale.

Use it

The plug puller is for anyone who cannot grip a plug and pull it out of an outlet: arthritis, low grip strength, tremor, a small hand, one hand. Two finger holes take the pull, so your whole hand does the work instead of a fingertip pinch. The tool touches only the plug's sides and back, never the outlet.

1. Seat the tool on the plug while the plug is in the outlet: the plug in the pocket, the notch at the plug end over the outlet cover.
2. Press the cord into the hook at the cord end.
3. Put two fingers through the holes.
4. Pull straight back, away from the wall.

The tool can stay strapped to the plug between uses.

Safety

- Nothing goes between the plug face and the outlet cover: the tool grips only the plug's sides and back.
- Pull straight out. Never lever the tool sideways or up and down.
- Do not use the tool on a damaged cord, a cracked plug, or a plug that is warm to the touch.
- Keep your fingers away from the prongs as the plug comes out.
- The tool has no conductive parts, but it is still plastic near electricity: if it cracks, stop using it.

Care

- Before each use, look at the finger holes and the places the zip ties or the strap pass through for cracks. A cracked tool is replaced, not repaired.
- Replace a zip tie that has loosened.
- Wash with soap and warm water. No solvents: they attack PETG and PLA.
- Keep it out of direct sun and off heaters; the plastic softens when hot.

If the print does not fit

Printed your tool and something is not quite right? Find your symptom below. Every fix names one measurement to change and by how much. Change it in the Customizer, render and export again, and reprint. You never need to touch anything below the four Steps.

> Nudge in small steps, 0.5 to 2 mm. Looser always beats tighter: a slightly roomy tool still works, a tight one does not.

#	Symptom	Change this	By how much
1	The plug body rubs the sides of the notch, or will not slide in	Plug width at the prong end	+1 mm
2	The plug falls out of the notch or rattles side to side	Plug width at the prong end	−0.5 mm
3	The plug will not seat down into the pocket	Plug length	+2 mm
4	The plug seats, but the tool overhangs the plug by a lot	Plug length	−2 mm
5	The plug sits proud of the pocket, or the tool rocks on top of it	Plug thickness, at the end that measured fatter	+2 mm
6	The pocket walls pinch the plug's cord end, or gape at it	Plug width at the cord end	+1 mm if it pinches, −1 mm if it gapes
7	The hook will not take the cord, or the cord has to be forced in	Cord thickness	+0.5 mm
8	The cord slips out of the hook while pulling	Cord thickness	−0.5 mm
9	The tool will not sit flat against the wall; the outlet cover pushes it away	Outlet cover plate style	the next bigger style: Standard flat plate, then Rocker / Decora, then Oversized / Jumbo
10	Fingers pinch in the holes, or a knuckle drags on the rim	Hand size up one step, or Measure my hand with the finger width	+1 mm
11	Fingers swim in the holes and the pull feels sloppy	Hand size down one step, or Measure my hand with the finger width	−1 mm
12	The tool's edges dig into your palm, or it feels too wide	Hand size down one step, or Measure my hand with the hand width	−5 mm
13	The tool feels too small in the hand; fingers crowd the edges	Hand size up one step, or Measure my hand with the hand width	+5 mm
14	The tool is too wide for a cramped outlet corner	Hand size down one step: the body follows the hand size	
15	The strap keeps sliding off the plug	Attachment: Zip ties + Velcro, and use both	

In every picture: black = the tool; teal = your plug; red dashed = the edges this dial moved; the numbers match the key beside the picture.

#	Symptom	Change this	By how much
16	A smooth round plug still slips out of the zip-tie hold	Thread a zip tie down one zip-tie hole, around the plug body, up the opposite hole, and cinch it	
17	The hook is on the wrong side for your hand	Step 4: Hook side, Left or Right	
18	The strap will not thread through the wing opening	Step 3: a smaller Strap width, or a narrower strap; the wing is sized to it	
19	A 3-prong plug slips out of the tool	The two-sided puller, a separate file: it holds 3-prong plugs from both sides	

In test prints of the presets, the one-sided puller held every 2-prong plug well, and 3-prong plugs slipped out of it, which is why they belong to the two-sided puller. The USB-C laptop tip preset is new in version 1.0.0 and has not been test-printed yet; its thickness is an estimate.

Red warning tags

If the preview shows red text, or a red text tag printed next to your part, the file found a problem before you wasted a full print. That is on purpose: a bad file fails loudly instead of silently. Read the tag, fix that measurement, and export again.

The tag says	What it means	What to do
`CHECK PLUG LENGTH MEASUREMENT (MM?)`, and the same for `PLUG WIDTH`, `PLUG THICKNESS`, `CORD THICKNESS`, `FINGER WIDTH`, `HAND WIDTH`	That number is outside any plausible mm value: usually inches typed into a mm field (1.25 instead of 32)	Measure again with the mm side of the ruler and type it again
`FINGER TOO BIG FOR HAND WIDTH - RECHECK BOTH`	Finger holes that wide cannot fit inside a body sized for that hand width	Measure both the finger width and the hand width again; one of them is off
`PLUG TOO WIDE FOR THIS DESIGN (MAX 38MM)`	The plug, at the prong end, is wider than the tool's end can open	The one-sided puller tops out near 38 mm of plug width; a plug that wide needs the two-sided puller
`PLUG THICKER THAN 24MM - USE THE TWO-SIDED PULLER FILE`	The plug is 24 mm thick or more at one end: too thick for this tool's pocket	Open the two-sided puller and fill in its Step 1; or measure the thickness again at both ends
`PLUG LONGER THAN POCKET LIMIT - POCKET SHORTENED`	The plug is longer than the pocket can be inside the 120 mm body, so the pocket stops short	Check the plug length; if it is real, print and try it
`PLUG WIDTH TAPER TOO STEEP - RECHECK BOTH WIDTHS`	The two widths describe a taper steeper than the pocket walls can follow	Measure the plug width at the prong end and at the cord end again; one of them is probably off
`CORD TOO THICK FOR HOOK SLOT`	The hook slot cannot open wide enough for that cord	Measure the cord's thin side again; a cord past about 9 mm does not fit the hook
`FINGER HOLES HIT PLUG POCKET`	Your finger and plug numbers make the holes collide with the plug pocket	Reduce the finger width slightly, or check the plug length again
`FINGER HOLES TOO CLOSE - WEAK BRIDGE`	The strip of plastic between the two holes is too thin to be strong	Reduce the finger width by 1 mm
`FINGER HOLES OUTSIDE BODY - INCREASE HAND WIDTH`	The holes for your fingers do not fit inside a body sized for your hand width	Increase the hand width, or measure both again
`PLUG TOO WIDE FOR TOOL END - CHECK PLUG WIDTH`	The notch came out wider than the tool's end itself	Measure the plug width again; it is probably too large
`PLUG SEAT OVERHANGS BODY - RECHECK PLUG WIDTH`, `PLUG POCKET OVERHANGS BODY - RECHECK PLUG WIDTH`	The plug pocket is wider than the tool body at that spot	Measure the plug width again, or go up a hand size so the body grows
`WING OPENING SMALLER THAN STRAP WIDTH`	The wing opening is too narrow to pass the strap you set	Lower the strap width (Step 3), or switch the strap opening style to Classic slot
`WING WEB COLLAPSED - NO ROOM FOR STRAP`	Features crowded the wing until no opening was left	Go up a hand size (a bigger body), or lower the strap width

The tag says	What it means	What to do
`ZIP TIE HOLES HIT FINGER HOLES`	A zip-tie row landed too close to a finger hole; Auto placement avoids this, Manual positions or auto-fit off can cause it	Move that zip-tie pair position, or turn Auto placement back on
`ZIP TIE ROWS OVERLAP EACH OTHER`	Two manual zip-tie rows landed on top of each other	Spread the zip-tie pair positions at least one hole diameter apart
`ZIP TIE HOLES HIT VELCRO SLOTS`	A zip-tie row broke into a classic strap slot	Move the zip-tie pair or the strap slot position apart
`SEAT HAS NO RECESS - PLUG WONT NEST`, `POCKET HAS NO RECESS - PLUG WONT NEST`	An internal geometry check; with measured numbers it should not happen	Measure every number again, following Measure your plug and your hand; if it persists, open an issue with your numbers
`SEAT FLOOR TOO THIN TO PRINT`, `POCKET FLOOR TOO THIN TO PRINT`	The same internal check, on the pocket floors	As above
`ZIP TIE GRID BELOW CORD END`, `ZIP TIE GRID OUTSIDE BODY`, anything else	The same internal check, on the zip-tie grid	As above
`FINGER HOLES OUTSIDE BODY`, `POCKET SEAT WIDER THAN TOP EDGE`, `POCKET WIDER THAN BODY`, `WALL NOTCH WIDER THAN TOP EDGE`	Custom size only: the Custom-mode wording of the checks above	Adjust that feature's Custom dials, or turn Auto-fit back on

Notes that show in the preview only

These never reach the exported file.

The note says	What it means	What to do
A green `Medium: …` or `MEASURED: …` tag	Not a warning: it confirms that your size and numbers were applied	Nothing
Orange `CUSTOM SLIDERS IGNORED - SET SIZE = CUSTOM`	A Custom dial was moved while a measured size is active; the console names each one	Set Step 2's hand size to Custom if you meant it, or leave the dial alone
Orange `AUTO-FIT ADJUSTED <n> VALUES - SEE CONSOLE`	Custom size with Auto-fit on: that many dials were clamped to keep the part printable	Read the console's `(clamped from …)` lines

Printing problems

Symptom	Cause	Fix
The slicer complains about floating or disconnected parts	You exported with a red warning tag showing; the tag is a separate object	Fix the named measurement first
Layers split at the pocket floor or around a hole	Under-extrusion, or too few walls	3 to 4 walls and 25 percent infill or more
The tool snapped while pulling	A brittle material, or walls too thin	Reprint in PETG with 4 walls

Advanced settings

Everything below Step 4 in the Customizer is optional. The **Advanced** sections hold placement dials that work with your measured sizes and apply in every hand size. The sections marked **(Custom size only)** are for experts: they do nothing until Step 2's hand size is Custom, and then they replace the measurements entirely. Every one of these dials is described, with a picture, earlier in this guide.

The plug side rail

One idea powers the one-sided puller's advanced dials: a line that runs down the plug's side, starting at the pocket edge on the plug face and sloping by the plug's taper. The taper comes from the two widths in Step 1 over the plug length (in Custom size, the pocket side taper dial sets it directly): a plug that is wider at the cord end gives a negative angle, and the pocket walls widen toward the cord. The pocket walls, the zip-tie holes and the manual strap slots all hang off this line, so their positions are measured in mm along the plug's side, from the plug face toward the cord, and the taper moves them together.

Zip-tie placement

- Zip-tie hole placement on Auto spaces the number of zip-tie rows you choose (1 to 3) along the rail, and moves them closer together rather than letting a row punch into the finger holes.
- Manual places each pair with its own position dial, in mm along the rail. Manual positions are not protected from collisions: the red tags `ZIP TIE HOLES HIT FINGER HOLES`, `ZIP TIE ROWS OVERLAP EACH OTHER` and `ZIP TIE HOLES HIT VELCRO SLOTS` fire if you overlap something.
- The zip-tie hole distance from the pocket wall slides the whole column toward or away from the pocket.

Strap slot placement

Strap slot placement on Manual slides a pair of classic slots along the rail with the strap slot position dial. The Wing style ignores manual placement, because its opening comes from the body's spare space; switch the strap opening style to Classic slot in Step 3 to use it.

Custom size

Set Step 2's hand size to **Custom** and the measurements switch off: every dial in the **(Custom size only)** sections drives the geometry directly, the body shape, the pocket, the finger holes, the cord hook, the notch, the zip-tie grid, the strap openings and the edge rounding. The Step 3 and Step 4 choices still apply.

- **Reset Custom to the Medium reference**: render once with this on to snap everything back to the Medium reference shape, a known-good starting point, then turn it off and change what you want.
- **Auto-fit**, on by default, clamps every dial so that features stay inside the body with printable walls; each clamp is written to the console as `(clamped from …)` and the preview shows the note `AUTO-FIT ADJUSTED N VALUES`. Off, the dials are taken as typed and the red warning tags are your only guard rail.

The full list of dials with their ranges, steps and defaults is the machine-readable file `parameter_mapping.json`, checked against the model by the project's tests.

Guard rails

The model never silently changes your input beyond what Auto-fit reports. Anything truly wrong prints a red warning tag flat on the bed beside the part, so an exported file shows its own defect, and writes the same message to the console. The see-through plug, the green confirmation tag and the orange notes appear in the preview only and are never exported.

Saved settings

The Customizer panel has a preset bar above the sections: the **+** button saves your current values as a named set inside a JSON file next to the `.scad` file. The sets that ship with the project are in `presets/Plug_Puller_Parametric.json`. They are plain text: easy to keep, compare and share.

The command line

Every dial can be set from the command line, which makes batches and A/B tests scriptable:

```
# A left-handed hook and the flat 2-prong lamp plug preset
openscad -o puller.stl --backend Manifold \
  -D 'plug_preset="Flat 2-prong lamp plug - NEMA 1-15"' -D 'hook_hand="Left"' \
  src/Plug_Puller_Parametric.scad

# A saved set of settings
openscad -o puller.stl -p presets/Plug_Puller_Parametric.json \
  -P "Left-handed + classic velcro slots" src/Plug_Puller_Parametric.scad
```

Going deeper

- The two-sided puller has its own quick start and full guide, in the folder beside this one.
- The design rationale: why each default is what it is, with its number and its source.
- The engineering reference: both tools' geometry, coordinate frames, the derivation layer, render modes, the console messages and every validation check.
- The dial pictures: every picture in this guide with its text alternative, and how the pictures are described.
- The bill of materials: zip ties, the strap, filament per tool.

Plug Puller — Plug size finder

Lay your plug flat on the outlines, prongs up. The closest outline names the preset to start with.


Print at 100 % (“Actual size”), never “fit to page”, and check the 50 mm square first.

2 prongs or a USB-C tip: the ONE-SIDED puller

Open Plug_Puller_One_Sided_SingleFile.scad
(desktop: src/Plug_Puller_Parametric.scad)

3 prongs: the TWO-SIDED puller

Open Plug_Puller_Two_Sided_SingleFile.scad
(desktop: src/Plug_Puller_Two_Sided.scad)

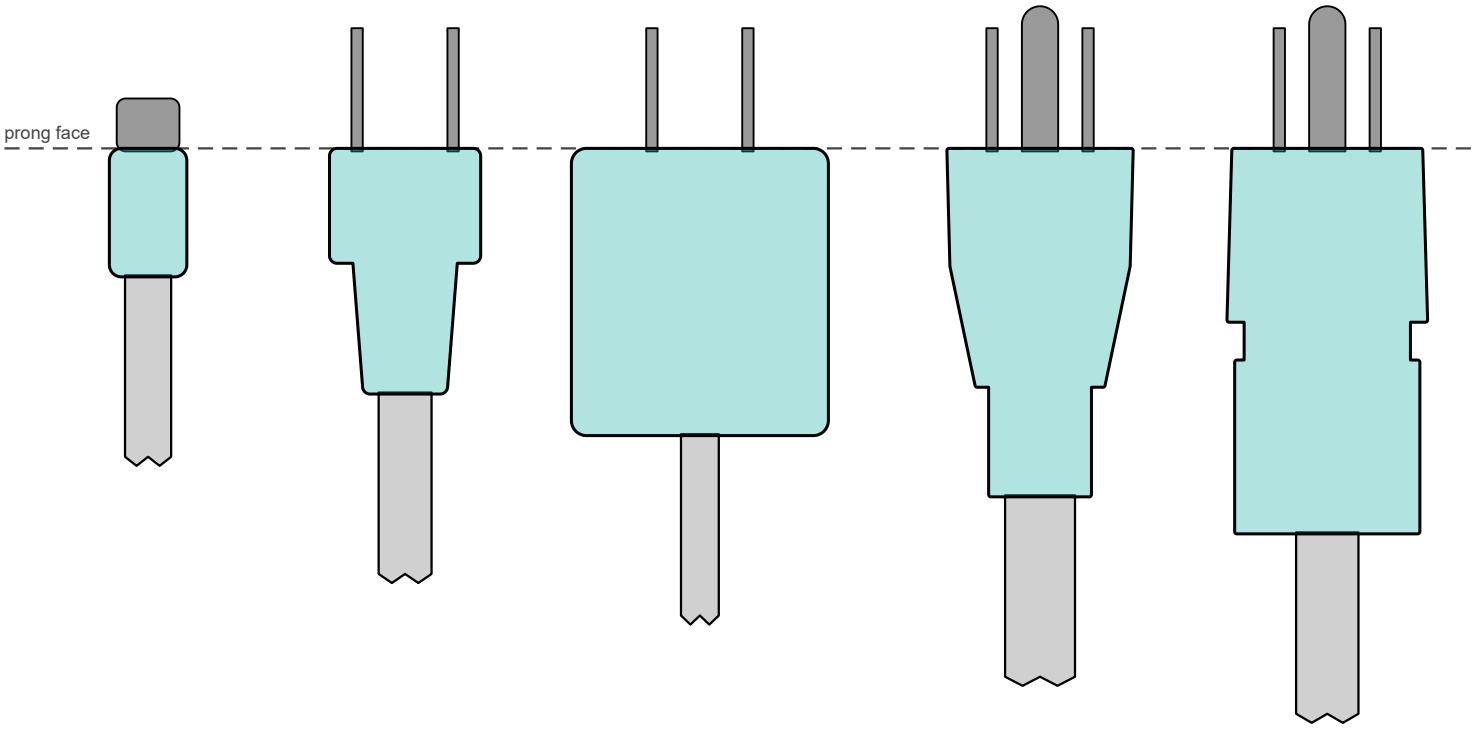

USB-C laptop tip
17 long, 10.25 wide
cord 6.1 (round)
one-sided puller

Flat 2-prong lamp plug - NEMA 1-15
32.5 long, 20 wide
cord 7 (flat, 3.6 thick)
one-sided puller

Wide 2-prong appliance plug - NEMA 1-15
38 long, 34 wide
cord 5 (round)
one-sided puller

Standard 3-prong plug - NEMA 5-15
46.1 long, 24.66 wide
cord 9.25 (round)
two-sided puller

Heavy-duty extension cord - NEMA 5-15
51 long, 26.56 wide
cord 8.25 (round)
two-sided puller

CALIBRATION

50 × 50 mm

Not 50 mm? Re-print at 100 %.

How to use this page

1. Measure the square with a ruler: it must be 50 × 50 mm.
2. Count your plug's prongs. 2 prongs or a USB-C tip: the left group. 3 prongs: the right group.
3. Lay the plug on its wide side, prongs up, the prong face on the dashed line. Slide it from outline to outline in its group.
4. The closest outline names the preset: open that tool's file and pick the preset in Step 1.
5. Between two outlines, or none close? Fill in the measuring form and type your own numbers instead.

Plug Puller — Measuring form, one-sided puller

Measure in mm. Fill in the blanks top to bottom, then type them into the Customizer in the same order.

Print at 100 % — 50 mm

Start here: which tool, which preset

☐ **2 prongs or USB-C tip: this form** ☐ 3 prongs: two-sided form

Closest outline on the plug size finder: _____

Found one? Tick it in row 1 and skip the plug numbers.

① `plug_preset`
Plug preset
☑ **Measure my plug** ☐ USB-C laptop tip
☐ Flat 2-prong lamp plug - NEMA 1-15
☐ Wide 2-prong appliance plug - NEMA 1-15

② `measure_plug_length`
Plug length
default 25.5 mm → _____ mm card R1

③ `measure_plug_width_prong_end`
Plug width at the prong end
default 25 mm → _____ mm card R1

④ `measure_plug_width_cord_end`
Plug width at the cord end
default 25 mm → _____ mm card R1

⑤ `measure_plug_thickness_prong_end`
Plug thickness at the prong end
default 20 mm → _____ mm card R1

⑥ `measure_plug_thickness_cord_end`
Plug thickness at the cord end
default 20 mm → _____ mm card R1

⑦ `measure_cord_thickness`
Cord thickness
default 4 mm → _____ mm card C1

⑧ `measure_wall_plate_style`
Outlet cover plate style
☑ **Standard flat plate** ☐ Rocker / Decora
☐ Oversized / Jumbo ☐ No plate / flush

⑨ `show_plug_preview`
Show the see-through plug
☑ **leave on**

⑩ `size`
Hand size
☐ Small ☑ **Medium** ☐ Large ☐ Measure my hand
☐ Custom

⑪ `measure_finger_width`
Finger width
default 20 mm → _____ mm card F1 / F2


⑫ `measure_hand_width`
Hand width
default 85 mm → _____ mm card R1

⑬ `attachment`
Attachment
☐ Zip ties ☐ Velcro strap ☑ **Zip ties + Velcro**
☐ None

⑭ `velcro_style`
Strap opening style
☑ **Wing** ☐ Classic slot

⑮ `strap_width`
Strap width
default 15 mm → _____ mm

⑯ `hook_hand`
Hook side
☑ **Right** ☐ Left

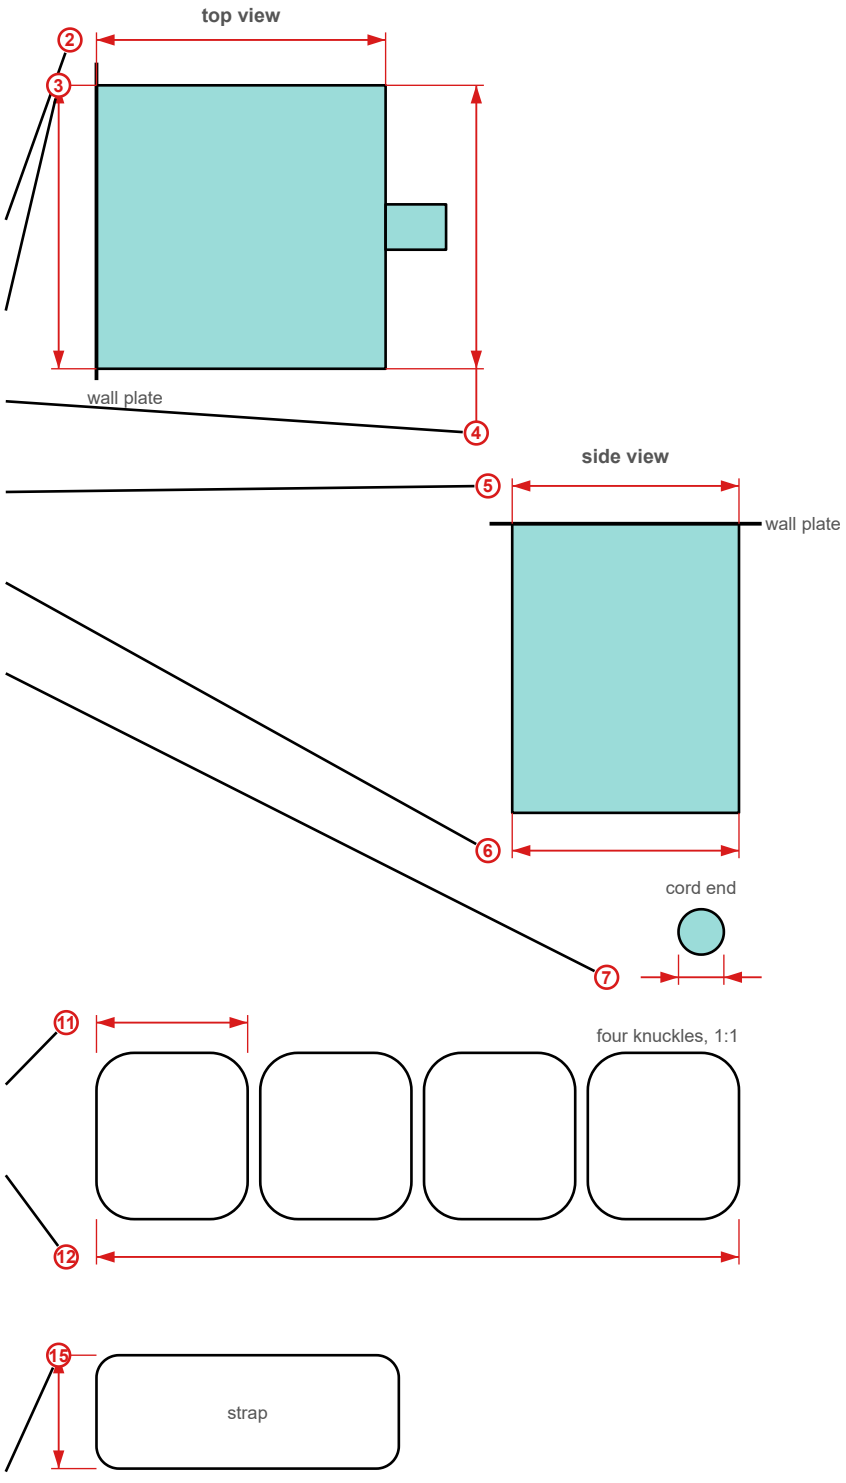

Plug Puller — Measuring Stencil Sheet


Print at 100% scale / “Actual size” — never “fit to page”. Check the calibration square before trusting anything on this sheet.

CALIBRATION
50 × 50 mm

1. Measure this square with a ruler.
It must be exactly 50 × 50 mm — if not, your print was scaled: re-print at 100%.

Plug outlines: the plug size finder page
Works on A4 and US Letter paper.

R1 — ruler (mm): plug length, widths, thicknesses, hand width



2. F1 / F2 — finger circles: smallest circle your middle finger passes through, minus 5 = finger width.

