




Samsung Galaxy S25 Edge Rear Cameras Replacement

Follow this guide to replace the rear cameras...

Written By: Spencer Day

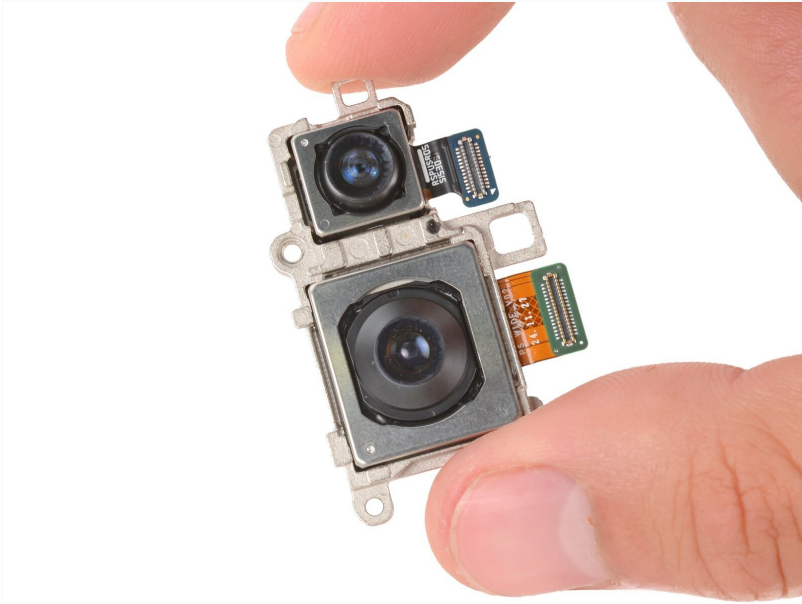

INTRODUCTION

Follow this guide to replace the rear cameras in your Samsung Galaxy S25 Edge smartphone.

If pictures and video from your rear cameras come out fuzzy, noisy, or your cameras have trouble focusing, they might need to be replaced.

You'll need replacement back cover adhesive to complete this repair.



TOOLS:

[iOpener](#) (1)
[Suction Handle](#) (1)
[iFixit Opening Picks \(Set of 6\)](#) (1)
[Phillips #00 Screwdriver](#) (1)
[Spudger](#) (1)
[Angled Tweezers](#) (1)
[Cotton Swabs](#) (1)
[Isopropyl Alcohol](#) (1)
[Coffee Filters or a lint-free cloth](#) (1)
[Hair Dryer](#) (1)



PARTS:

[Thermal Paste](#) (1)

Step 1 — Prepare your phone for disassembly



⚠ Let your phone's battery drain below 25% before starting this repair. A charged lithium-ion battery may catch fire if accidentally damaged.

- Completely power off your phone and unplug all cables.

Step 2 — Heat the bottom edge



- ① Mild adhesive secures the back cover. Heating it will soften the adhesive, making it easier to separate.
- [Heat an iOpener](#) and lay it on the bottom edge of the back cover for two minutes to soften the adhesive.
- ① Alternatively, you can use a [hair dryer](#), [heat gun](#), or hot plate to heat the cover.

Step 3 — Apply a suction handle



- Apply a suction handle near the center of the back cover's bottom edge, as close to the edge as possible.

Step 4 — Insert an opening pick



- Pull up on the suction handle with strong, steady force until a gap forms between the cover and frame.
- Insert the tip of an opening pick into the gap.

Step 5 — Adhesive information



- The back cover is secured with adhesive around the perimeter of the frame. Use this picture as a reference while you separate the adhesive.
⚠ When separating the left and right edge adhesive, don't insert your pick more than 3 mm to avoid damaging the wireless charging coil and interconnect cable.

Step 6 — Separate the adhesive



- ① If you have trouble separating the adhesive, apply more heat and try again.
- Slide your opening pick along the bottom edge to separate the adhesive securing the back cover.


Step 7



- Continue sliding your pick around the entire perimeter of the back cover to separate all the remaining adhesive.

⚠ Remember not to insert your pick too far under the long left and right edges.

Step 8 — Remove the back cover

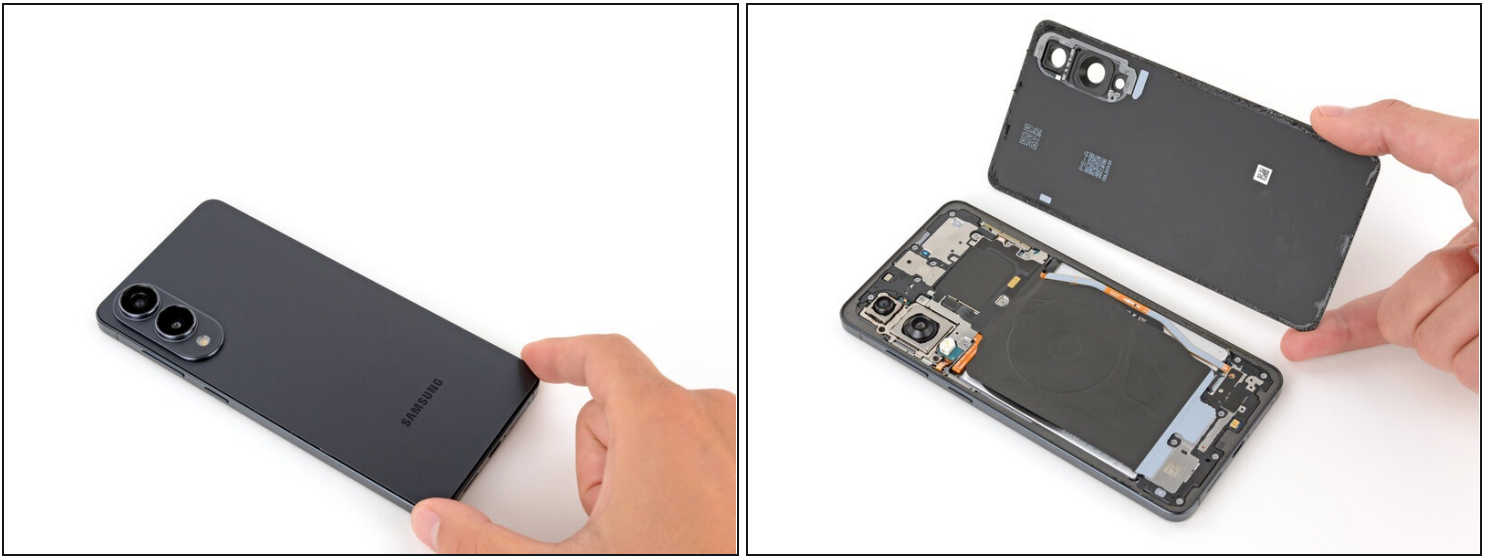


- Remove the back cover.
 - ⓘ If you're having trouble, check the perimeter for any remaining adhesive and use your opening pick to separate it.
- ★ During reassembly:
 - This is a good point to power on your phone and test all functions before sealing it up. Be sure to power your phone back down completely before you continue working.
 - Check your rear cameras for any smudges and gently wipe them with a clean lint-free cloth if necessary.
 - Your replacement back cover adhesive will be applied to either the frame or the back cover. Use cutouts and contours to see where it lines up best. If it matches the back cover, follow [this guide](#). If it matches the frame, use [this guide](#).

Step 9 — Disconnect the wireless charging assembly



- Use the point of a spudger to pry up and disconnect the wireless charging assembly [press connector](#) from its top edge.
 - ① Getting the spudger under the connector can be tricky. If you're having trouble, try using the [tip of an opening pick](#) instead.

Step 10 — Remove the wireless charging and loudspeaker assembly screws

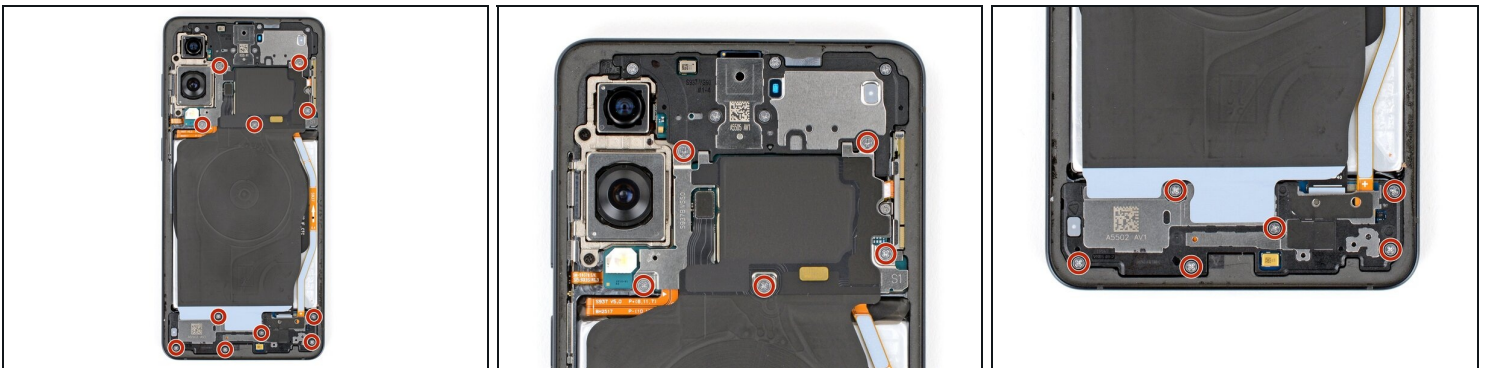


- ① Throughout this repair, [keep track of each screw](#) and make sure it goes back exactly where it came from.
- Use a Phillips screwdriver to remove the eleven 2.8 mm-long screws securing the wireless charging and loudspeaker assembly.

Step 11 — Pry up the loudspeaker




- ⓘ The wireless charging coil is connected to the loudspeaker with delicate tape. It's easiest to remove the coil and loudspeaker together as one assembly to avoid damage.
- Use angled tweezers to pry up and unclip the loudspeaker by the [notch on its left edge](#).
- ☑ During reassembly, press down firmly around the perimeter of the loudspeaker to engage its clips.

Step 12 — Remove the wireless charging assembly

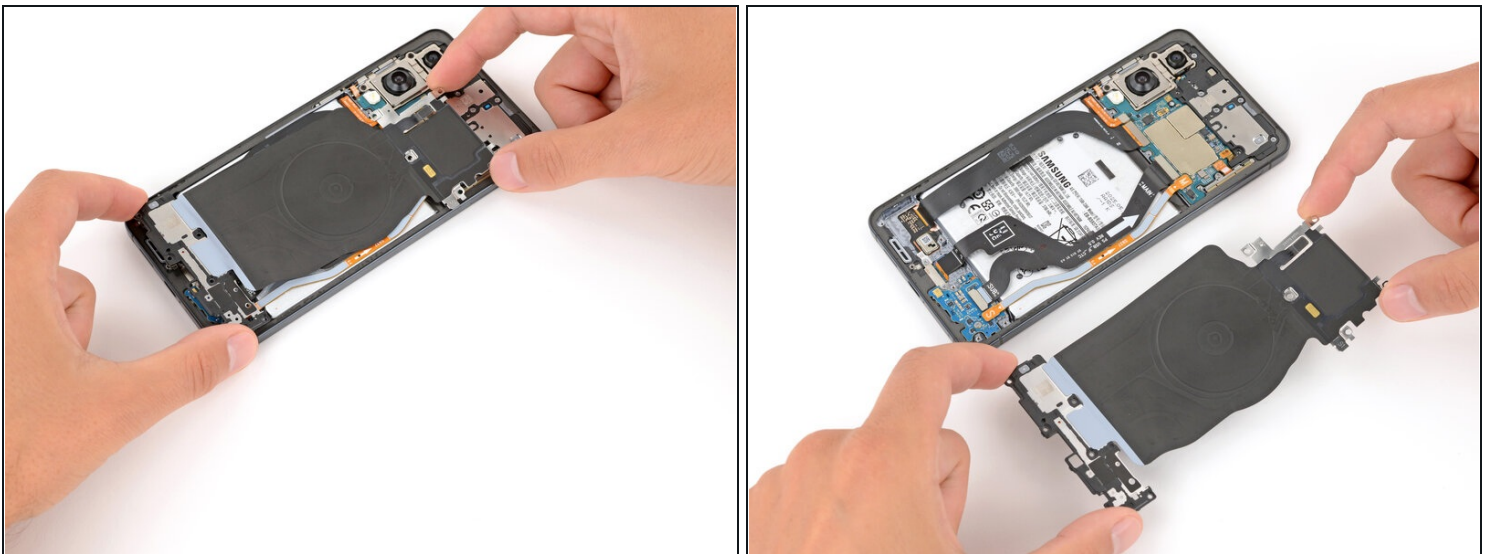

- Use two hands to lift and remove the wireless charging and loudspeaker assembly.


Step 13 — Disconnect the battery

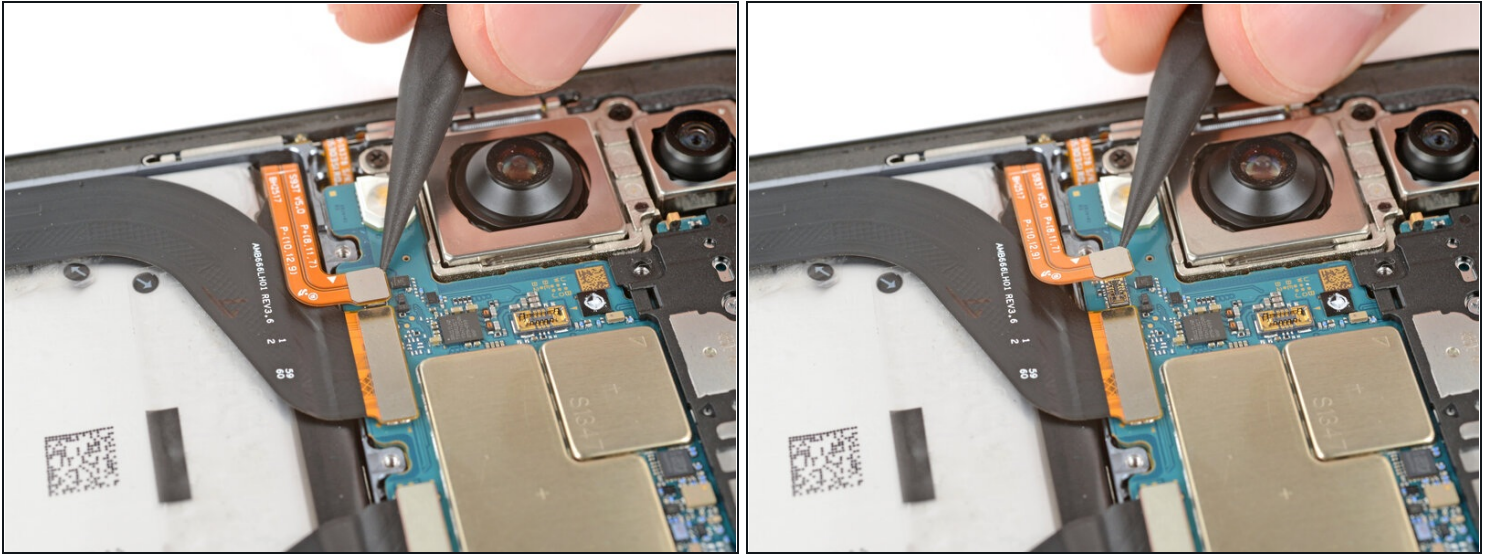

❶ Every [press connector](#) has a corresponding [gold arrow](#) on the board that shows the proper location to pry—nifty! Prying at the wrong location risks damaging the fragile surface-mounted components on the board.



- Use the point of a spudger to pry up and disconnect the battery press connector.

Step 14 — Disconnect the earpiece speaker

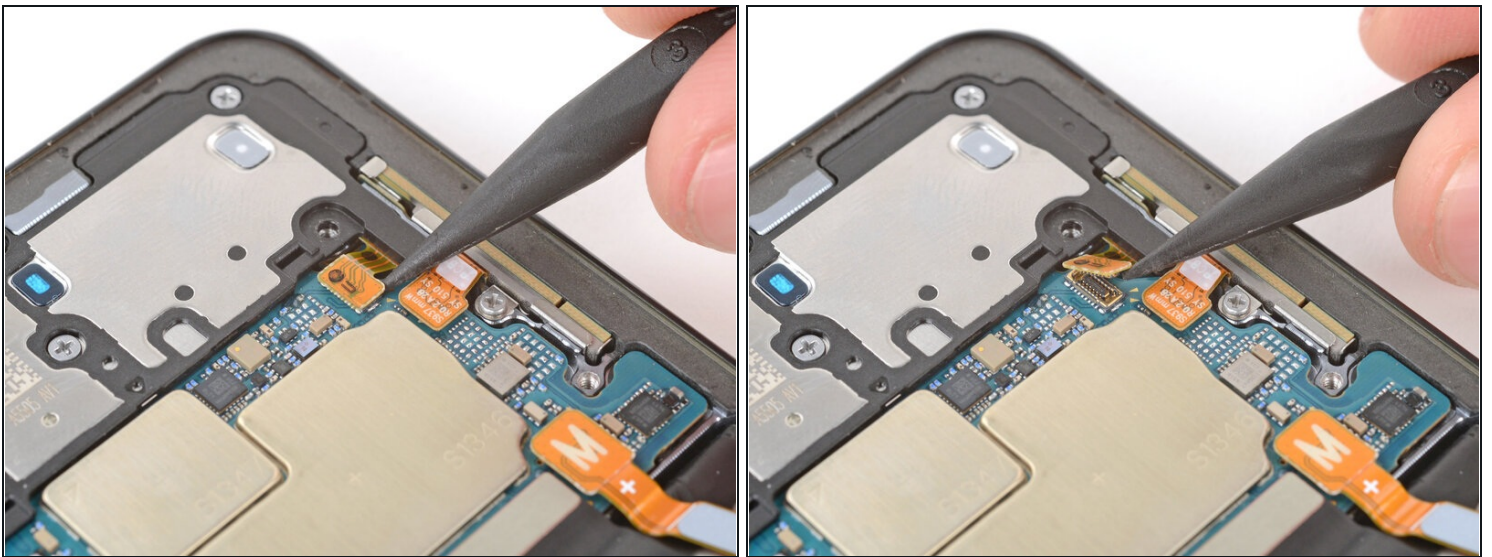



- Use the point of a spudger to pry up and disconnect the earpiece speaker press connector.

Step 15 — Remove the earpiece speaker screws

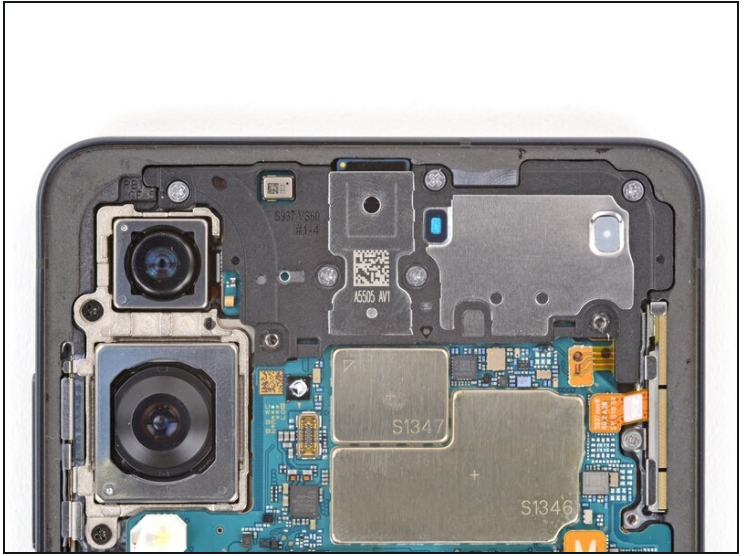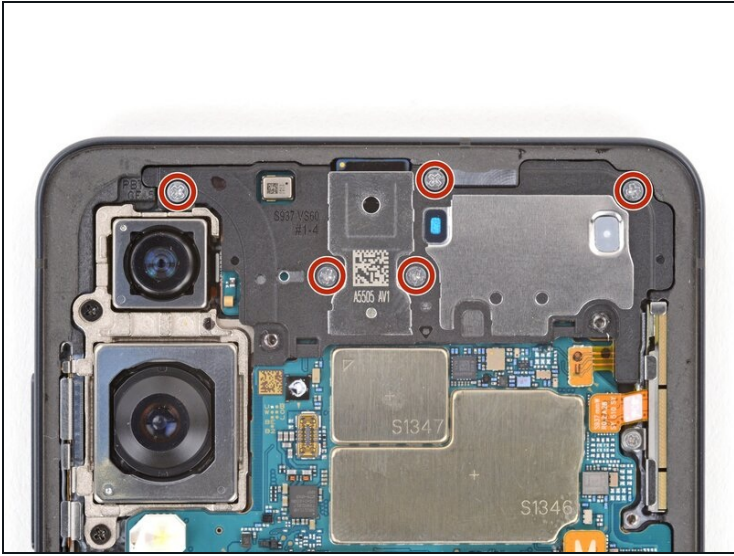

- Use a Phillips screwdriver to remove the five 2.8 mm-long screws securing the earpiece speaker.

Step 16 — Pry up the earpiece speaker

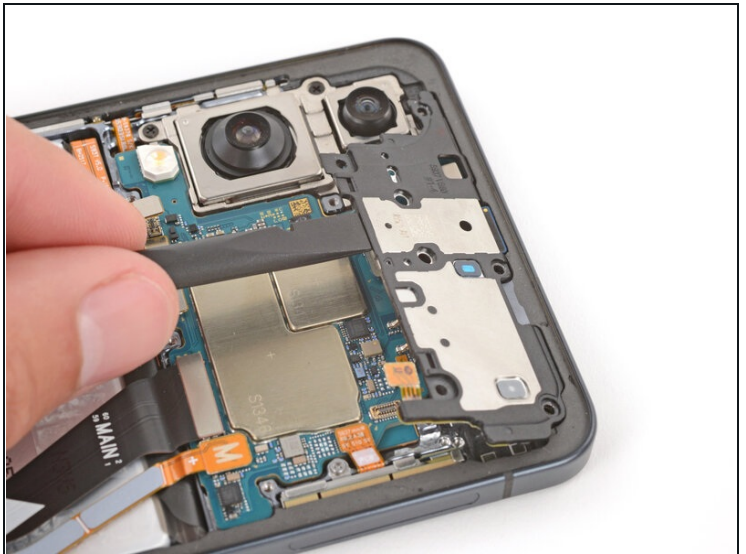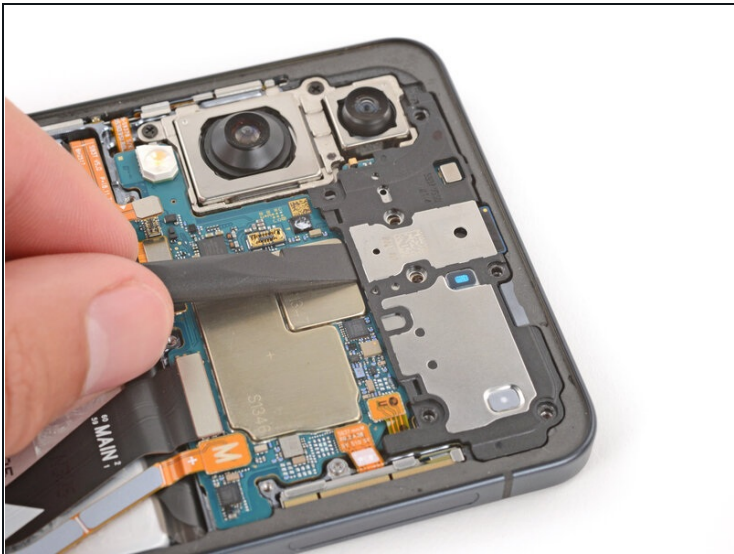


- Use the flat end of a spudger to pry up and unclip the earpiece speaker from the center of its bottom edge.
- ☑ During reassembly, press down firmly around the perimeter of the earpiece speaker to engage its clips.

Step 17 — Remove the earpiece speaker




- Lift and remove the earpiece speaker.

Step 18 — Disconnect the logic board

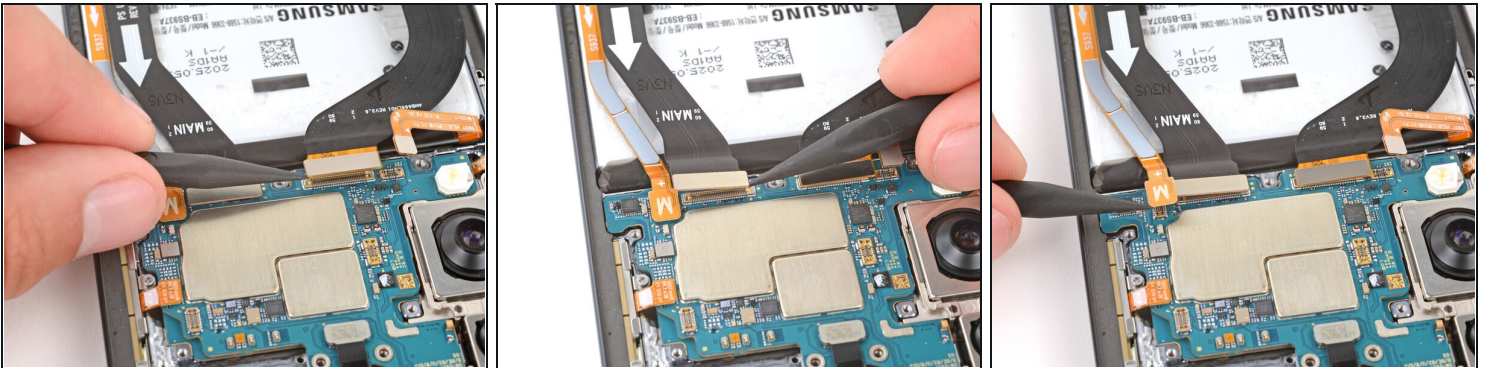


- Use the point of a spudger to pry up and disconnect the screen, USB-C, and interconnect cable press connectors (three total) from the logic board.

Step 19

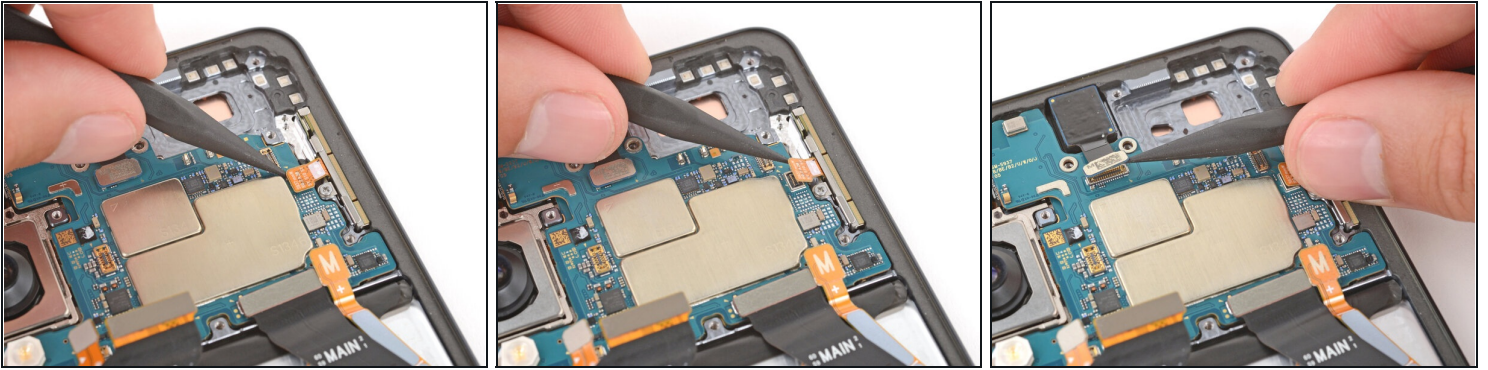


- Use the point of a spudger to pry up and disconnect the 5G mmWave antenna and front camera press connectors.

Step 20 — Remove the rear camera screws

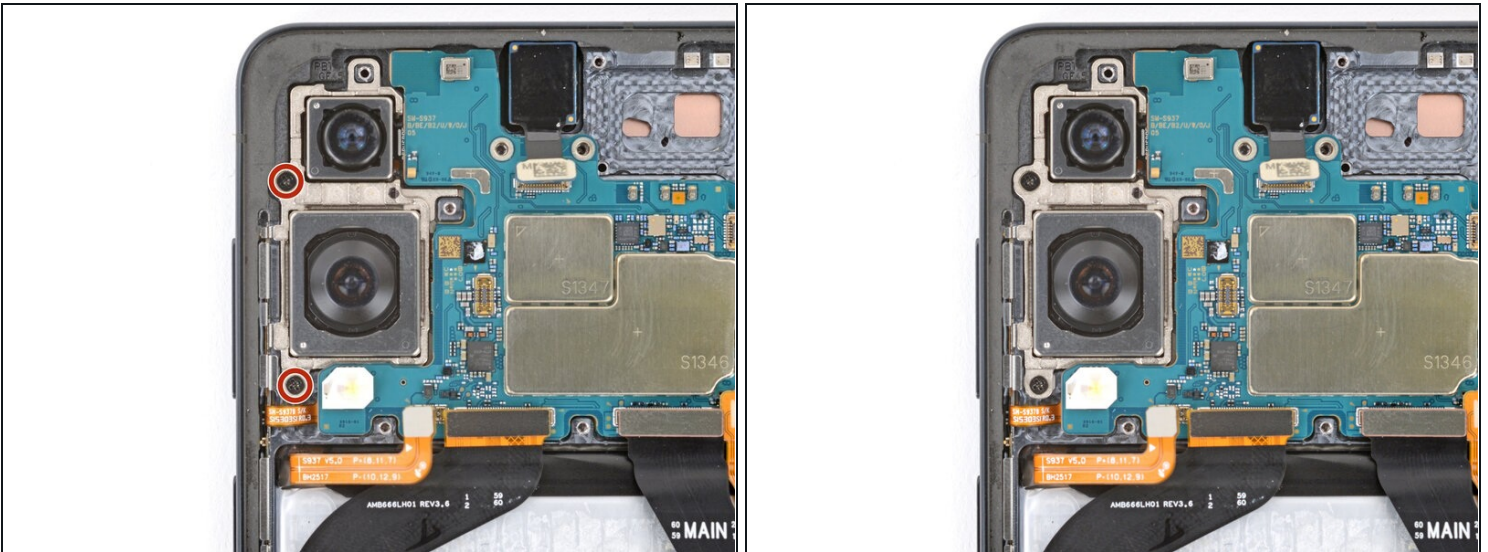


- Use a Phillips screwdriver to remove the two 2.8 mm-long screws securing the rear cameras.

Step 21 — Remove the logic board

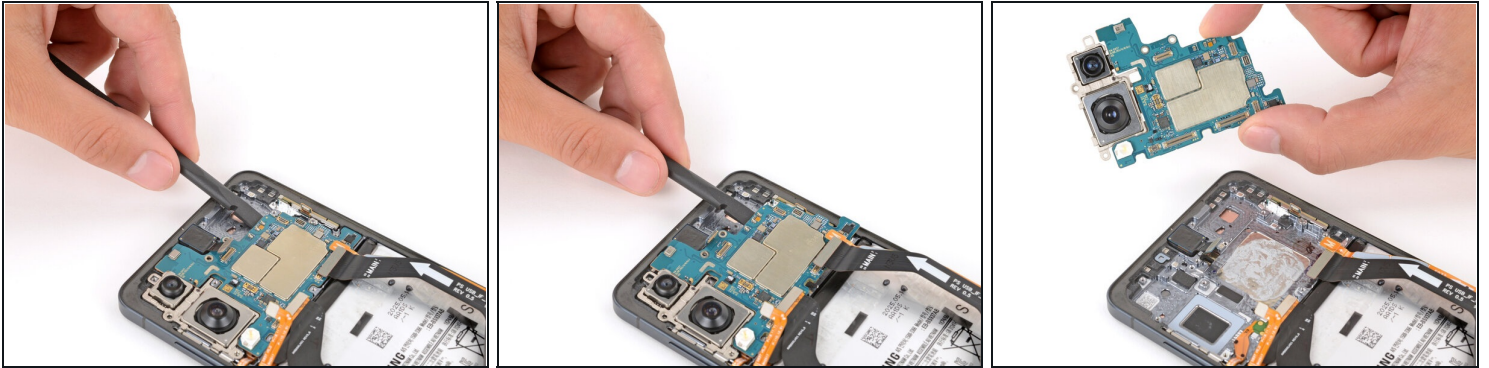


- Use the flat end of a spudger to lift the top edge of the logic board until you can grip the edges with your fingers.
- Grip the edges of the board and carefully lift it out, making sure not to snag any cables.
⚠ Don't grip the board by the rear cameras, or you may smear or damage them.
- ☑ During reassembly, make sure no cables get stuck under the logic board when lowering it into place. You can use a spudger to hold the cables out of the way.

Step 22 — Disconnect the rear cameras

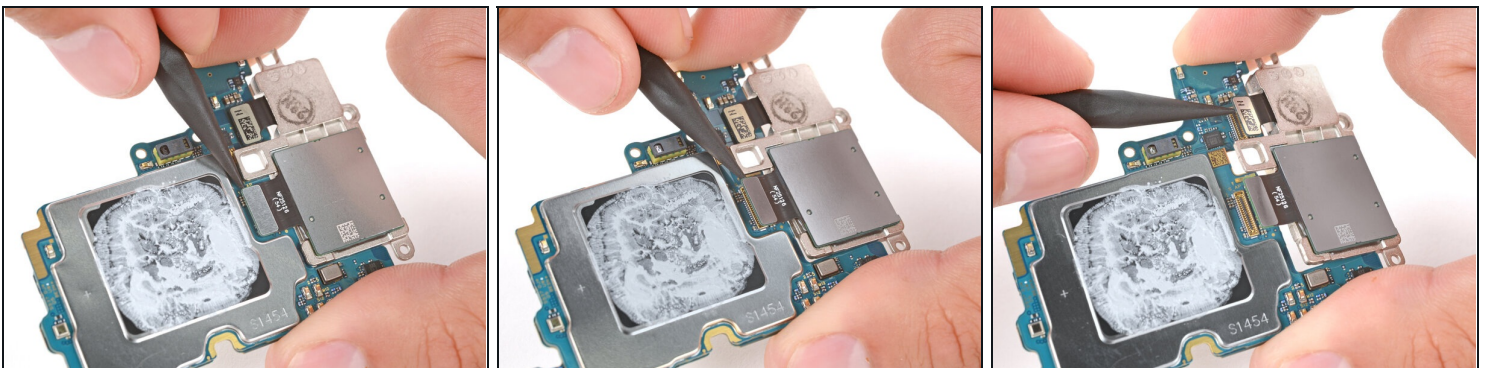



- Hold the logic board slightly above your work surface while working on the cameras—don't press the board against your work surface, or you may damage fragile components.
- Use the point of a spudger to pry up and disconnect both rear camera press connectors.

Step 23 — Remove the rear cameras

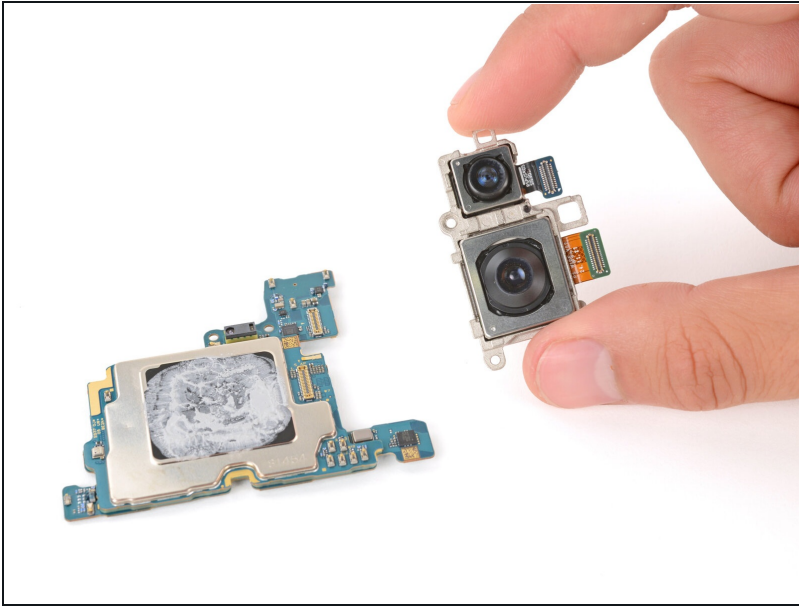

- Remove the rear cameras from the logic board.
- ① Depending on your repair, either one or both components are available to replace.
- ★ During reassembly, compare your replacement part to the original. You may need to remove plastic liners, adhesive backings, or protective covers.


Step 24 — Remove the old thermal paste

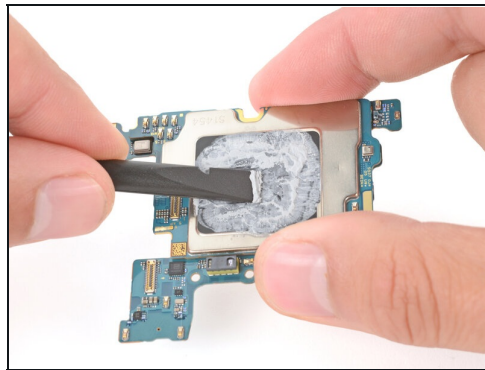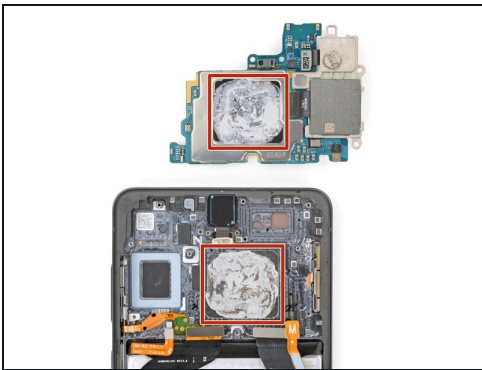

⚠ The thermal paste sits on fragile surfaces—delicate film on the logic board, and the vapor chamber in the frame. Work gently with minimal pressure, and don't worry if you can't remove every last bit of the paste.


- Use the flat end of a spudger to ***gently*** remove chunks of thermal paste from both the logic board and the frame.

Step 25

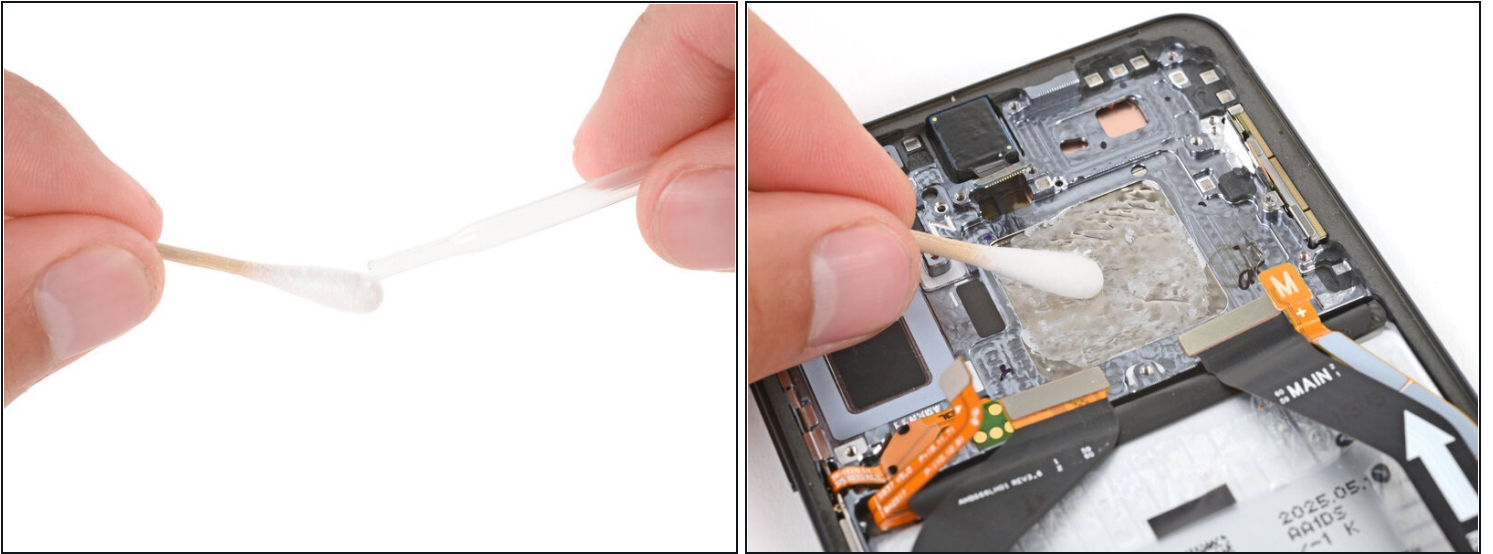

- ⓘ Only clean the frame during this step—don't try to clean the logic board with alcohol, or you risk damaging the film.
- Apply one or two drops of high-concentration (>90%) isopropyl alcohol to a cotton swab.
 - ⚠ Don't apply isopropyl alcohol directly to the phone, or it may leak onto the screen.
- Use the cotton swab to clean up and remove the remaining thermal paste from the vapor chamber, applying more alcohol to the swab as necessary.

Step 26 — Apply new thermal paste

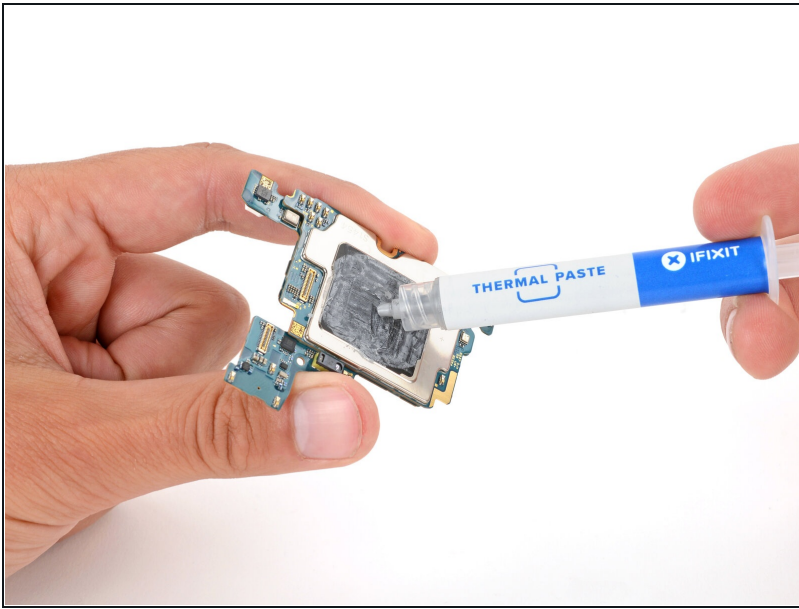

⚠ Remember, the film on the bottom of the logic board is fragile—avoid touching it.

- Carefully apply a small bead of thermal paste (about the size of a grain of rice) to the center of the black film on the bottom of the logic board.

Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before you install it.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers Community](#) for troubleshooting help.