




Samsung Galaxy S25 Edge USB-C Port Replacement

Follow this guide to replace the USB-C port in...

Written By: Spencer Day

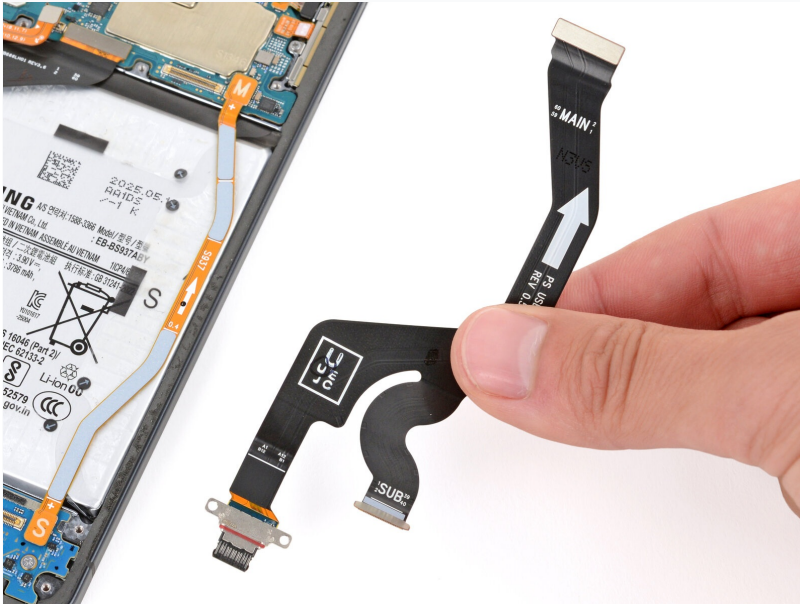

INTRODUCTION

Follow this guide to replace the USB-C port in your Samsung Galaxy S25 Edge smartphone.

If your device isn't charging properly, disconnects unexpectedly, or your USB-C cable feels loose when plugged in, you may need to replace the USB-C port.

Before starting this repair, try [cleaning the port](#) and see if it fixes your problem.

You'll need replacement back cover adhesive to complete this repair.

TOOLS:

[iOpener](#) (1)

[Suction Handle](#) (1)

[iFixit Opening Picks \(Set of 6\)](#) (1)


[Spudger](#) (1)

[Phillips #00 Screwdriver](#) (1)

[Angled Tweezers](#) (1)

[Hair Dryer](#) (1)

Step 1 — Prepare your phone for disassembly

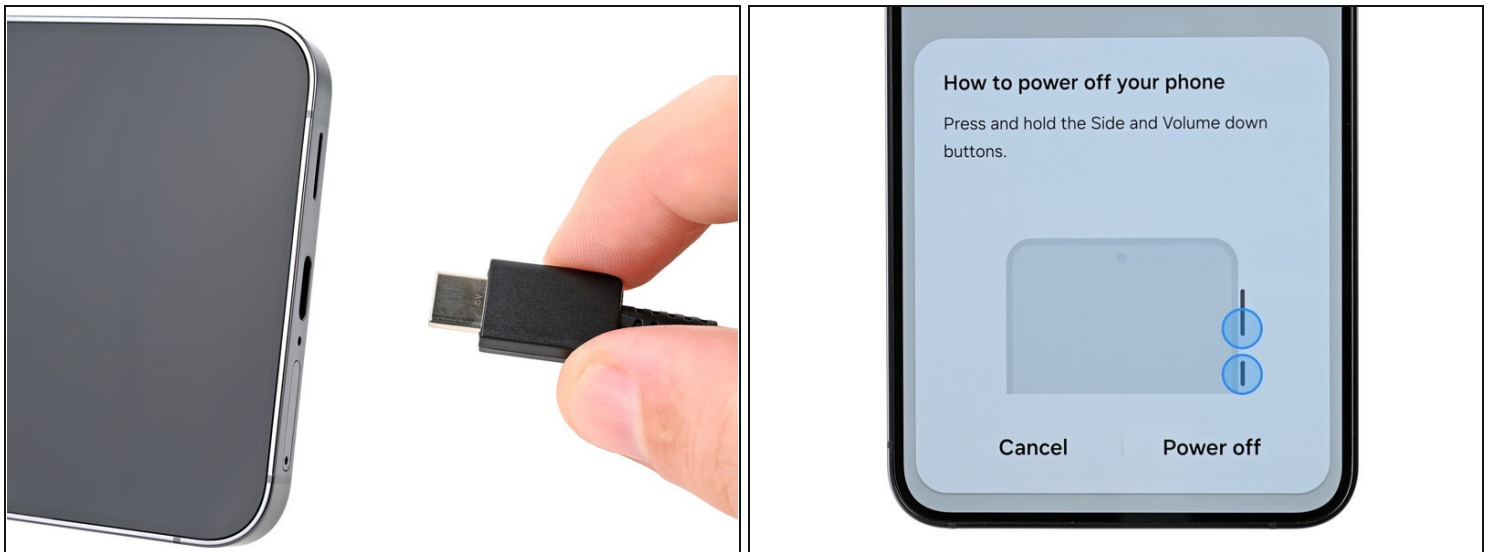

⚠ Let your phone's battery drain below 25% before starting this repair. A charged lithium-ion battery may catch fire if accidentally damaged.

- Completely power off your phone and unplug all cables.

Step 2 — Heat the bottom edge



- ❗ Mild adhesive secures the back cover. Heating it will soften the adhesive, making it easier to separate.
- [Heat an iOpener](#) and lay it on the bottom edge of the back cover for two minutes to soften the adhesive.
- ❗ Alternatively, you can use a [hair dryer](#), [heat gun](#), or hot plate to heat the cover.

Step 3 — Apply a suction handle



- Apply a suction handle near the center of the back cover's bottom edge, as close to the edge as possible.

Step 4 — Insert an opening pick



- Pull up on the suction handle with strong, steady force until a gap forms between the cover and frame.
- Insert the tip of an opening pick into the gap.

Step 5 — Adhesive information



- The back cover is secured with adhesive around the perimeter of the frame. Use this picture as a reference while you separate the adhesive.
⚠ When separating the left and right edge adhesive, don't insert your pick more than 3 mm to avoid damaging the wireless charging coil and interconnect cable.

Step 6 — Separate the adhesive



ⓘ If you have trouble separating the adhesive, apply more heat and try again.

- Slide your opening pick along the bottom edge to separate the adhesive securing the back cover.


Step 7



- Continue sliding your pick around the entire perimeter of the back cover to separate all the remaining adhesive.

⚠ Remember not to insert your pick too far under the long left and right edges.

Step 8 — Remove the back cover

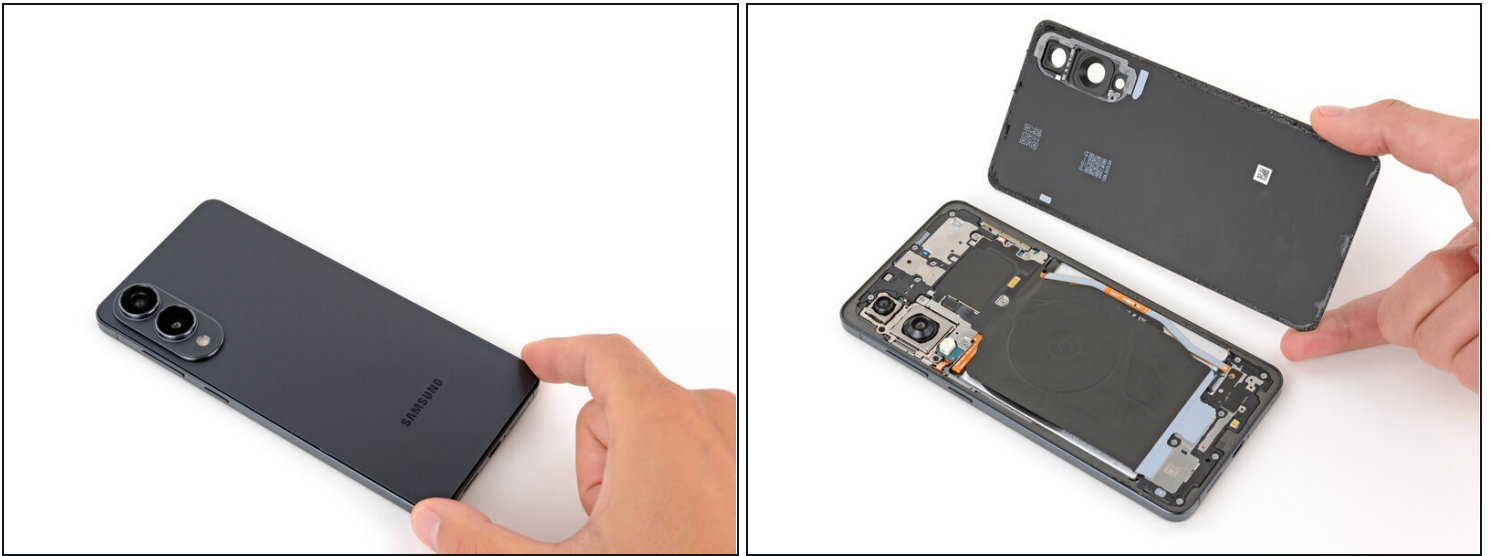


- Remove the back cover.
 - ⓘ If you're having trouble, check the perimeter for any remaining adhesive and use your opening pick to separate it.
- ★ During reassembly:
 - This is a good point to power on your phone and test all functions before sealing it up. Be sure to power your phone back down completely before you continue working.
 - Check your rear cameras for any smudges and gently wipe them with a clean lint-free cloth if necessary.
 - Your replacement back cover adhesive will be applied to either the frame or the back cover. Use cutouts and contours to see where it lines up best. If it matches the back cover, follow [this guide](#). If it matches the frame, use [this guide](#).

Step 9 — Disconnect the wireless charging assembly



- Use the point of a spudger to pry up and disconnect the wireless charging assembly [press connector](#) from its top edge.
 - ① Getting the spudger under the connector can be tricky. If you're having trouble, try using the [tip of an opening pick](#) instead.

Step 10 — Remove the wireless charging and loudspeaker assembly screws

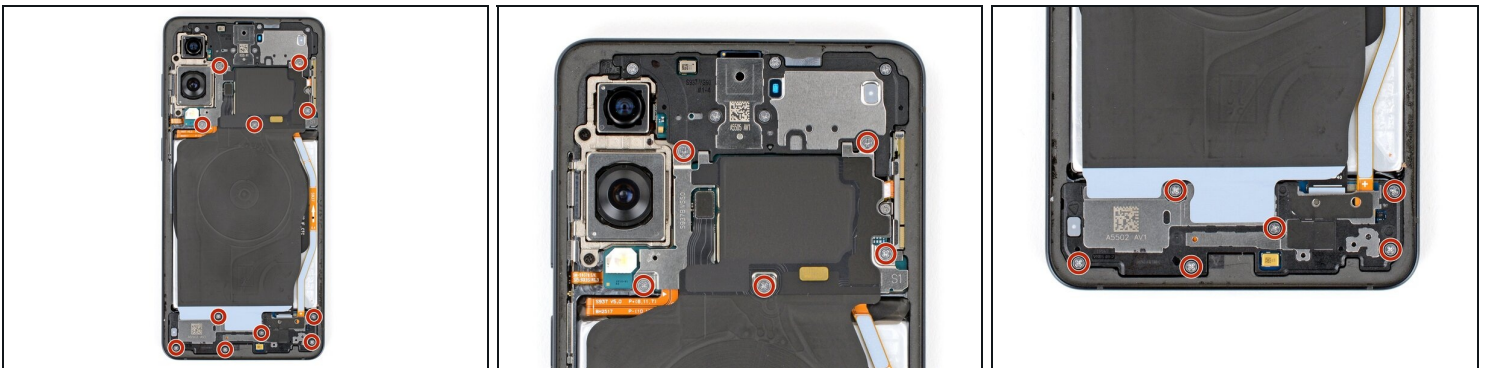


- ① Throughout this repair, [keep track of each screw](#) and make sure it goes back exactly where it came from.
- Use a Phillips screwdriver to remove the eleven 2.8 mm-long screws securing the wireless charging and loudspeaker assembly.

Step 11 — Pry up the loudspeaker




- ⓘ The wireless charging coil is connected to the loudspeaker with delicate tape. It's easiest to remove the coil and loudspeaker together as one assembly to avoid damage.
- Use angled tweezers to pry up and unclip the loudspeaker by the [notch on its left edge](#).
- ☑ During reassembly, press down firmly around the perimeter of the loudspeaker to engage its clips.

Step 12 — Remove the wireless charging assembly

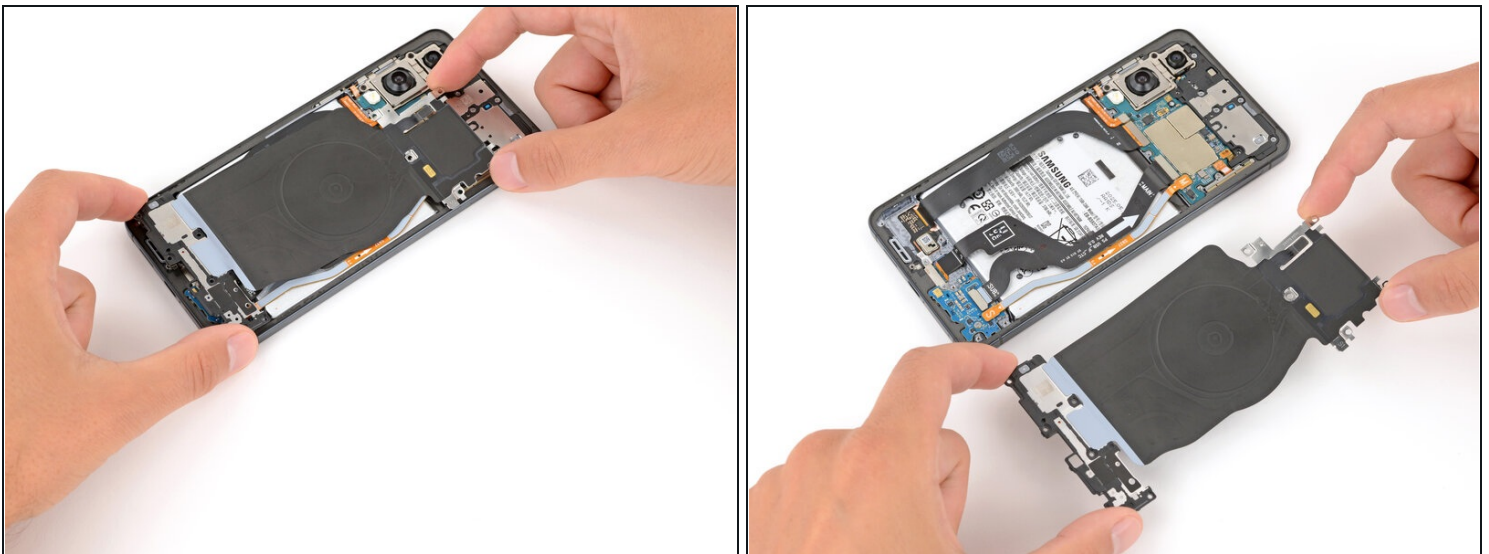

- Use two hands to lift and remove the wireless charging and loudspeaker assembly.


Step 13 — Disconnect the battery

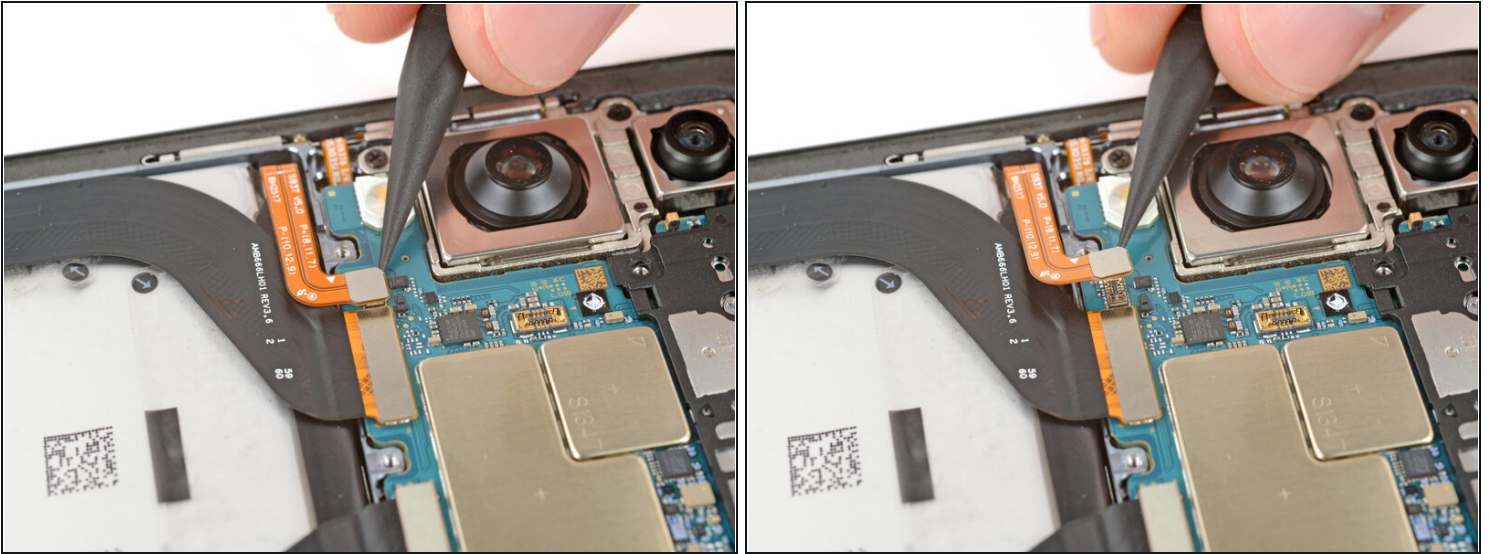

① Every [press connector](#) has a corresponding [gold arrow](#) on the board that shows the proper location to pry—nifty! Prying at the wrong location risks damaging the fragile surface-mounted components on the board.


- Use the point of a spudger to pry up and disconnect the battery press connector.

Step 14 — Disconnect the USB-C port cable

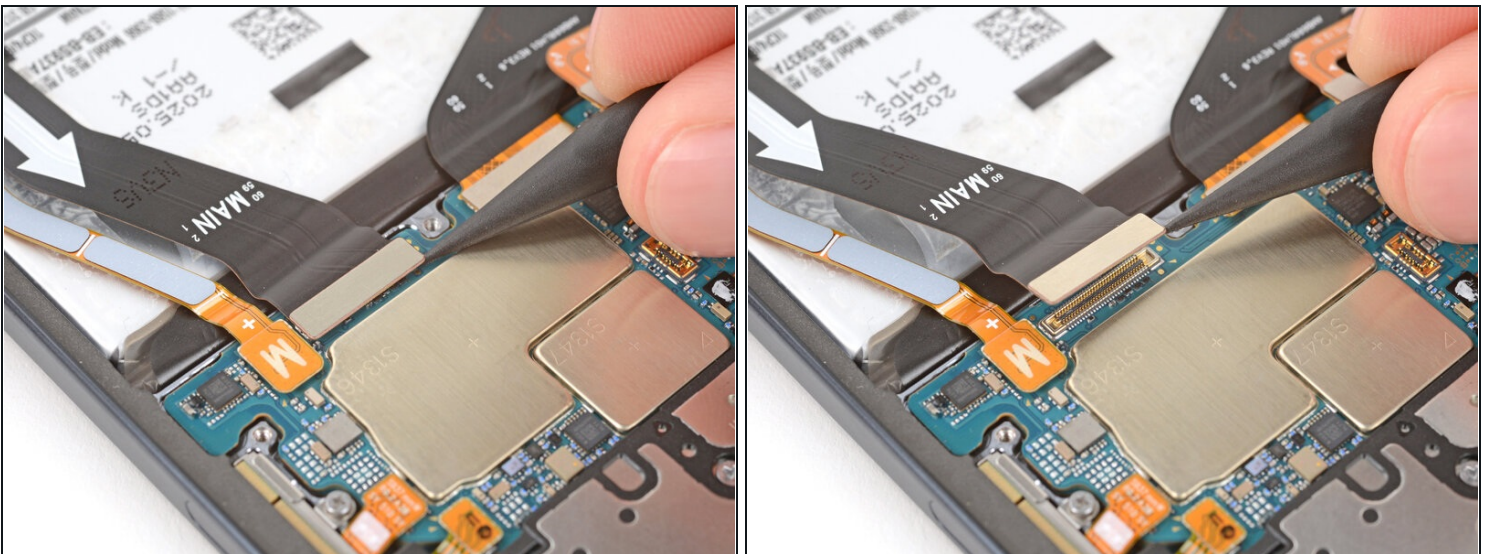


- Use the point of a spudger to pry up and disconnect the USB-C port cable's press connector (marked **MAIN**) from the logic board.

Step 15

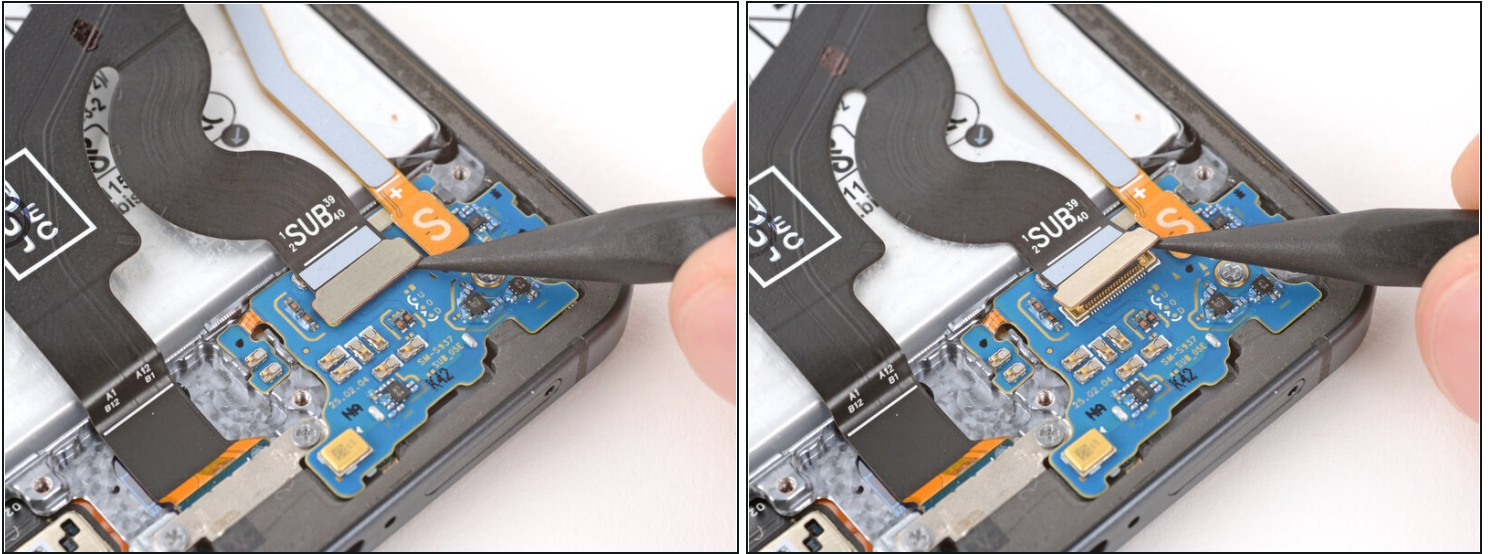


- Use the point of a spudger to pry up and disconnect the USB-C port cable's press connector (marked **SUB**) from the sub board.

Step 16 — Remove the USB-C port screws

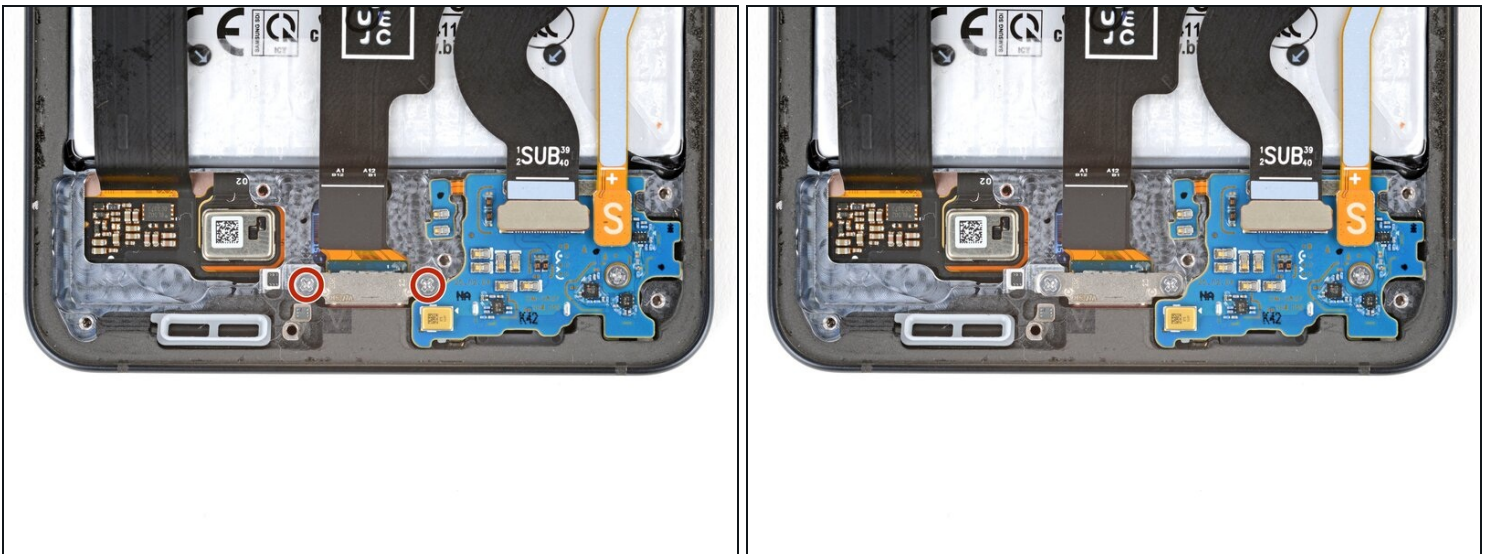


- Use a Phillips screwdriver to remove the two 2.3 mm-long screws securing the USB-C port.

Step 17 — Detach the USB-C port cable

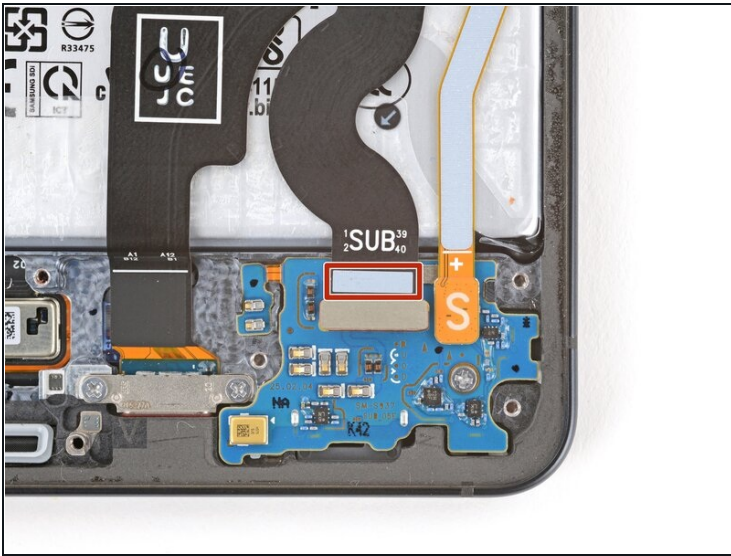

- Mild adhesive secures the USB-C port cable to the sub board, near the white section below the **SUB** text.
- Apply a [heated iOpener](#) to the USB-C port cable for two minutes to soften the adhesive.
 - ⓘ Alternatively, you can use a [hair dryer](#) or [heat gun](#) to *lightly* heat the cable.

Step 18

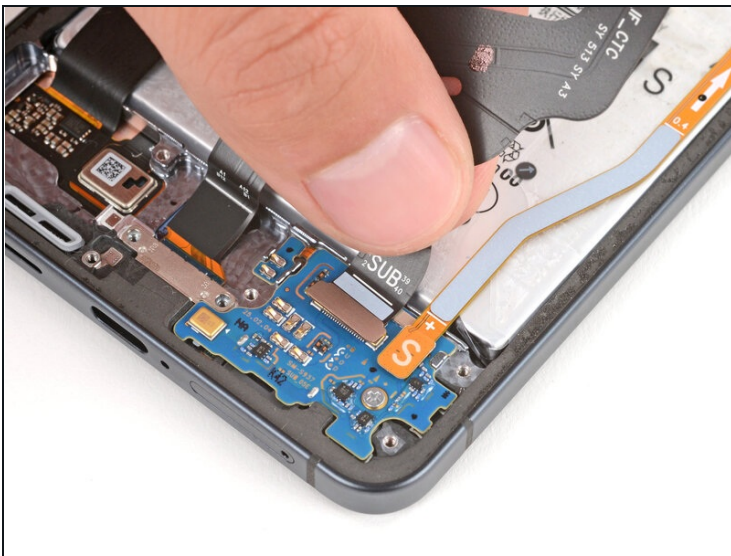

⚠ Be careful not to crease or tear the USB-C port cable during this step.

- Use your fingers to gently peel up the USB-C port cable from the sub board.

Step 19 — Remove the USB-C port



- Insert the point of a spudger into one of the USB-C port screw holes and push the port away from the bottom edge of your phone.
- Alternate between screw holes as necessary until the port slides fully out of its recess.

Step 20



- Grip the USB-C port by its cable and remove it.

Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before you install it.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers Community](#) for troubleshooting help.