



Samsung Galaxy A15 Rear Cameras Replacement

Follow this guide to replace the rear cameras...

Written By: Nick Schultz



INTRODUCTION

Follow this guide to replace the rear cameras on your Samsung Galaxy A15.

Since the primary, ultrawide, and macro cameras are separate modules, you can replace one or all of the cameras using this guide. Simply skip the steps for the cameras you are not replacing.

To reassemble your device, you will need replacement adhesive for the back cover.

TOOLS:

[iFixit Opening Picks \(Set of 6\)](#) (1)
[Spudger](#) (1)
[Phillips head screwdriver Size PH00](#) (1)
[iOpener](#) (1)
[Hair Dryer](#) (1)
[Suction Handle](#) (1)
[Angled Tweezers](#) (1)
[SIM Card Eject Tool](#) (1)

PARTS:

[Tesa 61395 Tape](#) (1)

Step 1 — Prepare the phone for disassembly



 Let the phone's battery drain below 25% before starting this repair. A charged lithium-ion battery may catch fire if damaged.

- Unplug all cables and completely power off the phone.
 - Press and hold the power and volume down buttons at the same time to bring up the shutdown menu.

Step 2 — Heat the right edge



- [Heat an iOpener](#) and apply it to the right edge of the back cover for two minutes.
- ⓘ A [hair dryer](#) may also be used, but be careful not to overheat the phone—the display, internal battery, and plastic back are susceptible to heat damage. The phone should be just too hot to touch comfortably.

Step 3




- While you're waiting for the adhesive to soften, here is some useful information:
 - There's adhesive securing the back cover around the perimeter of the frame.
- ⓘ There is an additional layer of adhesive towards the bottom of the phone. Apart from this area, you should not be deeper than 4 mm from the edge.

Step 4 — Insert an opening pick



- Apply a suction handle to the back cover, as close to the center of the right edge as possible.
- Pull up on the suction handle with strong, steady force to create a gap between the cover and the frame.
 - ❗ If you have trouble, apply more heat to further soften the adhesive.
- Insert an opening pick into the gap.

Step 5 — Slice the adhesive

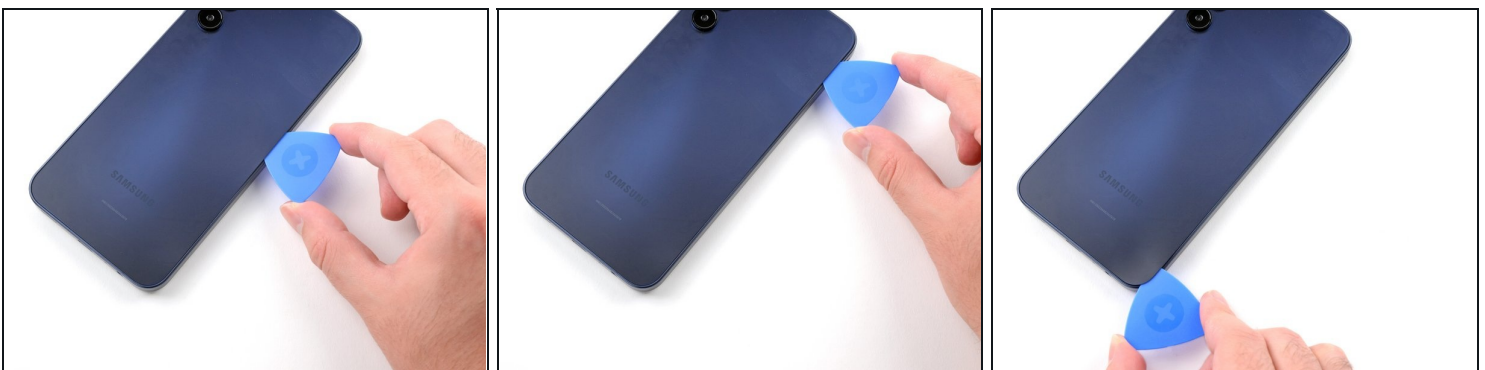

- Slide the opening pick along the right edge between the back cover and the frame to slice through the adhesive.
- Leave the opening pick in the bottom right corner to keep the adhesive from resealing.

Step 6



- Reheat your iOpener and apply it to the bottom of the back cover for two minutes.

Step 7



- Insert another opening pick in the bottom right corner and slide it along the bottom edge to slice through the adhesive.
- Leave this opening pick in the bottom left edge to prevent the adhesive from resealing.

Step 8



- Reheat your iOpener and apply it to the left side of the back cover for two minutes.

Step 9



- Insert another opening pick in the bottom left corner and slide it along the left edge to slice through the adhesive.
- Leave this opening pick in the top left corner to prevent the adhesive from resealing.
⚠ Only insert the pick up to 4 mm deep to avoid damaging the rear cameras or flash.

Step 10



- Reheat your iOpener and apply it to the top of the back cover for two minutes.

Step 11



- Insert another opening pick in the top left corner at the same depth and slide it along the top edge to slice through the adhesive.
- Leave this opening pick in the top right corner to prevent the adhesive from resealing.

Step 12 — Unfasten the camera clips



- Insert an opening pick along the top edge of the phone and twist it gently to unfasten the camera clips.
 - Slide the opening pick around the edge of the camera modules to unfasten the remaining camera clips.
- ⚠ Only insert the pick up to 4 mm to avoid damaging the rear cameras or flash.

Step 13 — Slice remaining adhesive



- Once the adhesive around the edges is loose, insert an opening pick deeper into the bottom edge from the bottom left corner.
- Slide the pick deeper into the phone across the bottom edge, slicing the remaining adhesive.

Step 14 — Remove the back cover



- Lift and remove the back cover.

★ During reassembly:


- ① This is a good point to power on the phone and test all functions before sealing it up. Be sure to power the phone back down completely before you continue working.
- Remove any adhesive chunks with a pair of tweezers or your fingers. Apply heat and isopropyl alcohol (90% or greater) if you're having trouble removing the adhesive.
- If you're using custom-cut adhesives, [follow this guide](#).
- If you're using double-sided tape, [follow this guide](#).

Step 15 — Remove the frame screws




- Remove the fifteen 4 mm-long screws connecting the frame to the chassis.

Step 16 — Disconnect the fingerprint button

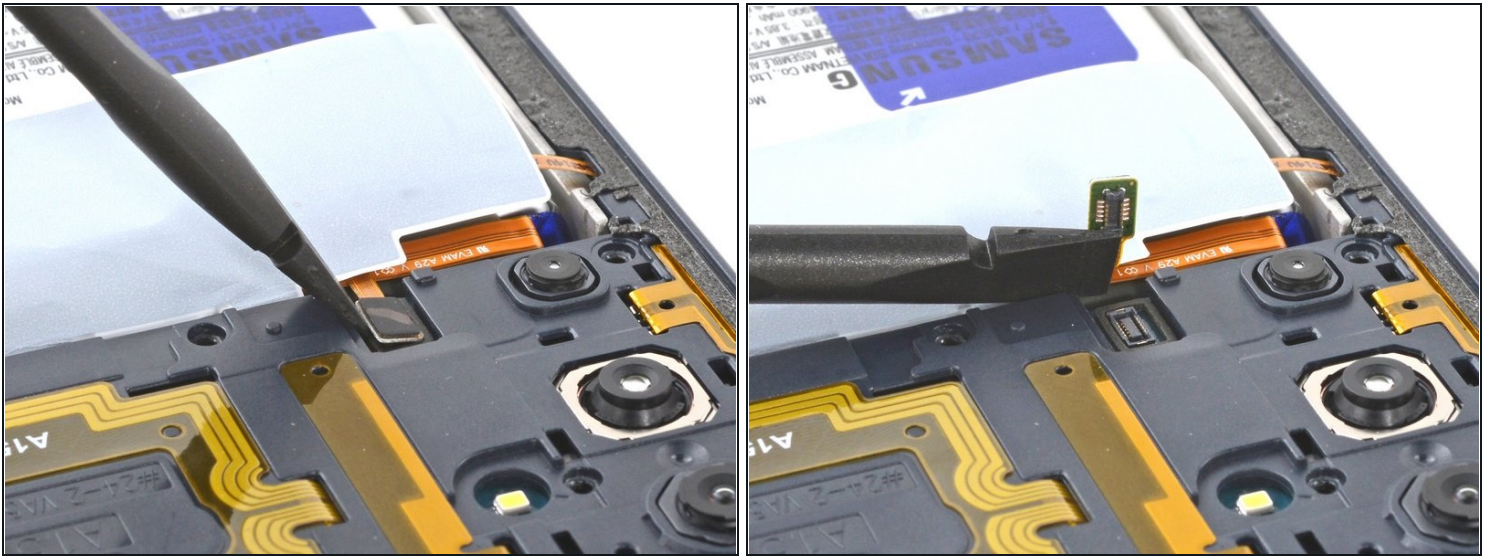


- Use the flat end of a spudger to pry up and disconnect the fingerprint button [press connector](#) from the motherboard.

Step 17 — Unfasten the frame clips

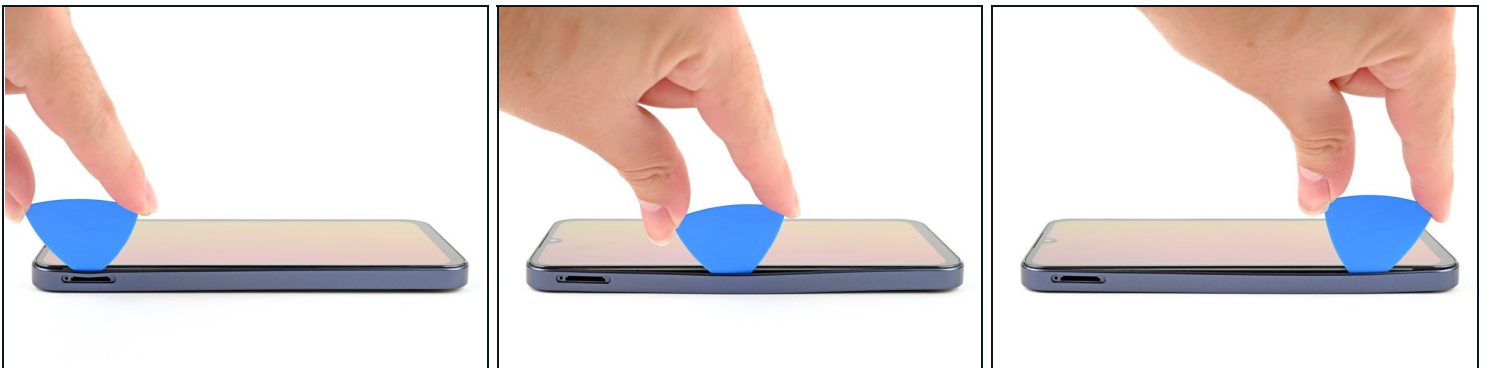

- Flip the phone over so the screen is facing up.
- Insert an opening pick between the screen and the SIM card tray cutout to form a gap between the frame and the phone.
- Slide the opening pick down the left edge of the device to unfasten the frame clips.

Step 18

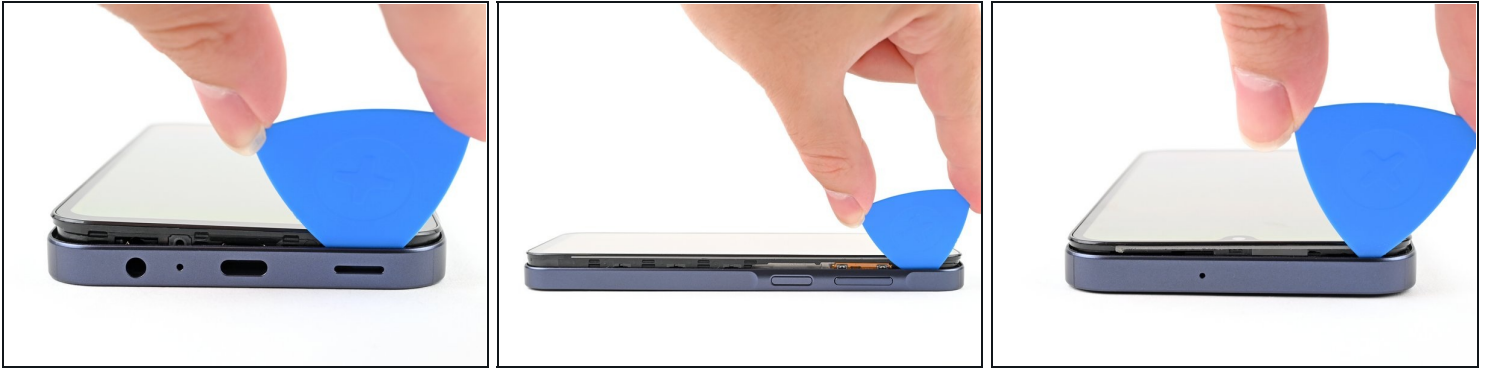


- Continue sliding the opening pick around the perimeter of the phone until all of the clips are unfastened.
 - ① If the opening pick comes out of the phone, re-insert it at the last unfastened corner.

Step 19 — Remove the frame




- Pull the frame straight off of the phone.

Step 20 — Disconnect the battery

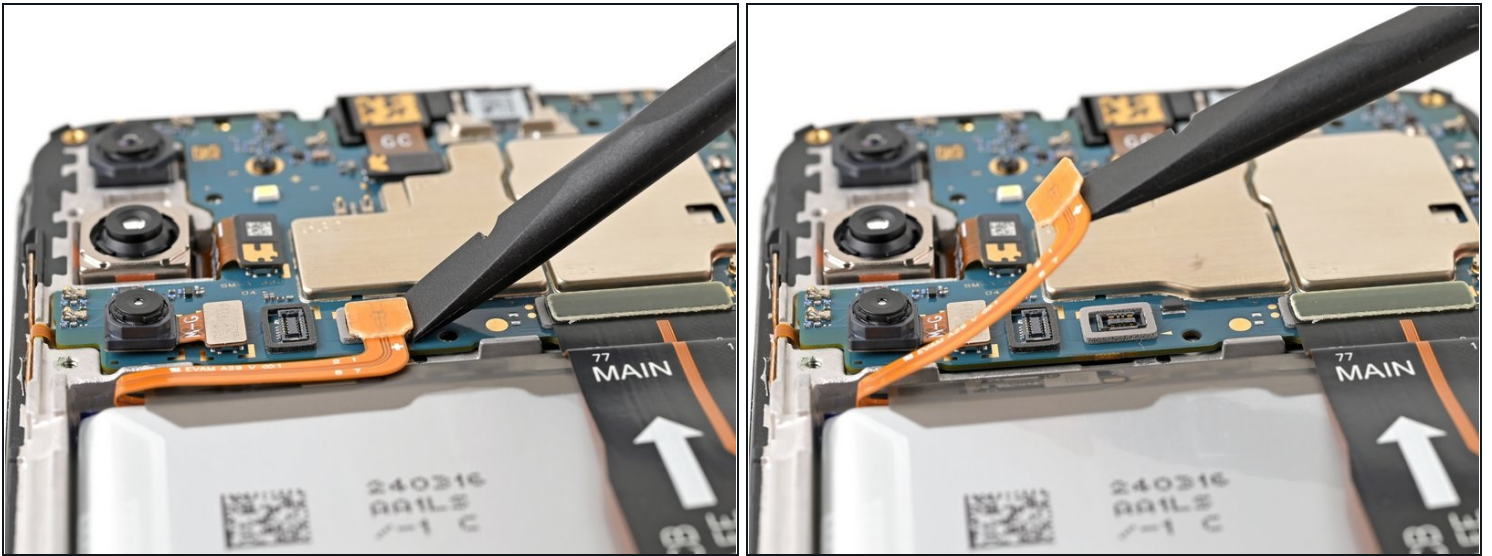

- Use the flat end of a spudger to lift up and disconnect the battery press connector from the motherboard.

Step 21 — Disconnect the interconnect cable

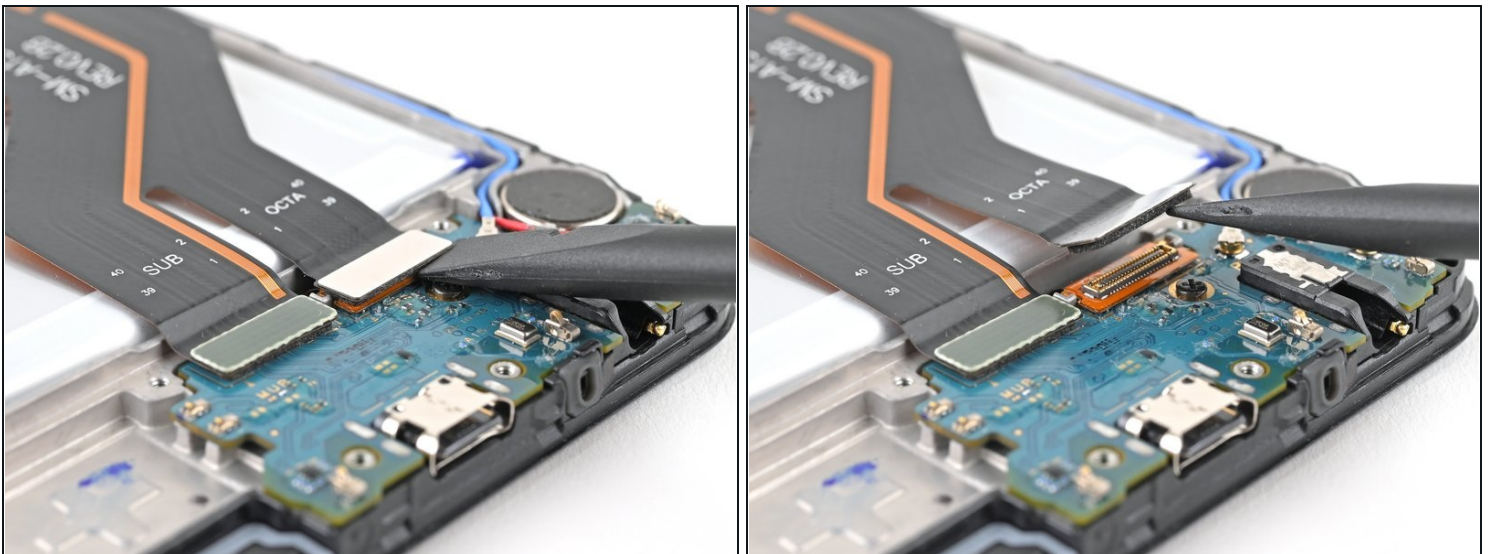

- ① The connector labeled "OCTA" is not connected to the board but rather the display cable connector. Make sure you disconnect the connectors from each other.
- Insert the flat end of a spudger under the overhang of the top "OCTA" cable connector.
- Pry up the top connector away from the bottom one until they're disconnected.

Step 22




- Use the flat end of a spudger to pry up the "SUB" connector from the daughterboard and disconnect it.

Step 23



- Use the flat end of a spudger to pry up the "MAIN" connector from the motherboard and disconnect it.

Step 24 — Remove the interconnect cable

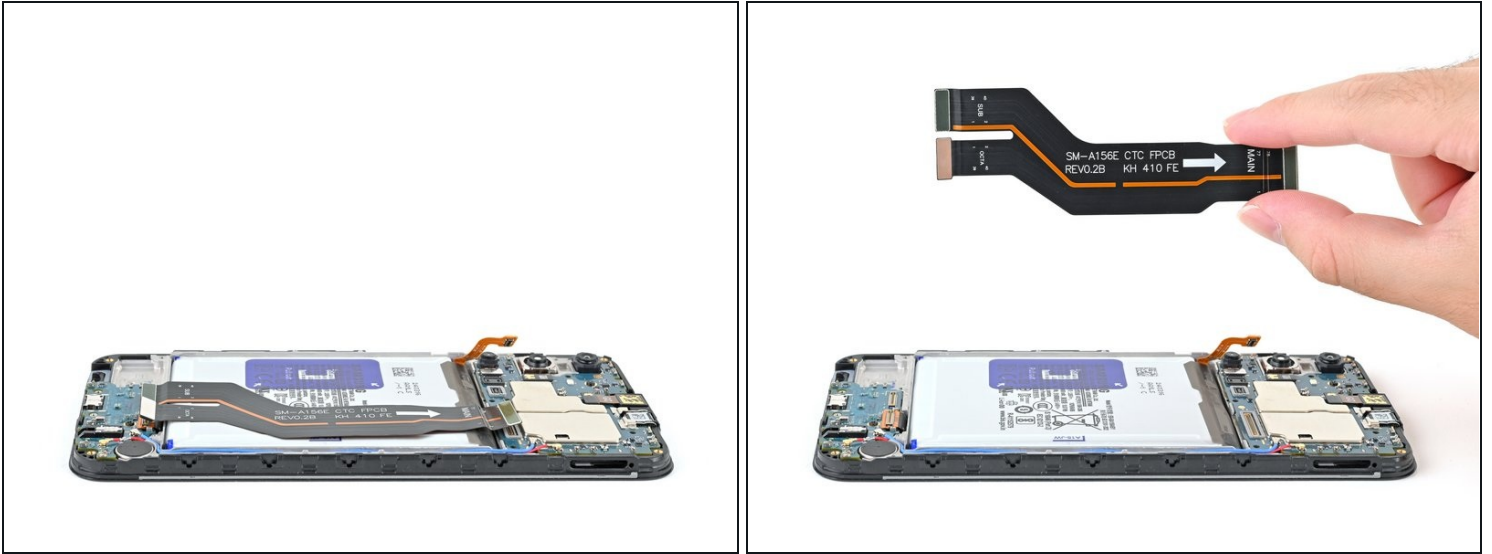

- Pick up the interconnect cable and remove it from the phone.

Step 25 — Remove main camera module




- Use the flat end of a spudger to pry up and disconnect the main camera press connector.
- Remove the main camera.

Step 26 — Remove macro camera module




- Use the flat end of a spudger to pry up and disconnect the main camera press connector.
- Remove the macro camera.

Step 27 — Disconnect the antennas

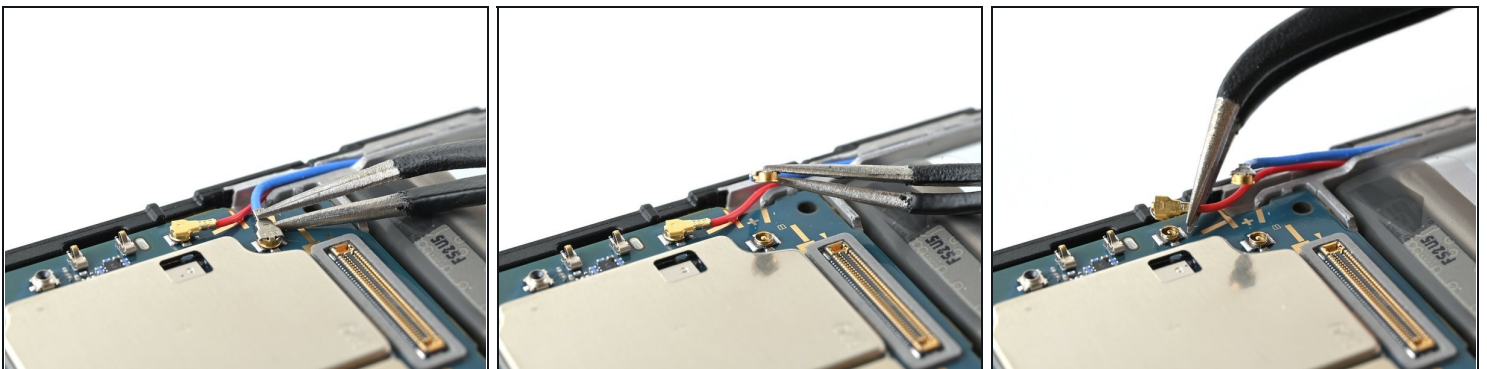


- Insert one arm of your angled tweezers under the metal neck of each antenna [coaxial connector](#) on the motherboard and lift straight up to disconnect them.
- ☑ During reassembly, use tweezers to hold the connector in place over its socket and gently press down with your finger or a spudger—the connector should "snap" into place. If you're having trouble, reposition the head and try again.

Step 28 — Remove the motherboard screw

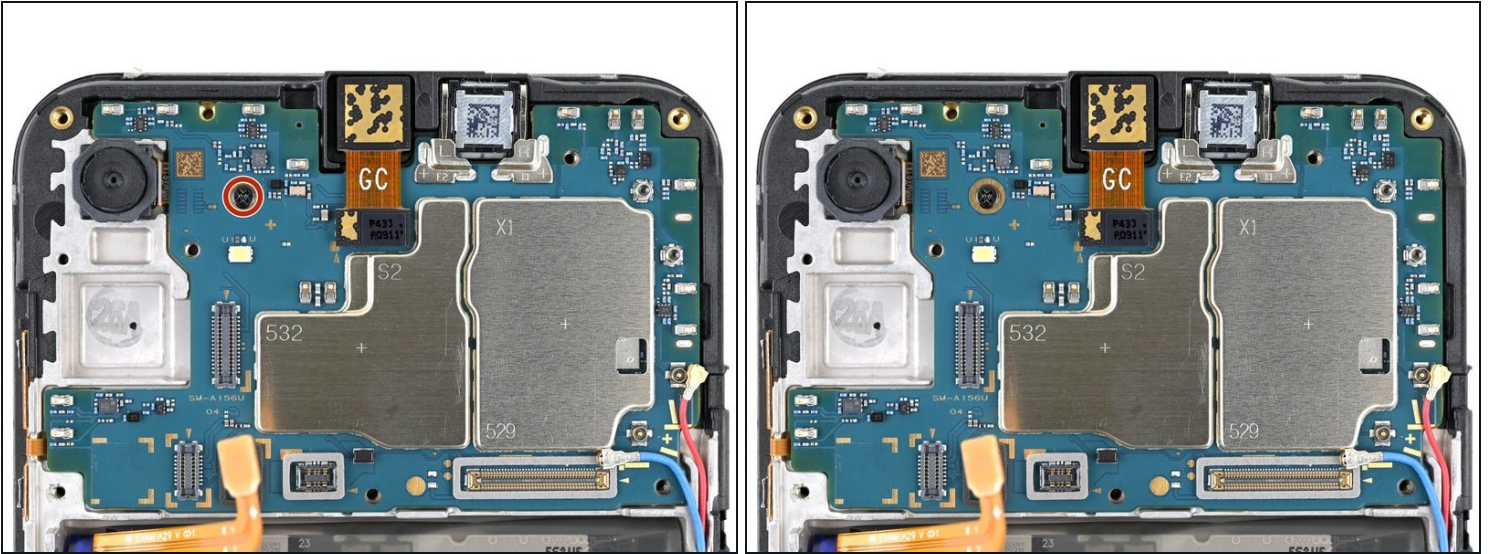


- Use your Philips screwdriver to remove the 3 mm-long screw securing the motherboard to the phone.

Step 29 — Remove the motherboard

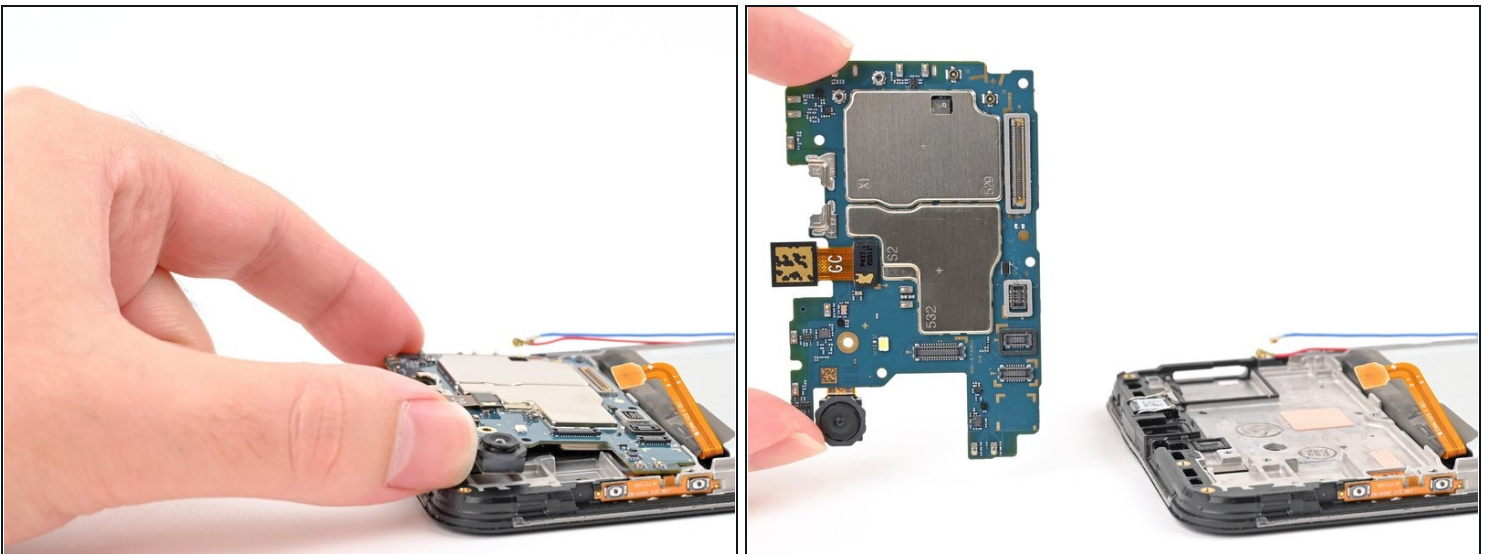

- Use your fingers to grab the motherboard by its corners and pull it up and out of the phone.

Step 30 — Remove the ultrawide camera module

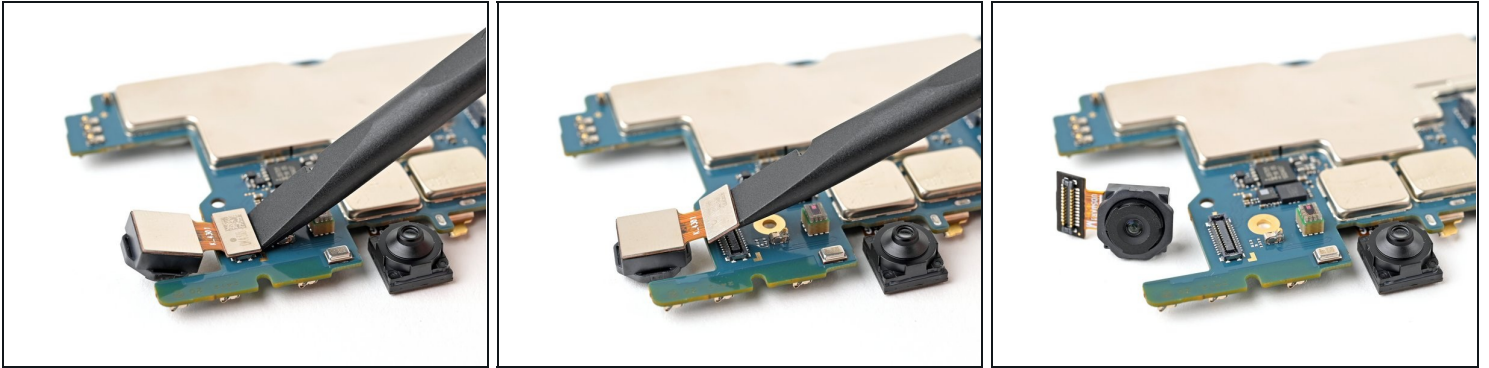

- Use the flat end of a spudger to pry up and disconnect the ultrawide camera press connector.
- Remove the ultrawide camera.

Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before you install it.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.