

Connectors

File: EPS_V1_connectors.kicad_sch

Converters

File: EPS_V1_converters.kicad_sch

Charging Inputs

File: EPS_V1_charging_inputs.kicad_sch

Battery Pack 1

File: EPS_V1_battery_pack_1.kicad_sch

Battery Pack 2

File: EPS_V1_battery_pack_2.kicad_sch


Battery Pack 3

File: EPS_V1_battery_pack_3.kicad_sch


Battery Pack 4

File: EPS_V1_battery_pack_4.kicad_sch


CHARGING INPUT

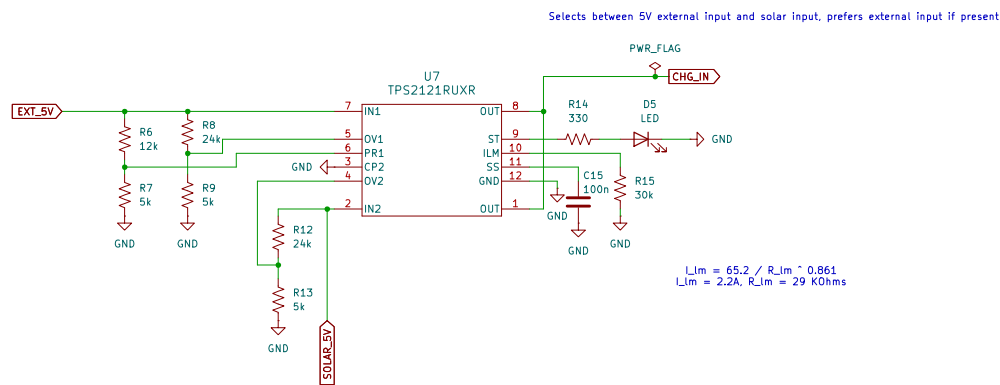


SOLAR VOLTAGE REGULATOR

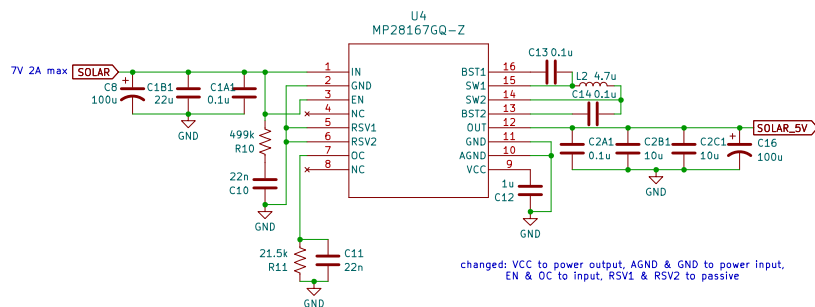


CONNECTORS

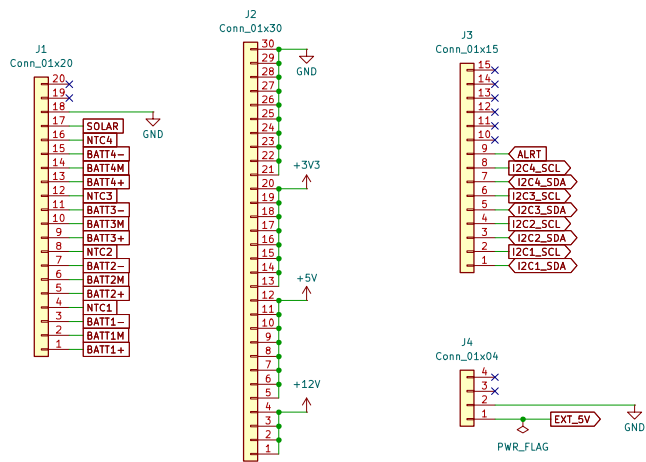

CHARGING OUTPUT

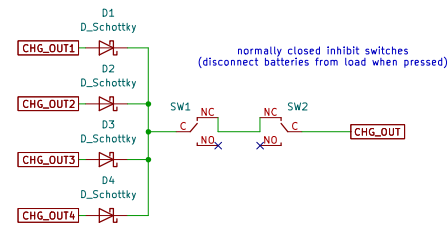


GROUND LEG INHIBIT




OUTPUT VOLTAGE REGULATORS

changed: VCC to power output, BOOT & SW to passive

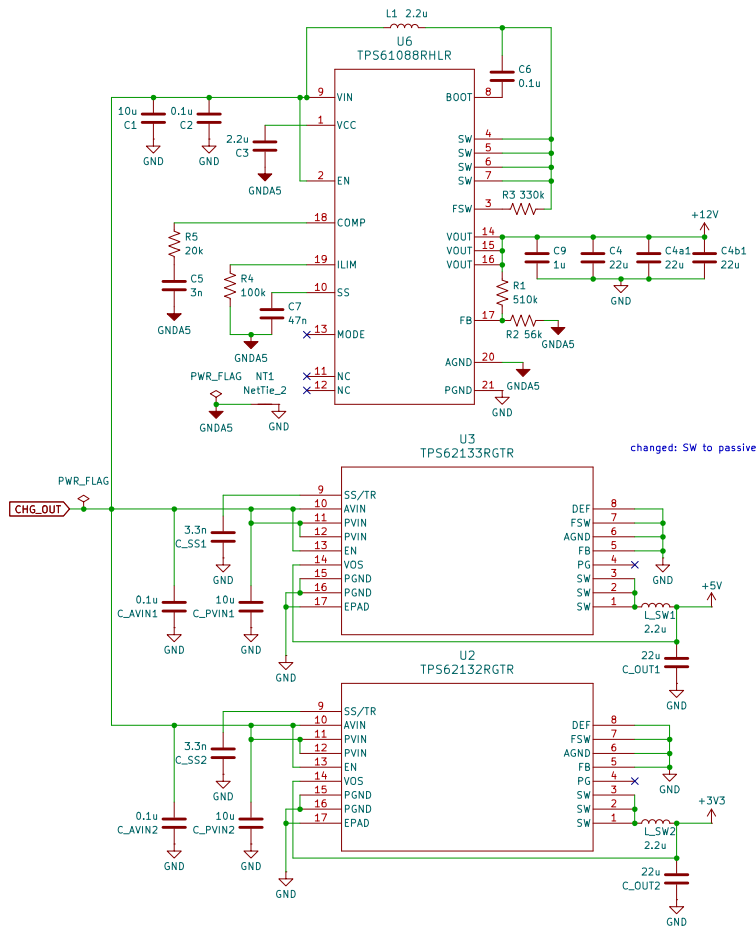

CHARGER

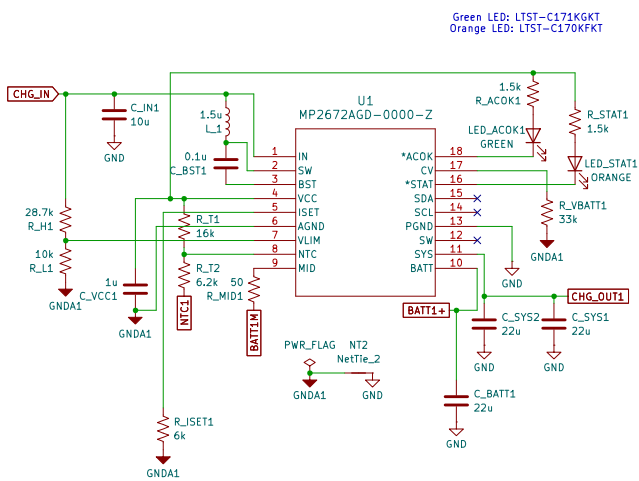


changed: SW, BST, BATT, MID to passive, SYS, VCC to power output

50 ohm R_MID value from fuel gauge datasheet

can't find value of R_MID on datasheet anywhere so I put 0 for now


Move resistors except for R_NTC onto EPS, measure from node between R2 and RNTC

FUEL GAUGE

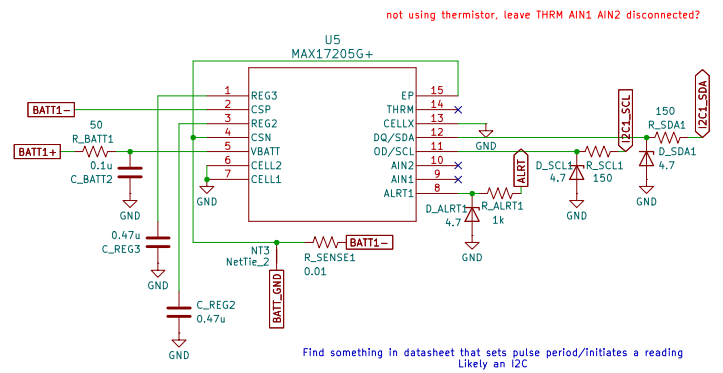

Find something in datasheet that sets pulse period/initiates a reading
Likely an I2C

CHARGER

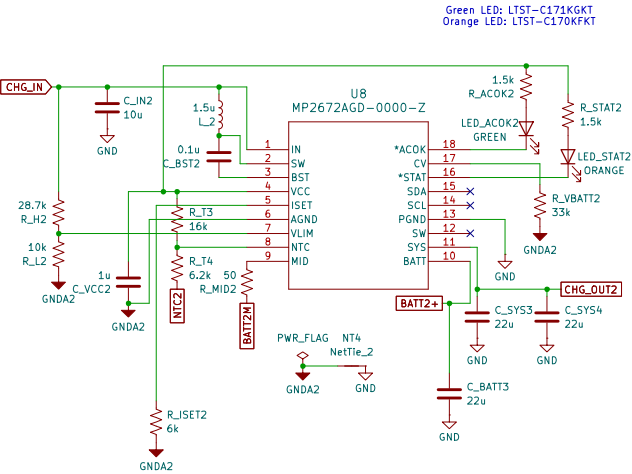


changed: SW, BST, BATT, MID to passive, SYS, VCC to power output

50 ohm R_MID value from fuel gauge datasheet

can't find value of R_MID on datasheet anywhere so I put 0 for now


Move resistors except for R_NTC onto EPS, measure from node between R2 and RNTC

FUEL GAUGE

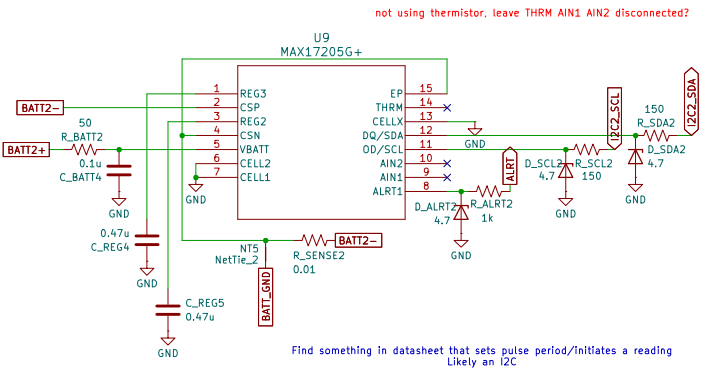

Find something in datasheet that sets pulse period/initiates a reading
Likely an I2C

CHARGER

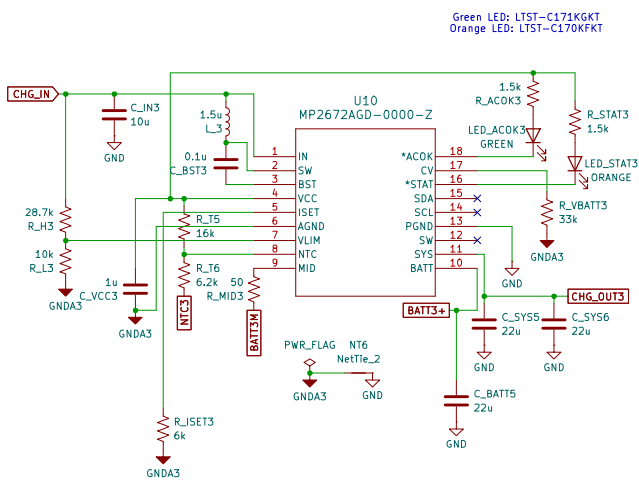


changed: SW, BST, BATT, MID to passive, SYS, VCC to power output

50 ohm R_MID value from fuel gauge datasheet

can't find value of R_MID on datasheet anywhere so I put 0 for now


Move resistors except for R_NTC onto EPS, measure from node between R2 and RNTC

FUEL GAUGE

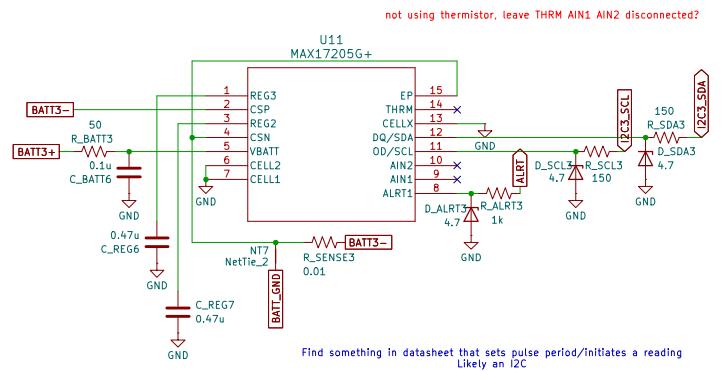

Find something in datasheet that sets pulse period/initiates a reading
Likely an I2C

CHARGER

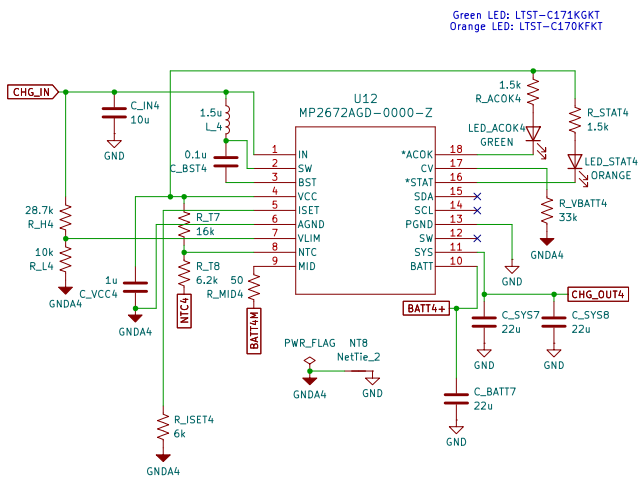


changed: SW, BST, BATT, MID to passive, SYS, VCC to power output

50 ohm R_MID value from fuel gauge datasheet

can't find value of R_MID on datasheet anywhere so I put 0 for now

Move resistors except for R_NTC onto EPS, measure from node between R2 and RNTC

FUEL GAUGE

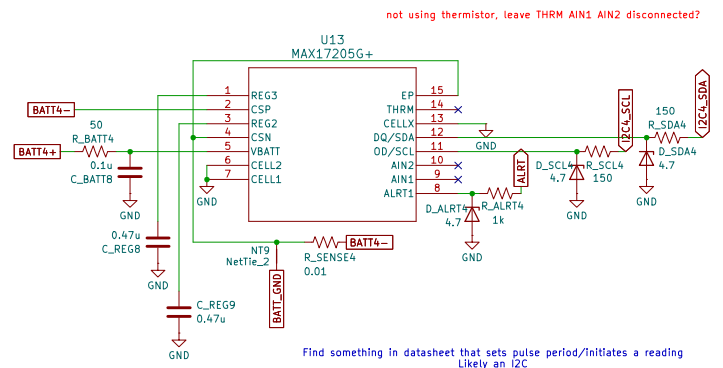

Find something in datasheet that sets pulse period/initiates a reading
Likely an I2C