How To: Connect to Wi-Fi - 1

- Power on the “rebless”
- Check the LED indicator
  - Green means you're connected to WIFI, and blue means you're waiting for a connection.
- If the current status is green, press the RST button to enter Standby mode.

How To: Connect to Wi-Fi - 2

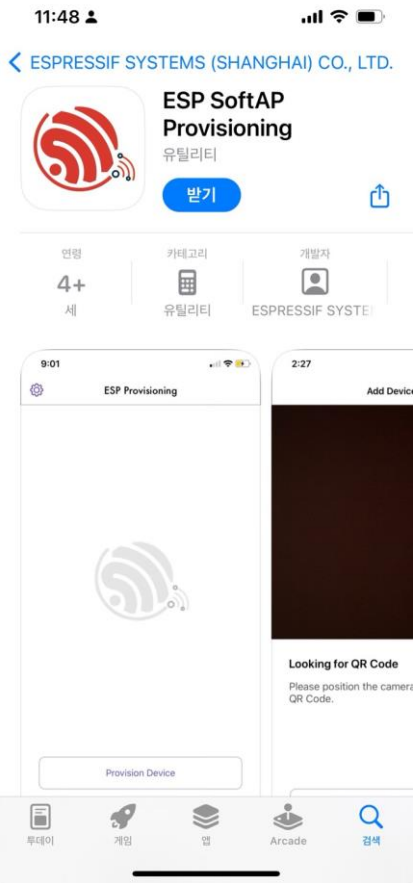

Install the “ESP SoftAP Provisioning” app from the app store.

Tap the Settings button to enter the settings screen.

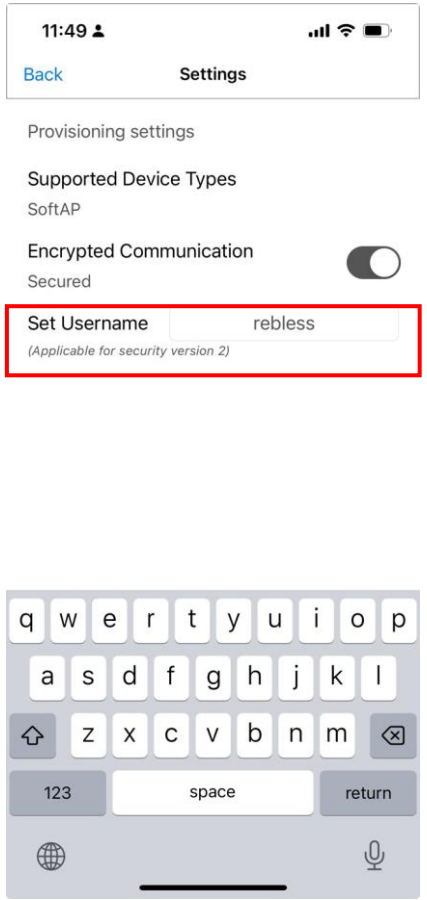

Change the username to “rebless” and press back to go home.

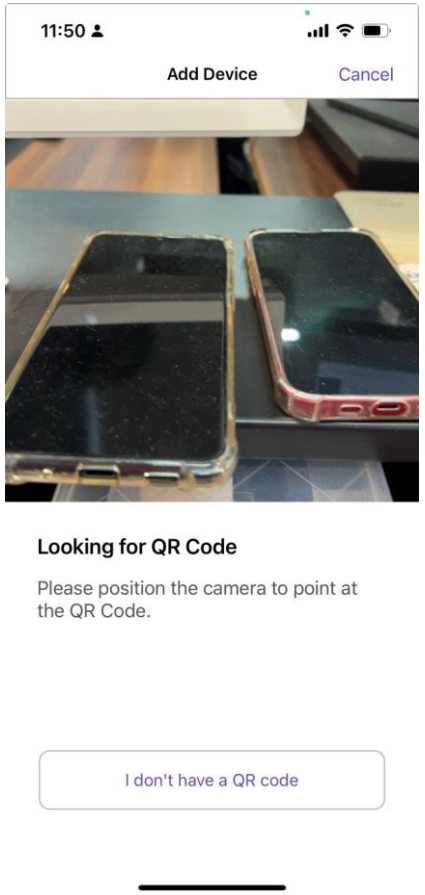

From the home screen, tap the PROVISION DEVICE button below to see the screen above. Make sure to allow all necessary permissions at this point. Press the “I don't have a QR code” button to move on.

How To: Connect to Wi-Fi - 3

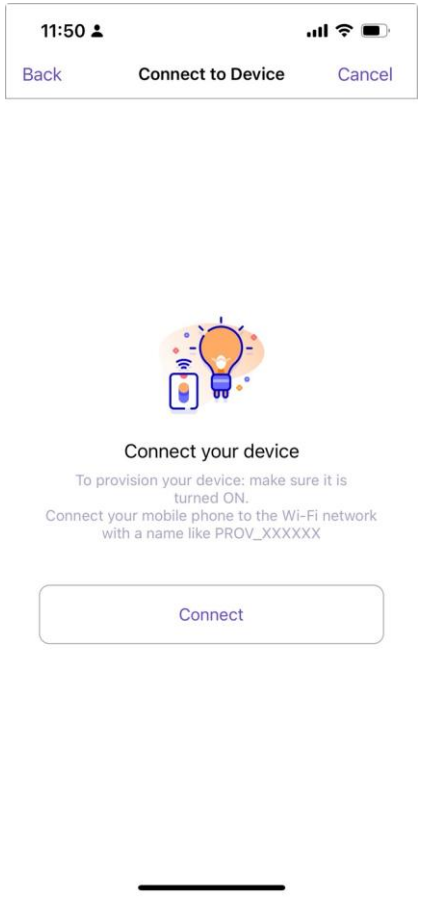

Press the Connect button to move to the next page.

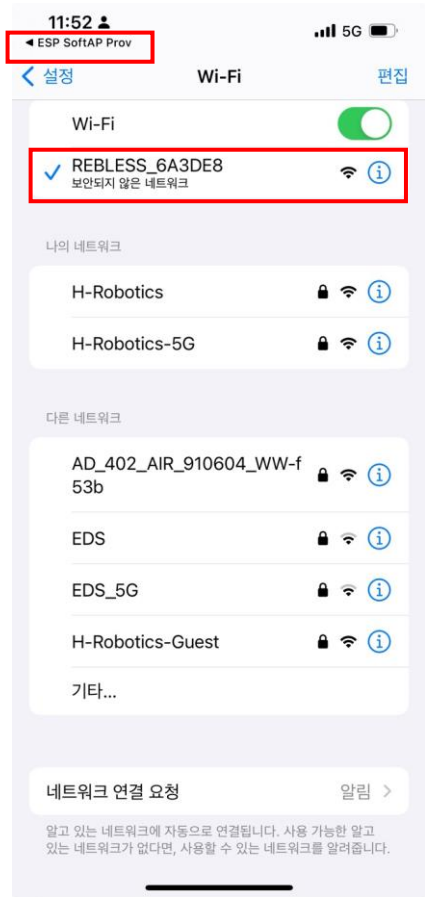

On the Select Wi-Fi screen, select REBLESS_6A3DE8, and return to the app.

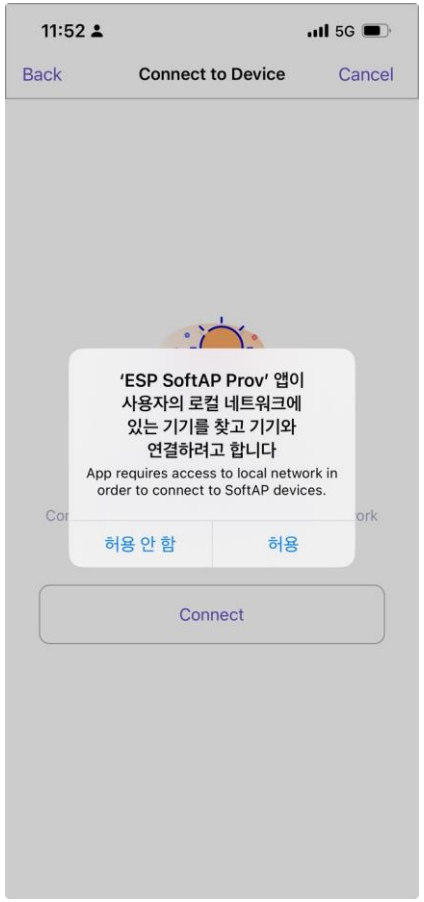

Allow the access permission request.

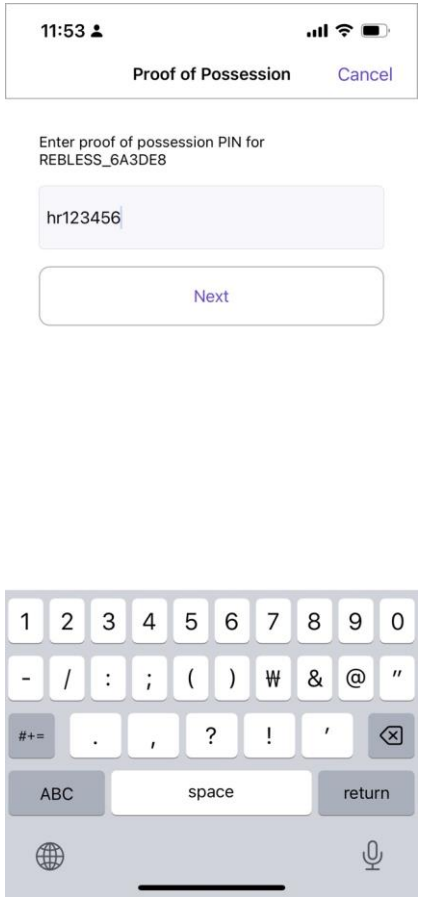

Enter “hr123456” in the PIN field and tap the next button to move on.

How To: Connect to Wi-Fi - 4

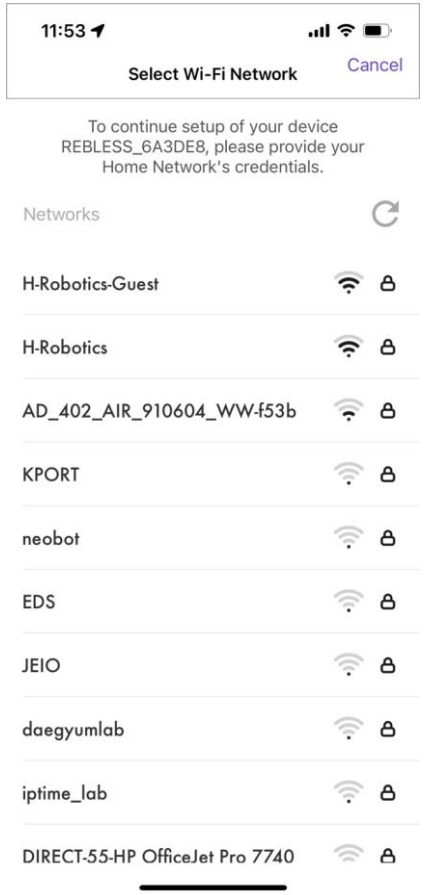

Select your AP from the Wi-Fi list. Note that this device only supports 2.4GHz. After selecting, go back to the app.

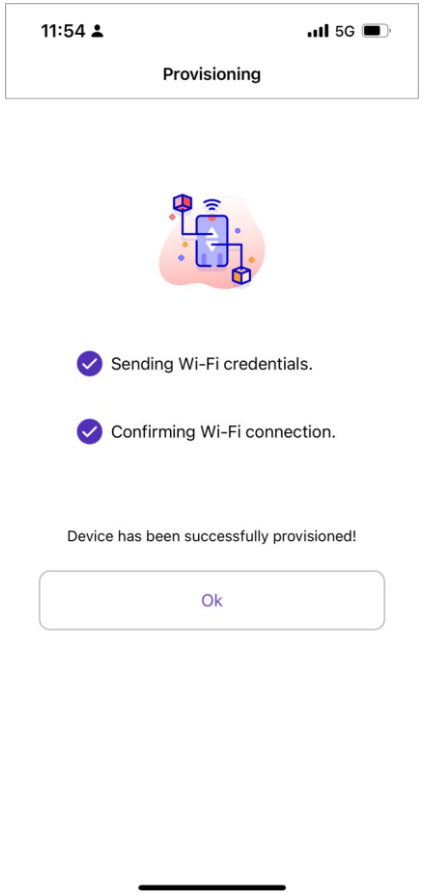

If you see a completion message, the Wi-Fi connection was successful.

After connecting to Wi-Fi, the LED light turns green. However, the iOS app is not working properly due to a bug. Power cycle your device to see the green color.

How To: Find the device IP

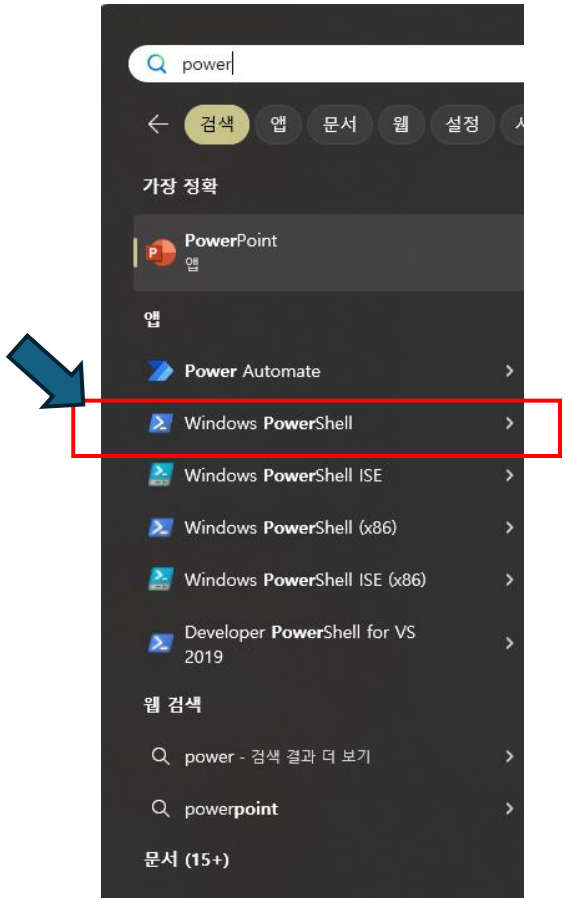

If you are a Windows user, you can use "PowerShell".

```
PS D:\ws\rebless-interface-uh> Resolve-DnsName rebless

Name                                           Type   TTL   Section    IPAddress
----                                           ----   ---   -------    ---------
rebless.local                                  A      120   Answer     192.168.0.6
```

Type "Resolve-DnsName rebless" in the terminal to find the IP address, as shown above.

How To: Setting the actuator position
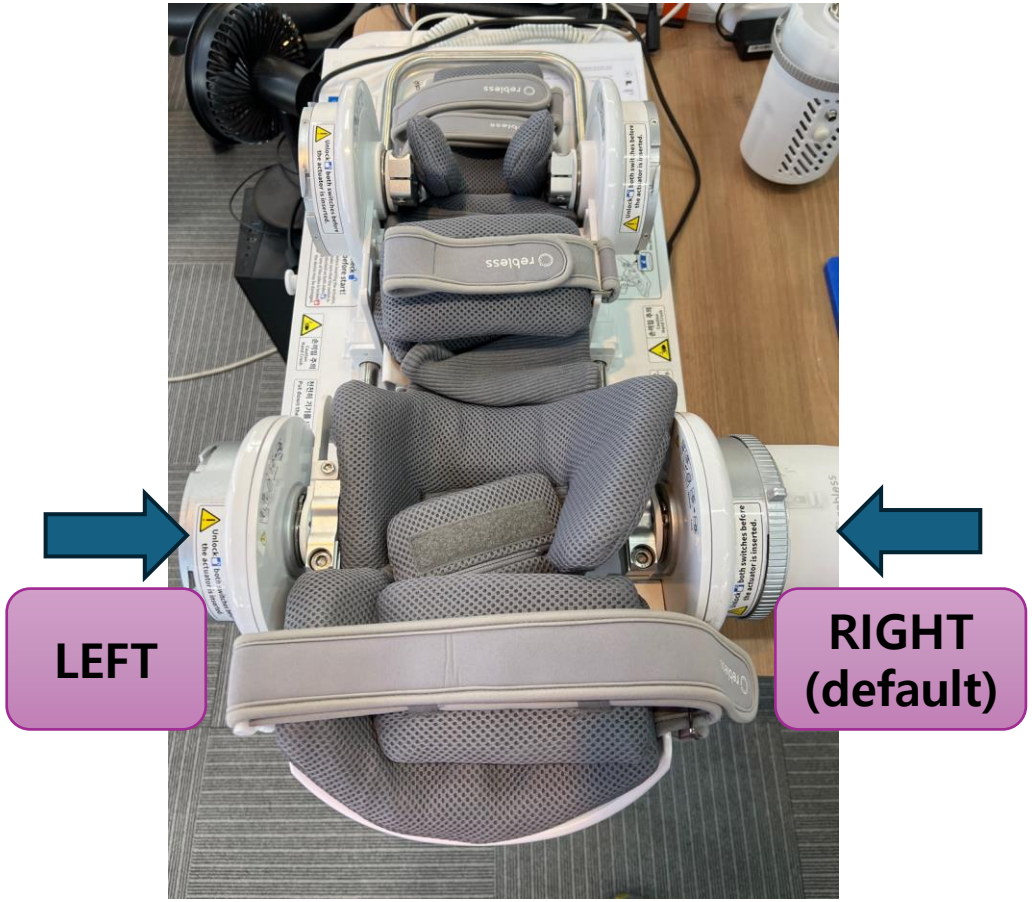
- The device we sent assumes that you want to use it on the right side.
- If you want to use it on the left side, you can send the new command. “9\t1”
- If you want to change it back to the right, you can send “9\t2”.
- When power is turned off, this setting is reset and set to the default of right.
- And if this command is passed while the device is running, settings such as the ROM will be initialized and the motor will be turned off.