

**Betriebsanleitung  
beachten!**


- - - Kundenseitig
- Werkseitig
- ..... Optional

**Follow the Operating  
Instructions!**

- - - By customer
- In factory
- ..... Optional

**Voir notice  
d'exploitation !**

- - - Côté client
- En usine
- ..... en option

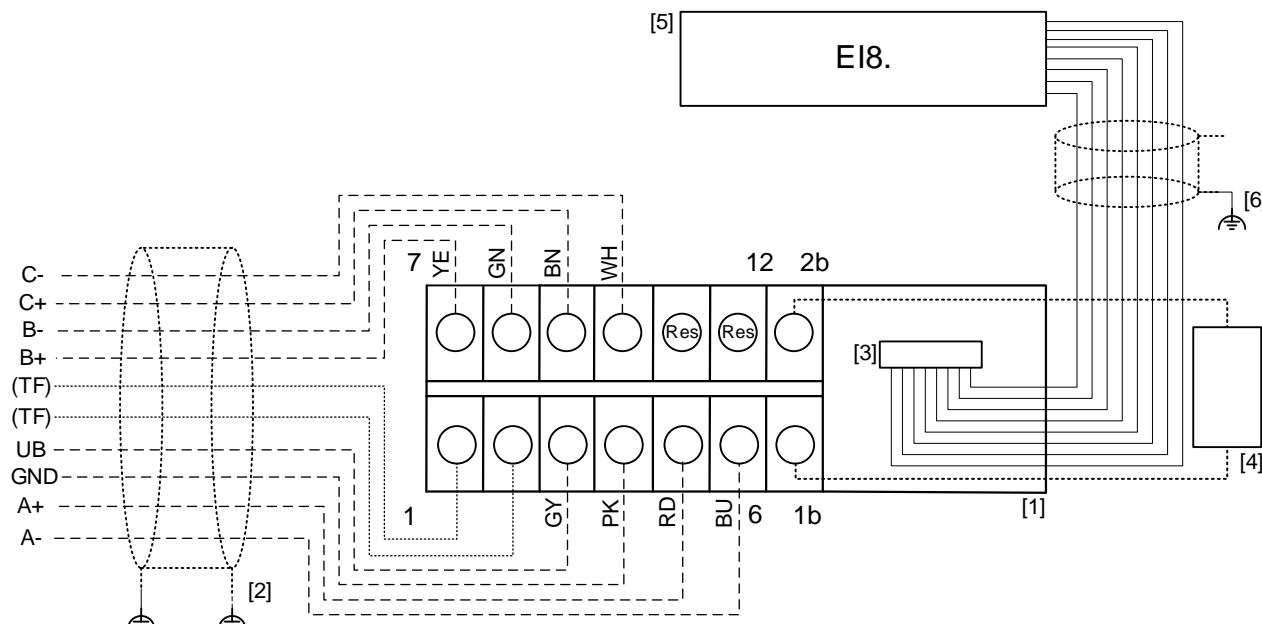

Option	1b	2b
/TF (100°C)	RD	
/TF (130°C)	BU	
/TF (150°C)	BK	
/TF (170°C)	WH	BN
/KY	RD(+)	BU(-)
/PT	RD	WH
/PK	RD	BK
/PI		BK

- |     |  |     |   |     |   |
|-----|--|-----|---|-----|---|
| [1] | Anschlusseinheit   | [1] | Connection device   | [1] | Unité de connexion  |
| [2] | Funktionserdung des Leitungsschirmes mittels Kabelklammer  | [2] | Functional grounding of cable shield at the cable clamp   | [2] | Mise à terre avec l'écran métallique au serre-câble   |
| [3] | Steckverbinder Gebermodul  | [3] | Plug connector encoder module   | [3] | Connecteur encoder module   |
| [4] | Motorschutz oder thermische Motorinformation<br>TF: PTC – Widerstand<br>KY: KTY84-130 – Widerstand<br>PT: Pt100 – Widerstand<br>PK: Pt1000 – Widerstand<br>PI: Pt1000 – Widerstand | [4] | Motor protection or thermal motor information<br>TF: PTC – thermistor<br>KY: KTY84-130 – sensor<br>PT: Pt100 – sensor<br>PK: Pt1000 – sensor<br>PI: Pt1000 – sensor | [4] | Protection du moteur ou information thermique de moteur<br>TF : termistance CTP<br>KY : KTY84-130 – sonde<br>PT : Pt100 – sonde<br>PK : Pt1000 – sonde<br>PI : Pt1000 – sonde |
| [5] | Gebermodul   | [5] | Encoder module  | [5] | Module de codeur incrémental  |
| [6] | Funktionserdung an der Klemmenkastenverschraubung  | [6] | Functional grounding at the terminal box joint  | [6] | Mise à la terre fonctionnelle à la fixation de la boîte à borne   |

<b>BK</b>	schwarz / black / noir	<b>GN</b>	grün / green / vert	<b>PK</b>	rosa / pink / rose	<b>WH</b>	weiß / white / blanc
<b>BN</b>	braun / brown / brun	<b>GY</b>	grau / gray / gris	<b>RD</b>	rot / red / rouge	<b>YE</b>	gelb / yellow / jaune
<b>BU</b>	blau / blue / bleu	<b>OG</b>	orange / orange / orange	<b>VT</b>	violett / violet / violet		