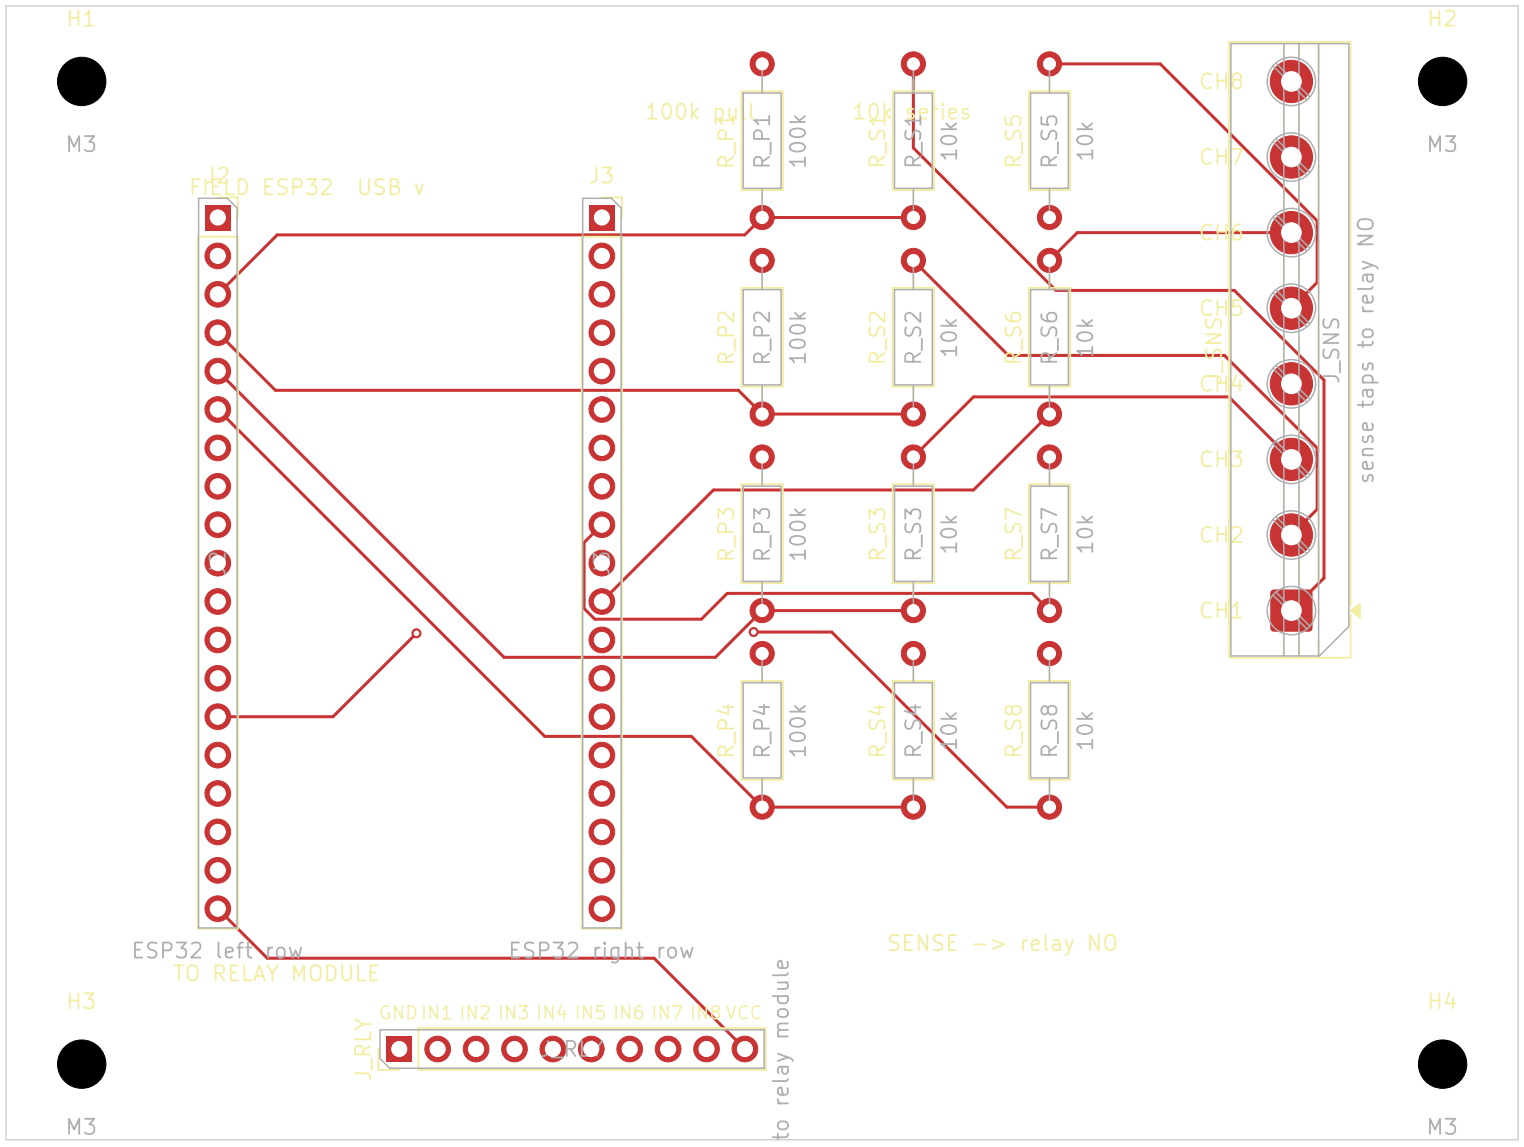
H1
M3
H2
M3
H3
M3
H4
M3
100k pull
10k series
R_P1
R_P1
100k
R_S1
R_S1
10k
R_S5
R_S5
10k
R_P2
R_P2
100k
R_S2
R_S2
10k
R_S6
R_S6
10k
R_P3
R_P3
100k
R_S3
R_S3
10k
R_S7
R_S7
10k
R_P4
R_P4
100k
R_S4
R_S4
10k
R_S8
R_S8
10k
J2
FIELD ESP32  USB v
J3
CH8
CH7
CH6
CH5
CH4
CH3
CH2
CH1
J_SNS
J_SNS
sense taps to relay NO
ESP32 left row
TO RELAY MODULE
ESP32 right row
SENSE -> relay NO
J_RLY
GND
IN1
IN2
IN3
IN4
IN5
IN6
IN7
IN8
VCC
J_RLY
to relay module