V26 Servo controller / I2C LCD / 2 buttons / 2 potentiometers

Equal net labels are connected. Bracketed A1 numbers refer to module pads.

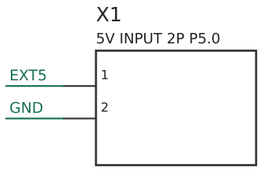

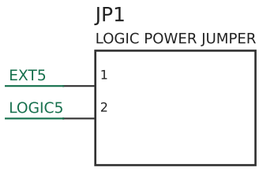

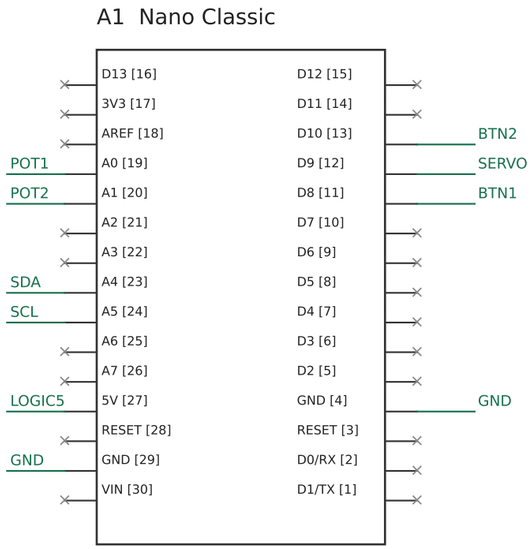

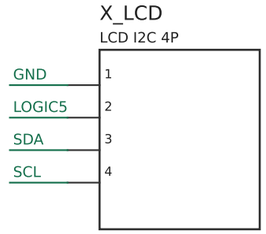

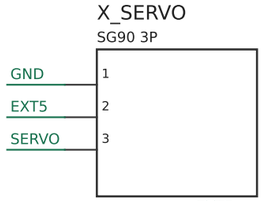

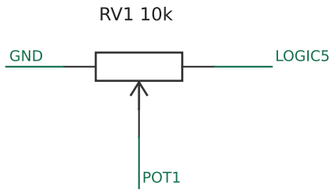

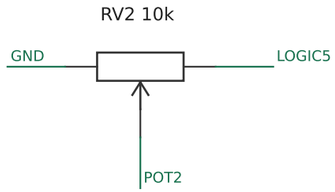

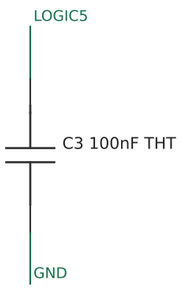

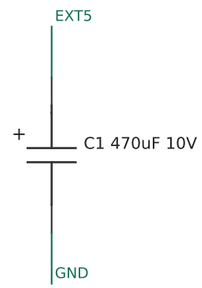

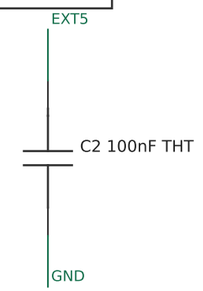

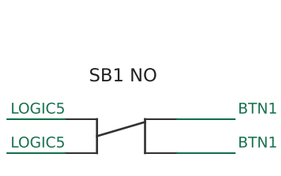

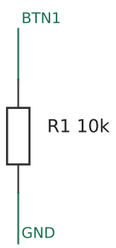

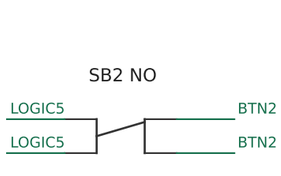

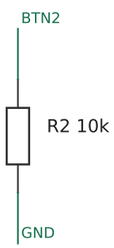

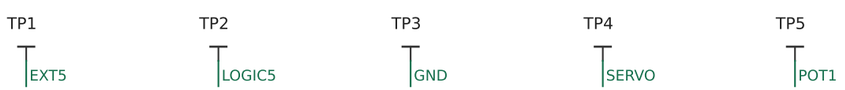

USB connected: remove JP1. Servo power comes from EXT5, not through Nano.

X_LCD: short internal harness to LCD fixed on the same PCB on spacers.