

RRCI

Table of contents

Introduction	3
Release Notes	3
License Agreement	3
Credits and Copyright	3
Trademarks	4
Support	4
System Requirements	4
Installation	4
Scope Position Sensor	5
Roof Movement Hall Sensor Wiring	5
Basic RRCI Operation	5
Running RRCI	5
Setup	6
Open/Close/Stop Control	6
Roof Movement Sensor	9
Calibrate Hall Sensor Pulses	11
Scripting	14
Sample Scripts	15
Windows Scripting Reference	16
ASCOM Properties and Methods	16
File Locations	16

Introduction

Introduction to Rolling Roof Computer Interface (RRCI)

RRCI is designed for to help astronomers automate their roll-off-roof observatories for remote access.

RRCI makes no warranty as to the operation or automation of the observatory equipment; it simply provides components for 'Do It Yourself' automation projects.

Caution! Automation of any rolling roof observatory requires special attention with regard to the location of individuals in the observatory, as well as the position of the telescope/mount, prior to moving the roof to ensure no one or nothing obstructs the roofs path. Serious injury to individuals and/or damage to telescope, mount or the observatory may occur if this advice is not followed. We recommend that all users of RRCI implement safety policies and procedures regarding the operation of their rolling roof. In addition we strongly recommend installation of safety sensors that will prevent or stop movement of the roof should individuals or equipment move into an unsafe position before or during roof movement. For remote/automated operation of rolling roofs it is recommended that the *"Allow Remote Apps to Open/Close the Roof"* check-box in the RRCI Live software be unchecked if the roof does not safely clear the scopes/mounts. Misuse or careless operation can cause serious damage to your equipment or individuals. The author of the software and the distributor of the equipment (1) make no warranty or representation to the user as to the operation of this System and (2) is NOT responsible for any injury or damage that may occur from careless implementation, operation or misuse. **Opening or Closing a roll-off roof is not a trivial task and the operator needs to take all necessary precautions before starting the roof motor. Damage to equipment or persons can occur when the roof is in motion so all necessary precautions should be taken before executing such a command.**

Created with the Personal Edition of HelpNDoc: [Revolutionize your documentation process with HelpNDoc's online capabilities](#)

Release Notes

Release Notes

See [Github](#)

Created with the Personal Edition of HelpNDoc: [Transform Your CHM Help File Creation Process with HelpNDoc](#)

License Agreement

This project is licensed under the Creative Commons Attribution-NonCommercial (CC BY-NC)

Created with the Personal Edition of HelpNDoc: [Make Your PDFs More Secure with Encryption and Password Protection](#)

Credits and Copyright

Credits and Copyright

RRCI is copyright © All rights reserved CCDAstro, Inc. licensed under CC BY-NC

Created with the Personal Edition of HelpNDoc: [Easily Add Encryption and Password Protection to Your PDFs](#)

Trademarks

Trademarks

RRCI is a trademark of CCDASTRO, Inc. Windows are registered trademarks of Microsoft Corporation. Other product names mentioned in this publication may be trademarks of other companies.

Created with the Personal Edition of HelpNDoc: [Effortlessly Create High-Quality Documentation with a Help Authoring Tool](#)

Support

I will try to help via [email](#):

Created with the Personal Edition of HelpNDoc: [Protect Your Confidential PDFs with These Simple Security Measures](#)

System Requirements

System Requirements

RRCI requires Windows 10 (or higher, x64).

The following hardware is required:

- [RRCI System Arduino hardware/firmware sketch](#)

Created with the Personal Edition of HelpNDoc: [Import and export Markdown documents](#)

Installation

Installation

RRCI is available via Internet download.

Important: RRCI require the installation of the ASCOM Platform, available at <http://ascom-standards.org>.

Internet Installation

1. Download the latest RRCI ASCOM driver and software [here](#) .
2. You will be prompted to either 'Run' the installer or you can save it to a folder; double clicked the saved file with start the installer.
3. Follow the onscreen instructions to complete the installation.

- Once the software has successfully installed you must enter the setup areas to input the proper setting before attempting to connect your hardware. To properly setup RRCILive open the programs from Windows/Start/RRCI.


Created with the Personal Edition of HelpNDoc: [Produce electronic books easily](#)

Scope Position Sensor

Any normally open (unsafe) device that will be closed (safe) when mount in a safe position for roof movement.

Created with the Personal Edition of HelpNDoc: [Elevate Your CHM Help Files with HelpNDoc's Advanced Customization Options](#)

Roof Movement Hall Sensor Wiring

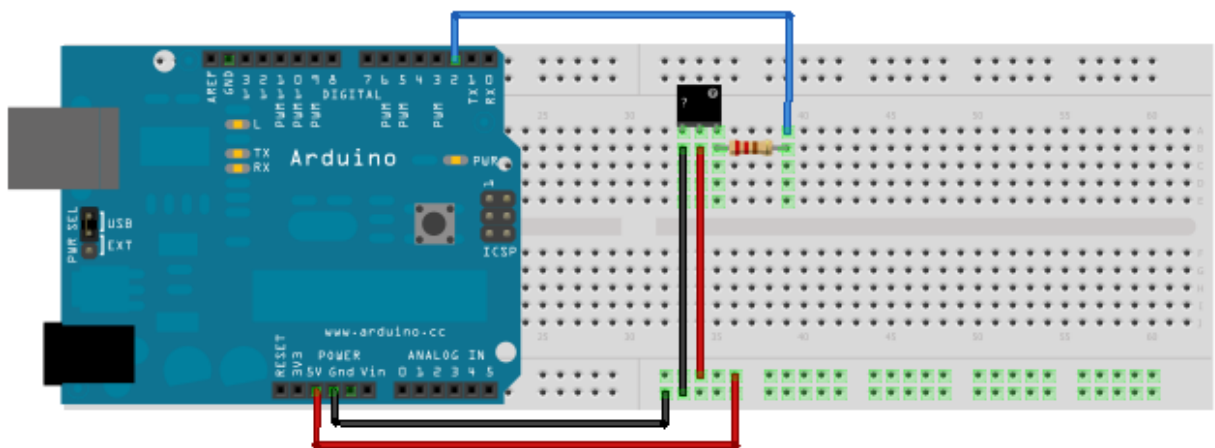

Made with Fritzing.org

Created with the Personal Edition of HelpNDoc: [Streamline Your Documentation Process with HelpNDoc's Project Analyzer](#)

Basic RRCI Operation

Basic Operation

In the following discussion, it is assumed that the reader is generally familiar with ASCOM client programs (NINA, APP, SGP, Prism, Etc.) that run under the Windows operating system.

Created with the Personal Edition of HelpNDoc: [Easily create Qt Help files](#)

Running RRCI


Basic Operation

RRCI is an ASCOM Dome V2 driver accessible by any ASCOM client via the Dome Chooser.

Created with the Personal Edition of HelpNDoc: [Qt Help documentation made easy](#)

Setup

Setup Tab:

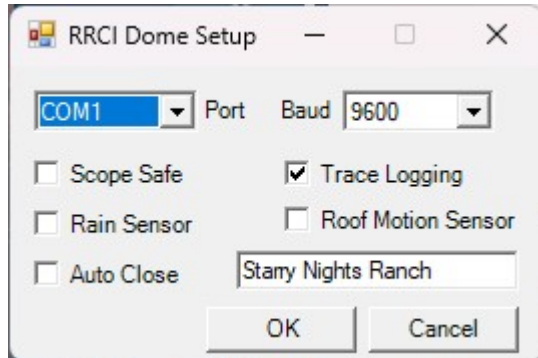

RRCI Communications:

Port: input the Com Port - this should be automatically populated

Baud - generally 9600

Features:

Scope Safety - Checking this box will require a normally open safety to determine a safe telescope/mount position before moving.

Rain Sensor - Checking this box will enable rain sensor.

Auto Close - this will auto close if rain and scope safe.

Trace Logging - log activities.

Roof Motion Sensor - check if hall sensor installed.

Text Box - Name, location or whatever you want.....

Created with the Personal Edition of HelpNDoc: [Say Goodbye to Documentation Headaches with a Help Authoring Tool](#)

Open/Close/Stop Control

Multi-Button Motor Support (Arduino Firmware V2)

Overview

Firmware V2 introduces support for multiple roof motor controller architectures while maintaining full backward compatibility with existing Aleko-based installations.

Previous firmware versions assumed a single-button motor controller where the same input was used to cycle through Open, Stop, Close, and Stop operations. Firmware V2 extends support to controllers that use dedicated Open, Close, and Stop inputs.

No changes are required for existing Aleko or similar 1-button operation motor installations.

Controller Types

The Setup Dialog now includes a **Controller Type** selection.

Aleko Single Button

This mode is intended for gate and roof controllers that use a single control input.

Operations:

	Command	Relay
Open		Relay 7
Close		Relay 7
Abort		Relay 7

The motor controller internally manages the Open → Stop → Close → Stop sequence.
This is the default mode and preserves compatibility with all existing RRCI installations.

Open / Close

This mode is intended for controllers that provide separate Open and Close inputs.

Operations:

	Command	Relay
Open		Relay 7
Close		Relay 6
Abort		No Action

Use this mode only when the controller documentation specifies dedicated Open and Close control inputs.

Open / Close / Stop

This mode is intended for controllers that provide separate Open, Close, and Stop inputs.

Operations:

	Command	Relay
Open		Relay 7
Close		Relay 6
Abort		Relay 5

This configuration provides the most direct control of motor operation and allows the ASCOM Abort command to activate a dedicated Stop input.

Selecting Controller Type

Open the RRCI Setup Dialog and choose the appropriate controller type.

Options:

- 1-Button
- 2-Button
- 3-Button

The selection is saved in the ASCOM Profile and automatically restored when the driver is loaded.

Driver Operation

When a connection is established, the ASCOM driver automatically transmits the selected controller mode to the firmware.

Example:

```
setmode:1
Aleko Single Button
```

```
setmode:2
Open / Close
```

```
setmode:3
Open / Close / Stop
```

No user intervention is required after configuration.

Manual Firmware Selection

Advanced users may also select the controller type directly in the firmware source code.

Example:

```
ControllerType controllerType =
    ALEKO_SINGLE_BUTTON;
```

Available values:

```
ALEKO_SINGLE_BUTTON
OPEN_CLOSE
OPEN_CLOSE_STOP
```

Manual firmware selection is generally unnecessary when using the ASCOM driver.

Runtime Mode Switching

Firmware V2 supports runtime mode changes through the serial command interface.

Commands:

```
setmode:1
setmode:2
setmode:3
```

These commands may be issued from a serial terminal or by the ASCOM driver.

Backward Compatibility

Existing installations using Aleko gate operators or similar 1-button motors require no changes.

Upon startup, the firmware defaults to:

```
ALEKO_SINGLE_BUTTON
```

The ASCOM driver then applies the user-selected mode during connection.

This ensures older installations continue to function exactly as they did with previous firmware versions.

Wiring Summary

Aleko Single Button

	Arduino Output	Function
Relay 7		Trigger Input

Open / Close

Arduino Output	Function
Relay 7	Open
Relay 6	Close

Open / Close / Stop

Arduino Output	Function
Relay 7	Open
Relay 6	Close
Relay 5	Stop

Always consult the motor controller documentation before connecting relay outputs.

Incorrect wiring may result in unexpected roof operation.

Created with the Personal Edition of HelpNDoc: [Streamline your documentation process with HelpNDoc's HTML5 template](#)

Roof Movement Sensor

Hall Sensor to Report Roof Movement

Better than a fixed timeout

A fixed (currently used in Arduino firmware sketch timeout only) answers:

“Did the roof finish within 120 seconds?”

A Hall sensor answers:

“Is the roof actually moving right now?”

That is a much more meaningful check.

How the current firmware uses it

When the Motion Sensor is enabled via the checkbox in setup:

1. The Hall sensor produces pulses as the roof moves.
2. The firmware records the time of the last pulse.
3. If no pulse is detected for 3 seconds (modify in sketch as needed) while opening or closing:
 - o The controller enters ERROR.
4. The ASCOM driver sees STATE : ERROR.

So the pulse count is used as a real-time motion watchdog.

Additional uses for pulse counts

You could also use pulse counts to:

- Estimate travel distance
- Detect gradual mechanical wear
- Measure opening and closing consistency
- Set expected pulse ranges

For example:

- Fully open typically takes ~320 pulses.
- If the roof stops after 47 pulses, something is wrong. A person could determine how far it travel in that period.

Pulse count vs pulse timing

The most important information is usually:

- Are pulses arriving?
- How long since the last pulse?

The total count is useful for diagnostics and future enhancements.

Future enhancement

Compare pulse count to expected travel:

If fewer than 250 pulses occur before the open limit switch activates, flag a possible mechanical issue.

That is optional but can be helpful.

Detect Actual Position of Roof

Hall sensor pulse count is highly valuable internally because it confirms that the roof is genuinely moving and allows the controller to detect stalls or mechanical failures much more reliably than timeouts alone.

Instead of placing magnet or sensor on a spinning part, have magnets on the roof at intervals that produce a pulse when that part of the roof passes

How this works

Instead of mounting a magnet on a rotating part of the motor, mount multiple magnets along the roof (or along the rail), and place a stationary Hall sensor at a fixed point.

As the roof moves past the sensor, each magnet produces one pulse.

Calibrate Hall Sensor Pulses

When the Calibrate button is clicked, the system performs a fully automated roof-travel learning cycle. Here is the complete sequence.

Roof Position Tracking and Calibration

Both the RRCI and m1OASYS roof controllers use a combination of hall-effect pulse counting and physical open/closed limit sensors to determine roof position and movement status.

Hall Pulse Counting

As the roof moves, a hall-effect sensor generates pulses that are counted by the controller. During calibration, the roof is moved from the fully closed position to the fully open position and the total pulse count is recorded as the calibrated travel distance.

This calibrated value is stored and used to estimate roof position as a percentage:

- 0% = Fully Closed
- 100% = Fully Open
- Intermediate values are calculated from the current pulse count relative to the calibrated full-travel pulse count.

Open and Closed Limit Sensors

Physical limit sensors provide positive confirmation when the roof reaches either end of travel.

When the Open limit sensor is active, the driver considers the roof fully open regardless of pulse count.

When the Closed limit sensor is active, the driver considers the roof fully closed regardless of pulse count.

These sensors serve as the authoritative source for endpoint position and provide protection against lost pulse counts, controller restarts, or communication interruptions.

Reconnect and Recovery Behavior

If the controller reconnects after a restart and pulse information is unavailable, the driver uses the state of the limit sensors to restore roof position.

For example:

- Open sensor active → Roof position restored to 100% open.
- Closed sensor active → Roof position restored to 0% open.

This ensures that roof status remains accurate even if the controller's internal pulse counter has been reset.

RRCI Driver

The RRCI driver uses pulse counting as its primary method of tracking roof position while the roof is moving. Position percentages, calibration values, pulse watchdog monitoring, and motion verification are all pulse-based. Open and Closed limit sensors are used to confirm final roof position and to recover position information after reconnects.

Summary

- Hall pulses provide continuous position tracking during movement.
- Open and Closed limit sensors provide authoritative endpoint verification.

- Calibration establishes the full-travel pulse count.
- Reconnect recovery uses limit sensor status to restore accurate roof position if pulse information is unavailable.

This combination provides both accurate position tracking and reliable operation during controller restarts, communication interruptions, or recovery from fault conditions.

1. User Clicks “Calibrate”

Inside StatusForm:

dome.Action("Calibrate", "");
is sent to the active ASCOM driver.

This avoids:

- creating another driver instance,
- duplicate COM connections,
- serial conflicts.

2. Driver Receives ASCOM Action

Inside:

Action()
the driver detects:

Calibrate
and calls:

CalibrateOpenPulses()

3. Driver Resets Arduino Pulse Counter

Driver sends:

resetpulse#
to Arduino.

Firmware executes:

motionPulseCount = 0;

Now:

- roof closed position = 0 pulses.

4. Driver Starts Roof Opening

Driver calls:

OpenShutter()
which sends:

open#
to Arduino.

Firmware:

- enters OPENING,
- starts watchdog timing,

- begins pulse counting.

5. Hall Pulses Begin Counting

As roof moves:

- hall sensor pulses are detected,
- motionPulseCount increments continuously.

Example:

1
2
3
...
4821

6. Driver Polls Roof State

During calibration loop:

ShutterStatus
is repeatedly checked.

Driver waits for:

shutterOpen
which occurs when:

- open limit switch activates.

7. Final Pulse Count Captured

Driver reads:

RoofTelemetry.CurrentPulseCount

Example:

4821

8. Safety Margin Added

Driver applies tolerance:

4821×1.02

Example:

4917

This helps tolerate:

- temperature expansion,
- belt wear,
- small pulse variance.

9. Calibration Saved

Driver stores:

OpenPulseCount

to ASCOM profile settings.

Now calibration persists across:

- reboot,
- reconnect,
- NINA restart.

10. Future Roof Movement Uses Calibration

Now all telemetry becomes accurate:

- percent open,
- progress bar,
- overshoot protection,
- movement monitoring.

Example:

2450 pulses = 50% open

11. Live UI Updates Automatically

During calibration the status window shows:

- Opening
- live pulse count
- live percentage
- progress bar movement

in real time.

RESULT

The system now:

- automatically learns roof travel distance,
- stores calibration permanently,
- and enables accurate telemetry-driven operation without manual pulse measurement.

Created with the Personal Edition of HelpNDoc: [Maximize Your Documentation Efficiency with a Help Authoring Tool](#)

Scripting

Scripting

RRCI provides an ActiveX Automation interface for scripting and externally controlling the Dome via the conventions outlined in the ASCOM Platform documents. To access these documents refer to the developer area in your ASCOM folders contained in your Windows Start menu.

WeatherWatcher's is also an ActiveX Automation interface for scripting and externally accessing the Watcher.

ActiveX can be accessed from just about any standard scripting or programming language, including VBScript, JScript, Java, Perl, Visual Basic, Visual C++, etc. Using ActiveX, you can even control RRCI from Excel spreadsheet macros.

RRCI is compliant with ASCOM scripting. This allows it to operate with a wide variety of astronomical software products such as planetarium programs, telescope control software, and dome control systems. Sample scripts are available for downloading from the ASCOM web page <http://ascom-standards.org>.

Scripting Languages

The most commonly-used scripting languages on the Windows platform are VBScript and JScript.

VBScript looks like a simplified version of Visual Basic (thus the name), but you *do not* require Visual Basic to create or run scripts. VBScript code is run by the Windows Scripting Host, which is included in Windows.

Similarly, JScript looks like Java code. JScript is run by the very same Windows Scripting Host that runs VBScript. Deciding which version to use is simply a matter of user preference.

VBScript and JScript allow you to write simple scripts using only the **Notepad** text editor, and run by double-clicking them in the Explorer.

Full documentation on the scripting languages is also available for download; please see [Windows Scripting Reference](#).

Objects:

RRCI.Dome and WeatherWatcher.Watcher

Created with the Personal Edition of HelpNDoc: [Easily create Help documents](#)

Sample Scripts

Sample Scripts

In VBScript, you can access the RRCI dome as follows:

```
Dim RRCI ' "The" Dome object
Set RRCI = CreateObject("RRCI.Dome")
RRCI.Connected = True

if Not RRCI.Connected Then
    wscript.echo "Failed to connect to the RRCI."
    Quit
End If

wscript.echo RRCI.Description

RRCI.Connected = False
```

If you want to try this, just copy the above code into a text file named "test.vbs". Double-click on the file to run it.

In Visual Basic you can access the RRCI Dome object the same way. However, another method is available which enables the Intellisense feature of Visual Basic: click References... under the Project menu. Scroll down to RRCI ASCOM Dome Controller and turn on the appropriate check box and click OK. You can then create a RRCI dome object:

```
Dim RRCI As New RRCI.Dome 'RRCI Dome object
RRCI.Connected = True 'Link

If Not RRCI.Connected Then
    MsgBox "Failed to start RRCI."
End
```

```
End If  
  
MsgBox RRCI.Description  
RRCI.Connected = False
```

Created with the Personal Edition of HelpNDoc: [Don't be left in the past: convert your WinHelp HLP help files to CHM with HelpNDoc](#)

Windows Scripting Reference

Windows Scripting Reference

Scripting Home Page

A variety of information is available on Microsoft's Scripting Home Page at <http://msdn.microsoft.com/en-us/library/ms950396.aspx>. Language definitions for VBScript and JScript are included on this page.

ASCOM Initiative

A master site for astronomical scripting, which includes sample scripts using RRCI and other applications, is available on the ASCOM web page <http://ascom-standards.org>.

Created with the Personal Edition of HelpNDoc: [Simplify Your Help Documentation Process with a Help Authoring Tool](#)

ASCOM Properties and Methods

ASCOM Properties and Methods

Please refer to the ASCOM web site <http://ascom-standards.org> for a description of the Properties and Methods used in the ASCOM-standard interfaces.

Created with the Personal Edition of HelpNDoc: [Free help authoring tool](#)

File Locations

All data files needed and/or created by m1Live are saved in the following locations:

Vista/Win7/ Win 8 = ...\\ProgramData\\RRCI folder

XP = ..\\Documents and Settings\\All Users\\WINDOWS\\Application Data\\RRCI

Created with the Personal Edition of HelpNDoc: [News and information about help authoring tools and software](#)
