

m10ASYS ASCOM Driver

Table of contents

Introduction 3

System Requirements 6

 Elk m1 Rules, Texts, Counters, Etc. 6

Optional 12

 Scope Position Sensor 12

Setup 13

 Hall Sensor Calibration 13

Features 13

Supported Software 14

Hardware Required 14

Setup 14

 Calibration 14

Safety Features 16

Introduction

ASCOM dome/roof driver for observatories using the ELK M1 Gold and m1OASYS architecture.

Overview

Introduction

Welcome to m1OASYS

m1OASYS is an ASCOM-compliant observatory roof driver designed specifically for observatories controlled by an Elk M1 Gold security and automation system. The driver provides a reliable interface between ASCOM-compatible astronomy applications and the observatory roof, allowing automated roof operation while maintaining multiple layers of operational safety.

The driver supports roll-off roofs, clam-shell roofs, and other observatory enclosures that can be controlled through Elk M1 outputs and monitored through Elk M1 zones. By leveraging the Elk M1's proven reliability and extensive I/O capabilities, m1OASYS provides a robust observatory automation solution suitable for both attended and unattended operation.

Key Features

ASCOM Dome Interface

m1OASYS implements the ASCOM Dome interface, allowing compatibility with a wide range of astronomy applications including:

- NINA
- Voyager
- ACP
- TheSkyX
- Sequence Generator Pro
- ASCOM Remote / Alpaca
- Other ASCOM-compliant software

Roof Control

The driver supports:

- Open roof commands
- Close roof commands
- Abort roof movement
- Roof status reporting
- Open and closed limit monitoring

Mount Safety Integration

Optional mount safety monitoring prevents unsafe roof movement when a telescope is not in a known safe position.

Features include:

- Safe-to-open verification

- Safe-to-close verification
- Continuous safety monitoring
- Configurable enable/disable operation

Pulse Telemetry

For installations equipped with a pulse or hall-effect sensor, m1OASYS can provide advanced roof position tracking.

Features include:

- Real-time pulse counting
- Roof percentage open calculation
- Automatic calibration
- Motion verification
- Position reporting

Motion Verification

Optional motion verification enhances operational safety by confirming that roof movement is actually occurring after a movement command is issued.

Features include:

- Motion timeout detection
- Stalled roof detection
- Fault reporting
- Automatic safety shutdown

Fault Detection and Recovery

m1OASYS continuously monitors roof operation and can detect a variety of abnormal conditions.

Examples include:

- Motion timeout faults
- Communication failures
- Safety violations
- Position inconsistencies

The driver maintains detailed fault information and provides diagnostic information through the Status Window.

Real-Time Status Window

An integrated status window provides live telemetry and operational information.

Displayed information includes:

- Roof state
- Percent open
- Pulse count
- Mount safety status
- Fault status
- Last fault time
- Reconnect history

- Watchdog activity

Multi-Controller Support

Current versions support multiple controller architectures including:

- Single-button motor controllers
- Dedicated Open/Close controllers
- Dedicated Open/Close/Stop controllers

This allows the driver to interface with a wide variety of commercial and custom roof control systems.

ASCOM Remote and Alpaca Compatibility

m1OASYS can be used through ASCOM Remote Server, making the observatory available over an Alpaca network connection.

This allows remote control from compatible Alpaca clients while preserving the full functionality of the native ASCOM driver.

Design Goals

m1OASYS was designed with the following objectives:

- Reliability
- Safety
- Simplicity
- Compatibility
- Fault tolerance
- Observatory automation

The driver emphasizes predictable operation and safe recovery from abnormal conditions while remaining easy to configure and maintain.

Intended Audience

This documentation is intended for:

- Observatory owners
- Astrophotographers
- Remote observatory operators
- Observatory system integrators
- ASCOM software users
- Elk M1 automation users

Whether operating a backyard roll-off roof observatory or a fully automated remote installation, m1OASYS provides a flexible and reliable roof automation platform integrated with the ASCOM ecosystem.

No warranty as to the operation or automation of the observatory equipment; it simply provides components for 'Do It Yourself' automation projects.

Caution! Automation of any rolling roof observatory requires special attention with regard to the location of individuals in the observatory, as well as the position of the telescope/mount, prior to moving the roof to ensure no one or nothing obstructs the roofs path. Serious injury to individuals and/or damage to telescope, mount or the observatory may occur if this advice is not followed. We recommend that all users of m1 ASCOM driverLive implement safety policies and procedures regarding the operation of their rolling roof. In addition we strongly recommend installation of safety sensors that will prevent or stop movement of the roof should individuals or equipment move into an unsafe position before or during roof movement. For remote/automated operation of rolling roofs it is recommended that the “*Allow Remote Apps to Open/Close the Roof*” check-box in the m1 ASCOM driverLive Live software be unchecked if the roof does not safely clear the scopes/mounts. Misuse or careless operation can cause serious damage to your equipment or individuals. The author of the software and the distributor of the equipment (1) make no warranty or representation to the user as to the operation of this System and (2) is NOT responsible for any injury or damage that may occur from careless implementation, operation or misuse. **Opening or Closing a roll-off roof is not a trivial task and the operator needs to take all necessary precautions before starting the roof motor. Damage to equipment or persons can occur when the roof is in motion so all necessary precautions should be taken before executing such a command.**

Created with the Personal Edition of HelpNDoc: [Revolutionize your documentation process with HelpNDoc's online capabilities](#)

System Requirements

Hardware Requirements

- Windows PC
- ASCOM Platform
- ELK M1 Gold with XEP Ethernet interface
- Configured ElkRP automation rules
- Optional Hall-effect pulse sensor
- Optional scope-safe sensors
-

Driver Architecture

Component	Responsibility
ELK M1	Hardware authority and sensor evaluation
ASCOM Driver	Roof control, telemetry, safety enforcement
Client Software	Observatory sequencing and telescope control

Created with the Personal Edition of HelpNDoc: [Import and export Markdown documents](#)

Elk m1 Rules, Texts, Counters, Etc.

ELK M1 Configuration

Overview

The m1OASYS ASCOM Roof Driver communicates directly with the ELK M1/XEP using Elk ASCII text commands over TCP/IP.

The ELK provides:

- Hardware relay control
- Roof position sensing
- Optional Hall pulse telemetry
- Optional scope-safe interlock evaluation
- Status responses back to the ASCOM driver

The ASCOM driver is responsible for:

- Roof automation
- Telemetry interpretation
- Safety enforcement
- Calibration
- Watchdog protection
- ASCOM interoperability

Required ELK Configuration

Required Tasks

The following ELK tasks are expected by the driver.

Task	Purpose
Task 1	Open Roof
Task 2	Close Roof
Task 3	Stop Roof
Example names:	
Task Number	Suggested Name
1	Open Roof
2	Close Roof
3	Stop Roof

Required Zones

Roof Open Limit

Zone	Purpose
Zone 11	Roof Opened Sensor
Expected behavior:	
• NOT SECURE = Roof fully open	

Roof Closed Limit

Zone	Purpose
Zone 12	Roof Closed Sensor
Expected behavior:	
• SECURE = Roof fully closed	

Optional Zones

Scope Safety Sensor

Zone	Purpose
Zone 7	Scope Safe Sensor
Expected behavior:	
• SECURE = Telescope safe for roof motion • NOT SECURE = Unsafe for roof motion	
This zone is only required if:	
• "Enable Mount Safety Sensors" is enabled in the ASCOM Setup Dialog.	

Hall Pulse Sensor

Zone	Purpose
Zone 5	Roof Motion Pulse Sensor
Used for:	
• pulse counting • calibration • percent-open tracking • watchdog protection	
This zone is optional.	

Required Counters

Roof Pulse Counter

Counter	Purpose
Counter 7	Roof motion pulse count
The driver polls this counter during motion when pulse telemetry is enabled.	

Required Text Definitions

Open Roof Command

Text Number	Value
2	09tn00100C4^M

Close Roof Command

Text Number	Value
3	09tn00200C3^M

Roof Status Query

Text Number	Value
7	09xx00100B6^M

Scope Safety Query

	Text Number	Value
	20	11xx005sensoron0042^M

Pulse Counter Query

	Text Number	Value
	25	07cv00729^M

Required Driver Responses

Roof Open Response

ELK sends:

0DXX001open0039^M

Driver interprets:

- roof fully open
-

Roof Closed Response

ELK sends:

0FXX001closed006F^M

Driver interprets:

- roof fully closed
-

Roof Unknown Response

ELK sends:

10XX001unknown00EE^M

Driver interprets:

- roof moving / intermediate state
-

Scope Safety Responses

Scope Safe

ELK sends:

0FXX002Secure0081^M

Driver interprets:

- roof motion allowed
-

Scope Unsafe

ELK sends:

12XX002NotSecure0063^M

Driver interprets:

- roof motion blocked
-

Required Automation Rules

Open Roof Task

WHENEVER Open Roof (Task 1) IS ACTIVATED
THEN TURN Open Roof Relay ON

Close Roof Task

WHENEVER Close Roof (Task 2) IS ACTIVATED
THEN TURN Close Roof Relay ON

Stop Roof Task

WHENEVER Stop Roof (Task 3) IS ACTIVATED
THEN TURN Open Roof Relay OFF
THEN TURN Close Roof Relay OFF

Roof Status Query Rules

The driver periodically requests roof status using:

09xx00100B6^M

ELK must respond with:

- OPEN
- CLOSED
- or UNKNOWN

based on current limit switch state.

Pulse Counting Rule

WHENEVER Roof Pulse Zone BECOMES NOT SECURE
THEN ADD 1 TO Counter 7

Pulse Counter Reset Rules

WHENEVER Open Roof Task ACTIVATES
THEN SET Counter 7 TO 0
WHENEVER Roof Closed Sensor BECOMES SECURE
THEN SET Counter 7 TO 0

Scope Safety Rules

WHENEVER THE FOLLOWING TEXT IS RECEIVED:
11xx005sensoron0042^M

AND Scope Safe Zone IS SECURE

THEN SEND:

0FXX002Secure0081^M

WHENEVER THE FOLLOWING TEXT IS RECEIVED:

11xx005sensoron0042^M

AND Scope Safe Zone IS NOT SECURE

THEN SEND:

12XX002NotSecure0063^M

Notes

CRC Framing

The driver internally generates CRC-framed Elk packets automatically.

ELK rules must match the fully framed transmitted text including:

- packet length
 - CRC
 - carriage return (^M)
-

Optional Features

The following driver features are optional:

Feature	Required Hardware
Pulse Telemetry	Hall sensor
Percent Open Tracking	Hall sensor
Scope Safety Interlock	Scope-safe sensor

The driver supports traditional limit-switch-only operation when optional hardware is not installed.

Recommended Architecture

ELK Responsibilities

- Relay control
- Sensor authority
- Pulse counting
- Safety state determination

ASCOM Driver Responsibilities

- Roof automation
- Telemetry processing
- Calibration
- Watchdog protection
- Safety enforcement

Client Software Responsibilities

- Observatory sequencing
- Telescope parking
- Imaging automation

This separation provides a reliable and maintainable observatory control system.

Created with the Personal Edition of HelpNDoc: [Add an Extra Layer of Security to Your PDFs with Encryption](#)

Optional

Installation

m1 ASCOM driver is available via Internet download.

Important: m1 ASCOM driver requires the installation of the ASCOM Platform, available at <http://ascom-standards.org>.


Internet Installation

1. Download the latest m1 ASCOM driver driver and software.
2. You will be prompted to either 'Run' the installer or you can save it to a folder; double clicked the saved file with start the installer.
3. Follow the on screen instructions to complete the installation.
4. Once the software has successfully installed you must enter the setup areas to input the proper setting before attempting to connect your hardware.

Created with the Personal Edition of HelpNDoc: [Produce electronic books easily](#)

Scope Position Sensor

Eaton 1451E

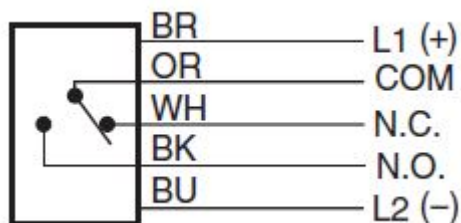

Supply power to the sensor via the m1 ASCOM driver board's +12v (brown) and -12v (Blue), then connected the common (Orange) and normally open (N.O. Black) sensor wires to the appropriate zone input.

Create rules to ensure the sensor is secure before moving the roof, and you can even wire the power through a m1 ASCOM driver output relays to give you control of turning the IR beam on and off before and after opening and closing commands are sent.

Rule examples:

WHENEVER THE FOLLOWING TEXT IS RECEIVED: "11xx005sensoron0042^M" THROUGH PORT 0
THEN TURN Scope IR Sen (Out 13) ON

WHENEVER Open Roof (Task 1) IS ACTIVATED
AND Scope 1 Sensor 1 (Zn 7) IS SECURE
THEN TURN Open Roof (Out 9) ON FOR 5 SECS

Created with the Personal Edition of HelpNDoc: [Elevate Your CHM Help Files with HelpNDoc's Advanced Customization Options](#)

Setup

Setup Configuration

1. Install the ASCOM Platform.
2. Install and register the m1OASYS ASCOM Roof Driver.
3. Configure the ELK M1 XEP IP address and port in the Setup Dialog.
4. Enable optional pulse telemetry if a Hall sensor is installed.
5. Enable optional scope safety interlock if safety sensors are installed.
6. Verify ElkRP text and automation rules are configured properly.
7. Connect the driver from NINA or another ASCOM client.

Created with the Personal Edition of HelpNDoc: [From Word to ePub or Kindle eBook: A Comprehensive Guide](#)

Hall Sensor Calibration

Calibration

The driver supports automatic roof calibration using Hall-effect pulse counting. During calibration, the roof opens fully while the driver records the pulse count. The learned value is saved automatically and used for percent-open calculations.

Created with the Personal Edition of HelpNDoc: [Easy CHM and documentation editor](#)

Features

Features

- ASCOM Dome interface support
- Open / Close / Abort roof control
- Live shutter state telemetry
- ELK M1 TCP/IP integration
- Optional Hall-effect pulse telemetry
- Automatic roof calibration
- Percent-open roof tracking
- Movement timeout watchdog
- Pulse watchdog protection
- Optional scope-safe interlock support
- Persistent calibration storage
- Integrated live telemetry status window

Supported Software

Supported Applications

- NINA
- Voyager
- Sequence Generator Pro (SGP)
- CCD Commander
- Other ASCOM automation software

Hardware Required

Hardware Requirements

- Windows PC
- ASCOM Platform
- ELK M1 Gold with XEP Ethernet interface
- Configured ElkRP automation rules
- Optional Hall-effect pulse sensor
- Optional scope-safe sensors

Setup

Setup Configuration

1. Install the ASCOM Platform.
2. Install and register the m1OASYS ASCOM Roof Driver.
3. Configure the ELK M1 XEP IP address and port in the Setup Dialog.
4. Enable optional pulse telemetry if a Hall sensor is installed.
5. Enable optional scope safety interlock if safety sensors are installed.
6. Verify ElkRP text and automation rules are configured properly.
7. Connect the driver from NINA or another ASCOM client.

Calibration

Calibration

The driver supports automatic roof calibration using Hall-effect pulse counting. During calibration, the roof opens fully while the driver records the pulse count. The learned value is saved automatically and used for percent-open calculations.

Telemetry

- Roof state
- Percent open
- Pulse count
- Fault state
- Reconnect status
- Watchdog events
- Calibration status

Roof Position Tracking and Calibration

Both the RRCI and m1OASYS roof controllers use a combination of hall-effect pulse counting and physical open/closed limit sensors to determine roof position and movement status.

Hall Pulse Counting

As the roof moves, a hall-effect sensor generates pulses that are counted by the controller. During calibration, the roof is moved from the fully closed position to the fully open position and the total pulse count is recorded as the calibrated travel distance.

This calibrated value is stored and used to estimate roof position as a percentage:

- 0% = Fully Closed
- 100% = Fully Open
- Intermediate values are calculated from the current pulse count relative to the calibrated full-travel pulse count.

Open and Closed Limit Sensors

Physical limit sensors provide positive confirmation when the roof reaches either end of travel.

When the Open limit sensor is active, the driver considers the roof fully open regardless of pulse count.

When the Closed limit sensor is active, the driver considers the roof fully closed regardless of pulse count.

These sensors serve as the authoritative source for endpoint position and provide protection against lost pulse counts, controller restarts, or communication interruptions.

Reconnect and Recovery Behavior

If the controller reconnects after a restart and pulse information is unavailable, the driver uses the state of the limit sensors to restore roof position.

For example:

- Open sensor active → Roof position restored to 100% open.
- Closed sensor active → Roof position restored to 0% open.

This ensures that roof status remains accurate even if the controller's internal pulse counter has been reset.

m1OASYS Driver

The m1OASYS driver relies primarily on controller-reported roof state and limit sensor status. Hall pulse telemetry is used to provide position estimates, progress indication, and calibration information, but the physical limit sensors remain the authoritative indication of whether the roof is fully open or fully closed.

Summary

- Hall pulses provide continuous position tracking during movement.
- Open and Closed limit sensors provide authoritative endpoint verification.
- Calibration establishes the full-travel pulse count.
- Reconnect recovery uses limit sensor status to restore accurate roof position if pulse information is unavailable.

This combination provides both accurate position tracking and reliable operation during controller restarts, communication interruptions, or recovery from fault conditions.

Created with the Personal Edition of HelpNDoc: [Make the switch to CHM with HelpNDoc's hassle-free WinHelp HLP to CHM conversion tool](#)

Safety Features

Safety Features

Movement Timeout Watchdog

Detects stalled motion, failed relays, missing limit transitions, or roof jams. Automatically aborts motion and reports a fault state.

Pulse Watchdog Protection

When pulse telemetry is enabled, the driver monitors Hall pulses during roof movement. If motion pulses stop unexpectedly, the driver enters a fault state.

Scope Safety Interlock

Optional hardware-based scope-safe interlocks can be enabled through ELK rules. When enabled, the driver blocks roof movement unless the ELK reports the telescope is in a safe position.

Created with the Personal Edition of HelpNDoc: [Effortlessly upgrade your WinHelp HLP help files to CHM with HelpNDoc](#)
