EduBook

User Manual



Version 1.0
Nov. 2009

Copyright

The information in this manual is subject to change without notice for continuous improvement in the product. All rights are reserved. The manufacturer assumes no responsibility for any inaccuracies that may contain in this document, and makes no commitment to update or to keep current information contain in this manual.

No part of this manual may be reproduced, copied, translated or transmitted, in whole or in part, in any form or by any means without the prior written permission of the DMP Electronics Inc.

©Copyright 2009 DMP Electronics Inc.
Manual No.: IUMeEduBook-01 Ver.1.0
- 1st Issued Date: Nov. 26, 2009

Trademarks Acknowledgment

The EduBook is the registered trademarks of DMP Electronics Inc.

Microsoft®, Windows® and AMI are registered trademarks of Microsoft Corporation and American Megatrends Inc. in the United States and/or other countries respectively.

Other brand names, product names or trade names appearing in this document are the properties and registered trademarks of their respective owners. All names mentioned herewith are served for identification purpose only.

Table of Contents

Chapter 1

Introduction.....4
1.1 Specifications.....4
1.2 Safety Precaution.....5
1.3 Notes for EbuBook.....6
1.4 Package and options of EduBook.....8

Chapter 2

Structure.....9
2.1 EduBook Outline.....9
2.2 Power Switch & LEDs Summary.....12

Chapter 3

Installation.....13
3.1 Storage Setup.....13
3.1.1 Install SD Card and settings.....13
3.1.2 Install Solid-State Disk and settings.....17
3.2 Install Windows XP.....20
3.2.1 BIOS settings for Windows XP.....20
3.2.2 Install by a USB DVD/CD ROM.....21
3.2.3 Drivers download and install.....22
3.2.4 Optimizing Windows XP.....24
3.3 Replace Rechareable Batteries.....31
3.4 Boot From LAN.....32

Chapter 4

Warranty.....33

Chapter 1
Introduction

➢ 1.1 Specifications

Processor & Chipset	PMX-1000 x86 SoC, 1.0GHz
Memory	DDR2 512MB
Storage	4GB SD & Internal SD Socket x 1 (Or SSD-8GB PATA)
Display	8.9” WSVGA, 1024x600, LED Backlight
Network	10/100 Mbps Fast Ethernet
Audio	HD Audio-Realtek ALC262 CODEC With Stereo Speaker
Wireless Network	Internal USB Dongle 802.11 b/g (Optional)
Output	VGA port x 1 (D-Sub 15-pin) RJ45 LAN x 1 USB 2.0 x 3 Audio Jack, Line-out x 1, Mic-in x 1
Battery	1900mAH NI-MH AA-size Rechargeable Battery x 8pcs, Build-in Battery Charger
FAN	Fanless Designed
Power Input	AC input 100~240V, 50/60Hz Universal
Weight	1.0~1.1 Kg
Operating System	Support Windows XP / Linux (Option-1: Windows XP Home Edition) (Option-2: Ubuntu 8.04)

➢ 1.2 Safety Precaution

- **Do not** use AA **non-rechargeable batteries** when you plug an AC Power Cable to recharge those **batteries**.
- **Do not** use different brand name and model type AA rechargeable batteries when you plug an AC power cable to recharge those batteries.
- **Do not** expose EduBook to rain or moisture..
- **Do not** leave EduBook on your laps or any part of the body to prevent discomfort or injury from heat exposure.
- **Do not** open the cabinet to avoid electrical shock except the cover of bottom side.
- **Do not** expose dirty or dusty environment.
- **Do not** operate during a gas leak.
- **Do not** drop or place any object upon the top side of EduBook.
- EduBook of the ambient temperature should be 5℃(41℉) to 35℃(95℉)

➢ 1.3 Notes of EduBook

◆ CE & FCC Class A Note

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules and CE Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference in which case the user will be required to correct the interference at his own expense. Testing was done with shielded cables. Therefore, in order to comply with the CE and FCC regulations, you must use shielded cables with your installation.

◆ Battery power remaining

Battery power remaining of Edubook will show two modes, 15% and 85% only.

When the system shows 15% and power and battery lights shine red light, user must be recharging the batteries right away. Please look at the detail information at next page.

When the system shows 85%, user can operate the EduBook without recharging batteries.

◆ Recharge the rechargeable batteries

- **Condition1 –First Time to use Edubook:**

  For first time to use EduBook, user may need to charge those batteries about 4.5 to 5 hours.

- **Condition2 –Total Battery power remaining 15% and recharge the batteries during power off system:**

  For this condition, user may need to charge those batteries about 2 hours.

- **Condition3 –Total Battery power remaining 15% and recharge the batteries during running operating system:**
  For this condition, user may need to charge those batteries about 4 hours.
  (**We suggest not to use in above Condition3**, due to the heat may cause the unit temperature higher and operating systems crashed during recharge those rechargeable batteries and running OS at the same time.)

◆ Operating System

Customer can order EduBook with operating system of Windows XP Home Edition or Ubuntu 8.04 as optional directly, but users must be backup the original operating system by themselves. We recommend customers use GHOST.EXE to backup original operating system with all necessary drivers installed as a GHO file.

If users forget to backup the original operating system with all necessary drivers installed, please contact the nearest dealers to restore your system which may be charged the installation fee.

➢ 1.4 Package of EduBook

▲ Package List

EduBook	x	1 piece
AC Power Cable	x	1 piece







Chapter 2

Structure

➢ 2.1 EduBook Outline

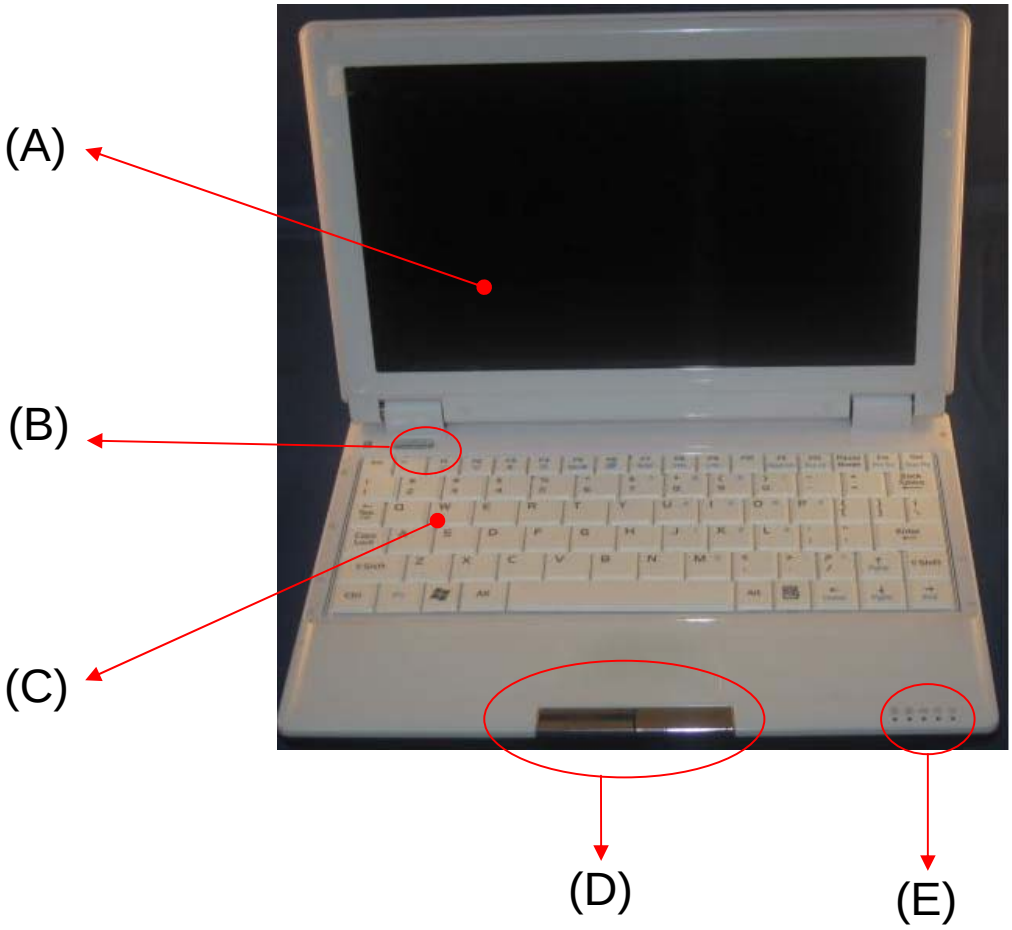


(A) 8.9” WSVGA, 1024x600, LED Backlight
(B) Power Switch
(C) Keyboard
(D) Touchpad and button
(E) LED lights

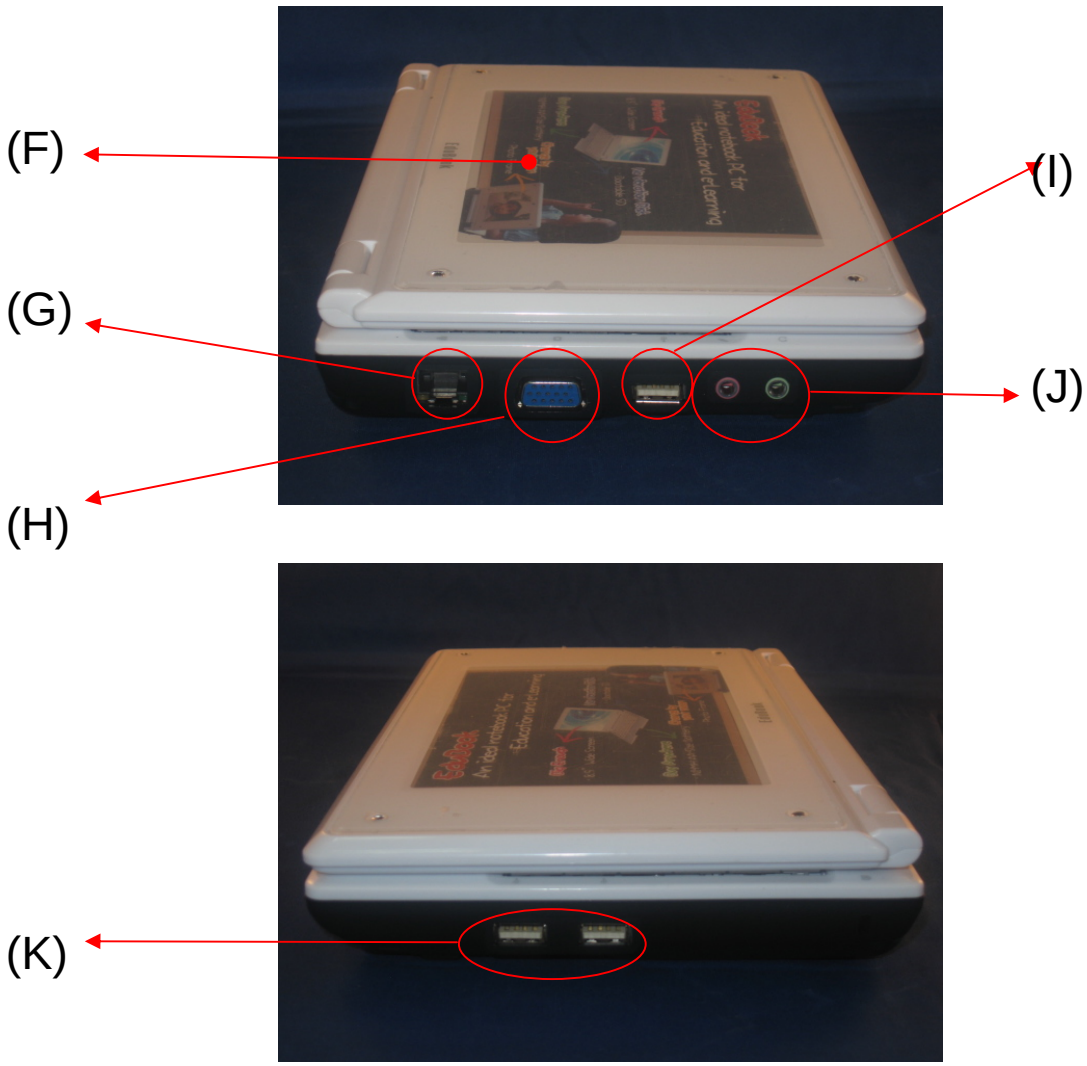

(F) Top of EduBook. (Changeable Photograph)
(G) 10/100 Mbps Ethernet Port. (RJ45)
(H) VGA/CRT output.
(LCD or VGA/CRT output either one can be displayed only.)

(I) USB 2.0/1.1 Port.
(J) **Red:** Min-In; **Green:** Line-Out
(K) Two USB 2.0/1.1 Port.

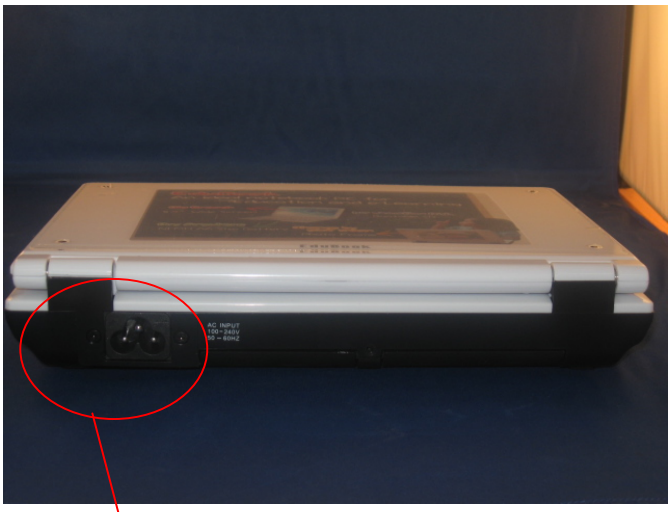

(L)



(L) AC Power Input. (100~240V; 50/60Hz)

➢ 2.2 Power Switch & LEDs Summary

◆ Power Switch



After press this switch once, the system will be power on. For power off, please press this switch about 6 seconds.

◆ LEDs





Power Indicator. (Yellow = Power On)



SD/SSD Indicator. (Yellow Blinking = Read or Write Disk)



Battery Charge Indicator.
(Yellow = Full recharged. **Red =** Recharging / Low Battery.)



Caps Lock. (Yellow = Working)




Num Lock. (Yellow = Working)


Chapter 3
Installation

➢ 3.1 Storage Setup

▲ 3.1.1 Install SD Card and settings

(1) Power off and open the bottom of EduBook
Please take these three screws and cover out.

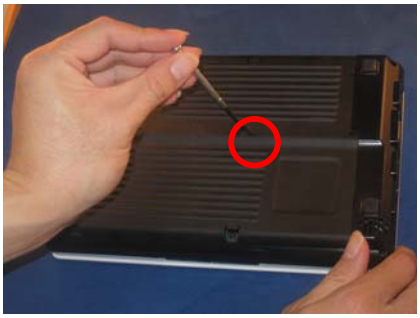

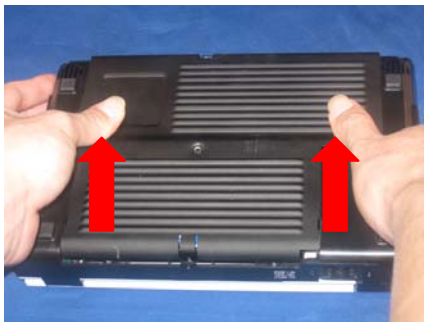




(2) Remove the CPU Module



(3) Plug-in SD Card

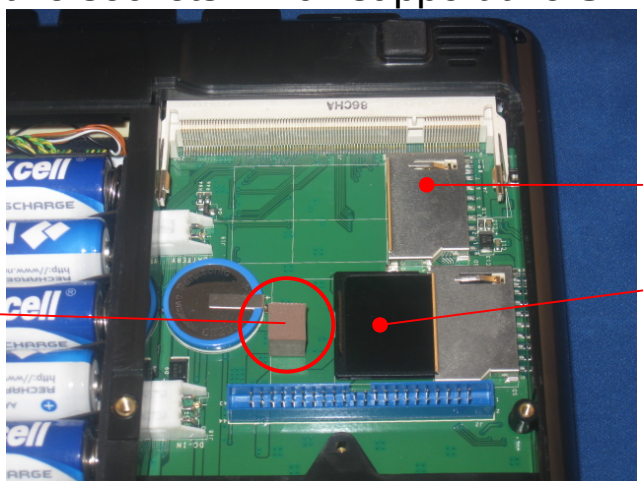There are two sockets which support two SD Cards.



(4) Refer the step 3 to 1 to install all stuffs back

[Please must replace the soft pad (gray color item in above photo show) under CPU module.]

(5) Power on and do the BIOS settings

(The real date, time, and BIOS settings have to set every time if CPU Module has removed.)


(i) Please press Power Switch to power on and then press “Del” into the BIOS settings.




(ii) Set the real Date and Time.




You may need to press both “Fn” and “F11” to disable Num Lock function.

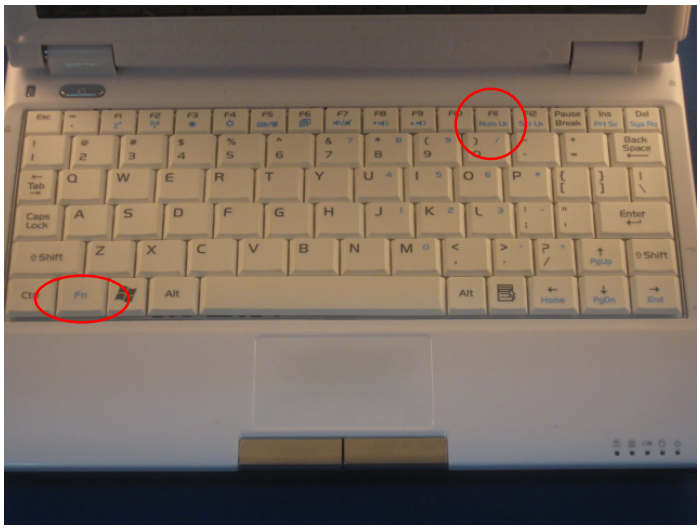


(iii) Choose the selection of “Advanced” and “IDE Configuration”, and set “Primary IDE Pin Select” to “**SD Card**”.

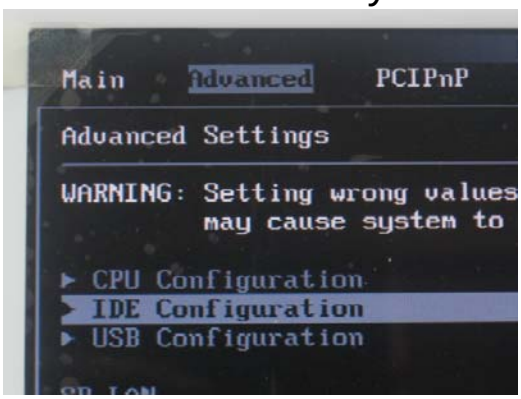

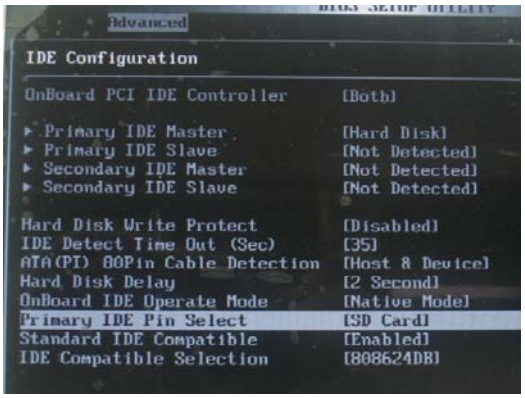

(iv) Press “F10” to save the BIOS settings.

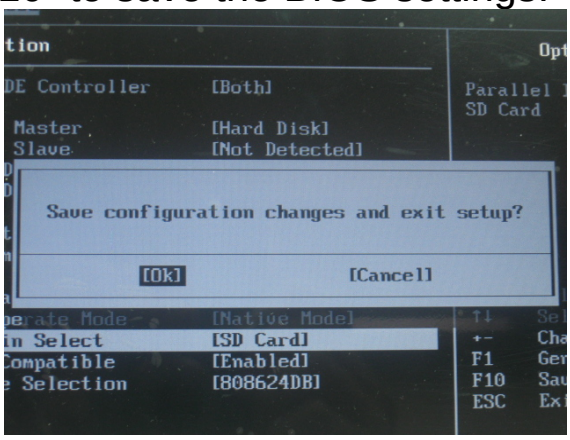

▲ 3.1.2 Install Solid-State Disk and settings


(1) Power off and open the bottom of EduBook

Please take these three screws and cover out.







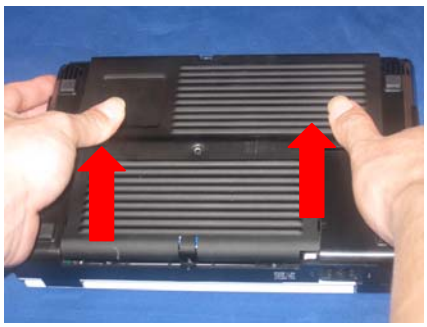



(2) Plug Solid-State Disk upon 44pin of IDE Connector




(3) Refer the step 1 to install all stuffs back


(6) Power on and do the BIOS settings

(i) Please press Power Switch to power on and then press “Del” into the BIOS settings.




(ii) Choose the selection of “Advanced” and “IDE Configuration”, and set “Primary IDE Pin Select” to “**Parellel IDE**”.

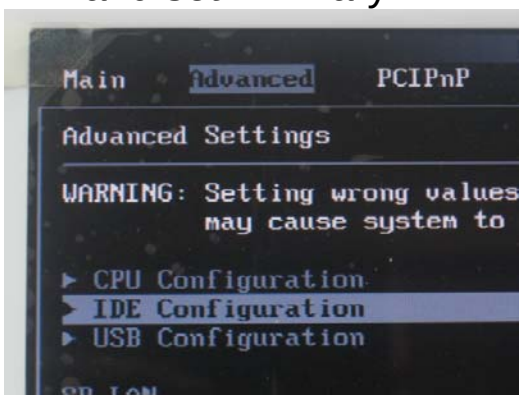

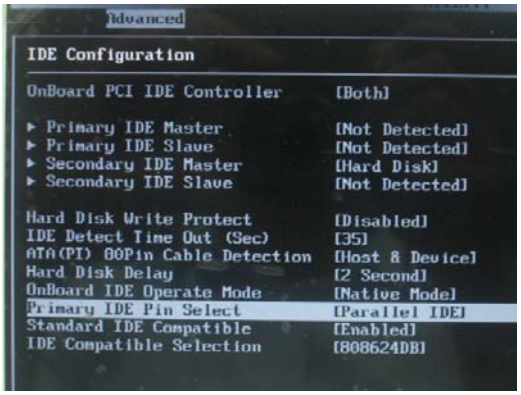

(iii) Press “F10” to save the BIOS settings.

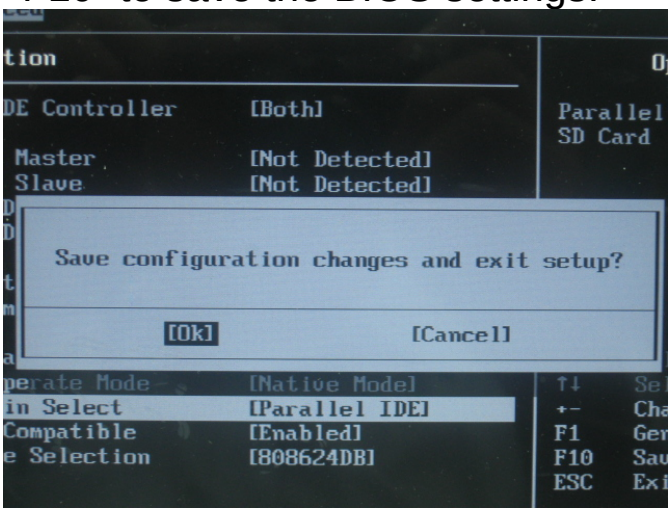


➢ 3.2 Install Windows XP


▲ 3.2.1 BIOS settings for Windows XP

Please make sure three selections to be correct setting.


(1) At “IDE Configuration”, set “OnBoard IDE Operate Mode” to “Native Mode”

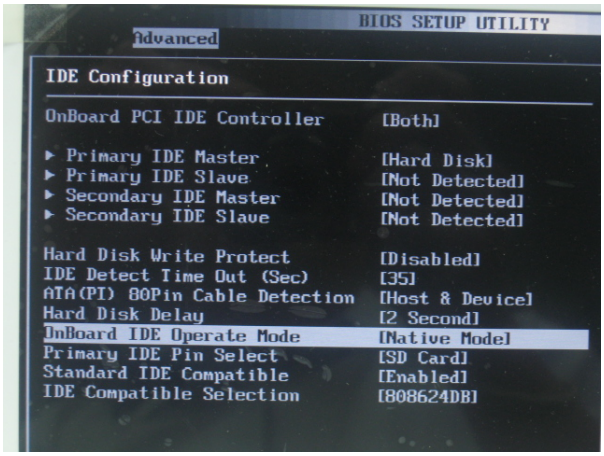

(2) At “USB Configuration”, set “USB 2.0 Controller Mode” to “FullSpeed”.

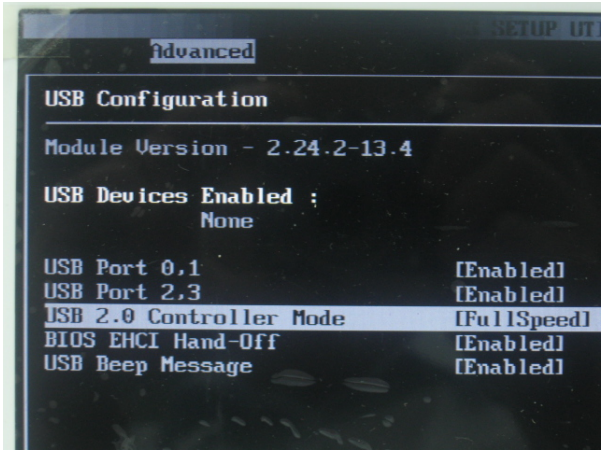


(3) At “PCIPnP”, set “PCI IDE BusMaster” to “Enabled”.

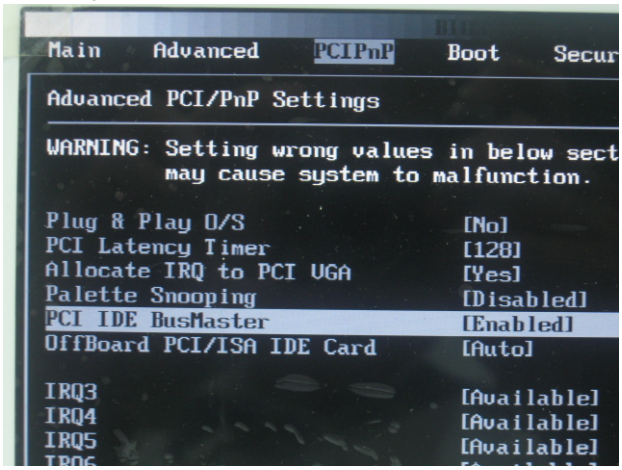

(4) Press “F10” to save the BIOS settings.

▲ 3.2.2 Install by a USB DVD/CD ROM

(1) Put the Windows XP CD Disk into the USB DVD/CD ROM.
(2) Plug in a USB DVD/CD ROM.
(3) Power on Edubook.
(4) Press “F11” to choose USB DVD/CD ROM as a first boot device.

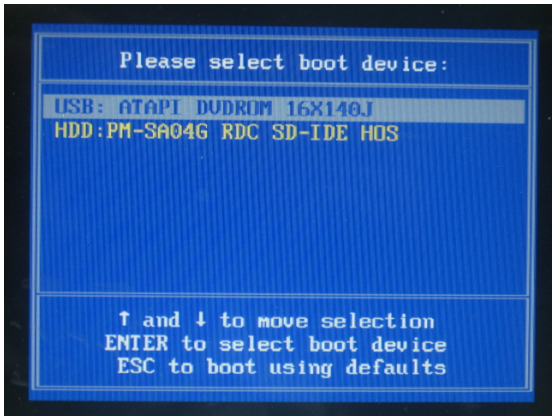

(5) Follow the steps to install Windows XP.

▲ 3.2.3 Drivers download and install

(1) Please download all drivers by
ftp://ftp.dmp.com.tw/edubook_drivers/xp_drivers
Login Name: **vxdx**
Password: **gc301**

(2) Copy all drivers to a USB Mass Storage.

(3) After system running Windows XP, please plug in that USB Mass Storage.


(4) **For HD Audio function**, please get into the folder of "**5895_PG280_UAAV10a-5013**" and then run "**Setup.exe**" to install the driver. You may need to reboot after finish installing.

(5) **For Wireless function**, please get into the folder of "**Wireless-RTL8188**" and then run "**Setup.exe**" to install the driver.

(6) **For VGA function**, please get into the folder of "**VGA-D1010_R6**" and then run "**Setup.exe**" to install the driver. After done, please reboot the system.

(7) **For Ethernet function**, please go to "Control Panel" => "System" => "Hardware" => "Device Manager" => Choose unknown device => Click the right key of touchpad or mouse => Choose "Update Driver…" => "Yes, this time only" => "Install from a list or specific location (Advanced)" => Tick "Include this location in the search" => click "Browse" and choose the driver location => "Next" => "Finish".


(8) After done, you will look at these 4 drivers working at “Device Manager”.

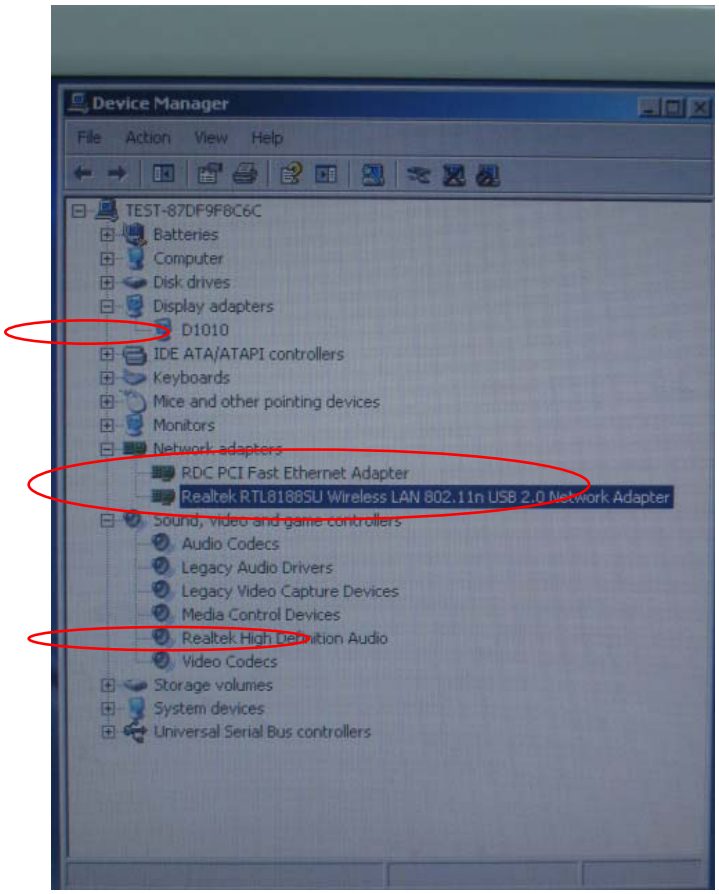

▲ 3.2.4 Optimizing Windows XP

◆ BIOS Settings

After Power-on, please press the "**Del**" key to enter the BIOS setting. In “**Advanced**” and “**CPU Configuration**”, please make sure the “**Media Port Instruction**” and “**CPUID Report Media Port**” are "**Enabled**", and then press “**F10**” to save the BIOS settings.

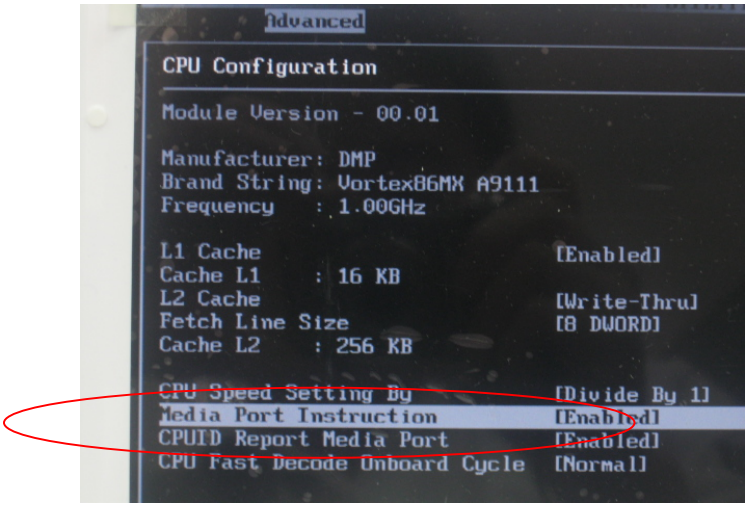



Settings in Windows XP

Adjust for best performance

(1) Go to “Control Panel” -> “System” -> “Advanced” -> Performance -> Setting.

(2) Please change to " Ajust for best performance" and then "Apply" and "OK".

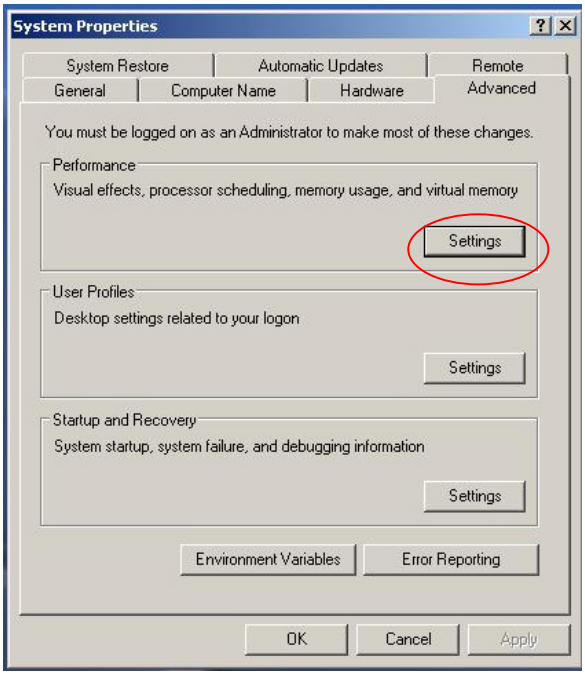


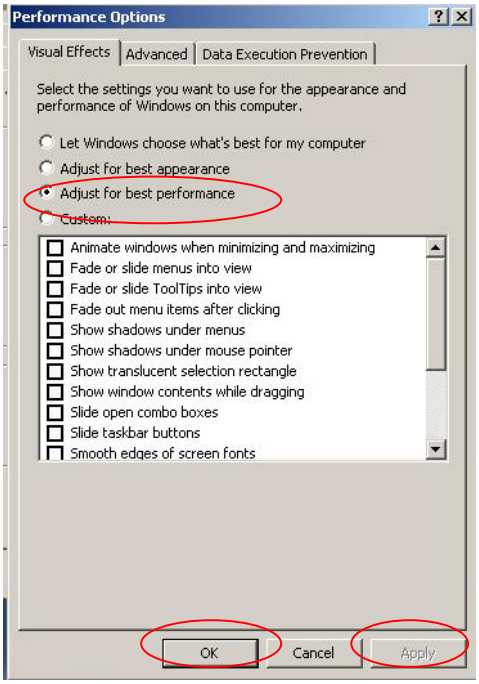

● Sounds and Audio Device Settings

(1) Go to “Control Panel” -> “Sounds and Audio Device” -> “Sounds” -> “Sound Scheme”.


(2) Please change to "No Sound" and then "Apply" and "OK".

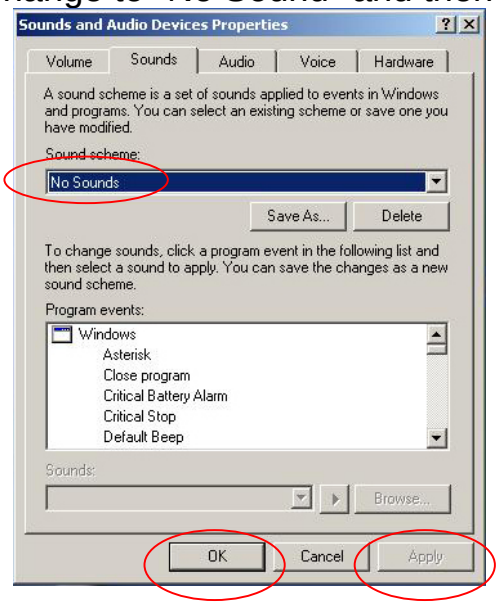

● Mouse Settings

(1) Go to “Control Panel” -> “Mouse” -> “Hardware” -> “Microsoft PS/2 Mouse” -> “Properties” -> “Advanced Setting”.


(2) Please do NOT select the " Fast Initialization" and press "OK"

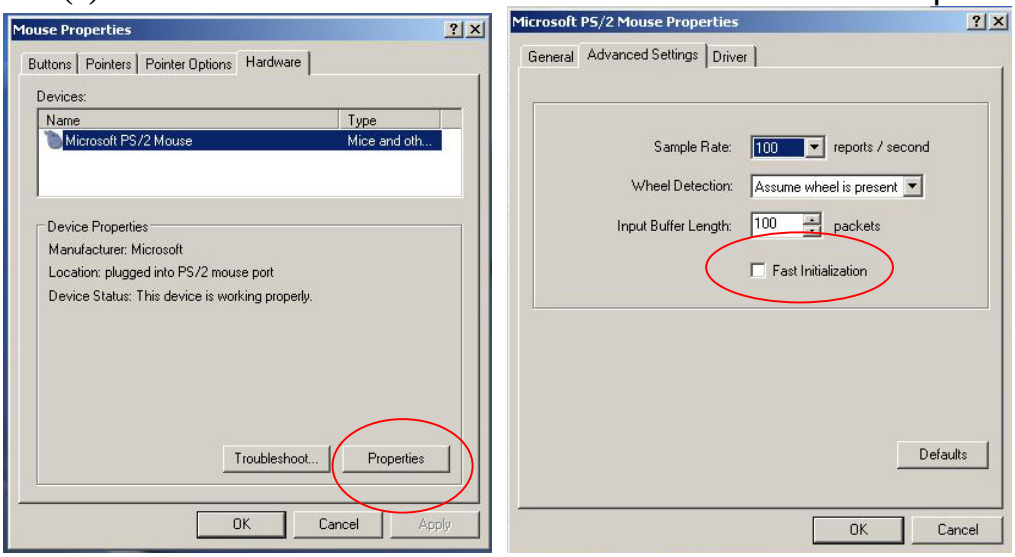


● Administrative Tools and Services Settings

(1) Go to “Control Panel -> “Administrative Tools” -> “Services” ->Click "Themes" -> Press the right key of mouse -> “Properties” -> Please "stop" the Service Status and "Disable" the Startup type.


(2) Choose “Apply" and then "OK".

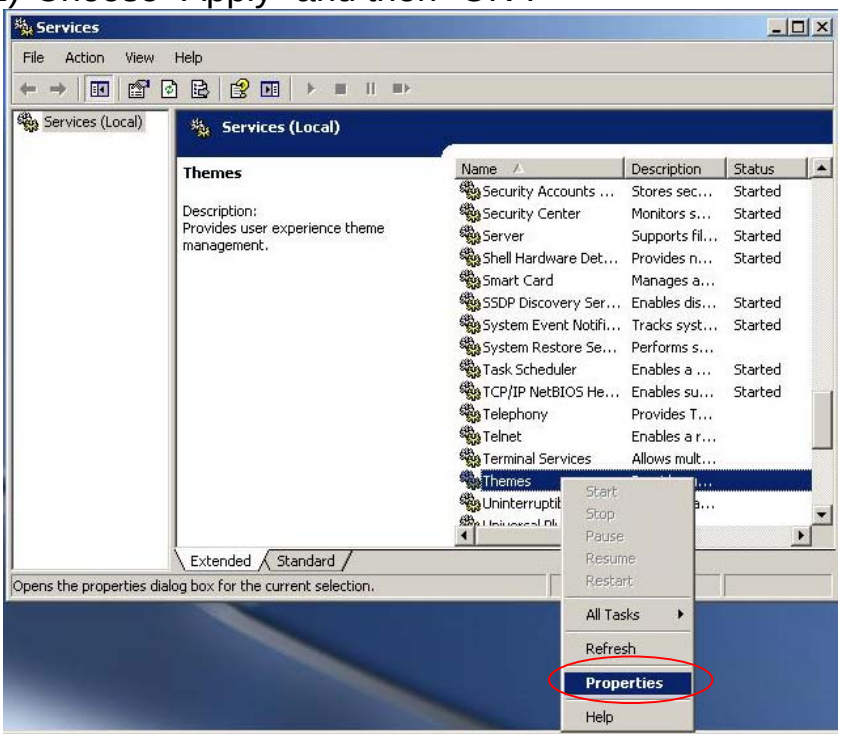


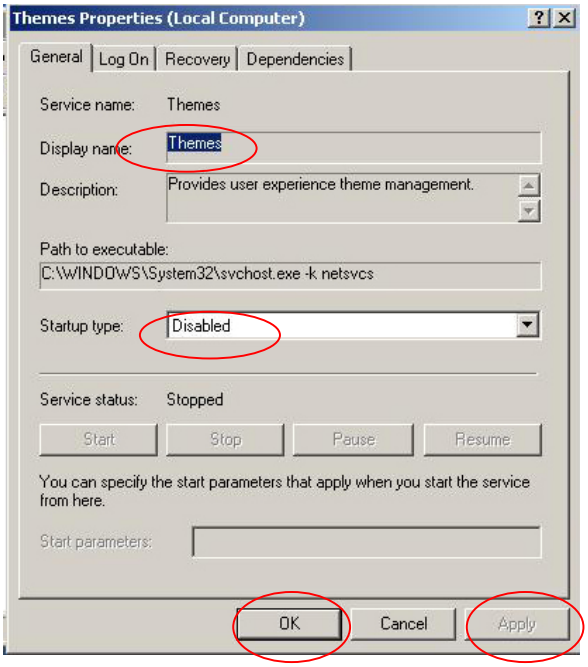

(3) Click "Terminal Services" -> Press the right key of mouse -> “Properties” -> Please "Disable" the Startup type.


(4) Choose “Apply" and then "OK".

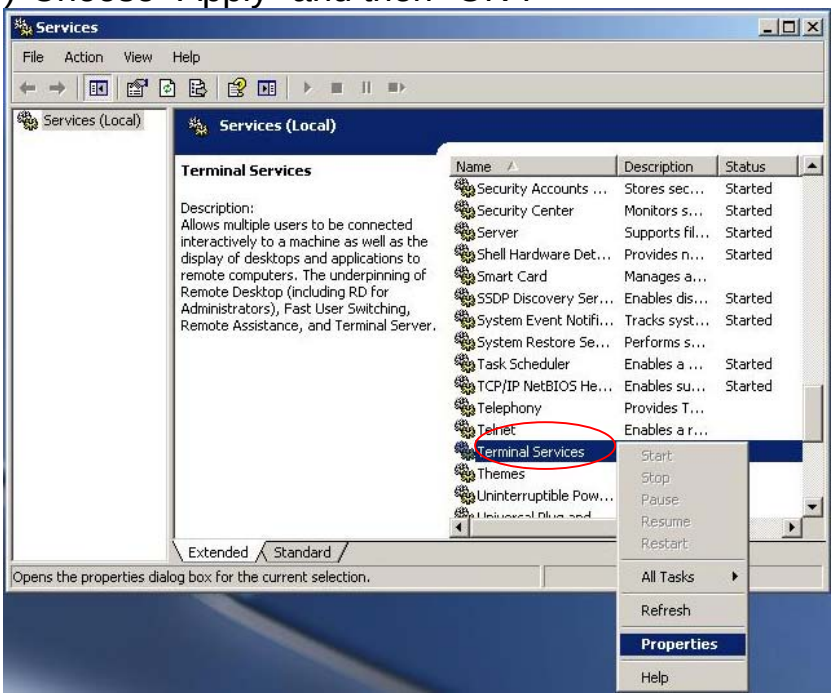


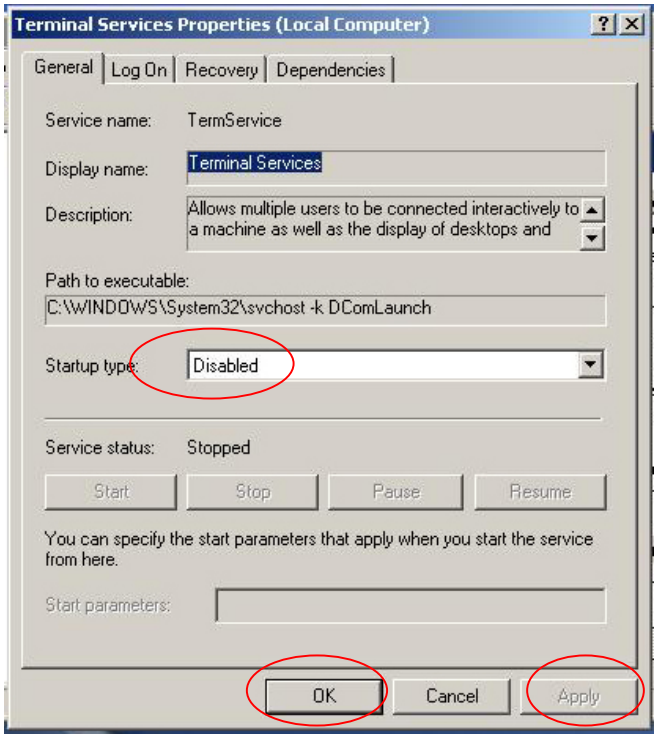

(5) Click "System Restore Service" -> Press the right key of mouse -> “Properties” -> Please "stop" the Service Status and "Disable" the Startup type.

(6) Choose “Apply" and then "OK".

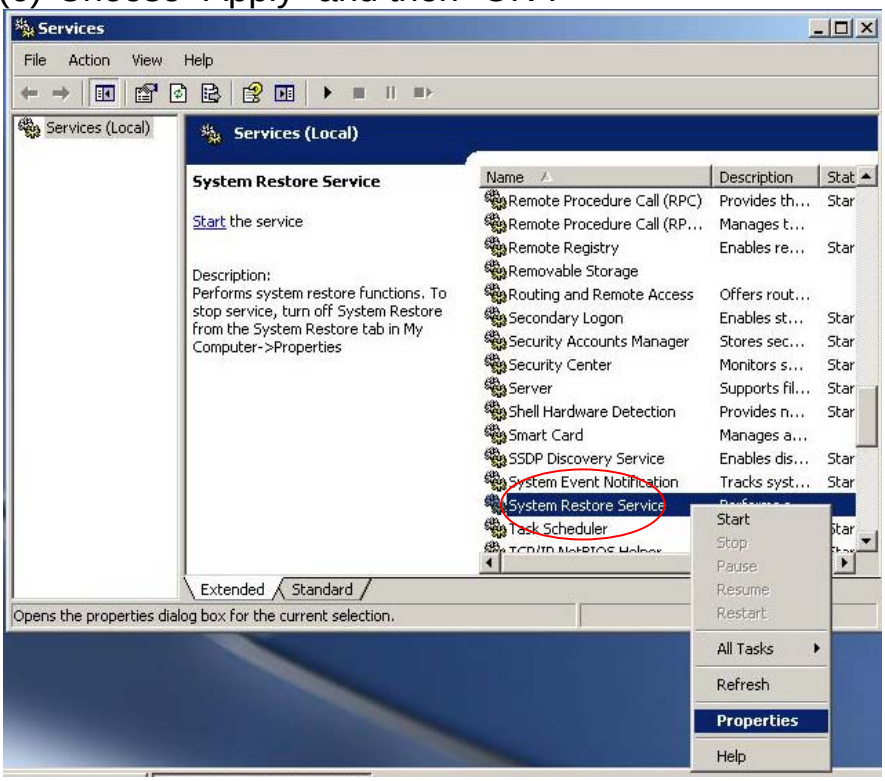


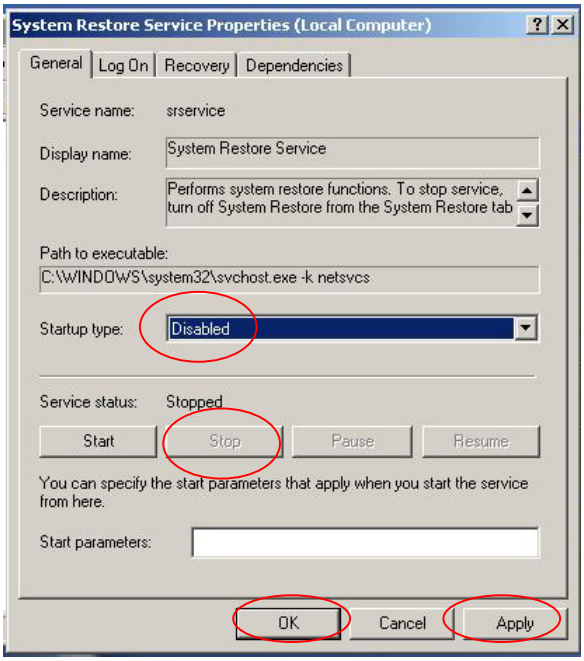


● Disk Cleanup

(1) Go to “My Computer” -> Local Drive (C:) -> Press the right key of mouse -> “Properties” -> “Disk Cleanup” -> “OK”.

(2) Please be sure to clean up all the useless files and keep the maximum free space on your Drive C:.

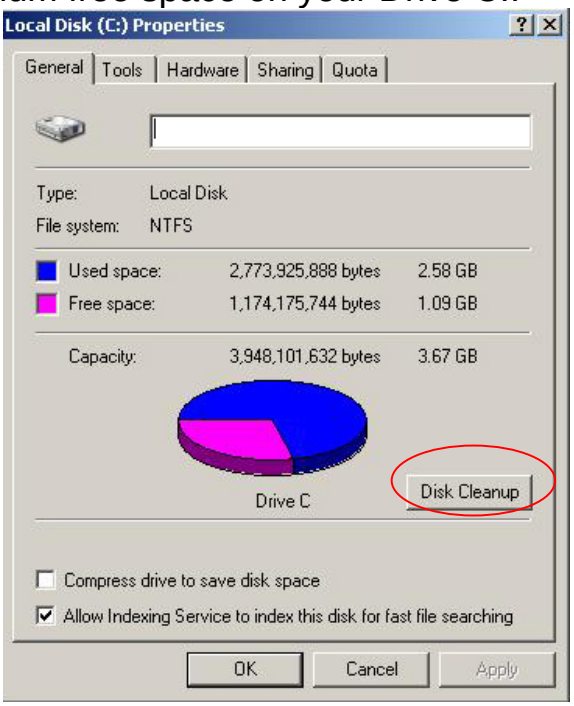

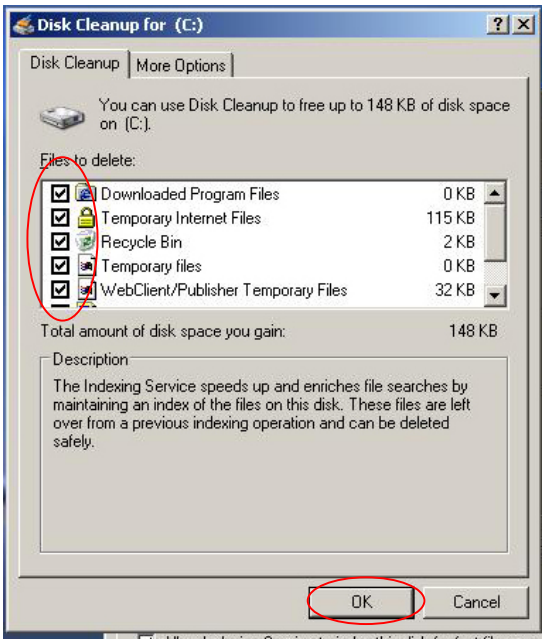

➢ 3.3 Replace Rechargeable Batteries

User can replace 8 pieces of rechargeable batteries by manual, but those rechargeable batteries must be used in the same brand and model type.







Warning:

Do not use AA **non-rechargeable batteries** when you plug an AC Power Cable to recharge those **batteries**.


➢ 3.4 Boot From LAN

User can choose the EduBook to boot from LAN. Please press “Del” key to get into the BIOS settings after power on, and then choose “Boot” and “Boot Settings Configuration” selections and set “Boot From LAN” immediately.

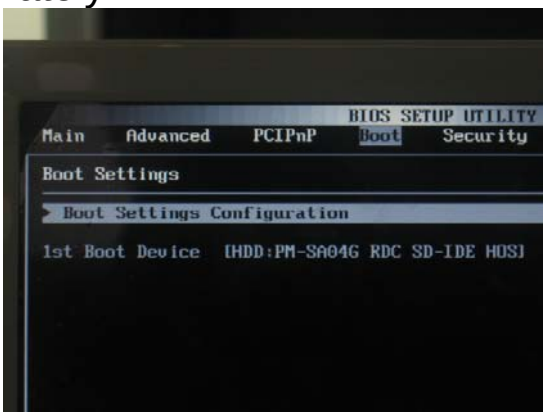

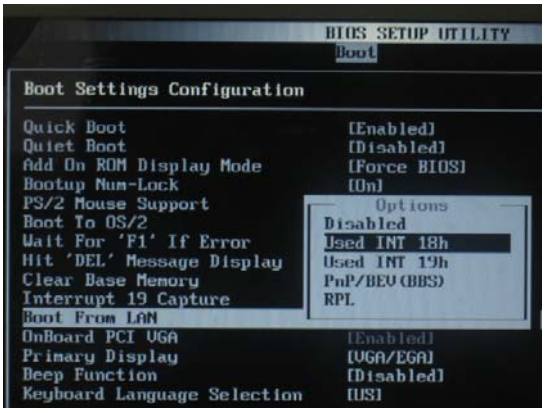

After settings, please press “F10” to save the BIOS settings.

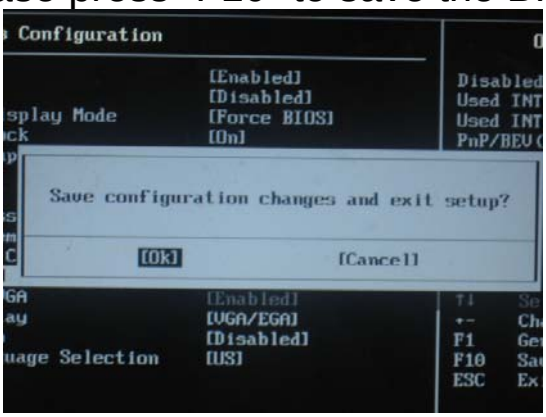

Chapter 4

Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase except SD card and AA rechargeable batteries which only have 3 months of the warranty. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster. Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, originality to use this product. Vendor will not be liable for any claim made by any other related party. Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.