



OWNER'S GUIDE • NO. 01

Updating GLIDE

A new build is a file you copy to the card and install once. Ten minutes, start to finish — and everything you've made stays exactly where it is.

WHAT YOU NEED

- Your **Cardputer**
- Its **microSD card** — the one already in it
- Any **computer**, Mac or Windows
- A way to plug the card in — an **SD adapter** or a card reader

WHAT IT TAKES

- About **ten minutes**
- No WiFi, no account, no software to install
- Nothing to back up first
- You can stop halfway and pick it up later

Your sounds are not in the app.

The ten slots, your saved tweaks, every setting, the two generative sounds unique to your device, and the odometer all live in the Cardputer's own memory — outside the program you're about to replace. Updating cannot touch them. The patch library on your card isn't touched either. There is nothing to back up, and nothing to restore afterwards.

THE WHOLE UPDATE, AT A GLANCE

01 Power off, pop the card out	02 Put the card in your computer	03 Download the newest GLIDE.bin
04 Drop it in the card's apps folder	05 Eject, and put the card back in	06 Power on, press a key to stay in Launcher
07 Delete the installed GLIDE	08 Return to the Launcher menu	09 SD → apps → GLIDE → Install

PART ONE

Put the new file on the card

Steps 01-05

01 Power the Cardputer off, then pop the card out.

The microSD slot is spring-loaded: press the card *in* until it clicks, and it springs back out far enough to pull free. Don't try to pull it out without pressing first.

Power off first. Pulling a card out of a running device is how cards get corrupted.

02 Put the card in your computer.

If your computer has a full-size SD slot, seat the microSD card in an SD adapter and use that. Otherwise any USB card reader works. The card should appear like a USB stick.

03 Download the newest `GLIDE.bin`.

Open this link in your browser. It always points at the latest build, so it never goes stale — bookmark it.

github.com/CHARL3X/GLIDE-Synth-Cardputer-ADV/releases/latest/download/GLIDE.bin

Some browsers are suspicious of `.bin` files and ask whether to keep the download. Keep it. Note where it landed — usually your Downloads folder.

04 Drag it into the `apps` folder on the card.

Open the card, open the folder named `apps`, and drag the file you just downloaded into it. Your computer will ask whether to replace the file that's already there. Replace it.

KEEP THE NAME EXACTLY `GLIDE.BIN`

If your browser saved it as `GLIDE(1).bin` or `GLIDE-1.bin`, rename it to `GLIDE.bin` before or after you move it. A file with any other name will still show up on the device, but you'll be staring at two entries wondering which is which.

05 Eject the card properly, and put it back in the Cardputer.

Eject it from your computer first — on a Mac, drag it to the Trash or press eject; on Windows, use *Safely Remove Hardware*. Then slide the card back into the Cardputer the same way it came out, and press until it clicks and stays put.

Ejecting properly is what makes sure the file is actually finished writing. Skipping it is the most common cause of "the new version isn't there."

HALFWAY POINT — AND WHY PART TWO EXISTS

The new build is on the card now, but the Cardputer is still running the old one. GLIDE is *installed* onto the device — that's why it starts the moment you power on, instead of making you go and find it every time. A newer file on the card doesn't replace a copy that's already installed, so part two clears the old one out and installs the new one. And the clearing out matters: Launcher *adds* an app rather than replacing it, so installing without deleting first leaves you with two GLIDE tiles. Two minutes, all on the device.

PART TWO

Swap the copy on the device


Steps 06-09

Screens drawn from Launcher 2.7.2. Later versions shuffle things around — the job stays the same.

06

Power on — and press any key immediately.

You have a couple of seconds. Press a key *before* the GLIDE splash appears and you'll stay in Launcher, which is the menu you need. If the synth starts up instead, you were too slow: hold the  backtick key for about a second to exit back, or power off and try again, tapping a key as it comes up.

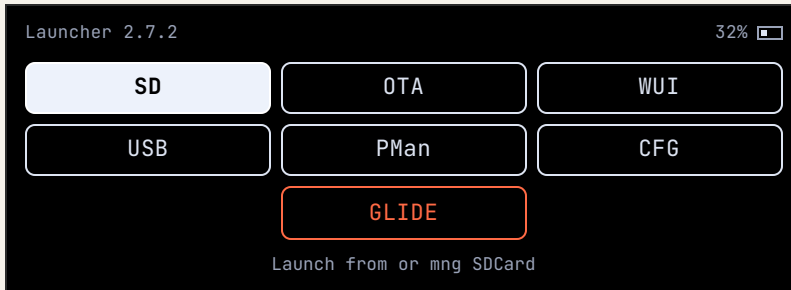

YOU'RE IN — SIX BUILT-IN TILES, AND GLIDE BELOW THEM

07

Move down to the GLIDE tile, and delete it.

GLIDE is the red tile on its own row at the bottom — it's in the picture above. Move down to it and select it, then choose **Delete** from the options that come up. Confirm if you're asked.

Don't skip this step. Launcher doesn't replace an installed app, it adds another one — install without deleting and you'll have two GLIDE tiles with nothing to tell them apart.

THIS DOES NOT DELETE YOUR SOUNDS

You're removing the *program*, not your work. Slots, settings, your two generative sounds and the odometer are stored separately and are untouched by this. They'll be exactly as you left them when the new version starts.

08


Get back to that same menu.

After the delete, return to the Launcher menu — press any key at the start screen again, the same way you did in step 06.

09

Select SD, then apps → GLIDE → install.

The **SD** tile is the card browser — its line at the bottom of the screen reads *Launch from or mng SDCard*. Open it, go into the **apps** folder, and select the **GLIDE** file you copied over in part one. Choose **Install** and let it finish. A few seconds; don't power it off while it works.

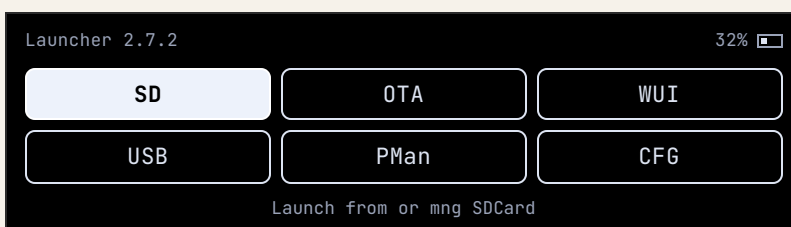

GLIDE'S TILE IS GONE NOW — THAT'S EXPECTED. SELECT SD.

DONE

Check it took

Power the Cardputer off and on. GLIDE starts, and the splash shows the version top-right. If that's the number you just downloaded, you're done — go and play it.



VERSION, TOP-RIGHT ON THE SPLASH

THE SHORTCUT, FOR NEXT TIME

Launcher can also fetch and install a new build over WiFi — no computer, no card shuffling. Press a key at the start screen, open **OTA**, join your network, pick GLIDE. Same result; the card stays as the fallback.

IF SOMETHING GOES SIDEWAYS

► GLIDE starts before I can press a key.

Power off, then tap a key repeatedly as it comes up. Or let GLIDE start and hold  for a second.

► I don't see GLIDE in the card's apps folder on the device.

It's in the wrong folder or under a different name. Back in your computer: it must sit inside `apps`, named `GLIDE.bin`.

► The version on the splash didn't change.

Either the file never finished copying (eject properly next time), or part two didn't take. Run part two again — repeating it is safe.

► I deleted GLIDE and now there's nothing to play.

Nothing is lost — the program is on your card, your sounds are in the device. Go to step 09. If the card is the problem, re-download from page 2.

► The computer doesn't see the card at all.

Try another adapter, reader, or port — nearly always the reader. Decline any offer to "repair" or "format" it: that erases your patch library.

► I've got two GLIDE tiles now.

You installed without deleting first. Delete both, then install once from `SD` → `apps`. Your sounds don't care.

► The menus don't look quite like the pictures.

Launcher moves its labels around between versions. The job is the same: remove the installed GLIDE, then browse the card to `apps` and install from there.

Updates are free, and they always will be.

Every build is free, and your sounds carry across all of them. The manual, the release notes and the source all live here — and if you're stuck, message me. I wrote it.

github.com/CHARL3X/GLIDE-Synth-Cardputer-ADV



SCAN • THE REPO