




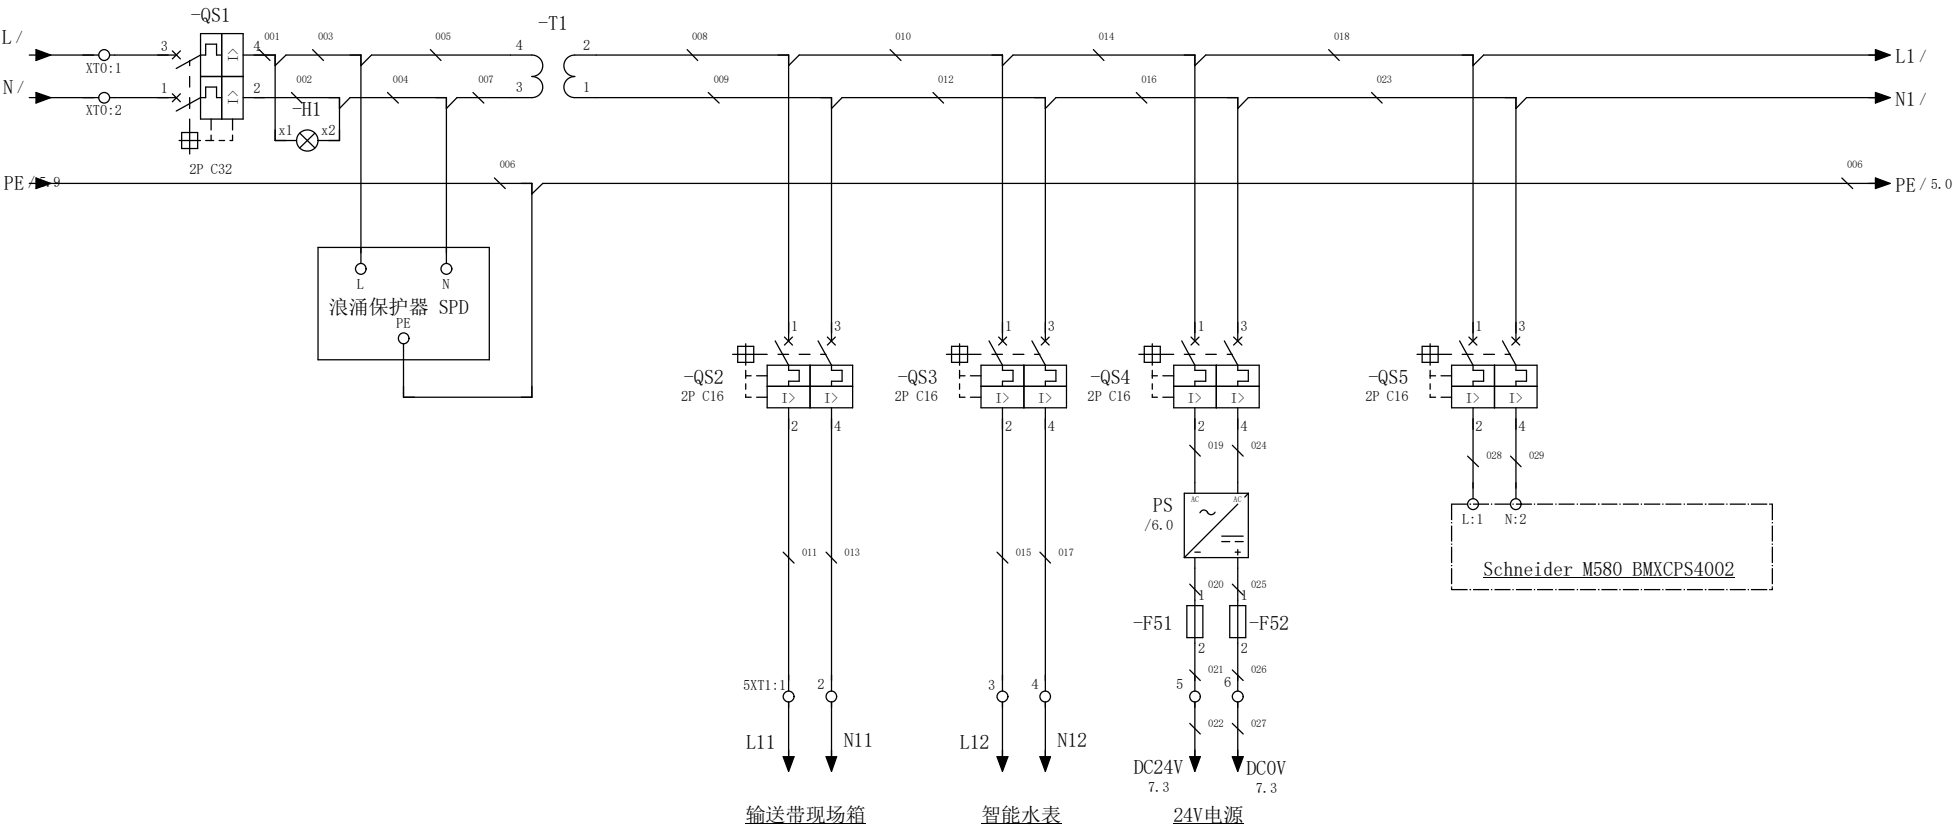

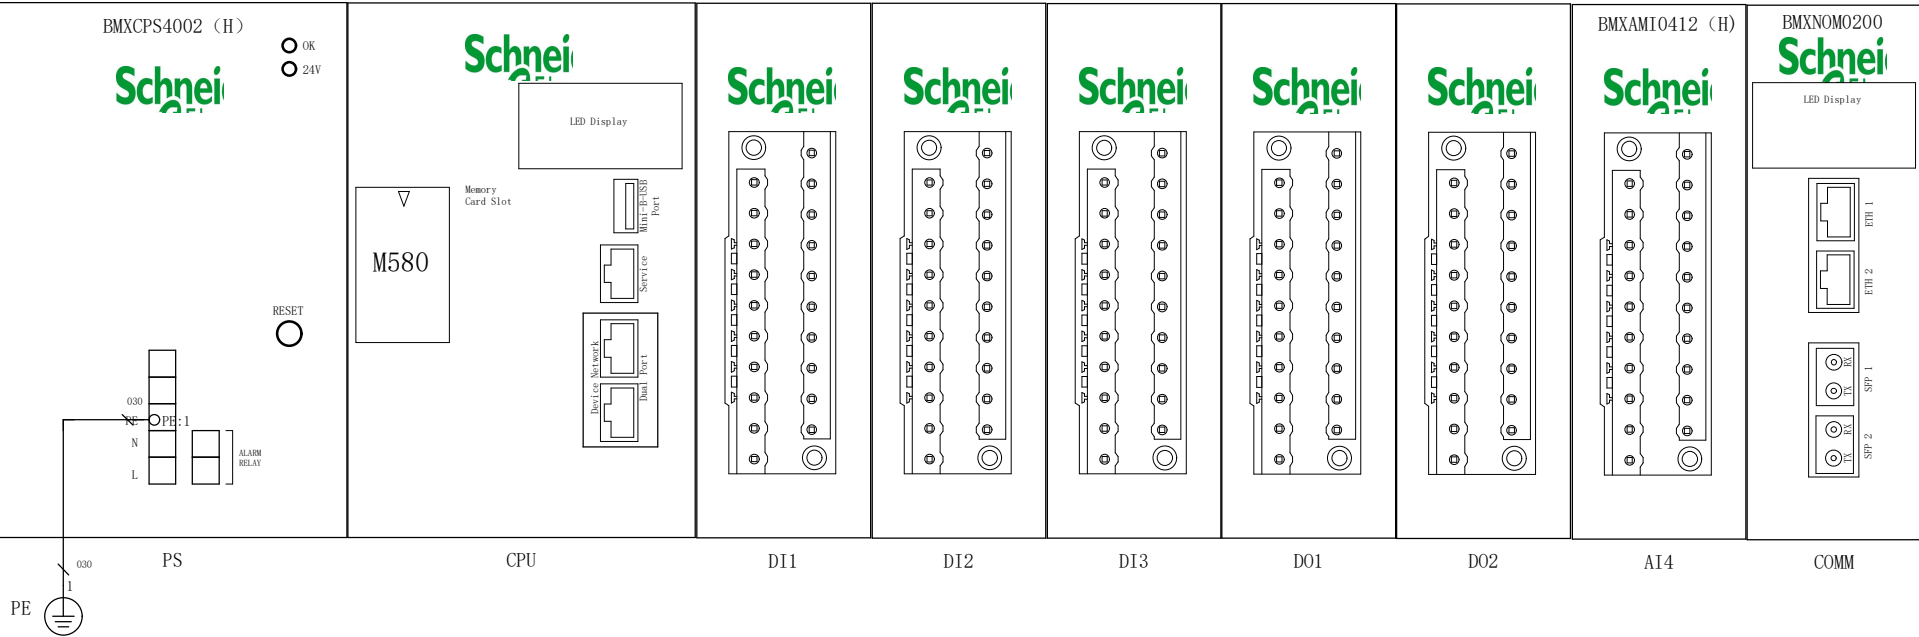

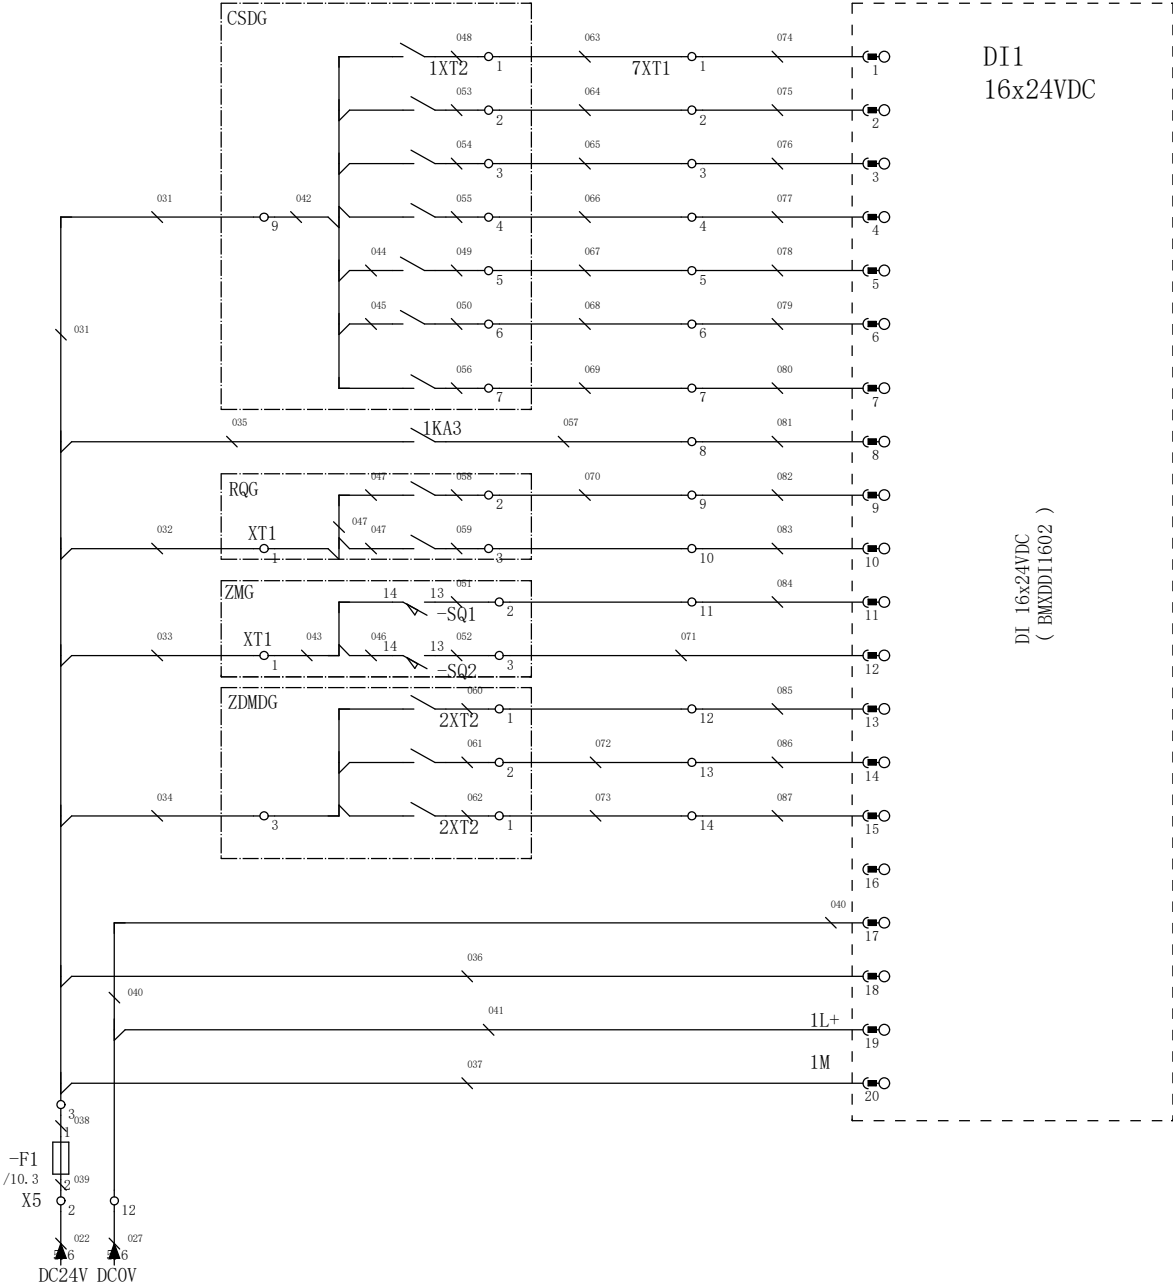

1#防堵
1#防跑偏限位1
1#防跑偏限位2
1#防撕裂
1#防滑开关
1#远程
1#就地
1#接绳急停开关1KA3
1#软启动器-运行反馈
1#软启动器-故障报警
1#下料斗门限位开关
2#下料斗门限位开关
震动马达反馈1
震动马达反馈2
震动马达保护1
备用
DC24V
DC0V



The diagram illustrates the internal wiring of the DI16 module. It shows the following components and connections:

- Input Modules:**
 - CSDG:** Contains terminals 110-116 and 125-131, connected to XT2 and 8XT1.
 - XT2:** A 7-point terminal block for CSDG.
 - XT1:** An 8-point terminal block for CSDG.
 - RQG:** Contains terminals 118-120 and 132-133, connected to XT21 and 1XT2.
 - ZDG:** Contains terminals 121-122 and 133-134, connected to 1XT2.
 - EStop:** Features a stop button symbol connected to terminal 13.
 - LMX:** Contains terminals 123-124 and 134-135, connected to 2XT1.
- Terminal Block (Right):** Labeled DI2 16x24VDC (BMXDDI1602), it has 20 terminals numbered 1 to 20. Terminals 1-7 are for CSDG, 8-12 for RQG/ZDG, 13 for EStop, 14-15 for LMX, and 16-20 for other inputs.
- Power and Other Connections:**
 - DC24V and DC0V:** Power supply inputs at the bottom left.
 - F3 and -X8:** Additional input lines on the left.
 - 1L+ and 1M:** Labels for terminals 18 and 19.

DI3
16x24VDC

DI 16x24VDC
(BMXDDI1602)

CSDG

XT3

9XT1

3KA3

RQG

XT1

SXG

XT1

XMG

1XT1

1XT2

1L+

1M


-F4

-X9


DC24V


DC0V

振动电机1-2
备用
振动电机3-4
备用
电磁阀1开
电磁阀1关
备用
电磁阀2开
电磁阀2关
备用
软启动器1-启动/停止
软启动器1-瞬停
备用
软启动器2-启动/停止
软启动器2-瞬停
备用
DC24V
DC0V



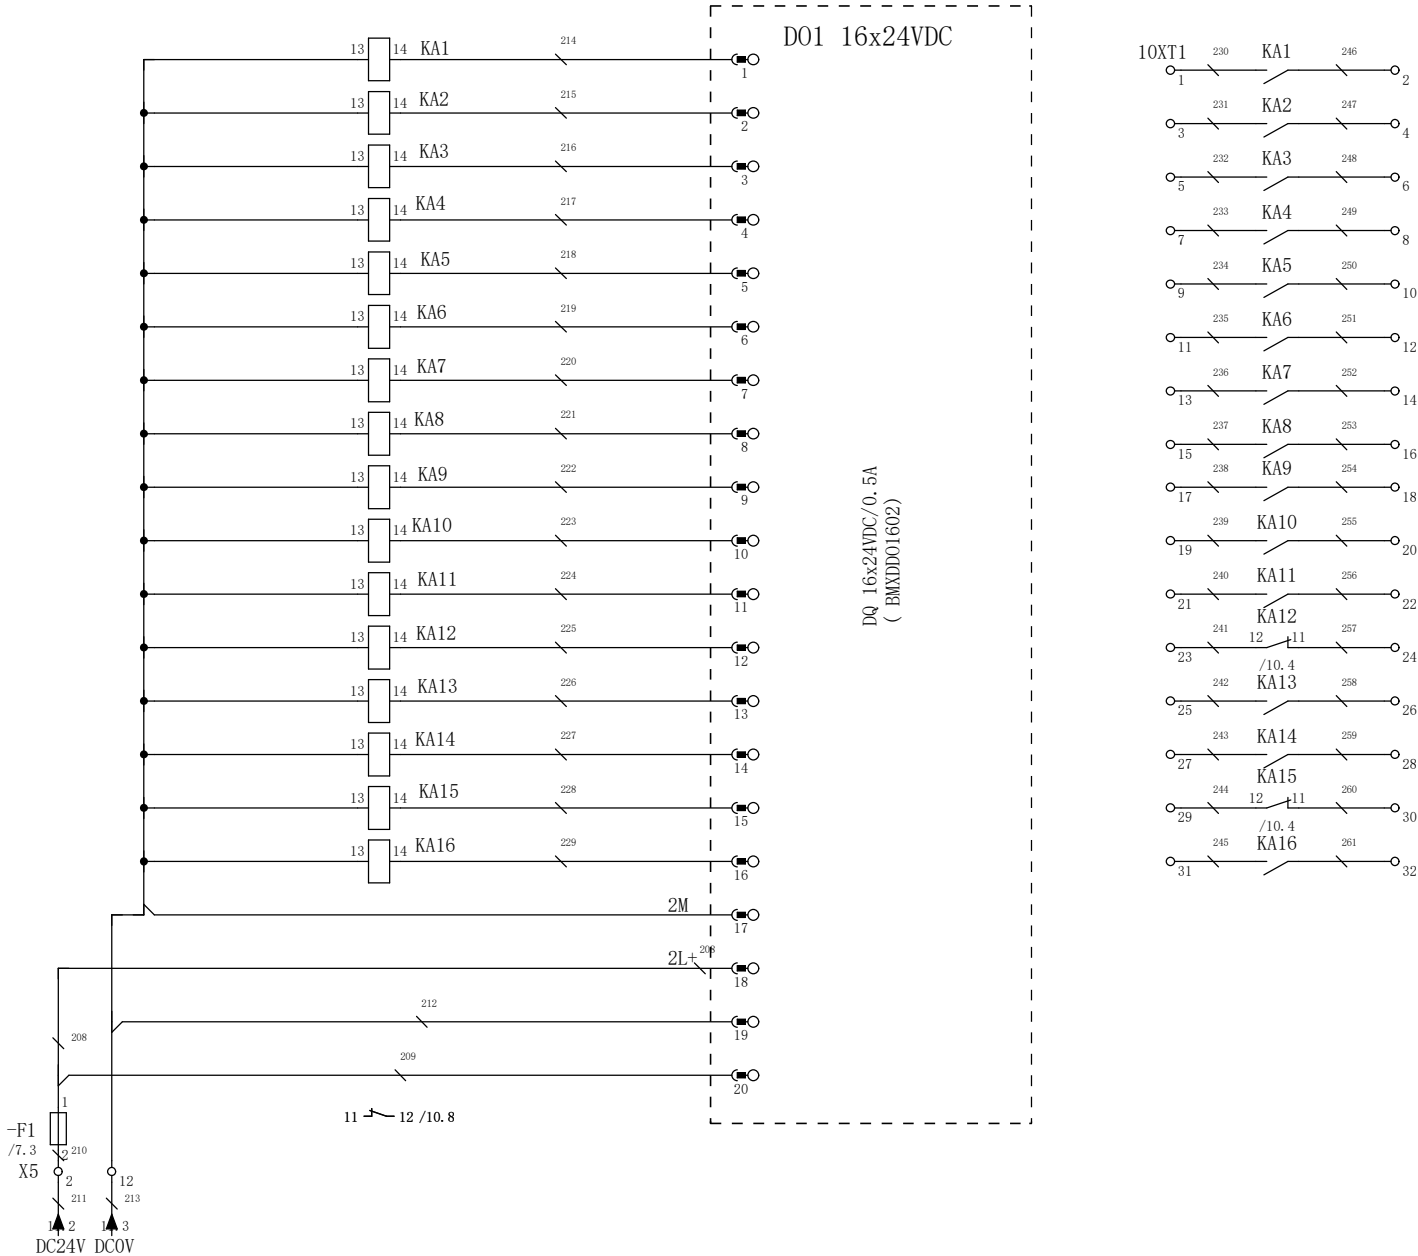


[illegible]

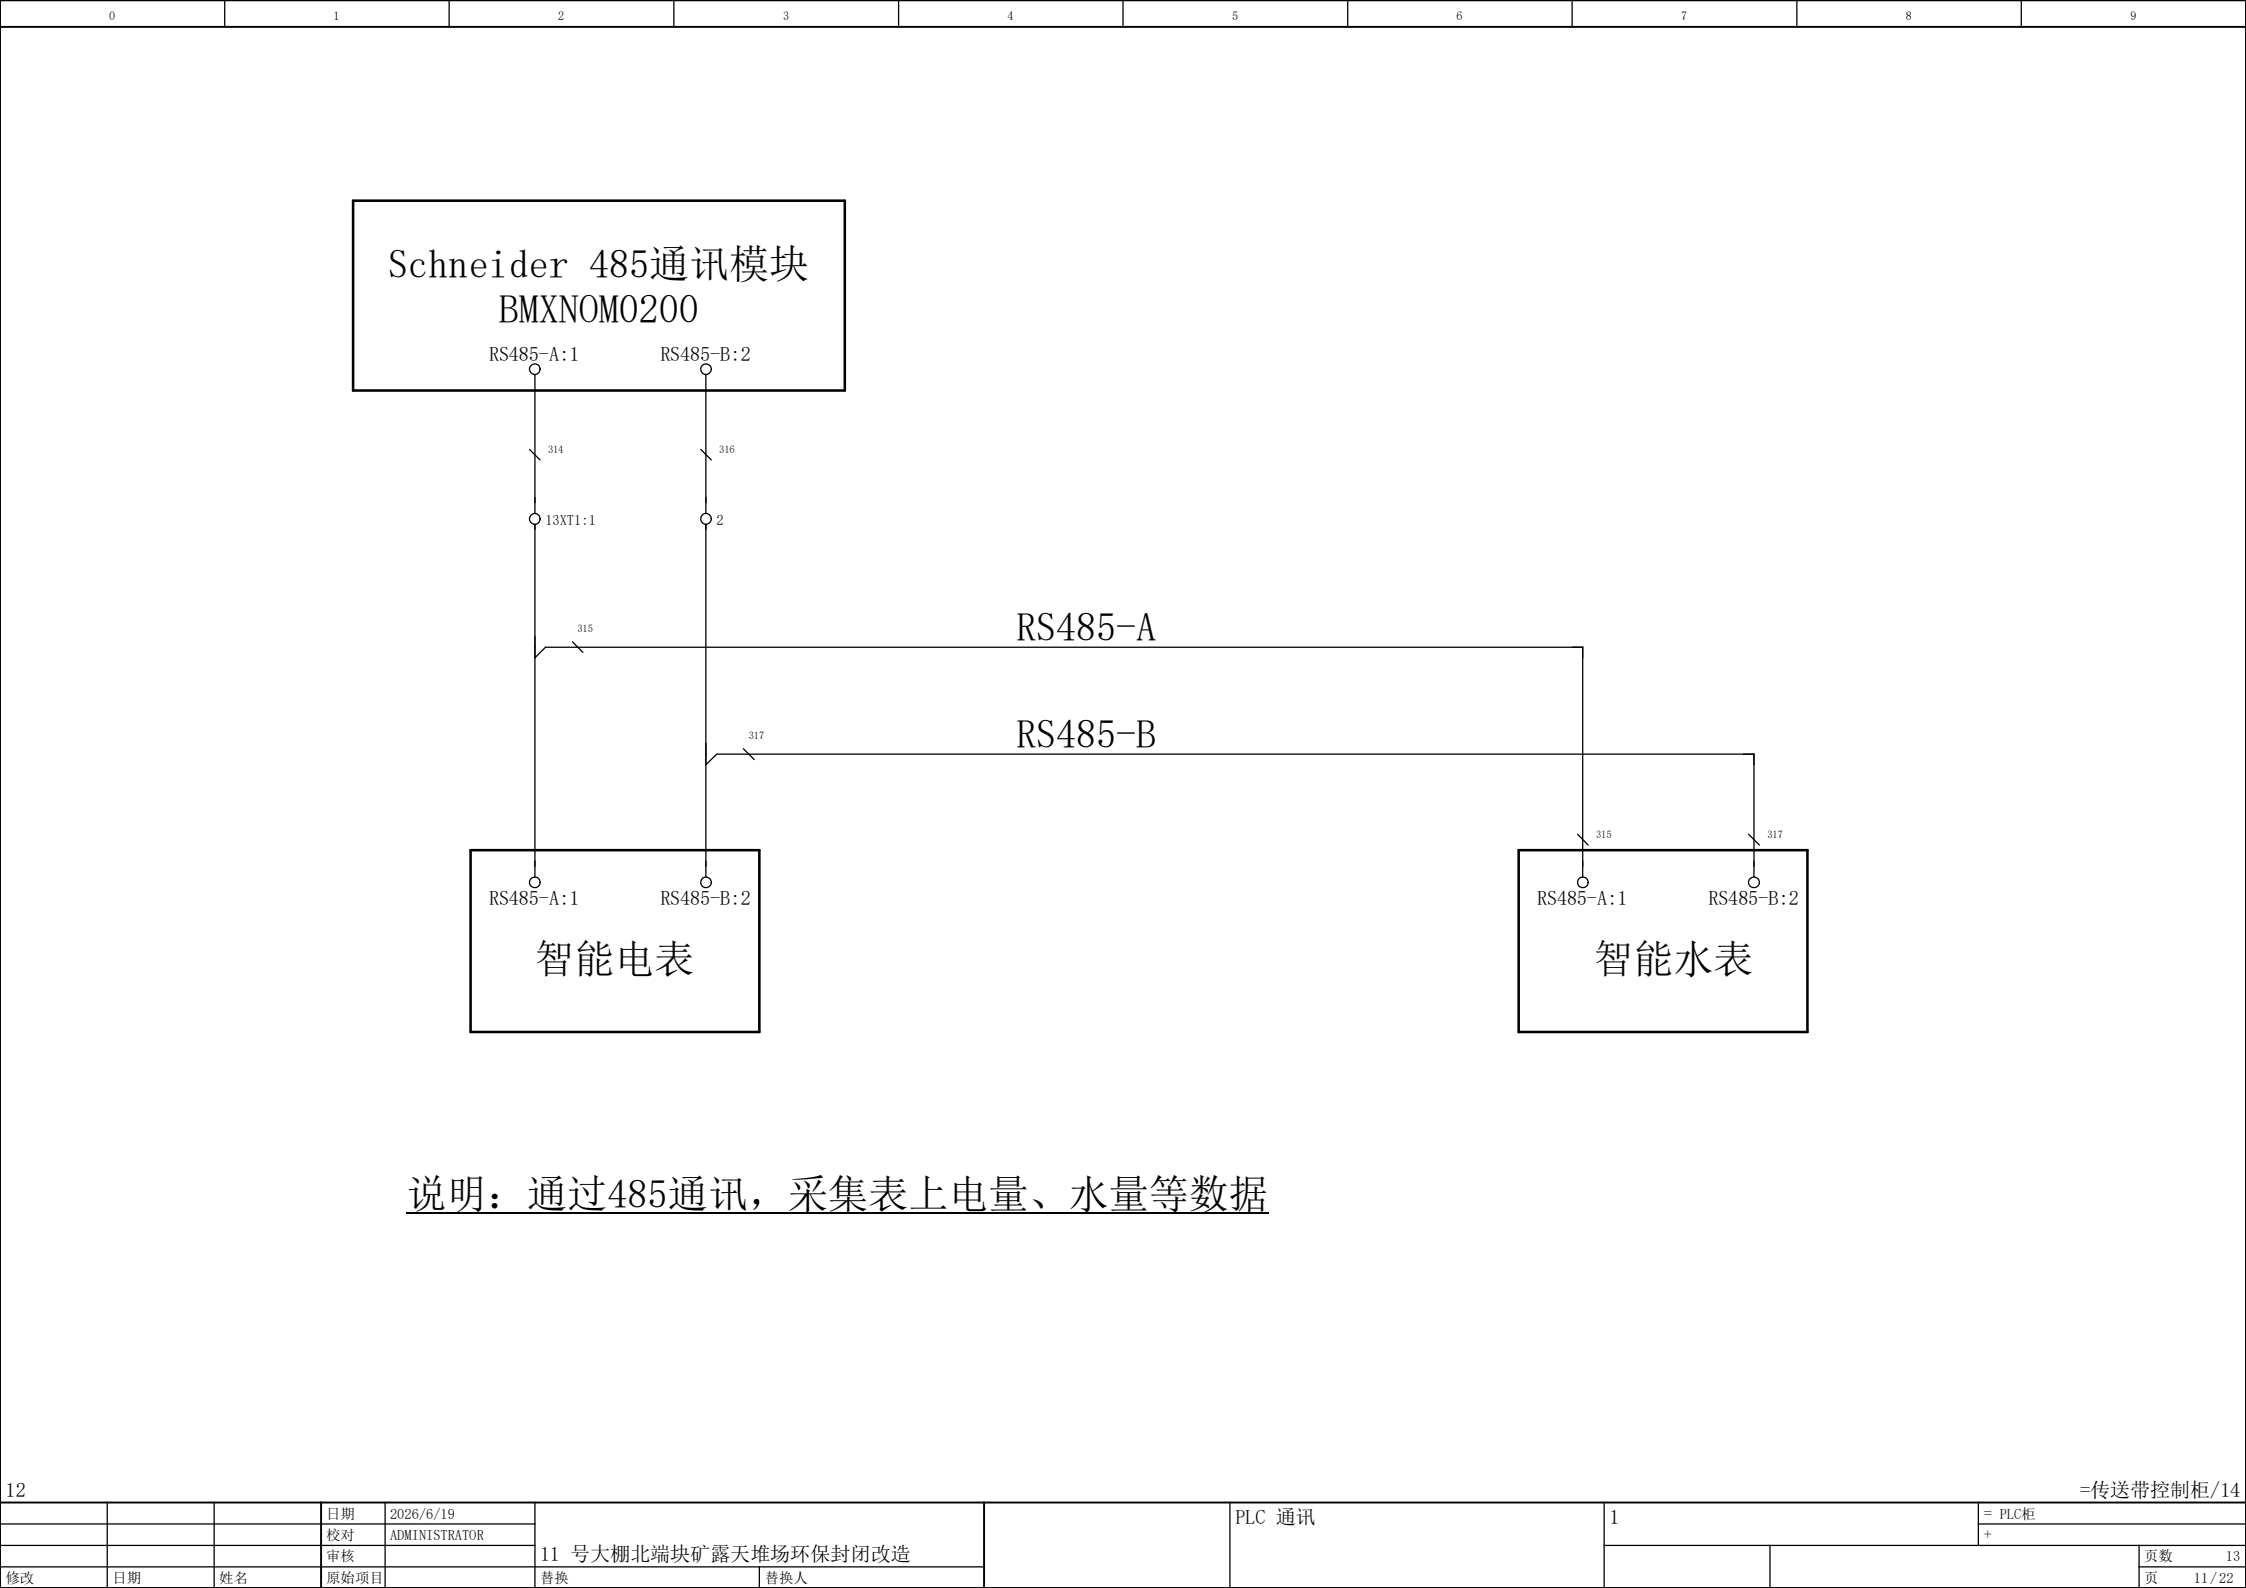




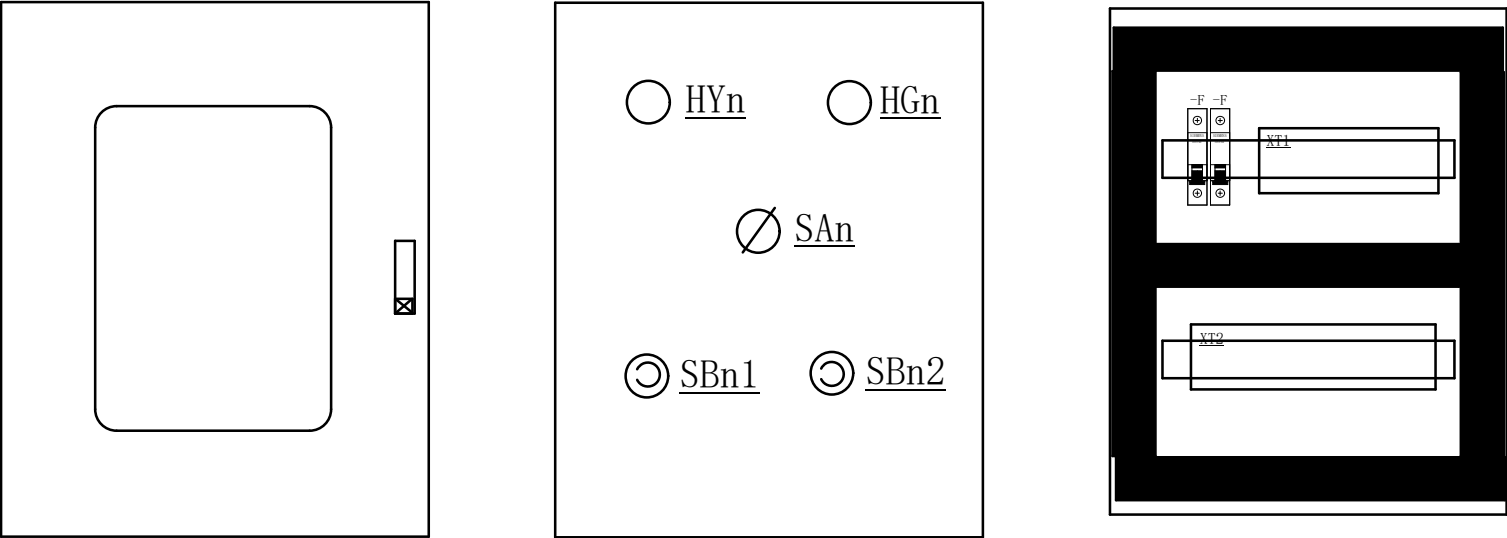



说明： n=1-3

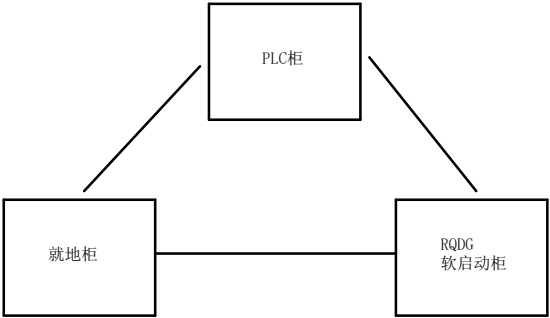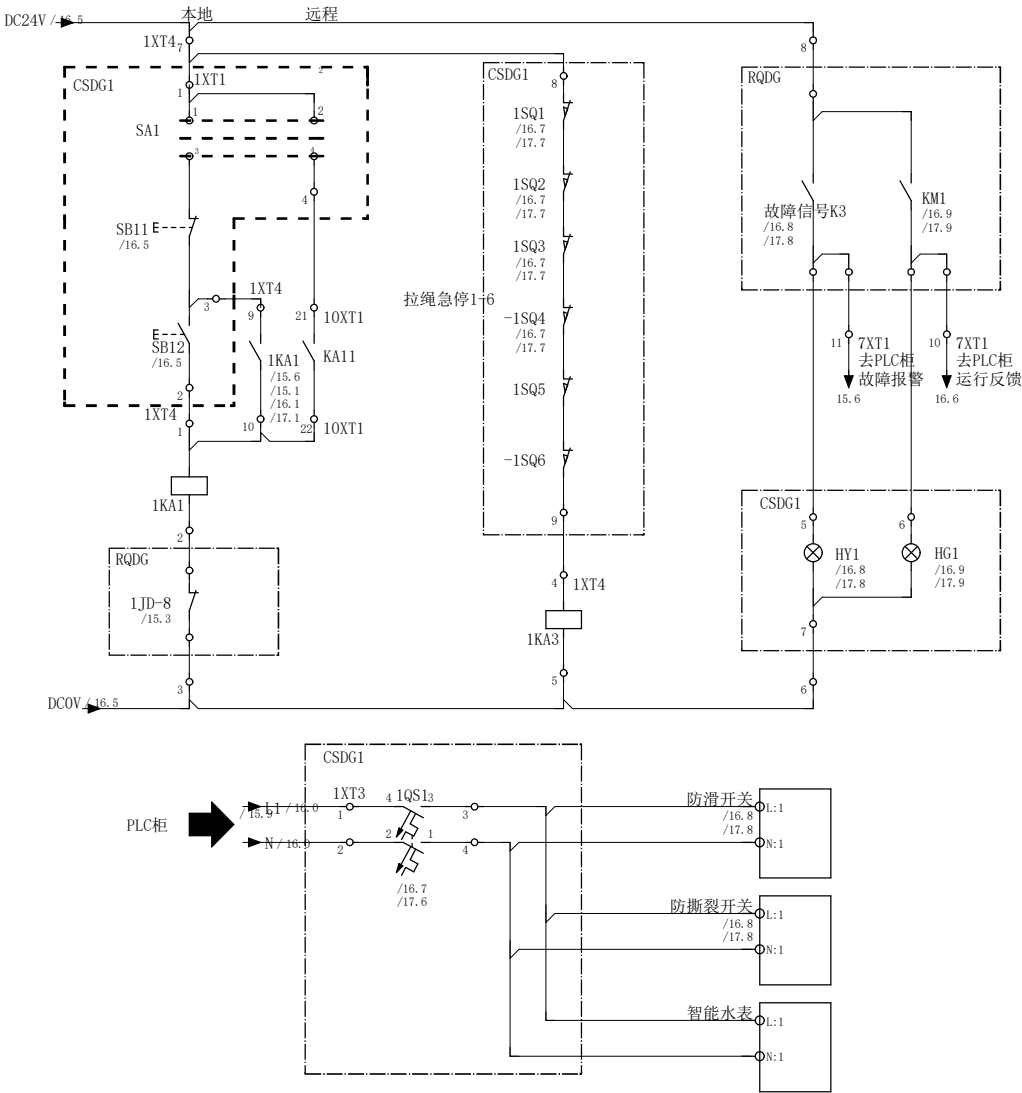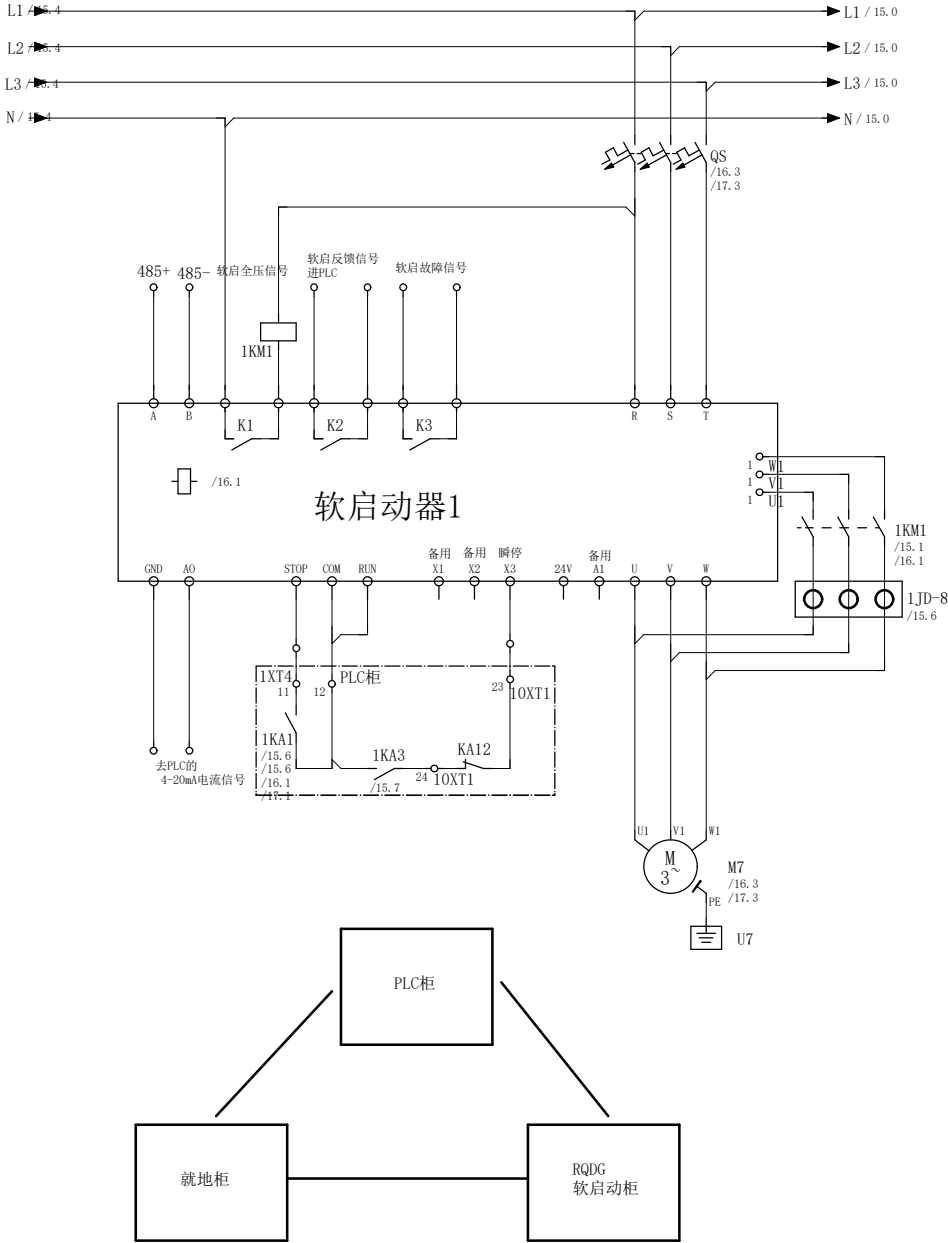


			日期	2026/6/19	11 号大棚北端块矿露天堆场环保封闭改造		
			校对	ADMINISTRATOR			
			审核				
修改	日期	姓名	原始项目		替换	替换人	

		= 传送带控制柜		页数	15
		+		页	13 / 22

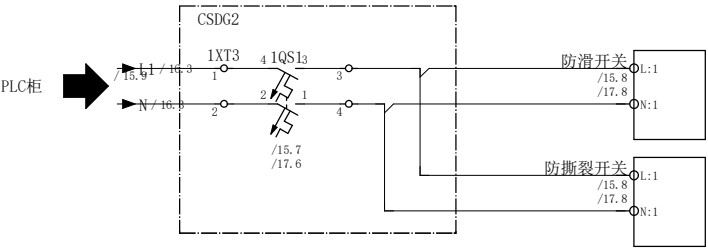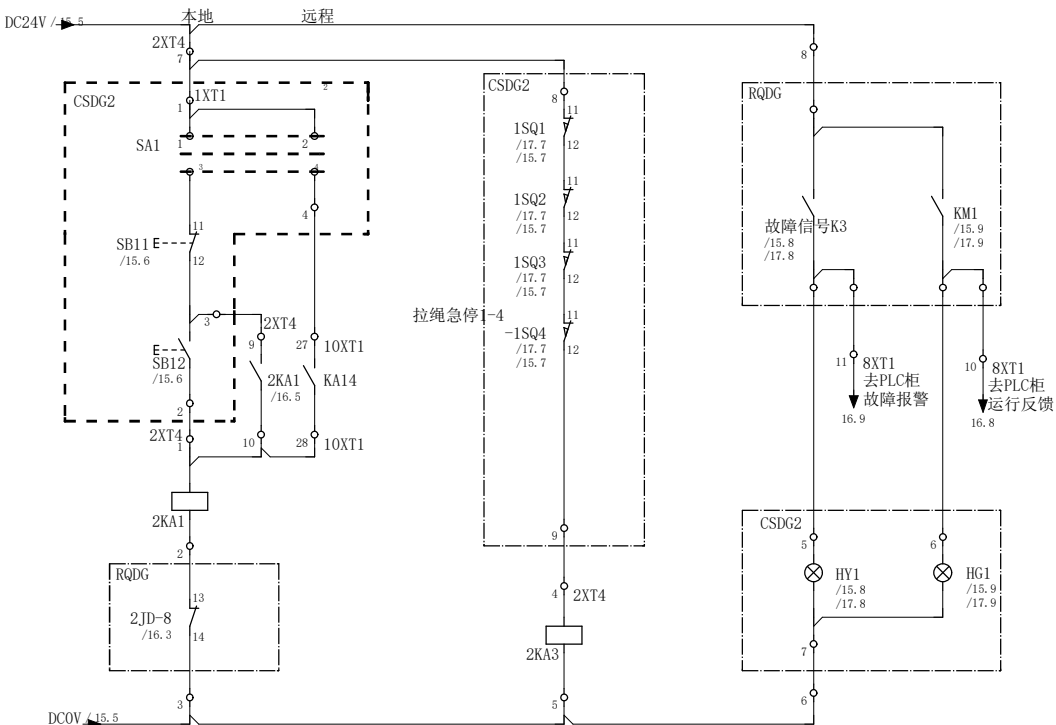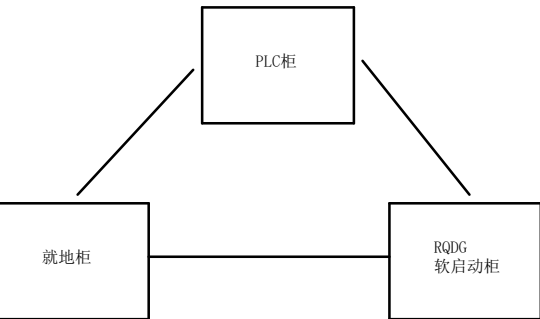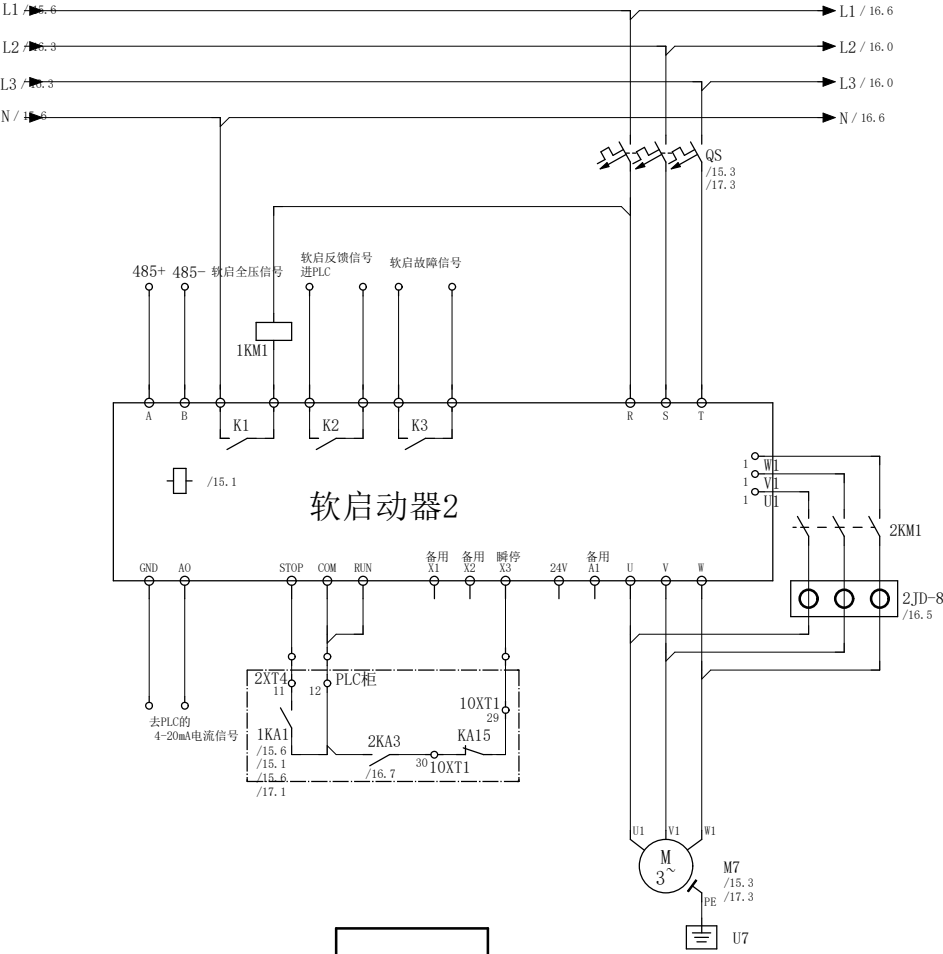


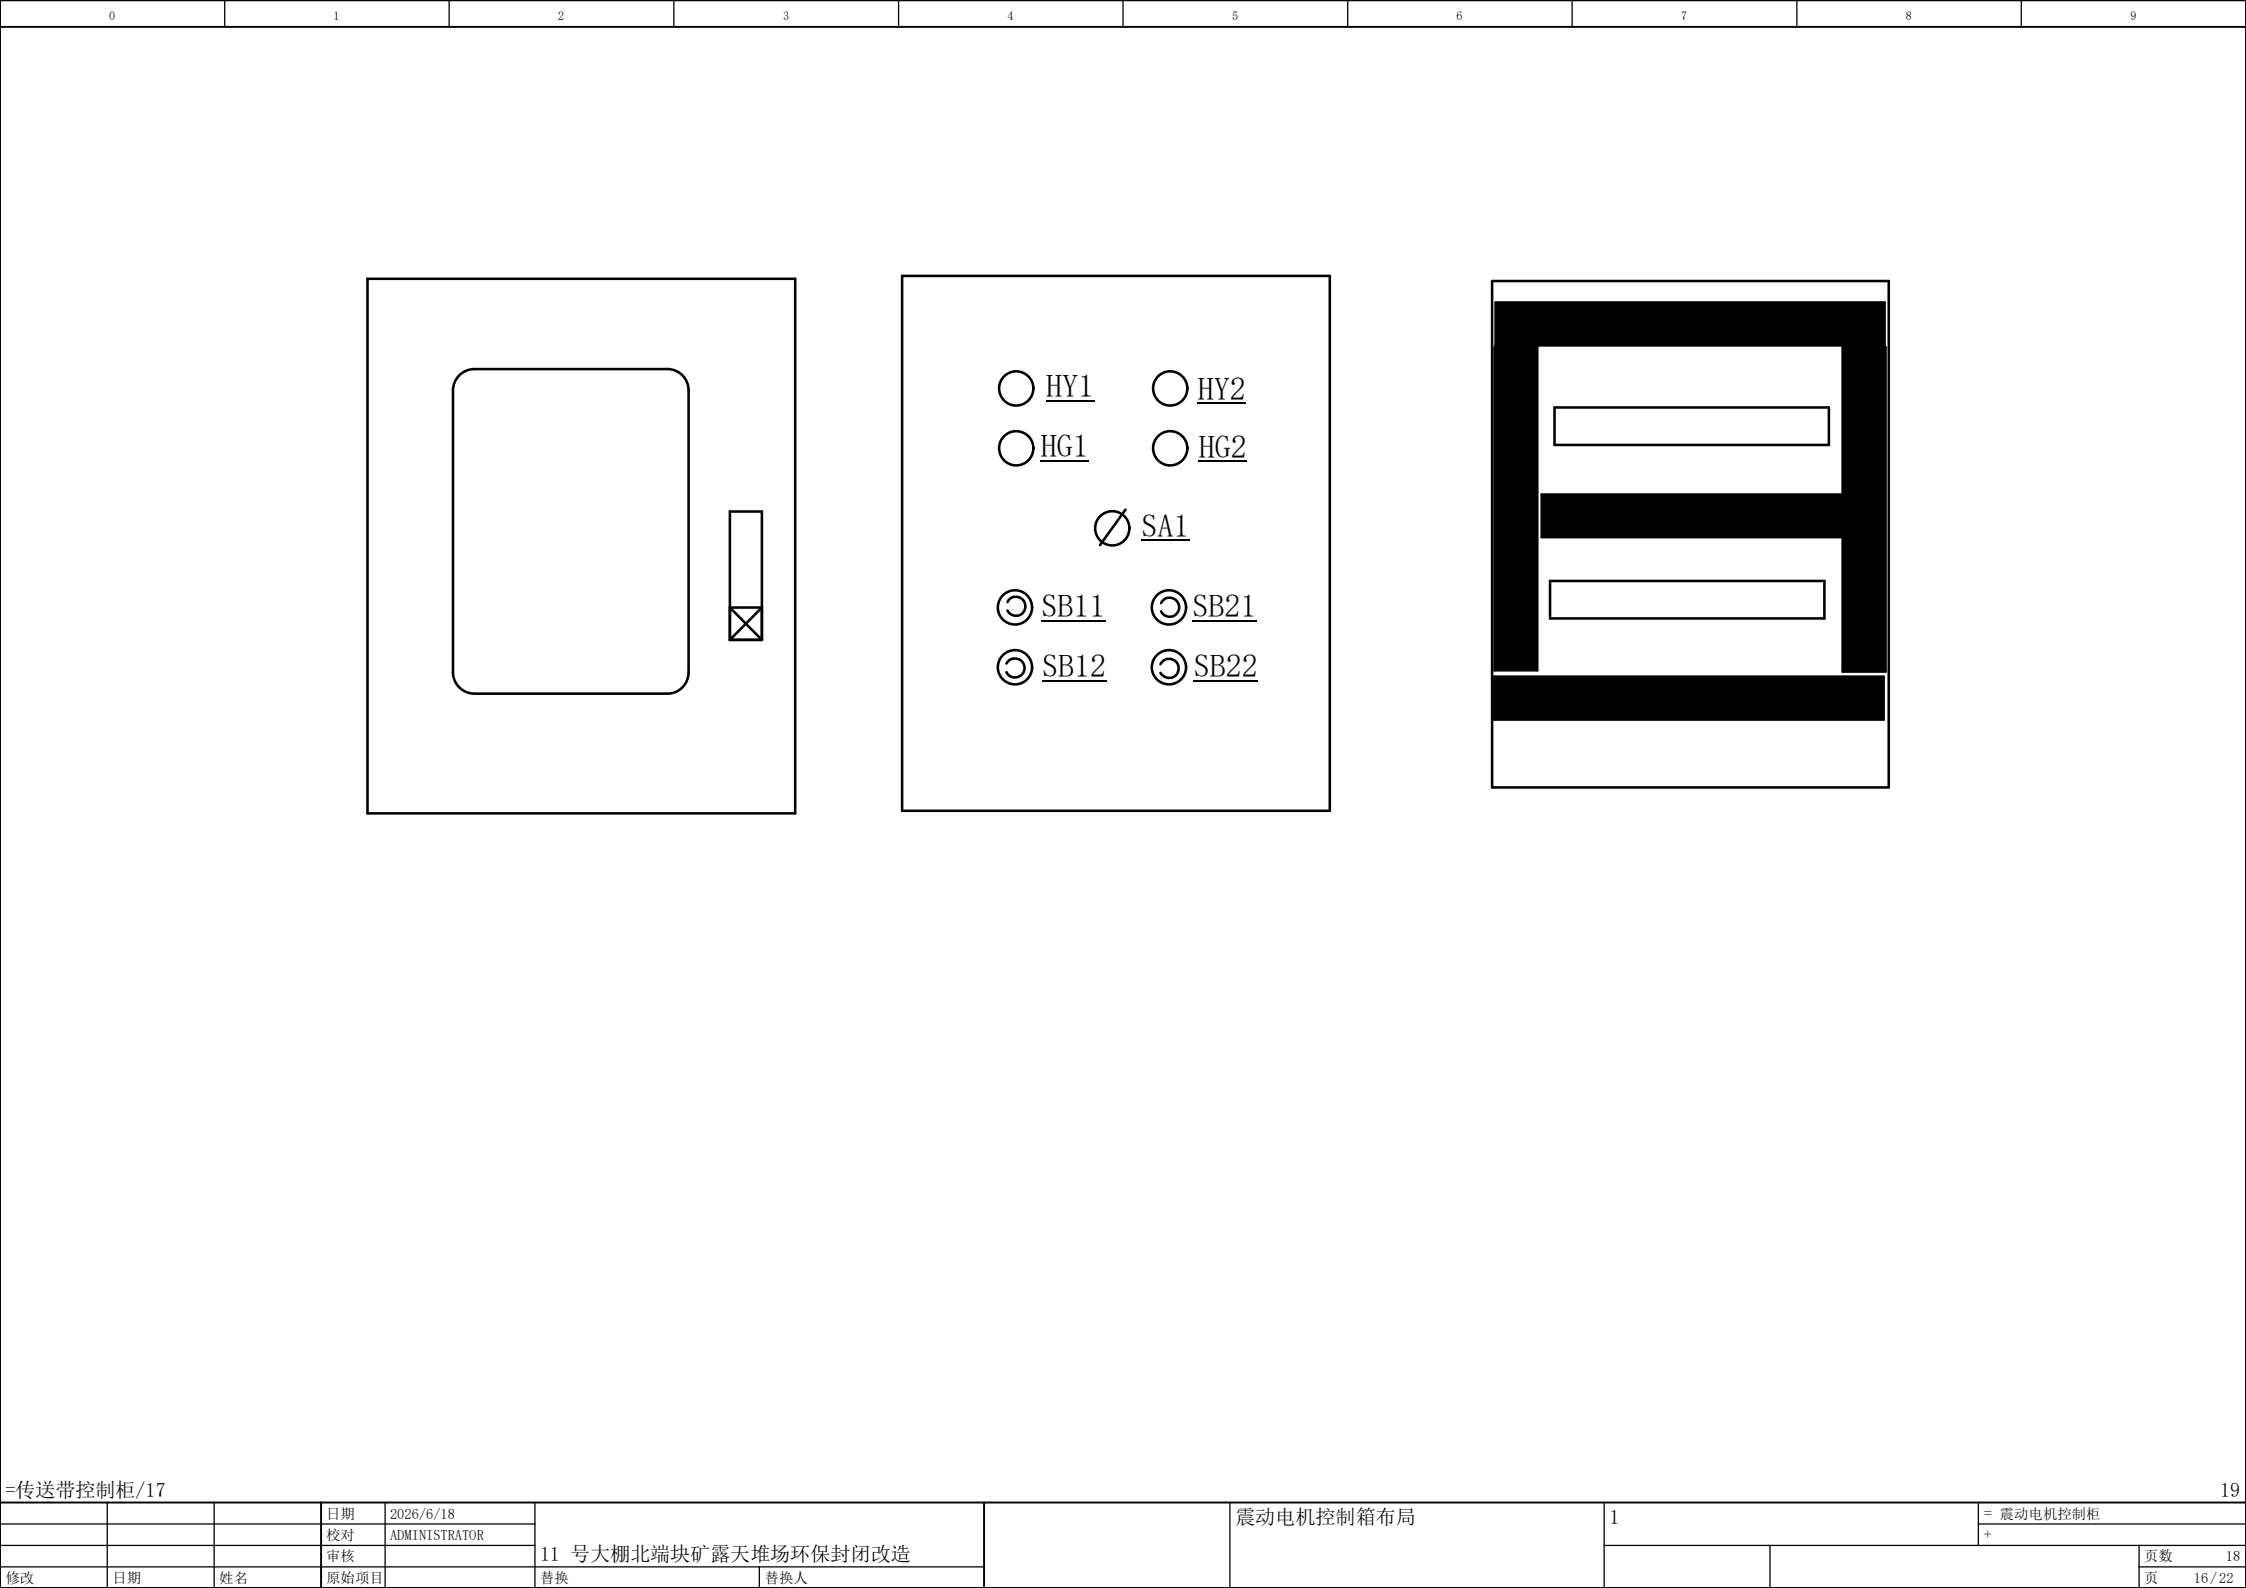

19

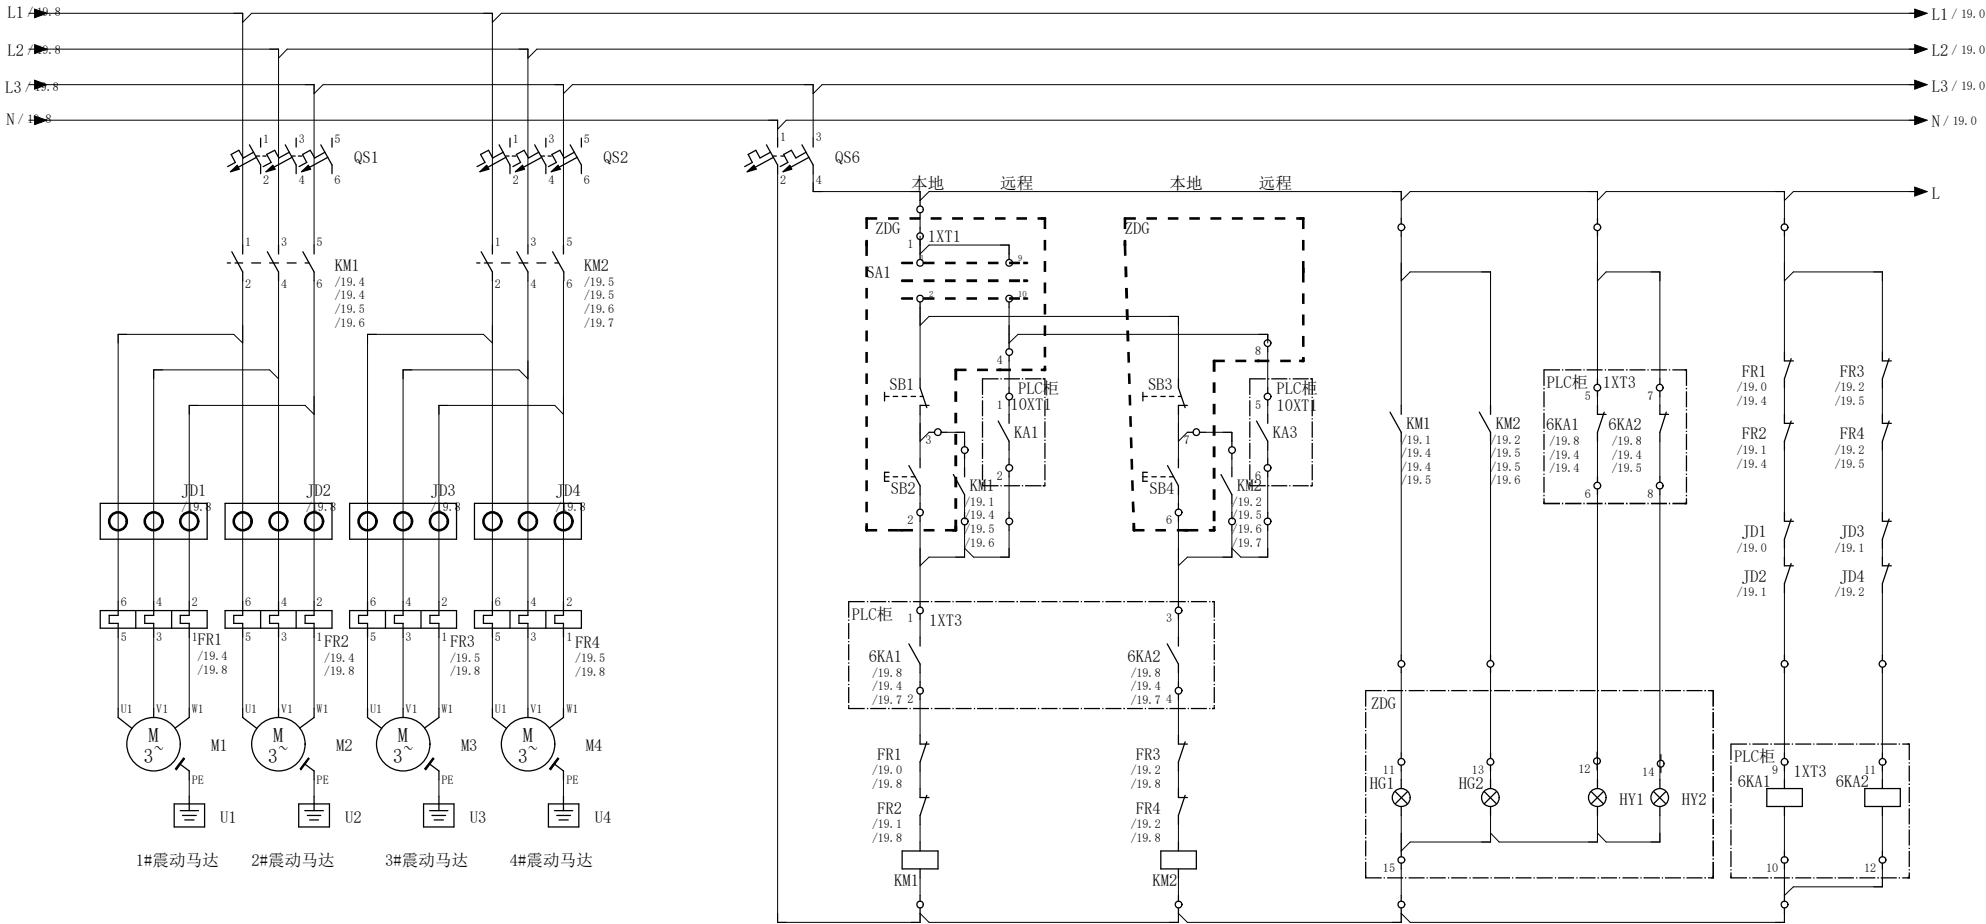

说明：
CSDG 是传送带箱 RQDG 软启动柜 ZDG 震动箱 LMX 料门控制箱

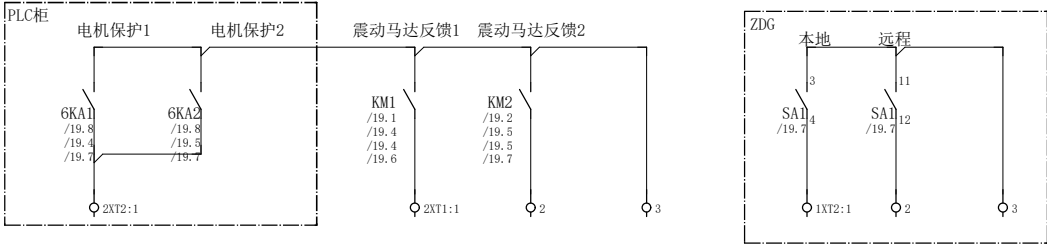

=液压启动控制柜/20

